

SECTION RAX

REAR AXLE

A
B
C

RAX

E
F
G
H
I
J
K
L
M
N
O
P

CONTENTS

SERVICE INFORMATION	2	NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING	4
PRECAUTIONS	2	NVH Troubleshooting Chart	4
Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	2		
Precaution Necessary for Steering Wheel Rotation After Battery Disconnect	2		
PREPARATION	3	WHEEL HUB	5
Commercial Service Tool	3	On-Vehicle Inspection and Service	5
		Removal and Installation	5
		SERVICE DATA AND SPECIFICATIONS (SDS)	7
		Wheel Bearing	7

PRECAUTIONS

< SERVICE INFORMATION >

SERVICE INFORMATION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:0000000004683902

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SRS and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SRS section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

Precaution Necessary for Steering Wheel Rotation After Battery Disconnect

INFOID:0000000004675334

NOTE:

- This Procedure is applied only to models with Intelligent Key system and NATS (NISSAN ANTI-THEFT SYSTEM).
- Remove and install all control units after disconnecting both battery cables with the ignition knob in the "LOCK" position.
- Always use CONSULT-III to perform self-diagnosis as a part of each function inspection after finishing work. If DTC is detected, perform trouble diagnosis according to self-diagnostic results.

For models equipped with the Intelligent Key system and NATS, an electrically controlled steering lock mechanism is adopted on the key cylinder.

For this reason, if the battery is disconnected or if the battery is discharged, the steering wheel will lock and steering wheel rotation will become impossible.

If steering wheel rotation is required when battery power is interrupted, follow the procedure below before starting the repair operation.

OPERATION PROCEDURE

1. Connect both battery cables.

NOTE:

Supply power using jumper cables if battery is discharged.

2. Use the Intelligent Key or mechanical key to turn the ignition switch to the "ACC" position. At this time, the steering lock will be released.
3. Disconnect both battery cables. The steering lock will remain released and the steering wheel can be rotated.
4. Perform the necessary repair operation.
5. When the repair work is completed, return the ignition switch to the "LOCK" position before connecting the battery cables. (At this time, the steering lock mechanism will engage.)
6. Perform a self-diagnosis check of all control units using CONSULT-III.


PREPARATION

< SERVICE INFORMATION >

PREPARATION

Commercial Service Tool

INFOID:0000000004305852

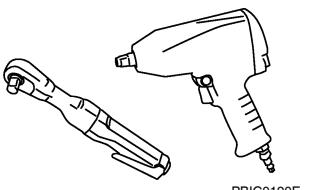Tool name	Description
Power tool  PBIC0190E	Removing wheel nuts

A

B

C

RAX

E

F

G

H

I

J

K

L

M

N

O

P

NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING

< SERVICE INFORMATION >

NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING

NVH Troubleshooting Chart

INFOID:0000000004305853

Use chart below to help you find the cause of the symptom. If necessary, repair or replace these parts.

Reference page			RAX-5	—	RAX-5	RSU-5, "NVH Troubleshooting Chart"	WT-5, "NVH Troubleshooting Chart"	WT-5, "NVH Troubleshooting Chart"	BR-5, "NVH Troubleshooting Chart"	PS-5, "NVH Troubleshooting Chart"
Possible cause and SUSPECTED PARTS										
		Noise	x	x			x	x	x	x
		Shake	x	x		x	x	x	x	x
		Vibration	x	x		x	x			x
		Shimmy	x	x		x	x	x	x	x
		Shudder	x			x	x	x	x	x
		Poor quality ride or handling	x	x	x	x	x	x		
Symptom	REAR AXLE									

x: Applicable

WHEEL HUB


< SERVICE INFORMATION >

WHEEL HUB

On-Vehicle Inspection and Service

INFOID:0000000004305854

- Check the axle and suspension parts for excessive play, wear, or damage.
- Shake each rear wheel to check for excessive play as shown.

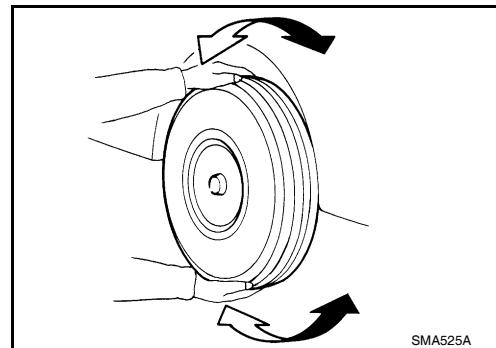

REAR WHEEL BEARING INSPECTION

- Move wheel hub and bearing assembly in the axial direction by hand. Make sure the axial end play is within specification.

Axial end play : 0.05 mm (0.002 in) or less

- Check that the wheel hub bearing operates smoothly.
- Replace the wheel hub assembly if the axial end play exceeds specification, or if the wheel bearing does not turn smoothly. Refer to [RAX-5, "Removal and Installation"](#).

CAUTION:


The wheel hub assembly does not require maintenance. If any of the following symptoms are noted, replace the wheel hub assembly.

- Growling noise is emitted from the wheel hub bearing during operation.
- Wheel hub bearing drags or turns roughly.

Removal and Installation

INFOID:0000000004305855

COMPONENTS

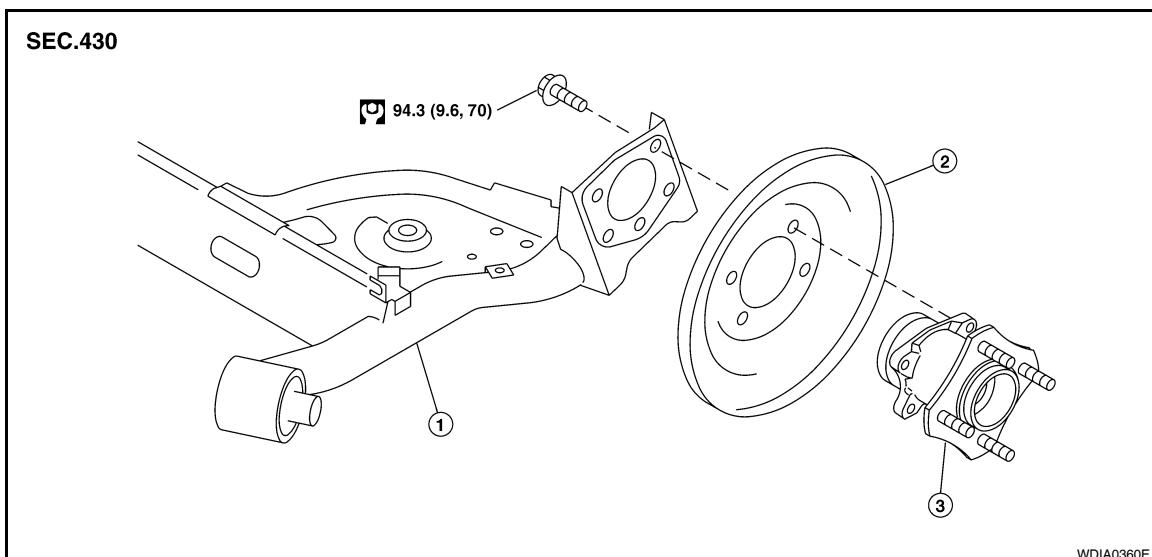

1. Rear suspension beam
2. Back plate
3. Wheel hub and bearing assembly

REMOVAL

1. Remove tires from vehicle using power tool.
2. Remove wheel sensor from wheel hub and bearing assembly. Refer to [BRC-32](#).

CAUTION:

WHEEL HUB

< SERVICE INFORMATION >

Do not pull on wheel sensor harness.

3. Remove the drum brake assembly. Refer to [BR-34, "Removal and Installation of Drum Brake Assembly"](#).
4. Remove wheel hub and bearing assembly bolts, and then remove wheel hub and bearing assembly from vehicle.
5. If necessary remove back plate, following procedure.
 1. Remove parking brake rear cable from back plate. Refer to [PB-6, "Removal and Installation"](#).
 2. Separate brake tube from wheel cylinder. Refer to [BR-12, "Rear Brake Tube and Hose"](#).

INSPECTION AFTER REMOVAL

Check for any deformity, cracks, or other damage on the wheel hub assembly, replace if necessary.

CAUTION:

The wheel hub assembly does not require maintenance. If any of the following symptoms are noted, replace the wheel hub assembly.

- **Growling noise is emitted from the wheel hub bearing during operation.**
- **Wheel hub bearing drags or turns roughly.**

INSTALLATION

Installation is in the reverse order of removal.

SERVICE DATA AND SPECIFICATIONS (SDS)

< SERVICE INFORMATION >

SERVICE DATA AND SPECIFICATIONS (SDS)

Wheel Bearing

INFOID:0000000004305856

A

Axial end play

0.05 mm (0.002 in) or less

B

C

RAX

E

F

G

H

I

J

K

L

M

N

O

P