

SECTION **IDX**
ALPHABETICAL INDEX

A
B
C
D
E
F
G
H
I
J
K
L

IDX

ALPHABETICAL INDEX

Numerics

4LO indicator lamp	TF-16
4LO switch	TF-57 , TF-60
4WD - Wiring diagram	TF-25
4WD shift indicator lamp	TF-16
4WD shift switch	TF-16 , TF-60 , TF-63
4WD system description	TF-15
4WD system diagram	TF-18
4WD warning lamp	TF-17

A

A/C air flow	MTC-30
A/C compressor clutch removal and installation	MTC-117
A/C compressor mounting	MTC-115
A/C compressor precaution	MTC-12
A/C compressor special service tool	MTC-16
A/C control operation (auto A/C)	MTC-28
A/C diagnostic work flow (auto A/C)	MTC-88
A/C evaporator	MTC-123
A/C HFC134a (R134a) system precaution	MTC-4
A/C HFC134a (R134a) system service procedure	MTC-111
A/C HFC134a (R134a) system service tools ..	MTC-16
A/C HFC134a system service equipment precaution ...	MTC-12
A/C lubricant (R134a)	MTC-24
A/C lubrication oil	MTC-24
A/C operational check	MTC-47
A/C self-diagnoses (auto A/C)	MTC-45 , MTC-88
A/C service data specification	MTC-129
A/C trouble diagnoses (auto A/C)	MTC-32
A/C, A - Wiring diagram	MTC-38
A/T fluid checking	AT-11 , AT-44 , MA-37
A/T fluid replacement	AT-10 , MA-39
A/T fluid temperature sensor	AT-124
A/T IND - Wiring diagram	DI-53
A/T indicator	DI-52
A/T self-diagnoses	AT-94
A/T shift lock system	AT-218
A/T trouble diagnoses	AT-35
A/T Wiring diagram AT - CAN	AT-97
A/T Wiring diagram AT - FTS	AT-125
A/T Wiring diagram AT - MAIN	AT-170
A/T Wiring diagram AT - NONDTC	AT-180
A/T Wiring diagram AT - PNP/SW	AT-105
A/T Wiring diagram AT - STSIG	AT-100
A/T Wiring diagram AT - VSS A/T	AT-110
ABS - Wiring diagram	BRC-13
Accelerator control system	ACC-2
Accelerator pedal position (APP) sensor	EC-478 , EC-484 , EC-499 , EC-870 , EC-876 , EC-891 , EC-1096 , EC-1130 , EC-1263
Accelerator pedal released position learning	EC-71 , EC-614
AF1B1-Wiring diagram	EC-374 , EC-383 , EC-392 , EC-402 , EC-413 , EC-423 , EC-435 , EC-812 , EC-821 , EC-830
AF1B2-Wiring diagram	EC-376 , EC-385 , EC-394 , EC-404 , EC-415 , EC-425 , EC-437 , EC-814 , EC-823 , EC-832
AF1HB1-Wiring diagram	EC-293 , EC-751
AF1HB2-Wiring diagram	EC-295 , EC-753
Aiming adjustment	LT-27 , LT-50
Air bag	SRS-3
Air bag disposal	SRS-35
Air bleeding (hydraulic clutch)	CL-8
Air cleaner and air duct(VQ)	EM-17
Air cleaner and air duct(YD)	EM-159
Air cleaner filter replacement	MA-20 , MA-33
Air cleaner filter(VQ)	EM-17
Air cleaner filter(YD)	EM-161
Air conditioner cut control ...	EC-33 , EC-590 , EC-1009
Air flow meter - See Mass air flow sensor	EC-163 , EC-694 , EC-1080
Air fuel ratio sensor 1	EC-372 , EC-381 , EC-390 , EC-400 , EC-410 , EC-420 , EC-432 , EC-810 , EC-819 , EC-828
Air fuel ratio sensor 1 heater	EC-291 , EC-749
Alternator	SC-14
Angular tightening application(VQ)	EM-6
Angular tightening application(YD)	EM-148
APP2PW - Wiring diagram	EC-1217
APPS - Wiring diagram	EC-1098
APPS1 - Wiring diagram	EC-480 , EC-872
APPS2 - Wiring diagram ...	EC-486 , EC-878 , EC-1132
APPS3 - Wiring diagram ...	EC-501 , EC-893 , EC-1265
ASC/BS - Wiring diagram .	EC-453 , EC-847 , EC-1180
ASC/SW - Wiring diagram	EC-446 , EC-839 , EC-1196
ASCBOF - Wiring diagram	EC-508 , EC-900 , EC-1313
ASCD	EC-34 , EC-591 , EC-1337
ASCD (automatic speed control device)	ACS-2
ASCD brake switch	EC-451 , EC-507 , EC-844 , EC-899 , EC-1177 , EC-1312
ASCD clutch switch	EC-1177 , EC-1312
ASCD indicator lamp	EC-520 , EC-912 , EC-1333
ASCD steering switch	EC-444 , EC-837 , EC-1194
ASCIND - Wiring diagram .	EC-521 , EC-913 , EC-1334
ATP switch	TF-87 , TF-90
Auto air conditioner - Wiring diagram	MTC-38
Auto anti-dazzling inside mirror	GW-43
Automatic amplifier	MTC-49
Automatic transmission number	GI-57

B

Back door trim	EI-28
BACK/L - Wiring diagram	LT-76
Back-up lamp	LT-76
Back-up lamp switch (M/T)	MT-12 , MT-21
Ball joint (front)	FSU-15
Barometric pressure (BARO) sensor	EC-1281
Basic inspection	EC-65 , EC-608 , EC-1027
Battery	SC-5
Baulk ring (M/T)	MT-23
BCM (Body control module)	BCS-3

ALPHABETICAL INDEX

Blower motor	MTC-63 , MTC-93	Compass	DI-66
Body mounting	BL-100	Component Location (auto A/C)	MTC-35
BOOST - Wiring diagram	EC-1143	Compression pressure(VQ)	EM-91
Boring/horning cylinder block(VQ)	EM-129	Compression pressure(YD)	EM-236
Boring/horning cylinder block(YD)	EM-273	Compressor clutch removal and installation	MTC-117
Brake booster	BR-19	Compressor mounting	MTC-115
Brake fluid level	MA-43	Compressor special service tool	MTC-16
Brake inspection	MA-43	Condenser	MTC-121
Brake lines and cables inspection	MA-43	Connecting rod bearing clearance(VQ)	EM-130
Brake master cylinder	BR-17	Connecting rod bearing clearance(YD)	EM-275
Brake pedal	BR-6	Connecting rod bushing clearance(VQ)	EM-126
Brake switch	EC-473 , EC-864 , EC-1312	Connecting rod bushing clearance(YD)	EM-271
BRK/SW - Wiring diagram	EC-474 , EC-866	Connecting rod(VQ)	EM-126
Bulb specifications	LT-116	Connecting rod(YD)	EM-271
Bumper, front	EI-15	Console box - See Instrument panel	IP-10
Bumper, rear	EI-17	CONSULT for all-mode 4WD	TF-45

C

Camshaft inspection(VQ)	EM-75	Control units (terminal arrangement)	PG-68
Camshaft inspection(YD)	EM-204	Control valve (A/T)	AT-34
Camshaft position sensor (CMPS)	EC-1070 , EC-1159 , EC-1165	Controller Area Network (CAN)	BL-23
Camshaft position sensor (PHASE)	EC-259 , EC-732	Converter housing installation	AT-257 , AT-261
Camshaft(VQ)	EM-73	COOL/F - Wiring diagram	EC-355 , EC-793 , EC-1123
Camshaft(YD)	EM-203	Coolant mixture ratio	MA-15
CAN	DI-65	Cooling circuit (engine)(VQ)	CO-8
CAN - Wiring diagram	EC-147 , EC-687 , EC-1068 , LAN-23 , LAN-40 , LAN-51 , LAN-64 , LAN-75 , LAN-88 , LAN-97 , LAN-109 , LAN-121 , LAN-135 , LAN-144 , LAN-156 , LAN-168	Cooling circuit (engine)(YD)	CO-36
CAN (Controller Area Network)	BL-23	Cooling fan motor	EC-360 , EC-798 , EC-1129
CAN communication	EC-146 , EC-686 , EC-1011 , EC-1067 , AT-96 , TF-19 , TF-87 , BRC-28 , BL-23	Cooling fan(VQ)	CO-21
Canister-See EVAP canister	EC-40 , EC-597	Cooling fan(YD)	CO-48
CHARGE - Wiring diagram	SC-15	Cooling unit (A/C evaporator)	MTC-96 , MTC-123
Charging system	SC-14	Counter gear (M/T)	MT-23
Chassis and body maintenance	MA-36	Coupling sleeve (M/T)	MT-23
CHIME - Wiring diagram	DI-57	Crankcase ventilation system	EC-1010
CIGAR - Wiring diagram	WW-36	Crankcase ventilation system - See Positive crankcase ventilation	EC-41 , EC-598
Cigarette lighter	WW-36	Crankshaft position sensor (POS)	EC-252 , EC-725
Circuit breaker	PG-64	Crankshaft position sensor (TDC)	EC-1070 , EC-1147 , EC-1153
CKPS - Wiring diagram	EC-1149 , EC-1155	Crankshaft(VQ)	EM-129
Closed loop control	EC-30 , EC-587	Crankshaft(YD)	EM-274
Clutch cover	CL-18	Cylinder block(VQ)	EM-107
Clutch disc	CL-18	Cylinder block(YD)	EM-254
Clutch master cylinder	CL-9	Cylinder head bolt tightening(VQ)	EM-94
Clutch operating cylinder	CL-12	Cylinder head bolt tightening(YD)	EM-240
Clutch pedal	CL-6	Cylinder head gasket selection(YD)	EM-240
CMPS - Wiring diagram	EC-1161 , EC-1167	Cylinder head(VQ)	EM-91
Coil spring (front)	FSU-10	Cylinder head(YD)	EM-236
Collision diagnosis	SRS-40		
Combination lamp, front, removal and installation	LT-30		
Combination lamp, rear, removal and installation	LT-92		
Combination meter	DI-4		
Combination switch	LT-68		
COMBSW - Wiring diagram	LT-68		
COMPAS - Wiring diagram	DI-68		

D

Data link connector for Consult	EC-110 , EC-653 , EC-1047
Diagnosis sensor unit	SRS-34
Diagnostic trouble code (DTC)	EC-1016
Diagnostic trouble code (DTC) for OBD system	EC-16 , EC-575 , EC-996
Diagnostic trouble code (DTC) inspection priority chart	EC-83 , EC-626 , EC-1026
Differential gear oil replacement	MA-41 , MA-42
Dimensions	GI-58

A
B
C
D
E
F
G
H
I
J
K
L

ALPHABETICAL INDEX

Direct clutch solenoid valve	AT-148 , AT-150	EVAP canister	EC-40 , EC-597
Display and amp.assembly	MTC-49	EVAP canister purge volume control solenoid valve	EC-274 , EC-917
Dome light - See Interior lamp	LT-93	EVAP canister vent control valve	EC-525 , EC-924
Door glass	GW-35 , GW-38	Evaporative emission (EVAP) system	EC-37 , EC-594
Door lock	BL-71	Evaporator	MTC-123
Door mirror lamp	LT-93	Exhaust manifold(VQ)	EM-23
Door trim	EI-28	Exhaust manifold(YD)	EM-178
Door, front	BL-67 , GW-35	Exhaust system	EX-2
Door, rear	GW-38	Exhaust system inspection	EX-2
Drive belt(VQ)	EM-14	Expansion valve	MTC-124
Drive belt(YD)	EM-156		
Drive chain (Transfer)	TF-119 , TF-126		
Driver air bag	SRS-26		
DTC work support	EC-117		
Duct and grilles	MTC-106		

E

ECM input/output signal	EC-99 , EC-642 , EC-1041
ECM power supply	EC-138 , EC-299 , EC-678 , EC-757 , EC-1059
ECM relay	EC-1220
ECM/PW - Wiring diagram	EC-300 , EC-758
ECTS - Wiring diagram	EC-177 , EC-703 , EC-1093
EGR function	EC-1290
EGR volume control valve	EC-1290
EGRC/V - Wiring diagram	EC-1292
Electric throttle control actuator	EC-310 , EC-312 , EC-769 , EC-772
Electric throttle control actuator (VQ)	EM-20
Electrical load signal circuit	EC-523 , EC-915
Electrical units location	PG-61
Electronic fuel injection pump(YD)	EM-193
Electronic ignition (EI) system	EC-31 , EC-588
Engine control circuit diagram	EC-97 , EC-640 , EC-1039
Engine control component parts location	EC-89 , EC-632 , EC-1035
Engine control module (ECM)	EC-288 , EC-746 , EC-1201 , EC-1203 , EC-1257
Engine control system diagram	EC-28 , EC-585
Engine control system diagram and chart	EC-1004
Engine coolant temperature sensor (ECTS) ...	EC-175 , EC-701 , EC-1091
Engine coolant(VQ)	CO-10
Engine coolant(YD)	CO-37
Engine fail-safe system	EC-84 , EC-627
Engine oil filter replacement	MA-34
Engine oil precautions	GI-7
Engine oil(VQ)	LU-7
Engine oil(YD)	LU-20
Engine removal(VQ)	EM-103
Engine removal(YD)	EM-250
Engine room cover(VQ)	EM-18
Engine room cover(YD)	EM-164
Engine serial number	GI-56
ETC1 - Wiring diagram	EC-313 , EC-773
ETC2 - Wiring diagram	EC-320 , EC-780
ETC3 - Wiring diagram	EC-325 , EC-785

F

F/FOG - Wiring diagram	LT-39
F/PUMP - Wiring diagram	EC-538 , EC-937 , EC-1236 , EC-1242 , EC-1248 , EC-1254
Final drive pre-inspection	FFD-18
Final drive removal and installation ..	RFD-14 , RFD-47
Flow charts	GI-24
Fluid temperature sensor (A/T)	AT-124
Fluids	MA-13
Fluorescent leak detector	MTC-125
Flywheel (clutch)	CL-18
Flywheel runout(VQ40DE)	EM-133
Flywheel runout(YD)	EM-278
Fog lamp, front	LT-36
Foot lamp	LT-93
Fork rod (M/T)	MT-25
Freeze frame data	EC-48 , EC-604 , EC-1017
Front brake solenoid valve	AT-143 , AT-145
Front bumper	EI-15
Front case (Transfer)	TF-119 , TF-126
Front combination lamp removal and installation	LT-30
Front door	BL-67 , BL-71 , GW-35
Front Door Trim	EI-28
Front drive shaft (Transfer) ...	TF-119 , TF-126 , TF-139
Front final drive removal and installation (4WD)	FFD-15
Front fog lamp	LT-36
Front passenger air bag	SRS-30
Front revolution sensor (Transfer)	TF-84 , TF-86 , TF-119 , TF-126
Front seat	SE-10
Front seat belt pre-tensioner	SRS-3 , SRS-33
Front washer	WW-4
Front wiper	WW-4
FRPS - Wiring diagram	EC-1108
FTS - Wiring diagram	EC-1103
Fuel cut control (at no load high engine speed)	EC-32 , EC-589 , EC-1009
Fuel filler lid	BL-79
Fuel filter	EC-1012
Fuel filter replacement(VQ)	FL-10
Fuel filter replacement(YD)	FL-15
Fuel gauge	DI-4
Fuel gauge(YD)	FL-26
Fuel injection control system	EC-1007
Fuel injection system (Bank 1)	EC-207 , EC-219

ALPHABETICAL INDEX

Fuel injection system (Bank 2) [EC-207](#), [EC-219](#)
Fuel injector [EC-530](#), [EC-929](#), [EC-1014](#), [EC-1111](#),
[EC-1113](#), [EC-1225](#)
Fuel injector and fuel tube(VQ) [EM-36](#)
Fuel injector and fuel tube(YD) [EM-188](#)
Fuel leak [EC-1076](#)
Fuel line inspection [MA-20](#)
Fuel line inspection(VQ) [FL-3](#)
Fuel line inspection(YD) [FL-14](#)
Fuel pressure check [EC-74](#), [EC-617](#)
Fuel pressure release [EC-74](#), [EC-617](#)
Fuel pump [EC-537](#), [EC-936](#), [EC-1074](#), [EC-1205](#),
[EC-1233](#), [EC-1239](#), [EC-1246](#), [EC-1251](#)
Fuel pump and gauge(VQ) [FL-10](#)
Fuel pump(Learning Value Clearing) [EC-1013](#)
Fuel rail pressure sensor [EC-1106](#)
Fuel system(VQ) [FL-3](#)
Fuel system(YD) [FL-14](#)
Fuel tank vacuum relief valve [EC-40](#), [EC-597](#)
Fuel tank(VQ) [FL-5](#)
Fuel tank(YD) [FL-21](#)
Fuel temperature sensor [EC-1101](#)
FUELB1 - Wiring diagram [EC-209](#), [EC-221](#)
FUELB2 - Wiring diagram [EC-211](#), [EC-223](#)
Fuse [PG-64](#), [PG-74](#)
Fuse and fusible link box [PG-74](#)
Fusible link [PG-64](#), [PG-74](#)

G

Garage jack and safety stand [GI-49](#)
Gauges [DI-4](#)
Gear components (M/T) [MT-23](#)
Generator [SC-14](#)
Generator - See Alternator [SC-14](#)
Generic scan tool (GST) [EC-119](#)
Glass [GW-11](#), [GW-35](#), [GW-38](#), [GW-41](#)
GLOW - Wiring diagram [EC-1284](#)
Glow plug [EC-1283](#)
Glow plug(YD) [EM-185](#)
Glow relay [EC-1283](#)
Grease [MA-13](#)
Ground distribution [PG-27](#)

H

H/AIM - Wiring diagram [LT-31](#)
Harness connector [PG-65](#)
Harness layout [PG-38](#)
Hazard warning lamp [LT-52](#)
Headlamp aiming control [LT-31](#)
Headlamp leveler - See Headlamp aiming control
[LT-31](#)
Headlamp removal and installation [LT-30](#)
Heated oxygen sensor 2 (bank 1) [EC-187](#), [EC-196](#),
[EC-329](#), [EC-340](#), [EC-942](#)
Heated oxygen sensor 2 (bank 2) [EC-187](#), [EC-196](#),
[EC-329](#), [EC-340](#), [EC-942](#)
Heated oxygen sensor 2 heater (bank 1) [EC-154](#),
[EC-951](#)
Heated oxygen sensor 2 heater (bank 2) [EC-154](#),
[EC-951](#)
Heater and cooling unit (Heater core) [MTC-96](#), [MTC-99](#)
Heater unit (heater core) [MTC-96](#), [MTC-99](#)
Height (Dimensions) [GI-58](#)
HFC134a (R134a) system precaution [MTC-4](#)
HFC134a (R134a) system service procedure [MTC-111](#)
HFC134a (R134a) system service tools [MTC-16](#)
HFC134a system service equipment precaution
[MTC-12](#)
High and low reverse clutch solenoid valve [AT-153](#),
[AT-155](#)
Horn [WW-40](#)
HORN - Wiring diagram [WW-40](#)
How to erase DTC [EC-1016](#)
How to erase DTC for OBD system [EC-56](#), [EC-604](#)

I

IATS - Wiring diagram [EC-172](#), [EC-1088](#)
IATSEN - Wiring diagram [EC-960](#)
Identification plate [GI-55](#)
Idle air volume learning [EC-71](#), [EC-614](#)
Idle speed [EC-65](#), [EC-608](#), [EC-1027](#)
Ignition coil [EC-543](#), [EC-964](#)
Ignition coil(VQ) [EM-33](#)
Ignition control system [EC-543](#), [EC-964](#)
Ignition key hole illumination [LT-93](#)
IGNSYS - Wiring diagram [EC-544](#), [EC-965](#)
ILL - Wiring diagram [LT-110](#)
Illumination [LT-107](#)
INJE/PW - Wiring diagram [EC-1272](#)
INJECT - Wiring diagram . [EC-531](#), [EC-930](#), [EC-1116](#),
[EC-1228](#), [EC-1277](#)
Injection nozzle [EC-1111](#), [EC-1113](#), [EC-1225](#)
Injection nozzle(YD) [EM-188](#)
Injector adjustment value [EC-1259](#), [EC-1261](#)
Injector adjustment value registration [EC-1014](#)
Input clutch solenoid valve [AT-138](#), [AT-140](#)
Instrument panel [IP-10](#)
INT/V - Wiring diagram [EC-1303](#)
Intake air control valve control solenoid valve [EC-1302](#)
Intake air temperature sensor [EC-170](#), [EC-959](#),
[EC-1086](#)
Intake door motor [MTC-102](#)
Intake manifold collector(VQ) [EM-18](#)
Intake manifold(VQ) [EM-21](#)
Intake manifold(YD) [EM-164](#)
Intake sensor [MTC-88](#), [MTC-92](#)
Intake valve timing control (Bank 1) ... [EC-149](#), [EC-689](#)
Intake valve timing control (Bank 2) ... [EC-149](#), [EC-689](#)
Intake valve timing control solenoid valve (Bank 1)
[EC-303](#), [EC-761](#)
Intake valve timing control solenoid valve (Bank 2)
[EC-303](#), [EC-761](#)
Interior [EI-30](#)
Interior lamp [LT-93](#)
Interior lamp on-off control [LT-93](#)

A
B
C
D
E
F
G
H
I
J
K
L
IDX

ALPHABETICAL INDEX

IPDM (Intelligent power distribution module engine room) [PG-14](#)
ISO 15031-2 Terminology [GI-59](#)
ISO 15031-5 Service \$01 - 09 [EC-44](#)
IVCB1 - Wiring diagram [EC-304](#), [EC-763](#)
IVCB2 - Wiring diagram [EC-306](#), [EC-765](#)

J

Jacking points [GI-49](#)

K

Key illumination [LT-93](#)
Knock sensor (KS) [EC-247](#), [EC-720](#)
KS - Wiring diagram [EC-248](#), [EC-721](#)

L

Leaf spring (rear) [RSU-9](#)
Length (Dimensions) [GI-58](#)
License lamp [LT-78](#)
Lifting points [GI-50](#)
Line pressure solenoid valve [AT-119](#)
Line pressure test (A/T) [AT-45](#)
Liquid gasket application(VQ) [EM-7](#), [LU-3](#), [CO-3](#)
Liquid gasket application(YD) . [EM-149](#), [LU-17](#), [CO-32](#)
Location of electrical units [PG-61](#)
Low coast brake solenoid valve [AT-158](#), [AT-160](#)
Lubricant (R134a) A/C [MTC-24](#)
Lubricants [MA-13](#)
Lubrication circuit (engine)(VQ) [LU-5](#)
Lubrication circuit (engine)(YD) [LU-19](#)
Lubrication oil A/C [MTC-24](#)
Lubrication-locks, hinges and hood latches [MA-47](#)

M

MAFS - Wiring diagram [EC-165](#), [EC-696](#), [EC-1082](#)
Magnet clutch [MTC-71](#), [MTC-117](#)
MAIN - Wiring diagram [EC-138](#), [EC-678](#), [EC-1060](#)
Main drive gear (M/T) [MT-23](#)
Mainshaft (M/T) [MT-23](#)
Major overhaul (Final drive) [FFD-17](#), [RFD-15](#), [RFD-48](#)
Major overhaul (Transfer) [TF-117](#)
Malfunction indicator (MI) [EC-1017](#)
Malfunction indicator lamp (MIL) [EC-57](#), [EC-605](#)
Map lamp [LT-93](#)
Mass air flow sensor (MAFS) [EC-163](#), [EC-694](#), [EC-1080](#)
Master cylinder (brake) [BR-17](#)
Master cylinder (clutch) [CL-9](#)
Meter [DI-4](#)
METER - Wiring diagram [DI-10](#)
MI & data link connectors circuit [EC-1336](#)
MIL data link connectors circuit [EC-571](#), [EC-993](#)
MIL/DL - Wiring diagram ... [EC-571](#), [EC-993](#), [EC-1336](#)
Misfire [EC-238](#)
Mode door control linkage adjustment [MTC-53](#)

Mode door motor [MTC-52](#), [MTC-103](#)
Model variation [GI-54](#)
Multiport fuel injection (MFI) system .. [EC-29](#), [EC-586](#)
Multiport fuel injection precautions [GI-6](#)

N

NATS - Wiring diagram [BL-84](#)
NATS (Nissan anti-theft system) precautions [GI-3](#)
NVH troubleshooting (AX) [FAX-4](#)
NVH troubleshooting (BR) [BR-5](#)
NVH troubleshooting (EM)(VQ) [EM-12](#)
NVH troubleshooting (EM)(YD) [EM-154](#)
NVH troubleshooting (Final drive) [FFD-6](#), [RFD-7](#), [RFD-40](#)
NVH troubleshooting (M/T) [MT-6](#)
NVH troubleshooting (Propeller shaft) [PR-2](#)
NVH troubleshooting (ST) [PS-5](#)
NVH troubleshooting (Transfer) [TF-11](#)
NVH troubleshooting (WT)NVH troubleshooting (WT) .. [WT-2](#)

O

O2H2B1 - Wiring diagram [EC-156](#)
O2H2B2 - Wiring diagram [EC-158](#)
O2S2B1 - Wiring diagram .. [EC-189](#), [EC-199](#), [EC-332](#), [EC-343](#)
O2S2B2 - Wiring diagram .. [EC-191](#), [EC-201](#), [EC-334](#), [EC-345](#)
Oil cooler (engine)(VQ) [LU-11](#)
Oil cooler (engine)(YD) [LU-26](#)
Oil filter(VQ) [LU-10](#)
Oil filter(YD) [LU-23](#)
Oil pan (engine)(VQ) [EM-28](#)
Oil pan (engine)(YD) [EM-180](#)
Oil pressure (engine)(VQ) [LU-7](#)
Oil pressure (engine)(YD) [LU-20](#)
Oil pressure relief valve (engine)(VQ) [LU-11](#)
Oil pump (A/T) [AT-301](#)
Oil pump (engine)(VQ) [LU-13](#)
Oil pump (engine)(YD) [LU-29](#)
Oil pump regulator valve (engine)(VQ) [LU-13](#)
Oil seal replacement (engine)(VQ) [EM-88](#)
Oil seal replacement (engine)(YD) [EM-214](#)
Oil seal replacement (front of final drive) [FFD-9](#)
Oil seal replacement (side of final drive) [FFD-13](#)
On board diagnostic system [EC-44](#), [EC-601](#), [EC-1016](#)
Operating cylinder (clutch) [CL-12](#)
Overheat [EC-351](#), [EC-789](#), [EC-1120](#)
Oversize piston(VQ) [EM-128](#)
Oversize piston(YD) [EM-273](#)

P

P/SCKT - Wiring diagram [WW-38](#)
Park/Neutral position switch [EC-466](#), [EC-858](#), [EC-1324](#)
Park/neutral position switch (A/T) [AT-104](#)
Park/neutral position switch (M/T) [MT-12](#), [MT-21](#)

ALPHABETICAL INDEX

Parking brake control	PB-2
PCV (positive crankcase ventilation) ...	EC-41 , EC-598
Personal lamp	LT-93
PGC/V - Wiring diagram	EC-276
PHSB1 - Wiring diagram	EC-261 , EC-734
PHSB2 - Wiring diagram	EC-263 , EC-736
Pilot bushing replacement - See Pilot converter(VQ) ...	EM-108
Pilot bushing replacement - See Pilot converter(YD) ...	EM-255
Pilot bushing replacement(VQ)	EM-108
Pilot bushing replacement(YD)	EM-255
Piston assembly(VQ)	EM-119
Piston assembly(YD)	EM-265
Piston pin inspection(VQ)	EM-124
Piston pin inspection(YD)	EM-269
Piston ring inspection(VQ)	EM-125
Piston ring inspection(YD)	EM-270
Piston to bore clearance(VQ)	EM-128
Piston to bore clearance(YD)	EM-273
Planetary carrier (Transfer)	TF-135
PNP/SW - Wiring diagram .	EC-468 , EC-859 , EC-1325
POS - Wiring diagram	EC-254 , EC-727
POWER - Wiring diagram	PG-5
Power steering fluid level	MA-45
Power steering gear	PS-14
Power steering oil pump	PS-24
Power steering pressure (PSP) sensor	EC-283 , EC-741
Power steering system bleeding	PS-6
Power supply routing	PG-4
Power window	GW-15
Precautions for Leak detection dye	MTC-14
Precautions (General)	GI-4
Pressure plate - See Clutch cover	CL-18
Pressure switch 1	AT-145 , AT-162
Pressure switch 2	AT-160
Pressure switch 3	AT-140 , AT-164
Pressure switch 5	AT-150 , AT-166
Pressure switch 6	AT-155 , AT-168
Pressure test (A/T)	AT-45
PRGVLV - Wiring diagram	EC-918
Priming pump	EC-1012
Propeller shaft	PR-3 , PR-7
Propeller shaft inspection	MA-40
Propeller shaft on vehicle service	PR-7
Propeller shaft vibration	PR-3 , PR-7
PS/SEN - Wiring diagram	EC-284 , EC-742

Q

Quick-glow system	EC-1283
-------------------------	-------------------------

R

Radiator(VQ)	CO-13 , CO-17
Radiator(YD)	CO-40 , CO-44
Rear bumper	EL-17
Rear case (Transfer)	TF-119 , TF-126

Rear combination lamp removal and installation	LT-92
Rear cover packing replacement diff.	FFD-14
Rear door	GW-38
Rear seat	SE-18
Rear window	GW-41
Rear window defogger	GW-45
Refrigerant connection precaution	MTC-5
Refrigerant discharging evacuating charging	MTC-111
Refrigerant general precaution	MTC-5
Refrigerant lines	MTC-111 , MTC-120 , MTC-121
Refrigerant pressure sensor	EC-556 , EC-977 , EC-1307 , MTC-77 , MTC-121
Refrigeration cycle	MTC-20
Relay box	PG-75
Removal and installation (A/T)	AT-254 , AT-258
Removal and installation (Transfer)	TF-116
Reverse idler shaft (M/T)	MT-23
Reverse lamp switch (M/T) - See Back-up lamp switch (M/T)	MT-12 , MT-21
Reverse main gear (M/T)	MT-23
Revolution sensor (A/T)	AT-108 , AT-244
Road wheel size	GI-58
Rocker cover(VQ)	EM-41
Rocker cover(YD)	EM-200
Room lamp	LT-93
Room lamp - See Interior lamp	LT-93
ROOM/L - Wiring diagram	LT-96
RP/SEN - Wiring diagram .	EC-557 , EC-978 , EC-1308
RRO2B1 - Wiring diagram	EC-943 , EC-952
RRO2B2 - Wiring diagram	EC-945 , EC-954

S

S/SIG - Wiring diagram	EC-1330
SCTC/V - Wiring diagram	EC-1207
Seat belt inspection	SB-7 , MA-48
Seat belt pre-tensioner	SRS-33
Seat belt pre-tensioner disposal	SRS-35
Seat, front	SE-10
Seat, rear	SE-18
Self-diagnosis (Transfer)	TF-50
SEN/PW - Wiring diagram	EC-366 , EC-804
SHIFT - Wiring diagram	AT-219
Shift control (Transfer)	TF-141
Shift control components (M/T)	MT-25
Shift fork (M/T)	MT-25
Shift lever	MT-13
Shift lock system	AT-218
Shock absorber (front)	FSU-11
Shock absorber (rear)	RSU-8
Side trim	EI-30
SMJ (super multiple junction)	PG-71
Spare tire size	GI-58
Spark plug(VQ)	EM-34
Specification value	EC-127 , EC-667
Speedometer	DI-4
Spiral cable	SRS-28
SRS - See Supplemental Restraint System	SRS-5
SRS - Wiring diagram	SRS-10

ALPHABETICAL INDEX

SRS Trouble diagnoses	SRS-7	Transfer control device	TF-76 , TF-80 , TF-110
Stabilizer bar (front)	FSU-12	Transfer control unit inspection table	TF-39
Stall test (A/T)	AT-44	Transfer oil replacement	MA-40
Standardized relay	PG-69	Transfer serial number	GI-56
START - Wiring diagram	SC-31 , SC-33	Transmission case (M/T)	MT-21
Start signal	EC-1330	Transmission serial number	GI-57
Starter	SC-30	Tread-FR&RR (Dimensions)	GI-58
Starting system	SC-30	Trim	EI-30
Steering gear, linkage and transfer gear inspection		Trouble diagnoses	GI-11
MA-44 , MA-45		Turbine revolution sensor	AT-129
Steering linkage	PS-14	Turbocharger charge air cooler(YD)	EM-162
Steering wheel and column	PS-8	Turbocharger precautions	GI-6
Step lamp	LT-93	Turbocharger(YD)	EM-172
Stop lamp	LT-74	TURN - Wiring diagram	LT-55
Stop lamp switch	EC-473 , EC-864 , EC-1312	Turn signal lamp	LT-52
STOP/L - Wiring diagram	LT-74	Two trip detection logic	EC-44 , EC-601
Striking rod (M/T)	MT-25	Two-pole lift	GI-50
Strut (front)	FSU-10		
Supplemental Restraint System	SRS-5		
Symbols and abbreviations	GI-10 , GI-23		
Symptom matrix chart	EC-85 , EC-628 , EC-1031		
Synchronizer (M/T)	MT-23		
System readiness test (SRT) code	EC-49		

T

Tachometer	DI-4
Tail lamp	LT-78
TAIL/L - Wiring diagram	LT-80
TC boost control solenoid valve	EC-1297
TC boost sensor	EC-1141
TCC/V - Wiring diagram	EC-1299
TCM circuit diagram	AT-43
TCM inspection table	AT-81
Thermostat(VQ)	CO-27
Thermostat(YD)	CO-52
Three way catalyst function (Bank 1)	EC-268
Three way catalyst function (Bank 2)	EC-268
Three way catalyst precautions	GI-5
Three way catalyst(VQ)	EM-23
Throttle body(YD)	EM-164
Throttle control motor	EC-324 , EC-784
Throttle control motor relay	EC-318 , EC-778
Throttle position sensor (TPS)	EC-180 , EC-231 , EC-361 , EC-363 , EC-491 , EC-706 , EC-713 , EC-799 , EC-801 , EC-883
Tie-rod	PS-14
Timing chain(VQ)	EM-53
Timing chain(YD)	EM-217 , EM-223
Timing gear(YD)	EM-223
Tire rotation	MA-42
Tire size	GI-58
Torque converter installation	AT-257 , AT-261
Torque convertor clutch solenoid valve	AT-115 , AT-117
Tow truck towing	GI-51
Towing point	GI-52
TPS1 - Wiring diagram	EC-233 , EC-715
TPS2 - Wiring diagram	EC-182 , EC-708
TPS3 - Wiring diagram	EC-493 , EC-885

V

Vacuum hose drawing (Engine control)	EC-96 , EC-639 , EC-1005
Vacuum pump(YD)	EM-186
Valve clearance(VQ)	EM-83
Valve clearance(YD)	EM-210
Valve guide(VQ)	EM-99
Valve guide(YD)	EM-245
Valve lifter(VQ)	EM-77
Valve lifter(YD)	EM-206
Valve seat(VQ)	EM-101
Valve seat(YD)	EM-247
Valve spring(VQ)	EM-102
Valve spring(YD)	EM-248
Vanity mirror lamp	LT-93
Variable induction air control system (VIAS) ...	EC-562 , EC-983
Vehicle identification number	GI-55
Vehicle recovery (freeing a stuck vehicle)	GI-52
Vehicle speed sensor (VSS)	EC-281 , EC-472 , EC-863 , EC-992
VENT/V - Wiring diagram	EC-526 , EC-925
VIAS - Wiring diagram	EC-564 , EC-985
Viscosity number (SAE)	MA-14

W

Wait detection switch	TF-64 , TF-67
WARN - Wiring diagram	DI-34
Warning chime	DI-55
Warning lamps	DI-32
Washer, front	WW-4
Water pump(VQ)	CO-23
Water pump(YD)	CO-50
Water temperature gauge	DI-4
Wheel alignment (front)	FSU-7
Wheel balance	MA-42
Wheel bearing (front)	FAX-5
Wheel bearing (rear)	RAX-6
Wheel sensors (ABS)	BRC-37

ALPHABETICAL INDEX

Wheel size	GI-58
Wheelbase (Dimensions)	GI-58
Width (Dimensions)	GI-58
WINDOW - Wiring diagram	GW-20
Window, door	GW-35 , GW-38
Window, rear	GW-41
Windshield	GW-11
WIPER - Wiring diagram	WW-12
Wiper, front	WW-4
Wiring Diagram (Cell code) list	PG-58
Wiring diagrams	GI-15

A
B
C
D
E
F
G
H
I
J
K
L