

ALPHABETICAL INDEX

A

A/C air flow [ATC-24](#), [MTC-21](#)
 A/C component layout [ATC-16](#), [MTC-16](#)
 A/C compressor mounting [ATC-140](#), [MTC-86](#)
 A/C compressor precaution [ATC-8](#), [MTC-8](#)
 A/C control operation (auto A/C) [ATC-22](#)
 A/C control operation (manual A/C) [MTC-20](#)
 A/C controller [MTC-62](#)
 A/C diagnostic work flow (auto A/C) [ATC-97](#)
 A/C HFC134a (R134a) system precaution [ATC-4](#),
[MTC-4](#)
 A/C HFC134a (R134a) system service procedure
[ATC-135](#), [MTC-81](#)
 A/C HFC134a (R134a) system service tools .. [ATC-12](#),
[MTC-12](#)
 A/C HFC134a system service equipment precaution ...
[ATC-8](#), [MTC-8](#)
 A/C lubricant (R134a) [ATC-5](#), [ATC-17](#), [ATC-151](#),
[MTC-5](#), [MTC-17](#), [MTC-97](#)
 A/C operational check [ATC-55](#), [MTC-34](#)
 A/C self-diagnoses (auto A/C) [ATC-46](#), [ATC-97](#)
 A/C service data specification [ATC-151](#), [MTC-97](#)
 A/C trouble diagnoses (manual A/C) [MTC-23](#)
 A/C unit assembly [ATC-118](#), [MTC-65](#)
 A/C, A - Wiring diagram [ATC-31](#)
 A/C, M - Wiring diagram [MTC-26](#)
 A/T fluid checking [AT-18](#), [MA-56](#)
 A/T fluid replacement [AT-19](#), [MA-57](#)
 A/T fluid temperature sensor [AT-114](#)
 A/T IND - Wiring diagram [DI-49](#)
 A/T indicator [DI-48](#)
 A/T shift control system [AT-332](#)
 A/T shift lock system [AT-338](#)
 A/T shift lock system - Wiring diagram [AT-339](#)
 A/T trouble diagnoses [AT-40](#)
 A/T Wiring diagram AT - BA/FTS [AT-181](#), [AT-236](#)
 A/T Wiring diagram AT - CAN [AT-103](#), [AT-258](#)
 A/T Wiring diagram AT - ENG SS [AT-122](#), [AT-242](#)
 A/T Wiring diagram AT - FTS [AT-111](#)
 A/T Wiring diagram AT - LPSV [AT-154](#), [AT-252](#)
 A/T Wiring diagram AT - MAIN [AT-194](#), [AT-261](#)
 A/T Wiring diagram AT - NONDTC [AT-296](#)
 A/T Wiring diagram AT - OVRCSS [AT-172](#), [AT-226](#)
 A/T Wiring diagram AT - PNP/SW [AT-106](#)
 A/T Wiring diagram AT - PT/SEN [AT-187](#), [AT-246](#)
 A/T Wiring diagram AT - SSV/A [AT-160](#), [AT-216](#)
 A/T Wiring diagram AT - SSV/B [AT-165](#), [AT-221](#)
 A/T Wiring diagram AT - TCV [AT-143](#), [AT-231](#)
 A/T Wiring diagram AT - VSS A/T [AT-117](#), [AT-205](#)
 A/T Wiring diagram AT - VSSMTR [AT-177](#), [AT-210](#)
 ABS - Wiring diagram [BRC-13](#)
 ABS sensor rotor [RAX-5](#)
 Accelerator pedal position (APP) sensor [EC-383](#),
[EC-392](#), [EC-409](#), [EC-699](#), [EC-708](#), [EC-725](#), [EC-1172](#),
[EC-1181](#), [EC-1197](#), [EC-1492](#), [EC-1501](#), [EC-1517](#),
[EC-1751](#), [EC-1837](#), [EC-1855](#)
 Accelerator pedal released position learning [EC-69](#),
[EC-486](#), [EC-857](#), [EC-1278](#)

Air bag [SRS-3](#), [SRS-36](#), [SRS-40](#), [SRS-42](#), [SRS-44](#)
 Air bag disposal [SRS-49](#)
 Air bleeding (hydraulic clutch) [CL-8](#)
 Air bleeding for brake system [BR-10](#)
 Air cleaner and air duct [EM-118](#), [EM-245](#)
 Air cleaner filter [EM-119](#), [EM-246](#)
 Air cleaner filter replacement(CR) [MA-34](#)
 Air cleaner filter replacement(HR) [MA-44](#)
 Air cleaner filter replacement(K9K) [MA-52](#)
 Air conditioner cut control [EC-821](#), [EC-1255](#), [EC-1618](#)
 Air flow meter - See Mass air flow sensor [EC-935](#),
[EC-1354](#)
 Air mix door control linkage adjustment [MTC-37](#),
[MTC-71](#)
 Air mix. door motor [ATC-64](#), [ATC-125](#)
 Alternator [SC-15](#)
 Ambient sensor [ATC-99](#), [ATC-114](#)
 Angular tightening application [EM-105](#), [EM-227](#)
 Antenna [AV-11](#)
 AP/SEN - Wiring diagram .. [EC-156](#), [EC-339](#), [EC-560](#),
[EC-656](#)
 APPS - Wiring diagram . [EC-1752](#), [EC-1838](#), [EC-1856](#)
 APPS1 - Wiring diagram .. [EC-385](#), [EC-701](#), [EC-1174](#),
[EC-1494](#)
 APPS2 - Wiring diagram .. [EC-394](#), [EC-710](#), [EC-1183](#),
[EC-1503](#)
 APPS3 - Wiring diagram .. [EC-411](#), [EC-727](#), [EC-1199](#),
[EC-1519](#)
 Audio [AV-3](#)
 AUDIO - Wiring diagram [AV-4](#)
 Auto air conditioner - Wiring diagram [ATC-31](#)
 Auto amp [ATC-44](#), [ATC-57](#), [ATC-112](#)
 Auto wiper [WW-4](#)
 Automatic amplifier [ATC-44](#), [ATC-57](#)
 Automatic transaxle number [GI-48](#)
 Automatic transmission fluid replacement [MA-56](#)
 Axle [MA-60](#)

B

Back door trim [EI-22](#)
 Back door window [GW-10](#)
 Back window [GW-10](#)
 BACK/L - Wiring diagram [LT-131](#)
 Back-up lamp [LT-131](#)
 Barometric pressure (BARO) sensor [EC-1863](#)
 Basic inspection [EC-66](#), [EC-483](#), [EC-851](#), [EC-1272](#)
 Battery [SC-5](#)
 BCM (Body control module) [BCS-3](#)
 Blower motor [ATC-71](#), [ATC-123](#), [MTC-39](#), [MTC-69](#)
 Blower resistor [MTC-73](#)
 Board computer [DI-21](#)
 Board-on lift [GI-41](#)
 Brake booster [BR-17](#)
 Brake fluid change [BR-9](#)
 Brake fluid level [MA-58](#)
 Brake fluid level and line check [BR-9](#)
 Brake hydraulic line [BR-11](#)
 Brake inspection [MA-58](#)

ALPHABETICAL INDEX

Brake lines and cables inspection	MA-58
Brake master cylinder	BR-14
Brake pedal	BR-6
Brake switch	EC-377 , EC-693 , EC-1167 , EC-1487 , EC-1820 , EC-1850
BRK/SW - Wiring diagram	EC-379 , EC-695 , EC-1168 , EC-1488 , EC-1821 , EC-1851
Bulb specifications	LT-183
Bumper, front	EI-4
Bumper, rear	EI-8

C

Camshaft	EM-151
Camshaft inspection	EM-157 , EM-325
Camshaft position sensor (CMPS)	EC-1075 , EC-1778
Camshaft position sensor (PHASE)	EC-257 , EC-616 , EC-1049 , EC-1413
CAN - Wiring diagram	EC-135 , EC-550 , EC-926 , EC-1345 , EC-1706 , LAN-23 , LAN-38 , LAN-51 , LAN-65 , LAN-79 , LAN-94 , LAN-108 , LAN-123 , LAN-136 , LAN-150 , LAN-164
CAN (Controller Area Network)	AT-39 , BRC-48 , LAN-21
CAN communication	EC-134 , EC-137 , EC-549 , EC-552 , EC-822 , EC-925 , EC-928 , EC-1256 , EC-1344 , EC-1347 , EC-1624 , EC-1705 , AT-39 , AT-102 , BRC-48 , LT-89 , LAN-21

Canister-See EVAP canister	EC-43 , EC-472 , EC-826 , EC-1260
CD/CHG - Wiring diagram	AV-4
CHARGE - Wiring diagram	SC-16 , SC-17 , SC-18
Charging system	SC-15
Chassis and body maintenance	MA-55
Circuit breaker	PG-17
CKPS - Wiring diagram	EC-1775
Closed loop control	EC-34 , EC-463 , EC-818 , EC-1252
Clutch cover	CL-11 , CL-12
Clutch disc	CL-11
Clutch master cylinder	CL-9
Clutch pedal	CL-6
CMPS - Wiring diagram	EC-1779
Coil spring (front)	FSU-8
Coil spring (rear)	RSU-9
Collision diagnosis	SRS-58
Combination lamp, rear, removal and installation	LT-149

Combination switch	WW-8
COMM - Wiring diagram	DI-24
Component Location (auto A/C)	ATC-28
Component Location (manual A/C)	MTC-25
Compression pressure	EM-173
Compressor mounting	ATC-140 , MTC-86
Conformity check	EC-1680
Connecting rod	EM-208 , EM-327
Connecting rod bearing clearance	EM-211
Connecting rod bushing clearance	EM-208
CONSULT for ABS	BRC-19
CONSULT for engine	EC-102 , EC-519

CONSULT general information	GI-35
CONSULT-II for engine	EC-891 , EC-1312
Control units (terminal arrangement)	PG-90
Controller Area Network (CAN)	AT-39 , BRC-48 , LAN-21
Converter housing installation	AT-358 , AT-465
COOL/F - Wiring diagram	EC-349 , EC-666 , EC-1135 , EC-1456 , EC-1866
Coolant mixture ratio	MA-26
Coolant replacement	MA-49
Cooling circuit (engine)	CO-7 , CO-26
Cooling fan	CO-14 , CO-33 , CO-52
Cooling fan control	EC-1620
Cooling fan motor	EC-1130 , EC-1451 , EC-1864
Cooling fan relay	EC-1130 , EC-1451 , EC-1864
Cowl top	EI-12
Crankcase ventilation system - See Positive crankcase ventilation	EC-45 , EC-474 , EC-828 , EC-1262
Crankshaft	EM-189 , EM-211 , EM-328
Crankshaft position sensor (POS)	EC-250 , EC-609 , EC-1042 , EC-1405
Crankshaft position sensor (TDC)	EC-1774
Cylinder block	EM-189 , EM-329
Cylinder head	EM-173 , EM-177 , EM-276
Cylinder head bolt tightening	EM-176 , EM-277 , EM-321

D

Data link connector	EC-448 , EC-800 , EC-893 , EC-900 , EC-1313
Data link connector for Consult	EC-104 , EC-521
Diagnosis sensor unit	SRS-48
Diagnostic trouble code (DTC) for OBD system	EC-22 , EC-49 , EC-451 , EC-477 , EC-803 , EC-833 , EC-1239 , EC-1265 , EC-1601
Diagnostic trouble code (DTC) inspection priority chart	EC-80 , EC-497 , EC-869 , EC-1290
Dimensions	GI-48
Door glass	GW-5 , GW-89 , GW-93
Door mirror	GW-96
Door trim	EI-20
Drive belt	EM-114 , EM-242
Drive belt inspection	MA-49
Drive computer	DI-21 , DI-24
Drive shaft (front)	FAX-10
Driver air bag	SRS-36
Dropping resistor (A/T)	AT-158 , AT-256
DTC work support	EC-109 , EC-898
Duct and grilles	ATC-130 , MTC-76

E

ECM input/output signal	EC-95 , EC-512 , EC-883 , EC-902 , EC-1304 , EC-1321 , EC-1673
ECM power supply	EC-128 , EC-282 , EC-543 , EC-626 , EC-918 , EC-1337 , EC-1816
ECM relay	EC-1845
ECM/PW - Wiring diagram	EC-283 , EC-627 , EC-1817
ECMRLY - Wiring diagram	EC-1846

A
B
C
D
E
F
G
H
I
J
K
L

IDX

ALPHABETICAL INDEX

	F
ECTS - Wiring diagram	EC-168 , EC-567 , EC-949 , EC-1363 , EC-1728
EGR function	EC-1622 , EC-1791
EGR volume control valve	EC-1795
EGR volume control valve position sensor	EC-1800 , EC-1805
EGRC/V - Wiring diagram	EC-1792 , EC-1796 , EC-1801 , EC-1806
Electric throttle control actuator	EC-291 , EC-293 , EC-305 , EC-635 , EC-637 , EC-649 , EC-1082 , EC-1084 , EC-1430 , EC-1433
Electrical diagnoses	GI-12
Electrical load signal circuit	EC-419 , EC-735 , EC-1207 , EC-1528
Electrical unit	PG-90
Electrical units location	PG-82
Electronic ignition (EI) system	EC-36 , EC-465 , EC-819 , EC-1253
Engine control circuit diagram	EC-93 , EC-510 , EC-881 , EC-1302 , EC-1671
Engine control component parts location	EC-86 , EC-503 , EC-875 , EC-1296 , EC-1668
Engine control module (ECM)	EC-279 , EC-623 , EC-928 , EC-1072 , EC-1347 , EC-1420 , EC-1423 , EC-1825 , EC-1826 , EC-1828
Engine control system diagram	EC-816 , EC-1250
Engine control system diagram and chart	EC-33 , EC-462 , EC-1609
Engine coolant	CO-8 , CO-27 , CO-48
Engine coolant temperature sensor (ECTS) ...	EC-166 , EC-565 , EC-947 , EC-1361 , EC-1727
Engine fail-safe system	EC-81 , EC-498 , EC-870 , EC-1291
Engine oil	LU-6 , LU-16 , LU-23
Engine oil filter replacement(CR)	MA-35
Engine oil filter replacement(HR)	MA-46
Engine oil filter replacement(K9K)	MA-54
Engine oil precautions	GI-7
Engine oil replacement(CR)	MA-34
Engine oil replacement(HR)	MA-45
Engine oil replacement(K9K)	MA-53
Engine removal	EM-184 , EM-279
Engine room cover	EM-121 , EM-241
Engine serial number	GI-47
ETC1 - Wiring diagram	EC-294 , EC-638 , EC-1085 , EC-1434
ETC2 - Wiring diagram	EC-301 , EC-645 , EC-1092 , EC-1441
ETC3 - Wiring diagram	EC-306 , EC-650 , EC-1097 , EC-1446
EVAP canister	EC-43 , EC-472 , EC-826 , EC-1260
EVAP canister purge volume control solenoid valve	EC-40 , EC-270 , EC-469 , EC-737 , EC-1063 , EC-1530
EVAP vapor lines inspection(CR)	MA-37
EVAP vapor lines inspection(HR)	MA-48
Evaporative emission (EVAP) system	EC-40 , EC-469 , EC-823 , EC-1257
Exhaust manifold	EM-124 , EM-253
Exhaust system inspection	EX-3 , MA-55
F/FOG - Wiring diagram	LT-76
F/PUMP - Wiring diagram	EC-428 , EC-751 , EC-1216 , EC-1544 , EC-1760
Floor trim	EI-29
Flow charts	GI-25
Fluid temperature sensor (A/T)	AT-114
Fluids	MA-24
Fluorescent leak detector	ATC-147 , MTC-93
Flywheel (clutch)	CL-13
Flywheel runout	EM-214
Fog lamp, front	LT-73
Freeze frame data	EC-50 , EC-478 , EC-834 , EC-893 , EC-1266 , EC-1314
FRO2 - Wiring diagram	EC-757 , EC-764 , EC-1550 , EC-1558
Front axle	FAX-6
Front bumper	EI-4
Front disc brake	BR-21
Front fog lamp	LT-73
Front passenger air bag	SRS-40
Front seat	SE-7
Front seat belt	SB-3 , SB-4
Front seat belt pre-tensioner	SB-2 , SB-3 , SB-4 , SRS-3
Front side air bag	SRS-42
Front suspension	FSU-5
Front washer	WW-4
Front wiper	WW-4
FRPS - Wiring diagram	EC-1737
FTS - Wiring diagram	EC-1733
FUEL - Wiring diagram	EC-220 , EC-228 , EC-1014 , EC-1021
Fuel check valve	EC-40 , EC-469
Fuel cut control (at no load high engine speed)	EC-36 , EC-465 , EC-820 , EC-1254
Fuel filter	EC-1625
Fuel filter replacement	FL-26
Fuel gauge	FL-29
Fuel injection control system	EC-1612
Fuel injection system	EC-218 , EC-226 , EC-1012 , EC-1019 , EC-1719
Fuel injector	EC-1209 , EC-1537 , EC-1625 , EC-1740 , EC-1745
Fuel injector and fuel tube	EM-135
Fuel line inspection	FL-3 , FL-14
Fuel line inspection(CR)	MA-33
Fuel line inspection(HR)	MA-44
Fuel line inspection(K9K)	MA-52
Fuel precautions	GI-5
Fuel pressure check	EC-71 , EC-488 , EC-860 , EC-1281
Fuel pressure release	EC-71 , EC-488 , EC-860 , EC-1281
Fuel pump	EC-427 , EC-750 , EC-1215 , EC-1543 , EC-1721 , EC-1759
Fuel pump and gauge	FL-4 , FL-15
Fuel rail pressure sensor	EC-1736
Fuel system	FL-3 , FL-14 , FL-25
Fuel tank	FL-8 , FL-19 , FL-31

ALPHABETICAL INDEX

Fuel tank vacuum relief valve [EC-826](#), [EC-1260](#)
 Fuel temperature sensor [EC-1732](#)
 Fuse [PG-17](#)
 Fuse and fusible link box [PG-96](#)
 Fusible link [PG-17](#)

G

Garage jack and safety stand [GI-40](#)
 Generator [SC-15](#)
 Generator - See Alternator [SC-15](#)
 Generic scan tool (GST) [EC-111](#), [EC-900](#)
 GLOW - Wiring diagram [EC-1785](#), [EC-1789](#)
 Glow control system [EC-1619](#), [EC-1784](#), [EC-1788](#)
 Glow plug [EM-260](#), [EC-1620](#)
 Grease [MA-24](#)
 Grille - See Exterior [EI-10](#)
 Ground distribution [PG-38](#)

H

H/AIM - Wiring diagram [LT-68](#)
 H/LAMP - Wiring diagram [LT-11](#)
 Harness connector [PG-88](#)
 Harness layout [PG-48](#)
 Hazard warning lamp [LT-98](#)
 Headlamp aiming control [LT-68](#)
 Headlamp leveler - See Headlamp aiming control [LT-68](#)
 Headlamp washer [WW-73](#)
 Headlining - See Roof trim [EI-30](#)
 Heated oxygen sensor 1 [EC-178](#), [EC-185](#), [EC-195](#),
[EC-310](#), [EC-316](#), [EC-577](#), [EC-584](#), [EC-756](#), [EC-959](#),
[EC-967](#), [EC-977](#), [EC-1101](#), [EC-1107](#), [EC-1373](#),
[EC-1381](#), [EC-1549](#)
 Heated oxygen sensor 1 heater [EC-143](#), [EC-763](#),
[EC-985](#), [EC-1557](#)
 Heated oxygen sensor 2 [EC-203](#), [EC-210](#), [EC-322](#),
[EC-330](#), [EC-591](#), [EC-768](#), [EC-991](#), [EC-998](#), [EC-1113](#),
[EC-1121](#), [EC-1388](#), [EC-1563](#)
 Heated oxygen sensor 2 heater [EC-149](#), [EC-774](#),
[EC-1006](#), [EC-1569](#)
 Heated seat [SE-4](#)
 Height (Dimensions) [GI-48](#)
 HFC134a (R134a) system precaution .. [ATC-4](#), [MTC-4](#)
 HFC134a (R134a) system service procedure [ATC-135](#),
[MTC-81](#)
 HFC134a (R134a) system service tools [ATC-12](#),
[MTC-12](#)
 HFC134a system service equipment precaution
[ATC-8](#), [MTC-8](#)
 HLC - Wiring diagram [WW-75](#)
 HO2S1 - Wiring diaram [EC-180](#), [EC-188](#), [EC-198](#),
[EC-579](#), [EC-586](#), [EC-961](#), [EC-970](#), [EC-980](#), [EC-1375](#),
[EC-1383](#)
 HO2S1H - Wiring diagram [EC-145](#), [EC-987](#)
 HO2S2 - Wiring diagram [EC-205](#), [EC-213](#), [EC-325](#),
[EC-333](#), [EC-593](#), [EC-993](#), [EC-1001](#), [EC-1116](#),
[EC-1124](#), [EC-1390](#)

HO2S2H - Wiring diagram [EC-151](#), [EC-1008](#)
 Horn [WW-89](#)
 HORN - Wiring diagram [WW-89](#)
 How to erase DTC [EC-1628](#)
 How to erase DTC for OBD system [EC-57](#), [EC-478](#),
[EC-841](#), [EC-1267](#)
 HSEAT - Wiring diagram [SE-5](#)

I

IATS - Wiring diagram [EC-163](#), [EC-944](#), [EC-1716](#)
 IATSEN - Wiring diagram [EC-780](#), [EC-1576](#)
 Identification plate [GI-47](#)
 Idle air volume learning [EC-69](#), [EC-486](#), [EC-858](#),
[EC-1279](#)
 Idle speed [EC-66](#), [EC-483](#), [EC-851](#), [EC-856](#), [EC-1272](#),
[EC-1277](#)
 Idle speed control (ISC) [EC-1616](#)
 Ignition coil [EM-132](#), [EC-433](#), [EC-784](#), [EC-1221](#),
[EC-1580](#)
 Ignition control system [EC-433](#), [EC-784](#), [EC-1221](#),
[EC-1580](#)
 Ignition timing [EC-66](#), [EC-483](#), [EC-851](#), [EC-856](#),
[EC-1272](#), [EC-1277](#)
 IGNSYS - Wiring diagram [EC-434](#), [EC-785](#), [EC-1222](#),
[EC-1581](#)
 In vehicle sensor [ATC-102](#), [ATC-115](#)
 INJECT - Wiring diagram [EC-422](#), [EC-745](#), [EC-1210](#),
[EC-1538](#), [EC-1741](#), [EC-1746](#)
 Injector [EC-421](#), [EC-744](#), [EC-1209](#), [EC-1537](#)
 Injector adjustment value [EC-1731](#)
 Injector adjustment value registration [EC-1625](#)
 Intake air system [EC-338](#), [EC-654](#)
 Intake air temperature sensor [EC-161](#), [EC-779](#),
[EC-942](#), [EC-1575](#), [EC-1715](#)
 Intake door control linkage adjustment [ATC-70](#),
[MTC-38](#), [MTC-70](#)
 Intake door motor [ATC-68](#), [ATC-124](#)
 Intake manifold [EM-120](#)
 Intake sensor [ATC-108](#), [ATC-117](#)
 Intake valve timing control [EC-139](#), [EC-554](#), [EC-930](#),
[EC-1349](#)
 Intake valve timing control solenoid valve [EC-286](#),
[EC-630](#), [EC-930](#), [EC-1077](#), [EC-1349](#), [EC-1425](#)
 Interior lamp [LT-150](#)
 IPDM (Intelligent power distribution module engine
 room) [PG-18](#)
 ISO 15031-2 Terminology [GI-49](#)
 ISO 15031-5 Service \$01 - 09 [EC-47](#), [EC-830](#)
 IVC - Wiring diagram [EC-287](#), [EC-631](#), [EC-1078](#),
[EC-1426](#)

K

Keyless entry system - See Multi-remote control system
[BL-111](#)
 Knock sensor (KS) [EC-246](#), [EC-605](#), [EC-1038](#),
[EC-1401](#), [EC-1770](#)
 Knuckle spindle [FAX-6](#)

A

B

C

D

E

G

H

J

L

IDX

ALPHABETICAL INDEX

KS - Wiring diagram [EC-247](#), [EC-606](#), [EC-1039](#),
[EC-1402](#), [EC-1771](#)

L

Length (Dimensions) [GI-48](#)
 Line pressure test (A/T) [AT-56](#)
 Liquid gasket application [EM-106](#), [EM-228](#), [LU-3](#),
[LU-13](#), [CO-3](#), [CO-22](#)
 Location of electrical units [PG-82](#)
 Lubricant (R134a) A/C [ATC-5](#), [ATC-17](#), [ATC-151](#),
[MTC-5](#), [MTC-17](#), [MTC-97](#)
 Lubricants [MA-24](#)
 Lubrication circuit (engine) [LU-5](#), [LU-15](#)
 Lubrication oil A/C [ATC-151](#), [MTC-97](#)
 Lubrication-locks, hinges and hood latches [MA-61](#)
 Luggage compartment trim [EI-32](#)

M

MAFS - Wiring diagram .. [EC-937](#), [EC-1356](#), [EC-1723](#)
 Magnet clutch [ATC-78](#), [MTC-43](#)
 MAIN - Wiring diagram [EC-128](#), [EC-543](#), [EC-918](#),
[EC-1337](#), [EC-1698](#)
 Malfunction indicator (MI) [EC-58](#), [EC-479](#)
 Malfunction indicator lamp (MIL) [EC-843](#), [EC-1268](#)
 Manifold absolute pressure (MAP) sensor [EC-155](#),
[EC-559](#)
 Manual air conditioner - Wiring diagram [MTC-26](#)
 Mass air flow sensor (MAFS) [EC-935](#), [EC-1354](#),
[EC-1722](#)
 Master cylinder (brake) [BR-14](#)
 MIL data link connectors circuit [EC-1236](#), [EC-1596](#)
 MIL/DL - Wiring diagram .. [EC-448](#), [EC-800](#), [EC-1236](#),
[EC-1596](#), [EC-1869](#)
 Mirror, door [GW-96](#)
 Mirror, out side [GW-96](#)
 Misfire [EC-240](#), [EC-1032](#), [EC-1768](#)
 Mode door control linkage adjustment [ATC-62](#),
[MTC-36](#), [MTC-72](#)
 Mode door motor [ATC-60](#), [ATC-126](#)
 Model variation [GI-45](#)
 Molding - See Exterior [EI-16](#), [EI-17](#), [EI-19](#)
 Multiport fuel injection (MFI) system ... [EC-34](#), [EC-463](#),
[EC-817](#), [EC-1251](#)
 Multiport fuel injection precautions [GI-6](#)
 Multi-remote control system [BL-111](#)

N

NATS - Wiring diagram [BL-219](#)
 NATS (Nissan anti-theft system) precautions [GI-3](#)
 NVH troubleshooting (BR) [BR-5](#), [PB-2](#)
 NVH troubleshooting (RSU) [RSU-4](#)
 NVH troubleshooting (ST) [PS-4](#)

O

Oil cooler (engine) [LU-27](#)

Oil filter [LU-9](#), [LU-19](#), [LU-25](#)
 Oil pan (engine) [EM-127](#), [EM-257](#)
 Oil pressure (engine) [LU-6](#), [LU-16](#), [LU-23](#)
 Oil pump (engine) [LU-10](#), [LU-26](#)
 Oil seal replacement (engine) [EM-170](#)
 Oil vapour rebreathing [EC-1622](#)
 On board diagnostic system [EC-47](#), [EC-476](#), [EC-830](#),
[EC-1264](#), [EC-1628](#)
 Out side mirror [GW-96](#)
 Overdrive control switch [AT-197](#), [AT-202](#), [AT-288](#),
[AT-293](#)
 Overheat [EC-345](#), [EC-662](#), [EC-1130](#), [EC-1451](#),
[EC-1864](#)
 Oversize piston [EM-210](#)

P

Park/Neutral position switch [EC-371](#), [EC-688](#),
[EC-1158](#), [EC-1479](#)
 Park/neutral position switch (A/T) [AT-105](#), [AT-197](#),
[AT-288](#)
 Parking brake control [PB-3](#)
 PCV (positive crankcase ventilation) . [EC-45](#), [EC-474](#),
[EC-828](#), [EC-1262](#)
 PGC/V - Wiring diagram . [EC-272](#), [EC-1065](#), [EC-1531](#)
 PHASE - Wiring diagram . [EC-259](#), [EC-618](#), [EC-1051](#),
[EC-1415](#)
 Piston assembly [EM-210](#), [EM-326](#)
 Piston pin inspection [EM-326](#)
 Piston ring inspection [EM-207](#), [EM-327](#)
 Piston to bore clearance [EM-210](#)
 PNP/SW - Wiring diagram [EC-373](#), [EC-689](#), [EC-1160](#),
[EC-1480](#)
 POS - Wiring diagram [EC-252](#), [EC-611](#), [EC-1044](#),
[EC-1407](#)
 POWER - Wiring diagram [PG-5](#)
 Power door lock [BL-16](#)
 Power socket [WW-91](#)
 Power steering gear [PS-9](#)
 Power supply routing [PG-4](#)
 Power transistor [ATC-127](#)
 Power window [GW-32](#), [GW-89](#), [GW-93](#)
 Precations for Leak detection dye ... [ATC-11](#), [MTC-11](#)
 Precautions (General) [GI-4](#)
 PRGVLV - Wirng diagram [EC-738](#)

R

R/FOG - Wiring diagram [LT-90](#)
 Radiator [CO-12](#), [CO-31](#), [CO-51](#)
 Radiator fan - See Cooling fan [CO-52](#)
 Radio - See Audio [AV-3](#)
 Rain sensor [WW-4](#)
 Rear axle [RAX-5](#)
 Rear bumper [EI-8](#)
 Rear combination lamp removal and installation
[LT-149](#)
 Rear drum brake [BR-27](#)
 Rear seat [SE-12](#)

ALPHABETICAL INDEX

Rear seat belt	SB-4	S	Stabilizer bar (front)	FSU-11
Rear suspension	RSU-5	A	Stall test (A/T)	AT-53
Rear washer	WW-49	B	Standardized relay	PG-93
Rear window defogger	GW-12	C	START - Wiring diagram	SC-46 , SC-48
Rear wiper	WW-49	D	Starter	SC-45
Refrigerant connection precaution	ATC-5 , MTC-5	E	Starting system	SC-45
Refrigerant discharging evacuating charging	ATC-135 , MTC-81	F	Steering gear and linkage inspection	MA-60
Refrigerant general precaution	ATC-4 , MTC-4	G	Steering linkage	PS-9
Refrigerant lines	ATC-135 , MTC-81	H	Steering wheel and column	PS-5 , PS-7
Refrigerant pressure sensor	EC-443 , EC-794 , EC-1231 , EC-1590 , EC-1811 , ATC-85 , MTC-51	I	Steering wheel play	PS-5
Refrigeration cycle	ATC-15 , MTC-15	J	Steering wheel turning force	PS-5
Removal and installation (A/T)	AT-356	K	Stop lamp	LT-129
Road test	AT-58 , AT-61 , AT-64 , AT-65	L	Stop lamp switch	EC-377 , EC-693 , EC-1167 , EC-1487 , EC-1820 , EC-1850
Road wheel size	GI-48	INDEX	STOP/L - Wiring diagram	LT-129
Rocker cover	EM-140 , EM-270		Sunload sensor	ATC-105 , ATC-116
Roof trim	EI-30		Super lock	BL-59
Room lamp - See Interior lamp	LT-150		Supplemental Restraint System	SRS-5
ROOM/L - Wiring diagram	LT-155		Supplemental restraint system - Wiring diagram	
RP/SEN - Wiring diagram	EC-444 , EC-795 , EC-1232 , EC-1591 , EC-1812		SRS-11 , SRS-12	
RRO2 - Wiring diagram	EC-769 , EC-775 , EC-1564 , EC-1570		Suspension	MA-60
			Symbols and abbreviations	GI-11 , GI-23
			Symptom matrix chart	EC-82 , EC-499 , EC-871 , EC-1292
			SYSTEM	BRC-6
			System readiness test (SRT) code	EC-51 , EC-834

S

S/LOCK - Wiring diagram	BL-21 , BL-27 , BL-65 , BL-72
Seat belt inspection	SB-5 , MA-61
Seat belt pre-tensioner	SB-3 , SB-4
Seat belt pre-tensioner disposal	SRS-49
Seat belt, front	SB-3 , SB-4
Seat belt, rear	SB-4
Seat, front	SE-7
Seat, rear	SE-12
Self-diagnostic results	EC-893 , EC-1313
SEN/PW - Wiring diagram	EC-364 , EC-681 , EC-1151 , EC-1472 , EC-1830
Sheft warning system	BL-214
SHIFT - Wiring diagram	AT-339
Shift lock system	AT-338
Shift schedule	AT-67
Shock absorber (front)	FSU-8
Shock absorber (rear)	RSU-7
Side air bag	SRS-42 , SRS-44
Side air bag (satellite) sensor	SRS-46
Side curtain air bag	SRS-44
Side trim	EI-26
SMJ (super multiple junction)	PG-92
Spare tire size	GI-48
Spark plug	EM-133
Spark plug replacement(CR)	MA-36
Spark plug replacement(HR)	MA-47
Specification value	EC-117 , EC-532 , EC-907 , EC-1326
Spiral cable	SRS-38
Spot lamp	LT-171
SRS - See Supplemental Restraint System	SRS-5
SRS - Wiring diagram	SRS-11 , SRS-12
SRS Trouble diagnoses	SRS-8

ALPHABETICAL INDEX

EC-1397		WIPER - Wiring diagram	WW-13
TPS2 - Wiring diagram	EC-173 , EC-572 , EC-955 ,	Wiring Diagram (Cell code) list	PG-79
EC-1369		Wiring diagrams	GI-16
TPS3 - Wiring diagram	EC-404 , EC-720 , EC-1193 ,	Wrist pin - See Piston pin inspection	EM-206
EC-1513			
Tread-FR&RR (Dimensions)	GI-48		
Trouble diagnoses	GI-12		
Trouble diagnosis-Basic test procedure	EC-1660		
Trouble diagnosis-Symptom	EC-1634		
Turbocharger	EM-253		
Turbocharger precautions	GI-6		
TURN - Wiring diagram	LT-101		
Turn signal lamp	LT-98		
Two trip detection logic	EC-47 , EC-476 , EC-830 ,		
EC-1264			

V

Vacuum hose (brake system)	BR-19
Vacuum hose drawing (Engine control)	EC-92 ,
EC-509 , EC-880 , EC-1301 , EC-1611	
Vacuum pump	EM-261
Valve clearance	EM-166 , EM-292 , EM-324
Valve guide	EM-179 , EM-322
Valve lifter	EM-160
Valve seat	EM-181 , EM-322
Valve spring	EM-182 , EM-324
VDC -Wiring diagram	BRC-54
Vehicle identification number	GI-46
Vehicle recovery (freeing a stuck vehicle)	GI-42
Vehicle speed sensor (VSS)	EC-277 , EC-799 ,
EC-1070 , EC-1595 , EC-1810	
Ventilation air filter	ATC-129 , MTC-75
Viscosity number (SAE)	MA-25

W

WARN - Wiring diagram	DI-34 , DI-40
Warning chime	DI-53
Warning lamps	DI-33
Water pump	CO-17 , CO-36 , CO-54
Wheel alignment (front)	FSU-6
Wheel alignment (rear)	RSU-6
Wheel bearing (front)	FAX-6
Wheel bearing (rear)	RAX-5
Wheel hub (front)	FAX-6
Wheel hub (rear)	RAX-5
Wheel sensor (VDC)	BRC-86
Wheel sensors (ABS)	BRC-36
Wheel size	GI-48
Wheelbase (Dimensions)	GI-48
Width (Dimensions)	GI-48
WINDOW - Wiring diagram	GW-41 , GW-45
Window antenna	AV-11
Window, back	GW-10
Window, back door	GW-10
Window, door	GW-89 , GW-93
Windshield	GW-5
WIP/R - Wiring diagram	WW-51 , WW-54