## **QUICK REFERENCE INDEX**

Publication Number:	A GENERAL INFORMATION	GI	General Information
SM11E00-1F15E0E MODEL F15 SERIES	B ENGINE	EM	Engine Mechanical
	BENGINE		
		LU	Engine Lubrication System
		СО	Engine Cooling System
		EC	Engine Control System
		FL	Fuel System
		EX	Exhaust System
		STR	Starting System
		ACC	Accelerator Control System
	D TRANSMISSION	CL	Clutch
	& DRIVELINE	DLN	Driveline
		тм	Transaxle & Transmission
		FAX	Front Axle
		RAX	Rear Axle
		_	
	E SUSPENSION	FSU	Front Suspension
		RSU	Rear Suspension
		WT	Road Wheels & Tires
	F BRAKES	BR	Brake System
		PB	Parking Brake System
		BRC	Brake Control System
	G STEERING	ST	Steering System
		STC	Steering Control System
	H RESTRAINTS	SB	Seat Belt
		SR	SRS Airbag
		SRC	SRS Airbag Control System
	I VENTILATION, HEATER	VTL	Ventilation System
	& AIR CONDITIONER	HA	Heater & Air Conditioning System
		HAC	Heater & Air Conditioning Control System
	J BODY INTERIOR	INT	Interior
		IP	Instrument Panel
		SE	Seat
	K BODY EXTERIOR, DOOR,	DLK	Door & Lock
	<b>ROOF &amp; VEHICLE SECURITY</b>	SEC	Security Control System
		GW	Glass & Window System
		PWC	Power Window Control System
		BRM	Body Repair
		EXT	Exterior
	L DRIVER CONTROLS	MIR	Mirrors
		EXL	Exterior Lighting System
		INL	Interior Lighting System
		ww	Wiper & Washer
		DEF	Defogger
		HRN	Horn
	M ELECTRICAL &	PWO	Power Outlet
	POWER CONTROL	BCS	Body Control System
		LAN	LAN System
		PCS	
			Power Control System
		CHG	Charging System
		PG	Power Supply, Ground & Circuit Elements
	N DRIVER INFORMATION & MULTIMEDIA	MWI	Meter, Warning Lamp & Indicator
		WCS	Warning Chime System
		AV	Audio, Visual & Navigation System
	O CRUISE CONTROL	CCS	Cruise Control System
		DMS	Drive Mode System
	P MAINTENANCE	MA	Maintenance

© 2011 NISSAN INTERNATIONAL SA

All rights reserved. No part of this Electronic Service Manual may be reproduced or stored in a retrieval system, or transmitted in any form, or by any means, electronic, mechanical, photocopying, recording or otherwise, without the prior written permission of Nissan International SA, Switzerland.

## FOREWORD

This manual contains maintenance and repair procedures for the NISSAN JUKE, model F15 series.

In order to assure your safety and the efficient functioning of the vehicle, this manual should be read thoroughly. It is especially important that the PRECAUTIONS in the GI section be completely understood before starting any repair task.

All information in this manual is based on the latest product information at the time of publication. The right is reserved to make changes in specifications and methods at any time without notice.

## **IMPORTANT SAFETY NOTICE**

The proper performance of service is essential for both the safety of the technician and the efficient functioning of the vehicle.

The service methods in this Service Manual are described in such a manner that the service may be performed safely and accurately.

Service varies with the procedures used, the skills of the technician and the tools and parts available. Accordingly, anyone using service procedures, tools or parts which are not specifically recommended by NISSAN must first be completely satisfied that neither personal safety nor the vehicle's safety will be jeopardized by the service method selected.



## NISSAN INTERNATIONAL SA

Service Engineering Section Paris, France