

ALPHABETICAL INDEX

SECTION **IDX**

GI

MA

EM

LC

EC

FE

AT

PD

FA

RA

BR

ST

RS

BT

HA

EL

IDX

ALPHABETICAL INDEX

A

ABS (anti-lock brake system).....	BR-28
ABS actuator	BR-31
ABS circuit diagram.....	BR-44
ABS component parts and connector locations.....	BR-43
ABS control unit.....	BR-30
ABS hydraulic circuit.....	BR-29
ABS self-diagnosis.....	BR-42
ABS symptom chart	BR-38
ABS system components.....	BR-29
ABS trouble diagnoses	BR-32
ABS wheel sensors.....	BR-30
A/C air flow	HA-17
A/C circuit diagram.....	HA-57
A/C component layout	HA-16
A/C compressor clutch removal and installation.....	HA-114
A/C compressor description.....	HA-12
A/C compressor mounting.....	HA-113
A/C compressor precaution	HA-6
A/C compressor special service tool	HA-6
A/C control linkage adjustment.....	HA-87
A/C control operation	HA-19
A/C diagnostic work flow	HA-24
A/C harness layout	HA-55
A/C HFC134a (R134a) system identification	HA-3
A/C HFC134a (R134a) system introduction.....	HA-3
A/C HFC134a (R134a) system precaution.....	HA-4
A/C HFC134a (R134a) system service procedure.....	HA-106
A/C HFC134a (R134a) system service tools	HA-7
A/C HFC134a system service equipment precaution	HA-9
A/C lubricant (R134a).....	HA-108
A/C operational check	HA-25
A/C performance chart	HA-50
A/C performance test diagnoses	HA-48
A/C relay	HA-86
A/C self-diagnoses	HA-30
A/C service data specification.....	HA-118
A/C symptom chart	HA-28
A/C system description.....	HA-89
A/C trouble diagnoses	HA-22
A/C wiring diagram.....	HA-58
Accelerator control system.....	FE-2
Accelerator wire adjustment.....	FE-2
Air bag	RS-5
Air bag disposal	RS-12
Air bag module	RS-9
Air bag precautions	GI-2
Air bag removal and installation.....	RS-8

Air bleeding for brake system	BR-5
Air bleeding for TCS	BR-65
Air cleaner filter replacement	MA-13
Air conditioner cut control	EC-18
Air flow meter - See Mass air flow sensor.....	EC-102
Air mix door control linkage adjustment	HA-87
Air mix. door motor.....	HA-98
Air spoiler, rear - See Rear air spoiler	BT-35
Alternator	EL-28
Ambient sensor	HA-91
Angular tightening application	EM-2
Anti-freeze coolant	MA-8
Anti-freeze coolant mixture ratio	MA-9
ASCD (automatic speed control device)	EL-161
A/T communication DTC:P0600.....	EC-220
AT control unit	AT-102
AT fluid temperature sensor	AT-109
AT removal and installation	AT-134
AT self-diagnoses	AT-41
AT shift lock system	AT-118
AT trouble diagnoses	AT-13
Audio	EL-143
Audio and A/C control removal and installation - See Instrument panel	BT-11
Automatic amplifier	HA-94
Automatic drive positioner - LAN	EL-265
Automatic transmission fluid	MA-8
Automatic transmission fluid replacement	MA-17
Automatic transmission number	GI-37
Auxiliary air control (AAC).....	EC-215
Axle housing (rear).....	RA-7

B

Back-up lamp	EL-48
Ball joint front axle	FA-17
Battery	EL-17
Belt inspection (drive belt)	MA-10
Blower motor	HA-86
Blower relay	HA-86
Board-on lift	GI-38
Body alignment	BT-36
Brake booster	BR-14
Brake control valve (Proportioning valve)	BR-8
Brake fluid change	BR-5
Brake fluid level	MA-18
Brake fluid level and line check	BR-5
Brake hydraulic line	BR-7
Brake inspection	MA-18
Brake lines and cables inspection	MA-18
Brake master cylinder	BR-11

ALPHABETICAL INDEX

Brake pedal	BR-9
Bumper, front - See Front bumper.....	BT-5
Bumper, rear - See Rear bumper	BT-7
 C 	
Camshaft inspection	EM-26
Camshaft position sensor (CMPS).....	EC-193
Camshaft position sensor inspection	EC-196
Center bearing assembly (propeller shaft)	PD-8
Center bearing disassembly (propel- ler shaft).....	PD-7
Charging system.....	EL-25
Chassis and body maintenance.....	MA-16
Cigarette lighter	EL-128
Circuit breaker	EL-16
Clearance lamp.....	EL-43
Closed loop control	EC-131
Coil spring (front)	FA-14
Coil spring (rear)	RA-16
Combination lamp, front, removal and installation	BT-5
Combination lamp, rear, removal and installation.....	BT-24
Combination meter	EL-77
Combination meter removal and installation - See Instrument panel.....	BT-11
Combination switch	EL-29
Compression pressure	EM-7
Compressor clutch removal and installation.....	HA-114
Compressor description	HA-12
Compressor mounting	HA-113
Compressor precaution	HA-6
Compressor special service tool	HA-6
Connecting rod	EM-35
Connecting rod bearing clearance	EM-39
Connecting rod bushing clearance.....	EM-39
Console box - See Instrument panel.....	BT-11
CONSULT for ECCS.....	EC-48
CONSULT for TCS	BR-88
CONSULT general information	GI-34
Control valve (AT)	AT-157
Converter housing installation.....	AT-136
Coolant replacement	MA-11
Cooling circuit (engine).....	LC-7
Cooling fan control	EC-263
Cooling fan motor inspection.....	EC-278
Crankshaft assembly	EM-41
Crankshaft bearing clearance.....	EM-37
Crankshaft inspection	EM-37
Crankshaft position sensor (OBD) chipping	EC-250
Crankshaft position sensor (OBD) DTC0802, P0335.....	EC-189

Crankshaft position sensor (OBD)	GI
DTC0802, P0335 inspection.....	EC-192, 253
Cylinder block	EM-33
Cylinder head.....	EM-25
Cylinder head bolt tightening.....	EM-19

D

Daytime light system	EL-35
Daytime running light - See Daytime light system	EL-35
Detonation sensor - See Knock sensor.....	EC-186
Diagnostic information display.....	EL-101
Diagnostic trouble code (DTC) chart.....	EC-68
Diagnostic trouble code (DTC) for ECCS OBD system.....	EC-36
Differential carrier assembly (except FF)	PD-25
Differential carrier disassembly (except FF)	PD-13
Differential gear oil	MA-8
Differential gear oil replacement.....	MA-17
Dimensions	GI-37
Direct ignition system	EC-27
Door glass	BT-9
Door lock.....	BT-9
Door mirror - LAN	EL-317
Door mirror	BT-34
Door trim.....	BT-17
Door, front - See Front door	BT-9
Door, rear - See Rear door	BT-10
Drive pinion diff. inspection (except FF)	PD-16
Drive plate runout.....	EM-40
Drive shaft (rear).....	RA-10
Dropping resistor (AT).....	AT-110

E

ECCS basic inspection	EC-66
ECCS circuit diagram.....	EC-7
ECCS component parts location	EC-9
ECCS on board diagnostic system	EC-36
ECCS system diagram and chart	EC-8
ECCS trouble diagnoses	EC-62
ECM input/output signal inspection	EC-91
EGR control (EGRC) - BPT valve.....	EC-206
EGR control (EGRC) - solenoid valve	EC-254
EGR temperature sensor	EC-258
EGR temperature sensor inspection	EC-262
EGR valve & EVAP canister purge control solenoid valve inspection	EC-257
EGR valve inspection	EC-205
EGRC - BPT valve inspection	EC-207
Electric sun roof.....	EL-126

ALPHABETICAL INDEX

Electrical units location.....	EL-374
Electronic ignition system.....	EC-17
Engine compartment.....	BT-36
Engine control module (ECM).....	EC-223
Engine coolant temperature sensor (ECTS)	EC-112
Engine coolant temperature sensor (ECTS) P0115, DTC0103.....	EC-112
Engine coolant temperature sensor (ECTS) P0115, DTC0103 inspection.....	EC-115
Engine coolant temperature sensor (ECTS) P0125, DTC0908.....	EC-121
Engine coolant temperature sensor (ECTS) P0125, DTC0908 inspection.....	EC-125
Engine oil.....	MA-8
Engine oil filter replacement	MA-14
Engine oil precautions.....	GI-5
Engine oil replacement.....	MA-13
Engine outer component parts	EM-6
Engine removal.....	EM-31
Engine room - See Engine compartment	BT-36
Engine serial number	GI-37
EVAP canister inspection.....	EC-20
EVAP vapor lines inspection	MA-15
Evaporative emission (EVAP) system.....	EC-20
Exhaust gas recirculation (EGR) system	EC-197
Exhaust system.....	FE-4
Exhaust system inspection	MA-16
Exterior.....	BT-19
Exterior lamp	EL-43

F

Fan control amp.	HA-104
Fast idle cam (FIC) inspection and adjustment.....	EC-25
Final drive disassembly (except FF)	PD-12
Final drive pre-inspection (except FF)	PD-13
Final drive removal and installation (except FF)	PD-11
Finisher, interior - See Trim	BT-13
Finisher, rear panel - See Rear panel finisher	BT-18
Finisher, trunk lid - See Trunk lid finisher	BT-18
First (1st) position switch	AT-108
Fluid temperature sensor (AT)	AT-109
Fog lamp, front, removal and installation.....	BT-5
Foot lamp	EL-70, 74
Forward clutch	AT-176
Freeze frame data.....	EC-38
Front axle.....	FA-9
Front bumper.....	BT-5

Front combination lamp removal and installation.....	BT-5
Front disc brake	BR-17
Front door	BT-9
Front fog lamp.....	EL-50
Front fog lamp removal and installation.....	BT-5
Front heated oxygen sensor (HO2S) (Left bank)	EC-126
Front heated oxygen sensor (HO2S) (Right bank).....	EC-145
Front heated oxygen sensor (HO2S)	EC-126
Front heated oxygen sensor (HO2S) monitor	EC-39
Front heated oxygen sensor heater (Left bank)	EC-133
Front heated oxygen sensor heater (Right bank).....	EC-150
Front passenger air bag	RS-10
Front seat.....	BT-25
Front seat belt	RS-3
Front suspension	FA-13
Front washer	EL-117
Front wiper	EL-117
Fuel check valve inspection	EC-21
Fuel cut control (at no load & high engine speed)	EC-19
Fuel filler lid	BT-7
Fuel filter replacement	MA-12
Fuel gauge	EL-78
Fuel injection system (Left bank)....	EC-162, 167
Fuel injection system (Right bank) ...	EC-172, 177
Fuel lid opener, electric	EL-127
Fuel line inspection	MA-12
Fuel precautions.....	GI-6
Fuel pressure check.....	EC-24
Fuel pressure release.....	EC-24
Fuel pump control	EC-286
Fuel pump control module	EC-238
Fuel pump inspection	EC-290
Fuel pump relay inspection	EC-290
Fuel system.....	FE-3
Fuel tank vacuum relief valve inspection.....	EC-21
Fuse	EL-16

G

Garage jack and safety stand.....	GI-39
Gauges	EL-76
Generic scan tool (GST)	EC-60
Glass	BT-9
Grille - See Exterior	BT-24
Ground distribution.....	EL-406

ALPHABETICAL INDEX

H	
Harness connector	EL-5
Harness layout.....	EL-379
Headlamp	EL-31
Headlamp removal and installation	BT-5
Headlining - See Roof trim	BT-15
Heated oxygen sensor (HO2S) (Front) (Left bank)	EC-126
Heated oxygen sensor (HO2S) (Front) (Right bank).....	EC-145
Heated oxygen sensor (HO2S) (front)	EC-126
Heated oxygen sensor (HO2S) heater (rear).....	EC-140, 157
Heated oxygen sensor (rear).....	EC-136, 153
Heated oxygen sensor heater (Front)(Left bank)	EC-133
Heated oxygen sensor heater (Front)(Right bank).....	EC-150
Heated seat	BT-28, EL-156
Heated seat.....	EL-156
Height (Dimensions).....	GI-37
HFC134a (R134a) system identification.....	HA-3
HFC134a (R134a) system introduction	HA-3
HFC134a (R134a) system precaution	HA-4
HFC134a (R134a) system service procedure.....	HA-106
HFC134a (R134a) system service tools	HA-7
HFC134a system service equipment precaution.....	HA-9
High clutch	AT-174
Hood.....	BT-5
Horn.....	EL-128
How to erase DTC for ECCS OBD system	EC-36
How to follow flow chart in trouble diagnoses.....	GI-31
How to perform efficient diagnosis for an electrical incident	GI-20
How to read wiring diagrams.....	GI-9
How to use this manual	GI-7
Hydraulic lash adjuster inspection	EM-30
I	
IACV-AAC valve inspection.....	EC-218
Identification plate	GI-37
Idle air control valve (IACV)	EC-215
Idle mixture ratio inspection.....	EC-29
Idle speed inspection.....	EC-29
Ignition coil inspection	EC-249
Ignition timing inspection.....	EC-29
Illumination - LAN	EL-371
Illumination	EL-61
In vehicle sensor	HA-90
J	
Inhibitor switch	AT-107
Injector inspection	EC-283
Injector removal and installation.....	EC-25
Instrument panel.....	BT-11
Intake air temperature sensor	EC-107
Intake air temperature sensor Inspection	EC-111
Intake door control linkage adjustment	HA-88
Intake door motor.....	HA-96
Intake sensor	HA-92
Interior.....	BT-13
Interior lamp	EL-60
K	
Keyless entry system - See Multi- remote control system	EL-304
Kickdown switch	AT-110
Knock sensor (KS).....	EC-186
Knock sensor (KS) inspection	EC-188
L	
LAN system description.....	EL-185
LAN trouble diagnoses	EL-200
Length (Dimensions)	GI-37
License lamp.....	EL-43
Line pressure solenoid valve	AT-109
Line pressure test (AT)	AT-113
Liquid gasket application	EM-2
Lock, door - See Door lock.....	BT-9
Low and reverse brake	AT-180
Lower ball joint (rear susp.)	RA-17
Lubricant (R134a) A/C.....	HA-108
Lubrication circuit (engine).....	LC-3
Lubrication-locks, hinges and hood latches	MA-20
M	
Magnet clutch	HA-114
Maintenance (engine).....	MA-10
Maintenance	MA-1
Maintenance general	MA-3
Maintenance periodic.....	MA-5
Maintenance schedule (1).....	MA-6
Maintenance schedule (2).....	MA-7
Malfunction indicator lamp (MIL)	EC-38
Mass air flow sensor (MAFS)	EC-102
Mass air flow sensor inspection	EC-106
Master cylinder (brake)	BR-11
Meter and gauges.....	EL-76
Middle throttle drum adjustment	FE-2
HA	
Magnet clutch	HA-114
Maintenance (engine).....	MA-10
Maintenance	MA-1
Maintenance general	MA-3
Maintenance periodic.....	MA-5
Maintenance schedule (1).....	MA-6
Maintenance schedule (2).....	MA-7
Malfunction indicator lamp (MIL)	EC-38
Mass air flow sensor (MAFS)	EC-102
Mass air flow sensor inspection	EC-106
Master cylinder (brake)	BR-11
Meter and gauges.....	EL-76
Middle throttle drum adjustment	FE-2
IDX	

ALPHABETICAL INDEX

MIL & Data link connectors circuit	EC-295
Mirror, door - See Door mirror.....	BT-34
Mirror, out side - See Out side mirror	BT-34
Misfire	EC-182
Mode door control linkage adjustment	HA-87
Mode door motor.....	HA-100
Model variation	GI-35
Molding - See Exterior	BT-19
Multi link/lower ball joint (rear)	RA-17
Multi purpose grease.....	MA-8
Multi remote control system - LAN.....	EL-304
Multiport fuel injection (MFI) system	EC-14
Multiport fuel injection precautions	GI-4

O

Oil pan (engine).....	EM-8
Oil pressure (engine)	LC-4
Oil pump (AT)	AT-153
Oil pump (engine).....	LC-5
Oil pump regulator valve (engine)	LC-6
Oil seal replacement (engine)	EM-23
Oil seal replacement (front of final drive)	PD-9
Oil seal replacement (side of final drive)	PD-9
Opera window.....	BT-33
Out side mirror.....	BT-34
Overrun clutch	AT-176
Overrun clutch solenoid valve	AT-109
Oversize piston.....	EM-36

P

Park/Neutral position switch.....	EC-225
Parking brake control	BR-26
Parking drum brake	BR-23
PCV (positive crankcase ventilation) inspection	EC-22
Pinion bearing preload diff. (except FF)	PD-18
Pinion gear height diff. (except FF).....	PD-18
Piston assembly.....	EM-40
Piston pin inspection	EM-34
Piston ring inspection.....	EM-35
Piston to bore clearance	EM-36
Power antenna	EL-143
Power door lock - LAN	EL-251
Power seat	EL-298
Power steering (twin orifice) trouble diagnoses	ST-33
Power steering fluid.....	MA-8
Power steering fluid level	MA-19, ST-6
Power steering gear	ST-14

Power steering hydraulic pressure	ST-9
Power steering oil pressure switch.....	EC-292
Power steering oil pressure switch inspection	EC-294
Power steering oil pump	ST-25
Power steering system (twin orifice).....	ST-29
Power steering system bleeding	ST-7
Power supply routing	EL-8
Power transistor & ignition coil	EC-244
Power transistor inspection	EC-249
Power window - LAN	EL-236
Precautions (General).....	GI-2
Pressure test (AT)	AT-113
Propeller shaft.....	PD-5
Propeller shaft on vehicle service	PD-5
Propeller shaft vibration	PD-5

R

Rack retainer adjustment.....	ST-6
Radiator.....	LC-12
Rear air spoiler	BT-35
Rear axle	RA-7
Rear bumper.....	BT-7
Rear combination lamp removal and installation	BT-24
Rear disc brake.....	BR-20
Rear door	BT-10
Rear heated oxygen sensor (HO2S)	EC-136, 153
Rear heated oxygen sensor (HO2S) heater	EC-140, 157

Rear panel finisher	BT-18
Rear seat	BT-29
Rear seat belt	RS-4
Rear suspension	RA-15
Rear window	BT-32
Rear window defogger	EL-131
Refrigerant connection precaution.....	HA-5
Refrigerant general precaution.....	HA-4
Refrigerant lines.....	HA-110
Refrigeration cycle	HA-11
Reverse clutch	AT-170
Revolution sensor (AT)	AT-108
Ring gear diff. Inspection (except FF).....	PD-16
Road wheel size	GI-37
Roof trim	BT-15

S

SAE J1930 terminology list	GI-43
Seal - See Exterior	BT-19
Seat belt inspection	MA-20
Seat belt pre-tensioner	RS-5
Seat belt pre-tensioner disposal	RS-12

ALPHABETICAL INDEX

Seat belt pretensioner removal and installation	RS-8	
Seat belt, front - See Front seat belt	RS-3	
Seat belt, rear - See Rear seat belt.....	RS-4	
Seat, front - See Front seat	BT-25	
Seat, rear - See Rear seat.....	BT-29	
Secondary throttle position sensor (TPS) for TCS	EC-229	
Secondary throttle position sensor	BR-62	
Secondary throttle position sensor adjustment	BR-68	
Self-diagnostic results	EC-39	
Shift lock system.....	AT-118	
Shift schedule	AT-33	
Shift solenoid valve (AT).....	AT-109	
Shock absorber (front)	FA-14	
Shock absorber (rear).....	RA-16	
Side bearing preload diff. (except FF)	PD-17	
Side window - See Rear side window	BT-33	
Spark plug replacement.....	MA-14	
Speedometer.....	EL-78	
Spiral cable	RS-9	
Splice location.....	EL-396	
Spot lamp	EL-70, 74	
Spring (Wheelarch) height.....	FA-5	
SRS - See Supplemental Restraint System	RS-5	
SRS Trouble diagnoses	RS-17	
SRS Wiring diagram.....	RS-21	
Stabilizer bar (front)	FA-17	
Stabilizer bar (rear)	RA-18	
Stall test (AT)	AT-111	
Standardized relay	EL-6	
Starter.....	EL-24	
Starting system	EL-20	
Steering gear and linkage inspection	MA-19	
Steering knuckle.....	FA-9	
Steering linkage.....	ST-14	
Steering switch	EL-30	
Steering wheel and column	ST-10	
Steering wheel play	ST-5	
Steering wheel turning force	ST-8	
Step lamps - LAN.....	EL-363	
Sun roof	BT-30	
Sunload sensor	HA-92	
Supplemental Restraint System	RS-5	
Symbols and abbreviations	GI-8	
T		
Tachometer	EL-78	
Tail lamp	EL-43	
Tandem throttle position sensor.....	EC-234	
TCM (throttle control module)	BR-62	
TCM removal and installation	BR-66	
TCS (traction control system).....	BR-55	
TCS actuator.....	BR-58	
TCS actuator removal and installation	BR-64	
TCS air bleeding	BR-65	
TCS circuit diagram	BR-97	
TCS component parts and connector location	BR-86	GI
TCS control unit	BR-57	
TCS front wheel sensor removal and installation	BR-67	MA
TCS hydraulic circuit.....	BR-60	
TCS pump	BR-58	EM
TCS pump removal and installation.....	BR-65	
TCS rear wheel sensor removal and installation	BR-66	LC
TCS self-diagnosis	BR-89	
TCS symptom chart.....	BR-82	EC
TCS system components	BR-56	
TCS throttle valve control system	BR-61	
TCS trouble diagnoses	BR-69	FE
TCS wheel sensors	BR-59, 66, 67	
TCS wiring diagram (foldout page).....	BR-69	AT
Telephone.....	EL-139	
Tension rod (front).....	FA-17	
Theft warning system - LAN.....	EL-336	PD
Thermostat.....	LC-10	
Third link (front susp.)	FA-15	
Three way catalyst	EC-208	FA
Three way catalyst function (Left bank) ...	EC-208	
Three way catalyst function (Right bank).....	EC-208	RA
Three way catalyst precautions	GI-5	
Throttle control module - See TCM.....	BR-66	
Throttle drum adjustment.....	FE-2	BR
Throttle Motor.....	BR-62	
Throttle motor removal and installation	BR-67	ST
Throttle position sensor (TPS)	EC-116	
Throttle position sensor adjustment.....	EC-66	RS
Throttle position sensor inspection.....	EC-120	
Throttle position switch	AT-110	
Throttle valve control system for TCS	BR-61	
Thrust washer selection diff. (except FF)	PD-24	
Tie-rod ball joints	ST-18	HA
Tightening torque of standard bolts	GI-42	
Timing chain	EM-10	
Tire rotation	MA-18	
Tire size	GI-37	
Tooth contact diff. (except FF)	PD-23	
Torque converter clutch solenoid valve	AT-109	
Torque converter installation.....	AT-136	
Tow truck towing	GI-40	
Towing point	GI-41	
Traction control system - See TCS	BR-55	
Traction control system circuit (engine)	EC-235	
Traction control system fluid	MA-8	IDX

ALPHABETICAL INDEX

Transmission serial number.....	GI-37
Transverse link (front).....	FA-17
Tread-FR&RR (Dimensions).....	GI-37
Trim.....	BT-13
Triple pressure switch.....	HA-86
Trunk lid.....	BT-7
Trunk lid finisher	BT-18
Trunk lid opener - See Trunk lid.....	BT-7
Trunk lid opener, electric	EL-127
Trunk lid trim	BT-18
Trunk room lamp	EL-70, 74
Trunk room trim.....	BT-18
Turbine revolution sensor.....	AT-108
Turn signal lamp.....	EL-54
Two trip detection logic	EC-36
Two-pole lift.....	GI-39

U

Under body	BT-38
Upper link (front susp.)	FA-15

V

Vacuum hose (brake system).....	BR-16
Vacuum hose drawing (ECCS)	EC-12
Valve guide inspection	EM-27
Valve seat inspection	EM-29
Valve spring inspection.....	EM-30
Vehicle identification number	GI-36
Vehicle speed sensor (VSS)	EC-211
Viscosity number (SAE)	MA-8

W

Warning chime	EL-84
Warning lamps	EL-84
Water pump	LC-8
Water temperature gauge	EL-78
Weatherstrip - See Exterior	BT-19
Wheel alignment (front)	FA-7
Wheel alignment (rear).....	RA-5
Wheel balance	MA-17
Wheel bearing (front axle)	FA-7
Wheel bearing (rear)	RA-5
Wheel hub (front).....	FA-9
Wheel hub (rear).....	RA-7
Wheel hub and steering knuckle	FA-9
Wheel sensors (ABS).....	BR-30
Wheel sensors (TCS)	BR-59
Wheel size	GI-37
Wheelarch height	FA-5
Wheelbase (Dimensions)	GI-37
Wide open & closed throttle position (CTP) switch	EC-116
Width (Dimensions)	GI-37
Window, back - See Back window.....	BT-32
Window, door	BT-9
Window, opera - See Opera window.....	BT-33
Window, rear - See Rear window.....	BT-32
Window, side - See Rear side window	BT-33
Windshield	BT-32
Wiper and washer.....	EL-115