

# ALPHABETICAL INDEX

SECTION **IDX**

GI

MA

EM

LC

EC

FE

AT

PD

FA

RA

BR

ST

RS

BT

HA

EL

IDX

# ALPHABETICAL INDEX

## A

AAC/V - Wiring diagram.....	EC-316
ABS (anti-lock brake system) .....	BR-31
ABS - Wiring diagram .....	BR-49
ABS input/output signal inspection .....	BR-123
ABS sensor rotor .....	FA-14
ABS/TCS C/U signal .....	EC-465
Absolute pressure sensor .....	EC-121
A/C - Wiring diagram .....	HA-50
A/C air flow.....	HA-19
A/C component layout.....	HA-15
A/C compressor clutch removal and installation .....	HA-113
A/C compressor description .....	HA-12
A/C compressor mounting .....	HA-111
A/C compressor precaution .....	HA-6
A/C compressor special service tool .....	HA-6
A/C control linkage adjustment .....	HA-102
A/C control operation .....	HA-17
A/C diagnostic work flow.....	HA-21
A/C harness layout.....	HA-47
A/C HFC134a (R134a) system precaution .....	HA-2
A/C HFC134a (R134a) system service procedure.....	HA-104
A/C HFC134a (R134a) system service tools .....	HA-7
A/C HFC134a system service equip- ment precaution.....	HA-9
A/C lubricant (R134a) .....	HA-106
A/C operational check.....	HA-22
A/C performance test diagnoses .....	HA-41
A/C relay .....	HA-98
A/C self-diagnoses .....	HA-26
A/C service data specification.....	HA-117
A/C symptom chart .....	HA-25
A/C system description .....	HA-16
A/C trouble diagnoses.....	HA-21
Accelerator control system .....	FE-2
Accelerator wire adjustment .....	FE-3
Air bag.....	RS-9
Air bag disposal .....	RS-20
Air bag precautions .....	GI-2
Air bleeding for brake system .....	BR-6
Air cleaner filter replacement.....	MA-13
Air conditioner - Wiring diagram .....	HA-50
Air conditioner cut control .....	EC-23
Air flow meter - See Mass air flow sensor .....	EC-113
Air mix door control linkage adjustment.....	HA-102
Air mix. door motor .....	HA-90
Air spoiler, rear .....	BT-24
Alternator .....	EL-30
Ambient sensor .....	HA-67
Angular tightening application .....	EM-2
Antenna - See Power antenna .....	EL-159
Anti-lock brake system - See ABS.....	BR-31

Anti-lock brake system - Wiring diagram.....	BR-49
AP/SEN - Wiring diagram .....	EC-121
ASCD (automatic speed control device) .....	EL-178
ASCD - Wiring diagram .....	EL-182
A/T - Wiring diagram .....	AT-11
A/T fluid temperature sensor .....	AT-86, 150
A/T IND - Wiring diagram .....	EL-107
AT indicator lamp .....	EL-106
A/T self-diagnoses.....	AT-41
A/T shift lock system .....	AT-181
A/T shift lock system - Wiring diagram .....	AT-182
AT/C - Wiring diagram .....	EC-327, 466
Audio.....	EL-148
AUDIO - Wiring diagram.....	EL-150
Audio and A/C control removal and installation - See Instrument panel .....	BT-13
AUT/DP - Wiring diagram .....	EL-361
Auto air conditioner - Wiring diagram .....	HA-50
Auto anti-dazzling inside mirror .....	EL-170
Autolamp.....	EL-34
Automatic drive positioner .....	EL-355
Automatic speed control system - See ASCD .....	EL-178
Automatic transmission fluid replacement.....	MA-18
Automatic transmission number .....	GI-39

## B

Back-up lamp.....	EL-67
BACK/L - Wiring diagram .....	EL-67
Ball joint front axle .....	FA-22
Battery .....	EL-20
Bi-level door control linkage adjustment.....	HA-103
Blower motor .....	HA-95
Board-on lift .....	GI-40
Body alignment .....	BT-47
BPT valve .....	EC-281
Brake booster .....	BR-14
Brake control valve (Proportioning valve) .....	BR-8
Brake fluid change .....	BR-5
Brake fluid level .....	MA-19
Brake fluid level and line check .....	BR-5
Brake hydraulic line .....	BR-7
Brake inspection .....	MA-20
Brake lines and cables inspection .....	MA-19
Brake master cylinder.....	BR-11
Brake pedal .....	BR-9
Bulb specifications .....	EL-457
Bumper, front .....	BT-5
Bumper, rear .....	BT-8
BYPS/V - Wiring diagram .....	EC-437, 442

## C

Camshaft inspection .....	EM-36
---------------------------	-------

# ALPHABETICAL INDEX

Camshaft position sensor (CMPS) .....	EC-261
CANI/V - Wiring diagram .....	EC-448, 453
Center bearing assembly (propeller shaft).....	PD-9
Center bearing disassembly (propeller shaft).....	PD-8
CHARGE - Wiring diagram.....	EL-28
Charging system.....	EL-27
Chassis and body maintenance .....	MA-17
CHIME - Wiring diagram.....	EL-112
CIGAR - Wiring diagram.....	EL-137
Cigarette lighter .....	EL-137
Circuit breaker.....	EL-11
CKPS - Wiring diagram.....	EC-376
Clock.....	EL-138
CLOCK - Wiring diagram.....	EL-138
Closed loop control .....	EC-357
CMPS - Wiring diagram .....	EC-261
Coil spring (front) .....	FA-16
Coil spring (rear) .....	RA-21
Collision diagnosis .....	RS-55
Combination lamp, front, removal and installation .....	BT-5
Combination lamp, rear, removal and installation .....	BT-24
Combination meter .....	EL-88
Combination meter removal and instal- lation - See Instrument panel.....	BT-13
Combination switch.....	EL-31
COMM - Wiring diagram.....	EL-218
Compression pressure .....	EM-11
Compressor clutch removal and installation .....	HA-113
Compressor descriptioin .....	HA-12
Compressor mounting .....	HA-111
Compressor precaution .....	HA-6
Compressor special service tool .....	HA-6
Connecting rod .....	EM-48
Connecting rod bearing clearance .....	EM-52
Connecting rod bushing clearance .....	EM-53
Connector inspection.....	GI-19
Console box - See Instrument panel.....	BT-13
CONSULT for ECCS .....	EC-66
CONSULT for TCS .....	BR-62
CONSULT general information.....	GI-35
Control valve (A/T) .....	AT-221
Converter housing installation.....	AT-199
COOL/F - Wiring diagram .....	EC-469
Coolant mixture ratio .....	MA-9
Coolant replacement .....	MA-11
Cooling circuit (engine).....	LC-8
Cooling fan .....	LC-17
Cooling fan control .....	EC-469
Cooling fan motor .....	EC-481
Crankshaft.....	EM-50
Crankshaft position sensor (OBD) cog chipping .....	EC-376
Cruise control - See ASCD.....	EL-178
Cylinder block .....	EM-46
Cylinder head.....	EM-30

D

Daytime light system .....	EL-48
Daytime running light - See Daytime light system .....	EL-48
DEF - Wiring diagram .....	EL-140
Detonation sensor - See Knock sensor.....	EC-253
Diagnosis sensor unit.....	RS-13
Diagnostic trouble code (DTC) inspec- tion priority chart.....	EC-87
Differential carrier assembly.....	PD-26
Differential carrier disassembly .....	PD-13
Differential gear oil replacement .....	MA-18
Dimensions.....	GI-39
Direct ignition system.....	EC-34
D/LOCK - Wiring diagram.....	EL-250
Door glass .....	BT-11
Door lock .....	BT-11
Door mirror.....	BT-46
Door trim .....	BT-19
Door, front .....	BT-11
Door, rear .....	BT-12
Drive belt inspection .....	MA-10
Drive pinion height .....	PD-20
Drive plate runout .....	EM-53
Drive shaft (rear) .....	RA-15
Dropping resistor (A/T).....	AT-128
DTRL - Wiring diagram.....	EL-51

E

ECCS basic inspection .....	EC-85
ECCS circuit diagram.....	EC-12
ECCS component parts location.....	EC-16
ECCS on board diagnostic system.....	EC-43
ECCS system diagram and chart .....	EC-14
ECM input/output signal.....	EC-97
ECM-ABS/TCS COMM NG .....	EC-466
ECTS - Wiring diagram.....	EC-136, 151
EGR control (EGRC) - BPT valve.....	EC-277
EGR control (EGRC) - solenoid valve .....	EC-381
EGR control valve .....	EC-275, 399
EGR temperature sensor .....	EC-386
EGR valve & EVAP canister purge con- trol solenoid valve.....	EC-385
EGR/TS - Wiring diagram .....	EC-386
EGRC1 - Wjring diagram .....	EC-267, 392
Electric sun roof.....	EL-167
Electrical diagnoses .....	GI-22
Electrical ignition system.....	EC-22
Electrical unit .....	Foldout
Electrical units location .....	EL-421
Electronic controlled power steering system - Wiring diagram .....	ST-31
Engine compartment.....	BT-47
Engine control module (ECM) .....	EC-330
Engine coolant temperature sensor (ECTS).....	EC-136

# ALPHABETICAL INDEX

---

Engine oil filter replacement .....	MA-14
Engine oil precautions .....	GI-5
Engine oil replacement .....	MA-14
Engine outer component parts .....	EM-8
Engine removal .....	EM-44
Engine room - See Engine compartment .....	BT-47
Engine serial number .....	GI-39
EPS - Wiring diagram .....	ST-31
EVAP canister purge control solenoid valve .....	EC-448, 453
EVAP canister purge control valve .....	EC-448, 453
EVAP canister purge volume control valve .....	EC-295, 412
EVAP canister vent control valve .....	EC-301, 419, 431
EVAP control system (small leak) diagnosis .....	EC-285, 401
EVAP control system pressure sensor .....	EC-306
EVAP control system purge flow monitoring diagnosis .....	EC-424
EVAP vapor lines inspection .....	MA-16
Evaporative emission (EVAP) system .....	EC-25
Exhaust system .....	FE-5
Exhaust system inspection .....	MA-17
Exterior .....	BT-24

## F

Fan control amp .....	HA-93
Fast idle cam (FIC) inspection and adjustment .....	EC-34
F/FOG - Wiring diagram .....	EL-69
Final drive disassembly .....	PD-13
Final drive pre-inspection .....	PD-13
Final drive removal and installation .....	PD-11
Finisher, interior - See Trim .....	BT-17
Floor trim .....	BT-17
Flow charts .....	GI-32
Fluid temperature sensor (A/T) .....	AT-86, 150
Fluids .....	MA-8
FO2H-L - Wiring diagram .....	EC-156, 163, 169, 175, 184
Fog lamp, front .....	EL-68
Fog lamp, front, removal and installation .....	BT-5
Foot lamp .....	EL-291
Forward clutch .....	AT-240
FPCM - Wiring diagram .....	EC-362
F/PUMP - Wiring diagram .....	EC-490
Freeze frame data .....	EC-45
FRO2LH - Wiring diagram .....	EC-190
Front axle .....	FA-11
Front bumper .....	BT-5
Front combination lamp removal and installation .....	BT-5
Front disc brake .....	BR-17
Front door .....	BT-11
Front fog lamp .....	EL-68
Front fog lamp removal and installation .....	BT-5

Front heated oxygen sensor (HO2S) .....	EC-156, 163, 169, 175, 184
Front heated oxygen sensor (HO2S) (Left bank) .....	EC-156, 163, 169, 175, 184
Front heated oxygen sensor (HO2S) (Right bank) .....	EC-156, 163, 169, 175, 184
Front heated oxygen sensor (HO2S) monitor .....	EC-57
Front heated oxygen sensor heater (Left bank) .....	EC-190
Front heated oxygen sensor heater (Right bank) .....	EC-190
Front passenger air bag .....	RS-9
Front seat .....	BT-32
Front seat belt .....	RS-4
Front suspension .....	FA-15
Front tower bar .....	BT-24
Front washer .....	EL-120
Front wiper .....	EL-120
Fuel check valve .....	EC-26
Fuel cut control (at no load & high engine speed) .....	EC-24
Fuel filter replacement .....	MA-13
Fuel injection system (Left bank) .....	EC-230, 237
Fuel injection system (Right bank) .....	EC-230, 237
Fuel lid opener, electric .....	EL-165
Fuel line inspection .....	MA-12
Fuel precautions .....	GI-6
Fuel pressure check .....	EC-32
Fuel pressure release .....	EC-32
Fuel pump control module .....	EC-362
Fuel system .....	FE-4
Fuel tank vacuum relief valve .....	EC-27
FUELLH - Wiring diagram .....	EC-230, 237
Fuse .....	EL-11
Fuse block .....	Foldout
Fusible link .....	EL-11

## G

Garage jack and safety stand .....	GI-41
Gauges .....	EL-87
Generic scan tool (GST) .....	EC-79
Glass .....	BT-11
Grease .....	MA-8
Grille - See Exterior .....	BT-24
Ground distribution .....	EL-12

## H

Harness connector inspection .....	GI-19
Harness layout .....	EL-426
Hazard warning lamp .....	EL-71
Headlamp .....	EL-34
Headlining - See Roof trim .....	BT-21
Heated oxygen sensor (HO2S) (front) .....	EC-156, 163, 169, 175, 184

# ALPHABETICAL INDEX

Heated oxygen sensor (HO2S) (Front)  
     (Left bank)..... EC-156, 163, 169, 175, 184  
 Heated oxygen sensor (HO2S) (Front)  
     (Right bank) ..... EC-156, 163, 169, 175, 184  
 Heated oxygen sensor (HO2S) heater  
     (front) ..... EC-190  
 Heated oxygen sensor  
     (rear)..... EC-195, 203, 211, 218  
 Heated oxygen sensor heater  
     (Front)(Left bank)..... EC-190  
 Heated seat..... BT-34, EL-176  
 Height (Dimensions) ..... GI-39  
 HFC134a (R134a) system precaution ..... HA-2  
 HFC134a (R134a) system service  
     procedure..... HA-104  
 HFC134a (R134a) system service tools..... HA-7  
 HFC134a system service equipment  
     precaution ..... HA-9  
 High clutch..... AT-238  
 H/LAMP - Wiring diagram..... EL-37  
 Hood ..... BT-5  
 Horn ..... EL-136  
 HORN - Wiring diagram ..... EL-136  
 HSEAT - Wiring diagram ..... EL-176  
 Hydraulic lash adjuster inspection..... EM-40

## I

IATS - Wiring diagram..... EC-130  
 Identification plate ..... GI-39  
 Idle mixture ratio ..... EC-36  
 Idle speed ..... EC-36  
 IGN/SG - Wiring diagram ..... EC-368  
 Ignition coil ..... EC-375  
 Ignition timing ..... EC-36  
 ILL - Wiring diagram ..... EL-80  
 Illumination..... EL-78, 324  
 I/MIRR - Wiring diagram..... EL-170  
 In vehicle sensor ..... HA-70  
 Inhibitor switch..... AT-82  
 INJECT - Wiring diagram ..... EC-482  
 Injector ..... EC-487  
 Injector removal and installation ..... EC-33  
 Instrument panel ..... BT-13  
 INT/L - Wiring diagram ..... EL-86  
 Intake air temparature sensor ..... EC-130  
 Intake door motor ..... HA-87  
 Intake sensor ..... HA-72, 103  
 Intake valve timing control ..... EC-338  
 Intake valve timing control (right bank)  
     - Wiring diagram ..... EC-338  
 Intake valve timing control position  
     sensor (left bank)..... EC-351  
 Intake valve timing control position  
     sensor (right bank) ..... EC-351  
 Integrated homelink transmitter ..... EL-419  
 Interior ..... BT-17  
 Interior lamp ..... EL-291  
 IPPS (Infiniti personal protection  
     system)..... EL-400

IPPS (Infiniti personal protection  
     system) precautions..... GI-2  
 IVC-L - Wiring diagram ..... EC-338  
 IVCS-L - Wiring diagram ..... EC-351  
 IVMS (In-Vehicle Multiplexing System) ..... EL-201  
 IVMS-System description ..... EL-201  
 IVMS-Trouble diagnoses ..... EL-222

## J

Jacking points ..... GI-41  
 Joint connector (J/C) ..... Foldout  
 Junction box (J/B) ..... Foldout

## K

Key illumination ..... EL-291  
 Keyless entry system - See Multi-  
     remote control system ..... EL-268  
 Knock sensor (KS) ..... EC-253  
 Knuckle spindle ..... FA-11  
 KS - Wiring diagram ..... EC-253

## L

Length (Dimensions) ..... GI-39  
 License lamp ..... EL-59  
 Lifting points ..... GI-42  
 Line pressure solenoid valve ..... AT-113, 124, 128  
 Line pressure test (A/T) ..... AT-60  
 Liquid gasket application ..... EM-2  
 LOAD - Wiring diagram ..... EC-499  
 Location of electrical units ..... EL-421  
 Lock, door ..... BT-11  
 Low and reverse brake ..... AT-244  
 Lower ball joint (rear susp.) ..... RA-22  
 Lubricant (R134a) A/C ..... HA-106  
 Lubricants ..... MA-8  
 Lubrication circuit (engine) ..... LC-3  
 Lubrication-locks, hinges and hood  
     latches ..... MA-22

## M

MAFS - Wiring diagram ..... EC-113  
 Magnet clutch ..... HA-113  
 MAIN - Wiring diagram ..... EC-108  
 Maintenance ..... MA-1  
 Maintenance (engine) ..... MA-10  
 MAJOR OVERHALL ..... AT-201  
 Malfunction indicator lamp (MIL) ..... EC-57  
 Map lamp ..... EL-291  
 MAP/BARO switch solenoid valve ..... EC-332  
 Mass air flow sensor (MAFS) ..... EC-113  
 Master cylinder (brake) ..... BR-11

# ALPHABETICAL INDEX

---

Meter.....	EL-87
METER - Wiring diagram .....	EL-89
Middle throttle drum adjustment.....	FE-3
MIL & Data link connectors circuit .....	EC-502
MIL/DL - Wiring diagram .....	EC-502
MIRROR - Wiring diagram .....	EL-169
Mirror, door .....	BT-46
Mirror, out side.....	BT-46
Misfire.....	EC-248
Mode door control linkage adjustment.....	HA-102
Mode door motor.....	HA-83
Model variation .....	GI-37
Molding - See Exterior .....	BT-24
Mud guard - See Exterior .....	BT-24
MULTI - Wiring diagram.....	EL-272
Multi link/lower ball joint (rear) .....	RA-22
Multi-remote control system .....	EL-268
Multiport fuel injection (MFI) system.....	EC-20
Multiport fuel injection precautions.....	GI-5

## N

NATS (Nissan anti-theft system) .....	EL-400
NATS (Nissan anti-theft system) precautions .....	GI-2
NATS - Wiring diagram.....	EL-402
NVH troubleshooting (BR) .....	BR-4
NVH troubleshooting (FA).....	FA-4
NVH troubleshooting (PD) .....	PD-5
NVH troubleshooting (RA) .....	RA-4
NVH troubleshooting (ST) .....	ST-5

## O

Oil change (capacity) .....	MA-8
Oil change (interval) .....	MA-6, 7
Oil pan (engine) .....	EM-12
Oil pressure (engine).....	LC-4
Oil pump (A/T).....	AT-217
Oil pump (engine) .....	LC-5
Oil pump regulator valve (engine).....	LC-7
Oil seal replacement (engine) .....	EM-28
Oil seal replacement (front of final drive).....	PD-10
Oil seal replacement (side of final drive).....	PD-10
Out side mirror .....	BT-46
Overdrive control switch.....	AT-179
Overrun clutch.....	AT-240
Overrun clutch solenoid valve.....	AT-113, 124, 145

## P

P/ANT - Wiring diagram.....	EL-160
Park/Neutral position switch.....	EC-460
Parking brake control .....	BR-29
Parking drum brake.....	BR-25

Parking lamp.....	EL-59
PCV (positive crankcase ventilation) .....	EC-31
Personal lamp .....	EL-291
PGC/V - Wiring diagram .....	EC-295, 412
PHONE - Wiring diagram .....	EL-163
Pinion bearing preload diff. ....	PD-20
Pinion gear height diff. ....	PD-20
Piston assembly.....	EM-53
Piston pin inspection.....	EM-48
Piston ring inspection .....	EM-48
Piston to bore clearance.....	EM-49
POWER - Wiring diagram .....	EL-4
Power antenna.....	EL-159
Power door lock.....	EL-247
Power door mirror.....	EL-169
Power seat.....	EL-171, 355
Power steering (twin orifice) trouble diagnoses .....	ST-33
Power steering fluid level.....	MA-20, ST-7
Power steering gear .....	ST-15
Power steering hydraulic pressure .....	ST-9
Power steering oil pressure switch .....	EC-494
Power steering oil pump .....	ST-27
Power steering system (twin orifice).....	ST-30
Power steering system bleeding .....	ST-8
Power supply routing .....	EL-3
Power transistor .....	EC-375
Power transistor & ignition coil .....	EC-368
Power window.....	EL-232
PRE/SE - Wiring diagram .....	EC-306
Precautions (General) .....	GI-3
Pressure test (A/T) .....	AT-60
Propeller shaft .....	PD-6
Propeller shaft on vehicle service.....	PD-6
Propeller shaft vibration .....	PD-6
PST/SW - Wiring diagram.....	EC-494

## R

Rack retainer adjustment.....	ST-7
Radiator .....	LC-13
Radio - See Audio .....	EL-148
Rear air spoiler .....	BT-24
Rear axle .....	RA-9
Rear bumper .....	BT-8
Rear combination lamp removal and installation .....	BT-24
Rear disc brake .....	BR-21
Rear door .....	BT-12
Rear heated oxygen sensor (HO2S) .....	EC-195, 203, 211, 218
Rear heated oxygen sensor (HO2S) heater .....	EC-224
Rear seat .....	BT-35
Rear seat belt .....	RS-5
Rear suspension .....	RA-19
Rear tower bar .....	BT-24
Rear window .....	BT-44
Rear window defogger .....	EL-139
Refrigerant connection precaution .....	HA-3

# ALPHABETICAL INDEX

Refrigerant discharging evacuating charging .....	HA-105
Refrigerant general precaution .....	HA-2
Refrigerant lines .....	HA-108
Refrigeration cycle .....	HA-11
Removal and installation (A/T) .....	AT-198
Reverse clutch .....	AT-234
Revolution sensor (A/T) .....	AT-89
RO2H-L - Wiring diagram .....	EC-195
Road wheel size .....	GI-39
Roof trim .....	BT-21
Room lamp .....	EL-291
ROOM/L - Wiring diagram .....	EL-296
RRO2LH - Wiring diagram .....	EC-224

## S

SAE J1930 terminology list .....	GI-45
Seal - See Exterior .....	BT-24
SEAT - Wiring diagram .....	EL-172
Seat belt inspection .....	MA-22, RS-6
Seat belt pre-tensioner .....	RS-9
Seat belt pre-tensioner disposal .....	RS-20
Seat belt, front .....	RS-4
Seat belt, rear .....	RS-5
Seat, front .....	BT-32
Seat, rear .....	BT-35
Secondary throttle position sensor .....	BR-34
Secondary throttle position sensor (TPS) for TCS .....	EC-345
Self-diagnostic results .....	EC-57
SHIFT - Wiring diagram .....	AT-182
Shift lock system .....	AT-181
Shift schedule .....	AT-277
Shift solenoid valve A (A/T) .....	AT-96, 105, 113, 124, 131
Shift solenoid valve B (A/T) .....	AT-96, 101, 113, 124, 135
Shock absorber (rear) .....	RA-21
Side air bag .....	RS-9
Side bearing preload diff. ....	PD-19
Side flange installation diff. ....	PD-11
Side trim .....	BT-17
SMJ (super multiple junction) .....	Foldout
Spare tire size .....	GI-39
Spark plug replacement .....	MA-15
Spiral cable .....	RS-15
Splice location .....	EL-445
Spot lamp .....	EL-291
Spring (Wheelarch) height .....	FA-6
SROOF - Wiring diagram .....	EL-167
SRS - See Supplemental Restraint System .....	RS-9
SRS - Wiring diagram .....	RS-31
SRS Trouble diagnoses .....	RS-26
S/SIG - Wiring diagram .....	EC-488
Stabilizer bar (front) .....	FA-21
Stabilizer bar (rear) .....	RA-25
Stall test (A/T) .....	AT-57
START - Wiring diagram .....	EL-24

Starter .....	EL-25
Starting system .....	EL-23
Steering gear and linkage inspection .....	MA-20
Steering linkage .....	ST-15
Steering switch .....	EL-33
Steering wheel and column .....	ST-11
Steering wheel play .....	ST-6
Steering wheel turning force .....	ST-9
Step lamp .....	EL-313
STEP/L - Wiring diagram .....	EL-316
Stop lamp .....	EL-65
STOP/L - Wiring diagram .....	EL-65
Strut (front) .....	FA-16
Sun roof, electric .....	EL-167
Sunload sensor .....	HA-74
Sunroof .....	BT-36
Supplemental Restraint System .....	RS-9
Supplemental restraint system - Wiring diagram .....	RS-31
SW/ILL - Wiring diagram .....	EL-325
SW/V - Wiring diagram .....	EC-332
Symbols and abbreviations .....	GI-8
System readiness test (SRT) code .....	EC-45

## T

T&FLID - Wiring diagram .....	EL-165
TAC (throttle actuator control) module .....	BR-37
TAC module removal and installation .....	BR-37
Tail lamp .....	EL-59
TAIL/L - Wiring diagram .....	EL-61
Tandem throttle position sensor .....	EC-350
TCM circuit diagram .....	AT-10
TCM inspection table .....	AT-75
TCS (traction control system) .....	BR-31
TCS - Wiring diagram .....	BR-49
TCS component parts and connector location .....	BR-47
TCS control unit .....	BR-123
TCS front wheel sensor removal and installation .....	BR-37
TCS rear wheel sensor removal and installation .....	BR-37
TCS self-diagnosis .....	BR-59
TCS symptom chart .....	BR-44
TCS system components .....	BR-32
TCS throttle valve control system .....	BR-34
TCS trouble diagnoses .....	BR-40
TCS wheel sensors .....	BR-36
Telephone .....	EL-163
Tension rod (front) .....	FA-21
TFTS - Wiring diagram .....	EC-243
THEFT - Wiring diagram .....	EL-333
Theft warning system .....	EL-329
Thermostat .....	LC-11
Three way catalyst .....	EC-282
Three way catalyst function (Left bank) .....	EC-282
Three way catalyst function (Right bank) .....	EC-282
Three way catalyst precautions .....	GI-5

# ALPHABETICAL INDEX

Throttle actuator control module - See TAC module.....	BR-37
Throttle drum adjustment .....	FE-3
Throttle Motor.....	BR-34
Throttle position sensor (TPS) .....	EC-141
Throttle position sensor adjustment.....	EC-85
Throttle position switch .....	AT-142, 180
Throttle valve control system for TCS .....	BR-34
Tie-rod.....	ST-19
Tie-rod ball joints .....	ST-19
Tightening torque of standard bolts .....	GI-44
Timing chain.....	EM-14
Tire rotation.....	MA-19
Tire size .....	GI-39
Tooth contact diff.....	PD-25
Torque converter installation .....	AT-199
Torque convertor clutch solenoid valve.....	AT-113, 117, 124
Tow truck towing.....	GI-42
Towing point .....	GI-43
TP/SW - Wiring diagram .....	EC-322
TPS - Wiring diagram .....	EC-141
Traction control system - See TCS.....	BR-31
Traction control system - Wiring diagram.....	BR-49
Traction control system circuit (engine) .....	EC-359
Transmission serial number .....	GI-39
TRANSMT - Wiring diagram.....	EL-419
Transverse link (front) .....	FA-22
Tread-FR&RR (Dimensions) .....	GI-39
Trim .....	BT-17
Triple pressure switch .....	HA-98
Trouble diagnoses .....	GI-32
Trunk lid .....	BT-8
Trunk lid opener - See Trunk lid.....	BT-8
Trunk lid opener, electric .....	EL-165
Trunk lid trim .....	BT-23
Trunk room lamp.....	EL-86
Trunk room trim .....	BT-23
Turbine revolution sensor.....	AT-156
TURN - Wiring diagram .....	EL-74
Turn signal lamp .....	EL-71
Two trip detection logic .....	EC-43
Two-pole lift .....	GI-42

## U

Under body .....	BT-49
------------------	-------

## V

Vacuum cut valve .....	EC-446
Vacuum cut valve bypass valve.....	EC-437, 442
Vacuum hose (brake system) .....	BR-16
Vacuum hose drawing (ECCS) .....	EC-18
Valve guide .....	EM-37
Valve seat .....	EM-39
Valve spring .....	EM-40
Vehicle identification number .....	GI-38
Vehicle speed sensor (VSS) .....	EC-312
VENT/V - Wiring diagram .....	EC-301, 419, 431
Viscosity number (SAE).....	MA-8
VSS - Wiring diagram .....	EC-312

## W

WARN - Wiring diagram .....	EL-97
Warning chime .....	EL-110
Warning lamps .....	EL-94
Washer, front.....	EL-120
Water pump .....	LC-9
Weatherstrip - See Exterior .....	BT-24
Wheel alignment (front) .....	FA-8
Wheel alignment (rear) .....	RA-7
Wheel balance .....	MA-18
Wheel bearing (front axle) .....	FA-7
Wheel bearing (rear) .....	RA-7
Wheel hub (front) .....	FA-11
Wheel hub (rear) .....	RA-9
Wheel sensors (ABS).....	BR-36
Wheel sensors (TCS).....	BR-36
Wheel size.....	GI-39
Wheelarch height .....	FA-6
Wheelbase (Dimensions) .....	GI-39
Wide open & closed throttle position switch.....	EC-141
Width (Dimensions) .....	GI-39
WINDOW - Wiring diagram .....	EL-234
Window, door .....	BT-11
Window, rear.....	BT-44
Windshield .....	BT-44
WIPER - Wiring diagram .....	EL-123
Wiper, front .....	EL-120
Wiring Diagram (Cell code) list.....	EL-458
Wiring diagrams .....	GI-9