

# ALPHABETICAL INDEX

SECTION **IDX**

**A B C D E F G H I J K L M**

**N O P Q R S T U V W X Y Z**

GI

MA

EM

LC

EC

FE

AT

PD

FA

RA

BR

ST

RS

BT

HA

EL

**IDX**

# ALPHABETICAL INDEX

A

AAC/V - Wiring diagram.....	EC-338
ABS (anti-lock brake system).....	BR-32
ABS - Wiring diagram .....	BR-51
ABS input/output signal inspection .....	BR-123
ABS sensor rotor .....	FA-15
ABS/TCS C/U signal .....	EC-497
Absolute pressure sensor .....	EC-132
A/C - Wiring diagram.....	HA-53
A/C air flow.....	HA-22
A/C component layout.....	HA-16
A/C compressor clutch removal and installation.....	HA-109
A/C compressor description .....	HA-13
A/C compressor mounting.....	HA-108
A/C compressor precaution.....	HA-6
A/C compressor special service tool.....	HA-7
A/C control linkage adjustment (auto A/C).....	HA-97
A/C control operation (auto A/C).....	HA-20
A/C diagnostic work flow (auto A/C) .....	HA-24
A/C HFC134a (R134a) system precaution .....	HA-2
A/C HFC134a (R134a) system service procedure.....	HA-99
A/C HFC134a (R134a) system service tools .....	HA-8
A/C HFC134a system service equip- ment precaution.....	HA-10
A/C lubricant (R134a).....	HA-102
A/C operational check.....	HA-25
A/C performance test diagnoses.....	HA-44
A/C relay.....	HA-95
A/C self-diagnoses (auto A/C).....	HA-29
A/C service data specification .....	HA-113
A/C symptom chart (auto A/C) .....	HA-28
A/C trouble diagnoses (auto A/C) .....	HA-24
Accelerator control system .....	FE-3
Accelerator wire adjustment .....	FE-4
ACTIVE - Wiring diagram .....	FA-34
Active damper suspension (front) parts location .....	FA-23
Active damper suspension (front) trouble diagnoses.....	FA-28
Active damper suspension system - Wiring diagram .....	FA-34
Air bag .....	RS-11
Air bag disposal.....	RS-24
Air bag precautions .....	GI-2
Air bleeding for brake system .....	BR-7
Air cleaner filter replacement.....	MA-13
Air conditioner - Wiring diagram.....	HA-53
Air conditioner cut control .....	EC-24
Air flow meter - See Mass air flow sensor .....	EC-124
Air mix door control linkage adjustment.....	HA-97
Alternator.....	EL-41
Ambient sensor .....	HA-66

Angular tightening application.....	EM-2
Antenna - See Power antenna .....	EL-203
Anti-lock brake system - See ABS .....	BR-32
Anti-lock brake system - Wiring diagram.....	BR-51
AP/SEN - Wiring diagram .....	EC-132
ASCD (automatic speed control device) .....	EL-236
ASCD - Wiring diagram .....	EL-240
A/T - Wiring diagram .....	AT-12
A/T fluid temperature sensor .....	AT-88, 150
A/T IND - Wiring diagram .....	EL-148
AT indicator lamp .....	EL-147
A/T self-diagnoses.....	AT-42
A/T shift lock system .....	AT-183
A/T shift lock system - Wiring diagram .....	AT-184
A/T trouble diagnoses .....	AT-54
AT/C - Wiring diagram.....	EC-350, 498
Audio .....	EL-191
AUDIO - Wiring diagram.....	EL-193
Audio and A/C control removal and installation - See Instrument panel .....	BT-21
AUT/DP - Wiring diagram .....	EL-421
Auto air conditioner - Wiring diagram .....	HA-53
Auto anti-dazzling inside mirror .....	EL-222
Autolamp.....	EL-46, 63
Automatic drive positioner .....	EL-415
Automatic speed control system - See ASCD .....	EL-236
Automatic transmission fluid replacement.....	MA-18
Automatic transmission number .....	GI-40

B

Back-up lamp .....	EL-100
BACK/L - Wiring diagram.....	EL-100
Ball joint front axle .....	FA-22
Basic inspection .....	EC-91
Battery .....	EL-31
Bi-level door control linkage adjustment .....	HA-98
Blower motor .....	HA-91
Board-on lift .....	GI-41
Body alignment .....	BT-55
BPT valve .....	EC-292
Brake booster.....	BR-15
Brake control valve (Proportioning valve) .....	BR-9
Brake fluid change .....	BR-6
Brake fluid level .....	MA-19
Brake fluid level and line check .....	BR-6
Brake hydraulic line.....	BR-8
Brake inspection .....	MA-20
Brake lines and cables inspection .....	MA-20
Brake master cylinder .....	BR-12
Brake pedal .....	BR-10
Bulb specifications .....	EL-549
Bumper, front .....	BT-13
Bumper, rear .....	BT-16
BYPS/V - Wiring diagram .....	EC-468, 473

# ALPHABETICAL INDEX

## C

Camshaft inspection .....	EM-35
Camshaft position sensor (CMPS).....	EC-273
CANI/V - Wiring diagram .....	EC-479, 485
Center bearing assembly (propeller shaft).....	PD-9
Center bearing disassembly (propeller shaft).....	PD-8
CHARGE - Wiring diagram.....	EL-39
Charging system .....	EL-38
Chassis and body maintenance .....	MA-17
CHIME - Wiring diagram.....	EL-153
CIGAR - Wiring diagram.....	EL-180
Cigarette lighter.....	EL-180
Circuit breaker.....	EL-20
CKPS - Wiring diagram.....	EC-268, 405
Clock .....	EL-181
CLOCK - Wiring diagram.....	EL-181
Closed loop control .....	EC-386
CMPS - Wiring diagram .....	EC-273
Coil spring (front) .....	FA-17
Coil spring (rear) .....	RA-22
Collision diagnosis.....	RS-60
Combination lamp, rear, removal and installation .....	BT-32
Combination meter.....	EL-122
Combination meter removal and installation - See Instrument panel.....	BT-21
Combination switch.....	EL-42
COMM - Wiring diagram.....	EL-276
Component Location (auto A/C).....	HA-50
Compression pressure.....	EM-10
Compressor clutch removal and installation.....	HA-109
Compressor description .....	HA-13
Compressor mounting .....	HA-108
Compressor precaution .....	HA-6
Compressor special service tool.....	HA-7
Connecting rod.....	EM-47
Connecting rod bearing clearance.....	EM-51
Connecting rod bushing clearance .....	EM-52
Connector inspection.....	GI-20
Console box - See Instrument panel.....	BT-21
CONSULT for engine .....	EC-74
CONSULT for TCS .....	BR-62
CONSULT-II general information.....	GI-36
Control valve (A/T) .....	AT-221
Converter housing installation.....	AT-199
COOL/F - Wiring diagram .....	EC-501
Coolant mixture ratio.....	MA-9
Cooling circuit (engine).....	LC-8
Cooling fan.....	LC-17
Cooling fan control .....	EC-501
Cooling fan motor.....	EC-512
Crankshaft.....	EM-49
Crankshaft position sensor (OBD) .....	EC-268
Crankshaft position sensor (OBD) cog chipping .....	EC-405

Cruise control - See ASCD.....	EL-236
Cylinder block .....	EM-45
Cylinder head.....	EM-29

## D

Daytime light system .....	EL-74, 84	MA
Daytime running light - See Daytime light system .....	EL-74, 84	EM
DEF - Wiring diagram .....	EL-183	EM
Detonation sensor - See Knock sensor.....	EC-265	LC
Diagnosis sensor unit.....	RS-16	LC
Diagnostic trouble code (DTC) inspection priority chart.....	EC-97	EC
Differential carrier assembly.....	PD-27	EC
Differential carrier disassembly .....	PD-14	FE
Differential gear oil replacement.....	MA-18	FE
Dimensions .....	GI-40	AT
Direct ignition system .....	EC-40	PD
D/LOCK - Wiring diagram.....	EL-310	FA
Door glass.....	BT-19	RA
Door lock.....	BT-19	RA
Door mirror.....	BT-54	BR
Door trim .....	BT-27	ST
Door, front .....	BT-19	RS
Door, rear .....	BT-20	BT
Drive belt inspection .....	MA-10	HA
Drive pinion height .....	PD-21	EL
Drive plate runout .....	EM-52	HA
Drive shaft (rear) .....	RA-16	EL
Dropping resistor (A/T).....	AT-128	HA
DTRL - Wiring diagram.....	EL-78, 88	EL

## E

ECM input/output signal .....	EC-107	RS
ECM-ABS/TCS COMM NG .....	EC-498	BT
ECTS - Wiring diagram.....	EC-145, 161	HA
EGR control (EGRC) - BPT valve.....	EC-288	EL
EGR control (EGRC) - solenoid valve .....	EC-410	HA
EGR control valve .....	EC-286, 428	EL
EGR temperature sensor .....	EC-415	HA
EGR/TS - Wiring diagram .....	EC-415	EL
EGRC1 - Wiring diagram .....	EC-279, 421	HA
Electric sun roof .....	EL-217	EL
Electrical diagnoses.....	GI-23	HA
Electrical ignition system.....	EC-23	EL
Electrical unit .....	Foldout	HA
Electrical units location .....	EL-514	EL
Electronic controlled power steering system - Wiring diagram .....	ST-31	HA
Engine compartment.....	BT-55	EL
Engine control circuit diagram.....	EC-14	HA
Engine control component parts location .....	EC-17	EL
Engine control module (ECM).....	EC-353	HA
Engine control system diagram and chart.....	EC-16	EL

# ALPHABETICAL INDEX

Engine coolant temperature sensor (ECTS).....EC-145

Engine oil filter replacement .....MA-14

Engine oil precautions .....GI-6

Engine oil replacement .....MA-14

Engine outer component parts .....EM-8

Engine removal .....EM-43

Engine room - See Engine compartment.....BT-55

Engine serial number .....GI-40

EPS - Wiring diagram .....ST-31

EVAP canister purge control solenoid valve .....EC-479, 485

EVAP canister purge control valve .....EC-479, 485

EVAP canister purge volume control valve .....EC-307, 442

EVAP canister vent control valve .....EC-313, 450, 462

EVAP control system (small leak) diagnosis.....EC-296, 430

EVAP control system pressure sensor.....EC-318

EVAP control system purge flow monitoring diagnosis.....EC-455

EVAP vapor lines inspection.....MA-16

Evaporative emission (EVAP) system.....EC-26

Exhaust system .....FE-7

Exhaust system inspection .....MA-17

Exterior.....BT-32

## F

Fan control amp. ....HA-89

Fast idle cam (FIC) inspection and adjustment .....EC-40

F/FOG - Wiring diagram .....EL-102

Final drive disassembly .....PD-14

Final drive pre-inspection .....PD-14

Final drive removal and installation .....PD-12

Finisher, interior - See Trim .....BT-25

Floor trim.....BT-25

Flow charts .....GI-33

Fluid temperature sensor (A/T).....AT-88, 150

Fluids.....MA-8

FO2H-L - Wiring diagram .....EC-166, 174, 180, 186, 195

Fog lamp, front.....EL-101

Fog lamp, front, removal and installation .....BT-13

Foot lamp .....EL-351

Forward clutch.....AT-240

FPCM - Wiring diagram .....EC-391

F/PUMP - Wiring diagram .....EC-521

FRO2LH - Wiring diagram .....EC-202

Front axle .....FA-12

Front bumper .....BT-13

Front disc brake .....BR-18

Front door .....BT-19

Front fog lamp.....EL-101

Front fog lamp removal and installation .....BT-13

Front heated oxygen sensor (HO2S) .....EC-166, 174, 180, 186, 195

Front heated oxygen sensor (HO2S) (Left bank).....EC-166, 174, 180, 186, 195

Front heated oxygen sensor (HO2S) (Right bank) .....EC-166, 174, 180, 186, 195

Front heated oxygen sensor (HO2S) monitor .....EC-65

Front heated oxygen sensor heater (Left bank).....EC-202

Front heated oxygen sensor heater (Right bank) .....EC-202

Front passenger air bag .....RS-11

Front seat.....BT-41

Front seat belt .....RS-4

Front suspension .....FA-16

Front tower bar .....BT-32

Front washer .....EL-161

Front wiper .....EL-161

Fuel cut control (at no load & high engine speed) .....EC-25

Fuel filter replacement .....MA-13

Fuel injection system (Left bank) .....EC-243, 249

Fuel injection system (Right bank) .....EC-243, 249

Fuel lid opener, electric.....EL-209

Fuel line inspection .....MA-12

Fuel precautions .....GI-7

Fuel pressure check.....EC-37

Fuel pressure release .....EC-37

Fuel pump control module .....EC-391

Fuel system .....FE-5

Fuel tank vacuum relief valve .....EC-27

FUELLH - Wiring diagram.....EC-243, 249

Fuse .....EL-20

Fuse block .....Foldout

Fusible link .....EL-20

## G

Garage jack and safety stand .....GI-42

Gauges.....EL-120

Generic scan tool (GST) .....EC-85

Glass .....BT-19

Grease .....MA-8

Grille - See Exterior .....BT-32

Ground distribution.....EL-21

## H

H/AIM - Wiring diagram .....EL-94

Harness connector .....EL-6

Harness connector inspection .....GI-20

Harness layout .....EL-518

Hazard warning lamp .....EL-105

Headlamp.....EL-46, 62

Headlamp aiming control .....EL-94

Headlining - See Roof trim .....BT-29

# ALPHABETICAL INDEX

Heated oxygen sensor (HO2S)  
 (front).....EC-166, 174, 180, 186, 195  
 Heated oxygen sensor (HO2S) (Front)  
 (Left bank).....EC-166, 174, 180, 186, 195  
 Heated oxygen sensor (HO2S) (Front)  
 (Right bank) .....EC-166, 174, 180, 186, 195  
 Heated oxygen sensor (HO2S) heater  
 (front) .....EC-202  
 Heated oxygen sensor  
 (rear).....EC-208, 216, 224, 231  
 Heated oxygen sensor heater  
 (Front)(Left bank).....EC-202  
 Heated seat.....BT-42, EL-228  
 Height (Dimensions) .....GI-40  
 HFC134a (R134a) system precaution .....HA-2  
 HFC134a (R134a) system service  
 procedure.....HA-99  
 HFC134a (R134a) system service tools .....HA-8  
 HFC134a system service equipment  
 precaution .....HA-10  
 High clutch.....AT-238  
 H/LAMP - Wiring diagram.....EL-49, 66  
 Hood.....BT-13  
 Horn .....EL-179  
 HORN - Wiring diagram.....EL-179  
 HSEAT - Wiring diagram.....EL-228  
 Hydraulic lash adjuster inspection .....EM-39

I

IATS - Wiring diagram .....EC-140  
 Identification plate.....GI-40  
 Idle mixture ratio.....EC-42  
 Idle speed.....EC-42  
 IGN/SG - Wiring diagram .....EC-397  
 Ignition coil .....EC-404  
 Ignition timing .....EC-42  
 ILL - Wiring diagram.....EL-114  
 Illumination .....EL-112, 351, 384  
 I/MIRR - Wiring diagram .....EL-222  
 In vehicle sensor .....HA-69  
 INFINITI COMMUNICATOR.....EL-480  
 Infiniti communicator (IVCS) .....EL-480  
 INJECT - Wiring diagram .....EC-513  
 Injector.....EC-518  
 Injector removal and installation .....EC-38  
 Instrument panel .....BT-21  
 INT/L - Wiring diagram.....EL-119  
 Intake air temperature sensor .....EC-140  
 Intake door motor .....HA-86  
 Intake sensor.....HA-71, 98  
 Intake valve timing control .....EC-365  
 Intake valve timing control (right bank)  
 - Wiring diagram .....EC-365  
 Intake valve timing control position  
 sensor (left bank).....EC-380  
 Intake valve timing control position  
 sensor (right bank).....EC-380  
 Integrated homelink transmitter .....EL-478  
 Interior .....BT-25

Interior lamp .....EL-351  
 IVC-L - Wiring diagram.....EC-365  
 IVCS (Infiniti communicator) .....EL-480  
 IVCS - Wiring diagram.....EL-489  
 IVCS-L - Wiring diagram .....EC-380  
 IVIS (Infiniti vehicle immobilizer  
 system).....EL-460  
 IVIS (Infiniti vehicle immobilizer sys-  
 tem) precautions .....GI-2  
 IVMS (In-Vehicle Multiplexing System).....EL-259  
 IVMS-System description.....EL-259  
 IVMS-Trouble diagnoses.....EL-280

J

Jacking points .....GI-42  
 Joint connector (J/C) .....Foldout  
 Junction box (J/B).....Foldout

K

Key illumination .....EL-351  
 Keyless entry system - See Multi-re-  
 mote control system .....EL-328  
 Knock sensor (KS) .....EC-265  
 Knuckle spindle .....FA-12  
 KS - Wiring diagram .....EC-265

L

LAN system circuit .....HA-80  
 Length (Dimensions) .....GI-40  
 License lamp .....EL-95  
 Lifting points .....GI-43  
 Line pressure solenoid valve .....AT-113, 124, 128  
 Line pressure test (A/T) .....AT-62  
 Liquid gasket application .....EM-2  
 LOAD - Wiring diagram .....EC-530  
 Location of electrical units .....EL-514  
 Lock, door .....BT-19  
 Low and reverse brake .....AT-244  
 Lower ball joint (rear susp.) .....RA-23  
 Lubricant (R134a) A/C.....HA-102  
 Lubricants.....MA-8  
 Lubrication circuit (engine) .....LC-3  
 Lubrication-locks, hinges and hood  
 latches .....MA-22

M

MAFS - Wiring diagram.....EC-124  
 Magnet clutch .....HA-109  
 MAIN - Wiring diagram .....EC-118  
 Maintenance (engine) .....MA-10  
 MAJOR OVERHALL.....AT-201

GI  
 MA  
 EM  
 LC  
 EC  
 FE  
 AT  
 PD  
 FA  
 RA  
 BR  
 ST  
 RS  
 BT  
 HA  
 EL  
 IDX

# ALPHABETICAL INDEX

Malfunction indicator lamp (MIL).....EC-65  
 Map lamp .....EL-351  
 MAP/BARO switch solenoid valve .....EC-356  
 Mass air flow sensor (MAFS).....EC-124  
 Master cylinder (brake) .....BR-12  
 Meter .....EL-120  
 METER - Wiring diagram.....EL-123  
 Middle throttle drum adjustment .....FE-4  
 MIL & Data link connectors circuit .....EC-533  
 MIL/DL - Wiring diagram .....EC-533  
 MIRROR - Wiring diagram.....EL-221  
 Mirror, door.....BT-54  
 Mirror, out side .....BT-54  
 Misfire .....EC-260  
 Mode door control linkage adjustment.....HA-97  
 Model variation .....GI-38  
 Molding - See Exterior .....BT-32  
 Mud guard - See Exterior .....BT-32  
 MULTI - Wiring diagram.....EL-332  
 Multi link/lower ball joint (rear) .....RA-23  
 Multi-remote control system.....EL-328  
 Multiport fuel injection (MFI) system .....EC-21  
 Multiport fuel injection precautions.....GI-5

## N

NATS (Nissan anti-theft system)  
 precautions .....GI-2  
 NATS - Wiring diagram.....EL-462  
 NVH troubleshooting (BR).....BR-5  
 NVH troubleshooting (FA).....FA-4  
 NVH troubleshooting (PD).....PD-5  
 NVH troubleshooting (RA).....RA-4  
 NVH troubleshooting (ST).....ST-5

## O

Oil change (capacity) .....MA-8  
 Oil change (interval) .....MA-6, 7  
 Oil pan (engine).....EM-11  
 Oil pressure (engine) .....LC-4  
 Oil pump (A/T).....AT-217  
 Oil pump (engine) .....LC-5  
 Oil pump regulator valve (engine) .....LC-7  
 Oil seal replacement (engine).....EM-27  
 Oil seal replacement (front of final  
 drive) .....PD-11  
 Oil seal replacement (side of final  
 drive) .....PD-11  
 On board diagnostic system .....EC-49  
 ORVR (On-board Refueling Vapor  
 Recovery).....EC-31  
 Out side mirror .....BT-54  
 Overdrive control switch.....AT-181  
 Overrun clutch .....AT-240  
 Overrun clutch solenoid valve.....AT-145

## P

P/ANT - Wiring diagram.....EL-204  
 Park/Neutral position switch .....EC-492  
 Park/neutral position switch (A/T) .....AT-84  
 Parking brake control .....BR-30  
 Parking drum brake .....BR-26  
 Parking lamp .....EL-95  
 PCV (positive crankcase ventilation) .....EC-36  
 Personal lamp .....EL-351  
 PGC/V - Wiring diagram .....EC-307, 442  
 PHONE - Wiring diagram .....EL-207  
 Pinion bearing preload diff. ....PD-21  
 Pinion gear height diff. ....PD-21  
 Piston assembly .....EM-52  
 Piston pin inspection .....EM-47  
 Piston ring inspection.....EM-47  
 Piston to bore clearance.....EM-48  
 POWER - Wiring diagram.....EL-11  
 Power antenna.....EL-203  
 Power door lock .....EL-307  
 Power seat.....EL-223, 415  
 Power steering (twin orifice) trouble  
 diagnoses .....ST-33  
 Power steering fluid level.....MA-21, ST-7  
 Power steering gear.....ST-15  
 Power steering hydraulic pressure .....ST-9  
 Power steering oil pressure switch .....EC-525  
 Power steering oil pump .....ST-27  
 Power steering system (twin orifice).....ST-30  
 Power steering system bleeding.....ST-8  
 Power supply routing .....EL-10  
 Power transistor .....EC-404  
 Power transistor & ignition coil.....EC-397  
 Power window .....EL-290  
 PRE/SE - Wiring diagram .....EC-318  
 Precautions (General) .....GI-3  
 Pressure test (A/T) .....AT-62  
 Propeller shaft .....PD-6  
 Propeller shaft on vehicle service .....PD-6  
 Propeller shaft vibration .....PD-6  
 PST/SW - Wiring diagram.....EC-525

## R

Rack retainer adjustment.....ST-7  
 Radiator .....LC-13  
 Radio - See Audio.....EL-191  
 Rear axle .....RA-10  
 Rear bumper .....BT-16  
 Rear combination lamp removal and  
 installation .....BT-32  
 Rear disc brake .....BR-22  
 Rear door .....BT-20  
 Rear heated oxygen sensor  
 (HO2S) .....EC-208, 216, 224, 231  
 Rear heated oxygen sensor (HO2S)  
 heater.....EC-237

# ALPHABETICAL INDEX

Rear seat .....	BT-43
Rear seat belt.....	RS-5
Rear sunshade.....	EL-230
Rear suspension .....	RA-20
Rear tower bar .....	BT-32
Rear window .....	BT-52
Rear window defogger.....	EL-182
Refrigerant connection precaution .....	HA-3
Refrigerant discharging evacuating charging .....	HA-101
Refrigerant general precaution.....	HA-3
Refrigerant lines .....	HA-104
Refrigeration cycle.....	HA-12
REMOTE - Wiring diagram.....	EL-202
Removal and installation (A/T).....	AT-198
Reverse clutch.....	AT-234
Revolution sensor (A/T) .....	AT-91
RO2H-L - Wiring diagram.....	EC-208
Road wheel size .....	GI-40
Roof trim .....	BT-29
Room lamp.....	EL-351
ROOM/L - Wiring diagram .....	EL-356
RRO2LH - Wiring diagram .....	EC-237

## S

SAE J1930 terminology list .....	GI-46
Seal - See Exterior .....	BT-32
SEAT - Wiring diagram .....	EL-224
Seat belt inspection .....	MA-22, RS-7
Seat belt pre-tensioner .....	RS-11
Seat belt pre-tensioner disposal .....	RS-24
Seat belt, front.....	RS-4
Seat belt, rear.....	RS-5
Seat, front .....	BT-41
Seat, rear .....	BT-43
Secondary throttle position sensor.....	BR-35
Secondary throttle position sensor (TPS) for TCS.....	EC-373
Self-diagnostic results .....	EC-65
SHIFT - Wiring diagram .....	AT-184
Shift lock system .....	AT-183
Shift schedule.....	AT-276
Shift solenoid valve A (A/T) ....	AT-98, 107, 113, 131
Shift solenoid valve B (A/T) ....	AT-98, 103, 113, 135
Shock absorber (rear) .....	RA-22
Side air bag .....	RS-11
Side bearing preload diff. ....	PD-20
Side flange installation diff. ....	PD-12
Side trim .....	BT-25
SMJ (super multiple junction).....	Foldout
Spare tire size .....	GI-40
Spark plug replacement.....	MA-15
Spiral cable.....	RS-18
Splice location.....	EL-537
Spot lamp.....	EL-351
Spring (Wheelarch) height .....	FA-6
SROOF - Wiring diagram .....	EL-218
SRS - See Supplemental Restraint System .....	RS-11

SRS - Wiring diagram .....	RS-35
SRS Trouble diagnoses .....	RS-30
S/SIG - Wiring diagram .....	EC-519
Stabilizer bar (front) .....	FA-21
Stabilizer bar (rear) .....	RA-26
Stall test (A/T) .....	AT-59
Standardized relay .....	EL-8
START - Wiring diagram.....	EL-35
Starter .....	EL-36
Starting system .....	EL-34
Steering gear and linkage inspection .....	MA-21
Steering linkage .....	ST-15
Steering switch.....	EL-44
Steering wheel and column.....	ST-11
Steering wheel play .....	ST-6
Steering wheel turning force.....	ST-9
Step lamp.....	EL-373
STEP/L - Wiring diagram .....	EL-376
Stop lamp.....	EL-99
STOP/L - Wiring diagram.....	EL-99
Strut (front).....	FA-17
Sun roof, electric.....	EL-217
Sunload sensor .....	HA-73
Sunroof.....	BT-44
Sunshade .....	EL-230
Supplemental Restraint System .....	RS-11
Supplemental restraint system - Wiring diagram.....	RS-35
SW/ILL - Wiring diagram.....	EL-385
SW/V - Wiring diagram .....	EC-356
Symbols and abbreviations .....	GI-9
System readiness test (SRT) code .....	EC-51

## T

T&FLID - Wiring diagram.....	EL-209
TAC (throttle actuator control) module .....	BR-38
TAC module removal and installation .....	BR-38
Tail lamp.....	EL-95
TAIL/L - Wiring diagram .....	EL-96
Tandem throttle position sensor .....	EC-379
T/CLOS - Wiring diagram .....	EL-212
TCM circuit diagram .....	AT-11
TCM inspection table .....	AT-77
TCS (traction control system) .....	BR-32
TCS - Wiring diagram .....	BR-51
TCS component parts and connector location .....	BR-49
TCS control unit .....	BR-123
TCS front wheel sensor removal and installation.....	BR-38
TCS rear wheel sensor removal and installation.....	BR-38
TCS self-diagnosis .....	BR-59
TCS symptom chart .....	BR-45
TCS system components .....	BR-33
TCS throttle valve control system .....	BR-35
TCS trouble diagnoses.....	BR-41
TCS wheel sensors .....	BR-37
Telephone.....	EL-207

GI  
MA  
EM  
LC  
EC  
FE  
AT  
PD  
FA  
RA  
BR  
ST  
RS  
BT  
HA  
EL  
IDX

# ALPHABETICAL INDEX

Tension rod (front).....FA-21  
TFTS - Wiring diagram.....EC-255  
THEFT - Wiring diagram.....EL-393  
Theft warning system.....EL-389  
Thermostat .....LC-11  
Three way catalyst .....EC-293  
Three way catalyst function (Left bank) .....EC-293  
Three way catalyst function (Right bank).....EC-293  
Three way catalyst precautions.....GI-5  
Throttle actuator control module - See TAC module .....BR-38  
Throttle drum adjustment.....FE-4  
Throttle Motor .....BR-35  
Throttle position sensor (TPS) .....EC-150  
Throttle position sensor adjustment .....EC-91  
Throttle position switch .....AT-142, 182  
Throttle valve control system for TCS.....BR-35  
Tie-rod .....ST-19  
Tie-rod ball joints.....ST-19  
Tightening torque of standard bolts.....GI-45  
Timing chain.....EM-13  
Tire rotation .....MA-19  
Tire size .....GI-40  
Tooth contact diff. ....PD-26  
Torque converter installation .....AT-199  
Torque convertor clutch solenoid valve .....AT-117, 124  
Tow truck towing.....GI-43  
Towing point.....GI-44  
TP/SW - Wiring diagram .....EC-344  
TPS - Wiring diagram.....EC-150  
Traction control system - See TCS.....BR-32  
Traction control system - Wiring diagram.....BR-51  
Traction control system circuit (engine) .....EC-388  
Transmission serial number .....GI-40  
TRANSMT - Wiring diagram.....EL-478  
Transverse link (front) .....FA-22  
Tread-FR&RR (Dimensions).....GI-40  
Trim .....BT-25  
Triple pressure switch .....HA-95  
Trouble diagnoses .....GI-33  
Trunk closure.....EL-211  
Trunk lid .....BT-16  
Trunk lid opener - See Trunk lid .....BT-16  
Trunk lid opener, electric.....EL-209  
Trunk lid trim .....BT-31  
Trunk room lamp .....EL-119  
Trunk room trim.....BT-31  
Turbine revolution sensor.....AT-156  
TURN - Wiring diagram .....EL-108  
Turn signal lamp .....EL-105  
Two trip detection logic .....EC-49  
Two-pole lift .....GI-43

## U

Under body .....BT-57

## V

Vacuum cut valve .....EC-477  
Vacuum cut valve bypass valve.....EC-468, 473  
Vacuum hose (brake system).....BR-17  
Vacuum hose drawing (Engine control) .....EC-19  
Valve guide.....EM-36  
Valve seat.....EM-38  
Valve spring.....EM-39  
Vanity mirror lamp .....EL-119  
Vehicle identification number.....GI-39  
Vehicle recovery (freeing a stuck vehicle).....GI-44  
Vehicle speed sensor (VSS) .....EC-333  
VENT/V - Wiring diagram .....EC-313, 450, 462  
Ventilation air filter .....HA-111  
Ventilator door control rod adjustment .....HA-98  
Viscosity number (SAE) .....MA-8  
VSS - Wiring diagram .....EC-333

## W

WARN - Wiring diagram .....EL-138  
Warning chime .....EL-151  
Warning lamps .....EL-134  
Washer, front.....EL-161  
Water pump .....LC-9  
Weatherstrip - See Exterior .....BT-32  
Wheel alignment (front) .....FA-8  
Wheel alignment (rear).....RA-7  
Wheel bearing (front axle) .....FA-7  
Wheel bearing (rear) .....RA-7  
Wheel hub (front) .....FA-12  
Wheel hub (rear) .....RA-10  
Wheel sensors (ABS).....BR-37  
Wheel sensors (TCS).....BR-37  
Wheel size .....GI-40  
Wheelarch height .....FA-6  
Wheelbase (Dimensions) .....GI-40  
Wide open & closed throttle position switch .....EC-150  
Width (Dimensions) .....GI-40  
WINDOW - Wiring diagram .....EL-293  
Window, door .....BT-19  
Window, rear .....BT-52  
Windshield.....BT-52  
WIPER - Wiring diagram .....EL-164  
Wiper, front.....EL-161  
Wiring Diagram (Cell code) list.....EL-550  
Wiring diagrams.....GI-10