

ALPHABETICAL INDEX

SECTION **IDX**

A B C D E F G H I J K L M

GI

MA

EM

LC

EC

N O P Q R S T U V W X Y Z

FE

AT

PD

FA

RA

BR

ST

RS

BT

HA

EL

IDX

A

AAC/V - Wiring diagram.....	EC-340
ABS (anti-lock brake system).....	BR-32
ABS - Wiring diagram	BR-51
ABS input/output signal inspection	BR-123
ABS sensor rotor	FA-16
ABS/TCS C/U signal	EC-499
Absolute pressure sensor	EC-132
A/C - Wiring diagram.....	HA-53
A/C air flow	HA-22
A/C component layout.....	HA-16
A/C compressor clutch removal and installation.....	HA-108
A/C compressor description	HA-13
A/C compressor mounting.....	HA-107
A/C compressor precaution.....	HA-6
A/C compressor special service tool.....	HA-7
A/C control linkage adjustment (auto A/C).....	HA-96
A/C control operation (auto A/C).....	HA-20
A/C diagnostic work flow (auto A/C)	HA-24
A/C HFC134a (R134a) system precaution	HA-2
A/C HFC134a (R134a) system service procedure.....	HA-98
A/C HFC134a (R134a) system service tools	HA-8
A/C HFC134a system service equip- ment precaution.....	HA-10
A/C lubricant (R134a).....	HA-101
A/C operational check	HA-25
A/C performance test diagnoses.....	HA-44
A/C relay	HA-94
A/C self-diagnoses (auto A/C).....	HA-29
A/C service data specification	HA-112
A/C symptom chart (auto A/C)	HA-28
A/C trouble diagnoses (auto A/C)	HA-24
Accelerator control system	FE-3
Accelerator wire adjustment	FE-4
ACTIVE - Wiring diagram	FA-35
Active damper suspension (front) parts location	FA-24
Active damper suspension (front) trouble diagnoses	FA-29
Active damper suspenstion system - Wiring diagram	FA-35
Air bag	RS-11
Air bag disposal.....	RS-24
Air bag precautions	GI-2
Air bleeding for brake system	BR-7
Air cleaner filter replacement.....	MA-13
Air conditioner - Wiring diagram.....	HA-53
Air conditioner cut control	EC-24
Air flow meter - See Mass air flow sensor	EC-124
Air mix door control linkage adjustment.....	HA-96
Alternator.....	EL-41
Ambient sensor	HA-66

Angular tightening application.....	EM-2
Antenna - See Power antenna	EL-184
Anti-lock brake system - See ABS	BR-32
Anti-lock brake system - Wiring diagram.....	BR-51
AP/SEN - Wiring diagram	EC-132
ASCD (automatic speed control device)	EL-218
ASCD - Wiring diagram	EL-222
A/T - Wiring diagram	AT-12
A/T fluid temperature sensor	AT-88, 150
A/T IND - Wiring diagram	EL-129
AT indicator lamp	EL-128
A/T self-diagnoses.....	AT-42
A/T shift lock system	AT-183
A/T shift lock system - Wiring diagram	AT-184
A/T trouble diagnoses	AT-54
AT/C - Wiring diagram.....	EC-352, 500
Audio	EL-172
AUDIO - Wiring diagram	EL-174
Audio and A/C control removal and installation - See Instrument panel	BT-22
AUT/DP - Wiring diagram	EL-403
Auto air conditioner - Wiring diagram	HA-53
Auto anti-dazzling inside mirror	EL-204
Autolamp	EL-47
Automatic drive positioner	EL-397
Automatic speed control system - See ASCD	EL-218
Automatic transmission fluid replacement.....	MA-18
Automatic transmission number	GI-40

B

Back-up lamp	EL-81
BACK/L - Wiring diagram.....	EL-81
Ball joint front axle	FA-23
Basic inspection	EC-91
Battery	EL-31
Bi-level door control linkage adjustment	HA-97
Blower motor	HA-91
Board-on lift	GI-41
Body alignment	BT-56
BPT valve	EC-294
Brake booster	BR-15
Brake control valve (Proportioning valve)	BR-9
Brake fluid change	BR-6
Brake fluid level	MA-19
Brake fluid level and line check	BR-6
Brake hydraulic line	BR-8
Brake inspection	MA-20
Brake lines and cables inspection	MA-20
Brake master cylinder	BR-12
Brake pedal	BR-10
Bulb specifications	EL-531
Bumper, front	BT-13
Bumper, rear	BT-16
BYPS/V - Wiring diagram	EC-470, 475

ALPHABETICAL INDEX



C

- Camshaft inspection EM-35
 Camshaft position sensor (CMPS) EC-275
 CANI/V - Wiring diagram EC-481, 487
 Center bearing assembly (propeller shaft) PD-9
 Center bearing disassembly (propeller shaft) PD-8
 CHARGE - Wiring diagram EL-39
 Charging system EL-38
 Chassis and body maintenance MA-17
 CHIME - Wiring diagram EL-134
 CIGAR - Wiring diagram EL-161
 Cigarette lighter EL-161
 Circuit breaker EL-20
 CKPS - Wiring diagram EC-270, 407
 Clock EL-162
 CLOCK - Wiring diagram EL-162
 Closed loop control EC-388
 CMPS - Wiring diagram EC-275
 Coil spring (front) FA-18
 Coil spring (rear) RA-22
 Collision diagnosis RS-60
 Combination lamp, rear, removal and installation BT-33
 Combination meter EL-103
 Combination meter removal and installation - See Instrument panel BT-22
 Combination switch EL-42
 COMM - Wiring diagram EL-258
 Component Location (auto A/C) HA-50
 Compression pressure EM-10
 Compressor clutch removal and installation HA-108
 Compressor description HA-13
 Compressor mounting HA-107
 Compressor precaution HA-6
 Compressor special service tool HA-7
 Connecting rod EM-47
 Connecting rod bearing clearance EM-51
 Connecting rod bushing clearance EM-52
 Connector inspection GI-20
 Console box - See Instrument panel BT-22
 CONSULT for engine EC-74
 CONSULT for TCS BR-62
 CONSULT-II general information GI-36
 Control valve (A/T) AT-221
 Converter housing installation AT-199
 COOL/F - Wiring diagram EC-503
 Coolant mixture ratio MA-9
 Cooling circuit (engine) LC-8
 Cooling fan LC-17
 Cooling fan control EC-503
 Cooling fan motor EC-514
 Crankshaft EM-49
 Crankshaft position sensor (OBD) EC-270
 Crankshaft position sensor (OBD) cog chipping EC-407

- Cruise control - See ASCD EL-218
 Cylinder block EM-45
 Cylinder head EM-29

D

- Daytime light system EL-65
 Daytime running light - See Daytime light system EL-65
 DEF - Wiring diagram EL-164
 Detonation sensor - See Knock sensor EC-267
 Diagnosis sensor unit RS-16
 Diagnostic trouble code (DTC) inspection priority chart EC-97
 Differential carrier assembly PD-27
 Differential carrier disassembly PD-14
 Differential gear oil replacement MA-18
 Dimensions GI-40
 Direct ignition system EC-40
 D/LOCK - Wiring diagram EL-291
 Door glass BT-19
 Door lock BT-19
 Door mirror BT-55
 Door trim BT-28
 Door, front BT-19
 Door, rear BT-21
 Drive belt inspection MA-10
 Drive pinion height PD-21
 Drive plate runout EM-52
 Drive shaft (rear) RA-16
 Dropping resistor (A/T) AT-128
 DTRL - Wiring diagram EL-69

E

- ECM input/output signal EC-107
 ECM-ABS/TCS COMM NG EC-500
 ECTS - Wiring diagram EC-145, 161
 EGR control (EGRC) - BPT valve EC-290
 EGR control (EGRC) - solenoid valve EC-412
 EGR control valve EC-288, 430
 EGR temperature sensor EC-417
 EGR/TS - Wiring diagram EC-417
 EGRC1 - Wiring diagram EC-281, 423
 Electric sun roof EL-198
 Electrical diagnoses GI-23
 Electrical ignition system EC-23
 Electrical unit Foldout
 Electrical units location EL-496
 Electronic controlled power steering system - Wiring diagram ST-31
 Engine compartment BT-56
 Engine control circuit diagram EC-14
 Engine control component parts location EC-17
 Engine control module (ECM) EC-355
 Engine control system diagram and chart EC-16

ALPHABETICAL INDEX

Engine coolant temperature sensor (ECTS)	EC-145
Engine oil filter replacement	MA-14
Engine oil precautions	GI-6
Engine oil replacement	MA-14
Engine outer component parts	EM-8
Engine removal	EM-43
Engine room - See Engine compartment.....	BT-56
Engine serial number	GI-40
EPS - Wiring diagram	ST-31
EVAP canister purge control solenoid valve	EC-481, 487
EVAP canister purge control valve	EC-481, 487
EVAP canister purge volume control valve	EC-309, 444
EVAP canister vent control valve	EC-315, 452, 464
EVAP control system (small leak) diagnosis.....	EC-298, 432
EVAP control system pressure sensor.....	EC-320
EVAP control system purge flow monitoring diagnosis.....	EC-457
EVAP vapor lines inspection	MA-16
Evaporative emission (EVAP) system	EC-26
Exhaust system	FE-7
Exhaust system inspection	MA-17
Exterior	BT-33

F

Fan control amp.	HA-89
Fast idle cam (FIC) inspection and adjustment	EC-40
F/FOG - Wiring diagram	EL-83
Final drive disassembly	PD-14
Final drive pre-inspection	PD-14
Final drive removal and installation	PD-12
Finisher, interior - See Trim	BT-26
Floor trim	BT-26
Flow charts	GI-33
Fluid temperature sensor (A/T)	AT-88, 150
Fluids.....	MA-8
FO2H-L - Wiring diagram	EC-166, 174, 180, 187, 196
Fog lamp, front.....	EL-82
Fog lamp, front, removal and installation	BT-13
Foot lamp	EL-333
Forward clutch.....	AT-240
FPCM - Wiring diagram	EC-393
F/PUMP - Wiring diagram	EC-523
FRO2LH - Wiring diagram	EC-204
Front axle	FA-13
Front bumper	BT-13
Front disc brake	BR-18
Front door	BT-19
Front fog lamp.....	EL-82
Front fog lamp removal and installation	BT-13

Front heated oxygen sensor (HO2S)	EC-166, 174, 180, 187, 196
Front heated oxygen sensor (HO2S) (Left bank).....	EC-166, 174, 180, 187, 196
Front heated oxygen sensor (HO2S) (Right bank)	EC-166, 174, 180, 187, 196
Front heated oxygen sensor (HO2S) monitor	EC-65
Front heated oxygen sensor heater (Left bank).....	EC-204
Front heated oxygen sensor heater (Right bank)	EC-204
Front passenger air bag	RS-11
Front seat.....	BT-42
Front seat belt	RS-4
Front suspension	FA-17
Front tower bar	BT-33
Front washer	EL-142
Front wiper	EL-142
Fuel cut control (at no load & high engine speed)	EC-25
Fuel filter replacement	MA-13
Fuel gauge	EL-101
Fuel injection system (Left bank)	EC-245, 251
Fuel injection system (Right bank)	EC-245, 251
Fuel lid opener, electric.....	EL-190
Fuel line inspection	MA-12
Fuel precautions	GI-7
Fuel pressure check	EC-37
Fuel pressure release	EC-37
Fuel pump control module	EC-393
Fuel system	FE-5
Fuel tank vacuum relief valve	EC-27
FUELLH - Wiring diagram.....	EC-245, 251
Fuse	EL-20
Fuse block	Foldout
Fusible link	EL-20

G

Garage jack and safety stand	GI-42
Gauges.....	EL-101
Generic scan tool (GST)	EC-85
Glass	BT-19
Grease	MA-8
Grille - See Exterior	BT-33
Ground distribution.....	EL-21

H

H/AIM - Wiring diagram	EL-75
Harness connector	EL-6
Harness connector inspection	GI-20
Harness layout	EL-500
Hazard warning lamp	EL-86
Headlamp	EL-46
Headlamp aiming control	EL-75
Headlining - See Roof trim	BT-30

ALPHABETICAL INDEX



Heated oxygen sensor (HO2S)
 (front).....EC-166, 174, 180, 187, 196
 Heated oxygen sensor (HO2S) (Front)
 (Left bank).....EC-166, 174, 180, 187, 196
 Heated oxygen sensor (HO2S) (Front)
 (Right bank).....EC-166, 174, 180, 187, 196
 Heated oxygen sensor (HO2S) heater
 (front)EC-204
 Heated oxygen sensor
 (rear).....EC-210, 218, 226, 233
 Heated oxygen sensor heater
 (Front)(Left bank).....EC-204
 Heated seat.....BT-43, EL-210
 Height (Dimensions)GI-40
 HFC134a (R134a) system precautionHA-2
 HFC134a (R134a) system service
 procedure.....HA-98
 HFC134a (R134a) system service toolsHA-8
 HFC134a system service equipment
 precautionHA-10
 High clutch.....AT-238
 H/LAMP - Wiring diagram.....EL-50
 Hood.....BT-13
 HornEL-160
 HORN - Wiring diagram.....EL-160
 HSEAT - Wiring diagram.....EL-210
 Hydraulic lash adjuster inspectionEM-39

I

IATS - Wiring diagramEC-140
 Identification plate.....GI-40
 Idle mixture ratio.....EC-42
 Idle speed.....EC-42
 IGN/SG - Wiring diagramEC-399
 Ignition coilEC-406
 Ignition timingEC-42
 ILL - Wiring diagramEL-95
 Illumination.....EL-93, 333, 366
 I/MIRR - Wiring diagramEL-204
 In vehicle sensorHA-69
 INFINITI COMMUNICATOR.....EL-462
 Infiniti communicator (IVCS)EL-462
 INJECT - Wiring diagramEC-515
 InjectorEC-520
 Injector removal and installationEC-38
 Instrument panelBT-22
 INT/L - Wiring diagram.....EL-100
 Intake air temparature sensorEC-140
 Intake door motorHA-86
 Intake sensor.....HA-71, 97
 Intake valve timing controlEC-367
 Intake valve timing control (right bank)
 - Wiring diagramEC-367
 Intake valve timing control position
 sensor (left bank).....EC-382
 Intake valve timing control position
 sensor (right bank).....EC-382
 Integrated homelink transmitterEL-460
 InteriorBT-26

Interior lampEL-333
 IVC-L - Wiring diagram.....EC-367
 IVCS (Infiniti communicator)EL-462
 IVCS - Wiring diagram.....EL-471
 IVCS-L - Wiring diagramEC-382
 IVIS (Infiniti vehicle immobilizer
 system)EL-442
 IVIS (Infiniti vehicle immobilizer sys-
 tem) precautionsGI-2
 IVMS (In-Vehicle Multiplexing System).....EL-241
 IVMS-System description.....EL-241
 IVMS-Trouble diagnoses.....EL-262

J

Jacking pointsGI-42
 Joint connector (J/C)Foldout
 Junction box (J/B)Foldout

K

Key illuminationEL-333
 Keyless entry system - See Multi-re-
 mote control systemEL-309
 Knock sensor (KS)EC-267
 Knuckle spindleFA-13
 KS - Wiring diagramEC-267

L

LAN system circuitHA-80
 Length (Dimensions)GI-40
 License lampEL-76
 Lifting pointsGI-43
 Line pressure solenoid valveAT-113, 124, 128
 Line pressure test (A/T)AT-62
 Liquid gasket applicationEM-2
 LOAD - Wiring diagramEC-532
 Location of electrical unitsEL-496
 Lock, doorBT-19
 Low and reverse brakeAT-244
 Lower ball joint (rear susp.)RA-23
 Lubricant (R134a) A/CHA-101
 LubricantsMA-8
 Lubrication circuit (engine)LC-3
 Lubrication-locks, hinges and hood
 latchesMA-22

M

MAFS - Wiring diagramEC-124
 Magnet clutchHA-108
 MAIN - Wiring diagramEC-118
 Maintenance (engine)MA-10
 MAJOR OVERHALLAT-201

ALPHABETICAL INDEX



Malfunction indicator lamp (MIL)	EC-65
Map lamp	EL-333
MAP/BARO switch solenoid valve	EC-358
Mass air flow sensor (MAFS)	EC-124
Master cylinder (brake)	BR-12
Meter	EL-101
METER - Wiring diagram	EL-104
Middle throttle drum adjustment	FE-4
MIL & Data link connectors circuit	EC-535
MIL/DL - Wiring diagram	EC-535
MIRROR - Wiring diagram	EL-203
Mirror, door	BT-55
Mirror, out side	BT-55
Misfire	EC-262
Mode door control linkage adjustment	HA-96
Model variation	GI-38
Molding - See Exterior	BT-33
Mud guard - See Exterior	BT-33
MULTI - Wiring diagram	EL-313
Multi link/lower ball joint (rear)	RA-23
Multi-remote control system	EL-309
Multiport fuel injection (MFI) system	EC-21
Multiport fuel injection precautions	GI-5

N

NATS (Nissan anti-theft system)	
precautions	GI-2
NATS - Wiring diagram	EL-444
NVH troubleshooting (BR)	BR-5
NVH troubleshooting (FA)	FA-5
NVH troubleshooting (PD)	PD-5
NVH troubleshooting (RA)	RA-4
NVH troubleshooting (ST)	ST-5

O

Oil change (capacity)	MA-8
Oil change (interval)	MA-6, 7
Oil pan (engine)	EM-11
Oil pressure (engine)	LC-4
Oil pump (A/T)	AT-217
Oil pump (engine)	LC-5
Oil pump regulator valve (engine)	LC-7
Oil seal replacement (engine)	EM-27
Oil seal replacement (front of final drive)	PD-11
Oil seal replacement (side of final drive)	PD-11
On board diagnostic system	EC-49
ORVR (On-board Refueling Vapor Recovery)	EC-31
Out side mirror	BT-55
Overdrive control switch	AT-181
Overrun clutch	AT-240
Overrun clutch solenoid valve	AT-145

P

P/ANT - Wiring diagram	EL-185
Park/Neutral position switch	EC-494
Park/neutral position switch (A/T)	AT-84
Parking brake control	BR-30
Parking drum brake	BR-26
Parking lamp	EL-76
PCV (positive crankcase ventilation)	EC-36
Personal lamp	EL-333
PGC/V - Wiring diagram	EC-309, 444
PHONE - Wiring diagram	EL-188
Pinion bearing preload diff.	PD-21
Pinion gear height diff.	PD-21
Piston assembly	EM-52
Piston pin inspection	EM-47
Piston ring inspection	EM-47
Piston to bore clearance	EM-48
POWER - Wiring diagram	EL-11
Power antenna	EL-184
Power door lock	EL-288
Power seat	EL-205, 397
Power steering (twin orifice) trouble diagnoses	ST-33

Power steering fluid level	MA-21, ST-7
Power steering gear	ST-15
Power steering hydraulic pressure	ST-9
Power steering oil pressure switch	EC-527
Power steering oil pump	ST-27
Power steering system (twin orifice)	ST-30
Power steering system bleeding	ST-8
Power supply routing	EL-10
Power transistor	EC-406
Power transistor & ignition coil	EC-399
Power window	EL-272
PRE/SE - Wiring diagram	EC-320
Precautions (General)	GI-3
Pressure test (A/T)	AT-62
Propeller shaft	PD-6
Propeller shaft on vehicle service	PD-6
Propeller shaft vibration	PD-6
PST/SW - Wiring diagram	EC-527

R

Rack retainer adjustment	ST-7
Radiator	LC-13
Radio - See Audio	EL-172
Rear axle	RA-10
Rear bumper	BT-16
Rear combination lamp removal and installation	BT-33
Rear disc brake	BR-22
Rear door	BT-21
Rear heated oxygen sensor (HO2S)	EC-210, 218, 226, 233
Rear heated oxygen sensor (HO2S) heater	EC-239

ALPHABETICAL INDEX



Rear seat	BT-44
Rear seat belt.....	RS-5
Rear sunshade.....	EL-212
Rear suspension	RA-20
Rear tower bar	BT-33
Rear window	BT-53
Rear window defogger.....	EL-163
Refrigerant connection precaution	HA-3
Refrigerant discharging evacuating charging	HA-100
Refrigerant general precaution.....	HA-3
Refrigerant lines	HA-103
Refrigeration cycle.....	HA-12
REMOTE - Wiring diagram	EL-183
Removal and installation (A/T)	AT-198
Reverse clutch.....	AT-234
Revolution sensor (A/T)	AT-91
RO2H-L - Wiring diagram.....	EC-210
Road wheel size	GI-40
Roof trim	BT-30
Room lamp.....	EL-333
ROOM/L - Wiring diagram	EL-338
RRO2LH - Wiring diagram	EC-239

S

SAE J1930 terminology list	GI-46
Seal - See Exterior	BT-33
SEAT - Wiring diagram	EL-206
Seat belt inspection	MA-22, RS-7
Seat belt pre-tensioner	RS-11
Seat belt pre-tensioner disposal	RS-24
Seat belt, front.....	RS-4
Seat belt, rear.....	RS-5
Seat, front	BT-42
Seat, rear	BT-44
Secondary throttle position sensor.....	BR-35
Secondary throttle position sensor (TPS) for TCS.....	EC-375
Self-diagnostic results	EC-65
SHADE - Wiring diagram.....	EL-214
SHIFT - Wiring diagram	AT-184
Shift lock system	AT-183
Shift schedule.....	AT-276
Shift solenoid valve A (A/T)	AT-98, 107, 113, 131
Shift solenoid valve B (A/T)	AT-98, 103, 113, 135
Shock absorber (rear)	RA-22
Side air bag	RS-11
Side bearing preload diff.	PD-20
Side flange installation diff.	PD-12
Side trim.....	BT-26
SMJ (super multiple junction)	Foldout
Spare tire size	GI-40
Spark plug replacement.....	MA-15
Speedometer.....	EL-101
Spiral cable.....	RS-18
Splice location.....	EL-519
Spot lamp.....	EL-333
Spring (Wheelarch) height	FA-7
SROOF - Wiring diagram	EL-199

SRS - See Supplemental Restraint System	RS-11
SRS - Wiring diagram	RS-35
SRS Trouble diagnoses	RS-30
S/SIG - Wiring diagram	EC-521
Stabilizer bar (front)	FA-22
Stabilizer bar (rear)	RA-26
Stall test (A/T)	AT-59
Standardized relay	EL-8
START - Wiring diagram	EL-35
Starter	EL-36
Starting system	EL-34
Steering gear and linkage inspection	MA-21
Steering linkage	ST-15
Steering switch.....	EL-44
Steering wheel and column.....	ST-11
Steering wheel play	ST-6
Steering wheel turning force	ST-9
Step lamp	EL-355
STEP/L - Wiring diagram	EL-358
Stop lamp.....	EL-80
STOP/L - Wiring diagram.....	EL-80
Strut (front)	FA-18
Sun roof, electric	EL-198
Sunload sensor	HA-73
Sunroof.....	BT-45
Sunshade	EL-212
Supplemental Restraint System	RS-11
Supplemental restraint system - Wiring diagram.....	RS-35
SW/ILL - Wiring diagram.....	EL-367
SW/V - Wiring diagram	EC-358
Symbols and abbreviations	GI-9
System readiness test (SRT) code	EC-51

T

T&FLID - Wiring diagram	EL-190
TAC (throttle actuator control) module	BR-38
TAC module removal and installation	BR-38
Tachometer	EL-101
Tail lamp	EL-76
TAIL/L - Wiring diagram	EL-77
Tandem throttle position sensor	EC-381
T/CLOS - Wiring diagram	EL-193
TCM circuit diagram	AT-11
TCM inspection table	AT-77
TCS (traction control system)	BR-32
TCS - Wiring diagram	BR-51
TCS component parts and connector location	BR-49
TCS control unit	BR-123
TCS front wheel sensor removal and installation	BR-38
TCS rear wheel sensor removal and installation	BR-38
TCS self-diagnosis	BR-59
TCS symptom chart	BR-45
TCS system components	BR-33
TCS throttle valve control system	BR-35

ALPHABETICAL INDEX



TCS trouble diagnoses.....	BR-41
TCS wheel sensors	BR-37
Telephone.....	EL-188
Tension rod (front).....	FA-22
TFTS - Wiring diagram.....	EC-257
THEFT - Wiring diagram.....	EL-375
Theft warning system.....	EL-371
Thermostat	LC-11
Three way catalyst	EC-295
Three way catalyst function (Left bank)	EC-295
Three way catalyst function (Right bank)	EC-295
Three way catalyst precautions.....	GI-5
Throttle actuator control module - See TAC module	BR-38
Throttle drum adjustment.....	FE-4
Throttle Motor	BR-35
Throttle position sensor (TPS)	EC-150
Throttle position sensor adjustment	EC-91
Throttle position switch	AT-142, 182
Throttle valve control system for TCS.....	BR-35
Tie-rod	ST-19
Tie-rod ball joints.....	ST-19
Tightening torque of standard bolts.....	GI-45
Timing chain.....	EM-13
Tire rotation	MA-19
Tire size	GI-40
Tooth contact diff.	PD-26
Torque converter installation	AT-199
Torque convertor clutch solenoid valve	AT-117, 124
Tow truck towing.....	GI-43
Towing point.....	GI-44
TP/SW - Wiring diagram	EC-346
TPS - Wiring diagram.....	EC-150
Traction control system - See TCS	BR-32
Traction control system - Wiring diagram	BR-51
Traction control system circuit (engine)	EC-390
Transmission serial number	GI-40
TRANSMT - Wiring diagram	EL-460
Transverse link (front)	FA-23
Tread-FR&RR (Dimensions).....	GI-40
Trim	BT-26
Triple pressure switch	HA-94
Trouble diagnoses	GI-33
Trunk closure	EL-192
Trunk lid	BT-16
Trunk lid opener - See Trunk lid	BT-16
Trunk lid opener, electric.....	EL-190
Trunk lid trim	BT-32
Trunk room lamp.....	EL-100
Trunk room trim.....	BT-32
Turbine revolution sensor.....	AT-156
TURN - Wiring diagram	EL-89
Turn signal lamp	EL-86
Two trip detection logic	EC-49
Two-pole lift	GI-43

U

Under body	BT-58
------------------	-------

V

Vacuum cut valve	EC-479
Vacuum cut valve bypass valve	EC-470, 475
Vacuum hose (brake system).....	BR-17
Vacuum hose drawing (Engine control)	EC-19
Valve guide.....	EM-36
Valve seat.....	EM-38
Valve spring.....	EM-39
Vanity mirror lamp	EL-100
Vehicle identification number.....	GI-39
Vehicle recovery (freeing a stuck vehicle).....	GI-44
Vehicle speed sensor (VSS)	EC-335
VENT/V - Wiring diagram	EC-315, 452, 464
Ventilation air filter	HA-110
Ventilator door control rod adjustment	HA-97
Viscosity number (SAE)	MA-8
VSS - Wiring diagram	EC-335

W

WARN - Wiring diagram.....	EL-119
Warning chime	EL-132
Warning lamps	EL-115
Washer, front.....	EL-142
Water pump	LC-9
Weatherstrip - See Exterior	BT-33
Wheel alignment (front)	FA-9
Wheel alignment (rear).....	RA-7
Wheel bearing (front axle)	FA-8
Wheel bearing (rear)	RA-7
Wheel hub (front)	FA-13
Wheel hub (rear)	RA-10
Wheel sensors (ABS).....	BR-37
Wheel sensors (TCS)	BR-37
Wheel size	GI-40
Wheelarch height	FA-7
Wheelbase (Dimensions)	GI-40
Wide open & closed throttle position switch	EC-150
Width (Dimensions)	GI-40
WINDOW - Wiring diagram	EL-275
Window, door	BT-19
Window, rear	BT-53
Windshield.....	BT-53
WIPER - Wiring diagram	EL-145
Wiper, front.....	EL-142
Wiring Diagram (Cell code) list	EL-532
Wiring diagrams.....	GI-10