

**SECTION IDX
ALPHABETICAL INDEX**

A

B

C

D

E

F

G

H

I

J

K

L

IDX

ALPHABETICAL INDEX

A

A/C air flow	ATC-33
A/C component layout	ATC-22
A/C compressor clutch removal and installation	
ATC-145	
A/C compressor precaution	ATC-9
A/C compressor special service tool	ATC-13
A/C control operation (auto A/C)	ATC-31
A/C diagnostic work flow (auto A/C)	ATC-35
A/C evaporator	ATC-153
A/C HFC134a (R134a) system precaution	ATC-4
A/C HFC134a (R134a) system service procedure	
ATC-141	
A/C HFC134a (R134a) system service tools ...	ATC-13
A/C HFC134a system service equipment precaution ...	
ATC-9	
A/C lubricant (R134a)	ATC-23
A/C operational check	ATC-62
A/C performance chart	ATC-95
A/C performance test diagnoses	ATC-93
A/C relay	ATC-91
A/C self-diagnoses (auto A/C)	ATC-53
A/C system description (auto A/C)	ATC-26
A/C trouble diagnoses (auto A/C)	ATC-35
A/C, A - Wiring diagram	ATC-39
A/T fluid checking	AT-14, AT-51
A/T fluid replacement	AT-14
A/T fluid temperature sensor	AT-147
A/T IND - Wiring diagram	DI-54
A/T indicator	DI-54
A/T self-diagnoses	AT-87, AT-98
A/T shift lock system	AT-284
A/T shift lock system - Wiring diagram	AT-285
A/T trouble diagnoses	AT-42
A/T Wiring diagram AT - CAN	AT-101
A/T Wiring diagram AT - D/C	AT-190
A/T Wiring diagram AT - D/CF	AT-195
A/T Wiring diagram AT - E/BRE	AT-168
A/T Wiring diagram AT - FPSW1	AT-221
A/T Wiring diagram AT - FPSW3	AT-225
A/T Wiring diagram AT - FPSW5	AT-229
A/T Wiring diagram AT - FPSW6	AT-233
A/T Wiring diagram AT - FR/B	AT-181
A/T Wiring diagram AT - FR/BF	AT-186
A/T Wiring diagram AT - FTS	AT-148
A/T Wiring diagram AT - HLR/C	AT-199
A/T Wiring diagram AT - HLR/CF	AT-204
A/T Wiring diagram AT - I/C	AT-172
A/T Wiring diagram AT - I/CF	AT-177
A/T Wiring diagram AT - I/LOCK	AT-161
A/T Wiring diagram AT - LC/B	AT-208
A/T Wiring diagram AT - LC/BF	AT-213
A/T Wiring diagram AT - LPSV	AT-129
A/T Wiring diagram AT - MMSW	AT-217
A/T Wiring diagram AT - NONDTC	AT-238
A/T Wiring diagram AT - PNP/SW	AT-107
A/T Wiring diagram AT - POWER	AT-134
A/T Wiring diagram AT - STSIG	AT-104

A/T Wiring diagram AT - TCCSIG	AT-124
A/T Wiring diagram AT - TCV	AT-119
A/T Wiring diagram AT - TRSA/T	AT-154
A/T Wiring diagram AT - VSS A/T	AT-112
Accelerator control system	ACC-2
Accelerator pedal position (APP) sensor	EC-607, EC-613, EC-626
Accelerator pedal released position learning	EC-46
Accelerator wire adjustment	ACC-3
Active damper suspension system	SCS-2
Active damper suspension system - trouble diagnoses	SCS-2
Active damper suspension system - Wiring diagram	
SCS-4	
Aiming adjustment	LT-31
Air bag	SRS-3
Air bag disposal	SRS-52
Air bleeding for brake system	BR-10
Air cleaner and air duct	EM-15
Air cleaner filter replacement	MA-16
Air conditioner cut control	EC-30
Air flow meter - See Mass air flow sensor	EC-171, EC-179, EC-418
Air mix door control linkage adjustment	ATC-76
Air mix. door motor	ATC-74, ATC-137
Alternator	SC-9
Ambient sensor	ATC-108, ATC-124
Angular tightening application	EM-3
Antenna	AV-41
APPS1 - Wiring diagram	EC-609
APPS2 - Wiring diagram	EC-615
APPS3 - Wiring diagram	EC-628
ASCD - Wiring diagram	ACS-8
ASCD (automatic speed control device)	ACS-4
ASCD vacuum hose	MA-29
Ashtray illumination(Front)	LT-146
Ashtray illumination(Rear)	LT-146
Audio	AV-5
AUDIO - Wiring diagram	AV-9
Audio and A/C control removal and installation - See	
Instrument panel	IP-11
AUT/DP - Wiring diagram	SE-21
Auto air conditioner - Wiring diagram	ATC-39
Auto anti-dazzling inside mirror	GW-57, GW-58
Automatic amplifier	ATC-50, ATC-65
Automatic drive positioner	SE-13
Automatic transmission fluid replacement	MA-21
AV and NAVI control unit	DI-76, DI-133, AV-45
AV communication line	DI-95, AV-68
AV control unit	DI-76, DI-133
Axle	MA-27
Axle housing (rear)	RAX-7

B

BACK/L - Wiring diagram	LT-71
Back-up lamp	LT-71
Ball joint (front)	FSU-12
Ball Joint (rear)	RSU-11

ALPHABETICAL INDEX

Basic inspection	EC-82	Coil spring (rear)	RSU-15
Battery	SC-4	Collision diagnosis	SRS-59
Battery/Starting/Charging System Tester(Battery)	SC-6	Combination lamp, front, removal and installation	
Battery/Starting/Charging System Tester(Charging system)	SC-11	LT-34	
Battery/Starting/Charging System Tester(Starting system)	SC-24	Combination lamp, rear, removal and installation	LT-80
Block heater	EM-73	Combination meter	DI-7
Blower motor	ATC-81 , ATC-130	Combination meter removal and installation - See	
Blower unit	ATC-128	Instrument panel	IP-13
Body alignment	BL-236	COMM - Wiring diagram	DI-95 , LAN-9 , AV-68
Body component parts	BL-225	COMPAS - Wiring diagram	DI-31
Body construction	BL-235	Compass	DI-29
Body exterior paint color	BL-224	Component Location (auto A/C)	ATC-36
Body repair	BL-224	Compression pressure	EM-61
Body sealing	BL-232	Compressor clutch removal and installation	ATC-145
Bose speaker amp.	AV-5	Compressor special service tool	ATC-13
Brake booster	BR-21	Condenser	ATC-151
Brake fluid change	BR-9 , BR-10	Connecting rod	EM-90
Brake fluid level	MA-25	Connecting rod bearing clearance	EM-90
Brake fluid level and line check	BR-9	Connecting rod bushing clearance	EM-90
Brake inspection	MA-25	Console box - See Instrument panel	IP-14
Brake lines and cables inspection	MA-25	Console box lamp	LT-145
Brake master cylinder	BR-13	CONSULT for engine	EC-108
Brake pedal	BR-6	CONSULT-II for engine	EC-108 , EC-123
Brake switch	EC-602	Contaminated refrigerant	ATC-5
BRK/SW - Wiring diagram	EC-603	Control unit	ATC-123
Bulb specifications	LT-149	Control units (terminal arrangement)	PG-59
Bumper, front	EI-15	Control valve (A/T)	AT-36
Bumper, rear	EI-17	Controller Area Network (CAN)	LAN-21 , LAN-24 , LAN-42
BYPS/V - Wiring diagram	EC-579 , EC-586	Converter housing installation	AT-299

C

Camshaft	EM-46
Camshaft inspection	EM-49
Camshaft position sensor (PHASE)	EC-315
CAN - Wiring diagram	EC-142 , LAN-25 , LAN-44
CAN (Controller Area Network)	LAN-21 , LAN-24 , LAN-42
CAN communication	EC-30 , EC-141 , AT-29 , AT-100 , BRC-9 , DI-9 , LAN-21 , LAN-24 , LAN-42
Canister-See EVAP canister	EC-687
CD auto changer	AV-37
CD/CHG - Wiring diagram	AV-9
CHARGE - Wiring diagram	SC-10
Charging system	SC-9
Chassis and body maintenance	MA-20
CHIME - Wiring diagram	DI-59
CIGAR - Wiring diagram	WW-25
Cigarette lighter	WW-25
Cigarette lighter illumination	LT-146
Circuit breaker	PG-55
Clearance lamp	LT-72
Clock	DI-163
CLOCK - Wiring diagram	DI-163
Closed loop control	EC-27
Closed loop control (Bank 1)	EC-500
Closed loop control (Bank 2)	EC-500

A

B

C

D

E

F

G

H

I

J

K

L

IDX

D

D/LOCK - Wiring diagram	BL-22
Data link connector	EC-683
Data link connector for Consult	EC-111
Daytime light system	LT-37
Daytime running light - See Daytime light system	LT-37
DEF - Wiring diagram	GW-62 , SE-163
Diagnosis sensor unit	SRS-51
Diagnostic trouble code (DTC) for OBD system	EC-9
Diagnostic trouble code (DTC) inspection priority chart	EC-79

ALPHABETICAL INDEX

Direct clutch solenoid valve	AT-189 , AT-194	EC-367 , EC-375 , EC-529 , EC-559
DLC - Wiring diagram	EC-683	EVAP control system pressure sensor EC-352 , EC-359
Door glass	GW-51 , GW-54	EVAP control system purge flow monitoring diagnosis . EC-325
Door glass Fitting Adjustment(Front)	GW-53	
Door glass Fitting Adjustment(Rear)	GW-56	
Door lock	BL-106 , BL-109	EVAP vapor lines inspection
Door mirror	GW-114	MA-19
Door mirror lamp	LT-128	Evaporative emission (EVAP) system
Door trim	EI-30	EC-684
Door, front	BL-102 , GW-51	Evaporator
Door, rear	BL-102 , GW-54	ATC-153
Drive belt	EM-12	Exhaust manifold
Drive belt inspection	MA-13	EM-22
Drive pinion diff. inspection	RFD-12	Exhaust system
Drive shaft	MA-27	EX-3
Drive shaft (rear)	RAX-9	Exhaust system inspection
Driver air bag	SRS-39	EX-3 , MA-20
DTC work support	EC-120	Expansion valve
DTRL - Wiring diagram	LT-42	ATC-154
Duct and grilles	ATC-138	
Duel mode muffler	EX-5	
Duel mode muffler -Wiring diagram-	EX-7	

E

ECM input/output signal	EC-99
ECM power supply	EC-133 , EC-414
ECTS - Wiring diagram	EC-192 , EC-203
Electric sunroof	RF-10
Electric throttle control actuator	EC-435 , EC-437 , EC-450
Electrical load signal circuit	EC-677
Electrical unit	PG-59
Electrical units location	PG-49
Electronic ignition (EI) system	EC-28
Electronic key	BL-82 , BL-97 , BL-188
Engine control circuit diagram	EC-97
Engine control component parts location	EC-91
Engine control module (ECM)	EC-407
Engine control system diagram and chart	EC-23
Engine coolant	CO-9
Engine coolant temperature sensor (ECTS) ...	EC-190 , EC-201
Engine fail-safe system	EC-81
Engine oil	LU-6
Engine oil filter replacement	MA-17
Engine oil precautions	GI-7
Engine oil replacement	MA-16
Engine removal	EM-70
Engine room cover	EM-11
ETC1 - Wiring diagram	EC-438
ETC2 - Wiring diagram	EC-446
ETC3 - Wiring diagram	EC-451
EVAP canister	EC-687
EVAP canister purge volume control solenoid valve	EC-339 , EC-538
EVAP canister vent control valve	EC-345 , EC-546 , EC-552
EVAP control system (small leak) diagnosis ..	EC-330

F

F/LID - Wiring diagram	BL-120 , BL-122
F/PUMP - Wiring diagram	EC-667
Fan switch	ATC-32
Final drive removal and installation	RFD-10
Finisher, interior - See Trim	EI-37
Finisher, trunk lid	EI-52
Floor trim	EI-47
Flow charts	GI-26
FLS1 - Wiring diagram	EC-385
FLS2 - Wiring diagram	EC-392
FLS3 - Wiring diagram	EC-569
Fluid temperature sensor (A/T)	AT-147
Fluorescent leak detector	ATC-155
FPCM - Wiring diagram	EC-515
Freeze frame data	EC-56
Front axle	FAX-4
Front brake solenoid valve	AT-180 , AT-185
Front bumper	EI-15
Front combination lamp removal and installation	LT-34
Front disc brake	BR-23
Front door	BL-102 , GW-51
Front Door Trim	EI-30
Front passenger air bag	SRS-44
Front seat	SE-188
Front seat belt	SB-3
Front seat belt pre-tensioner	SB-2 , SRS-3 , SRS-50
Front side air bag	SRS-45
Front suspension	FSU-5
Front wiper	WW-3
FTTS - Wiring diagram	EC-284 , EC-288
Fuel cut control (at no load high engine speed) .	EC-30
Fuel gauge	DI-7
Fuel injection system (Bank 1)	EC-265 , EC-274
Fuel injection system (Bank 2)	EC-265 , EC-274
Fuel injector and fuel tube	EM-31
Fuel level sensor ...	EC-384 , EC-389 , EC-391 , EC-568
Fuel lid opener, electric	BL-119
Fuel line inspection	FL-2 , MA-16
Fuel precautions	GI-5
Fuel pressure check	EC-49
Fuel pressure release	EC-48
Fuel pump	EC-666
Fuel pump and gauge	FL-3
Fuel pump control module	EC-513
Fuel pump dropping resistor	EC-513

ALPHABETICAL INDEX

Fuel system	FL-2	How to erase DTC for OBD system	EC-63
Fuel tank	FL-9	HSEAT - Wiring diagram	SE-134
Fuel tank temperature sensor	EC-282, EC-287	I	
FUELB1 - Wiring diagram	EC-267, EC-276	I/MIRR - Wiring diagram	GW-57
FUELB2 - Wiring diagram	EC-268, EC-277	IATS - Wiring diagram	EC-187, EC-207
Fuse	PG-55	ICC - Wiring diagram	ACS-47
Fuse and fusible link block	PG-68	Identification	ATC-12
Fuse and fusible link box	PG-69	Idle air volume learning	EC-46
Fuse block	PG-66, PG-67	Idle mixture ratio	EC-35
Fusible link	PG-55	Idle speed	EC-35, EC-82
G			
Generator	SC-9	Idle speed control (ISC)	EC-397, EC-399
Generator - See Alternator	SC-9	Ignition coil	EM-28, EC-641
Generic scan tool (GST)	EC-121	Ignition control system	EC-641
Glass	GW-11, GW-14, GW-51, GW-54	Ignition key hole illumination	LT-108
Glove box lamp	LT-145	Ignition timing	EC-35, EC-82
GPS antenna	AV-44	IGNSYS - Wiring diagram	EC-642
Grille - See Exterior	EI-19	ILL - Wiring diagram	LT-134
Ground distribution	PG-13	Illumination	LT-131
H			
H/AIM - Wiring diagram	LT-55	Illumination control	LT-145
H/LAMP - Wiring diagram	LT-11	In vehicle sensor	ATC-110, ATC-125
Handling precautions for plastics	BL-247	INF/D - Wring diagram	DI-86, DI-143
Harness connector	PG-56	INJECT - Wiring diagram	EC-654
Harness layout	PG-27	Injector	EC-653
Hazard warning lamp	LT-58	Input clutch solenoid valve	AT-171, AT-176
Headlamp	LT-6	Instrument panel	IP-10
Headlamp aiming control	LT-55	Instrument panel speaker	AV-37
Headlamp leveler - See Headlamp aiming control	LT-55	INT/L - Wiring diagram	LT-147
Headlamp removal and installation	LT-34	Intake air temperature sensor	EC-186, EC-205
Headlining - See Roof trim	EI-49	Intake door control linkage adjustment	ATC-79
Heated oxygen sensor 1 (bank 1)	EC-212, EC-221, EC-233, EC-463, EC-469	Intake door motor	ATC-77, ATC-131
Heated oxygen sensor 1 (bank 2)	EC-212, EC-221, EC-233, EC-463, EC-469	Intake manifold	EM-17
Heated oxygen sensor 1 heater (bank 1)	EC-155	Intake sensor	ATC-116, ATC-127
Heated oxygen sensor 1 heater (bank 2)	EC-155	Intake valve timing control (Bank 1)	EC-144
Heated oxygen sensor 2 (bank 1)	EC-242, EC-253, EC-476, EC-488	Intake valve timing control (Bank 2)	EC-144
Heated oxygen sensor 2 (bank 2)	EC-242, EC-253, EC-476, EC-488	Intake valve timing control position sensor (Bank 1)	EC-455
Heated oxygen sensor 2 heater (bank 1)	EC-163	Intake valve timing control position sensor (Bank 2)	EC-455
Heated oxygen sensor 2 heater (bank 2)	EC-163	Intake valve timing control solenoid valve (Bank 1)	EC-424
Heated seat	SE-128	Intake valve timing control solenoid valve (Bank 2)	EC-424
Heater and cooling unit (Heater core)	ATC-133	Intelligent cruise control (ICC) system	ACS-33
HFC134a (R134a) system precaution	ATC-4	Interior lamp	LT-81
HFC134a (R134a) system service procedure	ATC-141	IVCB1 - Wiring diagram	EC-147, EC-425
HFC134a (R134a) system service tools	ATC-13	IVCB2 - Wiring diagram	EC-149, EC-427
HFC134a system service equipment precaution	ATC-9	IVCSB1 - Wiring diagram	EC-456
High & low reverse clutch solenoid valve	AT-198, AT-203	IVCSB2 - Wiring diagram	EC-458
Hood	BL-13	IVIS (Infiniti vehicle immobilizer system) precautions ...	GI-3
Horn	WW-29	IVMS (In-Vehicle Multiplexing System)	LAN-4
HORN - Wiring diagram	WW-29	IVMS-System description	LAN-4
J			
Joint connector (J/C)	PG-58	Junction box (J/B)	PG-66, PG-67

A B C D E F G H I J K L IDX

ALPHABETICAL INDEX

K

- Keyless entry system - See Multi-remote control system
BL-52
Knock sensor (KS) [EC-303](#)
KS - Wiring diagram [EC-304](#)

L

- Laser beam aiming adjustment [ACS-39](#)
Latch (lower anchors and tether for children) system ...
SB-8
License lamp [LT-72](#)
Line pressure solenoid valve [AT-128](#)
Line pressure test (A/T) [AT-52](#)
Liquid gasket application [LU-2](#), [CO-2](#)
LOAD - Wiring diagram [EC-678](#)
Location of electrical units [PG-49](#)
Lock, door [BL-106](#), [BL-109](#)
Low coast brake solenoid valve [AT-207](#), [AT-212](#)
Low tire pressure warning system [WT-7](#)
Low tire pressure warning system - trouble diagnoses .
[WT-9](#)
Low tire pressure warning system - Wiring diagram
[WT-9](#)
Lubricant (R134a) A/C [ATC-5](#), [ATC-23](#)
Lubrication circuit (engine) [LU-4](#)
Lubrication oil A/C [ATC-159](#)
Lubrication-locks, hinges and hood latches [MA-28](#)

M

- MAFS - Wiring diagram [EC-174](#), [EC-181](#), [EC-420](#)
Magnet clutch [ATC-86](#), [ATC-145](#)
MAIN - Wiring diagram [EC-133](#)
Maintenance (engine) [MA-13](#)
Major overhaul (Final drive) [RFD-13](#)
Malfunction indicator lamp (MIL) [EC-65](#), [EC-410](#)
Mass air flow sensor (MAFS) [EC-171](#), [EC-179](#), [EC-418](#)
Master cylinder (brake) [BR-13](#)
METER - Wiring diagram [DI-15](#)
MIL - Wiring diagram [EC-411](#)
MIRR/L - Wiring diagram [LT-129](#)
MIRROR - Wiring diagram [GW-83](#)
Mirror, door [GW-114](#)
Mirror, out side [GW-114](#)
Misfire [EC-297](#)
Mode door control linkage adjustment [ATC-73](#)
Mode door motor [ATC-71](#), [ATC-136](#)
Molding - See Exterior [EI-23](#), [EI-25](#), [EI-26](#), [EI-27](#), [EI-28](#)
Mud guard - See Exterior [EI-22](#)
Multiplex communication [ATC-118](#)
Multiport fuel injection (MFI) system [EC-26](#)
Multiport fuel injection precautions [GI-6](#)
Multi-remote control system [BL-52](#)

N

- NATS - Wiring diagram [BL-191](#), [BL-205](#)

- NAVI - Wiring diagram [AV-58](#)
Navigation system [AV-43](#)
Nissan torque demand (NTD) control system [EC-29](#)
NVH troubleshooting (BR) [BR-5](#)
NVH troubleshooting (ST) [PS-5](#)
NVIS (Nissan vehicle immobilizer system) precautions
[GI-3](#)

O

- O2H1B1 - Wiring diagram [EC-157](#)
O2H1B2 - Wiring diagram [EC-159](#)
O2H2B1 - Wiring diagram [EC-165](#)
O2H2B2 - Wiring diagram [EC-167](#)
O2S1B1 - Wiring diagram ... [EC-214](#), [EC-224](#), [EC-236](#)
O2S1B2 - Wiring diagram ... [EC-216](#), [EC-226](#), [EC-238](#)
O2S2B1 - Wiring diagram .. [EC-244](#), [EC-256](#), [EC-479](#),
[EC-491](#)
O2S2B2 - Wiring diagram .. [EC-246](#), [EC-258](#), [EC-481](#),
[EC-493](#)
Oil filter [LU-8](#)
Oil pan (engine) [EM-25](#)
Oil pressure (engine) [LU-6](#)
Oil pump (engine) [LU-9](#)
Oil pump regulator valve (engine) [LU-9](#)
Oil seal replacement (engine) [EM-57](#)
Oil seal replacement (front of final drive) [RFD-6](#)
Oil seal replacement (side of final drive) [RFD-8](#)
On board diagnostic system [EC-51](#), [EC-66](#)
ORVR (On-board Refueling Vapor Recovery) . [EC-690](#)
Out side mirror [GW-114](#)
Overheat [EC-504](#)

P

- Park/Neutral position switch [EC-592](#)
Park/neutral position switch (A/T) [AT-106](#), [AT-236](#)
Parking brake control [PB-4](#)
Parking drum brake [PB-6](#)
Parking lamp [LT-72](#)
PCV (positive crankcase ventilation) [EC-696](#)
Personal lamp [LT-107](#)
PGC/V - Wiring diagram [EC-341](#), [EC-540](#)
PHASE - Wiring diagram [EC-316](#)
Piston pin inspection [EM-88](#)
Piston ring inspection [EM-89](#)
Piston to bore clearance [EM-93](#)
PNP/SW - Wiring diagram [EC-594](#)
POS - Wiring diagram [EC-308](#)
POWER - Wiring diagram [EC-415](#), [PG-3](#)
Power door lock [BL-20](#)
Power seat [SE-94](#)
Power steering fluid level [PS-6](#), [MA-26](#)
Power steering gear [PS-15](#)
Power steering hydraulic pressure [PS-23](#)
Power steering oil pump [PS-23](#)
Power steering pressure (PSP) sensor [EC-401](#)
Power supply routing [PG-2](#)
Power window [GW-16](#)

ALPHABETICAL INDEX

Power window main switch	LT-145	S	
PRE/SE - Wiring diagram	EC-354 , EC-361	S/SIG - Wiring diagram	EC-663
Precautions (General)	GI-4	SCS-ACTIVE - Wiring diagram	SCS-4
Precautions in repairing high strength steel	BL-250	SEAT - Wiring diagram	SE-99
Pressure switch 1	AT-185 , AT-220	Seat belt inspection	SB-5 , MA-28
Pressure switch 2	AT-212	Seat belt pre-tensioner disposal	SRS-52
Pressure switch 3	AT-176 , AT-224	Seat belt, front	SB-3
Pressure switch 5	AT-194 , AT-228	Seat belt, rear	SB-4
Pressure switch 6	AT-203 , AT-232	Seat, front	SE-188
Pressure test (A/T)	AT-52	Seat, rear	SE-197
Propeller shaft	PR-3	SEN/PW - Wiring diagram	EC-526
Propeller shaft on vehicle service	PR-3	Sheft warning system	BL-153
Propeller shaft vibration	PR-3	SHIFT - Wiring diagram	AT-285
PS/SEN - Wiring diagram	EC-402	Shift change signal	EC-600
PTT switch (Push To Talk switch)	DI-183	Shift lock system	AT-284
Push To Talk switch (PTT switch)	DI-183	Shift schedule	AT-60 , AT-358
R			
R/VIEW - Wiring diagram	DI-168	Shock absorber (adjustable) - Wiring diagram .	SCS-4
Radiator	CO-12	Shock absorber (adjustable, rear)	RSU-9
Radiator coolant temperature sensor	EC-430	Shock absorber (rear)	RSU-9
Radio - See Audio	AV-5	Side air bag (satellite) sensor	SRS-49
RCTS - Wiring diagram	EC-432	Side bearing preload diff.	RFD-17
Rear axle	RAX-5	Side curtain air bag	SRS-47
Rear bumper	EI-17	Side flange installation diff.	RFD-9
Rear combination lamp removal and installation	LT-80	Side trim	EI-37
Rear disc brake	BR-30	SMJ (super multiple junction)	PG-61
Rear door	BL-102 , GW-54	Spark plug	EM-29
Rear door trim	EI-30	Spark plug replacement	MA-18
Rear drum brake	PB-8	Specification value	EC-128
Rear parcel shelf finisher	EI-39	Speedometer	DI-7
Rear seat	SE-197	Spiral cable	SRS-42
Rear seat belt	SB-4	Spot lamp	LT-107
Rear suspension	RSU-5	SROOF - Wiring diagram	RF-11
Rear ventilator door motor	ATC-79	SRS - See Supplemental Restraint System	SRS-6
Rear view monitor	DI-165	SRS - Wiring diagram	SRS-12
Rear window	GW-14	SRS Trouble diagnoses	SRS-8
Rear window defogger	GW-59	Stabilizer bar (front)	FSU-14
Refrigerant connection precaution	ATC-6	Stabilizer bar (rear)	RSU-16
Refrigerant discharging evacuating charging	ATC-141	Stall test (A/T)	AT-51
Refrigerant general precaution	ATC-5	Standardized relay	PG-64
Refrigerant lines	ATC-141	START - Wiring diagram	SC-23
Refrigerant pressure sensor	EC-672 , ATC-91 , ATC-150	Start signal	EC-662
Refrigeration cycle	ATC-17	Starter	SC-22
Relay block	PG-68	Starting system	SC-22
REMOTE - Wiring diagram	AV-15	Steering gear and linkage inspection	MA-26
Remote keyless entry system	BL-52	Steering linkage	PS-15
Removal and installation (A/T)	AT-297	Steering wheel and column	PS-11
Reverse interlock door mirror	GW-79	Steering wheel turning force	PS-6
Revolution sensor (A/T)	AT-111	Step lamp	LT-109
Ring gear diff. inspection	RFD-12	STEP/L - Wiring diagram	LT-112
Rocker cover	EM-33	Stop lamp	LT-69
Roof trim	EI-49	Stop lamp switch	EC-602
Room lamp	LT-81 , LT-107	STOP/L - Wiring diagram	LT-69
Room lamp - See Interior lamp	LT-81	Strut (rear)	RSU-9
ROOM/L - Wiring diagram	LT-86	Sun roof, electric	RF-10
RP/SEN - Wiring diagram	EC-673	Sunload sensor	ATC-113 , ATC-126
Sunroof			
Sunshade			
Supplemental Restraint System			

A
B
C
D
E
F
G
H
I
J
K
L
IDX

ALPHABETICAL INDEX

Supplemental restraint system - Wiring diagram	EM-66
SRS-12	
Suspension	MA-27
Symbols and abbreviations	GI-9 , GI-22
Symptom matrix chart	EC-87
System readiness test (SRT) code	EC-57

T

Tachometer	DI-7
Tail lamp	LT-72
TAIL/L - Wiring diagram	LT-74
TCM circuit diagram	AT-50
TCM inspection table	AT-84
THEFT - Wiring diagram	BL-158
Thermostat	CO-24
Three way catalyst	EM-22
Three way catalyst function (Bank 1)	EC-320
Three way catalyst function (Bank 2)	EC-320
Three way catalyst precautions	GI-5
Throttle control motor relay	EC-444
Throttle position sensor (TPS)	EC-195 , EC-291 , EC-521 , EC-525 , EC-619 , EC-626
Throttle position switch	AT-236
Throttle valve closed position learning	EC-46
Tie-rod	PS-15
Tie-rod ball joints	PS-20
Timing chain	EM-35
Tire rotation	MA-24
TLID - Wiring diagram	BL-120 , BL-122
Tooth contact diff.	RFD-22
Top tether strap child restraint	SB-9
Torque converter installation	AT-299
Torque convertor clutch solenoid valve	AT-118 , AT-123
TPS1 - Wiring diagram	EC-293
TPS2 - Wiring diagram	EC-197
TPS3 - Wiring diagram	EC-621
TRANSMT - Wiring diagram	BL-221
Trim	EI-37
Trouble diagnoses	GI-10
Trunk lid	BL-112
Trunk lid finisher	EI-52
Trunk lid opener, electric	BL-55 , BL-119
Trunk lid trim	EI-52
Trunk room lamp	LT-147
Trunk room trim	EI-52
Turbine revolution sensor	AT-153
TURN - Wiring diagram	LT-61
Turn signal lamp	LT-58
Two trip detection logic	EC-51

V

VACS (voice activated control system)	DI-183
Vacuum cut valve	EC-583
Vacuum cut valve bypass valve	EC-577 , EC-583 , EC-687
Vacuum hose drawing (Engine control)	EC-24
Valve clearance	EM-52

Valve guide	EM-66
Valve lifter	EM-51
Valve seat	EM-68
Valve spring	EM-69
Vanity mirror lamp	LT-147
Variable induction air control system (VIAS)	EC-633
VDC -Wiring diagram	BRC-17
Vehicle security (theft warning) system	BL-153
Vehicle speed sensor (VSS)	EC-395 , EC-598
VEHSEC - Wiring diagram	BL-158
VENT/V - Wiring diagram ...	EC-347 , EC-548 , EC-555
VIAS - Wiring diagram	EC-635
Vice activated control system (VACS)	DI-183
VOICE - Wiring diagram	DI-186

W

W/ANT - Wiring diagram	AV-40
WARN - Wiring diagram	DI-37
Warning chime	DI-56
Warning lamps	DI-33
Water control valve	CO-24
Water pump	CO-22
Water temperature gauge	DI-7
Wheel alignment (rear)	RSU-6
Wheel balance	WT-5 , MA-23
Wheel hub (front)	FAX-4
Wheel hub (rear)	RAX-5
WINDOW - Wiring diagram	GW-19
Window antenna	AV-41
Window, door	GW-51 , GW-54
Window, rear	GW-14
Windshield	GW-11
Windshield wiper - See Front wiper	WW-3
WIPER - Wiring diagram	WW-6
Wiper and washer	WW-3
Wiper, front	WW-3
Wiring Diagram (Cell code) list	PG-45
Wiring diagrams	GI-14
WT-T/WARN - Wiring diagram	WT-9