

**SECTION IDX
ALPHABETICAL INDEX**

A

B

C

D

E

F

G

H

I

J

K

L

IDX

ALPHABETICAL INDEX

Numerics

2-4WD shift solenoid valve	TF-94 , TF-152 , TF-165
4WD - Wiring diagram	TF-24
4WD shift switch	TF-66
4WD solenoid valve	TF-90 , TF-152 , TF-165
4WD system description	TF-15
4WD system diagram	TF-19

A

A/C air flow	ATC-29
A/C compressor clutch removal and installation ..	ATC-180
A/C compressor mounting	ATC-179
A/C compressor precaution	ATC-11
A/C compressor special service tool	ATC-14
A/C control operation (auto A/C)	ATC-26
A/C diagnostic work flow (auto A/C)	ATC-132
A/C evaporator	ATC-186
A/C HFC134a (R134a) system identification	ATC-7
A/C HFC134a (R134a) system precaution	ATC-5
A/C HFC134a (R134a) system service procedure	ATC-175
A/C HFC134a (R134a) system service tools ...	ATC-14
A/C HFC134a system service equipment precaution ...	ATC-11
A/C lubricant (R134a)	ATC-22
A/C lubrication oil	ATC-22
A/C operational check	ATC-57 , ATC-60
A/C self-diagnoses (auto A/C)	ATC-55 , ATC-132
A/C service data specification	ATC-193
A/C trouble diagnoses (auto A/C)	ATC-33
A/C, A - Wiring diagram	ATC-43
A/T fluid checking	AT-13 , AT-50 , MA-22
A/T fluid cooler cleaning	AT-13
A/T fluid replacement	AT-13 , MA-24
A/T fluid temperature sensor	AT-126
A/T IND - Wiring diagram	DI-40
A/T indicator	DI-40
A/T shift lock system	AT-222
A/T trouble diagnoses	AT-41
A/T Wiring diagram AT - CAN	AT-96
A/T Wiring diagram AT - FTS	AT-127
A/T Wiring diagram AT - MAIN	AT-168
A/T Wiring diagram AT - NONDTC	AT-177
A/T Wiring diagram AT - PNP/SW	AT-105
A/T Wiring diagram AT - STSIG	AT-100
A/T Wiring diagram AT - VSS A/T	AT-110
ABS - Wiring diagram	BRC-16
ABS (anti-lock brake system)	BRC-7
Accelerator control system	ACC-2
Accelerator pedal position (APP) sensor .	EC-591 , EC-597 , EC-611
Accelerator pedal released position learning	EC-90
AF1B1-Wiring diagram	EC-461 , EC-470 , EC-479 , EC-489 , EC-500 , EC-510 , EC-522
AF1B2-Wiring diagram	EC-463 , EC-472 , EC-481 , EC-491 , EC-502 , EC-512 , EC-524

AF1HB1-Wiring diagram	EC-387
AF1HB2-Wiring diagram	EC-389
Aiming adjustment	LT-30 , LT-78
Air bag	SRS-3
Air cleaner and air duct	EM-14
Air cleaner filter replacement	MA-16
Air conditioner cut control	EC-28
Air flow meter - See Mass air flow sensor	EC-174 , EC-183

Air fuel ratio sensor 1 ..	EC-459 , EC-468 , EC-477 , EC-487 , EC-497 , EC-507 , EC-519
----------------------------	------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

Air fuel ratio sensor 1 heater	EC-386
Air mix. door motor	ATC-70
Ambient sensor	ATC-137 , ATC-148
Angular tightening application	EM-3
APPS1 - Wiring diagram	EC-593
APPS2 - Wiring diagram	EC-599
APPS3 - Wiring diagram	EC-613
ASC/BS - Wiring diagram	EC-571
ASC/SW - Wiring diagram	EC-554
ASCBOF - Wiring diagram	EC-658
ASCD	EC-29
ASCD (automatic speed control device)	ACS-3
ASCD brake switch	EC-569 , EC-657
ASCD indicator lamp	EC-664
ASCD steering switch	EC-552
ASCIND - Wiring diagram	EC-665
ATP switch	TF-107 , TF-110 , TF-115
AUDIO - Wiring diagram	AV-10
AUT/DP - Wiring diagram	SE-20
Auto air conditioner - Wiring diagram	ATC-43
Auto anti-dazzling inside mirror	GW-75 , GW-76
Autolamp	LT-47
Automatic amplifier	ATC-61
Automatic drive positioner	SE-11
Automatic transmission number	GI-48
AV and NAVI control unit	AV-63
AV communication line	AV-87

B

Back door	BL-99
Back door trim	EI-32
Back sonar	DI-58
BACK/L - Wiring diagram	LT-106
Back-up lamp	LT-106
Ball joint (front)	FSU-15
Basic inspection	EC-72
Battery	SC-4
Battery/Starting/Charging System Tester	SC-6 , SC-12 , SC-19
BCM (Body control module)	BCS-3
Block heater	EM-73
Blower motor	ATC-93 , ATC-152
Body alignment	BL-172
Body component parts	BL-161
Body construction	BL-171
Body exterior paint color	BL-160
Body mounting	BL-159

ALPHABETICAL INDEX

Body repair	BL-160		Condenser	ATC-185
Body sealing	BL-168		Connecting rod	EM-91
Brake booster	BR-16		Connecting rod bearing clearance	EM-91
Brake fluid level	MA-28		Connecting rod bushing clearance	EM-91
Brake hydraulic line	BR-11		Console box - See Instrument panel	IP-10
Brake inspection	MA-28		CONSULT for VDC	BRC-28
Brake lines and cables inspection	MA-28		CONSULT general information	GI-37
Brake master cylinder	BR-14		CONSULT-II for engine	EC-126
Brake switch	EC-569 , EC-586		Control units (terminal arrangement)	PG-71
BRK/SW - Wiring diagram	EC-587		Control valve (A/T)	AT-35
Bulb specifications	LT-170		Control valve (Transfer)	TF-152 , TF-165
Bumper, front	EI-13		Controller Area Network (CAN)	BRC-10 , SE-17 , LAN-16 , LAN-50 , LAN-90 , LAN-126
Bumper, rear	EI-15		Converter housing installation	AT-246 , AT-249
C				
Camshaft	EM-43		COOL/F - Wiring diagram	EC-443
Camshaft inspection	EM-46		Coolant mixture ratio	MA-12
Camshaft position sensor (PHASE)	EC-291		Coolant replacement	MA-13
CAN - Wiring diagram	EC-164 , LAN-18 , LAN-52 , LAN-92 , LAN-128		Cooling circuit (engine)	CO-8
CAN (Controller Area Network)	BRC-10 , SE-17 , LAN-16 , LAN-50 , LAN-90 , LAN-126		Cooling fan	CO-15
CAN communication	EC-31 , EC-163 , AT-95 , TF-20 , TF-113 , BRC-10 , SE-17 , LAN-16 , LAN-50 , LAN-90 , LAN-126		Cooling fan control	EC-440
Canister-See EVAP canister	EC-35		Cooling fan motor	EC-449
Center case (Transfer)	TF-152 , TF-165		Cooling unit (A/C evaporator)	ATC-156 , ATC-186
CHARGE - Wiring diagram	SC-18		Corrosion protection	BL-165
Charging system	SC-17		Crankcase ventilation system - See Positive crankcase ventilation	EC-45
Chassis and body maintenance	MA-21		Crankshaft	EM-74
Chassis and body maintenanceSchedule 1	MA-8		Crankshaft position sensor (POS)	EC-284
Chassis and body maintenanceSchedule 2	MA-10		Crash zone sensor	SRS-56
CHIME - Wiring diagram	DI-44		CVT shift lock system - Wiring diagram	AT-223
Circuit breaker	PG-66		Cylinder block	EM-73
Clock	DI-69		Cylinder block boring	EM-94
CLOCK - Wiring diagram	DI-69			
Closed loop control	EC-25			
Closed loop control (Bank 1)	EC-437			
Closed loop control (Bank 2)	EC-437			
Clutch drum (Transfer)	TF-152 , TF-165			
Clutch pressure switch (Transfer)	TF-152 , TF-165			
Coil spring (front)	FSU-10			
Collision diagnosis	SRS-61			
Combination lamp, front, removal and installation ..	LT-32			
Combination lamp, rear, removal and installation ..	LT-122			
Combination meter	DI-5			
Combination switch	LT-97			
COMBSW - Wiring diagram	LT-97			
COMM - Wiring diagram	AV-87			
COMPAS - Wiring diagram	DI-27			
Compass	DI-26			
Component Location (auto A/C)	ATC-39			
Compressor clutch removal and installation ..	ATC-180			
Compressor mounting	ATC-179			
Compressor precaution	ATC-11			
Compressor special service tool	ATC-14			

A
B
C
D
E
F
G
H
I
J
K
L
IDX

ALPHABETICAL INDEX

Drive chain (Transfer)	TF-147 , TF-174
Drive pinion diff. inspection	RFD-13
Drive pinion height	RFD-18
Drive shaft (rear)	RAX-7
Driver air bag	SRS-46
DTC work support	EC-136
DTRL - Wiring diagram	LT-37
Duct and grilles	ATC-170
DVD Player	AV-60
 E	
ECM input/output signal	EC-117 , EC-141
ECM power supply	EC-157 , EC-393
ECM relay	EC-157
ECM/PW - Wiring diagram	EC-394
ECTS - Wiring diagram	EC-197
Electric sunroof	RF-10
Electric throttle control actuator	EC-397 , EC-399
Electrical load signal circuit	EC-648
Electrical units location	PG-63
Electronic ignition (EI) system	EC-26
Engine control circuit diagram	EC-115
Engine control component parts location	EC-108
Engine control module (ECM)	EC-383
Engine control system diagram	EC-23
Engine coolant	CO-10
Engine coolant temperature sensor (ECTS) ...	EC-195 , EC-208
Engine fail-safe system	EC-103
Engine oil	LU-7
Engine oil filter replacement	MA-17
Engine oil precautions	GI-7
Engine oil replacement	MA-17
Engine removal	EM-69
Engine room cover	EM-11
Engine serial number	GI-48
ETC1 - Wiring diagram	EC-400
ETC2 - Wiring diagram	EC-407
ETC3 - Wiring diagram	EC-411
EVAP canister	EC-35
EVAP canister purge volume control solenoid valve	EC-318 , EC-531
EVAP canister vent control valve	EC-325 , EC-539
EVAP control system (small leak) diagnosis ..	EC-309 , EC-349 , EC-357
EVAP control system pressure sensor	EC-332 , EC-335 , EC-341
EVAP control system purge flow monitoring diagnosis	
EC-304	
EVAP vapor lines inspection	MA-20
Evaporative emission (EVAP) system	EC-32
Evaporator	ATC-186
Exhaust manifold	EM-19
Exhaust system	EX-3
Exhaust system inspection	EX-3
Expansion valve	ATC-188

 F	
F/FOG - Wiring diagram	LT-71
F/PUMP - Wiring diagram	EC-638
Final drive pre-inspection	FFD-14 , RFD-13
Final drive removal and installation ...	FFD-11 , RFD-10
Flow charts	GI-27
Fluid temperature sensor (A/T)	AT-126
Fluids	MA-11
Fluorescent leak detector	ATC-189
Fog lamp, front	LT-69
Foot lamp	LT-130
Freeze frame data	EC-54 , EC-130
Front brake solenoid valve	AT-144 , AT-146
Front bumper	EI-13
Front case (Transfer)	TF-147 , TF-174
Front combination lamp removal and installation	LT-32
Front door	BL-128 , BL-131 , GW-68
Front Door Trim	EI-32
Front drive shaft (Transfer)	TF-147 , TF-174
Front fog lamp	LT-69
Front passenger air bag	SRS-51
Front seat	SE-97
Front seat belt	SB-3
Front seat belt pre-tensioner	SRS-3 , SRS-58
Front washer	WW-4
Front wiper	WW-4
FTTS - Wiring diagram	EC-255 , EC-260
Fuel cut control (at no load high engine speed)	EC-27
Fuel filter replacement	FL-5
Fuel gauge	DI-5
Fuel injection system (Bank 1)	EC-236 , EC-245
Fuel injection system (Bank 2)	EC-236 , EC-245
Fuel injector and fuel tube	EM-29
Fuel level sensor	EC-366 , EC-368 , EC-370
Fuel line inspection	FL-3
Fuel pressure check	EC-93
Fuel pressure release	EC-93
Fuel pump	EC-637
Fuel pump and gauge	FL-5
Fuel system	FL-3
Fuel tank	FL-9
Fuel tank temperature sensor	EC-253 , EC-259
Fuel tank vacuum relief valve	EC-35
FUEL1B1 - Wiring diagram	EC-238 , EC-247
FUEL2B2 - Wiring diagram	EC-239 , EC-248
Fuse	PG-66 , PG-77
Fuse and fusible link box	PG-77
Fuse block	PG-76
Fusible link	PG-66 , PG-77

G

Garage jack and safety stand	GI-40
Gauges	DI-5
Generator	SC-17
Generic scan tool (GST)	EC-139
Glass	GW-11 , GW-68 , GW-71
Glove box lamp	LT-153

ALPHABETICAL INDEX

GPS antenna	AV-62		Illumination	LT-152	
Grease	MA-11	A	In vehicle sensor	ATC-140, ATC-149	
Ground distribution	PG-29		INJECT - Wiring diagram	EC-632	
H				Injector	EC-631
H/AIM - Wiring diagram	LT-66		Input clutch solenoid valve	AT-140, AT-142	
Handling precautions for plastics	BL-187	B	Instrument panel	IP-10	
Harness connector	PG-67		Instrument panel speaker	AV-46	
Harness layout	PG-39	C	Intake air temperature sensor	EC-191, EC-211	
Hazard warning lamp	LT-80		Intake door control linkage adjustment ..	ATC-85, ATC-88	
Headlamp aiming control	LT-66	D	Intake door motor	ATC-83, ATC-164	
Headlamp leveler - See Headlamp aiming control .	LT-66		Intake manifold	EM-15	
Headlamp removal and installation	LT-32		Intake sensor	ATC-145, ATC-151	
Heated oxygen sensor 2 (bank 1)	EC-216, EC-225, EC-415, EC-426	E	Integrated homelink transmitter - See Homelink universal transceiver	BL-156	
Heated oxygen sensor 2 (bank 2)	EC-216, EC-225, EC-415, EC-426		Intelligent cruise control (ICC) system	ACS-6	
Heated oxygen sensor 2 heater (bank 1)	EC-166	F	Interior	EI-35	
Heated oxygen sensor 2 heater (bank 2)	EC-166		Interior lamp	LT-129	
Heated seat	SE-90		Interior lamp on-off control	LT-130	
Heater and cooling unit (Heater core) .	ATC-156, ATC-160	G	Internal gear (Transfer)	TF-147, TF-174	
Heater unit (heater core)	ATC-156, ATC-160		IPDM (Intelligent power distribution module engine room)	PG-17	
Height (Dimensions)	GI-49	H	IVIS (Infiniti vehicle immobilizer system)	BL-137	
HFC134a (R134a) system identification	ATC-7		IVIS (Infiniti vehicle immobilizer system) precautions ...	GI-3	
HFC134a (R134a) system precaution	ATC-5	I			
HFC134a (R134a) system service procedure	ATC-175	J	J		
HFC134a (R134a) system service tools	ATC-14		Jacking points	GI-40	
HFC134a system service equipment precaution	ATC-11	K	Junction box (J/B)	PG-76	
High & low reverse clutch solenoid valve .	AT-152, AT-154				
Homelink universal transceiver	BL-156	L	K		
Horn	WW-58		Key illumination	LT-130	
HORN - Wiring diagram	WW-58		KEYLES - Wiring diagram	BL-49	
How to erase DTC for OBD system	EC-62		Knock sensor (KS)	EC-279	
HSEAT - Wiring diagram	SE-92		KS - Wiring diagram	EC-280	
I					
I/MIRR - Wiring diagram	GW-75		Length (Dimensions)	GI-49	
IATS - Wiring diagram	EC-192		License lamp	LT-108	
ICC - Wiring diagram	ACS-20		Lifting points	GI-41	
ICC/BS - Wiring diagram	EC-562		Line pressure solenoid valve	AT-119	
ICC/SW - Wiring diagram	EC-547		Line pressure switch (Transfer)	TF-152, TF-165	
ICCBOF - Wiring diagram	EC-650		Line pressure test (A/T)	AT-51	
Identification plate	GI-47		Location of electrical units	PG-63	
Idle air volume learning	EC-91		Low coast brake solenoid valve	AT-156, AT-158	
Idle mixture ratio	EC-79		Low tire pressure warning system	WT-8	
Idle speed	EC-72, EC-77		Low tire pressure warning system - trouble diagnoses	WT-11	
Idle speed control (ISC)	EC-374, EC-376		Low tire pressure warning system - Wiring diagram	WT-11	
Ignition coil	EM-26, EC-619		Lubricant (R134a) A/C	ATC-22	
Ignition control system	EC-619		Lubricants	MA-11	
Ignition key hole illumination	LT-129		Lubrication circuit (engine)	LU-5	
Ignition timing	EC-72, EC-77		Lubrication oil A/C	ATC-22	
IGNSYS - Wiring diagram	EC-620		Lubrication-locks, hinges and hood latches	MA-31	
ILL - Wiring diagram	LT-158				

IDX

ALPHABETICAL INDEX

M

MAFS - Wiring diagram	EC-177 , EC-185
Magnet clutch	ATC-115 , ATC-180
MAIN - Wiring diagram	EC-157
Main oil pump (Transfer)	TF-152 , TF-165
Mainshaft (Transfer)	TF-152 , TF-165
Maintenance (engine)Schedule 1	MA-7
Maintenance (engine)Schedule 2	MA-9
Major overhaul (Final drive)	FFD-13 , RFD-14
Major overhaul (Transfer)	TF-144
Malfunction indicator lamp (MIL)	EC-64
Map lamp	LT-130
Mass air flow sensor (MAFS)	EC-174 , EC-183
Meter	DI-5
METER - Wiring diagram	DI-10
MIL data link connectors circuit	EC-667
MIL/DL - Wiring diagram	EC-667
Misfire	EC-271
Mode door control linkage adjustment	ATC-66
Mode door motor	ATC-64 , ATC-165
Model variation	GI-46
Multiport fuel injection (MFI) system	EC-24
Multiport fuel injection precautions	GI-6
Multi-remote control system - See Remote keyless entry system	BL-44

N

NATS - Wiring diagram	BL-140
NAVI - Wiring diagram	AV-79
NAVI Control Unit	AV-157
Neutral-4LO switch	TF-62
NVH troubleshooting (AX)	FAX-4
NVH troubleshooting (EM)	EM-9
NVH troubleshooting (Final drive)	RFD-5
NVH troubleshooting (Propeller shaft)	PR-3
NVH troubleshooting (RAX)	RAX-4
NVH troubleshooting (RSU)	RSU-5
NVH troubleshooting (ST)	PS-5
NVH troubleshooting (Transfer)	TF-10
NVH troubleshooting (WT)NVH troubleshooting (WT)	WT-4
NVIS (Nissan vehicle immobilizer system) precautions	GI-3

O

O2H2B1 - Wiring diagram	EC-168
O2H2B2 - Wiring diagram	EC-170
O2S2B1 - Wiring diagram	EC-218 , EC-228 , EC-418 , EC-429
O2S2B2 - Wiring diagram	EC-220 , EC-230 , EC-420 , EC-431
Oil cooler (engine)	LU-11
Oil filter	LU-10
Oil filter (Transfer)	TF-141
Oil pan (engine)	EM-22
Oil pressure (engine)	LU-7

Oil pressure relief valve (engine)	LU-5
Oil pump (engine)	LU-13
Oil seal replacement (engine)	EM-55
Oil seal replacement (front of final drive)	FFD-7 , RFD-6
Oil seal replacement (side of final drive)	FFD-9 , RFD-8
On board diagnostic system	EC-48
ORVR (On-board Refueling Vapor Recovery)	EC-39
Overheat	EC-440

P

P/SCKT - Wiring diagram	WW-56
Pantograph jack	GI-40
Park/Neutral position switch	EC-581
Park/neutral position switch (A/T)	AT-104
Parking brake control	PB-4
PCV (positive crankcase ventilation)	EC-45
Periodic maintenance	MA-7
Personal lamp	LT-130
PGC/V - Wiring diagram	EC-320 , EC-533
PHASE - Wiring diagram	EC-291
Pinion bearing preload diff.	RFD-22
Piston pin inspection	EM-89
Piston ring inspection	EM-90
Piston to bore clearance	EM-94
Planetary carrier (Transfer)	TF-147 , TF-174
PNP/SW - Wiring diagram	EC-583
POS - Wiring diagram	EC-286
POWER - Wiring diagram	PG-6
Power door lock	BL-16
Power seat	SE-89
Power steering fluid level	MA-29
Power steering gear	PS-15
Power steering oil pump	PS-26
Power steering pressure (PSP) sensor	EC-378
Power steering system bleeding	PS-6
Power supply routing	PG-4
Power window	GW-15
PRE/SE - Wiring diagram	EC-337 , EC-343
Precautions (General)	GI-4
Precautions in repairing high strength steel	BL-190
Pressure switch 1	AT-146 , AT-160
Pressure switch 2	AT-158
Pressure switch 3	AT-142 , AT-162
Pressure switch 5	AT-150 , AT-164
Pressure switch 6	AT-154 , AT-166
Pressure test (A/T)	AT-51
Propeller shaft	PR-4 , PR-8
Propeller shaft inspection	MA-25
Propeller shaft on vehicle service	PR-8
Propeller shaft vibration	PR-4 , PR-8
PS/SEN - Wiring diagram	EC-379

R

R/VIEW - Wiring diagram	DI-74
Radiator	CO-12
Rear Audio Remote Control Unit	AV-47
Rear axle	RAX-5

ALPHABETICAL INDEX

Rear bumper	EI-15	
Rear case (Transfer)	TF-146 , TF-179	A
Rear combination lamp removal and installation ...	LT-122	
Rear cover packing replacement diff.	RFD-24	B
Rear door	BL-128 , GW-71	
Rear seat	SE-104	C
Rear seat belt	SB-6	
Rear suspension	RSU-25	D
Rear view monitor	DI-71	
Rear washer	WW-35	E
Rear window defogger	GW-77	
Rear wiper	WW-35	F
Refrigerant connection precaution	ATC-7	
Refrigerant discharging evacuating charging	ATC-175	G
Refrigerant general precaution	ATC-6	H
Refrigerant lines	ATC-175 , ATC-183 , ATC-184	I
Refrigerant pressure sensor	EC-643 , ATC-185	J
Relay box	PG-78	K
Remote keyless entry system	BL-44	L
Removal and installation (A/T)	AT-244 , AT-247	
Removal and installation (Transfer)	TF-143	
Revolution sensor (A/T)	AT-108	
Ring gear diff. inspection	RFD-13	
Road wheel size	GI-49	
Rocker cover	EM-33	
Room lamp	LT-129	
Room lamp - See Interior lamp	LT-129	
ROOM/L - Wiring diagram	LT-135	
RP/SEN - Wiring diagram	EC-644	
SROOF - Wiring diagram	RF-13	
SRS - See Supplemental Restraint System	SRS-5	
SRS - Wiring diagram	SRS-12	
SRS Trouble diagnoses	SRS-8	
Stabilizer bar (front)	FSU-12	
Stabilizer bar (rear)	RSU-41	
Stall test (A/T)	AT-50	
Standardized relay	PG-72	
START - Wiring diagram	SC-11	
Starting system	SC-10	
Steering gear, linkage and transfer gear inspection	MA-29	
Steering linkage	PS-15	
Steering wheel and column	PS-7	
Step lamp	LT-130	
Stop lamp	LT-103	
Stop lamp switch	EC-569 , EC-586 , EC-657	
STOP/L - Wiring diagram	LT-104	
Strut (front)	FSU-10	
Sub-oil pump (Transfer)	TF-152 , TF-165	
Sun gear (Transfer)	TF-147 , TF-174	
Sun roof, electric	RF-10	
Sunload sensor	ATC-143	
Sunroof	RF-23	
Supplemental Restraint System	SRS-5	
Supplemental restraint system - Wiring diagram .	SRS-12	
Symbols and abbreviations	GI-10 , GI-22	
Symptom matrix chart	EC-104	
System readiness test (SRT) code	EC-54	

S

SAE J1979 - Service \$01 - 09	EC-48
Seat belt inspection	SB-10 , MA-32
Seat belt pre-tensioner	SRS-58
Seat belt, front	SB-3
Seat belt, rear	SB-6
Seat, front	SE-97
Seat, rear	SE-104
Self-diagnosis (Transfer)	TF-50
SEN/PW - Wiring diagram	EC-455
SHIFT - Wiring diagram	AT-223
Shift control (Transfer)	TF-147 , TF-174
Shift lock system	AT-222
Shock absorber (front)	FSU-10
Shock absorber (rear)	RSU-34
Side air bag (satellite) sensor	SRS-57
Side bearing preload diff.	RFD-19
Side curtain air bag	SRS-54
Side trim	EI-35
SMJ (super multiple junction)	PG-74
SONAR - Wiring diagram	DI-61
Spare tire size	GI-49
Spark plug	EM-27
Spark plug replacement	MA-18
Specification value	EC-146
Speedometer	DI-5
Spiral cable	SRS-48

T

Tachometer	DI-5
Tail lamp	LT-108
TAIL/L - Wiring diagram	LT-110
TCM circuit diagram	AT-49
TCM inspection table	AT-82
TCS - Wiring diagram	BRC-16
TCS (traction control system)	BRC-7
TCS component parts and connector location	BRC-14
TCS wheel sensors	BRC-14
Theft warning system - See Vehicle security (Theft warning) system	BL-75
Thermometer	DI-26
Three way catalyst	EM-19
Three way catalyst function (Bank 1)	EC-298
Three way catalyst function (Bank 2)	EC-298
Three way catalyst precautions	GI-5
Throttle control motor	EC-410
Throttle control motor relay	EC-405
Throttle position sensor (TPS) ...	EC-201 , EC-264 , EC-450 , EC-452 , EC-604
Throttle valve closed position learning	EC-90
Tie-rod	PS-15
Timing chain	EM-35
Tire rotation	MA-28
Tire size	GI-49
Tooth contact diff.	RFD-20

IDX

ALPHABETICAL INDEX

Torque converter installation	AT-245 , AT-246 , AT-248 , AT-249	
Torque convertor clutch solenoid valve	...	AT-115 , AT-117
Tow truck towing	GI-42
Towing point	GI-43
TPS1 - Wiring diagram	EC-266
TPS2 - Wiring diagram	EC-203
TPS3 - Wiring diagram	EC-606
Traction control system - Wiring diagram	BRC-16
Transfer control device	TF-76 , TF-80 , TF-138
Transfer control unit inspection table	TF-36
Transfer dropping resistor	TF-90
Transfer fluid temperature sensor	TF-104 , TF-152 , TF-165	
Transfer motor	TF-102 , TF-140
Transfer motor relay	TF-102
Transfer oil replacement	MA-24
Transfer serial number	GI-48
Transmission serial number	GI-48
Tread-FR&RR (Dimensions)	GI-49
Trim	EI-35
TRNSCV - Wiring diagram	BL-140 , BL-156
Trouble diagnoses	GI-11
Turbine revolution sensor	AT-131
TURN - Wiring diagram	LT-83
Turn signal lamp	LT-80
Two trip detection logic	EC-48
Two-pole lift	GI-41
Water temperature gauge	DI-5
Wheel alignment (front)	FSU-6
Wheel alignment (rear)	RSU-27
Wheel bearing (front)	FAX-5
Wheel bearing (rear)	RAX-5
Wheel hub (rear)	RAX-5
Wheel size	GI-49
Wheelbase (Dimensions)	GI-49
Width (Dimensions)	GI-49
WINDOW - Wiring diagram	GW-22
Window, door	GW-68 , GW-71
Windshield	GW-11
WIP/R - Wiring diagram	WW-39
WIPER - Wiring diagram	WW-11
Wiper, front	WW-4
Wiper, rear	WW-35
Wiring Diagram (Cell code) list	PG-60
Wiring diagrams	GI-15
WT-T/WARN - Wiring diagram	WT-11

V

Vacuum hose (brake system)	BR-19
Vacuum hose drawing (Engine control)	EC-114
Valve clearance	EM-51
Valve guide	EM-65
Vanity mirror lamp	LT-129
VDC (vehicle dynamics control)	BRC-7
VDC -Wiring diagram	BRC-16
Vehicle identification number	GI-47
Vehicle recovery (freeing a stuck vehicle)	GI-43
Vehicle security (theft warning) system	BL-75
Vehicle speed sensor (VSS)	EC-372
VEHSEC - Wiring diagram	BL-79
VENT/V - Wiring diagram	EC-327 , EC-541
Video Monitor	AV-60
VIN registration	EC-90
Viscosity number (SAE)	MA-12

W

W/ANT - Wiring diagram	AV-49
Wait detection switch	TF-69
WARN - Wiring diagram	DI-31
Warning chime	DI-42
Warning lamps	DI-30
Washer, front	WW-4
Washer, rear	WW-35
Water pump	CO-17