



## SUPER MULTIPLE JUNCTION (SMJ)

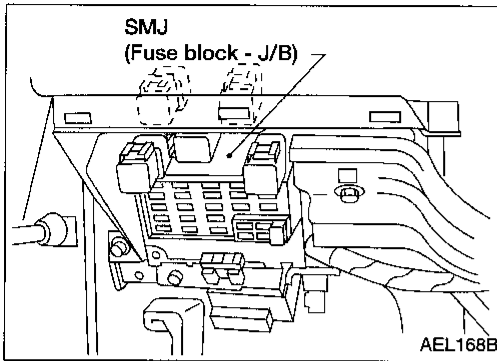


### INSTALLATION

To install SMJ, tighten bolts until orange "fulltight" mark appears and then retighten to specified torque as required.

: 3 - 5 N·m  
(0.3 - 0.5 kg-m, 26 - 43 in-lb)

### CAUTION:



Do not overtighten bolts, otherwise, they may be damaged.

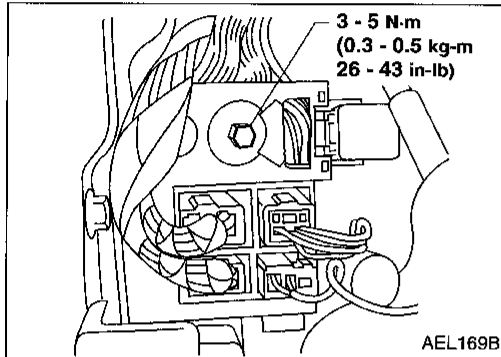

# SUPER MULTIPLE JUNCTION (SMJ)

## Terminal Arrangement

MAIN HARNESS

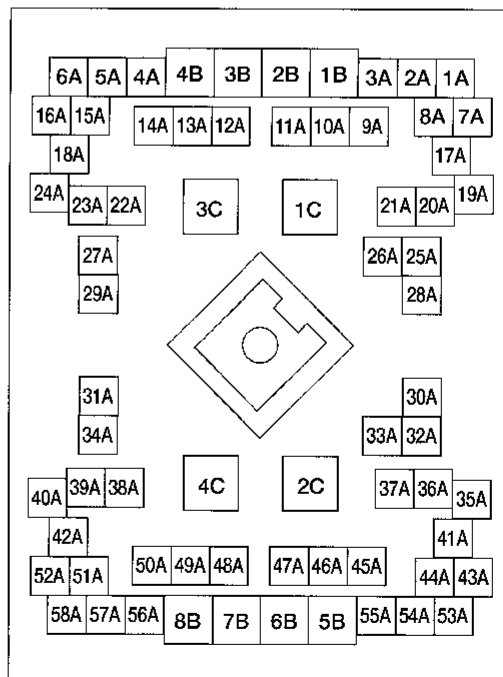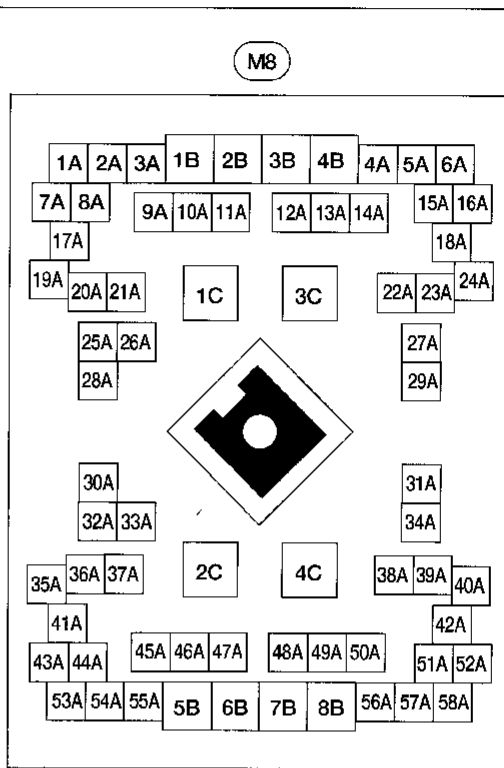


E65


ENGINE ROOM HARNESS

# FUSE BLOCK — Junction Box (J/B)

## Terminal Arrangement

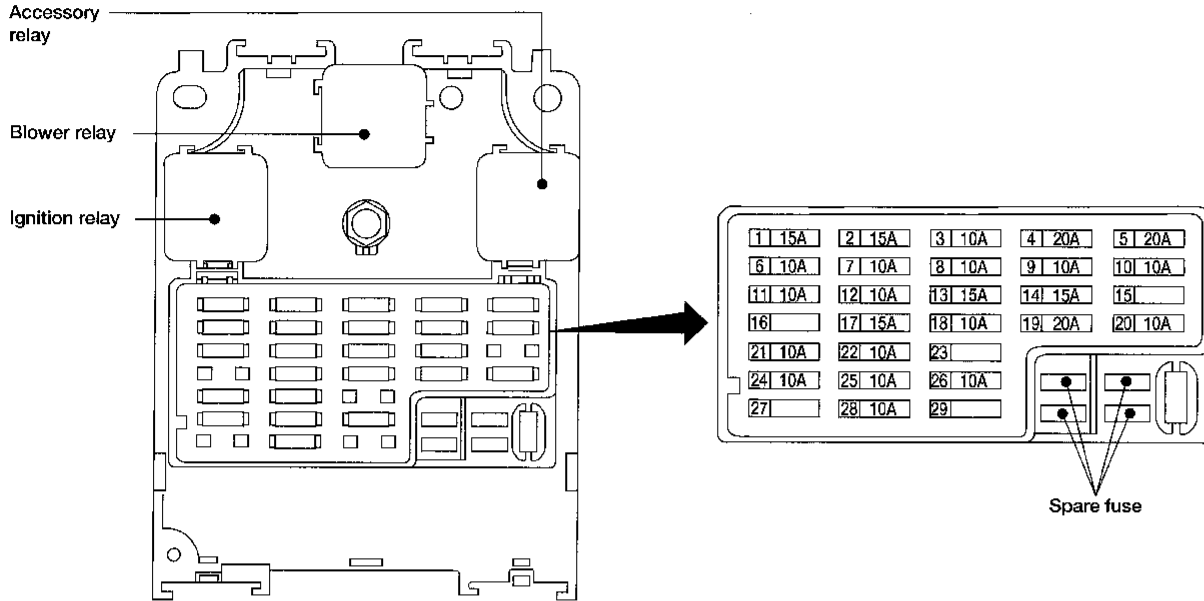


To main harness

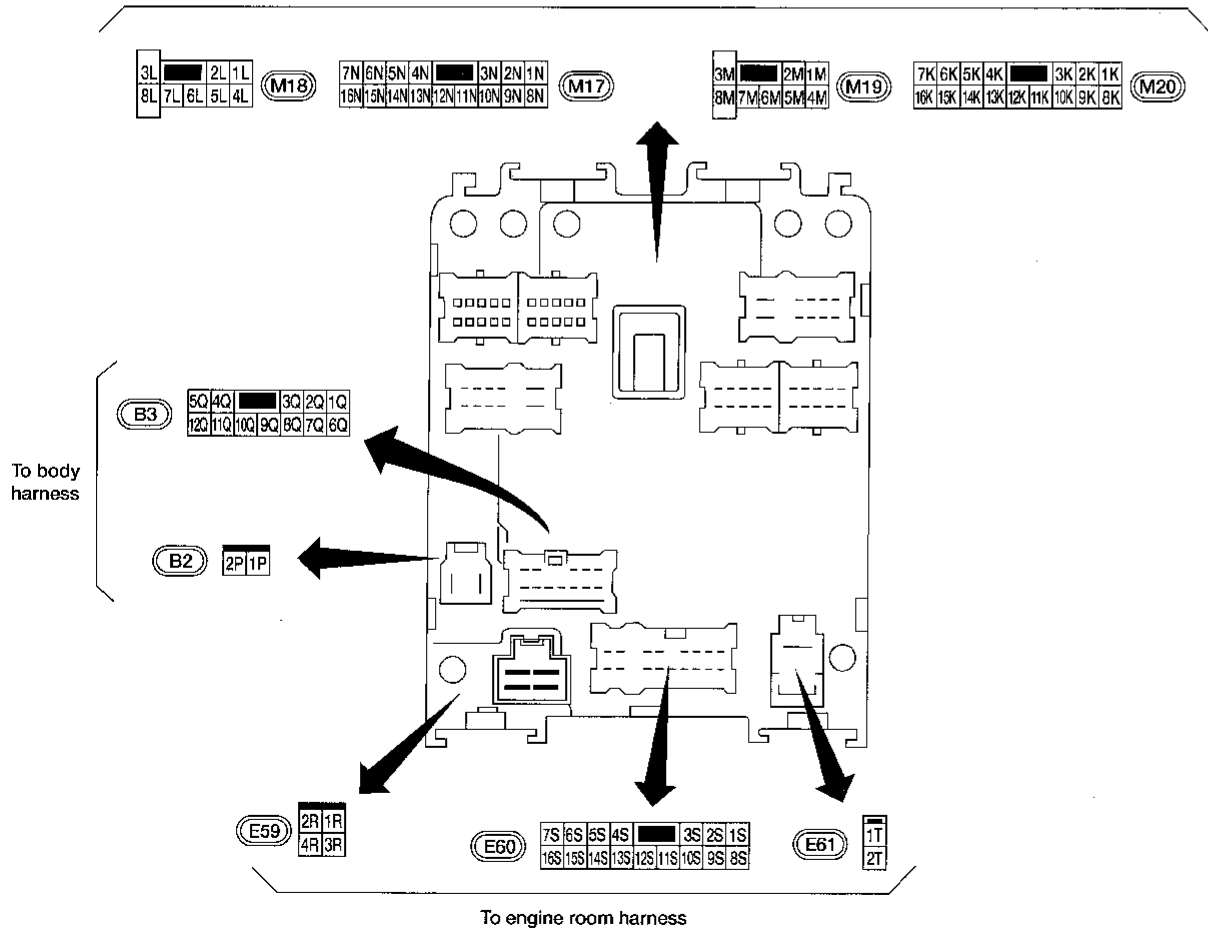

# FUSE AND FUSIBLE LINK BOX

## Terminal Arrangement




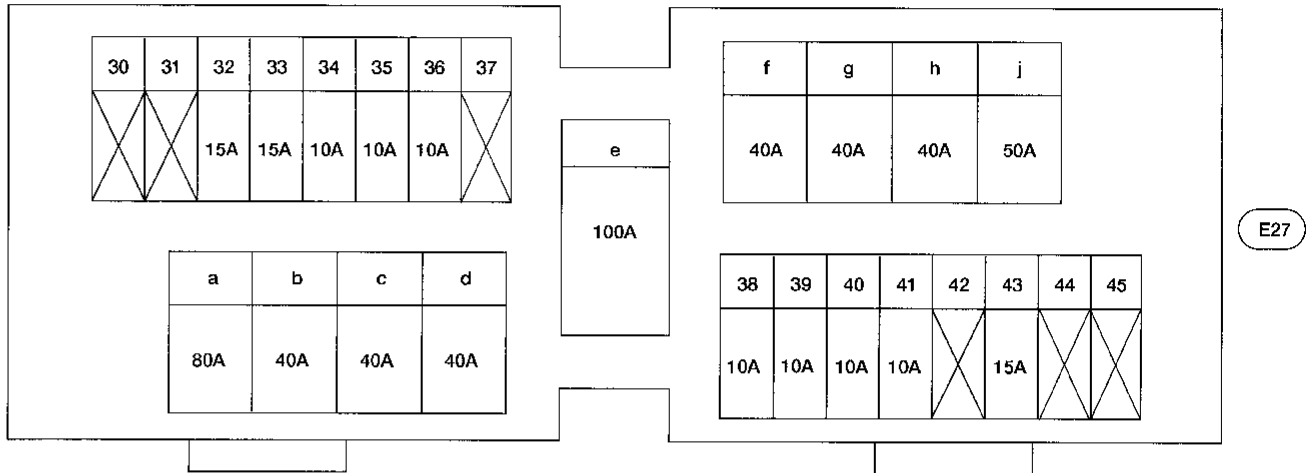


No 30 - 45: FUSE

a - j: FUSIBLE LINK

# ELECTRICAL UNITS

## Terminal Arrangement

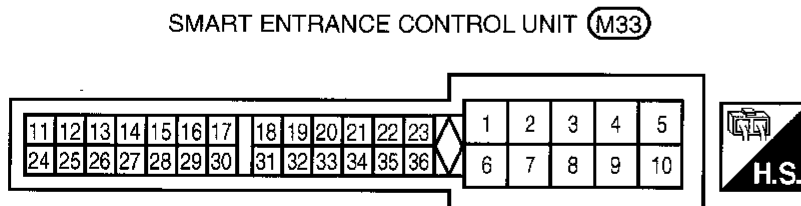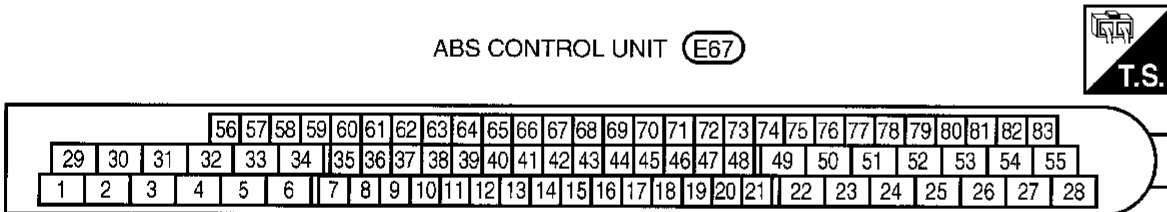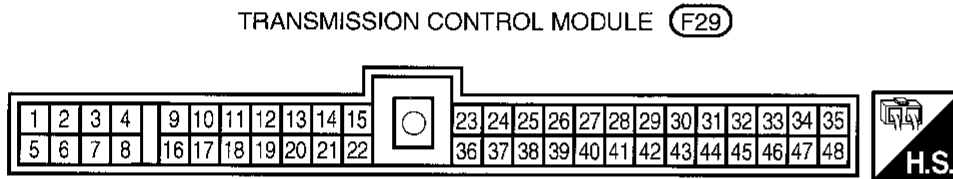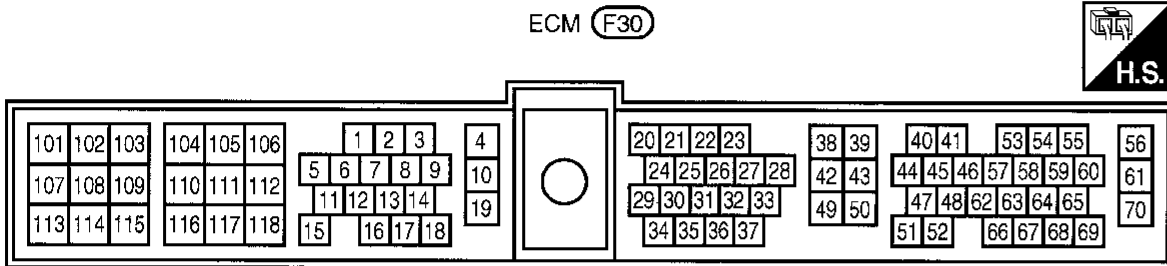

# JOINT CONNECTOR (J/C)

---

## Terminal Arrangement

