

SECTION **HRN**
HORN

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

CONTENTS

PRECAUTION	2	HORN	3
PRECAUTIONS	2	Wiring Diagram	3
Supplemental Restraint System (SRS) AIR BA G and SEAT BELT PRE-TENSIONER	2	ON-VEHICLE REPAIR	7
COMPONENT DIAGNOSIS	3	HORN	7
		Removal and Installation	7

HRN

PRECAUTIONS

< PRECAUTION >

PRECAUTION

PRECAUTIONS

Supplemental Restraint System (SRS) AIR BAG and SEAT BELT PRE-TENSIONER

INFOID:000000004216538

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

HORN

< COMPONENT DIAGNOSIS >

COMPONENT DIAGNOSIS


HORN

Wiring Diagram

INFOID:000000004216539

HORN

— : DATA LINE

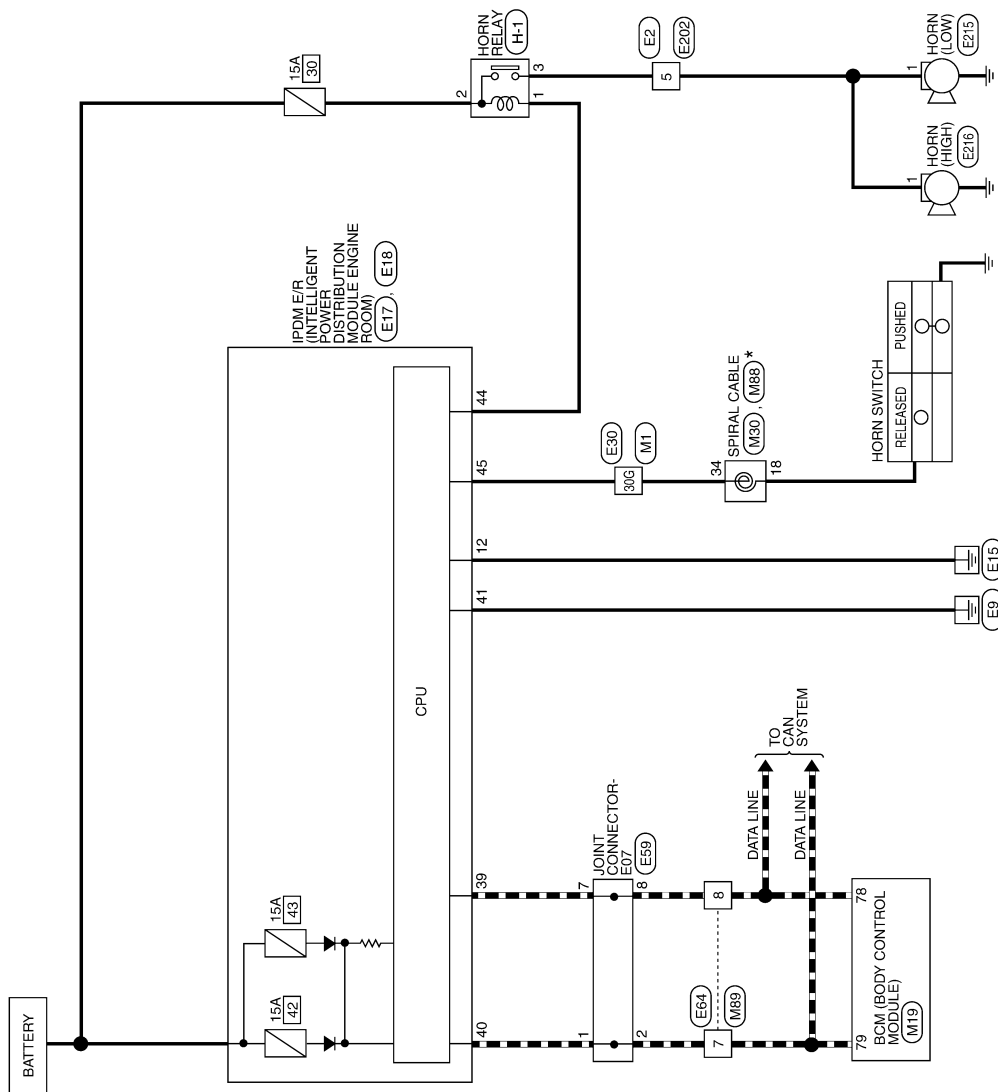


* : THIS CONNECTOR IS NOT SHOWN IN "HARNES LAYOUT" OF PG SECTION.

ABLWA0250GE

A
B
C
D
E
F
G
H
I
J
K
HRN
M
N
O
P

HORN CONNECTORS

Connector No.	M1
Connector Name	WIRE TO WIRE
Connector Color	WHITE

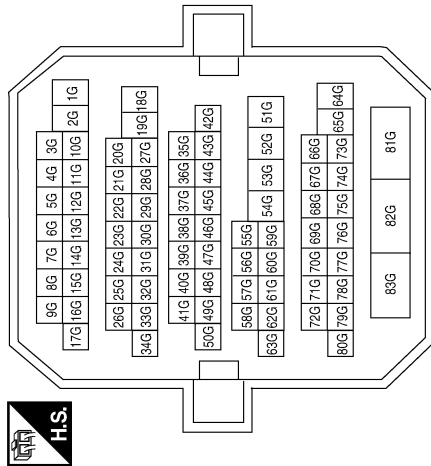


Terminal No.	Color of Wire	Signal Name
30G	L/W	-

Connector No.	M88
Connector Name	SPIRAL CABLE
Connector Color	GRAY




Terminal No.	Color of Wire	Signal Name
18	G	HORN

Connector No.	M19
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK

 


Terminal No.	Color of Wire	Signal Name
78	P	CAN-L
79	L	CAN-H

Connector No.	M30
Connector Name	SPIRAL CABLE
Connector Color	GRAY

 


Terminal No.	Color of Wire	Signal Name
34	L/O	HORN

Connector No.	E2
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
5	G	-


Connector No.	M89
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
7	L	-
8	P	-

HORN

< COMPONENT DIAGNOSIS >

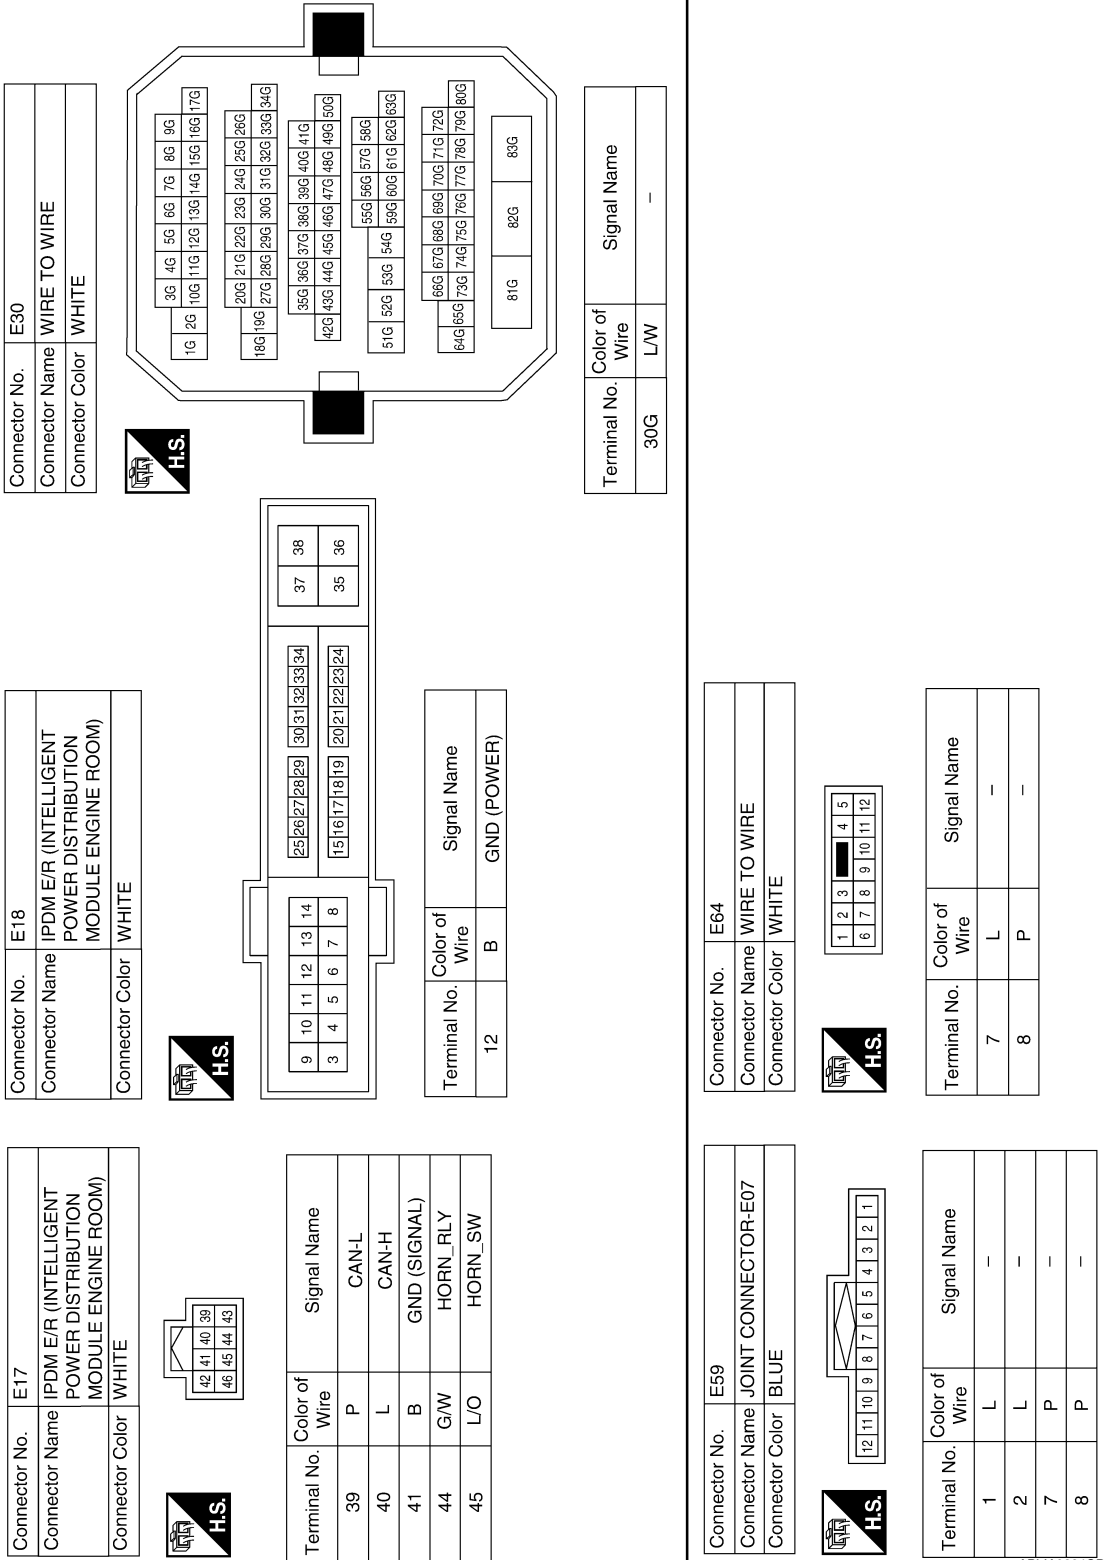

ABLIA0894GB

A B C D E F G H I J K L M N O P

HRN

HORN

< COMPONENT DIAGNOSIS >

Connector No.	E216
Connector Name	HORN (HIGH)
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
1	G	-

Connector No.	E215
Connector Name	HORN (LOW)
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	G	-


Connector No.	E202
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
5	G	-

Terminal No.	Color of Wire	Signal Name
1	G/W	-
2	G/B	-
3	G	-

Connector No.	H-1
Connector Name	HORN RELAY
Connector Color	-

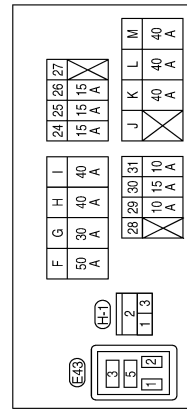

ABLIA0895GB

HORN

< ON-VEHICLE REPAIR >

ON-VEHICLE REPAIR


HORN

Removal and Installation

INFOID:000000004216540

REMOVAL

1. Position aside the front fender protector LH. Refer to [EXT-18. "Removal and Installation"](#).
2. Disconnect the horn connectors (A).
3. Remove the horn bracket bolt (B), and remove horn (2) and horn (1).

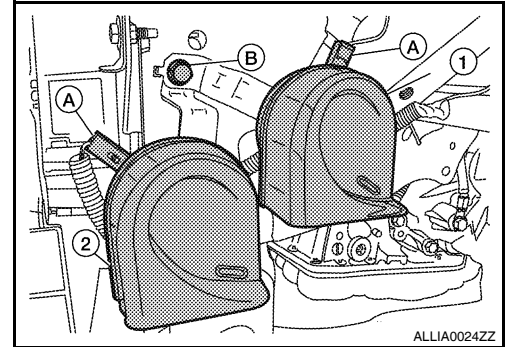

INSTALLATION

Installation is in the reverse order of removal.

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

HRN