

SECTION **PWO**  
POWER OUTLET

## CONTENTS

|                                                                                 |   |
|---------------------------------------------------------------------------------|---|
| <b>POWER SOCKET</b>                                                             |   |
| <b>PRECAUTION</b>                                                               | 2 |
| <b>PRECAUTIONS</b>                                                              | 2 |
| Supplemental Restraint System (SRS) "AIR B<br>AG" and "SEAT BELT PRE-TENSIONER" | 2 |
| Necessary for Steering Wheel Rotation After Bat-<br>tery Disconnect             | 2 |
| <b>COMPONENT DIAGNOSIS</b>                                                      | 3 |
| <b>POWER SOCKET</b>                                                             | 3 |
| Wiring Diagram                                                                  | 3 |
| <b>ON-VEHICLE REPAIR</b>                                                        | 5 |
| <b>POWER SOCKET</b>                                                             | 5 |
| Removal and Installation                                                        | 5 |

A  
B  
C  
D  
E

F  
G  
H

I  
J  
K  
L

PWO

N  
O  
P

&lt; PRECAUTION &gt;

## PRECAUTION

### PRECAUTIONS

#### Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:0000000004218945

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

#### **WARNING:**

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

#### Necessary for Steering Wheel Rotation After Battery Disconnect

INFOID:0000000004485305

#### **NOTE:**

- Before removing and installing any control units, first turn the push-button ignition switch to the LOCK position, then disconnect both 12-volt battery cables.
- After finishing work, confirm that all control unit connectors are connected properly, then re-connect both 12-volt battery cables.
- Always use CONSULT-III to perform self-diagnosis as a part of each function inspection after finishing work. If a DTC is detected, perform trouble diagnosis according to self-diagnosis results.

This vehicle is equipped with a push-button ignition switch and a steering lock unit.

If the 12-volt battery is disconnected or discharged, the steering wheel will lock and cannot be turned.

If turning the steering wheel is required with the 12-volt battery disconnected or discharged, follow the procedure below before starting the repair operation.

#### OPERATION PROCEDURE

1. Connect both 12-volt battery cables.

#### **NOTE:**

Supply power using jumper cables if 12-volt battery is discharged.

2. Carry the Intelligent Key or insert it to the key slot and turn the push-button ignition switch to ACC position. (At this time, the steering lock will be released.)
3. Disconnect both 12-volt battery cables. The steering lock will remain released with both 12-volt battery cables disconnected and the steering wheel can be turned.
4. Perform the necessary repair operation.
5. When the repair work is completed, re-connect both 12-volt battery cables. With the brake pedal released, turn the push-button ignition switch from ACC position to ON position, then to LOCK position. (The steering wheel will lock when the push-button ignition switch is turned to LOCK position.)
6. Perform self-diagnosis check of all control units using CONSULT-III.

# POWER SOCKET

< COMPONENT DIAGNOSIS >

[POWER SOCKET]


## COMPONENT DIAGNOSIS POWER SOCKET

### Wiring Diagram

INFOID:000000004218946

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L

POWER SOCKET

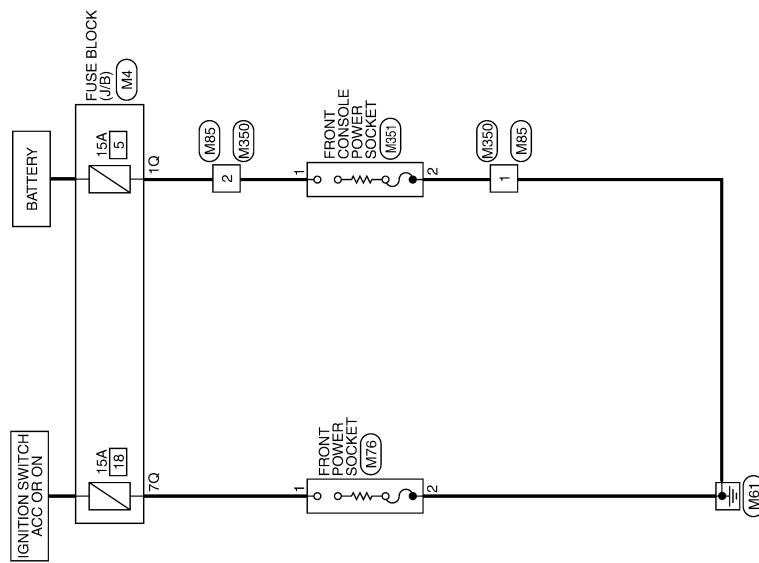

PWO

N  
O  
P

ALMWA0010Ge


# POWER SOCKET

< COMPONENT DIAGNOSIS >

[POWER SOCKET]

## POWER SOCKET CONNECTORS

|                 |                  |
|-----------------|------------------|
| Connector No.   | M4               |
| Connector Name  | FUSE BLOCK (J/B) |
| Connector Color | WHITE            |

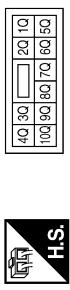

|                 |                    |
|-----------------|--------------------|
| Connector No.   | M76                |
| Connector Name  | FRONT POWER SOCKET |
| Connector Color | BLACK              |



|                 |              |
|-----------------|--------------|
| Connector No.   | M85          |
| Connector Name  | WIRE TO WIRE |
| Connector Color | WHITE        |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 1Q           | R/W           | —           |
| 7Q           | R/B           | —           |

| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 1            | R/B           | +           |
| 2            | B             | GND         |

| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 1            | B             | —           |
| 2            | R/W           | —           |

|                 |              |
|-----------------|--------------|
| Connector No.   | M350         |
| Connector Name  | WIRE TO WIRE |
| Connector Color | WHITE        |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 1            | R/W           | —           |
| 2            | B             | —           |

|                 |                            |
|-----------------|----------------------------|
| Connector No.   | M351                       |
| Connector Name  | FRONT CONSOLE POWER SOCKET |
| Connector Color | BLACK                      |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 1            | R/W           | —           |
| 2            | B             | —           |

| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 1            | B             | —           |
| 2            | R/W           | —           |

ALMIA0067GB

# ON-VEHICLE REPAIR

## POWER SOCKET


### Removal and Installation

INFOID:000000004218947

#### FRONT POWER SOCKET

##### Removal

1. Remove the instrument panel storage bin or CD changer finisher (if equipped). Refer to [IP-11, "Exploded View"](#).
2. Remove the inner socket (1) from the ring (2) while pressing the hooks (B) on the ring (2) out from the square holes (A).
3. Remove ring (2) from the instrument panel storage bin or CD changer finisher (if equipped) while pressing in the pawls.

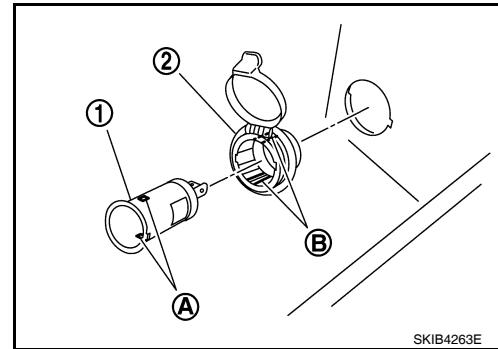

##### Installation

Installation is in the reverse order of removal.


##### CAUTION:

**Align the notches of the inner socket and ring with the instrument panel storage bin or CD changer finisher (if equipped) when installing.**

#### FRONT CONSOLE POWER SOCKET

##### Removal

1. Disconnect the 12 volt battery negative terminal.
2. Remove the center console box. Refer to [IP-17, "Exploded View"](#).
3. Remove the inner socket (1) from the ring (2) while pressing the hooks (B) on the ring (2) out from the square holes (A).
4. Remove ring (2) from the center console box while pressing in the pawls.

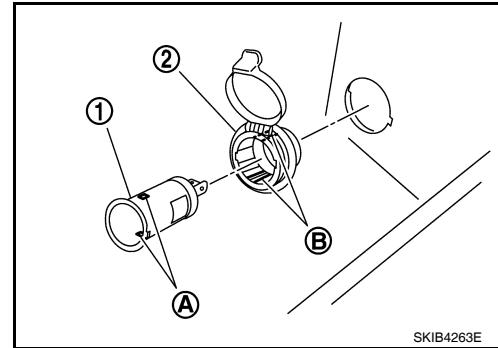

##### Installation

Installation is in the reverse order of removal.

##### CAUTION:

**Align the notches of the inner socket and ring with the center console box when installing.**