


FUSE BLOCK — JUNCTION BOX (J/B)

Terminal Arrangement

Terminal Arrangement

NJEL0493

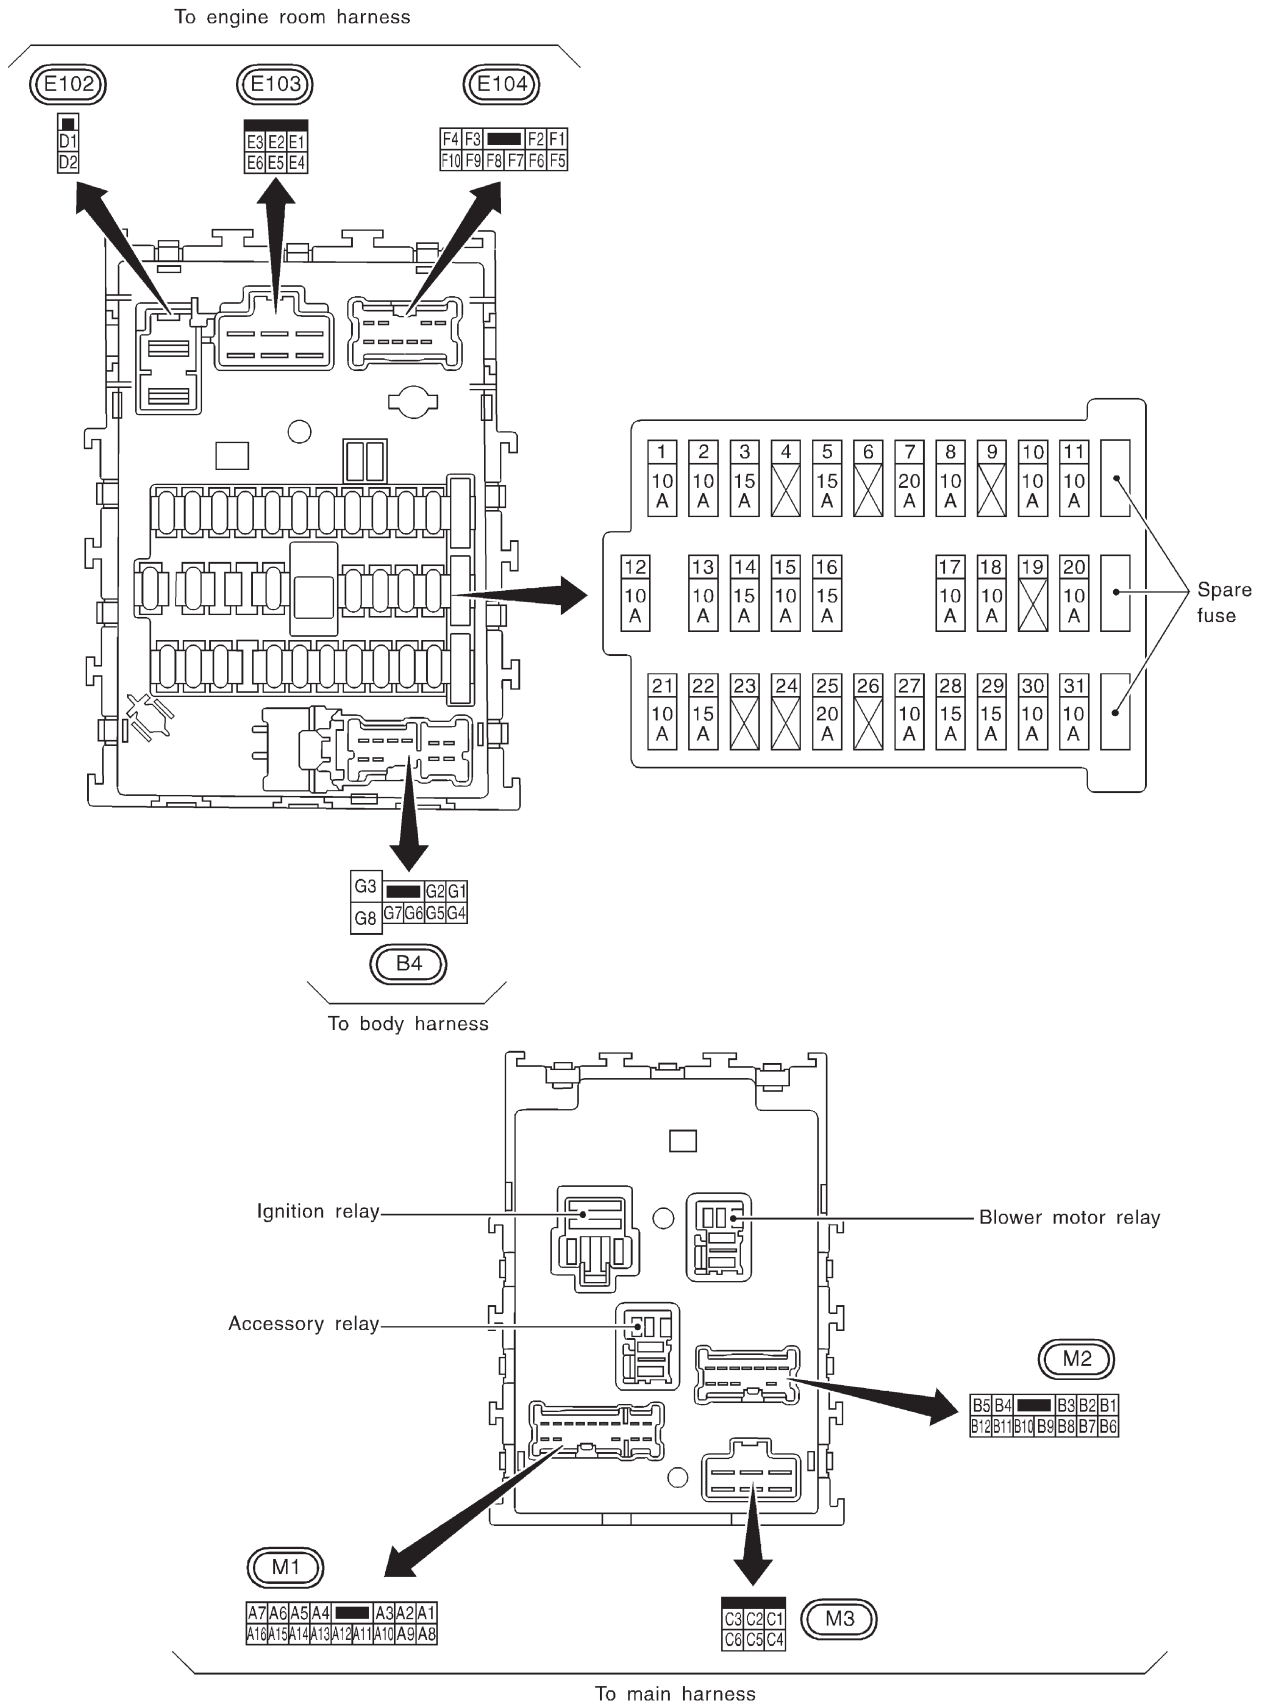


MEL938L

FUSE AND FUSIBLE LINK BOX

Terminal Arrangement

Terminal Arrangement


NJEL0494

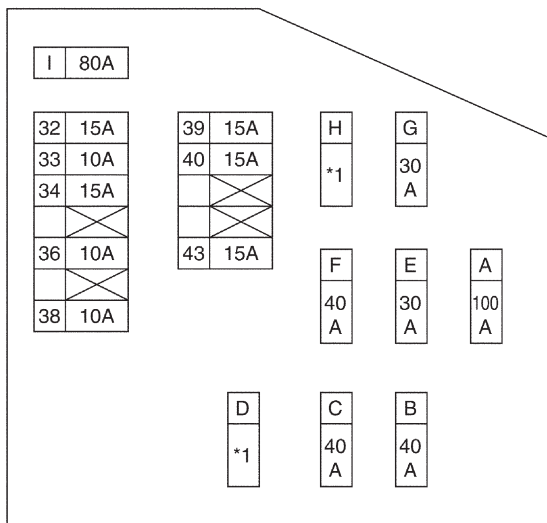

(QG engine models with daytime light system)


E59
FRONT ←

*1 ... 30A (For Europe)
40A (For Australia)

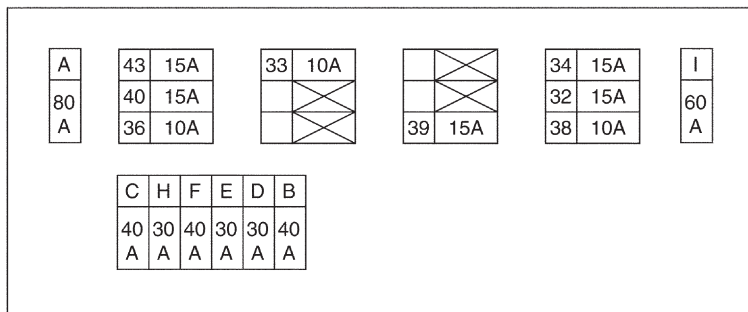

(QG engine models for Europe without daytime light system)

E59
FRONT ←

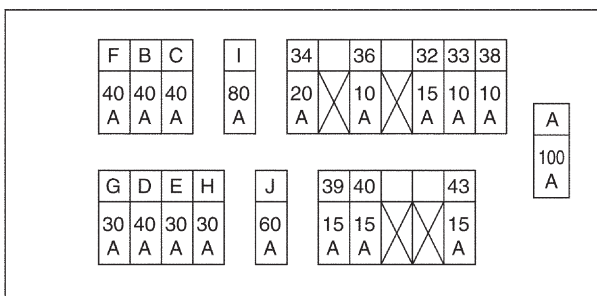

(YD engine)

E59
FRONT ←


ELECTRICAL UNITS

Terminal Arrangement


Terminal Arrangement

NJEL0495


ECM (F56) (QG engine)

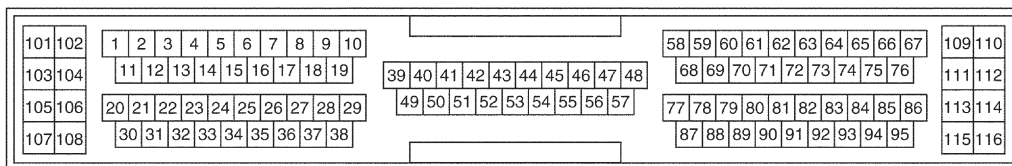


ECM (YD engine)

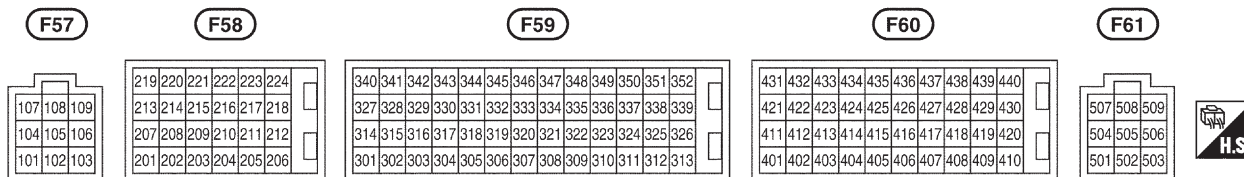


TCM (TRANSMISSION CONTROL MODULE)

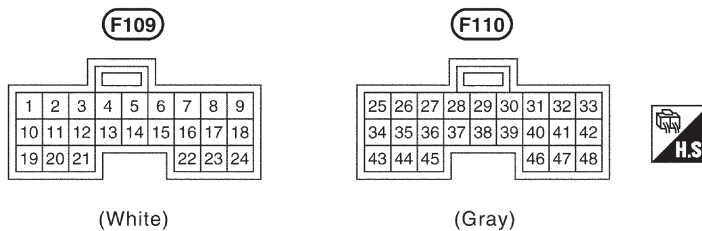


ABS ACTUATOR AND ELECTRIC UNIT (E1)

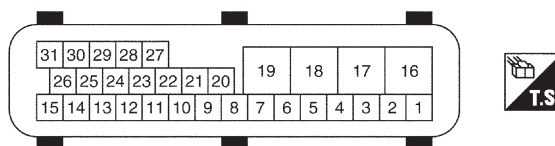

TIME CONTROL UNIT

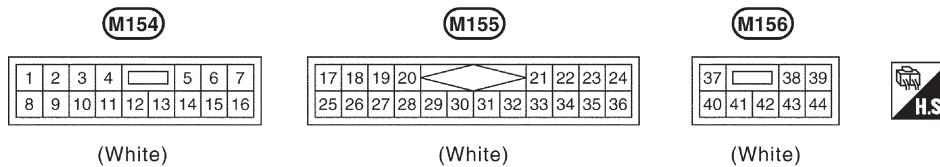

NAVI CONTROL UNIT

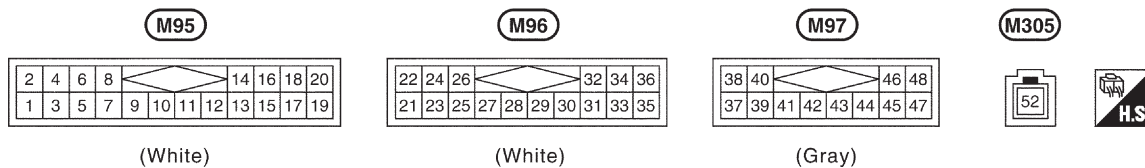


JOINT CONNECTOR (J/C)

Terminal Arrangement

Terminal Arrangement

 NJEL0496



1	1	1	1	1	1	2	2	2	2
3	3	3	3	3	3	4	4	4	4

 J/C-6 **F114**