


FUSE BLOCK — JUNCTION BOX (J/B)

Terminal Arrangement

Terminal Arrangement

NLEL0493

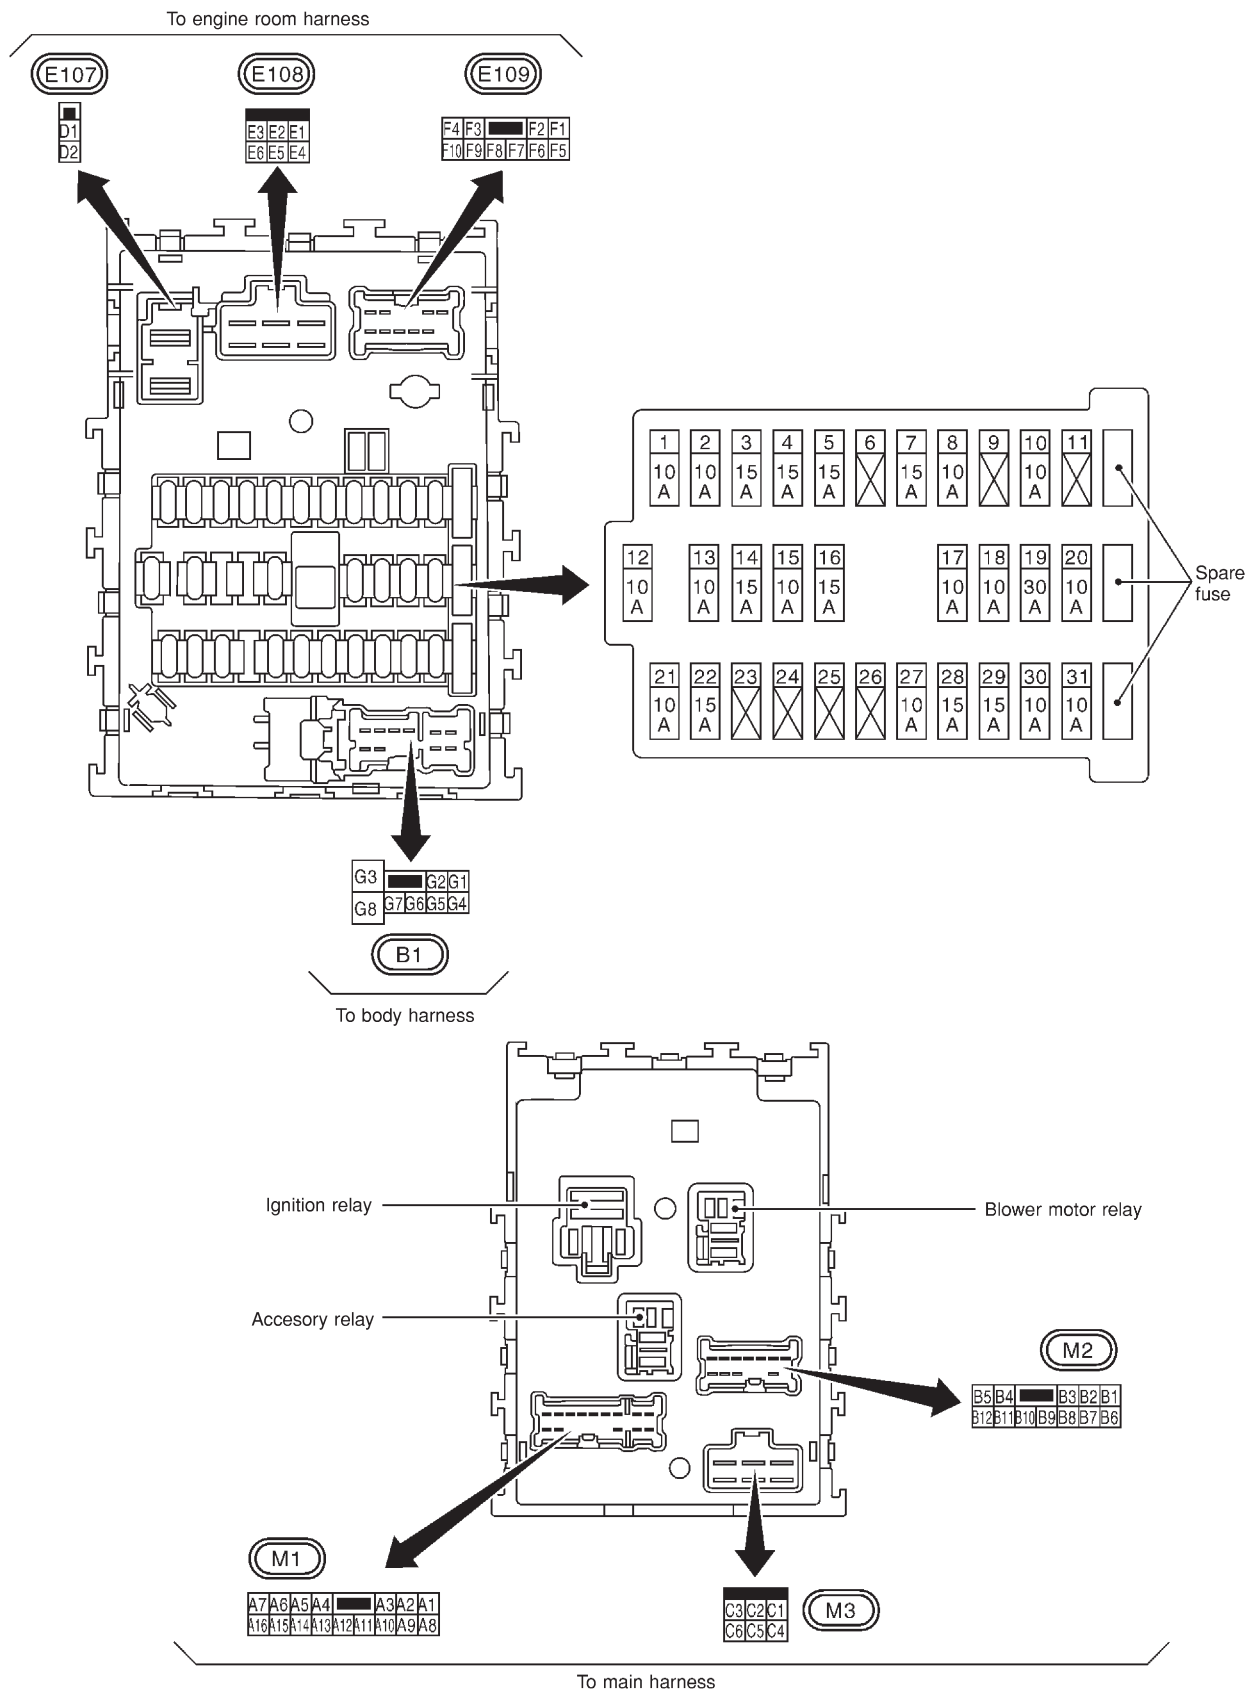




YEL996B

FUSE AND FUSIBLE LINK BOX

Terminal Arrangement

Terminal Arrangement MODELS WITH FUSE AND FUSIBLE LINK BOX E43

NLEL0494
NLEL0494S01

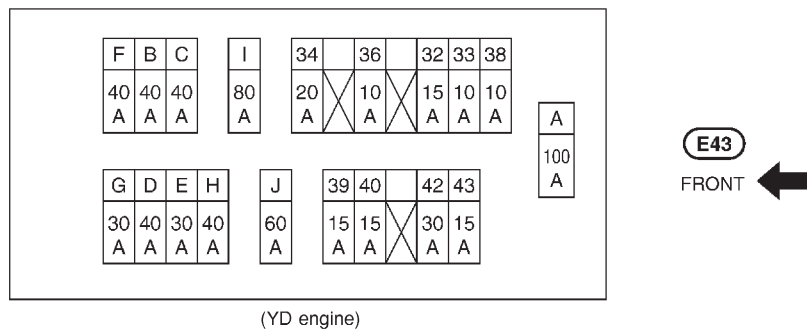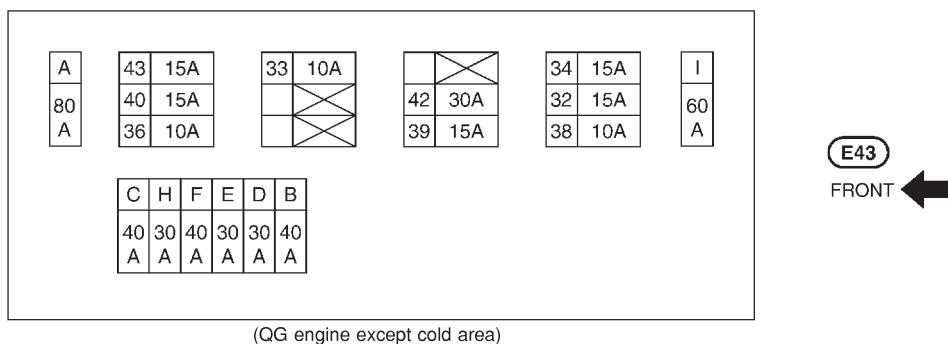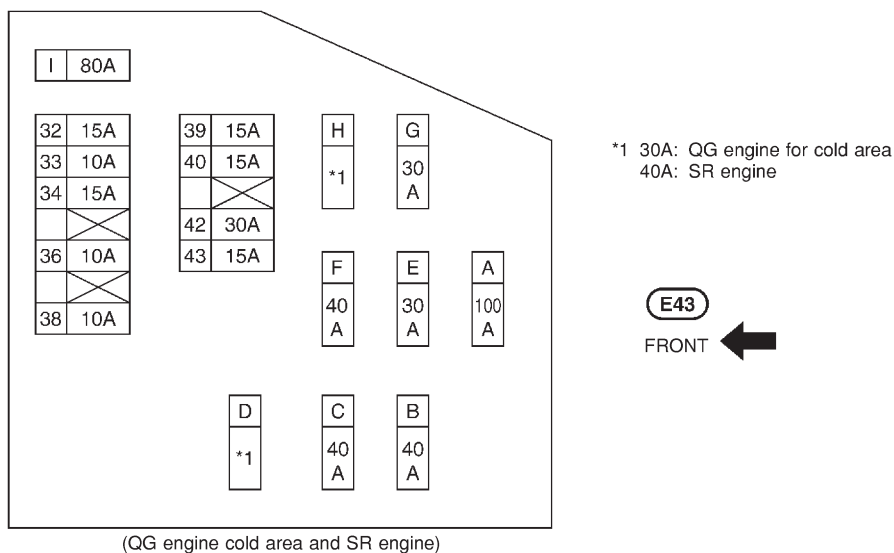


FUSE AND FUSIBLE LINK BOX

Terminal Arrangement (Cont'd)

MODELS WITH FUSE AND FUSIBLE LINK BOX E90

NLEL0494S02

- QG** : QG ENGINE
- XQ** : EXCEPT QG ENGINE
- *1 30A: **QG**
- 40A: **XQ**

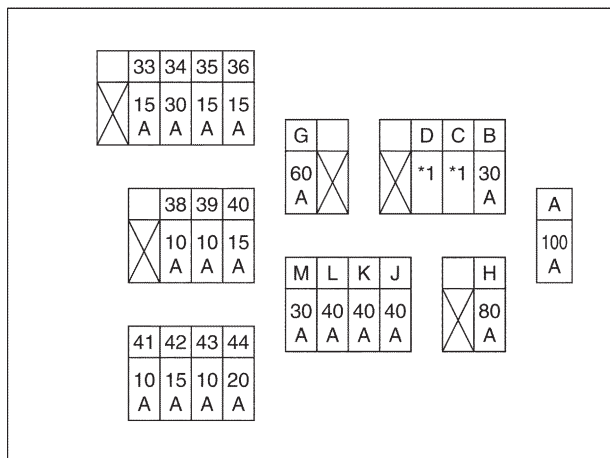

E90
FRONT ←


ELECTRICAL UNITS

Terminal Arrangement


Terminal Arrangement

NLEL0495


ECM (QG engine and SR engine)

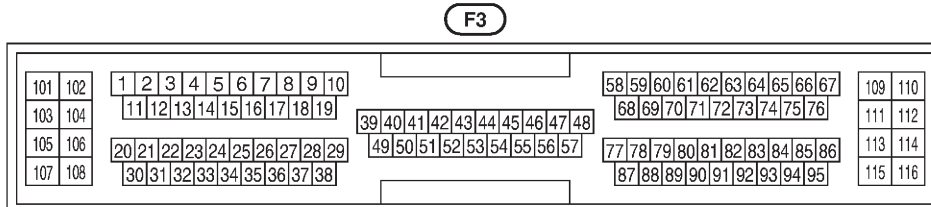

ECM (YD engine)

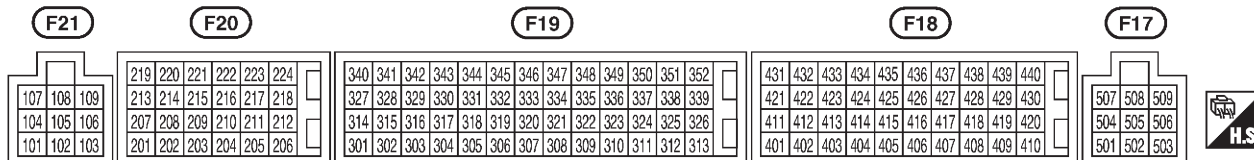

ABS ACTUATOR AND ELECTRIC UNIT

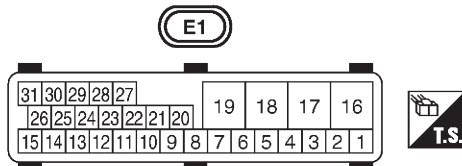


JOINT CONNECTOR (J/C)

Terminal Arrangement


Terminal Arrangement

MODELS WITH FUSE AND FUSIBLE LINK BOX E43

 NLEL0496
NLEL0496S01



J/C-1 (F39)

 


(Gray)

J/C-2 (F40)



 J/C-3 (F41)




(Blue)

JOINT CONNECTOR (J/C)

Terminal Arrangement (Cont'd)

MODELS WITH FUSE AND FUSIBLE LINK BOX E90

 NLEL0496S02



J/C **F46**

1	1	1	1	1	1	2	2	2	2
3	3	3	3	3	3	4	4	4	4

(Blue)