

ALPHABETICAL INDEX

SECTION **IDX**

ALPHABETICAL INDEX

A

A/C HFC134a (R134a) system precaution .	HA-2
A/C HFC134a (R134a) system service procedure	HA-85
A/C HFC134a (R134a) system service tools	HA-10
A/C HFC134a system service equipment precaution	HA-6
A/C air flow	HA-19
A/C component layout	HA-17
A/C compressor clutch removal and installation	HA-90
A/C compressor precaution	HA-5
A/C compressor special service tool	HA-9
A/C control linkage adjustment (manual A/C)	HA-48
A/C control operation (manual A/C)	HA-18
A/C diagnostic work flow (manual A/C)	HA-40
A/C harness layout (manual A/C)	HA-21
A/C lubricant (R134a)	HA-87
A/C operational check	HA-41
A/C performance chart	HA-78
A/C performance test diagnoses	HA-76
A/C relay	HA-73
A/C service data specification	HA-104
A/C switch	HA-74
A/C, M - Wiring diagram	HA-27
A/CCUT - Wiring diagram	EC-1301
A/T - Wiring diagram - AT - BA/FTS	AT-172
A/T - Wiring diagram - AT - ENG SS	AT-91, 177
A/T - Wiring diagram - AT - FTS	AT-75
A/T - Wiring diagram - AT - LPSV ...	AT-101, 159
A/T - Wiring diagram - AT - MAIN	AT-62
A/T - Wiring diagram - AT - PNP/SW	AT-68
A/T - Wiring diagram - AT - SSV/A	AT-147
A/T - Wiring diagram - AT - TCV	AT-96, 166
A/T - Wiring diagram - AT - TPS	AT-106, 139
A/T - Wiring diagram - AT - VSS/AT ..	AT-86, 128
A/T - Wiring diagram - AT - VSSMTR	AT-134
A/T control	EC-1012
A/T diagnosis communication line	EC-928
A/T shift lock system - Wiring diagram	AT-196
A/T shift lock system	AT-195
A/T trouble diagnoses	AT-41, 46
AAC/V - Wiring diagram .	EC-345, 468, 865, 997
ABS (anti-lock brake system)	BR-42
ABS - Wiring diagram	BR-48
ABS sensor rotor	AX-23
APS - Wiring diagram	EC-1155
AT/C - Wiring diagram	EC-1013
ATDIAG - Wiring diagram	EC-929
Accelerator control system	FE-3, 14
Accelerator position sensor	EC-1155
Air bag disposal	RS-30

Air bag precautions	GI-3
Air bag	RS-16
Air bleeding (hydraulic clutch)	CL-10
Air bleeding for brake system	BR-8
Air conditioner cut control	EC-38, 572, 1081
Air flow meter - See Mass air flow sensor	EC-154, 679, 1143
Air mix door control linkage adjustment	HA-50
Air spoiler, rear	BT-38
Alternator	SC-28
Angular tightening application	EM-5, 76, 158
Antenna - See Power antenna	EL-233
Anti-lock brake system - Wiring diagram	BR-48
Audio and A/C control removal and installation - See Instrument panel	BT-22
Audio	EL-208
Automatic transaxle number	GI-40
Auxiliary air control (AAC) valve	EC-343, 466, 863, 995

B

Back-up lamp switch (M/T)	MT-16
Back-up lamp	EL-93
Ball joint (front)	SU-13
Basic inspection	EC-99, 623, 1111
Battery	SC-3
Baulk ring (M/T)	MT-25, 63
Blower motor	HA-61
Blower resistor	HA-61
Board-on lift	GI-42
Body alignment	BT-65
Brake booster	BR-16
Brake fluid change	BR-7
Brake fluid level and line check	BR-7
Brake hydraulic line	BR-9
Brake pedal	BR-11
Bulb specifications	EL-524
Bumper, front	BT-7
Bumper, rear	BT-10

C

CHARGE - Wiring diagram	SC-25
CHIME - Wiring diagram	EL-166
CIGAR - Wiring diagram	EL-195
CKPS - Wiring diagram .	EC-297, 440, 821, 911, 970, 1166
CMPS - Wiring diagram	EC-304, 828
CONSULT for ABS	BR-58
CONSULT for engine	EC-82, 607, 1102
COOL/F - Wiring diagram	EC-376, 885, 1201
Camshaft inspection	EM-36, 114, 204
Camshaft position sensor (CMPS) .	EC-302, 825
Camshaft position sensor (PHASE)	EC-302

ALPHABETICAL INDEX

Canister - See EVAP canister EC-39, 573
 Charging system SC-24
 Cigarette lighter EL-195
 Circuit breaker EL-32
 Closed throttle position switch EC-352, 872
 Clutch cover CL-22
 Clutch disc CL-22
 Clutch master cylinder CL-11
 Clutch operating cylinder CL-14
 Clutch pedal CL-10
 Clutch release bearing CL-17, 20
 Clutch release mechanism CL-17, 20
 Clutch withdrawal lever CL-17, 20
 Coil spring (front) SU-10
 Coil spring (rear) SU-23
 Collision diagnosis RS-66
 Combination lamp, rear, removal and installation BT-38
 Combination meter removal and installation - See Instrument panel BT-22
 Combination meter EL-130
 Combination switch EL-64
 Compression pressure EM-164
 Compressor clutch removal and installation HA-90
 Compressor precaution HA-5
 Compressor special service tool HA-9
 Connecting rod bearing clearance .. EM-58, 140, 232
 Connecting rod bushing clearance .. EM-59, 141, 234
 Connecting rod EM-55, 136, 227
 Console box - See Instrument panel BT-22
 Control lever (M/T) MT-23
 Converter housing installation AT-207
 Coolant mixture ratio MA-22
 Cooling circuit (engine) LC-12, 32, 53
 Cooling fan control system LC-59
 Cooling fan control EC-373, 882, 1201
 Cooling fan motor EC-385, 899
 Cooling fan relay EC-384, 898
 Coupling sleeve (M/T) MT-25, 63
 Crank angle sensor built into distributor - See Camshaft position sensor EC-825
 Crankcase emission control system - See Positive crankcase ventilation EC-42, 576, 1082
 Crankcase ventilation system - See Positive crankcase ventilation EC-42, 576, 1082
 Crankshaft position sensor (OBD) . EC-295, 439, 819, 969
 Crankshaft position sensor (POS) .. EC-295, 439
 Crankshaft position sensor (TDC) EC-1166
 Crankshaft EM-57, 138, 229
 Cylinder block EM-52, 133, 221
 Cylinder head EM-33, 108, 200

D

DEF - Wiring diagram EL-199
 DTC work support EC-91, 615
 Data link connector for Consult EC-43, 577, 1102
 Daytime light system EL-73
 Detonation sensor - See Knock sensor EC-291, 815
 Diagnosis sensor unit RS-21
 Diagnostic trouble code (DTC) for OBD system EC-16, 70, 550, 595, 1064, 1096
 Diagnostic trouble code (DTC) inspection priority chart EC-122, 646
 Differential gear (FF M/T) MT-25, 63, 77
 Dimensions GI-41
 Dome light - See Interior lamp EL-116
 Door glass BT-14
 Door lock BT-18
 Door mirror BT-63
 Door trim BT-32
 Door, front BT-13
 Door, rear BT-13
 Drive plate runout EM-60, 142, 235
 Drive shaft (front) AX-10
 Dropping resistor (A/T) AT-103, 163
 Dual pressure switch HA-12

E

ECCS-D control module ... EC-1129, 1177, 1185, 1253, 1255, 1260, 1262
 ECM input/output signal EC-133, 657, 1129
 ECTS - Wiring diagram EC-171, 696, 1150
 EGR control valve EC-400
 EGR temperature sensor EC-386, 915
 EGR volume control valve EC-319, 1277
 EGR/TS - Wiring diagram EC-389, 918
 EGRC/V - Wiring diagram EC-322
 EGRC1 - Wiring diagram EC-314, 397, 449, 838, 925, 978, 1279
 EVAP canister purge volume control solenoid valve EC-40, 574
 EVAP canister purge volume control valve EC-332, 458, 852, 986
 EVAP canister EC-40, 574
 Electric sunroof EL-238
 Electrical diagnoses GI-21
 Electrical ignition system EC-37, 571
 Electrical load signal circuit EC-535, 1050
 Electrical unit EL-530
 Electrical units location EL-442
 Electronic fuel injection pump EC-1087, 1187, 1194, 1218, 1225, 1232, 1239, 1246, 1264
 Engine compartment BT-66
 Engine control circuit diagram EC-30, 564, 1074

ALPHABETICAL INDEX

Engine control component parts
 location EC-26, 560, 1071
 Engine control module (ECM) EC-358, 880
 Engine control system diagram and
 chart EC-32, 566, 1076
 Engine coolant temperature sensor
 (ECTS) EC-169, 694, 1150
 Engine fail-safe system EC-123, 647
 Engine oil precautions GI-7
 Engine outer component parts EM-12, 82
 Engine removal EM-49, 130, 218
 Engine room - See Engine
 compartment BT-66
 Engine serial number GI-39
 Evaporative emission (EVAP)
 system EC-39, 573
 Exhaust gas recirculation (EGR)
 valve EC-310, 393, 446, 834, 921, 975
 Exhaust system FE-11, 23
 Exterior BT-38

F

F/PUMP - Wiring diagram EC-518, 1034
 FR02 - Wiring diagram .. EC-187, 207, 216, 415,
 712, 732, 741, 945
 FR02/H - Wiring diagram EC-223, 422,
 748, 952
 FUEL - Wiring diagram ... EC-271, 279, 794, 802
 Fan switch HA-61
 Final drive (FF M/T) MT-47, 63, 77
 Finisher, interior - See Trim BT-28
 Finisher, trunk lid BT-31
 Floor trim BT-28
 Fluids MA-20
 Flywheel (clutch) CL-22
 Flywheel runout EM-60, 142, 235
 Fog lamp, front, removal and
 installation BT-7
 Fog lamp, front EL-95
 Fork rod (M/T) MT-26, 64
 Freeze frame data EC-61, 71, 585, 596
 Front axle AX-2
 Front bumper BT-7
 Front combination lamp removal and
 installation BT-7
 Front disc brake BR-24
 Front door BT-13
 Front fog lamp removal and
 installation BT-7
 Front fog lamp EL-95
 Front heated oxygen sensor (HO2S)
 heater EC-221, 421, 746, 951
 Front heated oxygen sensor (HO2S) EC-184,
 192, 198, 204, 214, 414, 709,
 717, 723, 729, 739, 944

Front seat belt RS-5
 Front seat BT-46
 Front suspension SU-2
 Front washer EL-176
 Front wiper EL-176
 Fuel cut control (at no load & high
 engine speed) EC-39, 573, 1081
 Fuel gauge EL-130
 Fuel injection system EC-269, 277, 792,
 800, 1079
 Fuel injector EC-494, 1021
 Fuel precautions GI-8
 Fuel pressure check EC-43, 577
 Fuel pressure regulator EC-44, 578
 Fuel pressure release EC-43, 577
 Fuel pump relay EC-516, 1032
 Fuel pump EC-516, 1032
 Fuel system FE-5, 15
 Fuel tank vacuum relief valve EC-40, 574
 Fuse block EL-527
 Fuse EL-32
 Fusible link EL-32

G

GLOW - Wiring diagram EC-1267
 Garage jack and safety stand GI-43
 Gauges EL-130
 Gear components (M/T) MT-25, 63
 Generator - See Alternator SC-28
 Generic scan tool (GST) EC-93, 617
 Glass BT-14
 Glow plug EC-1267
 Glow relay EC-1267
 Grease MA-20
 Ground distribution EL-33, 48

H

H/LAMP - Wiring diagram EL-69
 HEATER - Wiring diagram HA-23
 HFC134a (R134a) system
 precaution HA-2
 HFC134a (R134a) system service
 procedure HA-85
 HFC134a (R134a) system service
 tools HA-10
 HFC134a system service equipment
 precaution HA-6
 HORN - Wiring diagram EL-193
 HSEAT - Wiring diagram EL-234
 Harness connector EL-5
 Harness layout EL-452
 Hazard warning lamp EL-101
 Headlamp removal and installation BT-7
 Headlamp washer EL-190

ALPHABETICAL INDEX

Headlamp	EL-69
Headlining - See Roof trim	BT-35
Heated oxygen sensor (HO2S) (front) .	EC-184, 192, 198, 204, 214, 414, 709, 717, 723, 729, 739, 944
Heated oxygen sensor (HO2S) heater (front)	EC-221, 421, 746, 951
Heated oxygen sensor (HO2S) heater (rear)	EC-263, 433, 786, 963
Heated oxygen sensor (rear) .	EC-227, 237, 246, 256, 426, 752, 761, 770, 779, 956
Heated seat	EL-234
Height (Dimensions)	GI-41
Hood	BT-7
Horn	EL-193
How to erase DTC for OBD system ..	EC-69, 71, 594, 596, 1096

I

IACV-AAC valve	EC-343, 466, 863, 995
IATS - Wiring diagram	EC-163, 409, 689, 939
IGN/SG - Wiring diagram	EC-501, 903
ILL - Wiring diagram	EL-109
INJECT - Wiring diagram	EC-495, 1022
IVC - Wiring diagram	EC-362, 476
Identification plate	GI-39
Idle air control (IAC) system	EC-343, 466, 863, 995
Idle air control valve (IACV)	EC-343, 466, 863, 995
Idle speed	EC-46, 1111
Ignition coil	EC-907, 1010
Ignition control system	EC-500
Ignition timing	EC-46
Ignition wire inspection	EC-814
Illumination	EL-107
Injection nozzle	EC-1083
Injector removal and installation	EC-44, 578
Input shaft (FF M/T)	MT-34, 63, 68
Instrument panel	BT-22
Intake air temperature sensor	EC-161, 407, 687, 937
Intake valve timing control solenoid valve	EC-360, 475
Interior lamp on-off control	EL-117
Interior lamp	EL-116
Interior	BT-28

J

Jacking points	GI-43
Joint connector (J/C)	EL-531
Junction box (J/B)	EL-527

K

KS - Wiring diagram	EC-292
Keyless entry system - See Multi-re- mote control system	EL-314
Knock sensor (KS)	EC-291, 815, 816
Knuckle spindle	AX-5

L

LOAD - Wiring diagram	EC-536, 1051
Length (Dimensions)	GI-41
License lamp	EL-87
Lifting points	GI-44
Line pressure test (A/T)	AT-52
Liquid gasket application	EM-5, 76, 158
Location of electrical units	EL-442
Lock, door	BT-18
Lubricant (R134a) A/C	HA-87
Lubricants	MA-20
Lubrication circuit (engine)	LC-4, 24, 43

M

M/T major overhaul	MT-24, 62
M/T removal and installation	MT-18
MAFS - Wiring diagram	EC-156, 682, 1143
MAIN - Wiring diagram	EC-146, 671, 1136
MIL & Data link connectors circuit	EC-545, 1060
MIL/DL - Wiring diagram	EC-545, 1060, 1303
MIRROR - Wiring diagram	EL-241
Magnet clutch	HA-90
Mainshaft (M/T)	MT-39, 63, 73
Malfunction indicator lamp (MIL)	EC-73, 598, 1097
Manual air conditioner - Wiring diagram	HA-27
Manual transaxle number	GI-40
Mass air flow sensor (MAFS)	EC-154, 679, 1143
Master cylinder (clutch)	CL-11
Meter	EL-130
Mirror defogger	EL-198
Mirror, door	BT-63
Misfire	EC-285, 808
Mode door control linkage adjustment	HA-48
Model variation	GI-37
Molding - See Exterior	BT-38
Multi-remote control system	EL-314
Multiport fuel injection (MFI) system .	EC-35, 569
Multiport fuel injection precautions	GI-6

ALPHABETICAL INDEX

N

- NATS (Nissan Anti-theft System)
- precautions GI-3
- NATS (Nissan Anti-theft System) EL-334
- NATS - Wiring diagram EL-338
- NVH troubleshooting (AX) AX-3
- NVH troubleshooting (BR) BR-6
- NVH troubleshooting (MT) MT-9
- NVH troubleshooting (ST) ST-5
- NVH troubleshooting (SU) SU-17
- NVH troubleshooting CL CL-4
- NVIS (Nissan vehicle immobiliser system) precautions GI-3
- Neutral position switch . EC-402, 490, 931, 1016

O

- Oil pan (engine) EM-20, 91, 170
- Oil pressure (engine) LC-5, 25, 44
- Oil pump (engine) LC-5, 25, 44
- Oil pump regulator valve (engine) .. LC-7, 27, 46
- Oil seal replacement (engine) EM-31, 105
- On board diagnostic system ... EC-59, 583, 1096
- Operating cylinder (clutch) CL-14

P

- PCV (positive crankcase ventilation) EC-42, 576, 1082
- PGC/V - Wiring diagram . EC-334, 460, 854, 988
- PNP/SW - Wiring diagram EC-404, 491, 933, 1017, 1297
- POWER - Wiring diagram EL-14, 24
- PST/SW - Wiring diagram EC-524, 1040
- Park/Neutral position switch .. EC-402, 490, 931, 1016, 1297
- Park/neutral position switch (A/T) AT-66
- Park/neutral position switch (M/T) MT-16
- Parking brake control BR-40
- Parking lamp EL-87
- Piston assembly EM-60, 142, 236
- Piston pin inspection EM-54, 134, 226
- Piston ring inspection EM-54, 135, 226
- Piston to bore clearance EM-56, 137, 228
- Power antenna EL-233
- Power door lock EL-257
- Power door mirror EL-241
- Power steering fluid level ST-7
- Power steering gear ST-15
- Power steering hydraulic pressure ST-9
- Power steering oil pressure switch EC-523, 1039
- Power steering oil pump ST-21, 22
- Power steering system bleeding ST-8
- Power supply routing EL-9

- Power transistor EC-907, 1010
- Power window EL-245
- Precautions (General) GI-4
- Pressure plate - See Clutch cover CL-22
- Pressure test (A/T) AT-52
- Priming pump EC-1094, 1111

Q

- Quick-glow system EC-1267

R

- RR02 - Wiring diagram .. EC-230, 240, 249, 258, 427, 755, 764, 773, 781, 957
- RR02/H - Wiring diagram EC-265, 434, 788, 964
- Radiator fan - See Cooling fan LC-37
- Radiator LC-17, 37, 58
- Radio - See Audio EL-208
- Rear air spoiler BT-38
- Rear axle (disc brake type) AX-23
- Rear axle AX-21
- Rear bumper BT-10
- Rear combination lamp removal and installation BT-38
- Rear disc brake BR-28, 36
- Rear door BT-13
- Rear heated oxygen sensor (HO2S) heater EC-263, 433, 786, 963
- Rear heated oxygen sensor (HO2S) EC-227, 237, 246, 256, 426, 752, 761, 770, 779, 956
- Rear seat belt RS-7
- Rear seat BT-49
- Rear suspension SU-17
- Rear window defogger EL-198
- Rear window BT-59
- Refrigerant connection precaution HA-3
- Refrigerant general precaution HA-2
- Refrigerant lines HA-98
- Refrigeration cycle HA-12
- Release bearing (clutch) CL-17, 20
- Removal and installation (A/T) AT-206
- Resistor EC-908, 1011
- Reverse idler shaft (M/T) MT-24, 63
- Reverse lamp switch (M/T) - See
 Back-up lamp switch (M/T) MT-16
- Reverse main gear (M/T) MT-25, 63
- Revolution sensor (A/T) AT-83, 89
- Road wheel size GI-41
- Roof trim BT-35
- Room lamp - See Interior lamp EL-116

ALPHABETICAL INDEX

S

S/LOCK - Wiring diagram	EL-260, 286
S/SIG - Wiring diagram	EC-512, 1028
SAE J1930 terminology list	GI-48
SHIFT - Wiring diagram	AT-196
SROOF - Wiring diagram	EL-238
SRS - See Supplemental Restraint System	RS-16
START - Wiring diagram	SC-14
STOP/L - Wiring diagram	EL-91
SWL/V - Wiring diagram	EC-366, 481
Seal - See Exterior	BT-38
Seat belt pre-tensioner disposal	RS-30
Seat belt pre-tensioner	RS-3
Seat belt, front	RS-5
Seat belt, rear	RS-7
Seat, front	BT-46
Seat, rear	BT-49
Self-diagnostic results	EC-73, 598, 1098
Shift control components (M/T)	MT-26, 64
Shift fork (M/T)	MT-26, 64
Shift lever	MT-23
Shift lock system	AT-195
Shock absorber (front)	SU-11
Shock absorber (rear)	SU-23
Side air bag	RS-28
Side trim	BT-28
Speedometer	EL-130
Spiral cable	RS-24
Spring (Wheelarch) height	SU-6
Stabilizer bar (front)	SU-12
Stall test (A/T)	AT-51
Standardized relay	EL-7
Start signal	EC-511, 1027, 1293
Starter	SC-17
Starting system	SC-13
Steering linkage	ST-15
Steering switch	EL-67
Steering wheel and column	ST-10
Steering wheel play	ST-6
Steering wheel turning force	ST-8
Stop lamp	EL-91
Striking rod (M/T)	MT-26, 64
Strut (front)	SU-10
Strut (rear)	SU-22
Sub-gear (M/T)	MT-25
Sunroof, electric	EL-238
Sunroof	BT-51
Super lock	EL-281
Supplemental Restraint System	RS-16
Swirl control valve control solenoid valve	EC-366, 481, 1285
Symbols and abbreviations	GI-9
Symptom matrix chart	EC-124, 648, 1116
Synchronizer (M/T)	MT-25, 63
System readiness test (SRT) code ...	EC-62, 586

T

TCM circuit diagram	AT-13
TCM inspection table	AT-58
TP/SW - Wiring diagram	EC-354, 874
TPS - Wiring diagram	EC-178, 703
TURN - Wiring diagram	EL-102
Tachometer	EL-130
Tail lamp	EL-87
Thermostat	LC-15, 35, 57
Three way catalyst precautions	GI-6
Three way catalyst	EC-327, 848
Throttle position sensor (TPS)	EC-175, 700
Throttle position sensor adjustment ..	EC-99, 623
Throttle position switch	AT-111, 145, EC-352, 872
Throwout bearing - See Clutch release bearing	CL-17, 20
Tie-rod ball joints	ST-18
Tie-rod	ST-15
Tightening torque of standard bolts	GI-47
Timing belt	EM-22, 96
Timing chain	EM-175
Tire size	GI-41
Torque converter installation	AT-207
Tow truck towing	GI-45
Transmission case (M/T)	MT-24, 62
Tread-FR&RR (Dimensions)	GI-41
Trim	BT-28
Trouble diagnoses	GI-31
Trunk lid finisher	BT-31
Trunk lid opener - See Trunk lid	BT-10
Trunk lid trim	BT-31
Trunk lid	BT-10
Trunk room trim	BT-31
Turn signal lamp	EL-101
Two trip detection logic	EC-59, 583
Two-pole lift	GI-44

U

Under body	BT-68
------------------	-------

V

VSS - Wiring diagram	EC-340, 860, 1172
Vacuum hose (brake system)	BR-18
Vacuum hose drawing (Engine control) ...	EC-33, 567, 1077
Vacuum pump	BR-20
Valve clearance	EM-42, 214
Valve guide	EM-38, 116, 205
Valve lifter	EM-41
Valve seat	EM-40, 117, 207
Valve spring	EM-41, 119, 209

ALPHABETICAL INDEX

Vehicle speed sensor (VSS) .	EC-338, 858, 1172	Wheel bearing (rear)	AX-22	
Viscosity number (SAE)	MA-21	Wheel hub (front)	AX-5	
Viscous coupling (FF M/T)	MT-63	Wheel hub (rear)	AX-23	
 <table border="1" style="width: 100%;"><tr><td style="text-align: center; padding: 2px;">W</td></tr></table>		W	Wheel sensors (ABS)	BR-90
W				
WARN - Wiring diagram	EL-156	Wheelarch height	SU-6	
WIP/R - Wiring diagram	EL-184	Wheelbase (Dimensions)	GI-41	
WIPER - Wiring diagram	EL-178	Wide open & closed throttle position switch	EC-175, 700	
Warning chime	EL-165	Width (Dimensions)	GI-41	
Warning lamps	EL-155	Window, rear	BT-59	
Washer, front	EL-176	Windshield	BT-59	
Water pump	LC-14, 33, 55	Wiper, front	EL-176	
Water temperature gauge	EL-130	Wiring diagram (cell code) list	EL-525	
Weatherstrip - See Exterior	BT-38	Wiring diagrams	GI-11	
Wheel alignment (rear)	SU-19	Withdrawal lever (clutch)	CL-17, 20	
Wheel bearing (front)	AX-3	Wrist pin - See Piston pin inspection	EM-54, 134, 226	