

# ALPHABETICAL INDEX

SECTION **IDX**

**A B C D E F G H I J K L M**

**N O P Q R S T U V W X Y Z**

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

**IDX**

## ALPHABETICAL INDEX

### A

AAC/V - Wiring diagram.....EC-419, 995  
 ABS - Wiring diagram.....BR-35  
 ABS sensor rotor .....AX-12  
 Absolute pressure sensor.....EC-146, 722  
 A/C air flow .....HA-16  
 A/C component layout .....HA-17  
 A/C compressor clutch removal and  
 installation .....HA-67  
 A/C compressor description .....HA-14  
 A/C compressor precaution .....HA-6  
 A/C compressor special service  
 tool .....HA-10, 13  
 A/C control linkage adjustment (manual  
 A/C) .....HA-38  
 A/C control operation (manual A/C) .....HA-15  
 A/C diagnostic work flow (manual  
 A/C) .....HA-26  
 A/C HFC134a (R134a) system  
 precaution.....HA-3  
 A/C HFC134a (R134a) system service  
 tools .....HA-11  
 A/C HFC134a system service equipment  
 precaution.....HA-7  
 A/C lubricant (R134a) .....HA-63  
 A/C lubrication oil.....HA-63  
 A/C operational check .....HA-27  
 A/C pressure switch.....HA-47  
 A/C relay .....HA-47  
 A/C service data specification .....HA-81  
 A/C switch.....HA-15  
 A/C symptom chart (manual A/C).....HA-26  
 A/C trouble diagnoses (manual A/C).....HA-19  
 A/C, M - Wiring diagram.....HA-23  
 Accelerator control system.....FE-3  
 Accelerator wire adjustment.....FE-3  
 Actuator lever (Transfer).....TF-11  
 Air bag .....RS-9, 16  
 Air bag disposal .....RS-21  
 Air bag precautions .....GI-3  
 Air bleeding (hydraulic clutch) .....CL-5, 7  
 Air bleeding for brake system.....BR-8  
 Air cleaner filter replacement.....MA-21, 30  
 Air conditioner cut control.....EC-33, 602  
 Air flow meter - See Mass air flow  
 sensor .....EC-136, 713  
 Air spoiler, rear .....BT-32  
 Alternator .....SC-19  
 Angular tightening application.....EM-4  
 Antenna - See Power antenna.....EL-132  
 Anti-lock brake system - Wiring  
 diagram .....BR-35  
 AP/SEN - Wiring diagram.....EC-149, 725  
 ASCD (automatic speed control  
 device) .....EL-145  
 ASCD - Wiring diagram.....EL-150

A/T - Wiring diagram - AT - FTS .....AT-107  
 A/T - Wiring diagram - AT - MAIN .....AT-96  
 A/T - Wiring diagram - AT - PNP/SW .....AT-101  
 A/T - Wiring diagram - AT - VSS A/T .....AT-113  
 A/T control .....EC-1006  
 A/T diagnosis communication line .....EC-1121  
 A/T fluid temperature sensor .....AT-110  
 A/T shift lock system .....AT-251  
 A/T shift lock system - Wiring diagram .....AT-252  
 A/T Wiring diagram - AT - ENG SS .....AT-117  
 A/T Wiring diagram AT - 1ST .....AT-123  
 A/T Wiring diagram AT - 2ND.....AT-129  
 A/T Wiring diagram AT - 3RD.....AT-135  
 A/T Wiring diagram AT - 4TH.....AT-142  
 A/T Wiring diagram AT - BA/FTS .....AT-191  
 A/T Wiring diagram AT - LPSV.....AT-162  
 A/T Wiring diagram AT - NONDTC .....AT-203  
 A/T Wiring diagram AT - OVRCSV.....AT-186  
 A/T Wiring diagram AT - SSV/A .....AT-167  
 A/T Wiring diagram AT - SSV/B .....AT-172  
 A/T Wiring diagram AT - TCCSIG .....AT-155  
 A/T Wiring diagram AT - TCV.....AT-149  
 A/T Wiring diagram AT - TPS.....AT-178  
 A/T Wiring diagram AT - VSSMTR.....AT-197  
 AT/C - Wiring diagram .....EC-1008  
 ATDIAG - Wiring diagram .....EC-1122  
 Audio .....EL-128  
 AUDIO - Wiring diagram .....EL-129  
 Audio and A/C control removal and  
 installation - See Instrument panel.....BT-20  
 Auto lock free running hub .....AX-9  
 Automatic speed control system - See  
 ASCD.....EL-145  
 Automatic transmission fluid  
 replacement .....MA-37  
 Automatic transmission number .....GI-42  
 Auxiliary air control (AAC) valve .....EC-416, 992

### B

Back door .....BT-15  
 Back door opener - See Back door .....BT-15  
 Back window .....BT-32  
 Back-up lamp .....EL-50  
 Back-up lamp switch (M/T).....MT-8, 40  
 BACK/L - Wiring diagram .....EL-50  
 Ball joint (front) .....SU-19  
 Basic inspection.....EC-95, 669  
 Battery.....SC-3  
 Baulk ring (M/T).....MT-12, 45  
 Blower resistor .....HA-35  
 Body alignment.....BT-47  
 Body mounting .....BT-46  
 Boring/honing cylinder block.....EM-47, 106  
 BPT valve .....EC-933  
 Brake booster .....BR-16  
 Brake fluid change.....BR-6

## ALPHABETICAL INDEX

Brake fluid level.....MA-40  
 Brake fluid level and line check.....BR-6  
 Brake hydraulic line .....BR-9  
 Brake inspection.....MA-40  
 Brake lines and cables inspection .....MA-40  
 Brake master cylinder.....BR-13  
 Brake pedal.....BR-11  
 Bulb specifications.....EL-285  
 Bumper, front.....BT-12  
 Bumper, rear.....BT-15  
 BYPS/V - Wiring  
 diagram.....EC-525, 533, 1108, 1115

C

Camshaft inspection.....EM-32, 88  
 Camshaft position sensor  
 (CMPS) .....EC-318, 912  
 Canister-See EVAP canister .....EC-34, 603  
 Center bearing assembly (propeller  
 shaft) .....PD-9  
 Center bearing disassembly (propeller  
 shaft) .....PD-8  
 Center case (Transfer) .....TF-12  
 CHARGE - Wiring diagram.....SC-16  
 Charging system.....SC-15  
 Chassis and body maintenance.....MA-35  
 CHIME - Wiring diagram .....EL-99  
 CIGAR - Wiring diagram .....EL-127  
 Cigarette lighter .....EL-127  
 Circuit breaker .....EL-16  
 CKPS - Wiring diagram .....EC-314, 459,  
 908, 1038  
 Closed loop control.....EC-447  
 Closed loop control (Left bank) .....EC-1026  
 Closed loop control (Right bank).....EC-1026  
 Closed throttle position switch.....EC-422, 998  
 Clutch cover .....CL-12, 13  
 Clutch disc.....CL-12  
 Clutch fluid level.....MA-35  
 Clutch master cylinder .....CL-8  
 Clutch operating cylinder .....CL-9  
 Clutch pedal .....CL-5, 6  
 Clutch release bearing .....CL-10  
 Clutch release mechanism.....CL-10  
 Clutch withdrawal lever .....CL-10  
 CMPS - Wiring diagram .....EC-321, 915  
 Collision diagnosis.....RS-56  
 Combination lamp, front, removal and  
 installation.....BT-12  
 Combination lamp, rear, removal and  
 installation.....BT-32  
 Combination meter .....EL-72  
 Combination meter removal and installation -  
 See Instrument panel .....BT-20  
 Combination switch .....EL-31  
 Component Location (manual A/C) .....HA-19

Compression pressure .....EM-15, 70  
 Compressor clutch removal and  
 installation .....HA-67  
 Compressor description.....HA-14  
 Compressor precaution .....HA-6  
 Compressor special service tool .....HA-10, 13  
 Connecting rod.....EM-46, 105  
 Connecting rod bearing  
 clearance .....EM-50, 109  
 Connecting rod bushing  
 clearance .....EM-51, 110  
 Connector inspection .....GI-20  
 Console box - See Instrument panel .....BT-20  
 CONSULT for engine .....EC-78, 651  
 CONSULT-II general information .....GI-37  
 Control lever (M/T) .....MT-13, 47  
 Control valve (A/T) .....AT-283  
 Converter housing installation .....AT-263  
 COOL/F - Wiring diagram.....EC-884, 1135  
 Coolant mixture ratio .....MA-16  
 Coolant replacement.....MA-18, 27  
 Cooling circuit (engine) .....LC-10, 26  
 Cooling fan.....LC-16, 32  
 Cooling fan control.....EC-547, 1132  
 Counter gear (M/T).....MT-12, 45  
 Counter gear (Transfer) .....TF-13, 23  
 Coupling sleeve (M/T) .....MT-12, 45  
 Crank angle sensor built into distributor -  
 See Camshaft position sensor.....EC-318, 912  
 Crankcase emission control system - See  
 positive crankcase ventilation .....EC-39, 609  
 Crankcase ventilation system - See Positive  
 crankcase ventilation.....EC-39  
 Crankshaft .....EM-48, 107  
 Crankshaft position sensor  
 (OBD).....EC-312, 457, 906  
 Crankshaft position sensor (OBD) cog  
 chipping.....EC-457, 1036  
 Cruise control - See ASCD .....EL-145  
 Cylinder block.....EM-44, 102  
 Cylinder block boring .....EM-47, 107  
 Cylinder head.....EM-29, 84  
 Cylinder head bolt tightening .....EM-96

D

Data link connector for CONSULT .....EC-40, 651  
 Daytime light system .....EL-40  
 Daytime running light - See Daytime light  
 system.....EL-40  
 DEF - Wiring diagram .....EL-136  
 Detonation sensor - See Knock  
 sensor .....EC-308, 902  
 Diagnosis sensor unit .....RS-14  
 Diagnostic trouble code (DTC) for OBD  
 system.....EC-13, 581, 628

# ALPHABETICAL INDEX

Diagnostic trouble code (DTC) inspection  
  priority chart.....EC-109, 686  
Differential carrier assembly.....PD-30, 53, 79  
Differential carrier disassembly.....PD-43, 66  
Differential gear oil replacement.....MA-39  
Dimensions.....GI-43  
Distributor.....EC-31, 601  
Distributor ignition (DI) system.....EC-31, 601  
D/LOCK - Wiring diagram.....EL-184  
Dome light - See Interior lamp.....EL-66  
Door glass.....BT-18  
Door glass Fitting Adjustment.....BT-18  
Door lock.....BT-18  
Door mirror.....BT-45  
Door trim.....BT-27  
Door, front.....BT-18  
Drive belt inspection.....MA-17, 26  
Drive chain (Transfer).....TF-13  
Drive pinion diff. inspection.....PD-22, 46, 69  
Drive pinion height.....PD-25, 48, 75  
Drive plate runout.....EM-52, 110  
Drive shaft (front).....AX-15  
Dropping resistor (A/T).....AT-164  
DTC work support.....EC-87, 661  
DTRL - Wiring diagram.....EL-43

## E

ECM input/output signal.....EC-120, 697  
ECTS - Wiring diagram.....EC-169, 187,  
  741, 760  
EGR control (EGRC) - BPT  
  valve.....EC-338, 933  
EGR control (EGRC) - solenoid  
  valve.....EC-463, 1043  
EGR control valve.....EC-919, 1055  
EGR temperature sensor.....EC-470, 1048  
EGR/TS - Wiring diagram.....EC-473, 1051  
EGRC/V - Wiring diagram.....EC-465, 1045  
EGRC1 - Wiring  
  diagram.....EC-330, 479, 923, 1058  
Electrical diagnoses.....GI-23  
Electrical ignition system.....EC-31, 601  
Electrical unit.....EL-293  
Electrical units location.....EL-259  
Electronic ignition (EI) system.....EC-31  
Engine compartment.....BT-48  
Engine control circuit diagram.....EC-25, 595  
Engine control component parts  
  location.....EC-23, 593  
Engine control module (ECM).....EC-429, 1011  
Engine control system diagram and  
  chart.....EC-26, 596  
Engine coolant temperature sensor  
  (ECTS).....EC-167, 186, 739, 758  
Engine fail-safe system.....EC-110, 687  
Engine oil filter replacement.....MA-22, 31

Engine oil precautions.....GI-6  
Engine oil replacement.....MA-21, 30  
Engine outer component parts.....EM-12, 68  
Engine removal.....EM-41, 99  
Engine room - See Engine  
  compartment.....BT-48  
Engine serial number.....GI-42  
EVAP canister.....EC-34, 604  
EVAP canister purge volume control solenoid  
  valve.....EC-487, 603, 950, 1067  
EVAP canister purge volume control  
  valve.....EC-367, 487  
EVAP canister vent control  
  valve.....EC-375, 499, 515, 957, 1079, 1098  
EVAP control system (small leak)  
  diagnosis.....EC-36, 351, 485, 947, 1065  
EVAP control system pressure  
  sensor.....EC-383, 963  
EVAP control system purge flow monitoring  
  diagnosis.....EC-505, 1086  
EVAP system close mode.....EC-36  
EVAP vapor lines inspection.....MA-24, 33  
Evaporative emission (EVAP)  
  system.....EC-34, 603  
Exhaust gas recirculation (EGR)  
  valve.....EC-326, 476, 919, 1055  
Exhaust system.....FE-8  
Exhaust system inspection.....MA-35  
Exterior.....BT-32

## F

Fast idle cam (FIC) inspection and  
  adjustment.....EC-612  
F/FOG - Wiring diagram.....EL-52  
FICD - Wiring diagram.....EC-573, 1165  
Final drive disassembly.....PD-42, 65  
Final drive pre-inspection.....PD-42, 65  
Final drive removal and installation.....PD-42, 65  
Finisher, interior - See Trim.....BT-24  
Floor trim.....BT-24  
Flow charts.....GI-23  
Fluid temperature sensor (A/T).....AT-110  
Fluids.....MA-14  
Flywheel (clutch).....CL-12, 13  
Flywheel runout.....EM-52, 110  
FO2H-L - Wiring diagram.....EC-812  
FO2H-R - Wiring diagram.....EC-811  
Fog lamp, front.....EL-51  
Fog lamp, front, removal and  
  installation.....BT-12  
Fork rod (M/T).....MT-13, 47  
Forward clutch.....AT-302  
F/PUMP - Wiring diagram.....EC-562, 1154  
Freeze frame data.....EC-58, 629  
FRO2 - Wiring diagram.....EC-194, 215, 225  
FRO2/H - Wiring diagram.....EC-232

# ALPHABETICAL INDEX

FRO2LH - Wiring diagram .....EC-768, 792, 804  
 FRO2RH - Wiring diagram.....EC-767, 791, 803  
 Front axle.....AX-2  
 Front bumper.....BT-12  
 Front case (Transfer) .....TF-12, 25  
 Front combination lamp removal and  
 installation .....BT-12  
 Front disc brake.....BR-19  
 Front door.....BT-18  
 Front drive shaft (Transfer) .....TF-13, 22  
 Front final drive disassembly (4WD) .....PD-18  
 Front final drive pre-inspection (4WD) .....PD-18  
 Front final drive removal and installation  
 (4WD).....PD-17  
 Front fog lamp.....EL-51  
 Front fog lamp removal and installation.....BT-12  
 Front heated oxygen sensor  
 (HO2S) .....EC-190, 198, 205, 212, 223  
 Front heated oxygen sensor (HO2S) (Left  
 bank).....EC-763, 772, 780, 788, 801  
 Front heated oxygen sensor (HO2S) (Right  
 bank).....EC-763, 772, 780, 788, 801  
 Front heated oxygen sensor (HO2S)  
 heater .....EC-230  
 Front heated oxygen sensor heater (Left  
 bank) .....EC-809  
 Front heated oxygen sensor heater (Right  
 bank) .....EC-809  
 Front oxygen sensor (O2S) monitor.....EC-643  
 Front passenger air bag .....RS-9, 19  
 Front seat .....BT-37  
 Front seat belt.....RS-4  
 Front suspension .....SU-2  
 Front washer.....EL-110  
 Front wiper.....EL-110  
 FUEL - Wiring diagram.....EC-280, 288  
 Fuel cut control (at no load & high engine  
 speed) .....EC-33, 603  
 Fuel filler lid.....BT-15  
 Fuel filter.....EC-40  
 Fuel filter replacement .....MA-20, 29  
 Fuel gauge .....EL-72  
 Fuel injection system.....EC-278, 286  
 Fuel injection system (Left  
 bank) .....EC-860, 868  
 Fuel injection system (Right  
 bank) .....EC-860, 868  
 Fuel injector .....EC-552  
 Fuel line inspection .....MA-20, 29  
 Fuel precautions .....GI-7  
 Fuel pressure check.....EC-40, 610  
 Fuel pressure regulator .....EC-41, 611  
 Fuel pressure release.....EC-40, 610  
 Fuel pump.....EC-561, 1153  
 Fuel pump and gauge.....FE-6  
 Fuel pump relay.....EC-561  
 Fuel system.....FE-4  
 Fuel tank temperature sensor .....EC-293, 875

Fuel tank vacuum relief valve .....EC-35, 604  
 FUELLH - Wiring diagram .....EC-863, 871  
 FUELRH - Wiring diagram .....EC-862, 870  
 Fuse.....EL-16  
 Fuse block.....EL-290  
 Fusible link .....EL-16

GI  
MA  
EM

## G

Garage jack and safety stand.....GI-44  
 Gauges.....EL-72  
 Gear components (M/T) .....MT-12, 45  
 Generator.....SC-19  
 Generator - See Alternator .....SC-19  
 Generic scan tool (GST) .....EC-89, 663  
 Glass .....BT-18  
 Grease.....MA-14

LC  
EC  
FE  
CL

## H

Harness connector .....EL-5  
 Harness connector inspection .....GI-20  
 Harness layout .....EL-262  
 Hazard warning lamp .....EL-55  
 Headlamp .....EL-34  
 Headlining - See Roof trim.....BT-30  
 Heated oxygen sensor (HO2S)  
 (front).....EC-190, 198, 205, 212, 223  
 Heated oxygen sensor (HO2S) heater  
 (front).....EC-230  
 Heated oxygen sensor (HO2S) heater  
 (rear).....EC-273  
 Heated oxygen sensor  
 (rear).....EC-235, 245, 255, 265  
 Height (Dimensions) .....GI-43  
 HFC134a (R134a) system precaution.....HA-3  
 HFC134a (R134a) system service  
 tools .....HA-11  
 HFC134a system service equipment  
 precaution.....HA-7  
 High clutch.....AT-300  
 H/LAMP - Wiring diagram .....EL-35  
 Hood.....BT-12  
 Horn.....EL-126  
 HORN - Wiring diagram .....EL-126  
 How to erase DTC for OBD  
 system.....EC-67, 640  
 Hydraulic lash adjuster inspection .....EM-94

MT  
AT  
TF  
PD  
AX  
SU  
BR  
ST  
RS  
BT  
HA

## I

IACV-AAC valve .....EC-416, 992  
 IACV-FICD solenoid valve .....EC-572, 1164  
 IATS - Wiring diagram .....EC-163, 736

SC  
EL

## ALPHABETICAL INDEX

Identification plate.....	GI-41
Idle air control (IAC) system.....	EC-416
Idle air control valve (IACV).....	EC-416, 992
Idle mixture ratio.....	EC-42, 614
Idle speed.....	EC-42, 614
IGN/SG - Wiring diagram.....	EC-451, 1030
Ignition control system.....	EC-449, 1028
Ignition timing.....	EC-42, 614
ILL - Wiring diagram.....	EL-64
Illumination.....	EL-63
INJECT - Wiring diagram.....	EC-553, 1145
Injector.....	EC-1144
Injector removal and installation.....	EC-41, 611
Instrument panel.....	BT-20
INT/L - Wiring diagram.....	EL-69
Intake air temperature sensor.....	EC-161, 734
Intake door control linkage adjustment.....	HA-38
Intake manifold.....	EM-12, 68
Interior.....	BT-24
Interior lamp.....	EL-66

### J

Jacking points.....	GI-44
Joint connector (J/C).....	EL-292
Journal bearing assembly (propeller shaft).....	PD-10
Journal bearing disassembly (propeller shaft).....	PD-9
Jump seat.....	BT-38
Junction box (J/B).....	EL-290

### K

Keyless entry system - See Multi-remote control system.....	EL-202
Knock sensor (KS).....	EC-308, 309, 902
Knuckle spindle.....	AX-13
KS - Wiring diagram.....	EC-903

### L

Leaf spring (rear).....	SU-25
Length (Dimensions).....	GI-43
License lamp.....	EL-48
Lifting points.....	GI-45
Limited slip diff. adjustment.....	PD-72
Limited slip diff. assembly.....	PD-74
Limited slip diff. disassembly.....	PD-70
Limited slip diff. inspection.....	PD-71
Line pressure solenoid valve.....	AT-146, 159, 164
Line pressure test (A/T).....	AT-62
Liquid gasket application.....	EM-4, 19

Location of electrical units.....	EL-259
Lock, door.....	BT-18
Low and reverse brake.....	AT-306
Lubricant (R134a) A/C.....	HA-63
Lubricants.....	MA-14
Lubrication circuit (engine).....	LC-5, 20
Lubrication oil A/C.....	HA-63
Lubrication-locks, hinges and hood latches.....	MA-43
Luggage room lamp.....	EL-66

### M

MAFS - Wiring diagram.....	EC-140, 717
Magnet clutch.....	HA-67
MAIN - Wiring diagram.....	EC-129, 707
Main drive gear (M/T).....	MT-12, 45
Main gear (Transfer).....	TF-13, 23
Mainshaft (M/T).....	MT-12, 45
Mainshaft (Transfer).....	TF-13, 20
Maintenance (engine).....	MA-17, 26
MAJOR OVERHAUL.....	AT-264
Major overhaul (Transfer).....	TF-11
Malfunction indicator lamp (MIL).....	EC-69, 642
Manual air conditioner - Wiring diagram.....	HA-23
Manual transmission number.....	GI-42
Manual transmission oil replacement.....	MA-35
MAP/BARO switch solenoid valve.....	EC-431, 1013
Mass air flow sensor (MAFS).....	EC-136, 713
Master cylinder (brake).....	BR-13
Master cylinder (clutch).....	CL-8
Meter.....	EL-72
METER - Wiring diagram.....	EL-77
MIL & Data link connectors circuit.....	EC-578, 1170
MIL/DL - Wiring diagram.....	EC-578, 1170
MIRROR - Wiring diagram.....	EL-144
Mirror defogger.....	EL-133
Mirror, door.....	BT-45
Mirror, outside.....	BT-45
Misfire.....	EC-299, 893
Model variation.....	GI-39
Molding - See Exterior.....	BT-32
M/T major overhaul.....	MT-11, 44
M/T removal and installation.....	MT-9, 41
MULTI - Wiring diagram.....	EL-207
Multi-remote control system.....	EL-202
Multipoint fuel injection (MFI) system.....	EC-29, 599
Multipoint fuel injection precautions.....	GI-5

### N

Neutral position switch.....	EC-541
------------------------------	--------

## ALPHABETICAL INDEX

NVH troubleshooting (AX) .....	AX-24
NVH troubleshooting (BR) .....	BR-5
NVH troubleshooting (CL) .....	CL-4
NVH troubleshooting (EM) .....	EM-10, 66
NVH troubleshooting (M/T) .....	MT-6, 36
NVH troubleshooting (PD) .....	PD-4
NVH troubleshooting (ST) .....	ST-5
NVH troubleshooting (SU) .....	SU-3

### O

Oil change (capacity) .....	MA-14
Oil pan (engine) .....	EM-16, 72
Oil pressure (engine) .....	LC-6, 21
Oil pump (A/T) .....	AT-279
Oil pump (engine) .....	LC-6, 21
Oil pump regulator valve (engine) .....	LC-7, 23
Oil seal replacement (engine) .....	EM-26, 82
Oil seal replacement (front final drive 4WD) .....	PD-14
Oil seal replacement (front of final drive) .....	PD-62
On board diagnostic system .....	EC-56, 627
Operating cylinder (clutch) .....	CL-9
Outside mirror .....	BT-45
Overdrive control switch .....	AT-249
Overrun clutch .....	AT-302
Overrun clutch solenoid valve .....	AT-188
Oversize piston .....	EM-48, 107

### P

Pantograph jack .....	GI-44
Park/Neutral position switch .....	EC-541, 1124
Park/neutral position switch (A/T) .....	AT-104, 249
Park/neutral position switch (M/T) .....	MT-8, 40
Parking brake control .....	BR-27
Parking lamp .....	EL-48
PCV (positive crankcase ventilation) .....	EC-39, 609
PCV filter replacement .....	MA-24
PGC/V - Wiring diagram .....	EC-370, 490, 953, 1070
Pilot bushing replacement .....	EM-54, 113
Pinion bearing preload diff .....	PD-25
Pinion gear height diff. ....	PD-25, 48, 75
Piston assembly .....	EM-52, 111
Piston pin inspection .....	EM-45, 104
Piston ring inspection .....	EM-46, 104
Piston to bore clearance .....	EM-47, 106
PNP/SW - Wiring diagram .....	EC-544, 1126
POWER - Wiring diagram .....	EL-11
Power antenna .....	EL-132
Power door lock .....	EL-178
Power door mirror .....	EL-144

Power steering fluid level .....	MA-42, ST-7
Power steering gear .....	ST-14
Power steering hydraulic pressure .....	ST-9
Power steering oil pressure switch .....	EC-568, 1159
Power steering oil pump .....	ST-24
Power steering system bleeding .....	ST-8
Power supply routing .....	EL-9
Power transistor & ignition coil .....	EC-449, 1028
Power window .....	EL-171
PRE/SE - Wiring diagram .....	EC-386, 965
Precautions (General) .....	GI-3
Pressure plate - See Clutch cover .....	CL-12
Pressure test (A/T) .....	AT-62
Propeller shaft .....	PD-3, 5, 6
Propeller shaft greasing .....	MA-38
Propeller shaft inspection .....	MA-38
Propeller shaft on vehicle service .....	PD-7
Propeller shaft vibration .....	PD-7
PST/SW - Wiring diagram .....	EC-569, 1160

### R

Radiator .....	LC-14, 31
Radiator fan - See Cooling fan .....	LC-16, 32
Radio - See Audio .....	EL-128
Rear air spoiler .....	BT-32
Rear axle .....	AX-22
Rear body .....	BT-46
Rear bumper .....	BT-15
Rear case (Transfer) .....	TF-12, 26
Rear combination lamp removal and installation .....	BT-32
Rear cover packing replacement diff. ....	PD-15, 40
Rear drum brake .....	BR-23
Rear heated oxygen sensor (HO2S) .....	EC-235, 245, 255, 265, 815, 825, 835, 845
Rear heated oxygen sensor (HO2S) heater .....	EC-273, 853
Rear seat .....	BT-38
Rear seat belt .....	RS-5
Rear side window .....	BT-41
Rear suspension .....	SU-22
Rear washer .....	EL-121
Rear window defogger .....	EL-133
Rear wiper .....	EL-121
Refrigerant connection precaution .....	HA-4
Refrigerant discharging evacuating charging .....	HA-61
Refrigerant general precaution .....	HA-3
Refrigerant lines .....	HA-74
Refrigeration cycle .....	HA-14
Release bearing (clutch) .....	CL-10
Removal and installation (A/T) .....	AT-261
Removal and installation (Transfer) .....	TF-10

## ALPHABETICAL INDEX

Reverse clutch.....AT-296  
 Reverse idler shaft (M/T).....MT-12, 45  
 Reverse lamp switch (M/T) - See Back-up  
   lamp switch (M/T) .....MT-8, 40  
 Reverse main gear (M/T) .....MT-12, 45  
 Revolution sensor (A/T).....AT-115  
 Ring gear diff. inspection .....PD-22, 46, 69  
 RO2H-L - Wiring diagram.....EC-856  
 RO2H-R - Wiring diagram .....EC-855  
 Road wheel size .....GI-43  
 Roof trim.....BT-30  
 Room lamp - See Interior lamp.....EL-66  
 RRO2 - Wiring diagram.....EC-238, 248,  
   258, 267  
 RRO2/H - Wiring diagram .....EC-275  
 RRO2LH - Wiring  
   diagram.....EC-819, 829, 839, 848  
 RRO2RH - Wiring  
   diagram.....EC-818, 828, 838, 847

S

SAE J1930 terminology list.....GI-49  
 Seal - See Exterior.....BT-32  
 Seat belt inspection .....MA-44, RS-6  
 Seat belt pre-tensioner.....RS-9, 14  
 Seat belt pre-tensioner disposal.....RS-21  
 Seat belt, front .....RS-4  
 Seat belt, rear.....RS-5  
 Seat, front.....BT-37  
 Seat, rear.....BT-38  
 Self-diagnostic results .....EC-70, 643  
 SHIFT - Wiring diagram .....AT-252  
 Shift control (Transfer) .....TF-14, 27  
 Shift control components (M/T) .....MT-13, 47  
 Shift fork (M/T).....MT-13, 47  
 Shift lever.....MT-13, 47  
 Shift lock system .....AT-251  
 Shift schedule .....AT-338  
 Shift solenoid valve A  
   (A/T).....AT-125, 136, 146, 169  
 Shift solenoid valve B  
   (A/T).....AT-125, 130, 146, 174  
 Shock absorber (front).....SU-14  
 Shock absorber (rear).....SU-24  
 Side bearing preload (front final drive  
   4WD) .....PD-23  
 Side bearing preload diff. ....PD-47  
 Side shaft diff.....PD-21  
 Side trim .....BT-24  
 Smart entrance control unit.....EL-254  
 SMJ (super multiple junction).....EL-288  
 Spare tire size .....GI-43  
 Spark plug replacement.....MA-22, 32  
 Speedometer .....EL-72  
 Spiral cable .....RS-16  
 Spot lamp .....EL-66

SRS - See Supplemental Restraint  
   System .....RS-9  
 SRS - Wiring diagram.....RS-32  
 SRS Trouble diagnoses.....RS-27  
 S/SIG - Wiring diagram .....EC-558, 1150  
 Stabilizer bar (front).....SU-16  
 Stabilizer bar (rear).....SU-26  
 Stall test (A/T).....AT-59  
 Standardized relay .....EL-7  
 START - Wiring diagram.....SC-9  
 Start signal.....EC-557, 1149  
 Starter .....SC-12  
 Starting system.....SC-6  
 Steering gear, linkage and transfer gear  
   inspection.....MA-41  
 Steering linkage.....ST-27  
 Steering switch.....EL-33  
 Steering wheel and column.....ST-10  
 Steering wheel play.....ST-6  
 Steering wheel turning force .....ST-8  
 Stop lamp .....EL-49  
 STOP/L - Wiring diagram .....EL-49  
 Striking rod (M/T).....MT-13, 47  
 Sub-gear (M/T) .....MT-12, 45  
 Sunroof.....BT-39  
 Supplemental Restraint System .....RS-9  
 Supplemental restraint system - Wiring  
   diagram .....RS-32  
 SW/V - Wiring diagram.....EC-434, 1016  
 Symbols and abbreviations.....GI-9  
 Symptom matrix chart.....EC-111, 688  
 Synchronizer (M/T) .....MT-12, 45  
 System readiness test (SRT)  
   code .....EC-58, 629

T

Tachometer.....EL-72  
 Tail lamp .....EL-48  
 TAIL/L - Wiring diagram .....EL-48  
 TCM circuit diagram .....AT-13  
 TCM inspection table.....AT-92  
 TFTS - Wiring diagram.....EC-295, 877  
 THEFT - Wiring diagram .....EL-231  
 Theft warning system .....EL-225  
 Thermostat .....LC-13, 29  
 Three way catalyst.....EC-346  
 Three way catalyst function (Left  
   bank) .....EC-941  
 Three way catalyst function (Right  
   bank) .....EC-941  
 Three way catalyst precautions.....GI-5  
 Throttle bodies .....EM-12, 68  
 Throttle chambers .....EM-12, 68  
 Throttle drum adjustment.....FE-3  
 Throttle position sensor (TPS) .....EC-172, 744



# ALPHABETICAL INDEX

Throttle position sensor  
 adjustment.....EC-95, 669  
 Throttle position  
 switch .....AT-183, 250, EC-422, 998  
 Throwout bearing - See Clutch release  
 bearing.....CL-10  
 Tie-rod .....ST-27  
 Tie-rod ball joints.....ST-27  
 Tightening torque of standard bolts.....GI-48  
 Timing belt.....EM-75  
 Timing chain .....EM-18  
 Tire rotation .....MA-40  
 Tire size .....GI-43  
 Tooth contact (front final drive 4WD).....PD-29  
 Tooth contact diff. ....PD-52, 78  
 Torque converter installation .....AT-263  
 Torque converter clutch solenoid  
 valve.....AT-151, 159  
 Torsion bar spring.....SU-14  
 Tow truck towing .....GI-45  
 Towing point.....GI-47  
 TP/SW - Wiring diagram .....EC-424, 1000  
 TPS - Wiring diagram.....EC-177, 749  
 Transfer case .....TF-12  
 Transfer oil replacement .....MA-37  
 Transfer serial number.....GI-42  
 Transmission case (M/T) .....MT-11, 44  
 Transmission serial number.....GI-42  
 Tread-FR&RR (Dimensions).....GI-43  
 Trim .....BT-24  
 Trouble diagnoses .....GI-33  
 TURN - Wiring diagram.....EL-57  
 Turn signal lamp.....EL-55  
 Two trip detection logic.....EC-56, 627  
 Two-pole lift.....GI-45

U

Under body.....BT-50

V

Vacuum cut valve .....EC-603  
 Vacuum cut valve bypass  
 valve.....EC-523, 530, 603, 1106, 1112  
 Vacuum hose drawing (Engine  
 control) .....EC-27, 597  
 Valve clearance .....EM-38, 115

Valve guide.....EM-33, 90  
 Valve lifter.....EM-37  
 Valve seat.....EM-35, 91  
 Valve spring.....EM-37, 93  
 Vehicle identification number.....GI-41  
 Vehicle recovery (freeing a stuck  
 vehicle) .....GI-47  
 Vehicle speed sensor (VSS) .....EC-412, 988  
 VENT/V - Wiring  
 diagram.....EC-377, 959, 1081, 1101  
 Viscosity number (SAE) .....MA-15  
 VSS - Wiring diagram.....EC-414, 990

W

WARN - Wiring diagram.....EL-88  
 Warning chime .....EL-96  
 Warning lamps .....EL-87  
 Washer, front .....EL-110  
 Washer, rear.....EL-121  
 Water pump .....LC-12, 28  
 Water temperature gauge .....EL-72  
 Weatherstrip - See Exterior.....BT-32  
 Wheel alignment (front) .....SU-7  
 Wheel balance.....MA-40  
 Wheel bearing (front).....AX-4  
 Wheel bearing (rear).....AX-25  
 Wheel hub (front).....AX-11  
 Wheel sensors (ABS).....BR-49, 69  
 Wheel size .....GI-43  
 Wheelbase (Dimensions).....GI-43  
 Wide open & closed throttle position  
 switch .....EC-172, 744  
 Width (Dimensions).....GI-43  
 WINDOW - Wiring diagram.....EL-173  
 Window, back .....BT-32  
 Window, door.....BT-18  
 Window, opera.....BT-46  
 Windshield.....BT-40  
 WIP/R - Wiring diagram .....EL-122  
 WIPER - Wiring diagram .....EL-113  
 Wiper, front .....EL-110  
 Wiper, rear.....EL-121  
 Wiring Diagram (Cell code) list .....EL-286  
 Wiring diagrams.....GI-10  
 Withdrawal lever (clutch).....CL-10  
 Wrist pin - See Piston pin  
 inspection.....EM-45, 104

GI  
 MA  
 EM  
 LC  
 EC  
 FE  
 CL  
 MT  
 AT  
 TF  
 PD  
 AX  
 SU  
 BR  
 ST  
 RS  
 BT  
 HA  
 SC  
 EL

## NOTES