

ALPHABETICAL INDEX

SECTION **IDX**

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

ALPHABETICAL INDEX

A

AAC/V - Wiring diagram.....EC-430, 1030
ABS - Wiring diagram.....BR-40
ABS sensor rotorAX-13
Absolute pressure sensor.....EC-160, 748
A/C air flowHA-19
A/C component layoutHA-20
A/C compressor clutch removal and
installationHA-71
A/C compressor descriptionHA-17
A/C compressor precautionHA-8
A/C compressor special
service tool.....HA-12, 16
A/C control linkage adjustment
(manual A/C)HA-41
A/C control operation (manual A/C)HA-18
A/C diagnostic work flow (manual A/C).....HA-27
A/C HFC134a (R134a) system
precaution.....HA-3
A/C HFC134a (R134a) system
service toolsHA-13
A/C HFC134a system service
equipment precaution.....HA-8
A/C lubricant (R134a)HA-67
A/C lubrication oil.....HA-67
A/C operational checkHA-28
A/C pressure switch.....HA-51
A/C relayHA-51
A/C service data specificationHA-87
A/C switch.....HA-18
A/C symptom chart (manual A/C).....HA-27
A/C trouble diagnoses (manual A/C).....HA-22
A/C, M - Wiring diagram.....HA-25
Accelerator control system.....FE-3
Accelerator wire adjustment.....FE-3
Air bagRS-10, 15
Air bag disposalRS-20
Air bag precautionsGI-3
Air bleeding (hydraulic clutch)CL-5, 7
Air bleeding for brake system.....BR-8
Air cleaner filter replacement.....MA-20, 29
Air conditioner cut control.....EC-33, 618
Air flow meter - See Mass air
flow sensor.....EC-150, 739
Air spoiler, rearBT-32
AlternatorSC-37
Angular tightening application.....EM-4
Antenna - See Power antenna.....EL-148
Anti-lock brake system - Wiring
diagramBR-40
ASCD (automatic speed control
device)EL-150
ASCD - Wiring diagram.....EL-155
A/T - Wiring diagram - AT - FTSAT-106
A/T - Wiring diagram - AT - MAINAT-95
A/T - Wiring diagram - AT - PNP/SWAT-100

A/T - Wiring diagram - AT - VSS A/TAT-112
A/T controlEC-1040
A/T diagnosis communication lineEC-1150
A/T fluid temperature sensorAT-109
A/T shift lock systemAT-249
A/T shift lock system - Wiring diagramAT-250
A/T Wiring diagram - AT - ENG SSAT-116
A/T Wiring diagram AT - 1STAT-122
A/T Wiring diagram AT - 2ND.....AT-128
A/T Wiring diagram AT - 3RD.....AT-134
A/T Wiring diagram AT - 4TH.....AT-141
A/T Wiring diagram AT - BA/FTSAT-189
A/T Wiring diagram AT - LPSV.....AT-160
A/T Wiring diagram AT - NONDTCAT-201
A/T Wiring diagram AT - OVRCSV.....AT-184
A/T Wiring diagram AT - SSV/AAT-165
A/T Wiring diagram AT - SSV/BAT-170
A/T Wiring diagram AT - TCCSIGAT-153
A/T Wiring diagram AT - TCV.....AT-148
A/T Wiring diagram AT - TPS.....AT-176
A/T Wiring diagram AT - VSSMTR.....AT-195
AT/C - Wiring diagramEC-1042
ATDIAG - Wiring diagramEC-1151
AudioEL-143
AUDIO - Wiring diagramEL-144
Audio and A/C control removal and
installation - See Instrument panel.....BT-20
Auto lock free running hubAX-10
Automatic speed control system -
See ASCD.....EL-150
Automatic transmission fluid
replacementMA-36
Automatic transmission numberGI-43
Auxiliary air control (AAC)
valve.....EC-427, 1027

B

Back doorBT-15
Back door opener - See Back doorBT-15
Back windowBT-32
Back-up lampEL-50
Back-up lamp switch (M/T).....MT-8, 40
BACK/L - Wiring diagramEL-50
Ball joint (front)SU-18
Basic inspection.....EC-104, 694
Battery.....SC-4
Battery/Starting/Charging
System TesterSC-7, 16, 29
Baulk ring (M/T).....MT-12, 45
Blower motor.....HA-36
Blower resistorHA-36
Body alignment.....BT-47
Body mountingBT-46
Boring/honing cylinder block.....EM-47, 106
Brake boosterBR-16
Brake fluid change.....BR-6

ALPHABETICAL INDEX

Brake fluid level.....	MA-39	Compression pressure.....	EM-15, 70
Brake fluid level and line check.....	BR-6	Compressor clutch removal and installation.....	HA-71
Brake hydraulic line.....	BR-9	Compressor description.....	HA-17
Brake inspection.....	MA-39	Compressor precaution.....	HA-8
Brake lines and cables inspection.....	MA-39	Compressor special service tool.....	HA-12, 16
Brake master cylinder.....	BR-13	Connecting rod.....	EM-46, 105
Brake pedal.....	BR-11	Connecting rod bearing clearance.....	EM-50, 109
Bulb specifications.....	EL-266	Connecting rod bushing clearance.....	EM-51, 110
Bumper, front.....	BT-12	Connector inspection.....	GI-19
Bumper, rear.....	BT-15	Console box - See Instrument panel.....	BT-20
BYPS/V - Wiring diagram.....	EC-532, 540, 1137, 1144	CONSULT for ABS.....	BR-49
C			
Camshaft inspection.....	EM-32, 88	CONSULT for engine.....	EC-86, 675
Camshaft position sensor (CMPS).....	EC-319, 946	CONSULT-II general information.....	GI-38
Canister-See EVAP canister.....	EC-34, 619	Control lever (M/T).....	MT-13, 47
Center bearing assembly (propeller shaft).....	PD-10	Control valve (A/T).....	AT-281
Center bearing disassembly (propeller shaft).....	PD-8	Converter housing installation.....	AT-260
Center case (Transfer).....	TF-12	COOL/F - Wiring diagram.....	EC-911, 1054
CHARGE - Wiring diagram.....	SC-27	Coolant mixture ratio.....	MA-15
Charging system.....	SC-26	Coolant replacement.....	MA-17, 26
Chassis and body maintenance.....	MA-34	Cooling circuit (engine).....	LC-10, 26
CHIME - Wiring diagram.....	EL-101	Cooling fan.....	LC-16, 32
CIGAR - Wiring diagram.....	EL-130	Cooling fan control.....	EC-554, 1051, 1063
Cigarette lighter.....	EL-130	Cooling unit (A/C evaporator).....	HA-86
Circuit breaker.....	EL-16	Counter gear (M/T).....	MT-12, 45
CKPS - Wiring diagram.....	EC-315, 448, 942, 1070	Counter gear (Transfer).....	TF-13, 23
Closed loop control.....	EC-444	Coupling sleeve (M/T).....	MT-12, 45
Closed loop control (Left bank).....	EC-1049	Crank angle sensor built into distributor - See Camshaft position sensor.....	EC-319, 946
Closed loop control (Right bank).....	EC-1049	Crankcase emission control system - See positive crankcase ventilation.....	EC-49, 635
Closed throttle position switch.....	EC-433, 1033	Crankcase ventilation system - See Positive crankcase ventilation.....	EC-49
Clutch cover.....	CL-12, 13	Crankshaft.....	EM-48, 107
Clutch disc.....	CL-12	Crankshaft position sensor (OBD).....	EC-313, 446, 940
Clutch fluid level.....	MA-34	Crankshaft position sensor (OBD) cog chipping.....	EC-446, 1068
Clutch master cylinder.....	CL-8	Cruise control - See ASCD.....	EL-150
Clutch operating cylinder.....	CL-9	Cylinder block.....	EM-44, 102
Clutch pedal.....	CL-5, 6	Cylinder block boring.....	EM-47, 107
Clutch release bearing.....	CL-10	Cylinder head.....	EM-29, 84
Clutch release mechanism.....	CL-10	Cylinder head bolt tightening.....	EM-96
Clutch withdrawal lever.....	CL-10	D	
CMPS - Wiring diagram.....	EC-322, 949	Data link connector for Consult.....	EC-51, 675
Collision diagnosis.....	RS-53	Daytime light system.....	EL-40
Combination lamp, front, removal and installation.....	BT-12	Daytime running light - See Daytime light system.....	EL-40
Combination lamp, rear, removal and installation.....	BT-32	DEF - Wiring diagram.....	EL-134
Combination meter.....	EL-74	Detonation sensor - See Knock sensor.....	EC-309, 936
Combination meter removal and installation - See Instrument panel.....	BT-20		
Combination switch.....	EL-31		
Component Location (manual A/C).....	HA-22		

ALPHABETICAL INDEX

- Diagnosis sensor unitRS-14
Diagnostic trouble code (DTC)
 for OBD systemEC-13, 597, 654
Diagnostic trouble code (DTC)
 inspection priority chartEC-118, 708
Differential carrier assemblyPD-31, 55, 82
Differential carrier disassemblyPD-45, 68
Differential gear oil replacementMA-38
DimensionsGI-44
DistributorEC-31, 617
Distributor ignition (DI) systemEC-31, 617
D/LOCK - Wiring diagramEL-183
Dome light - See Interior lampEL-65
Door glassBT-18
Door glass Fitting AdjustmentBT-18
Door lockBT-18
Door mirrorBT-45
Door trimBT-27
Door, frontBT-18
Drive belt inspectionMA-16, 25
Drive chain (Transfer)TF-13
Drive pinion diff. inspectionPD-24, 48, 71
Drive pinion heightPD-26, 50, 78
Drive plate runoutEM-52, 111
Drive shaft (front)AX-16
Dropping resistor (A/T)AT-162
DTC work supportEC-96, 686
DTRL - Wiring diagramEL-43

E

- ECM input/output signalEC-129, 719
ECTS - Wiring
 diagramEC-170, 189, 757, 775
EGR control (EGRC) - BPT valveEC-339
EGR control (EGRC) - solenoid valveEC-452
EGR temperature sensorEC-459
EGR/TS - Wiring diagramEC-462
EGRC/V - Wiring diagramEC-454
EGRC1 - Wiring diagramEC-331, 468
Electrical diagnosesGI-22
Electrical ignition systemEC-31, 617
Electrical unitEL-274
Electrical units locationEL-241
Electronic ignition (EI) systemEC-31
Engine compartmentBT-48
Engine control circuit diagramEC-25, 611
Engine control component parts
 locationEC-23, 609
Engine control module (ECM)EC-440, 1045
Engine control system diagram
 and chartEC-26, 612
Engine coolant temperature
 sensor (ECTS)EC-168, 187, 755, 773
Engine fail-safe systemEC-119, 709
Engine oil filter replacementMA-21, 30
Engine oil precautionsGI-6

- Engine oil replacementMA-20, 29
Engine outer component partsEM-12, 68
Engine removalEM-41, 99
Engine room - See Engine
 compartmentBT-48
Engine serial numberGI-43
EVAP canisterEC-34, 620
EVAP canister purge volume control
 solenoid valveEC-491, 619, 973, 1092
EVAP canister purge volume
 control valveEC-369, 491
EVAP canister vent control
 valveEC-377, 503, 519, 980, 1104, 1123
EVAP control system (small leak)
 diagnosisEC-36, 352, 474, 476,
 958, 1075, 1077
EVAP control system pressure
 sensorEC-385, 986
EVAP control system purge flow
 monitoring diagnosisEC-509, 1111
EVAP system close modeEC-36
EVAP vapor lines inspectionMA-23, 32
Evaporative emission (EVAP)
 systemEC-34, 619
Exhaust gas recirculation
 (EGR) valveEC-327, 465
Exhaust systemFE-9
Exhaust system inspectionMA-34
ExteriorBT-32

F

- Fan switchHA-35
Fast idle cam (FIC) inspection and
 adjustmentEC-639
F/FOG - Wiring diagramEL-52
FICD - Wiring diagramEC-589, 1190
Final drive disassemblyPD-44, 67
Final drive pre-inspectionPD-44, 67
Final drive removal and
 installationPD-44, 67
Finisher, interior - See TrimBT-24
Floor trimBT-24
Flow chartsGI-22
Fluid temperature sensor (A/T)AT-109
FluidsMA-13
Flywheel (clutch)CL-12, 13
Flywheel runoutEM-52, 111
FO2H-L - Wiring diagramEC-832
FO2H-R - Wiring diagramEC-831
Fog lamp, frontEL-51
Fog lamp, front, removal and
 installationBT-12
Fork rod (M/T)MT-13, 47
Forward clutchAT-300
F/PUMP - Wiring diagramEC-578, 1179
Freeze frame dataEC-68, 654

ALPHABETICAL INDEX

FRO2 - Wiring diagram.....	EC-196, 217, 227	Fuel pump.....	EC-576, 1177
FRO2/H - Wiring diagram.....	EC-234	Fuel pump and gauge.....	FE-7
FRO2LH - Wiring diagram.....	EC-783, 811, 824	Fuel pump relay.....	EC-576
FRO2RH - Wiring diagram.....	EC-782, 810, 823	Fuel system.....	FE-4
Front axle.....	AX-2	Fuel tank temperature sensor.....	EC-294, 901
Front bumper.....	BT-12	Fuel tank vacuum relief valve.....	EC-35, 620
Front case (Transfer).....	TF-12, 25	FUELLH - Wiring diagram.....	EC-887, 896
Front combination lamp removal and installation.....	BT-12	FUELRH - Wiring diagram.....	EC-886, 895
Front disc brake.....	BR-19	Fuse.....	EL-16
Front door.....	BT-18	Fuse block.....	EL-271
Front drive shaft (Transfer).....	TF-13, 22	Fusible link.....	EL-16
Front final drive disassembly (4WD).....	PD-19		
Front final drive pre-inspection (4WD).....	PD-19	G	
Front final drive removal and installation (4WD).....	PD-18		
Front fog lamp.....	EL-51	Garage jack and safety stand.....	GI-45
Front fog lamp removal and installation.....	BT-12	Gauges.....	EL-74
Front heated oxygen sensor (HO2S).....	EC-192, 200, 207, 214, 225	Gear components (M/T).....	MT-12, 45
Front heated oxygen sensor (HO2S) (Left bank).....	EC-778, 789, 798, 807, 821	Generator.....	SC-37
Front heated oxygen sensor (HO2S) (Right bank).....	EC-778, 789, 798, 807, 821	Generator - See Alternator.....	SC-37
Front heated oxygen sensor (HO2S) heater.....	EC-232	Generic scan tool (GST).....	EC-98, 688
Front heated oxygen sensor heater (Left bank).....	EC-829	Glass.....	BT-18
Front heated oxygen sensor heater (Right bank).....	EC-829	Grease.....	MA-13
Front oxygen sensor (O2S) monitor.....	EC-669		
Front passenger air bag.....	RS-10, 18	H	
Front seat.....	BT-37		
Front seat belt.....	RS-4	Harness connector.....	EL-5
Front suspension.....	SU-2	Harness connector inspection.....	GI-19
Front washer.....	EL-112	Harness layout.....	EL-244
Front wiper.....	EL-112	Hazard warning lamp.....	EL-55
FUEL - Wiring diagram.....	EC-282, 289	Headlamp.....	EL-34
Fuel cut control (at no load & high engine speed).....	EC-33, 619	Headlining - See Roof trim.....	BT-30
Fuel filler lid.....	BT-15	Heated oxygen sensor (HO2S) (front).....	EC-192, 200, 207, 214, 225
Fuel filter.....	EC-51	Heated oxygen sensor (HO2S) heater (front).....	EC-232
Fuel filter replacement.....	MA-19, 28	Heated oxygen sensor (HO2S) heater (rear).....	EC-275
Fuel gauge.....	EL-74	Heated oxygen sensor (rear).....	EC-237, 247, 257, 267
Fuel injection system.....	EC-280, 287	Heater unit (heater core).....	HA-85
Fuel injection system (Left bank).....	EC-884, 893	Height (Dimensions).....	GI-44
Fuel injection system (Right bank).....	EC-884, 893	HFC134a (R134a) system precaution.....	HA-3
Fuel injector.....	EC-567	HFC134a (R134a) system service tools.....	HA-13
Fuel line inspection.....	MA-19, 28	HFC134a system service equipment precaution.....	HA-8
Fuel precautions.....	GI-7	High clutch.....	AT-298
Fuel pressure check.....	EC-51, 637	H/LAMP - Wiring diagram.....	EL-35
Fuel pressure regulator.....	EC-52, 638	Hood.....	BT-12
Fuel pressure release.....	EC-51, 637	Horn.....	EL-129
		HORN - Wiring diagram.....	EL-129
		How to erase DTC for OBD system.....	EC-79, 666
		Hydraulic lash adjuster inspection.....	EM-94

ALPHABETICAL INDEX

I

IACV-AAC valveEC-427, 1027
IACV-FICD solenoid valveEC-588, 1189
IATS - Wiring diagramEC-164, 752
IdentificationHA-4
Identification plateGI-42
Idle air control (IAC) systemEC-427
Idle air control valve (IACV)EC-427, 1027
Idle mixture ratioEC-53, 641
Idle speedEC-53, 641
IGN/SG - Wiring diagramEC-561, 1163
Ignition control systemEC-559, 1162
Ignition timingEC-53, 641
ILL - Wiring diagramEL-63
IlluminationEL-62
INJECT - Wiring diagramEC-568, 1169
InjectorEC-1168
Injector removal and installationEC-52, 638
Instrument panelBT-20
INT/L - Wiring diagramEL-68
Intake air temperature sensorEC-162, 750
Intake door control linkage
 adjustmentHA-41
Intake manifoldEM-12, 68
InteriorBT-24
Interior lampEL-65

J

Jacking pointsGI-45
Joint connector (J/C)EL-273
Journal bearing assembly
 (propeller shaft)PD-10
Journal bearing disassembly
 (propeller shaft)PD-9
Jump seatBT-38
Junction box (J/B)EL-271

K

Keyless entry system - See Multi-remote
 control systemEL-194
Knock sensor (KS)EC-309, 310, 936
Knuckle spindleAX-14
KS - Wiring diagramEC-937

L

Leaf spring (rear)SU-26
Length (Dimensions)GI-44
License lampEL-48
Lifting pointsGI-46

Limited slip diff. adjustmentPD-75
Limited slip diff. assemblyPD-76
Limited slip diff. disassemblyPD-72
Limited slip diff. inspectionPD-73
Line pressure solenoid
 valveAT-145, 157, 162
Line pressure test (A/T)AT-61
Liquid gasket applicationEM-4, 19
Location of electrical unitsEL-241
Lock, doorBT-18
Low and reverse brakeAT-304
Lubricant (R134a) A/CHA-67
LubricantsMA-13
Lubrication circuit (engine)LC-5, 20
Lubrication oil A/CHA-67
Lubrication-locks, hinges and
 hood latchesMA-42
Luggage room lampEL-65

M

MAFS - Wiring diagramEC-154, 743
Magnet clutchHA-71
MAIN - Wiring diagramEC-143, 733
Main drive gear (M/T)MT-12, 45
Main gear (Transfer)TF-13, 23
Mainshaft (M/T)MT-12, 45
Mainshaft (Transfer)TF-13, 20
Maintenance (engine)MA-16, 25
MAJOR OVERHALLAT-262
Major overhaul (Transfer)TF-11
Malfunction indicator lamp (MIL)EC-80, 668
Manual air conditioner - Wiring
 diagramHA-25
Manual transmission numberGI-43
Manual transmission oil
 replacementMA-34
Mass air flow sensor (MAFS)EC-150, 739
Master cylinder (brake)BR-13
Master cylinder (clutch)CL-8
MeterEL-74
METER - Wiring diagramEL-79
MIL & Data link connectors
 circuitEC-594, 1195
MIL/DL - Wiring diagramEC-594, 1195
MIRROR - Wiring diagramEL-149
Mirror defoggerEL-131
Mirror, doorBT-45
Mirror, out sideBT-45
MisfireEC-300, 927
Mode door control linkage
 adjustmentHA-38
Model variationGI-40
Molding - See ExteriorBT-32
M/T major overhaulMT-11, 44
M/T removal and installationMT-9, 41
MULTI - Wiring diagramEL-200

ALPHABETICAL INDEX

Multi-remote control system.....EL-194
 Multiport fuel injection (MFI)
 system.....EC-29, 615
 Multiport fuel injection precautionsGI-5

N

Neutral position switch.....EC-548
 NVH troubleshooting (AX)AX-4, 27
 NVH troubleshooting (BR)BR-5
 NVH troubleshooting (CL).....CL-4
 NVH troubleshooting (EM).....EM-10, 66
 NVH troubleshooting (M/T).....MT-6, 36
 NVH troubleshooting (PD).....PD-4
 NVH troubleshooting (ST).....ST-5
 NVH troubleshooting (SU).....SU-3

O

Oil change (capacity)MA-13
 Oil pan (engine)EM-16, 72
 Oil pressure (engine)LC-6, 21
 Oil pump (A/T).....AT-277
 Oil pump (engine)LC-6, 21
 Oil pump regulator valve (engine)LC-7, 23
 Oil seal replacement (engine).....EM-26, 82
 Oil seal replacement (front
 final drive 4WD)PD-15
 Oil seal replacement (front of
 final drive)PD-42, 64
 On board diagnostic system.....EC-67, 653
 Operating cylinder (clutch).....CL-9
 ORVR (On-board Refueling Vapor
 Recovery).....EC-39, 625
 Out side mirrorBT-45
 Overdrive control switchAT-246
 Overrun clutchAT-300
 Overrun clutch solenoid valveAT-186
 Oversize pistonEM-48, 107

P

Pantograph jackGI-45
 Park/Neutral position switchEC-548, 1153
 Park/neutral position switch
 (A/T).....AT-103, 247
 Park/neutral position switch
 (M/T).....MT-8, 40
 Parking brake control.....BR-27
 Parking lampEL-48
 PCV (positive crankcase
 ventilation).....EC-49, 635
 PCV filter replacementMA-23

PGC/V - Wiring
 diagram.....EC-372, 494, 976, 1095
 Pilot bushing replacement.....EM-54, 113
 Pinion bearing preload diff.....PD-26
 Pinion gear height diff.PD-26, 50, 78
 Piston assemblyEM-52, 111
 Piston pin inspection.....EM-45, 104
 Piston ring inspection.....EM-46, 104
 Piston to bore clearance.....EM-47, 106
 PNP/SW - Wiring diagram.....EC-551, 1156
 POWER - Wiring diagramEL-11
 Power antennaEL-148
 Power door lockEL-178
 Power door mirrorEL-149
 Power steering fluid levelMA-41, ST-7
 Power steering hydraulic
 pressure.....ST-9
 Power steering oil pressure
 switchEC-584, 1184
 Power steering oil pumpST-18
 Power steering system bleeding.....ST-8
 Power supply routing.....EL-9
 Power transistor & ignition coil.....EC-559, 1162
 Power windowEL-169
 PRE/SE - Wiring diagram.....EC-388, 988
 Precations for Leak detection
 dye.....HA-4
 Precautions (General).....GI-3
 Pressure plate - See Clutch cover.....CL-12
 Pressure test (A/T)AT-61
 Propeller shaftPD-3, 5, 6
 Propeller shaft greasingMA-37
 Propeller shaft inspection.....MA-37
 Propeller shaft on vehicle servicePD-7
 Propeller shaft vibration.....PD-7
 PST/SW - Wiring diagramEC-585, 1185

R

Radiator.....LC-14, 31
 Radiator fan - See Cooling fan.....LC-16, 32
 Radio - See AudioEL-143
 Rear air spoiler.....BT-32
 Rear axle.....AX-25
 Rear body.....BT-46
 Rear bumperBT-15
 Rear case (Transfer).....TF-12, 26
 Rear combination lamp removal
 and installation.....BT-32
 Rear cover packing replacement
 diff.PD-16, 42
 Rear drum brake.....BR-23
 Rear heated oxygen sensor
 (HO2S).....EC-237, 247, 257, 267,
 836, 846, 856, 866
 Rear heated oxygen sensor
 (HO2S) heater.....EC-275, 876

ALPHABETICAL INDEX

<p>Rear seat.....BT-38 Rear seat belt.....RS-5 Rear side window.....BT-41 Rear suspension.....SU-21 Rear washer.....EL-123 Rear window defogger.....EL-131 Rear wiper.....EL-123 Refrigerant connection precaution.....HA-4 Refrigerant discharging evacuating charging.....HA-65 Refrigerant general precaution.....HA-3 Refrigerant lines.....HA-78 Refrigeration cycle.....HA-17 Release bearing (clutch).....CL-10 Removal and installation (A/T).....AT-259 Removal and installation (Transfer).....TF-10 Reverse clutch.....AT-294 Reverse idler shaft (M/T).....MT-12, 45 Reverse lamp switch (M/T) - See Back-up lamp switch (M/T).....MT-8, 40 Reverse main gear (M/T).....MT-12, 45 Revolution sensor (A/T).....AT-114 Ring gear diff. inspection.....PD-24, 48, 71 RO2H-L - Wiring diagram.....EC-879 RO2H-R - Wiring diagram.....EC-878 Road wheel size.....GI-44 Roof trim.....BT-30 Room lamp - See Interior lamp.....EL-65 RRO2 - Wiring diagram.....EC-240, 250, 260, 269 RRO2/H - Wiring diagram.....EC-277 RRO2LH - Wiring diagram.....EC-840, 850, 860, 870 RRO2RH - Wiring diagram.....EC-839, 849, 859, 869</p>	<p>Shift solenoid valve A (A/T).....AT-124, 135, 145, 167 Shift solenoid valve B (A/T).....AT-124, 129, 145, 172 Shock absorber (front).....SU-13 Shock absorber (rear).....SU-25 Side bearing preload (front final drive 4WD).....PD-25 Side bearing preload diff.PD-49 Side shaft diff.PD-23 Side trim.....BT-24 Smart entrance control unit.....EL-236 SMJ (super multiple junction).....EL-269 Spare tire size.....GI-44 Spark plug replacement.....MA-22, 31 Speedometer.....EL-74 Spiral cable.....RS-15 Spot lamp.....EL-65 SRS - See Supplemental Restraint System.....RS-10 SRS - Wiring diagram.....RS-33 S/SIG - Wiring diagram.....EC-573, 1174 Stabilizer bar (front).....SU-15 Stabilizer bar (rear).....SU-27 Stall test (A/T).....AT-58 Standardized relay.....EL-7 START - Wiring diagram.....SC-13 Start signal.....EC-572, 1173 Starter.....SC-23 Starting system.....SC-10 Steering gear, linkage and transfer gear inspection.....MA-40 Steering linkage.....ST-21 Steering switch.....EL-33 Steering wheel and column.....ST-11 Steering wheel play.....ST-6 Steering wheel turning force.....ST-9 Stop lamp.....EL-49 STOP/L - Wiring diagram.....EL-49 Striking rod (M/T).....MT-13, 47 Sub-gear (M/T).....MT-12, 45 Sunroof.....BT-39 Supplemental Restraint System.....RS-10 Supplemental restraint system - Wiring diagram.....RS-33 Symbols and abbreviations.....GI-9 Symptom matrix chart.....EC-120, 710 Synchronizer (M/T).....MT-12, 45 System readiness test (SRT) code.....EC-69, 655</p>
<p style="font-size: 2em; margin: 0;">S</p>	
<p>SAE J1930 terminology list.....GI-50 Seal - See Exterior.....BT-32 Seat belt inspection.....MA-43, RS-6 Seat belt pre-tensioner.....RS-10, 14 Seat belt pre-tensioner disposal.....RS-20 Seat belt, front.....RS-4 Seat belt, rear.....RS-5 Seat, front.....BT-37 Seat, rear.....BT-38 Self-diagnostic results.....EC-80, 669 SHIFT - Wiring diagram.....AT-250 Shift control (Transfer).....TF-14, 27 Shift control components (M/T).....MT-13, 47 Shift fork (M/T).....MT-13, 47 Shift lever.....MT-13, 47 Shift lock system.....AT-249 Shift schedule.....AT-336</p>	<p>Tachometer.....EL-74 Tail lamp.....EL-48 TAIL/L - Wiring diagram.....EL-48 TCM circuit diagram.....AT-13</p>
<p style="font-size: 2em; margin: 0;">T</p>	

ALPHABETICAL INDEX

TCM inspection table.....	AT-91
Temperature control cable and linkage adjustment.....	HA-63
TFTS - Wiring diagram.....	EC-296, 903
THEFT - Wiring diagram.....	EL-220
Theft warning system.....	EL-214
Thermal protector.....	HA-52
Thermo control amp.....	HA-53
Thermostat.....	LC-13, 29
Three way catalyst.....	EC-347
Three way catalyst function (Left bank).....	EC-953
Three way catalyst function (Right bank).....	EC-953
Three way catalyst precautions.....	GI-5
Throttle bodies.....	EM-12, 68
Throttle chambers.....	EM-12, 68
Throttle drum adjustment.....	FE-3
Throttle position sensor (TPS).....	EC-173, 760
Throttle position sensor adjustment.....	EC-104, 694
Throttle position switch.....	AT-180, 247, EC-433, 1033
Throwout bearing - See Clutch release bearing.....	CL-10
Tie-rod.....	ST-21
Tie-rod ball joints.....	ST-21
Tightening torque of standard bolts.....	GI-49
Timing belt.....	EM-75
Timing chain.....	EM-18
Tire rotation.....	MA-39
Tire size.....	GI-44
Tooth contact (front final drive 4WD).....	PD-30
Tooth contact diff.....	PD-54, 81
Torque converter installation.....	AT-260
Torque convertor clutch solenoid valve.....	AT-150, 157
Torsion bar spring.....	SU-13
Tow truck towing.....	GI-46
Towing point.....	GI-48
TP/SW - Wiring diagram.....	EC-435, 1035
TPS - Wiring diagram.....	EC-178, 765
Transfer case.....	TF-12
Transfer oil replacement.....	MA-36
Transfer serial number.....	GI-43
Transmission case (M/T).....	MT-11, 44
Transmission serial number.....	GI-43
Tread-FR&RR (Dimensions).....	GI-44
Trim.....	BT-24
Trouble diagnoses.....	GI-32
TURN - Wiring diagram.....	EL-56
Turn signal lamp.....	EL-55
Two trip detection logic.....	EC-67, 653
Two-pole lift.....	GI-46

U

Under body.....	BT-50
-----------------	-------

V

Vacuum cut valve.....	EC-619
Vacuum cut valve bypass valve.....	EC-530, 537, 619, 1135, 1141
Vacuum hose drawing (Engine control).....	EC-27, 613
Valve clearance.....	EM-38, 115
Valve guide.....	EM-33, 90
Valve lifter.....	EM-37
Valve seat.....	EM-35, 91
Valve spring.....	EM-37, 93
Vehicle identification number.....	GI-42
Vehicle recovery (freeing a stuck vehicle).....	GI-48
Vehicle speed sensor (VSS).....	EC-423, 1023
VENT/V - Wiring diagram.....	EC-379, 982, 1106, 1126
Viscosity number (SAE).....	MA-14
VSS - Wiring diagram.....	EC-425, 1025

W

WARN - Wiring diagram.....	EL-90
Warning chime.....	EL-98
Warning lamps.....	EL-89
Washer, front.....	EL-112
Washer, rear.....	EL-123
Water pump.....	LC-12, 28
Water temperature gauge.....	EL-74
Weatherstrip - See Exterior.....	BT-32
Wheel alignment (front).....	SU-6
Wheel balance.....	MA-39
Wheel bearing (front).....	AX-5
Wheel bearing (rear).....	AX-28
Wheel hub (front).....	AX-12
Wheel sensors (ABS).....	BR-55, 75
Wheel size.....	GI-44
Wheelbase (Dimensions).....	GI-44
Wide open & closed throttle position switch.....	EC-173, 760
Width (Dimensions).....	GI-44
WINDOW - Wiring diagram.....	EL-173
Window, back.....	BT-32
Window, door.....	BT-18
Window, opera.....	BT-46
Windshield.....	BT-40
WIP/R - Wiring diagram.....	EL-124
WIPER - Wiring diagram.....	EL-115
Wiper, front.....	EL-112

ALPHABETICAL INDEX

Wiper, rear.....	EL-123	Wrist pin - See Piston pin	
Wiring Diagram (Cell code) list.....	EL-267	inspection.....	EM-45, 104
Wiring diagrams.....	GI-10		
Withdrawal lever (clutch).....	CL-10		