


SUPER MULTIPLE JUNCTION (SMJ)


Installation

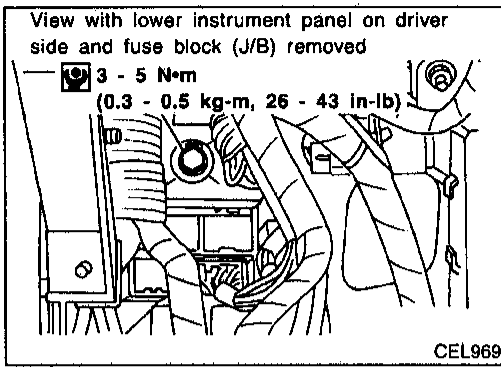

Installation

To install SMJ, tighten bolts until orange "fulltight" mark appears and then retighten to specified torque as required.

NCEL0146

 : 3 - 5 N·m (0.3 - 0.5 kg-m, 26 - 43 in-lb)

CAUTION:


Do not overtighten bolts, otherwise, they may be damaged.

SUPER MULTIPLE JUNCTION (SMJ)

Terminal Arrangement

Terminal Arrangement

NCEL0147


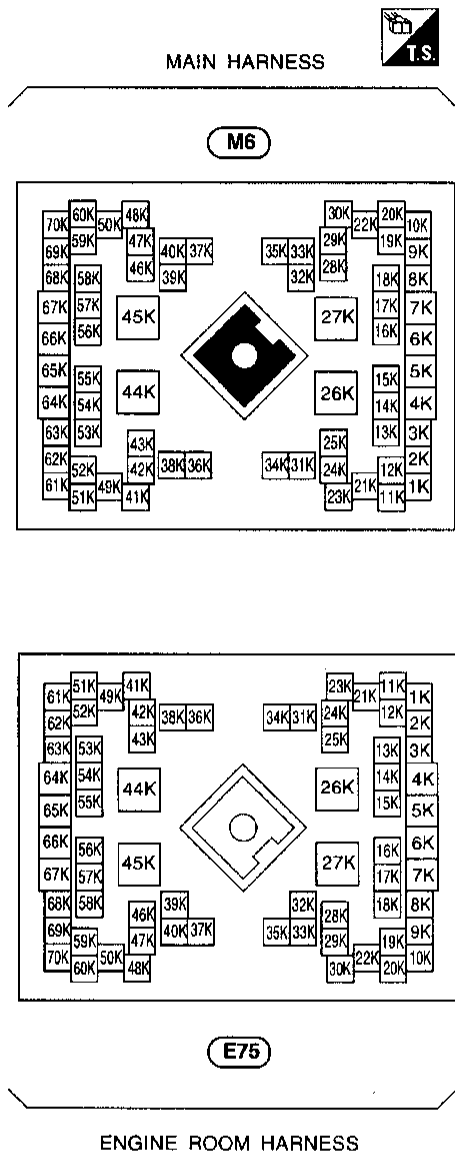


FUSE BLOCK — JUNCTION BOX (J/B)

Terminal Arrangement

Terminal Arrangement

NCEL0148

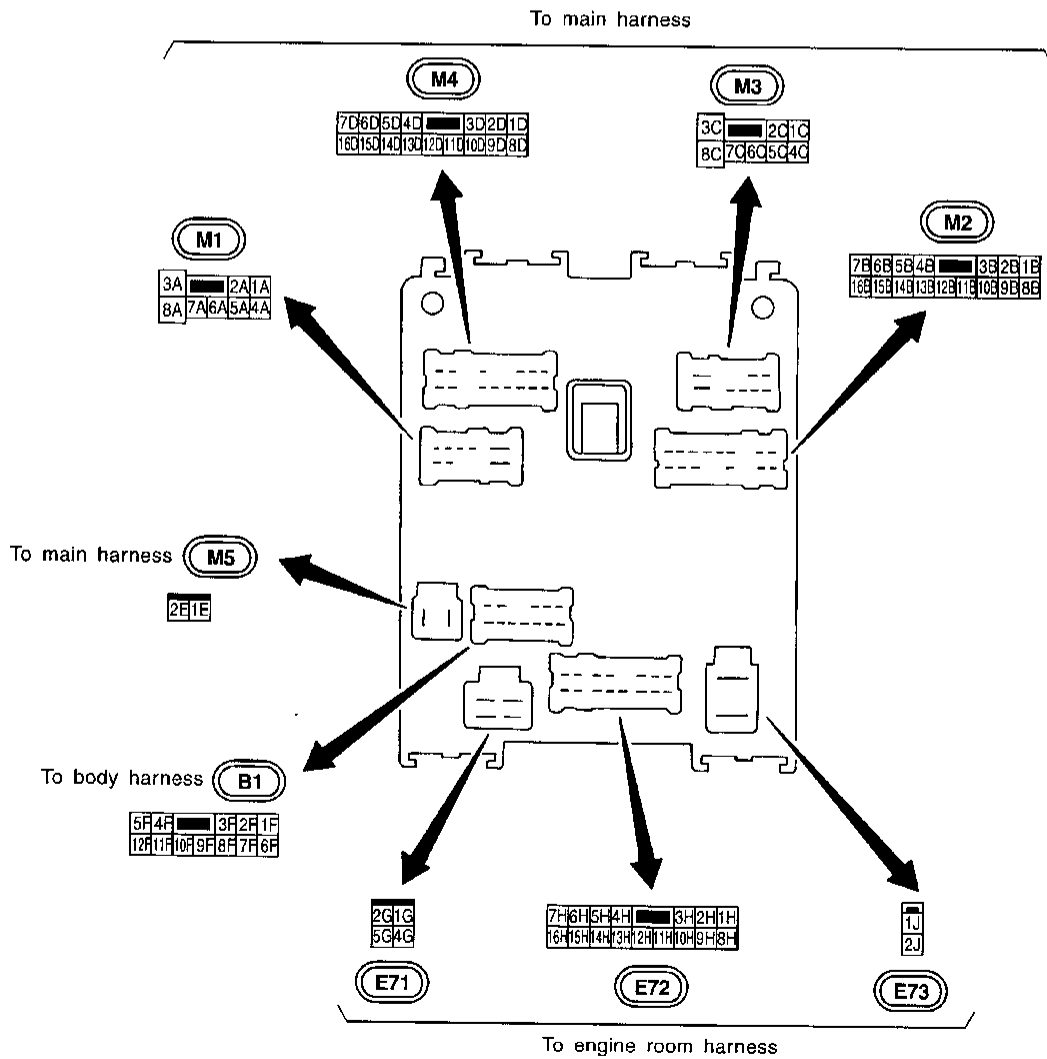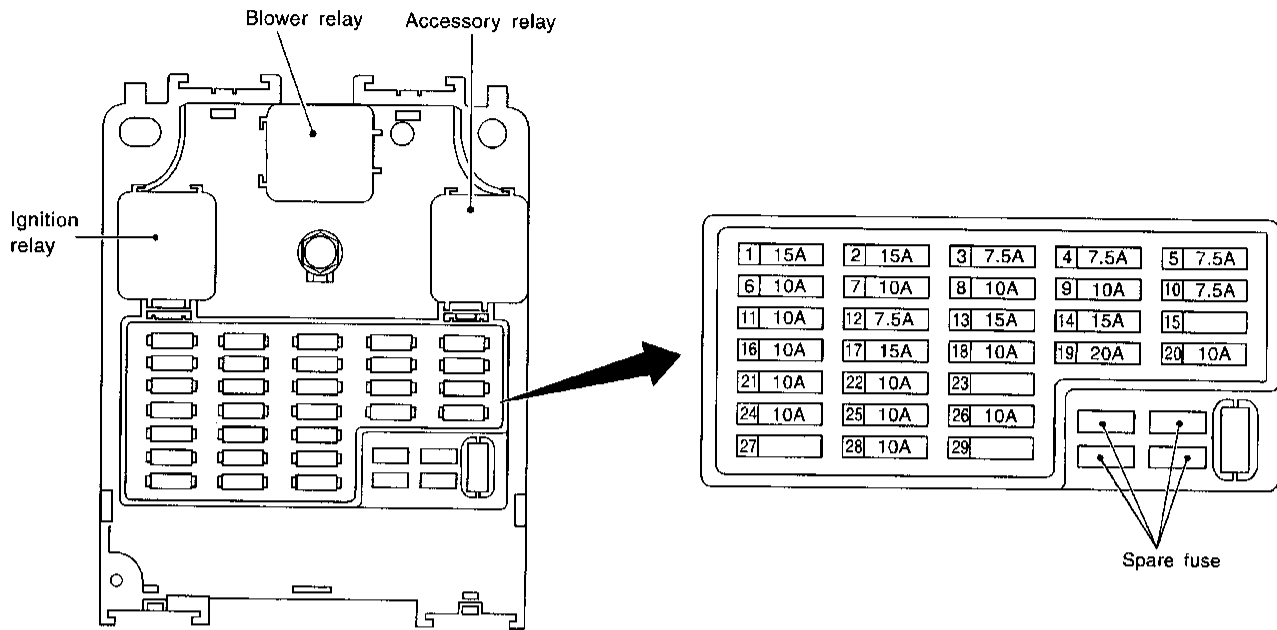


FUSE AND FUSIBLE LINK BOX

Terminal Arrangement

Terminal Arrangement

NCELO149

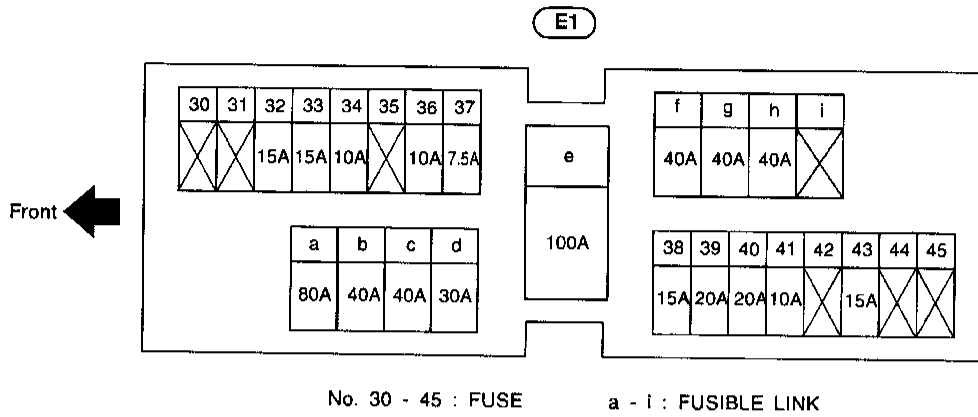

CEL972


ELECTRICAL UNITS

Terminal Arrangement

Terminal Arrangement


NCEL0150

ECM (F26)

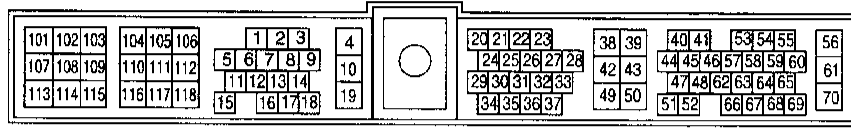


TCM (TRANSMISSION CONTROL MODULE)

 (F21)



(White)

 (F22)



(Gray)



 
A/C AUTO AMP.

(M55)



(Gray)


(M56)



(Gray)



 ABS CONTROL UNIT (E85)



SMART ENTRANCE CONTROL UNIT

(M23)



(White)

(M24)



(Black)






JOINT CONNECTOR (J/C)

Terminal Arrangement

Terminal Arrangement

NCEL0160

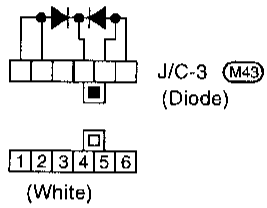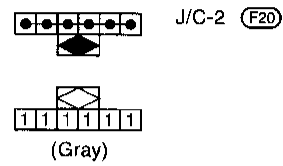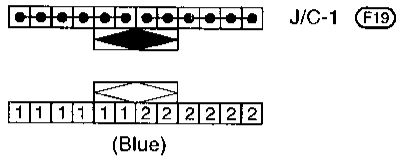

CEL974