
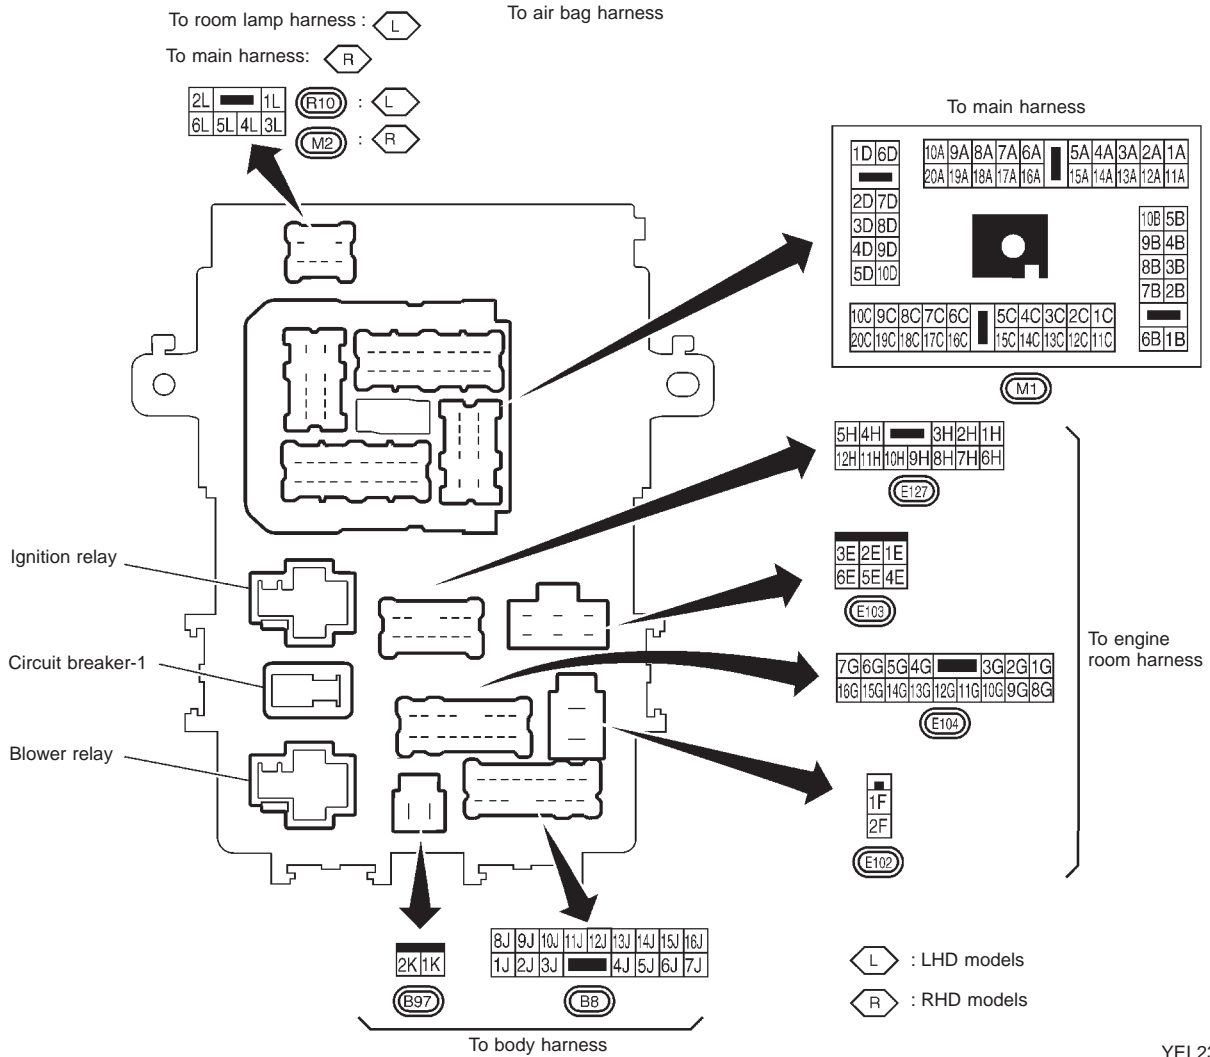




FUSE BLOCK — Junction Box (J/B)

Terminal Arrangement

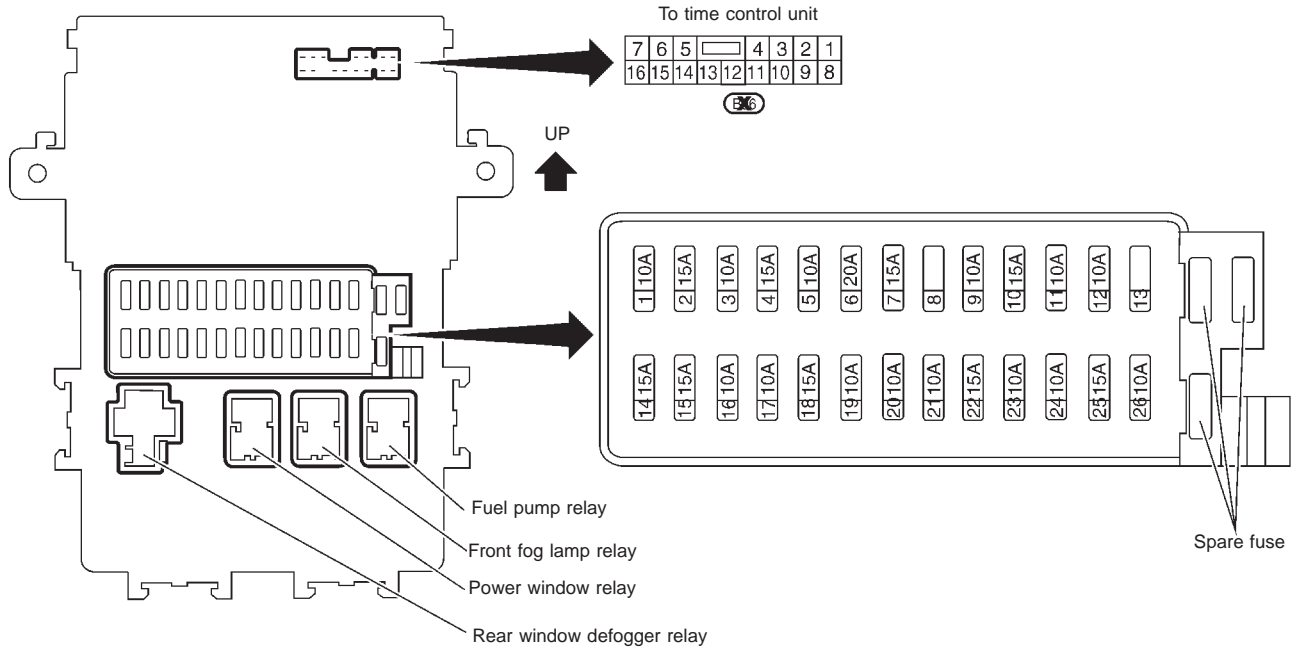

FUSE AND FUSIBLE LINK BOX

Terminal Arrangement

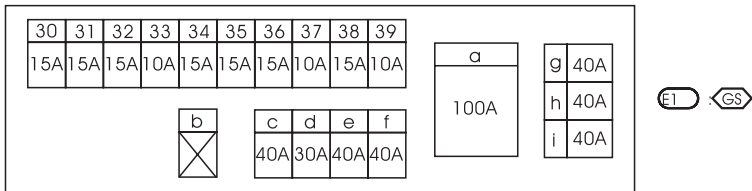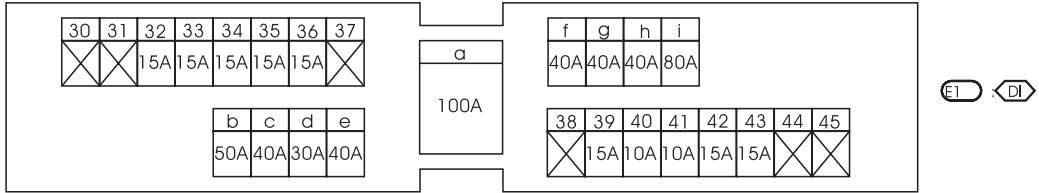


GS : With gasoline engine
DI : With diesel engine


ELECTRICAL UNITS

Terminal Arrangement

 
TCM (Transmission control module) (M48)




TCM (Transmission control module) (M78)

 


ABS CONTROL UNIT (E78)

 

ECM (SR engine and QG engine) (F101)

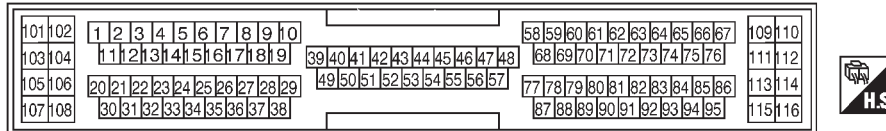

ECM (CD engine)

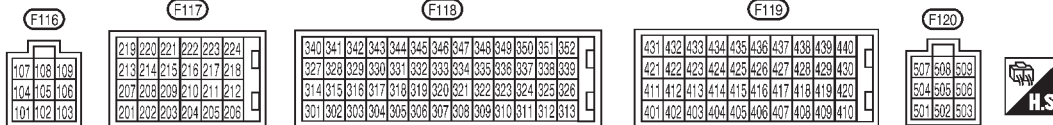

NOTES