

# ALPHABETICAL INDEX

## SECTION **IDX**

# ALPHABETICAL INDEX

## A

AAC/V - Wiring diagram....EC-QG-276, EC-SR-265  
ABS (anti-lock brake system).....BR-50  
A/C control linkage adjustment (manual  
A/C).....HA-82  
A/C control operation (auto A/C).....HA-19  
A/C diagnostic work flow (auto A/C) .....HA-26  
A/C performance chart.....HA-35  
A/C performance test diagnoses.....HA-33  
A/C relay.....HA-78  
A/C service data specification .....HA-118  
A/C switch .....HA-78  
A/C symptom chart (auto A/C) .....HA-28  
A/C trouble diagnoses (auto A/C) .....HA-26  
Accelerator control system .....FE-3  
Accelerator position sensor .....EC-CD-108  
Accelerator position switch .....EC-CD-108  
Accelerator wire adjustment .....FE-4  
A/CCUT - Wiring diagram.....EC-CD-127  
Air bag disposal.....RS-27  
Air bag precautions .....GI-3  
Air bleeding for brake system .....BR-8  
Air cleaner filter replacement .....MA-23, 34, 44  
Air conditioner cut  
control.....EC-QG-24, EC-SR-26, EC-CD-20, 126  
Air flow meter - See Mass air flow  
sensor.....EC-QG-110, EC-SR-120  
Air mix. door motor.....HA-92  
Alternator .....EL-53, 56  
Ambient sensor .....HA-86  
Antenna.....EL-229  
Anti-lock brake system - See ABS.....BR-50  
APS - Wiring diagram.....EC-CD-109  
A/T - Wiring diagram - AT - FTS.....AT-56  
A/T - Wiring diagram - AT - MAIN.....AT-45  
A/T - Wiring diagram - AT - PNP/SW.....AT-50  
A/T - Wiring diagram - AT - VSS A/T.....AT-64  
A/T diagnosis communication line .....EC-SR-295  
A/T fluid temperature sensor.....AT-54  
A/T trouble diagnoses.....AT-29, 30  
A/T Wiring diagram - AT - ENG SS .....AT-67  
A/T Wiring diagram AT - LPSV .....AT-76  
A/T Wiring diagram AT - TCV .....AT-71  
A/T Wiring diagram AT - TPS.....AT-81  
ATDIAG - Wiring diagram .....EC-SR-296  
Audio .....EL-216  
AUDIO - Wiring diagram.....EL-219  
Audio and A/C control removal and  
installation - See Instrument panel .....BT-15  
Auto air conditioner - Wiring diagram .....HA-42  
Automatic amplifier.....HA-87  
Automatic transaxle number.....GI-44  
Automatic transmission fluid  
replacement.....MA-49, 50  
Auxiliary air control (AAC)  
valve .....EC-QG-274, EC-SR-263

## B

Back door opener - See Back door .....BT-9, 11  
Back door trim.....BT-30  
Back door window .....BT-35, 56  
Back-up lamp .....EL-107  
BACK/L - Wiring diagram.....EL-107  
Ball joint front axle .....FA-32, 33  
Base idle air volume  
initialiging.....EC-QG-33, EC-SR-46  
Basic inspection .....EC-QG-72, EC-SR-84  
Battery.....EL-29  
Body alignment .....BT-60  
Brake booster .....BR-18  
Brake control valve (Proportioning  
valve).....BR-11  
Brake fluid change .....BR-7  
Brake fluid level .....MA-51  
Brake fluid level and line check .....BR-7  
Brake hydraulic line.....BR-9  
Brake inspection .....MA-51  
Brake lining wear temporary checking .....MA-51  
Brake pedal .....BR-13  
Bulb specifications .....EL-137  
Bumper, front .....BT-5  
Bumper, rear.....BT-5, 7, 9, 11  
BUZZER - Wiring diagram.....EL-181

## C

Camshaft inspection.....EM-35, 91, 138, 147,  
183, 192, 196  
Camshaft position sensor  
(CMPS).....EC-QG-238, EC-SR-239  
Camshaft position sensor (PHASE).....EC-QG-238  
Canister-See EVAP  
canister.....EC-QG-25, EC-SR-27  
CHARGE - Wiring diagram.....EL-53  
Charging system .....EL-53  
Chassis and body maintenance .....MA-48  
CHIME - Wiring diagram.....EL-181  
Cigarette lighter.....EL-203  
Circuit breaker.....EL-22  
CKPS - Wiring diagram....EC-QG-234, EC-SR-236,  
292, EC-CD-115  
Clock .....EL-203  
Closed throttle position switch .....EC-SR-271  
Clutch cover.....CL-13  
Clutch damper .....CL-10  
Clutch disc .....CL-13  
Clutch fluid level.....MA-48  
Clutch master cylinder.....CL-8  
Clutch operating cylinder.....CL-9  
Clutch release mechanism.....CL-11  
CMPS - Wiring diagram....EC-QG-240, EC-SR-242  
Coil spring (rear).....RA-11  
Collision diagnosis.....RS-57  
Combination meter.....EL-138

# ALPHABETICAL INDEX

Combination meter removal and installation - See Instrument panel.....BT-15  
Combination switch.....EL-64  
Combustion chamber replacement.....EM-146  
Component location (cool box).....HA-39  
Compression pressure.....EM-69, 126, 188, 196  
Compressor clutch removal and installation.....HA-111  
Compressor mounting.....HA-109  
Compressor precaution.....HA-7  
Compressor special service tool.....HA-7  
Connecting rod.....EM-55, 171, 176, 186, 193, 200  
Connecting rod bearing  
clearance.....EM-58, 111, 115, 170, 187, 195, 201  
Connecting rod bushing clearance.....EM-59, 116  
Console box - See Instrument panel.....BT-15  
CONSULT for ABS.....BR-69  
CONSULT for engine.....EC-QG-55, EC-SR-68, EC-CD-27  
CONSULT-II general information.....GI-39  
Control sleeve position sensor.....EC-CD-74  
Converter housing installation.....AT-117  
COOL/F - Wiring diagram.....EC-QG-292, EC-SR-282, EC-CD-89  
Coolant replacement.....MA-19, 29, 40  
Cooling circuit (engine).....LC-8, 21, 31  
Cooling fan control.....EC-QG-289, EC-SR-279, EC-CD-20, 87  
Cooling fan motor.....EC-QG-299, EC-SR-289  
Cooling fan relay.....EC-QG-299, EC-SR-289, EC-CD-96  
Crank angle sensor built into distributor - See Camshaft position sensor.....EC-QG-238, EC-SR-239  
“Crankcase emission control system - See positive crankcase ventilation”.....EC-QG-28, EC-SR-30  
Crankcase ventilation system - See Positive crankcase ventilation.....EC-QG-28, EC-SR-30  
Crankshaft.....EM-53, 57, 61, 110, 113, 118, 131, 138, 139, 167, 172, 175, 186, 194, 200  
Crankshaft position sensor (OBD).....EC-QG-232, EC-SR-234, 290  
Crankshaft position sensor (POS).....EC-QG-232  
Crankshaft position sensor (TDC).....EC-CD-114  
CSPS - Wiring diagram.....EC-CD-75  
Cylinder block.....EM-52, 55, 109, 166, 173, 184, 192, 199  
Cylinder head.....EM-31, 86, 140, 178, 188, 196

## D

Data link connector for  
Consult.....EC-QG-29, EC-SR-31  
Daytime light system.....EL-78  
DEF - Wiring diagram.....EL-209  
Detonation sensor - See Knock sensor.....EC-QG-228, EC-SR-230  
Diagnosis sensor unit.....RS-13

Diagnostic trouble code (DTC) for OBD system.....EC-QG-6, EC-SR-6  
Diagnostic trouble code (DTC) inspection priority chart.....EC-QG-80, EC-SR-92, EC-CD-39  
Dimensions.....GI-45  
Direct ignition system.....EC-QG-32  
Door lock.....BT-13  
Door mirror.....BT-58  
Door trim.....BT-24  
Door, front.....BT-13  
Door, rear.....BT-13  
Drive belt inspection.....MA-18, 28, 39  
Drive plate runout.....EM-60, 117  
Drive shaft (front).....FA-15  
Dropping resistor (A/T).....AT-78  
DTC work support.....EC-QG-63, EC-SR-76  
DTRL - Wiring diagram.....EL-79

## E

ECCS relay.....EC-CD-140  
ECM input/output signal.....EC-QG-91, EC-SR-103  
ECTS - Wiring diagram.....EC-QG-122, EC-SR-134, EC-CD-67  
EGR control (EGRC) - solenoid valve.....EC-CD-129  
EGR control valve.....EC-QG-252, 311  
EGR temperature sensor.....EC-QG-300  
EGR/TS - Wiring diagram.....EC-QG-302  
EGRC - Wiring diagram.....EC-CD-131  
EGRC1 - Wiring diagram.....EC-QG-248, 309  
Electric governor.....EC-CD-78  
Electric sun roof.....EL-230  
Electrical diagnoses.....GI-24  
Electrical ignition system.....EC-QG-23, EC-SR-25  
Electrical unit.....Foldout  
Electronic fuel injection pump.....EC-CD-24  
Engine control circuit  
diagram.....EC-QG-17, EC-SR-19, EC-CD-11  
Engine control component parts  
location.....EC-QG-14, EC-SR-15  
Engine control module  
(ECM).....EC-QG-282, EC-SR-277, EC-CD-9, 86  
Engine control system diagram and chart.....EC-QG-18, EC-SR-20, EC-CD-12  
Engine coolant temperature sensor (ECTS).....EC-QG-120, EC-SR-132, EC-CD-66  
Engine fail-safe system.....EC-QG-81, EC-SR-93  
Engine oil filter replacement.....MA-24, 45  
Engine oil precautions.....GI-6  
Engine oil replacement.....MA-24, 34, 45  
Engine removal.....EM-48, 106, 162  
Engine serial number.....GI-44  
Engine trouble diagnoses.....EC-CD-33  
EVAP canister.....EC-QG-26, EC-SR-28  
EVAP canister purge volume control  
solenoid valve.....EC-QG-26, 262, EC-SR-28  
EVAP canister purge volume control  
valve.....EC-QG-262, EC-SR-250  
EVAP vapor lines inspection.....MA-26, 37

# ALPHABETICAL INDEX

Evaporative emission (EVAP)  
  system .....EC-QG-25, EC-SR-27  
Exhaust gas recirculation (EGR)  
  valve.....EC-QG-244, 305  
Exhaust system .....FE-9  
Exhaust system inspection .....MA-48  
Exterior .....BT-31

## F

FCUT - Wiring diagram.....EC-CD-101  
F/FOG - Wiring diagram.....EL-110  
Final drive (FF M/T) .....MT-32, 51, 71  
Floor trim .....BT-18  
Fluid temperature sensor (A/T) .....AT-94  
Fluids.....MA-16  
Flywheel (clutch).....CL-14  
Flywheel runout.....EM-60, 117, 177  
Fog lamp, front .....EL-110  
Fog lamp, rear .....EL-112  
F/PUMP - Wiring  
  diagram.....EC-QG-338, EC-SR-317  
Freeze frame data .....EC-QG-38, EC-SR-50  
Fresh vent door control linkage  
  adjustment .....HA-83  
FRO2 - Wiring diagram.....EC-QG-135, 154, 162,  
  EC-SR-147, 165, 172  
FRO2/H - Wiring  
  diagram.....EC-QG-168, EC-SR-177  
Front axle .....FA-9  
Front bumper .....BT-5  
Front disc brake .....BR-23  
Front door .....BT-13  
Front fog lamp .....EL-110, 111  
Front fog lamp removal and installation .....BT-5  
Front heated oxygen sensor  
  (HO2S).....EC-QG-132, 139,  
  EC-SR-144, 150, 156, 162, 170  
Front heated oxygen sensor (HO2S)  
  heater .....EC-QG-166, EC-SR-175  
Front passenger air bag .....RS-17  
Front seat .....BT-40  
Front seat belt .....RS-3  
Front suspension .....FA-26  
Front washer .....EL-186  
Front wiper .....EL-186  
FTS - Wiring diagram .....EC-CD-105  
FUEL - Wiring  
  diagram.....EC-QG-210, 217, EC-SR-213, 220  
Fuel cut control (at no load & high  
  engine speed).....EC-QG-25, EC-SR-27  
Fuel cut solenoid valve .....EC-CD-100  
Fuel filter .....EC-QG-29, EC-SR-31  
Fuel filter replacement.....MA-23, 33, 43  
Fuel gauge .....EL-141, 146  
Fuel injection system.....EC-QG-208, 215,  
  EC-SR-212, 218,  
  EC-CD-15, 18  
Fuel injector .....EC-QG-318, EC-SR-302  
Fuel line inspection.....MA-22, 33, 43

Fuel precautions .....GI-7  
Fuel pressure check .....EC-QG-29, EC-SR-31  
Fuel pressure regulator.....EC-QG-30, EC-SR-32  
Fuel pressure release .....EC-QG-29, EC-SR-31  
Fuel pump .....EC-QG-336, EC-SR-316  
Fuel pump and gauge .....FE-7  
Fuel pump relay .....EC-QG-336, EC-SR-316  
Fuel system .....FE-6  
Fuel tank vacuum relief  
  valve .....EC-QG-26, EC-SR-28  
Fuel temperature sensor .....EC-CD-17, 104  
Fuse .....EL-22, Foldout  
Fuse block .....Foldout  
Fusible link .....EL-22, Foldout

## G

Garage jack and safety stand .....GI-47  
Gauges.....EL-138  
Gear components (M/T) .....MT-16, 49  
Generic scan tool (GST).....EC-QG-66, EC-SR-78  
GLOW - Wiring diagram .....EC-CD-120  
Glow plug .....EC-CD-15, 118  
Glow relay .....EC-CD-15  
GOVNR - Wiring diagram .....EC-CD-79  
Grille - See Exterior .....BT-38  
Ground distribution.....EL-23

## H

H/AIM - Wiring diagram .....EL-87, 93, 200  
Harness connector .....EL-6  
Harness layout .....EL-368  
Hazard warning lamp .....EL-117  
Headlamp.....EL-67, 69  
Headlamp aiming control .....EL-87  
Headlamp washer .....EL-200  
Headlining - See Roof trim .....BT-25  
Heated oxygen sensor (HO2S)  
  (front) .....EC-QG-132, 139,  
  EC-SR-144, 150, 156, 162, 170  
Heated oxygen sensor (HO2S) heater  
  (front).....EC-QG-166, EC-SR-175  
Heated oxygen sensor (HO2S) heater  
  (rear).....EC-QG-203, EC-SR-207  
Heated oxygen sensor (rear) .....EC-QG-171,  
  EC-SR-180, 187,  
  194, 201  
Heated oxygen sensor inspection .....MA-27, 38  
Heated seat.....BT-42, EL-234  
HEATER - Wiring diagram .....HA-40  
HFC134a (R134a) system service  
  procedure.....HA-100  
HFC134a (R134a) system service tools .....HA-8  
H/LAMP - Wiring diagram .....EL-67  
Hood.....BT-5  
Horn .....EL-203  
HORN - Wiring diagram.....EL-203

# ALPHABETICAL INDEX

How to erase DTC for OBD  
system .....EC-QG-44, EC-SR-56  
HSEAT - Wiring diagram.....EL-234  
Hydraulic lash adjuster inspection.....EM-96, 189

## I

IACV-AAC valve.....EC-QG-274, EC-SR-263  
IATS - Wiring diagram.....EC-QG-117, EC-SR-128  
Identification plate.....GI-44  
Idle air control (IAC)  
system .....EC-QG-274, EC-SR-263  
Idle air control valve  
(IACV).....EC-QG-274, EC-SR-263  
Idle mixture ratio .....EC-QG-32, EC-SR-34  
Idle speed .....EC-QG-32, EC-SR-34  
IGN/SG - Wiring diagram.....EC-SR-308  
Ignition coil .....EC-SR-310  
Ignition control system.....EC-QG-323, EC-SR-306  
Ignition timing.....EC-QG-32, EC-SR-34  
Ignition wire inspection.....MA-36, EC-SR-229  
ILL - Wiring diagram .....EL-125  
Illumination .....EL-124  
INJECT - Wiring diagram..EC-QG-319, EC-SR-303  
Injection nozzle inspection.....MA-46  
Injection timing control valve .....EC-CD-82  
Injector .....EC-QG-318  
Injector removal and  
installation.....EC-QG-30, EC-SR-32  
Input shaft (FF M/T).....MT-21, 58  
Instrument panel .....BT-15  
INT/L - Wiring diagram.....EL-132  
Intake air temperature  
sensor .....EC-QG-116, EC-SR-127  
Intake door control linkage adjustment.....HA-83  
Intake door motor.....HA-81, 83  
Intake valve timing control solenoid  
valve.....EC-QG-284  
Interior .....BT-18  
Interior lamp.....EL-124, 130

## K

Knock sensor (KS) .....EC-QG-228, 229,  
EC-SR-230, 231  
KS - Wiring diagram .....EC-QG-229

## L

License lamp.....EL-100  
Lifting points .....GI-46  
Line pressure solenoid valve .....AT-74  
Line pressure test (A/T) .....AT-35  
Liquid gasket application .....EM-5  
LOAD - Wiring diagram .....EC-QG-352  
Location of electrical units .....EL-365  
Lubricants.....MA-16

Lubrication circuit (engine).....LC-4, 15, 26  
Lubrication-locks, hinges and hood  
latches .....MA-54  
Luggage compartment trim.....BT-29  
Luggage room lamp.....EL-131

## M

MAFS - Wiring  
diagram.....EC-QG-112, EC-SR-122, EC-CD-63  
MAIN - Wiring  
diagram.....EC-QG-103, EC-SR-115, EC-CD-59  
Mainshaft (M/T) .....MT-24, 63  
Malfunction indicator lamp  
(MIL) .....EC-QG-45, EC-SR-58  
Manual transmission number .....GI-44  
Manual transmission oil replacement.....MA-48, 49  
Mass air flow sensor  
(MAFS).....EC-QG-110, EC-SR-120, EC-CD-62  
METER - Wiring diagram .....EL-141, 146  
MIL & Data link connectors  
circuit.....EC-QG-354, EC-SR-329  
MIL/DL - Wiring  
diagram.....EC-QG-354, EC-SR-329, EC-CD-142  
MIRROR - Wiring diagram.....EL-231  
Mirror defogger .....EL-207  
Mirror, door.....BT-58  
Mirror, out side .....BT-58  
Misfire.....EC-QG-222, EC-SR-224  
Mode door control linkage adjustment.....HA-82  
Model variation .....GI-41  
Molding - See Exterior .....BT-31  
M/T major overhaul .....MT-14, 47  
M/T removal and installation .....MT-10  
Mud guard - See Exterior .....BT-37  
MULTI - Wiring diagram.....EL-298  
Multi-remote control system.....EL-296  
Multiport fuel injection (MFI)  
system .....EC-QG-21, EC-SR-23  
Multiport fuel injection precautions.....GI-6

## N

NATS (Nissan anti-theft system).....EL-342  
NATS (Nissan anti-theft system)  
precautions .....GI-3, 25  
NATS - Wiring diagram .....EL-343  
Needle lift sensor .....EC-CD-97  
Neutral position switch.....EC-QG-313, EC-SR-298  
NLS - Wiring diagram .....EC-CD-98  
NVH troubleshooting (BR).....BR-6  
NVH troubleshooting (CL) .....CL-3  
NVH troubleshooting (EM).....EM-11, 64, 121  
NVH troubleshooting (M/T) .....MT-7  
NVH troubleshooting (RA).....RA-3



# ALPHABETICAL INDEX

## O

Oil cooler (engine) .....LC-20, 30  
Oil pan (engine).....EM-17, 70, 129  
Oil pressure (engine).....LC-5, 16, 27  
Oil pump (engine).....LC-5, 17, 27  
Oil pump regulator valve (engine) .....LC-7  
Oil seal replacement  
(engine).....EM-29, 84, 138, 139  
On board diagnostic  
system .....EC-QG-36, EC-SR-48  
Operational check (cool box) .....HA-24

## P

Park/Neutral position  
switch.....EC-QG-313, EC-SR-298  
Park/neutral position switch (A/T) .....AT-48  
Parking brake control .....BR-48  
Parking lamp .....EL-100  
PCV (positive crankcase  
ventilation) .....EC-QG-28, EC-SR-30  
PCV system inspection.....MA-26, 36  
Periodic maintenance (for Europe).....MA-6  
PGC/V - Wiring diagram...EC-QG-264, EC-SR-252  
PHASE - Wiring diagram.....EC-QG-240  
Pilot bushing replacement - See Pilot  
converter.....EM-117  
Piston assembly.....EM-53, 60, 110, 117, 167,  
175, 176, 185, 193, 199  
Piston pin inspection.....EM-54, 110, 168, 171,  
185, 193, 199  
Piston ring inspection.....EM-54, 111, 168,  
185, 193, 199  
Piston to bore clearance.....EM-56, 174  
PNP/SW - Wiring  
diagram.....EC-QG-315, EC-SR-300  
POWER - Wiring diagram.....EL-12  
Power door lock.....EL-245, 265  
Power door mirror .....EL-231  
Power seat .....EL-233  
Power steering fluid level.....MA-53  
Power steering oil pressure  
switch.....EC-QG-342, EC-SR-321  
Power supply routing .....EL-10  
Power transistor.....EC-SR-311  
Power transistor & ignition coil .....EC-SR-306  
Power window .....EL-236  
Pre-delivery inspection.....MA-4  
Precautions (General) .....GI-4  
Pressure test (A/T) .....AT-35  
PST/SW - Wiring  
diagram.....EC-QG-343, EC-SR-322

## R

Radiator .....LC-9, 13, 25, 36

Rear axle (disc brake type) .....RA-5  
Rear bumper .....BT-7, 9, 11  
Rear combination lamp removal and  
installation .....BT-37  
Rear disc brake .....BR-33, 40  
Rear door .....BT-14  
Rear drum brake .....BR-44  
Rear fog lamp.....EL-112  
Rear heated oxygen sensor  
(HO2S)..EC-QG-171, EC-SR-180, 187, 194, 201  
Rear heated oxygen sensor (HO2S)  
heater .....EC-QG-203, EC-SR-207  
Rear seat .....BT-43  
Rear seat belt.....RS-4  
Rear suspension .....RA-4  
Rear washer.....EL-193  
Rear window .....BT-53  
Rear window defogger .....EL-207  
Rear wiper.....EL-193  
Refrigerant connection precaution .....HA-4  
Refrigerant general precaution.....HA-4  
Refrigerant lines .....HA-104  
Refrigerant pressure  
sensor.....EC-QG-299, 347, EC-SR-289  
Refrigeration cycle.....HA-12  
Removal and installation (A/T) .....AT-116  
Revolution sensor (A/T) .....AT-61, 65  
R/FOG - Wiring diagram .....EL-112  
Roof trim .....BT-25  
RRO2 - Wiring  
diagram.....EC-QG-174, 183, 191, 199,  
EC-SR-183, 190, 197, 203  
RRO2/H - Wiring  
diagram.....EC-QG-205, EC-SR-209

## S

SAE J1930 terminology list .....GI-51  
Seal - See Exterior .....BT-31  
SEAT - Wiring diagram .....EL-233  
Seat belt inspection .....MA-54  
Seat belt pre-tensioner .....RS-13  
Seat belt pre-tensioner disposal .....RS-27  
Seat, front .....BT-40  
Self-diagnostic results.....EC-QG-46, EC-SR-59  
Shift control components (M/T) .....MT-17, 50, 74  
Shock absorber (rear).....RA-11  
Side air bag .....RS-19  
Side trim.....BT-18  
Side window - See Rear side window .....BT-55  
S/LOCK - Wiring diagram.....EL-248, 270  
Spark plug replacement.....MA-25, 35  
Speedometer .....EL-141, 146  
Spiral cable.....RS-14  
Spot lamp.....EL-130, 131  
SROOF - Wiring diagram .....EL-230  
SRS - See Supplemental Restraint  
System .....RS-8  
SRS - Wiring diagram .....RS-33

# ALPHABETICAL INDEX

S/SIG - Wiring diagram	EC-QG-333, EC-SR-313, EC-CD-145
Stabilizer bar (front)	FA-32
Stall test (A/T)	AT-34
Standardized relay	EL-8
START - Wiring diagram	EL-37
Start signal	EC-QG-38, 332, EC-SR-312, EC-CD-145
Starter	EL-37, 43
Starting system	EL-37
Steering gear and linkage inspection	MA-53
Steering knuckle	FA-11, 12
Stop lamp	EL-104
STOP/L - Wiring diagram	EL-104
Sun roof, electric	EL-230
Sunload sensor	HA-86
Sunroof	BT-31, 46
Super lock	EL-245, 265
Supplemental Restraint System	RS-8
Supplemental restraint system - Wiring diagram	RS-33
Symbols and abbreviations	GI-38
Symptom matrix chart	EC-QG-82, EC-SR-94
Synchronizer (M/T)	MT-22, 27, 59, 65
System readiness test (SRT) code	EC-SR-50

## T

Tachometer	EL-141, 146
Tail lamp	EL-100
TCM circuit diagram	AT-10
TCM inspection table	AT-41
Temperature control cable and linkage adjustment	HA-83
THEFT - Wiring diagram	EL-316
Theft warning system	EL-311
Thermal protector	HA-113
Thermo control amp	HA-80
Thermostat	LC-11, 23, 34
Third link (front susp.)	FA-29
Three way catalyst	EC-QG-258, EC-SR-246
Three way catalyst precautions	GI-6
Throttle position sensor (TPS)	EC-QG-125, EC-SR-137
Throttle position sensor adjustment	EC-QG-72, EC-SR-84
Throttle position switch	EC-SR-271, AT-85
Tightening torque of standard bolts	GI-50
Time control system	EL-306
Timing belt	EM-131
Timing chain	EM-19, 75
Tire rotation	MA-53
Tire size	GI-45
Torque converter installation	AT-117
Torque convertor clutch solenoid valve	AT-69
Tow truck towing	GI-46
Towing point	GI-49
TP/SW - Wiring diagram	EC-SR-273
TPS - Wiring diagram	EC-QG-128, EC-SR-140
Transmission case (M/T)	MT-39

Transverse link (front)	FA-32
Trim	BT-18
Triple pressure switch	HA-79
Trouble diagnoses	GI-35
Trunk lid	BT-7
Trunk lid opener - See Trunk lid	BT-7
Trunk room lamp	EL-130, 131
Trunk room trim	BT-28
Turbocharger	EM-156, 201
Turbocharger precautions	GI-6
TURN - Wiring diagram	EL-118
Turn signal lamp	EL-117
Two trip detection logic	EC-QG-36, EC-SR-48

## U

Upper link (front susp.)	FA-29
--------------------------	-------

## V

Vacuum hose (brake system)	BR-20
Vacuum hose drawing (Engine control)	EC-QG-19, EC-SR-21, EC-CD-13
Valve clearance	EM-40, 179, 191
Valve guide	EM-36, 93, 142, 180, 189, 197
Valve lifter	EM-40, 145, 179, 198
Valve seat	EM-38, 95, 143, 182, 190, 198
Valve spring	EM-39, 96, 145, 179, 189, 197
Vehicle identification number	GI-43
Vehicle speed sensor (VSS)	EC-QG-267, EC-SR-255, EC-CD-70
Viscosity number (SAE)	MA-17
VSS - Wiring diagram	EC-QG-269, EC-SR-257, EC-CD-71

## W

WARN - Wiring diagram	EL-167
Warning buzzer	EL-180
Warning chime	EL-180
Warning lamps	EL-165
Washer, front	EL-186
Washer, rear	EL-193
Water cock control rod adjustment	HA-82
Water pump	LC-10, 22, 33
Water temperature gauge	EL-141, 146
Weatherstrip - See Exterior	BT-31
Wheel alignment (front)	FA-35
Wheel alignment (rear)	RA-6
Wheel balance	MA-53
Wheel bearing (front axle)	FA-6, 12, 35
Wheel bearing (rear)	RA-5
Wheel hub (front)	FA-12
Wheel hub (rear)	RA-7
Wheel sensors (ABS)	BR-53
Wheel size	GI-45
Wheelbase (Dimensions)	GI-45

## ALPHABETICAL INDEX

---

Wide open & closed throttle position switch.....	EC-QG-125, EC-SR-137	Wiper and washer .....	EL-188
Width (Dimensions) .....	GI-45	Wiper, front.....	EL-186
WINDOW - Wiring diagram .....	EL-240	Wiper, rear .....	EL-193
Windshield.....	BT-53	Wiring diagrams .....	GI-11
WIP/R - Wiring diagram.....	EL-195		