

ALPHABETICAL INDEX

SECTION **IDX**

GI

MA

EM

LG

EC

FE

CL

MT

AT

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

ALPHABETICAL INDEX

A

AAC/V - Wiring diagram.....EC-439
ABS (anti-lock brake system).....BR-34
ABS - Wiring diagramBR-39
Absolute pressure sensorEC-163
A/C air flow.....HA-21, 138
A/C component layout.....HA-15, 136
A/C compressor clutch removal and
installationHA-111, 196
A/C compressor precautionHA-7, 128
A/C compressor special service toolHA-10, 131
A/C control linkage adjustment (manual
A/C).....HA-155, 161
A/C control operation (auto A/C).....HA-19
A/C control operation (manual A/C).....HA-137
A/C diagnostic work flow (auto A/C)HA-41
A/C diagnostic work flow (manual A/C).....HA-147
A/C HFC134a (R134a) system
precautionHA-3, 124
A/C HFC134a (R134a) system service
procedure.....HA-105, 191
A/C HFC134a (R134a) system service
toolsHA-11, 132
A/C HFC134a system service equip-
ment precaution.....HA-7, 128
A/C lubricant (R134a)HA-107, 193
A/C operational check.....HA-42, 148
A/C performance chart.....HA-83, 185
A/C performance test diagnosesHA-81, 183
A/C push control.....HA-137
A/C relayHA-79, 180
A/C self-diagnoses (auto A/C).....HA-31
A/C service data specification.....HA-123, 209
A/C system description (auto A/C).....HA-19
A/C trouble diagnoses (auto A/C)HA-23
A/C, A - Wiring diagramHA-26
A/C, M - Wiring diagramHA-143
Accelerator control systemFE-3
Accelerator wire adjustmentFE-3
Air bagRS-12
Air bag disposal.....RS-25
Air bag precautionsGI-3
Air bleeding (hydraulic clutch)CL-7
Air bleeding for brake systemBR-8
Air cleaner filter replacement.....MA-18
Air conditioner cut controlEC-32
Air flow meter - See Mass air flow
sensorEC-154
Air mix door control linkage
adjustmentHA-56, 166
Air mix. door motorHA-54, 104, 163
Air spoiler, rear.....BT-34
AlternatorSC-30
Ambient sensorHA-92
Angular tightening application.....EM-3
Antenna - See Power antennaEL-135
Anti-lock brake system - See ABS.....BR-34

Anti-lock brake system - Wiring
diagramBR-39
ASCD (automatic speed control device)EL-146
ASCD - Wiring diagramEL-150
A/T - Wiring diagram - AT - FTSAT-115
A/T - Wiring diagram - AT - MAIN.....AT-104
A/T - Wiring diagram - AT - PNP/SW.....AT-109
A/T - Wiring diagram - AT - VSS A/TAT-121
A/T controlEC-453
A/T diagnosis communication line.....EC-580
A/T fluid temperature sensorAT-118
A/T shift lock systemAT-272
A/T shift lock system - Wiring diagramAT-273
A/T trouble diagnosesAT-56
A/T Wiring diagram - AT - ENG SSAT-125
A/T Wiring diagram AT - 1STAT-131
A/T Wiring diagram AT - 2NDAT-138
A/T Wiring diagram AT - 3RDAT-144
A/T Wiring diagram AT - 4TH.....AT-151
A/T Wiring diagram AT - BA/FTSAT-210
A/T Wiring diagram AT - LPSVAT-176
A/T Wiring diagram AT - NONDTCAT-223
A/T Wiring diagram AT - OVRCSVAT-204
A/T Wiring diagram AT - SSV/AAT-183
A/T Wiring diagram AT - SSV/BAT-189
A/T Wiring diagram AT - TCCSIGAT-166
A/T Wiring diagram AT - TCVAT-159
A/T Wiring diagram AT - TPS.....AT-196
A/T Wiring diagram AT - VSSMTR.....AT-217
AT/C - Wiring diagram.....EC-454
ATDIAG - Wiring diagram.....EC-581
AudioEL-130
AUDIO - Wiring diagram.....EL-131
Audio and A/C control removal and
installation - See Instrument panelBT-23
Auto air conditioner - Wiring diagramHA-26
Automatic amplifier.....HA-29, 45
Automatic speed control system - See
ASCDEL-146
Automatic transaxle number.....GI-43
Automatic transmission fluid
replacement.....MA-23
Auxiliary air control (AAC) valveEC-436

B

Back door.....BT-16
Back door opener - See Back door.....BT-16
Back-up lampEL-60
Back-up lamp switch (M/T)MT-10
BACK/L - Wiring diagram.....EL-60
Ball joint (front)SU-14
Base idle air volume initialiging.....EC-65
Basic inspectionEC-107
BatterySC-4
Battery/Starting/Charging System
Tester.....SC-7, 13, 23
Baulk ring (M/T).....MT-17
Blower motorHA-65, 173
Blower resistor.....HA-173

ALPHABETICAL INDEX

Blower unit.....	HA-115, 201
Board-on lift	GI-45
Body alignment	BT-57
Boring/horning cylinder block.....	EM-59
Brake booster	BR-17
Brake fluid change	BR-7
Brake fluid level	MA-24
Brake fluid level and line check	BR-7
Brake hydraulic line.....	BR-9
Brake inspection	MA-25
Brake lines and cables inspection	MA-24
Brake master cylinder	BR-14
Brake pedal	BR-12
Bulb specifications	EL-290
Bumper, front	BT-13
Bumper, rear	BT-16
BYPSS/V - Wiring diagram	EC-564, 571

C

Camshaft inspection	EM-36
Camshaft position sensor (CMPS).....	EC-339
Canister-See EVAP canister	EC-33
CHARGE - Wiring diagram	SC-22
Charging system	SC-21
Chassis and body maintenance	MA-22
CHIME - Wiring diagram.....	EL-107
CIGAR - Wiring diagram.....	EL-120
Cigarette lighter.....	EL-120
Circuit breaker.....	EL-17
CKPS - Wiring diagram.....	EC-335, 493
Closed loop control	EC-460
Closed throttle position switch	EC-445
Clutch cover.....	CL-19
Clutch damper.....	CL-11
Clutch disc	CL-19
Clutch fluid level.....	MA-22
Clutch master cylinder	CL-8
Clutch operating cylinder	CL-13
Clutch pedal.....	CL-6
Clutch release bearing.....	CL-16
Clutch release mechanism	CL-16
Clutch withdrawal lever.....	CL-16
CMPS - Wiring diagram	EC-342
Coil spring (front).....	SU-9
Coil spring (rear)	SU-22
Collision diagnosis.....	RS-60
Combination lamp, front, removal and installation	BT-13
Combination lamp, rear, removal and installation	BT-34
Combination meter.....	EL-84
Combination meter removal and instal- lation - See Instrument panel.....	BT-23
Combination switch.....	EL-26
Component Location (auto A/C).....	HA-23
Component Location (manual A/C).....	HA-140
Compressor clutch removal and installation	HA-111, 196
Compressor precaution.....	HA-7, 128

Compressor special service tool.....	HA-10, 131
Connecting rod.....	EM-58
Connecting rod bearing clearance.....	EM-62
Connecting rod bushing clearance	EM-63
Connector inspection	GI-21
Console box - See Instrument panel.....	BT-23
CONSULT for ABS	BR-44
CONSULT for engine	EC-88
Control lever (M/T)	MT-15
Control valve (A/T)	AT-312
Converter housing installation.....	AT-369
COOL/F - Wiring diagram	EC-296, 465
Coolant mixture ratio.....	MA-12
Coolant replacement.....	MA-14
Cooling circuit (engine).....	LC-9
Cooling fan control	EC-462
Cooling unit (A/C evaporator).....	HA-116, 202
Coupling sleeve (M/T)	MT-17
Crank angle sensor built into distributor - See Camshaft position sensor	EC-339
Crankcase emission control system - See positive crankcase ventilation	EC-48
Crankcase ventilation system - See Positive crankcase ventilation	EC-48
Crankshaft.....	EM-60
Crankshaft position sensor (OBD)	EC-333, 491
Crankshaft position sensor (OBD) cog chipping	EC-491
Cruise control - See ASCD.....	EL-146
Cylinder block	EM-55
Cylinder block boring	EM-59
Cylinder head.....	EM-30

D

Data link connector for Consult	EC-50, 88
Daytime light system.....	EL-41
Daytime running light - See Daytime light system	EL-41
DEF - Wiring diagram	EL-123
Detonation sensor - See Knock sensor	EC-329
Diagnosis sensor unit.....	RS-17
Diagnostic trouble code (DTC) for OBD system	EC-8, 68
Diagnostic trouble code (DTC) inspec- tion priority chart.....	EC-123
Differential gear (FF A/T)	AT-361
Differential gear (FF M/T).....	MT-17
Dimensions	GI-44
Distributor	EC-31
Distributor ignition (DI) system.....	EC-31
D/LOCK - Wiring diagram.....	EL-178
Dome light - See Interior lamp	EL-78
Door glass.....	BT-20
Door lock.....	BT-20
Door mirror.....	BT-55
Door trim	BT-29
Door, front	BT-20
Door, rear	BT-22
Drive belt inspection	MA-13

ALPHABETICAL INDEX

Drive plate runout	EM-64
Drive shaft (front).....	AX-10
Dropping resistor (A/T).....	AT-180
DTC work support	EC-99
DTRL - Wiring diagram.....	EL-45

E

ECM input/output signal.....	EC-134
ECTS - Wiring diagram.....	EC-173, 192
EGR temperature sensor.....	EC-497
EGR/TS - Wiring diagram.....	EC-500
EGRC1 - Wiring diagram.....	EC-351, 360, 509
Electric sun roof.....	EL-140
Electrical diagnoses.....	GI-24
Electrical ignition system.....	EC-31
Electrical unit.....	Foldout
Electrical units location.....	EL-270
Electronic ignition (EI) system.....	EC-31
Engine compartment.....	BT-58
Engine control circuit diagram.....	EC-24
Engine control component parts location	EC-20
Engine control module (ECM).....	EC-456
Engine control system diagram and chart.....	EC-26
Engine coolant temperature sensor (ECTS).....	EC-171, 190
Engine fail-safe system.....	EC-124
Engine oil filter replacement.....	MA-19
Engine oil precautions.....	GI-7
Engine oil replacement.....	MA-18
Engine outer component parts.....	EM-10
Engine removal.....	EM-52
Engine room - See Engine compartment.....	BT-58
Engine serial number.....	GI-43
EVAP canister.....	EC-34
EVAP canister purge volume control solenoid valve.....	EC-382, 517
EVAP canister vent control valve.....	EC-389, 529, 549
EVAP control system (small leak) diagnosis.....	EC-36, 368, 409, 515
EVAP control system pressure sensor.....	EC-396
EVAP control system purge flow moni- toring diagnosis.....	EC-537
EVAP system close mode.....	EC-36
EVAP vapor lines inspection.....	MA-21
Evaporative emission (EVAP) system.....	EC-33
Exhaust gas recirculation (EGR) valve.....	EC-347, 506
Exhaust system.....	FE-8
Exhaust system inspection.....	MA-22
Exterior.....	BT-34

F

Fan control amp.....	HA-67
Fan switch.....	HA-173
F/FOG - Wiring diagram.....	EL-63
Final drive (FF A/T).....	AT-361
Final drive (FF M/T).....	MT-39
Finisher, interior - See Trim.....	BT-27
Fluid temperature sensor (A/T).....	AT-118
Fluids.....	MA-11
Flywheel (clutch).....	CL-19
Flywheel runout.....	EM-64
Fog lamp, front.....	EL-61
Fog lamp, front, removal and installation.....	BT-13
Fork rod (M/T).....	MT-18
Forward clutch.....	AT-336
F/PUMP - Wiring diagram.....	EC-607
Freeze frame data.....	EC-68
FRO2 - Wiring diagram.....	EC-199, 220, 228
FRO2/H - Wiring diagram.....	EC-234
Front axle.....	AX-2
Front bumper.....	BT-13
Front combination lamp removal and installation.....	BT-13
Front disc brake.....	BR-20
Front door.....	BT-20
Front fog lamp.....	EL-61
Front fog lamp removal and installation.....	BT-13
Front heated oxygen sensor (HO2S).....	EC-196, 204, 210, 217, 226
Front heated oxygen sensor (HO2S) heater.....	EC-232
Front seat.....	BT-40
Front seat belt.....	RS-4
Front suspension.....	SU-2
Front washer.....	EL-114
Front wiper.....	EL-114
FUEL - Wiring diagram.....	EC-274, 281
Fuel cut control (at no load & high engine speed).....	EC-33
Fuel filler lid.....	BT-16
Fuel filter.....	EC-50
Fuel filter replacement.....	MA-17
Fuel gauge.....	EL-84
Fuel injection system.....	EC-272, 279
Fuel injector.....	EC-596
Fuel line inspection.....	MA-16
Fuel precautions.....	GI-8
Fuel pressure check.....	EC-50
Fuel pressure regulator.....	EC-51
Fuel pressure release.....	EC-50
Fuel pump.....	EC-605
Fuel pump relay.....	EC-605
Fuel system.....	FE-5
Fuel tank temperature sensor.....	EC-286
Fuel tank vacuum relief valve.....	EC-34
Fuse.....	EL-17
Fuse block.....	Foldout

ALPHABETICAL INDEX

Fusible linkEL-17

G

Garage jack and safety standGI-46
 Gauges.....EL-84
 Gear components (M/T).....MT-17
 Generator - See Alternator.....SC-30
 Generic scan tool (GST)EC-101
 Glass.....BT-20
 Grease.....MA-11
 Ground distribution.....EL-18

H

Harness connector.....EL-5
 Harness connector inspectionGI-21
 Harness layoutEL-274
 Hazard warning lamp.....EL-66
 Headlamp.....EL-29
 Headlining - See Roof trimBT-31
 Heated oxygen sensor (HO2S)
 (front).....EC-196, 204, 210, 217, 226
 Heated oxygen sensor (HO2S) heater
 (front)EC-232
 Heated oxygen sensor (HO2S) heater
 (rear)EC-267
 Heated oxygen sensor
 (rear).....EC-237, 245, 253, 261
 Heated seat.....BT-42, EL-145
 Heater unit (heater core).....HA-114, 200
 Height (Dimensions)GI-44
 HFC134a (R134a) system precautionHA-3, 124
 HFC134a (R134a) system service
 procedure.....HA-105, 191
 HFC134a (R134a) system service
 toolsHA-11, 132
 HFC134a system service equipment
 precautionHA-7, 128
 High clutch.....AT-331
 H/LAMP - Wiring diagram.....EL-33
 Hood.....BT-13
 Horn.....EL-119
 HORN - Wiring diagram.....EL-119
 How to erase DTC for OBD system.....EC-79
 HSEAT - Wiring diagram.....EL-145
 Hydraulic lash adjuster inspectionEM-41

I

IACV-AAC valveEC-436
 IATS - Wiring diagramEC-167
 Identification plate.....GI-43
 Idle air control (IAC) systemEC-436
 Idle air control valve (IACV).....EC-436
 Idle mixture ratio.....EC-53
 Idle speed.....EC-53

IGN/SG - Wiring diagramEC-591
 Ignition coilEC-595
 Ignition control systemEC-590
 Ignition timingEC-53
 Ignition wire inspection.....EC-328
 ILL - Wiring diagramEL-74
 IlluminationEL-71
 In vehicle sensorHA-95
 INJECT - Wiring diagramEC-597
 Injector removal and installationEC-51
 Input shaft (FF M/T)MT-26
 Instrument panelBT-23
 INT/L - Wiring diagram.....EL-83
 Intake air temperature sensorEC-165
 Intake door control linkage adjustment..HA-64, 155
 Intake door motor.....HA-58, 152
 Integrated homelink transmitterEL-267
 InteriorBT-27
 Interior lamp.....EL-78, 82
 Interior lamp on-off control.....EL-79
 IVIS (Infiniti vehicle immobilizer
 system).....EL-247
 IVIS (Infiniti vehicle immobilizer sys-
 tem) precautionsGI-3

J

Jacking points.....GI-46
 Joint connector (J/C)Foldout
 Junction box (J/B).....Foldout

K

Keyless entry system - See Multi-re-
 mote control system.....EL-190
 Knock sensor (KS)EC-329, 330
 Knuckle spindleAX-5

L

Length (Dimensions)GI-44
 License lamp.....EL-53
 Lifting pointsGI-47
 Line pressure solenoid valveAT-156
 Line pressure test (A/T)AT-66
 Liquid gasket applicationEM-3
 LOAD - Wiring diagramEC-624
 Location of electrical unitsEL-270
 Lock, doorBT-20
 Low and reverse brakeAT-343
 Lubricant (R134a) A/CHA-107, 193
 Lubricants.....MA-11
 Lubrication circuit (engine)LC-3
 Lubrication-locks, hinges and hood
 latchesMA-27
 Luggage room lamp.....EL-82

GI

MA

EM

LC

EC

FE

CL

MT

AT

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

ALPHABETICAL INDEX

M

MAFS - Wiring diagram.....	EC-158
Magnet clutch	HA-73, 111, 196
MAIN - Wiring diagram.....	EC-147
Mainshaft (M/T)	MT-31
Maintenance (engine)	MA-13
MAJOR OVERHALL.....	AT-286
Malfunction indicator lamp (MIL).....	EC-81
Manual air conditioner - Wiring diagram.....	HA-143
Manual transaxle number.....	GI-43
Manual transmission oil replacement	MA-22
Mass air flow sensor (MAFS).....	EC-154
Master cylinder (brake)	BR-14
Master cylinder (clutch)	CL-8
Meter	EL-84
METER - Wiring diagram.....	EL-89
MIL & Data link connectors circuit	EC-631
MIL/DL - Wiring diagram	EC-631
MIRROR - Wiring diagram.....	EL-143
Mirror defogger	EL-121
Mirror, door.....	BT-55
Mirror, out side	BT-55
Misfire	EC-322
Mode door control linkage adjustment...HA-53, 161	
Mode door motor.....	HA-48, 157
Model variation	GI-41
Molding - See Exterior	BT-34
M/T major overhaul	MT-15
M/T removal and installation	MT-12
MULTI - Wiring diagram.....	EL-194
Multi-remote control system.....	EL-190
Multiport fuel injection (MFI) system	EC-29
Multiport fuel injection precautions.....	GI-6

N

NATS (Nissan anti-theft system) precautions	GI-3
NATS - Wiring diagram.....	EL-249
Neutral position switch	EC-583
NVH troubleshooting (AX)	AX-3
NVH troubleshooting (BR).....	BR-6
NVH troubleshooting (CL)	CL-4
NVH troubleshooting (M/T)	MT-6
NVH troubleshooting (ST).....	ST-5
NVH troubleshooting (SU).....	SU-17

O

Oil change (capacity)	MA-11
Oil pan (engine)	EM-14
Oil pressure (engine)	LC-4
Oil pump (A/T).....	AT-308
Oil pump (engine)	LC-4
Oil pump regulator valve (engine)	LC-6
Oil seal replacement (engine).....	EM-28

On board diagnostic system	EC-67
Operating cylinder (clutch).....	CL-13
ORVR (On-board Refueling Vapor Recovery).....	EC-39
Out side mirror	BT-55
Overdrive control switch.....	AT-270
Overrun clutch.....	AT-336
Oversize piston	EM-59

P

P/ANT - Wiring diagram.....	EL-136
Park/Neutral position switch	EC-583
Park/neutral position switch (A/T)	AT-107
Park/neutral position switch (M/T).....	MT-10
Parking brake control	BR-32
Parking lamp	EL-53
PCV (positive crankcase ventilation)	EC-48
PGC/V - Wiring diagram	EC-385, 520
Pilot bushing replacement	EM-63
Piston assembly.....	EM-64
Piston pin inspection.....	EM-56
Piston ring inspection.....	EM-57
Piston to bore clearance.....	EM-59
PNP/SW - Wiring diagram	EC-585
POWER - Wiring diagram.....	EL-10
Power antenna.....	EL-135
Power door lock	EL-176
Power door mirror	EL-143
Power seat	EL-144
Power steering fluid level.....	MA-25, ST-7
Power steering gear.....	ST-15
Power steering hydraulic pressure	ST-8
Power steering oil pressure switch	EC-614
Power steering oil pump	ST-26
Power steering system bleeding.....	ST-7
Power supply routing	EL-9
Power transistor	EC-595
Power transistor & ignition coil.....	EC-590
Power window	EL-166
PRE/SE - Wiring diagram	EC-399
Precautions (General)	GI-4
Pressure plate - See Clutch cover	CL-19
Pressure test (A/T)	AT-66
PST/SW - Wiring diagram.....	EC-615

R

Radiator	LC-14
Radiator fan - See Cooling fan.....	LC-14
Radio - See Audio.....	EL-130
Rear air spoiler	BT-34
Rear axle	AX-20
Rear bumper	BT-16
Rear combination lamp removal and installation	BT-34
Rear disc brake	BR-24
Rear door	BT-22

ALPHABETICAL INDEX

Rear heated oxygen sensor (HO2S)	EC-237, 245, 253, 261
Rear heated oxygen sensor (HO2S) heater.....	EC-267
Rear seat	BT-43
Rear seat belt.....	RS-6
Rear suspension	SU-17
Rear window defogger.....	EL-121
Refrigerant pressure sensor	HA-79, 181
Refrigerant connection precaution	HA-5, 126
Refrigerant discharging evacuating charging	HA-105
Refrigerant general precaution	HA-4, 125
Refrigerant lines	HA-117, 203
Refrigerant pressure sensor.....	EC-619
Refrigeration cycle	HA-14, 135
Release bearing (clutch).....	CL-16
Removal and installation (A/T).....	AT-283
Reverse clutch.....	AT-327
Reverse idler shaft (M/T)	MT-16
Reverse lamp switch (M/T) - See Back-up lamp switch (M/T).....	MT-10
Reverse main gear (M/T)	MT-17
Road wheel size	GI-44
Roof trim	BT-31
Room lamp - See Interior lamp	EL-78
ROOM/L - Wiring diagram	EL-80
RRO2 - Wiring diagram	EC-239, 247, 255, 263
RRO2/H - Wiring diagram	EC-269

S

SAE J1930 terminology list	GI-51
Seal - See Exterior	BT-34
SEAT - Wiring diagram	EL-144
Seat belt inspection	MA-27, RS-8
Seat belt pre-tensioner	RS-3
Seat belt pre-tensioner disposal	RS-25
Seat belt, front.....	RS-4
Seat belt, rear.....	RS-6
Seat, front	BT-40
Seat, rear	BT-43
SHIFT - Wiring diagram	AT-273
Shift control components (M/T).....	MT-18
Shift fork (M/T)	MT-18
Shift lever	MT-15
Shift lock system	AT-272
Shift schedule.....	AT-389
Shift solenoid valve A (A/T)	AT-128, 133, 146
Shift solenoid valve B (A/T)	AT-128, 133
Shock absorber (front)	SU-10
Shock absorber (rear)	SU-22
Side air bag.....	RS-23
Side trim.....	BT-27
Smart entrance control unit	EL-242
SMJ (super multiple junction).....	Foldout
Spare tire size	GI-44
Spark plug replacement.....	MA-19
Speedometer.....	EL-84
Spiral cable.....	RS-19

Spot lamp.....	EL-82
Spring (Wheelarch) height	SU-5
SROOF - Wiring diagram	EL-141
SRS - See Supplemental Restraint System	RS-12
SRS - Wiring diagram	RS-37
S/SIG - Wiring diagram	EC-602
Stabilizer bar (front).....	SU-13
Stall test (A/T)	AT-62
Standardized relay	EL-7
START - Wiring diagram.....	SC-11
Start signal	EC-601
Starter.....	SC-19
Starting system.....	SC-10
Steering gear, linkage and transfer gear inspection	MA-25
Steering linkage	ST-15
Steering switch.....	EL-28
Steering wheel and column	ST-10
Steering wheel play	ST-6
Steering wheel turning force.....	ST-8
Stop lamp.....	EL-59
STOP/L - Wiring diagram.....	EL-59
Striking rod (M/T)	MT-18
Strut (front)	SU-9
Strut (rear)	SU-21
Sub-gear (M/T)	MT-17
Sun roof, electric.....	EL-140
Sunload sensor	HA-99
Sunroof.....	BT-44
Supplemental Restraint System.....	RS-12
Supplemental restraint system - Wiring diagram.....	RS-37
Symbols and abbreviations	GI-10
Symptom matrix chart	EC-125
Synchronizer (M/T).....	MT-17
System readiness test (SRT) code	EC-69

T

Tachometer	EL-84
Tail lamp.....	EL-53
TAIL/L - Wiring diagram	EL-55
TCM circuit diagram.....	AT-15
TCM inspection table	AT-100
TFTS - Wiring diagram.....	EC-288
THEFT - Wiring diagram.....	EL-219
Theft warning system.....	EL-214
Thermal protector	HA-114, 200
Thermostat.....	LC-12
Three way catalyst	EC-364
Three way catalyst precautions.....	GI-6
Throttle position sensor (TPS)	EC-177
Throttle position sensor adjustment.....	EC-107
Throttle position switch	EC-445, AT-201, 270
Throwout bearing - See Clutch release bearing	CL-16
Tie-rod ball joints.....	ST-19
Tightening torque of standard bolts.....	GI-50
Timing chain.....	EM-19

ALPHABETICAL INDEX

Tire rotation	MA-24
Tire size	GI-44
TLID - Wiring diagram	EL-139
Torque converter installation	AT-284
Tow truck towing	GI-48
TP/SW - Wiring diagram	EC-447
TPS - Wiring diagram.....	EC-183
Transmission case (M/T).....	MT-16
TRANSMT - Wiring diagram	EL-267
Tread-FR&RR (Dimensions).....	GI-44
Trim	BT-27
Trouble diagnoses	GI-34
Trunk room trim.....	BT-33
TURN - Wiring diagram	EL-68
Turn signal lamp	EL-66
Two trip detection logic	EC-67
Two-pole lift	GI-47

U

Under body	BT-60
------------------	-------

V

Vacuum cut valve bypass valve.....	EC-562, 568
Vacuum hose (brake system).....	BR-19
Vacuum hose drawing (Engine control)	EC-27
Valve guide.....	EM-38
Valve seat.....	EM-39
Valve spring.....	EM-41
Vehicle identification number.....	GI-42
Vehicle recovery (freeing a stuck vehicle).....	GI-49
VEHICLE SECURITY (THEFT WARN- ING) SYSTEM.....	EL-214
Vehicle speed sensor (VSS)	EC-432
Vent mode switch	HA-137
VENT/V - Wiring diagram	EC-391, 531, 552
Viscosity number (SAE)	MA-11

Viscous coupling (FF A/T).....	AT-361
Viscous coupling (FF M/T)	MT-11
VSS - Wiring diagram	EC-434

W

WARN - Wiring diagram	EL-99
Warning chime	EL-105
Warning lamps	EL-98
Washer, front.....	EL-114
Water cock control rod adjustment	HA-166
Water pump	LC-10
Water temperature gauge.....	EL-84
Weatherstrip - See Exterior	BT-34
Wheel alignment (front).....	SU-6
Wheel alignment (rear).....	SU-19
Wheel balance	MA-24
Wheel bearing (front).....	AX-3
Wheel bearing (rear)	AX-21
Wheel hub (front).....	AX-5
Wheel hub (rear)	AX-21
Wheel sensors (ABS).....	BR-75
Wheel size	GI-44
Wheelarch height	SU-5
Wheelbase (Dimensions)	GI-44
Wide open & closed throttle position switch.....	EC-177
Width (Dimensions)	GI-44
WINDOW - Wiring diagram	EL-169
Window, door	BT-20
Windshield.....	BT-53
WIPER - Wiring diagram.....	EL-116
Wiper, front.....	EL-114
Wiring Diagram (Cell code) list.....	EL-291
Wiring Diagram - VEHSEC -	EL-219
Wiring diagrams	GI-11
Withdrawal lever (clutch)	CL-16
Wrist pin - See Piston pin inspection.....	EM-56