

2009 SERVICE AND MAINTENANCE GUIDE



VEHICLE IDENTIFICATION

Vehicle Identification Number (VIN)	
Delivery Date	Warranty Start Date
Mileage at Delivery	Model Year
Selling Dealer	Selling Dealer Phone

TABLE OF CONTENTS



OWNER'S LITERATURE INFORMATION
INTRODUCTION NISSAN Maintenance
NISSAN MAINTENANCE & REPAIR SUPPORT Extended Service Plans
SCHEDULED MAINTENANCE GUIDE
GT-R Performance Optimization Services
Transmission replacement log

OWNER'S LITERATURE INFORMATION

INDEX OF TOPICS WHERE TO FIND INFORMATION

Recommended Fuel, Lubricants, Fluids	.Owner's Manual: chapter 9
Starting and Driving Your Vehicle	.Owner's Manual: chapter 5
Security System Operation	.Owner's Manual: chapter 2
Changing a Flat Tire	.Owner's Manual: chapter 6, also see chapter 8
New Vehicle Limited Warranty	.Warranty Information Booklet: page 4
Federal Emission Control Warranties	.Warranty Information Booklet: page 7
California Emission Control Warranties	.Warranty Information Booklet: page 10
Tire Pressure/Rotation	.Owner's Manual: chapter 8
Tire Warranties/Safety Information	.Warranty Information Booklet: pages 15 to 37
Consumer Affairs Assistance	.Warranty Information Booklet: page 2
	Customer Care/Lemon Law Information Booklet: page 5
Do It Yourself Information	.Owner's Manual: chapter 8
General Maintenance	Owner's Manual: chapter 8



Maintain Your Investment

Preventative scheduled maintenance is an important investment to optimize the performance, reliability, safety and resale value of your NISSAN GT-R. Scheduling your vehicle's maintenance at the recommended intervals will ensure your vehicle is running at its best.

We want you to enjoy your NISSAN GT-R. This Service and Maintenance Guide is designed to help you make sure your vehicle receives proper and timely maintenance that is necessary. Key services are explained in detail, along with an outline of scheduled maintenance to help you maintain your vehicle. Your GT-R certified NISSAN dealer can assist you in determining the best schedule based on your driving habits and local conditions.

Failure to perform scheduled maintenance may result in excluding portions of your vehicle from warranty coverage and may reduce the performance, safety, reliability and/or resale value of your vehicle. For details of the warranty, please read the 2009 NISSAN GT-R Warranty Information Booklet.

WHY NISSAN SERVICE? *



As to specific service to the GT-R, special skills, knowledge and equipment are necessary to properly inspect and adjust the GT-R engine, transmission, suspension and brakes to maintain performance. A GT-R certified NISSAN dealer has the GT-R certified technical staff and the special equipment to properly maintain your GT-R.

Many general maintenance items can be performed at all NISSAN dealers. However, make sure the specified other fluids and parts are used when the maintenance is performed.



For All Your Service Needs

WHY NISSAN SERVICE?*



To safeguard the quality, reliability and safety of your vehicle, a GT-R certified NISSAN dealer is recommended for maintenance or repair. Only GT-R certified NISSAN dealers offer you these advantages:

- NISSAN trained and certified GT-R technicians
- Immediate access to warranty service history and NISSAN technical information
- Latest diagnostic, special tools and service techniques
- Genuine NISSAN Parts that meet NISSAN's demanding standards
- 12 month/12,000 mile parts and labor limited warranty when Genuine NISSAN Parts are installed by your dealer
- Lifetime limited warranty on select replacement parts
- Clear, up-front estimates
- Nearly 700 GT-R certified locations nationwide
- Shuttle service/Courtesy van (at participating dealers)
- Access to a NISSAN certified body repair facility

Your GT-R certified NISSAN dealer is a full-service maintenance and repair center. We recommend using authorized NISSAN Service and Genuine NISSAN Parts that we have designed for their reliability, safety and suitability for your NISSAN vehicle. We are committed to providing you with quick, efficient and competitively priced service and parts.

^{*} May differ or not apply outside the United States, please inquire of your dealer.



About GT-R Maintenance

The GT-R is Nissan's first supercar category vehicle. The GT-R is equipped with special systems. These systems are different than those used on conventional vehicles to allow for the high performance driving characteristics of the GT-R. Your GT-R should be maintained by a GT-R certified NISSAN dealer. Special skills, knowledge and equipment are necessary to properly maintain your GT-R.

Special skill, knowledge and equipment are necessary to properly inspect and adjust the GT-R engine, transmission, suspension and brakes to maintain performance. A GT-R certified NISSAN dealer has the GT-R certified technical staff and the special equipment to properly maintain your GT-R.

The installation/use of parts other than genuine NISSAN parts, fluids and lubricants may cause the vehicle to malfunction (i.e. cease functioning normally, damage vehicle parts) and result in the vehicle requiring non-warranty protected repairs. Many of the periodic maintenance items can be performed at all NISSAN dealers. However, make sure the specified fluids and parts are used when the maintenance is performed. Be sure to request NISSAN approved parts and fluids when maintenance is performed.

For recommended and/or required GT-R lubricants and fluids, refer to Chapter 9 of your owner's manual.



About GT-R Maintenance

Special, dedicated servicing equipment must be used for GT-R special inspections and/or engine/transmission, suspension, and brake inspections, in order to maintain your vehicle's high performance and high precision. Have your vehicle serviced by specially trained GT-R certified technical staff using dedicated maintenance equipments installed at a GT-R certified NISSAN dealer.

Any maintenance work except GT-R Performance Optimization Services need not be performed at a GT-R certified NISSAN dealer; However, it is essential that genuine GT-R specified parts be used for fluids, lubricants and consumable parts such as for brake system. It is also recommended replacement of parts, such as for the brake system, be performed at GT-R certified NISSAN dealer.



GT-R Performance Optimization Services

In addition to the regular maintenance recommended by NISSAN, the GT-R requires the following Inspections;

Measurement and adjustment of wheel alignment if needed (unladen with fuel and lubricants full, including tire pressure adjustment) Note 1

• Note 1: This vehicle is equipped with a high performance suspension. As the suspension components "break-in", the vehicle's wheel alignment needs to be measured and adjusted by a GT-R certified dealer at the recommended intervals.

Engine settings (balancing of air flow for left and right banks) Note 2

Note 2: Each cylinder bank of this engine operates independently due to the vehicle's twin turbocharger design. Each side of the
engine must operate at the same level of performance. The power output of each bank must be checked and adjusted as necessary by a GT-R certified NISSAN dealer.

Transmission settings Note 3

Note 3: The design of the clutch and transmission requires inspection and adjustment of the clutch and shift forks by a GT-R certified NISSAN dealer at the recommended intervals. Depending on driving conditions, more frequent adjustments may be necessary to help maximize vehicle performance.

These inspections are required at the following intervals: 1,000 miles, 12 months, 24 months and 36 months.

These inspections will be performed free of charge at a GT-R certified NISSAN dealer only. See your 2009 NISSAN GT-R Warranty Information Booklet for details.

After the period of GT-R performance optimization services in the first three years, these items are included in the regular scheduled maintenance.

*Repairs and adjustments involving part replacement, etc. determined to be necessary as a result of these inspections are performed at the customer's expense.

*See your 2009 NISSAN GT-R Warranty Information Booklet for significant limitations, exclusions, and possible voiding of warranty resulting from failure to have these necessary inspection, repairs and/or adjustments performed.

EXTENDED SERVICE PLANS *

Security+Plus[®]

VEHICLE PROTECTION PLAN

If someone told you, you could drive your new GT-R for the next 7 years or 100,000 miles, almost worry-free of unexpected repair costs, would you be interested?

NISSAN's "Security+Plus" family of extended service contracts delivers the peace of mind that does just that. Security+Plus vehicle protection plans can cover everything from over 1,100 vehicle components to roadside assistance to rental vehicle costs and provide: Coverage (at GT-R certified NISSAN dealers); utilizing: Genuine NISSAN Parts (new or in some cases remanufactured); installed by: Factory Trained Technicians (trained by us to work on your GT-R). And you'll be protected against future inflation (rising cost of parts and labor).

Security+Plus coverage can be purchased any time within your GT-R's original 3-year/36,000-mile new vehicle basic limited warranty period. Just contact your selling dealer and tell them you'd like to take advantage of one of the best mechanical breakdown plans available for your GT-R today.

Maintenance+Plus®

VEHICLE SERVICE PLAN

Do you currently have someone that maintains your yard? Cleans your house? Maintains your vehicle? With Maintenance+Plus you'll be hiring NISSAN to maintain your GT-R to factory specification by factory trained technicians. Like Security+Plus, you'll benefit from **Coverage at GT-R** certified NISSAN dealers, Genuine NISSAN Parts, Factory Trained Technicians, and you'll be protected against future inflation (rising costs of parts and labor). What could be easier? A special Maintenance+Plus plan has been specifically designed for your GT-R. Didn't purchase Maintenance+Plus at the time of vehicle delivery? Don't sweat the small stuff, 'New' Maintenance+Plus contracts can be purchased any time within the first 36-months/7,500miles of original vehicle GT-R sale date. If for some reason you missed this initial window a 'Used' Maintenance+Plus contract (that covers Oil and Filter changes) may be purchased at anytime throughout the life of the your vehicle GT-R. Just contact your selling dealer and tell them you'd like to take advantage of one of the best maintenance plans available for your GT-R today.

NISSAN

^{*} These products not available outside the United States.

GENUINE NISSAN COLLISION PARTS

Your GT-R has been manufactured using a combination of stamped steel, stamped aluminum, die-cast aluminum, and carbon reinforced components and high precision assembly jigs. If you have an accident, insist on Genuine NISSAN Collision Parts. If you want your vehicle to be restored using parts made to NISSAN's original exacting specifications – if you want it to last, help to protect your personal safety and to help hold its resale value, the solution is simple. Tell your insurance agent and your repair shop to use only Genuine NISSAN Collision Parts. As special skills, information and equipment are required to correctly repair the body, be sure to contact your NISSAN dealer to locate a GT-R certified body shop in your area.

Many non-genuine parts are copies made from impressions of NIS-SAN parts and may not match the specifications and performance standards of Genuine NISSAN Parts. As a result, non-genuine parts may not look or fit right, and may be less safe.

The hood on your vehicle is a good example. NISSAN designed it with hood buckling creases to help prevent the hood from penetrating the interior of your vehicle in an accident. Non-genuine parts may not provide such built-in safeguards.

In some states, the law says you must be advised if non-genuine parts are used to repair your vehicle. **Why should you take a chance?**

Replacement Panel Limited Lifetime Corrosion Warranty*

If you have your collision damage repaired using Genuine NISSAN Outer Sheet Metal Panels you don't have to worry about

corrosion. That's because these panels are warranted against inside out rust-through perforation for as long as you own your NISSAN. Another reason to insist on Genuine NISSAN Collision Repair Parts.

* This warranty does not apply to vehicles not distributed by NISSAN North America and/or sold outside the United States.

DETERMINING THE PROPER MAINTENANCE INTERVAL

Depending on your driving habits and local conditions, you should follow one of the two maintenance schedules listed below for scheduled maintenance. In addition to Schedule 1 maintenance, additional maintenance must be performed for optimum performance. Use these guidelines to determine which maintenance schedule to use:

SCHEDULE 1 (Every 6,000 miles or 6 months, whichever comes first)

Schedule 1 features 6,000-mile service intervals. Use Schedule 1 if you primarily operate your vehicle under any of these conditions:

- Repeated short trips of less than 5 miles in normal temperatures or less than 10 miles in freezing temperatures
- Stop-and-go traffic in hot weather or low-speed driving for long distances
- Driving in dusty conditions or on rough, muddy, or salt-spread roads

SCHEDULE 2 (Every 6,000 miles or 6 months, whichever comes first)

Schedule 2 features 6,000-mile service intervals; with Schedule 2 fewer maintenance items are regularly checked or replaced than with Schedule 1.

Generally, Schedule 2 applies only to highway driving in temperate conditions. Use Schedule 2 only if you primarily operate your vehicle under conditions other than those listed in Schedule 1.

EXPLANATION OF SCHEDULED MAINTENANCE ITEMS

The following descriptions are provided to give you a better understanding of the scheduled maintenance items that should be regularly checked or replaced. The maintenance log indicates at which mileage/time intervals each item requires service.

In addition to scheduled maintenance. your NISSAN requires that some items be checked during normal day-to-day operation. You can find these items listed under "General Maintenance" in Chapter 8 of your Owner's Manual.

Maintenance items and intervals marked with "*" are recommended by NISSAN for reliable vehicle operation. You are not required to perform such maintenance in order to maintain the emission warranty or manufacturer recall liability.

When applicable, additional information can be found in the "Maintenance and do-it-yourself" section in Chapter 8 of your Öwner's Manual.

For recommended fuel, lubricants, fluids, grease, and refrigerant, refer to Chapter 9 in your Owner's Manual.

Emission Control System Maintenance:

Drive Belts*

Check engine drive belts for wear, fraying or cracking. Replace any damaged drive belts.

Air Pump Cleaner (For Secondary Air Injection System)*

Visually inspect the filter element at specified intervals. Replace the filter assembly at specified intervals.

Engine Air Filter

Replace at specified intervals. When driving for prolonged periods in dusty conditions, check/replace the filter more frequently.

Engine Coolant*

Replace engine coolant at the specified interval.

Engine Oil and Oil Filter

Replace engine oil and oil filter at the specified intervals. For recommended oil grade and viscosity refer to Chapter 9 in your Owner's Manual.

Engine Settings*

Balance the air flow for left and right banks at specified intervals.

Engine Valve Clearance*

Inspect only if valve noise increases. Adjust valve clearance if necessary.

Evaporative Emissions Control Vapor Lines*

Check vapor lines and connections for leaks or looseness. Tighten connections or replace parts as necessary.

Fuel Filter

Maintenance-free item.

EXPLANATION OF SCHEDULED MAINTENANCE ITEMS

Fuel Lines*

Check the fuel hoses, piping and connections for leaks, looseness, or deterioration. Tighten connections or replace parts as necessary.

Throttle Chamber Deposits*

Visually inspect the throttle chamber for deposits and clean as necessary.

Spark Plugs

Replace at specified intervals. Install new plugs of the same type as originally equipped.

Chassis and Body Maintenance:

Brake Lines and Cables

Visually inspect for proper installation. Check for chafing, cracks, deterioration, and signs of leaking. Replace any deteriorated or damaged parts immediately.

Brake Pads & Rotors

Check for wear, deterioration and fluid leaks. Replace any deteriorated or damaged parts immediately. Replace all four sets of brake pads and disc rotors at the same time to maintain maximum brake performance.

Exhaust System

Visually inspect the exhaust pipes, muffler and hangers for leaks, cracks, deterioration, and damage. Tighten connections or replace parts as necessary.

In-Cabin Microfilter

Replace at specified intervals. When driving for prolonged periods in dusty conditions, replace the filter more frequently.

Measurement and Adjustment of Wheel Alignment

Manage the wheel alignment by measuring and adjusting at specified intervals.

Propeller Shaft(s)

Check for damage, looseness, and grease leakage.

Steering Gear and Linkage, Axle and Suspension Parts, Drive Shaft Boots

Check for damage, looseness, and leakage of oil or grease. Under severe driving conditions, inspect more frequently.

Tire Rotation

Tires cannot be rotated as front tires are different size from rear tires.

Transmission Oil, Differential Oil

Visually inspect for signs of leakage at specified intervals. Replace the oil every 18,000 miles.

Transmission settings

To keep the best condition for transmission, this inspection allows learning of the clutch touch point and the engaged gear position and neutral position for each gear.

ADDITIONAL MAINTENANCE ITEMS

The following information applies if you engage in performance driving such as driving your GT-R for extended periods under the following conditions:

- Higher-rpm (approaching redline) operation,
- Frequent high pedal force braking from moderate and higher speeds,
- Frequent throttle activation,
- Fast revving throughout the RPM range In such cases, the following additional maintenance guidelines apply. However, you should also carefully read your 2009 NISSAN GT-R Limited Warranty Information Booklet for important information concerning warranty coverage, limitations, and exclusions. We recommend that maintenance be

performed at a GT-R certified NISSAN dealer. NISSAN will only pay for GT-R Performance Optimization Services performed at a GT-R certified NISSAN dealer.

FLUIDS

- Before driving, check the fluid levels and adjust as necessary using the specified fluid.
- Check the amount of fluid for the power steering.
- Be sure to change the fluids listed below with the specified fluids every 1,800 miles (3,000 km).
- Engine Oil
- Transmission Oil
- Differential Oil (Front and Rear)
- Brake Fluid

For GT-R recommended fluids, refer to Chapter 9 of your GT-R owner's manual

INSPECTION AND ADJUSTMENTS OF TIRES, SUSPENSION AND BRAKES

- Measure and adjust (if needed) the wheel alignment.
- Check the tire pressure and the Tire Pressure Monitoring System (TPMS) sensor.
- Make tire pressure adjustments only when the tires are cool.
- Secure road wheel balance weights with aluminum tape or equivalent.
- Check the heat deterioration and wear of the brakes. (As necessary, the brake and brake disc rotor must be replaced as a set of four with new ones.)

REPLENISHING COOLANT

Check the coolant level in the pressurized coolant reservoir tank. Adjust the level so that the fluid is between the MAX and MIN markings. For the coolant, use genuine NISSAN Long Life coolant. (On delivery of a new vehicle, the reservoir is filled up to the MIN level. Be sure to replenish approximately 0.3 to 0.4 US quart of coolant.)

COOLANT MIXTURE RATIO

For maximum cooling system performance, the coolant mixture ratio should be a combination of 30% antifreeze and 70% demineralized or distilled water.

If ambient temperatures are anticipated below 5F (-15C), make sure a proper mixture ration of 50% antifreeze and 50% demineralized or distilled water is used.

COOL DOWN

Cool down the vehicle to help extend the life of the vehicle if coolant temperatures are extremely high. Drive the vehicle at 37 to 50 MPH (60 to 80 km/h), in 5th or 6th gear for 2 to 3 miles (3 to 5 km) and then stop the engine.

MAINTENANCE LOG AND RECORDS



The following Maintenance Log has been compiled by NISSAN to assist you in performing the recommended maintenance services and keeping appropriate records of services performed. The maintenance log is composed of the log for GT-R special inspections and the log for scheduled maintenance. Along with the related repair invoices, receipts, and other such records, a properly documented maintenance history could enhance the value of your vehicle should you ever wish to sell it. The services listed represent the minimal NISSAN recommended requirements for each time/mileage interval, up to 96,000 miles / 96 months.

Abbreviations

[]: Performed based on the mileage only.

<>: Performed based on the number of months only.

GT-R Complimentary Performance Optimization Services*

*Necessary repairs discovered during inspections may incur service charges.

1,000 MILES

☐ Inspect the following: Measurement and adjustment (if needed) of wheel alignment Transmission settings Engine settings¹
--

Dealer Verified Service Stamp

Dealer name: ______

Date: _____
Mileage:

Equipment varies by model. Perform only those operations that apply to your vehicle.

¹ Balancing of air flow for left and right banks

GT-R Performance Optimization Service Log Record of Service Details

Measurement and Adjustment of wheel alignment

Measured Values

	Total Toe-In		in/mm
FR Camber Caster	Camber	LH	Deg/min (Dec/Deg)
		RH	Deg/min (Dec/Deg)
	LH	Deg/min (Dec/Deg)	
	Castel	RH	Deg/min (Dec/Deg)
	Total Toe-In		in/mm
RR	Camber	LH	Deg/min (Dec/Deg)
		RH	Deg/min (Dec/Deg)

Adjusted Values

	Total Toe-In		in/mm
FR Cambe	Camber	LH	Deg/min (Dec/Deg)
		RH	Deg/min (Dec/Deg)
	Caster	LH	Deg/min (Dec/Deg)
	Oaster	RH	Deg/min (Dec/Deg)
	Total Toe-In		in/mm
RR	Camber	LH	Deg/min (Dec/Deg)
		RH	Deg/min (Dec/Deg)

Engine Settings

Measured Values

Engine Speed	rpm
Coolant Temp.	°F (°C)
Engine Oil Temp	°F (°C)
MAS A/F SE-B1	mV
MAS A/F SE-B2	mV
Throttle Angle-B1	Vdeg
Throttle Angle-B2	Vdeg

Transmission Settings

Measured Values

Engine Speed	rpm
Trans. Oil Temp.	°F (°C)

Status of Transmission Setting

	Previous Learned Value
Clutch Gear Lear	ning Current Learned Value

^{*} Circle the settings as delivered to the Customer

Customer Name	
Address	

Mileage	Miles/km
Dealer Name	
-	'
Date	
Technician Name	
	·

Notes:	

GT-R Complimentary Performance Optimization Services*

*Necessary repairs discovered during inspections may incur service charges.

12 MONTHS

respect the following: Measurement and adjustment (if needed) of wheel alignment Transmission settings Engine settings ¹
--

Dealer Verified Service Stamp

Dealer name:	
Date:	
Mileage:	

- ¹ Balancing of air flow for left and right banks
- ² Refer to the appropriate Schedule 1 or Schedule 2, recommended maintenance schedule for additional maintenance items.

Equipment varies by model. Perform only those operations that apply to your vehicle.

GT-R Performance Optimization Service Log Record of Service Details

Measurement and Adjustment of wheel alignment

Measured Values

	Total Toe-In		in/mm
	Camber	LH	Deg/min (Dec/Deg)
lfR	Cambei	RH	Deg/min (Dec/Deg)
	Caster	LH	Deg/min (Dec/Deg)
	Oaster	RH	Deg/min (Dec/Deg)
	Total Toe-In		in/mm
RR	Camber	LH	Deg/min (Dec/Deg)
	Carriber	RH	Deg/min (Dec/Deg)

Adjusted Values

	Total Toe-In		in/mm
	Camber	LH	Deg/min (Dec/Deg)
lfR	R		Deg/min (Dec/Deg)
	Caster	LH	Deg/min (Dec/Deg)
	Oddici	RH	Deg/min (Dec/Deg)
	Total Toe-In		in/mm
RR	Camber	LH	Deg/min (Dec/Deg)
	Cambei	RH	Deg/min (Dec/Deg)

Engine Settings

Measured Values

rpm
°F (°C)
°F (°C)
mV
mV
Vdeg
Vdeg

Transmission Settings

Measured Values

Engine Speed	rpm
Trans. Oil Temp.	°F (°C)

Status of Transmission Setting

	Previous Learned Value
Clutch Gear Learning	Current Learned Value

^{*} Circle the settings as delivered to the Customer

Miles/km
·

Notes:	

GT-R Complimentary Performance Optimization Services*

*Necessary repairs discovered during inspections may incur service charges.

24 MONTHS

☐ Inspect the following: Measurement and adjustment (if needed) of wheel alignment Transmission settings Engine settings¹
--

Dealer Verified Service Stamp

 Dealer name:
 Date:
 Mileage:

Equipment varies by model. Perform only those operations that apply to your vehicle.

Balancing of air flow for left and right banks

² Refer to the appropriate Schedule 1 or Schedule 2, recommended maintenance schedule for additional maintenance items.

GT-R Performance Optimization Service Log Record of Service Details

Measurement and Adjustment of wheel alignment

Measured Values

	Total Toe-In		in/mm
	Camber	LH	Deg/min (Dec/Deg)
lfR		RH	Deg/min (Dec/Deg)
	Caster	LH	Deg/min (Dec/Deg)
		RH	Deg/min (Dec/Deg)
RR	Total Toe-In		in/mm
	Camber	LH	Deg/min (Dec/Deg)
		RH	Deg/min (Dec/Deg)

Adjusted Values

1		Total Toe-In		in/mm
FR		Camber	LH	Deg/min (Dec/Deg)
	FR		RH	Deg/min (Dec/Deg)
		Caster	LH	Deg/min (Dec/Deg)
			RH	Deg/min (Dec/Deg)
		Total Toe-In		in/mm
RR	Camber	LH	Deg/min (Dec/Deg)	
1		Cambei	RH	Deg/min (Dec/Deg)

Engine Settings

Measured Values

rpm
°F (°C)
°F (°C)
mV
mV
Vdeg
Vdeg
֡֜֜֜֜֜֜֜֜֜֜֜֜֜֜֜֜֜֜֜֜֜֜֜֜֜֜֜֜֜֜֜֜֜֜֜֜

Transmission Settings

Measured Values

Engine Speed	rpm
Trans. Oil Temp.	°F (°C)

Status of Transmission Setting

	Previous Learned Value
Clutch Gear Learning	Current Learned Value

^{*} Circle the settings as delivered to the Customer

Mileage	Miles/km
Dealer Name	
-	
D 1	
Date	
Technician Name	
	'

Notes:	

GT-R Complimentary Performance Optimization Services*

*Necessary repairs discovered during inspections may incur service charges.

36 MONTHS

☐ Inspect the following: Measurement and adjustment (if needed) of wheel alignment Transmission settings Engine settings¹
--

Dealer Verified Service Stamp

Dealer name: _	
Date:	
Mileage:	

- ¹ Balancing of air flow for left and right banks
- ² Refer to the appropriate Schedule 1 or Schedule 2, recommended maintenance schedule for additional maintenance items.

Equipment varies by model. Perform only those operations that apply to your vehicle.

GT-R Performance Optimization Service Log Record of Service Details

Measurement and Adjustment of wheel alignment

Measured Values

	Total Toe-In		in/mm
	Camber	LH	Deg/min (Dec/Deg)
lfR		RH	Deg/min (Dec/Deg)
ļ. · ·	Caster	LH	Deg/min (Dec/Deg)
		RH	Deg/min (Dec/Deg)
RR	Total Toe-In		in/mm
	Camber	LH	Deg/min (Dec/Deg)
		RH	Deg/min (Dec/Deg)

Adjusted Values

	Total Toe-In		in/mm
	Camber	LH	Deg/min (Dec/Deg)
IFR		RH	Deg/min (Dec/Deg)
' '	Caster	LH	Deg/min (Dec/Deg)
1		RH	Deg/min (Dec/Deg)
RR	Total Toe-In		in/mm
	Camber	LH	Deg/min (Dec/Deg)
		RH	Deg/min (Dec/Deg)

Engine Settings

Measured Values

rpm
°F (°C)
°F (°C)
mV
mV
Vdeg
Vdeg
֡֡֜֜֜֜֜֜֜֜֜֜֜֜֜֜֜֜֜֜֜֜֜֜֜֜֜֜֜֜֜֜֜֜֜֜֜

Transmission Settings

Measured Values

Engine Speed	rpm
Trans. Oil Temp.	°F (°C)

Status of Transmission Setting

	Previous Learned Value
Clutch Gear Learning	Current Learned Value

^{*} Circle the settings as delivered to the Customer

Customer Name	
Address	

Mileage	Miles/km
Dealer Name	
-	
Date	
Technician Name	
	·

Notes:	

6,000 MILES OR 6 MONTHS


SCHEDULE 1 MAINTENANCE ☐ Replace engine oil and filter ☐ Inspect the following: __ Axle & suspension parts __ Brake pads & rotors __ Drive shaft boots __ Exhaust system __ Front suspension ball joints __ Propeller shaft __ Steering gear and linkage __ Steering linkage ball joints

SCHEDULE 2 MAINTENANCE	
☐ Replace engine oil and filter	

Dealer name:
Date:
Mileage:

MAINTENANCE LO

12,000 MILES OR 12 MONTHS

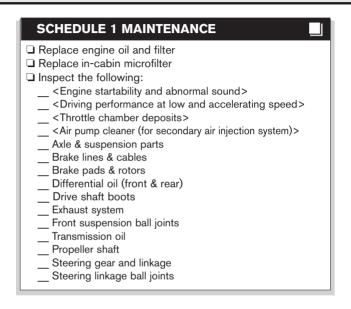

SCHEDULE 2 MAINTENANCE
☐ Replace engine oil and filter☐ Replace in-cabin microfilter
☐ Inspect the following:
< Engine startability and abnormal sound >
< Driving performance at low and accelerating speed >
Brake lines & cables
Brake pads & rotors
Differential oil (front & rear) Drive shaft boots
Transmission oil
Propeller shaft

<>: Performed based on the number of service months only.

Equipment varies by model. Perform only those operations that apply to your vehicle.

Refer to the appropriate GT-R Performance Optimization Services section for additional maintenance items.

Dealer nam	e:
Date:	
Mileage: _	

18,000 MILES OR 18 MONTHS

SCHEDULE 1 MAINTENANCE ☐ Replace engine oil and filter ☐ [Replace transmission oil] ☐ [Replace differential oil (front & rear)] ☐ Inspect the following: ☐ Axle & suspension parts ☐ Brake pads & rotors ☐ Drive shaft boots ☐ Exhaust system ☐ Front suspension ball joints ☐ Propeller shaft ☐ Steering gear and linkage ☐ Steering linkage ball joints

SCHEDULE 2 MAINTENANCE	
☐ Replace engine oil and filter☐ [Replace transmission oil]☐ [Replace differential oil (front & rear)]	

]: Performed based on the mileage only.

Equipment varies by model. Perform only those operations that apply to your vehicle.

Dealer name:
Date:
Mileage:

NISSAN SERVICES DESIGNED WITH YOU IN MIND *

Brake Service

Stop at NISSAN for Brake Service.

- Install new Genuine NISSAN front brake pads
- Inspect front rotors
- Inspect and adjust parking brake as necessary
- Inspect entire brake system:
 - Rear Brake Pads/Shoes
 - Rear Brake Rotors/Drums
 - Master Cylinder/Wheel Cylinders
 - Brake Calipers
 - Brake Fluid/Brake Hoses/Brake Lines
 - Vacuum Booster
- Road test your vehicle

Genuine NISSAN brake pads are just like the ones that came on your vehicle from the factory, and are warranted for 12 months or 12,000 miles.



^{*} May differ or not apply outside the United States, please inquire of your dealer.

24,000 MILES OR 24 MONTHS

SCHEDULE 1 MAINTENANCE SCHEDULE 2 MAINTENANCE ☐ Replace engine oil and filter ☐ Replace engine oil and filter ☐ Replace engine coolant ☐ Replace engine coolant ☐ Replace in-cabin microfilter ☐ Replace in-cabin microfilter ☐ Inspect the following: ☐ Inspect the following: < Engine startability and Engine drive belts < Engine startability and Drive shaft boots abnormal sound> Drive shaft boots abnormal sound> Exhaust system <Driving performance at low Exhaust system Front suspension ball joints <Driving performance at low ___</pre> Fuel lines/connections and accelerating speed> Front suspension ball joints and accelerating speed> Fuel tank vapor vent system hoses <Throttle chamber deposits> Fuel lines/connections <Throttle chamber deposits> _ Transmission oil <Air pump cleaner Fuel tank vapor vent system hoses Axle & suspension parts Propeller shaft Brake lines & cables (for secondary air injection system> Transmission oil Steering gear and linkage Brake pads & rotors Axle & suspension parts Propeller shaft Steering linkage ball joints Differential oil (front & rear) Brake lines & cables Steering gear and linkage Engine drive belts Brake pads & rotors Steering linkage ball joints Differential oil (front & rear)

<>: Performed based on the number of service months only.

Equipment varies by model. Perform only those operations that apply to your vehicle.

Refer to the appropriate GT-R Performance Optimization Services section for additional maintenance items.

Dealer Verified Service Stamp

Dealer name:

Date:

Mileage:

MAINTENANCE LOG

30,000 MILES OR 30 MONTHS

Replace engine oil and filter ☐ [Replace engine air filter] ☐ Inspect the following: __ Axle & suspension parts __ Brake pads & rotors __ Drive shaft boots __ Exhaust system __ Front suspension ball joints __ Propeller shaft __ Steering gear and linkage __ Steering linkage ball joints

SCHEDULE 2 MAINTENANCE	
☐ Replace engine oil and filter	
☐ [Replace engine air filter]	

[]: Performed based on the mileage only.

Equipment varies by model. Perform only those operations that apply to your vehicle.

Dealer name:
Date:
Mileage:

36,000 MILES OR 36 MONTHS

SCHEDULE 1 MAINTENANCE ☐ Replace engine oil and filter ☐ Replace in-cabin microfilter <Replace brake fluid> ☐ [Replace transmission oil] ☐ [Replace differential oil (front & rear)] ☐ Inspect the following: <Engine startability and abnormal sound> <Driving performance at low and accelerating speed> <Throttle chamber deposits> <Air pump cleaner (for secondary air injection system)> Engine drive belts Axle & suspension parts Brake lines & cables Brake pads & rotors Drive shaft boots Exhaust system Front suspension ball joints Propeller shaft Steering gear and linkage Steering linkage ball joints

SCHEDULE 2 MAINTENANCE
☐ Replace engine oil and filter
☐ Replace in-cabin microfilter
□ <replace brake="" fluid=""></replace>
☐ [Replace transmission oil]
☐ [Replace differential oil (front & rear)]
☐ Inspect the following:
_ <engine abnormal="" and="" sound="" startability=""></engine>
_ < Driving performance at low and accelerating speed >
< Throttle chamber deposits >
Engine drive belts
Brake lines & cables
Brake pads & rotors
Drive shaft boots
Propeller shaft

- []: Performed based on the mileage only.
- <>: Performed based on the number of service months only.

Equipment varies by model. Perform only those operations that apply to your vehicle.

Refer to the appropriate GT-R Performance Optimization Services section for additional maintenance items.

Dealer name:
Date:
Mileage:

MAINTENANCE LO

42,000 MILES OR 42 MONTHS

SCHEDULE 1 MAINTENANCE
☐ Replace engine oil and filter☐ Inspect the following:
Axle & suspension parts Brake pads & rotors Drive shaft boots Exhaust system Front suspension ball joints Propeller shaft Steering gear and linkage Steering linkage ball joints

SCHEDULE 2 MAINTENANCE
☐ Replace engine oil and filter

Dealer Verified Service Stamp

Dealer name:
Date:
Mileage:

Equipment varies by model. Perform only those operations that apply to your vehicle.

GENUINE NISSAN PARTS YOU CAN RELY ON

Genuine NISSAN Oil Filters

Genuine NISSAN Oil Filters are designed specifically for your vehicle.

Genuine NISSAN Oil Filters have an anti-drainback valve that keeps oil in the filter when the engine is not running. This prevents harmful engine wear on start-up.





GENUINE NISSAN PARTS YOU CAN RELY ON *

Batteries

If your vehicle is slow to start or will not start, please see your NISSAN dealer about a Genuine NISSAN Replacement Battery. Genuine NISSAN Replacement Batteries are designed to meet your vehicle's original specifications and feature an 84 Month Limited Warranty with 24 Month Free Replacement, regardless of mileage. Plus your NISSAN dealer has the knowledge and equipment to test your battery before it fails, so you can travel in confidence.



See your participating NISSAN GT-R certified dealer for details.

^{*} May or may not apply outside of the United States, please inquire of your dealer.

48,000 MILES OR 48 MONTHS

SCHEDULE 2 MAINTENANCE SCHEDULE 1 MAINTENANCE ☐ Replace engine oil and filter ☐ Replace engine oil and filter ☐ Replace engine coolant ☐ Replace engine coolant ☐ Replace in-cabin microfilter ☐ Replace in-cabin microfilter ☐ Inspect the following: ☐ Inspect the following: <Engine startability and Exhaust system < Engine startability and Engine settings^{1,2} abnormal sound> Engine settings^{1,2} abnormal sound> Transmission settings² <Driving performance at low</p> <Driving performance at low</p> Transmission settings² Measurement and adjustment of and accelerating speed> and accelerating speed> Measurement and adjustment of wheel alignment² <Throttle chamber deposits> <Throttle chamber deposits> wheel alignment² Front suspension ball joints <Air pump cleaner Axle & suspension parts Fuel lines/connections Front suspension ball joints Brake lines & cables (for secondary air injection system)> Fuel tank vapor vent system hoses Fuel lines/connections Brake pads & rotors Axle & suspension parts Transmission oil Fuel tank vapor vent system hoses Differential oil (front & rear) Brake lines & cables Propeller shaft Transmission oil Drive shaft boots Steering gear and linkage Brake pads & rotors Propeller shaft Engine drive belts Steering linkage ball joints Differential oil (front & rear) Steering gear and linkage Exhaust system Drive shaft boots Steering linkage ball joints Engine drive belts

- Balancing of air flow for left and right banks
- If the performance optimization services at 36 months (free of charge) including this inspection have not been finished yet, this inspection is not necessary.
- <>: Performed based on the number of service months only.

Equipment varies by model. Perform only those operations that apply to your vehicle.

Dealer name:
Date:
Mileage:

Measurement and Adjustment of wheel alignment

Measured Values

	Total Toe-In		in/mm
	Camber	LH	Deg/min (Dec/Deg)
lfR		RH	Deg/min (Dec/Deg)
	Caster	LH	Deg/min (Dec/Deg)
		RH	Deg/min (Dec/Deg)
RR	Total Toe-In		in/mm
	Camber	LH	Deg/min (Dec/Deg)
		RH	Deg/min (Dec/Deg)

Adjusted Values

FR	Total Toe-In		in/mm
	Camber	LH	Deg/min (Dec/Deg)
		RH	Deg/min (Dec/Deg)
	Caster	LH	Deg/min (Dec/Deg)
		RH	Deg/min (Dec/Deg)
RR	Total Toe-In		in/mm
	Camber	LH	Deg/min (Dec/Deg)
		RH	Deg/min (Dec/Deg)

Engine Settings

Measured Values

rpm
°F (°C)
°F (°C)
mV
mV
Vdeg
Vdeg

Transmission Settings

Measured Values

Engine Speed	rpm
Trans. Oil Temp.	°F (°C)

	Previous Learned Value
Clutch Gear Learning	Current Learned Value

^{*} Circle the settings as delivered to the Customer

Customer Name	
Address	

Mileage	Miles/km
Dealer Name	
-	•
Date	
Technician Name	

Notes:	

LIFETIME WARRANTY REPLACEMENT PARTS *

Mufflers

Keep your exhaust system in peak condition for optimal fuel economy and vehicle performance. Genuine NISSAN Mufflers include a Limited Lifetime Warranty for both parts and labor.**

Genuine NISSAN Mufflers are designed to NISSAN performance specifications and are single-piece in construction for better reliability, easy assembly and proper fit.

Shocks/Struts

Shock absorbers and strut assemblies work to make your vehicle ride smoother over rough roads. They help reduce bounce on wheels making the ride safer.

Genuine NISSAN Shocks and Struts are competitively priced and offer a Lifetime Limited Warranty for both parts and labor when installed by a NISSAN dealer.

See your participating NISSAN dealer for details.

^{*} This warranty does not apply to vehicles not distributed by NISSAN North America and/or sold outside the United States.

^{**} Excludes Key Value Mufflers.

MAINTENANCE LO

54,000 MILES OR 54 MONTHS

□ Replace engine oil and filter □ [Replace transmission oil] □ [Replace differential oil (front & rear)] □ Inspect the following: _ Axle & suspension parts _ Brake pads & rotors _ Drive shaft boots _ Exhaust system _ Front suspension ball joints _ Propeller shaft _ Steering gear and linkage _ Steering linkage ball joints

SCHEDULE 2 MAINTENANCE ☐ Replace engine oil and filter ☐ [Replace transmission oil] ☐ [Replace differential oil (front & rear)]

[]: Performed based on the mileage only.

Equipment varies by model. Perform only those operations that apply to your vehicle.

Dealer Verified Service Stamp

Dealer name: ______

Date: ______
Mileage: _____

60,000 MILES OR 60 MONTHS

SCHEDULE 1 MAINTENANCE ☐ Replace engine oil and filter ☐ Replace in-cabin microfilter ☐ [Replace engine air filter] ☐ [Replace spark plugs] □ <Replace brake fluid> ☐ <Replace brake hoses> ☐ [Replace air pump cleaner assembly (for secondary air injection system) ☐ Inspect the following: <Engine startability and Brake pads & rotors Differential oil (front & rear) abnormal sound> < Driving performance at low Drive shaft boots and accelerating speed> Engine drive belts <Throttle chamber deposits> Exhaust system Front suspension ball joints Engine settings^{1,2} Transmission oil Transmission settings² Propeller shaft Measurement and adjustment ___ Steering gear and linkage of wheel alignment² Steering linkage ball joints Axle & suspension parts Brake lines & cables

SCHEDULE	2 MAINTENANCE	
□ Replace engine oil and filter □ Replace in-cabin microfilter □ Replace engine air filter □ Replace spark plugs □ Replace brake fluid □ Replace brake hoses □ Inspect the following:		
<pre> _ <engine abnormal="" and="" sound="" startability=""> _ <driving accelerating="" and="" at="" low="" performance="" speed=""> _ <throttle chamber="" deposits=""> _ Engine settings¹,² _ Transmission settings² _ Measurement and adjustment of wheel alignment²</throttle></driving></engine></pre>	Brake lines & cables Brake pads & rotors Differential oil (front & rear) Drive shaft boots Engine drive belts Transmission oil Propeller shaft	

Balancing of air flow for left and right banks

If the performance optimization services at 36 months (free of charge) including this inspection have not been finished yet, this inspection is not necessary.

[]: Performed based on the mileage only.

<>: Performed based on the number of service months only.

Equipment varies by model. Perform only those operations that apply to your vehicle.

Daalar	Varified	Service	Stamp
Dealer	veriiiea	Service	Stamp

Dealer name:
Date:
Mileage:

Measurement and Adjustment of wheel alignment

Measured Values

	Total Toe-In		in/mm
	Camber	LH	Deg/min (Dec/Deg)
FR		RH	Deg/min (Dec/Deg)
	Caster	LH	Deg/min (Dec/Deg)
		RH	Deg/min (Dec/Deg)
RR	Total Toe-In		in/mm
	Camber	LH	Deg/min (Dec/Deg)
		RH	Deg/min (Dec/Deg)

Adjusted Values

	Total Toe-In		in/mm
FR	Camber	LH	Deg/min (Dec/Deg)
	Camber	RH	Deg/min (Dec/Deg)
	Caster	LH	Deg/min (Dec/Deg)
	Odstoi	RH	Deg/min (Dec/Deg)
	Total Toe-In		in/mm
RR	Camber	LH	Deg/min (Dec/Deg)
		RH	Deg/min (Dec/Deg)

Engine Settings

Measured Values

rpm
°F (°C)
°F (°C)
mV
mV
Vdeg
Vdeg
֡֜֜֜֜֜֜֜֜֜֜֜֜֜֜֜֜֜֜֜֜֜֜֜֜֜֜֜֜֜֜֜֜֜֜֜֜

Transmission Settings

Measured Values

Engine Speed	rpm
Trans. Oil Temp.	°F (°C)

	Previous Learned Value	
Clutch Gear Learning	Current Learned Value	

^{*} Circle the settings as delivered to the Customer

Mileage	Miles/km
Dealer Name	
Date	
Date	
Technician Name	
	·

Notes:	

66,000 MILES OR 66 MONTHS

Replace engine oil and filter Inspect the following: Axle & suspension parts Brake pads & rotors Drive shaft boots Exhaust system Front suspension ball joints Propeller shaft Steering gear and linkage Steering linkage ball joints

SCHEDULE 2 MAINTENANCE
☐ Replace engine oil and filter

Dealer Verified Service Stamp	Dealer	Verified	Service	Stamp
-------------------------------	--------	----------	---------	-------


Dealer name:	
Date:	
Mileage:	

NISSAN SERVICES DESIGNED WITH YOU IN MIND *

Your NISSAN Dealer is Your Complete Source for Tires

- Original Equipment Tires and Other Major Brands
- Competitive Pricing
- Road Hazard Protection Included With Each Tire**
- Convenience
- Factory Trained Technicians

Tires are an important component of your NISSAN driving experience. They provide the four points of contact between your vehicle and the road and affect acceleration, braking, cornering, load-carrying capacity, and overall handling and performance.

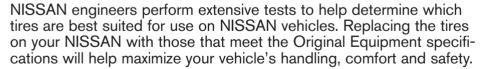



^{**} Excludes Medalist Brand

See your participating NISSAN dealer for details.



72,000 MILES OR 72 MONTHS

SCHEDULE 1 MAINTENANCE ☐ Replace engine oil and filter ☐ Replace engine coolant ☐ [Replace transmission oil] ☐ [Replace differential oil (front & rear)] ☐ Replace in-cabin microfilter ☐ Inspect the following: < Engine startability and Measurement and adjustment abnormal sound> of wheel alignment² < Driving performance at low Drive shaft boots and accelerating speed> Engine drive belts <Throttle chamber deposits> Exhaust system <Air pump cleaner Front suspension ball joints (for secondary air injection system> Fuel lines/connections Axle & suspension parts Fuel tank vapor vent system hoses Brake lines & cables Propeller shaft Brake pads & rotors Steering gear and linkage Engine settings^{1,2} Steering linkage ball joints Transmission settings²

SCHEDULE 2	MAINTENANCE
□ Replace engine oil and filter □ Replace engine coolant □ [Replace transmission oil] □ [Replace differential oil (front & □ Replace in-cabin microfilter □ Inspect the following:	ı rear)]
<pre> <pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre>	Drive shaft boots Engine drive belts Exhaust system Front suspension ball joints Fuel lines/connections Fuel tank vapor vent system hoses Propeller shaft Steering gear and linkage Steering linkage ball joints

- 1 Balancing of air flow for left and right banks
- If the performance optimization services at 36 months (free of charge) including this inspection have not been finished yet, this inspection is not necessary.
 - []: Performed based on the mileage only.
 - <>: Performed based on the number of service months only.

Equipment varies by model. Perform only those operations that apply to your vehicle.

	Dealer	Verified	Service	Stamp
--	--------	----------	---------	-------

Dealer nam	ne:	
Date:		
Mileage: _		

Measurement and Adjustment of wheel alignment

Measured Values

	Total Toe-In		in/mm
	Camber	LH	Deg/min (Dec/Deg)
lfR	Cambei	RH	Deg/min (Dec/Deg)
	Caster	LH	Deg/min (Dec/Deg)
		RH	Deg/min (Dec/Deg)
	Total Toe-In		in/mm
RR	Camber	LH	Deg/min (Dec/Deg)
	Cambei		Deg/min (Dec/Deg)

Adjusted Values

	Total Toe-In		in/mm
	Camber	LH	Deg/min (Dec/Deg)
lfR	Cambei	RH	Deg/min (Dec/Deg)
	Caster	LH	Deg/min (Dec/Deg)
		RH	Deg/min (Dec/Deg)
	Total Toe-In		in/mm
RR	Camber	LH	Deg/min (Dec/Deg)
		RH	Deg/min (Dec/Deg)

Engine Settings

Measured Values

rpm
°F (°C)
°F (°C)
mV
mV
Vdeg
Vdeg

Transmission Settings

Measured Values

Engine Speed	rpm
Trans. Oil Temp.	°F (°C)

	Previous Learned Value
Clutch Gear Learning	Current Learned Value

^{*} Circle the settings as delivered to the Customer

Customer Name	
Address	

Mileage	Miles/km
Dealer Name	
-	·
D-1-	
Date	
Technician Name	
	' I

Notes:	

78,000 MILES OR 78 MONTHS

Replace engine oil and filter ☐ Inspect the following: ☐ Axle & suspension parts ☐ Brake pads & rotors ☐ Drive shaft boots ☐ Exhaust system ☐ Front suspension ball joints ☐ Propeller shaft ☐ Steering gear and linkage ☐ Steering linkage ball joints

SCHEDULE 2 MAINTENANCE
☐ Replace engine oil and filter

Dealer name:
Date:
Mileage:

GENUINE NISSAN PARTS YOU CAN RELY ON)

Wiper Blades

Genuine NISSAN Wiper Blades and Arms are designed to fit your NISSAN and can be installed by any NISSAN dealer in just minutes.



84,000 MILES OR 84 MONTHS

SCHEDULE 1 MAINTENANCE ☐ Replace engine oil and filter □ <Replace brake fluid> Replace in-cabin microfilter ☐ Inspect the following: Engine settings^{1,2} Transmission settings² Measurement and adjustment of wheel alignment² Axle & suspension parts Brake lines & cables Brake pads & rotors Differential oil (front & rear) Drive shaft boots Engine drive belts Exhaust system Front suspension ball joints Propeller shaft Transmission oil Steering gear and linkage Steering linkage ball joints <Air pump cleaner (for secondary air injection system)> <Engine startability and abnormal sound> <Driving performance at low and accelerating speed> <Throttle chamber deposits>

SCHEDULE 2 MAINTENANCE
☐ Replace engine oil and filter
<replace brake="" fluid=""></replace>
☐ Replace in-cabin microfilter
☐ Inspect the following:
Engine settings ^{1,2}
Transmission settings ²
Measurement and adjustment of wheel alignment ²
Brake lines & cables
Brake pads & rotors
Differential oil (front & rear)
Drive shaft boots
Engine drive belts
Transmission oil
Propeller shaft
— < Driving performance at low and accelerating speed >
<throttle chamber="" deposits=""></throttle>

<>: Performed based on the number of service months only.

Balancing of air flow for left and right banks

If the performance optimization services at 36 months (free of charge) including this inspection have not been finished yet, this inspection is not necessary.

Equipment varies by model. Perform only those operations that apply to your vehicle.

Dealer name:	
Date:	
Mileage:	

Measurement and Adjustment of wheel alignment

Measured Values

	Total Toe-In		in/mm
	FR Camber	LH	Deg/min (Dec/Deg)
lfR		RH	Deg/min (Dec/Deg)
ļ. · ·		LH	Deg/min (Dec/Deg)
		RH	Deg/min (Dec/Deg)
	Total Toe-In		in/mm
RR	Camber	LH	Deg/min (Dec/Deg)
	Cambo	RH	Deg/min (Dec/Deg)

Adjusted Values

	Total Toe-In		in/mm
	Camber	LH	Deg/min (Dec/Deg)
IFR		RH	Deg/min (Dec/Deg)
,		LH	Deg/min (Dec/Deg)
	Oddici	RH	Deg/min (Dec/Deg)
	Total Toe-In		in/mm
RR	Camber	LH	Deg/min (Dec/Deg)
1		RH	Deg/min (Dec/Deg)

Engine Settings

Measured Values

rpm
°F (°C)
°F (°C)
mV
mV
Vdeg
Vdeg
֡֜֜֜֜֜֜֜֜֜֜֜֜֜֜֜֜֜֜֜֜֜֜֜֜֜֜֜֜֜֜֜֜֜֜֜֜

Transmission Settings

Measured Values

Engine Speed	rpm
Trans. Oil Temp.	°F (°C)

	Previous Learned Value
Clutch Gear Learning	Current Learned Value

^{*} Circle the settings as delivered to the Customer

Customer Name	
Address	

Mileage	Miles/km
Dealer Name	
-	·
Date	
Technician Name	
	' I

Notes:	

90,000 MILES OR 90 MONTHS

SCHEDULE 1 MAINTENANCE ☐ Replace engine oil and filter ☐ [Replace engine air filter] □ [Replace transmission oil] ☐ [Replace differential oil (front & rear)] ☐ Inspect the following: Axle & suspension parts Brake pads & rotors Drive shaft boots Exhaust system Front suspension ball joints Propeller shaft Steering gear and linkage Steering linkage ball joints

SCHEDULE 2 MAINTENANCE
☐ Replace engine oil and filter☐ [Replace engine air filter]☐ [Replace transmission oil]☐ [Replace differential oil (front & rear)]

]: Performed based on the mileage only.

Equipment varies by model. Perform only those operations that apply to your vehicle.

Dealer name:	
Date:	
Mileage:	

GENUINE NISSAN PARTS YOU CAN RELY ON

In-Cabin Microfilter

The In-Cabin Microfilter filters the air you breathe in your vehicle. This system filters both outside and recirculated air used by the air conditioning system in your vehicle. Replacing the Microfilter every year or 15,000 miles is the best way to help prevent road dust, pollen and other air pollutants from entering the interior of your vehicle and the air you breathe. If your vehicle is not equipped with an In-Cabin Microfilter system – see your NISSAN dealer about getting one installed – you'll breathe easier.







Requires Replacement

96,000 MILES OR 96 MONTHS

SCHEDULE 1 MAINTENANCE	SCHEDULE 2 MAINTENANCE
□ Replace engine oil and filter □ Replace engine coolant □ Replace in-cabin microfilter □ Inspect the following: - <engine abnormal="" and="" sound="" startability=""> - <driving accelerating="" and="" at="" low="" performance="" speed=""> - <throttle chamber="" deposits=""> - <air (for="" air="" cleaner="" injection="" pump="" secondary="" system)=""> - Axle & suspension parts - Brake lines & cables - Brake pads & rotors - Transmission oil - Differential oil (front & rear) - Drive shaft boots - Engine drive belts - Engine settings¹.² Transmission settings² - Measurement and adjustment of wheel alignment² - Exhaust system - Front suspension ball joints - Fuel lines/connections - Fuel tank vapor vent system hoses - Propeller shaft - Steering gear and linkage - Steering linkage ball joints</air></throttle></driving></engine>	□ Replace engine oil and filter □ Replace in-cabin microfilter □ Inspect the following: - <engine abnormal="" and="" sound="" startability=""> - <driving accelerating="" and="" at="" low="" performance="" speed=""> - <throttle chamber="" deposits=""> - Axle & suspension parts - Brake lines & cables - Brake pads & rotors - Transmission settings² - Measurement and adjustment of wheel alignment² - Exhaust system - Front suspension ball joints - Fuel lines/connections - Fuel tank vapor vent system hoses - Propeller shaft - Steering gear and linkage - Steering linkage ball joints - Steering linkage ball joints - Engine drive belts - Engine settings¹,²</throttle></driving></engine>

- Balancing of air flow for left and right banks
- If the performance optimization services at 36 months (free of charge) including this inspection have not been finished yet, this inspection is not necessary.
 - <>: Performed based on the number of service months only.

Equipment varies by model. Perform only those operations that apply to your vehicle.

Dealer name:	
Date:	
Лileage:	-

Measurement and Adjustment of wheel alignment

Measured Values

	Total Toe-In		in/mm
FR	Camber	LH	Deg/min (Dec/Deg)
		RH	Deg/min (Dec/Deg)
	Caster	LH	Deg/min (Dec/Deg)
		RH	Deg/min (Dec/Deg)
	Total Toe-In		in/mm
RR	Camber	LH	Deg/min (Dec/Deg)
		RH	Deg/min (Dec/Deg)

Adjusted Values

	Total Toe-In		in/mm
FR	Camber	LH	Deg/min (Dec/Deg)
		RH	Deg/min (Dec/Deg)
	Caster	LH	Deg/min (Dec/Deg)
		RH	Deg/min (Dec/Deg)
	Total Toe-In		in/mm
RR	Camber	LH	Deg/min (Dec/Deg)
		RH	Deg/min (Dec/Deg)

Engine Settings

Measured Values

rpm
°F (°C)
°F (°C)
mV
mV
Vdeg
Vdeg

Transmission Settings

Measured Values

Engine Speed	rpm
Trans. Oil Temp.	°F (°C)

	Previous Learned Value
Clutch Gear Learning	Current Learned Value

^{*} Circle the settings as delivered to the Customer

Customer Name	
Address	

Miles/km
' I
' I

Notes:	

TRANSMISSION ASSEMBLY REPLACEMENT RECORD

When replacing the transmission assembly, be sure to record the new serial number in the space provided.

Transmission Serial No.	Dealer name or signature
Date:	
Mileage at replacement:	
Miles	
Transmission Serial No.	Dealer name or signature
Date:	
Mileage at replacement:	
Miles	
Transmission Serial No.	Dealer name or signature
Date:	
Mileage at replacement:	
Miles	

Transmission Serial No. Date:	Dealer name or signature
Mileage at replacement: Miles	
Transmission Serial No. Date:	Dealer name or signature
Mileage at replacement: Miles	
Transmission Serial No.	Dealer name or signature
Date:	
Mileage at replacement: Miles	
Transmission Serial No. Date:	Dealer name or signature
Mileage at replacement: Miles	

Nissan, the Nissan logo, and Nissan model names are Nissan trademarks.

© 2008 Nissan North America, Inc.

Publication No.: MB9E-0R35U0

Printing: April 2008