

ALPHABETICAL INDEX

SECTION **IDX**

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

FA

RA

BR

ST

RS

BT

HA

EL

IDX

ALPHABETICAL INDEX

A

<p>AAC/V - Wiring diagram..... EC-252</p> <p>ABS (anti-lock brake system) BR-30</p> <p>ABS - Wiring diagram BR-42</p> <p>A/C air flow..... HA-19</p> <p>A/C component layout..... HA-18</p> <p>A/C compressor clutch removal and installation..... HA-108</p> <p>A/C compressor description..... HA-12</p> <p>A/C compressor mounting HA-107</p> <p>A/C compressor precaution HA-6</p> <p>A/C compressor special service tool HA-6</p> <p>A/C control linkage adjustment (auto A/C)..... HA-89</p> <p>A/C control linkage adjustment (manual A/C)..... HA-52</p> <p>A/C control operation (auto A/C)..... HA-56</p> <p>A/C control operation (manual A/C)..... HA-20</p> <p>A/C diagnostic work flow (auto A/C)..... HA-57</p> <p>A/C diagnostic work flow (manual A/C) HA-21</p> <p>A/C harness layout (auto A/C)..... HA-65</p> <p>A/C harness layout (manual A/C) HA-36</p> <p>A/C HFC134a (R134a) system precaution HA-2</p> <p>A/C HFC134a (R134a) system service procedure..... HA-100</p> <p>A/C HFC134a (R134a) system service tools HA-7</p> <p>A/C HFC134a system service equipment precaution..... HA-9</p> <p>A/C lubricant (R134a) HA-102</p> <p>A/C operational check (auto A/C) HA-58</p> <p>A/C operational check (manual A/C) HA-22</p> <p>A/C performance chart..... HA-32</p> <p>A/C performance test diagnoses HA-30</p> <p>A/C relay (auto A/C)..... HA-88</p> <p>A/C relay (manual A/C)..... HA-51</p> <p>A/C service data specification..... HA-112</p> <p>A/C switch (auto A/C)..... HA-87</p> <p>A/C switch (manual A/C)..... HA-50</p> <p>A/C symptom chart (auto A/C) HA-60</p> <p>A/C symptom chart (manual A/C) HA-24</p> <p>A/C system description (auto A/C)..... HA-90</p> <p>A/C trouble diagnoses (auto A/C)..... HA-57</p> <p>A/C trouble diagnoses (manual A/C) HA-21</p> <p>A/C, A - Wiring diagram (auto A/C)..... HA-68</p> <p>A/C, M - Wiring diagram HA-40</p> <p>Accelerator control system..... FE-3</p> <p>Accelerator wire adjustment..... FE-3</p> <p>Air bag..... RS-5</p> <p>Air bag disposal RS-13</p> <p>Air bag precautions GI-2</p> <p>Air bleeding (hydraulic clutch) CL-5</p> <p>Air bleeding for brake system..... BR-5</p> <p>Air cleaner filter replacement..... MA-13</p> <p>Air conditioner cut control EC-18</p> <p>Air flow meter - See Mass air flow sensor..... EC-99</p>	<p>Air mix door control linkage adjustment (auto A/C) HA-89</p> <p>Air mix. door motor HA-96</p> <p>Air spoiler, rear BT-20</p> <p>Alternator EL-37</p> <p>Ambient sensor HA-92</p> <p>Angular tightening application EM-2</p> <p>Antenna - See Power antenna..... EL-151</p> <p>Anti-lock brake system - See ABS..... BR-30</p> <p>Anti-lock brake system - Wiring diagram..... BR-42</p> <p>AP/SEN - Wiring diagram EC-105</p> <p>ASCD (automatic speed control device) EL-162</p> <p>ASCD - Wiring diagram EL-166</p> <p>AT control unit AT-51</p> <p>A/T diagnosis communication line EC-318</p> <p>AT fluid temperature sensor..... AT-63</p> <p>AT removal and installation..... AT-135</p> <p>AT self-diagnoses..... AT-22</p> <p>AT shift lock system AT-125</p> <p>A/T shift lock system - Wiring diagram AT-126</p> <p>A/T - Wiring diagram AT-8</p> <p>AT/C - Wiring diagram..... EC-261</p> <p>ATDiAG - Wiring diagram EC-318</p> <p>AUDIO - Wiring diagram..... EL-140</p> <p>Audio..... EL-138</p> <p>Audio and A/C control removal and installation - See Instrument panel BT-11</p> <p>Auto air conditioner - Wiring diagram (auto A/C) HA-68</p> <p>Automatic amplifier..... HA-94</p> <p>Automatic speed control system - See ASCD EL-162</p> <p>Automatic transmission fluid replacement..... MA-18</p> <p>Automatic transmission number..... GI-36</p> <p>Auxiliary air control (AAC) valve EC-252</p> <p>Axle housing (rear)..... RA-8</p>
--	--

B

<p>Back door..... BT-7</p> <p>Back door opener - See Back door..... BT-7</p> <p>Back door trim BT-19</p> <p>Back-up lamp..... EL-59</p> <p>Back-up lamp switch (MT) MT-4</p> <p>BACK/L - Wiring diagram EL-59</p> <p>Ball joint front axle FA-26</p> <p>Battery..... EL-22</p> <p>Baulk ring (MT) MT-12</p> <p>Blower motor (auto A/C) HA-87</p> <p>Blower motor (manual A/C)..... HA-50</p> <p>Blower resistor (manual A/C) HA-50</p> <p>Body alignment..... BT-37</p> <p>Boost pressure control..... EC-203</p> <p>BPT valve..... EC-218</p> <p>Brake booster..... BR-17</p> <p>Brake control valve (Proportioning valve) BR-8</p> <p>Brake fluid change BR-4</p>	
---	--

ALPHABETICAL INDEX

Brake fluid level	MA-21
Brake fluid level and line check	BR-4
Brake hydraulic line.....	BR-6
Brake inspection	MA-21
Brake lines and cables inspection.....	MA-21
Brake lining temporary checking	MA-22
Brake master cylinder	BR-14
Brake pedal.....	BR-12
Bumper, front	BT-5
Bumper, rear	BT-7
BUZZER - Wiring diagram.....	EL-105
BYPS/V - Wiring diagram	EC-299

C

Camshaft inspection	EM-24
CANI/V - Wiring diagram	EC-230
Canister-See EVAP canister	EC-20
Center bearing assembly (propeller shaft).....	PD-10
Center bearing disassembly (propeller shaft).....	PD-9
CHARGE - Wiring diagram.....	EL-34
Charging system.....	EL-33
Chassis and body maintenance	MA-17
Cigarette lighter	EL-127
Circuit breaker	EL-18
CKPS - Wiring diagram	EC-198, 285
Clutch cover.....	CL-12
Clutch damper	CL-8
Clutch disc	CL-11
Clutch fluid level	MA-17
Clutch master cylinder.....	CL-6
Clutch operating cylinder.....	CL-7
Clutch pedal.....	CL-3
Clutch release bearing	CL-9
Clutch withdrawal lever	CL-9
CMPS - Wiring diagram	EC-203
Coil spring (front).....	FA-24
Coil spring (rear)	RA-12
Collision diagnosis	RS-36
Combination lamp, front, removal and installation	BT-5
Combination meter	EL-84
Combination meter removal and installation - See Instrument panel	BT-11
Combination switch.....	EL-38
Compression pressure.....	EM-8
Compressor clutch removal and installation.....	HA-108
Compressor description	HA-12
Compressor mounting.....	HA-107
Compressor precaution.....	HA-6
Compressor special service tool.....	HA-6
Connecting rod	EM-39
Connecting rod bearing clearance	EM-43
Connecting rod bushing clearance.....	EM-44
Console box - See Instrument panel.....	BT-11
CONSULT for ABS.....	BR-49
CONSULT for ECCS.....	EC-56

CONSULT general information.....	GI-33
Control lever (MT)	MT-14
Control lever transfer	TF-9
Control valve (AT)	AT-157
Converter housing installation.....	AT-136
Coolant mixture ratio	MA-9
Coolant replacement.....	MA-11
Cooling circuit (engine).....	LC-8
Counter gear (MT)	MT-12
Counter gear transfer.....	TF-11
Coupling sleeve (MT)	MT-12
Crank angle sensor built into distributor - See Camshaft position sensor.....	EC-203
Crankcase emission control system - See positive crankcase ventilation.....	EC-24
Crankshaft.....	EM-42
Crankshaft position sensor (OBD)	EC-198
Cruise control - See ASCD.....	EL-162
Cylinder block	EM-37
Cylinder block boring	EM-41
Cylinder head.....	EM-20
Cylinder head bolt tightening.....	EM-31

D

Daytime light system	EL-44
Daytime running light - See Daytime light system	EL-44
DEF - Wiring diagram.....	EL-132
Detonation sensor - See Knock sensor.....	EC-195
Diagnostic sensor unit.....	RS-8
Diagnostic trouble code (DTC) inspection priority chart	EC-76
Differential carrier assembly (H233B).....	PD-51
Differential carrier assembly (R200A).....	PD-29
Differential carrier disassembly (H233B)	PD-36
Differential gear oil replacement.....	MA-20
Dimensions.....	GI-37
Distributor	EC-17
Distributor ignition (DI) system.....	EC-17
D/LOCK - Wiring diagram.....	EL-193
Dome light - See Interior lamp	EL-78
Door mirror.....	BT-36
Door trim	BT-17
Door, front	BT-9
Door, rear	BT-10
Drive belt inspection	MA-10
Drive pinion diff. inspection (H233B)	PD-40
Drive pinion diff. inspection (R200A)	PD-21
Drive pinion height (H233B).....	PD-47
Drive pinion height (R200A).....	PD-23
Drive plate runout	EM-44
Drive shaft (front).....	FA-17
Dropping resistor (AT)	AT-90
DTRL - Wiring diagram.....	EL-47
Dual pressure switch (auto A/C)	HA-88
Dual pressure switch (manual A/C)	HA-51

ALPHABETICAL INDEX

E

ECCS basic inspection	EC-74
ECCS circuit diagram	EC-11
ECCS component parts location.....	EC-9
ECCS fail-safe system	EC-77
ECCS on board diagnostic system	EC-36
ECCS symptom matrix chart	EC-78
ECCS system diagram and chart	EC-12
ECM input/output signal.....	EC-85
ECTS - Wiring diagram.....	EC-116, 127
EGR control (EGRC) - BPT valve.....	EC-217
EGR control (EGRC) - solenoid valve	EC-290
EGR control valve	EC-215
EGR temperature sensor.....	EC-295
EGR/TS - Wiring diagram	EC-295
EGRC/V - Wiring diagram.....	EC-290
EGRC1 - Wiring diagram	EC-209
Electric sun roof.....	EL-157
Electrical diagnoses	GI-19
Electrical unit	Foldout
Electrical units location	EL-245
Electronic ignition system	EC-17
Engine compartment.....	BT-37
Engine control module (ECM).....	EC-264
Engine coolant temperature sensor (ECTS)	EC-116
Engine oil filter replacement	MA-14
Engine oil precautions.....	GI-4
Engine oil replacement	MA-14
Engine outer component parts	EM-6
Engine removal.....	EM-34
Engine room - See Engine compartment	BT-37
Engine serial number	GI-36
EVAP canister	EC-20
EVAP canister purge control valve	EC-230
EVAP canister purge volume control valve	EC-20
EVAP vapor lines inspection.....	MA-16
Evaporative emission (EVAP) system.....	EC-20
Exhaust gas recirculation (EGR) valve.....	EC-209
Exhaust system	FE-7
Exhaust system inspection	MA-17
Exterior.....	BT-20
Exterior lamp.....	EL-53

F

Fan control amp.	HA-98
Fan switch (auto A/C)	HA-87
Fan switch (manual A/C).....	HA-50
Fast idle cam (FIC) inspection and adjustment	EC-27
F/FOG - Wiring diagram	EL-62
FICD - Wiring diagram	EC-337
Final drive disassembly (H233B)	PD-36
Final drive pre-inspection (H233B)	PD-36

Final drive removal and installation	PD-14
Floor trim.....	BT-15
Flow charts.....	GI-30
Fluid temperature sensor (AT)	AT-63
Fluids	MA-8
Flywheel (clutch).....	CL-12
Flywheel runout	EM-44
FO2H-L - Wiring diagram.....	EC-156
FO2H-R - Wiring diagram	EC-138
Fog lamp, front	EL-61
Fog lamp, front, removal and installation	BT-5
Fork rod (MT).....	MT-14
Forward clutch.....	AT-176
F/PUMP - Wiring diagram	EC-328
FRO2LH - Wiring diagram	EC-151
FRO2RH - Wiring diagram.....	EC-133
Front axle.....	FA-11
Front bumper	BT-5
Front combination lamp removal and installation	BT-5
Front disc brake	BR-20
Front door	BT-9
Front drive shaft transfer.....	TF-11
Front final drive disassembly (4WD) (R200A).....	PD-16
Front final drive pre-inspection (4WD) (R200A).....	PD-16
Front final drive removal and installation (4WD)	PD-14
Front fog lamp	EL-61
Front fog lamp removal and installation	BT-5
Front oxygen sensor (O2S) monitor	EC-48
Front passenger air bag.....	RS-5
Front seat.....	BT-26
Front seat belt	RS-3
Front suspension	FA-22
Front washer	EL-111
Front wiper	EL-111
Fuel cut control (at no load & high engine speed).....	EC-19
Fuel filler lid	BT-7
Fuel filter replacement	MA-13
Fuel gauge	EL-84
Fuel line inspection.....	MA-12
Fuel precautions.....	GI-5
Fuel pressure check.....	EC-25
Fuel pressure release	EC-25
Fuel pump	EC-328
Fuel system	FE-4
Fuel tank vacuum relief valve	EC-21
FUELLH - Wiring diagram	EC-178, 183
FUELRH - Wiring diagram.....	EC-168, 173
Fuse.....	EL-18
Fuse block	Foldout
Fusible link.....	EL-18

G

Garage jack and safety stand	GI-39
------------------------------------	-------

ALPHABETICAL INDEX

Gauges	EL-83
Gears (MT)	MT-12
Generator	EL-37
Generic scan tool (GST)	EC-68
Grease	MA-8
Ground distribution	EL-19

H

H/LAMP - Wiring diagram	EL-42
Harness connector	EL-3
Harness layout	EL-248
Hazard warning lamp	EL-64
Headlamp	EL-41
Heated seat	BT-28, EL-161
Height (Dimensions)	GI-37
HFC134a (R134a) system precaution	HA-2
HFC134a (R134a) system service procedure	HA-100
HFC134a (R134a) system service tools	HA-7
HFC134a system service precaution	HA-9
High clutch	AT-174
Hood	BT-5
HORN - Wiring diagram	EL-128
Horn	EL-127
HSEAT - Wiring diagram	EL-161
Hydraulic lash adjuster inspection	EM-29

I

IACV-AAC valve	EC-252
IACV-FICD solenoid valve	EC-337
IATS - Wiring diagram	EC-111
Identification plate	GI-36
Idle air control valve (IACV)	EC-252
IGN/SG - Wiring diagram	EC-279
Ignition wire inspection	EC-194
ILL - Wiring diagram	EL-74
Illumination	EL-72
In vehicle sensor	HA-91
Inhibitor switch	AT-59
INJECT - Wiring diagram	EC-321
Injector	EC-324
Injector removal and installation	EC-26
Instrument panel	BT-11
INT/L - Wiring diagram	EL-80
Intake air temperature sensor	EC-111
Intake door control linkage adjustment (auto A/C)	HA-89
Intake door control linkage adjustment (manual A/C)	HA-52
Intake door motor (manual A/C)	HA-53
Intake door motor	HA-97
Integrated homelink transmitter	EL-243
Interior	BT-15
Interior lamp	EL-72

J

Jacking points	GI-38, 39
Journal bearing assembly (propeller shaft)	PD-11
Journal bearing disassembly (propeller shaft)	PD-9
Junction box (J/B)	Foldout

K

Keyless entry system - See Multi-remote control system	EL-199
Knock sensor (KS)	EC-195
Knuckle spindle	FA-15
KS - Wiring diagram	EC-195

L

Length (Dimensions)	GI-37
License lamp	EL-53
Lifting points	GI-40
Limited slip diff. adjustment (H233B)	PD-43
Limited slip diff. assembly (H233B)	PD-45
Limited slip diff. disassembly (H233B)	PD-42
Limited slip diff. inspection (H233B)	PD-42
Line pressure solenoid valve	AT-79, 87, 90
Line pressure test (AT)	AT-123
Liquid gasket application	EM-2
Location of electrical units	EL-245
Low and reverse brake	AT-180
LSV (Load sensing valve)	BR-9
Lubricant (R134a) A/C	HA-102
Lubricants	MA-8
Lubrication circuit (engine)	LC-4
Lubrication-locks, hinges and hood latches	MA-24
Luggage room lamp	EL-78

M

MAFS - Wiring diagram	EC-99
Magnet clutch	HA-108
MAIN - Wiring diagram	EC-94
Main drive gear (MT)	MT-12
Main gear transfer	TF-11
Mainshaft (MT)	MT-12
Mainshaft transfer	TF-11
Maintenance (engine)	MA-10
Maintenance	MA-1
Malfunction indicator lamp (MIL)	EC-48
Manual air conditioner - Wiring diagram	HA-40
Manual transmission number	GI-36
Manual transmission oil replacement	MA-17
Mass air flow sensor (MAFS)	EC-99

ALPHABETICAL INDEX

Master cylinder (brake)	BR-14
Master cylinder (clutch)	CL-6
METER - Wiring diagram	EL-86
Meter	EL-83
MIL & Data link connectors circuit	EC-341
MIL/DL - Wiring diagram	EC-341
MIRROR - Wiring diagram	EL-158
Mirror defogger	EL-131
Mirror, door	BT-36
Mirror, out side	BT-36
Misfire	EC-191
Mode door control linkage adjustment (auto A/C)	HA-89
Mode door control linkage adjustment (manual A/C)	HA-52
Model variation	GI-34
Molding - See Exterior	BT-20
MT overhaul	MT-11
MT removal and installation	MT-7
MULTI - Wiring diagram	EL-202
Multi-remote control system	EL-199
Multiport fuel injection (MFI) system	EC-15
Multiport fuel injection precautions	GI-4

N

Neutral position switch (MT)	MT-4
------------------------------------	------

O

Oil change (capacity)	MA-8
Oil pan (engine)	EM-9
Oil pressure (engine)	LC-4
Oil pump (AT)	AT-153
Oil pump (engine)	LC-5
Oil pump regulator valve (engine)	LC-6
Oil seal replacement (engine)	EM-18
Oil seal replacement (front final drive 4WD)	PD-12
Oil seal replacement (front of final drive)	PD-12
Operating cylinder (clutch)	CL-7
Out side mirror	BT-36
Overdrive control switch	AT-59
Overrun clutch	AT-176
Overrun clutch solenoid valve	AT-79, 87, 100
Oversize piston	EM-41

P

P/ANT - Wiring diagram	EL-152
Park/Neutral position switch	EC-266
Parking brake control	BR-28
Parking lamp	EL-53
PCV (positive crankcase ventilation)	EC-24
PGC/V - Wiring diagram	EC-304
Pilot bushing replacement	EM-47

Pinion bearing preload diff. (R200A)	PD-23
Pinion gear height diff. (H233B)	PD-47
Pinion gear height diff. (R200A)	PD-23
Piston assembly	EM-45
Piston pin inspection	EM-38
Piston ring inspection	EM-39
Piston to bore clearance	EM-40
PNP/SW - Wiring diagram	EC-266
POWER - Wiring diagram	EL-7
Power antenna	EL-151
Power door lock	EL-190
Power door mirror	EL-158
Power seat	EL-159
Power steering fluid level	MA-23, ST-7
Power steering gear	ST-23
Power steering hydraulic pressure	ST-9
Power steering oil pressure switch	EC-333
Power steering oil pump	ST-33
Power steering system bleeding	ST-8
Power supply routing	EL-6
Power transistor & ignition coil	EC-279
Power window	EL-182
PRE/SE - Wiring diagram	EC-243
Precautions (General)	GI-2
Pressure plate - See Clutch cover	CL-12
Pressure test (AT)	AT-123
Propeller shaft	PD-6
Propeller shaft greasing	MA-19
Propeller shaft inspection	MA-19
Propeller shaft on vehicle service	PD-7
Propeller shaft vibration	PD-7
PST/SW - Wiring diagram	EC-333

R

R02H-L - Wiring diagram	EC-164
R02H-R - Wiring diagram	EC-146
Rack retainer adjustment	ST-7
Radiator	LC-11
Radio - See Audio	EL-138
Rear air spoiler	BT-20
Rear axle (drum brake type)	RA-6
Rear bumper	BT-7
Rear combination lamp removal and installation	BT-20
Rear cover packing replacement diff.	PD-13
Rear door	BT-10
Rear drum brake	BR-24
Rear seat	BT-29
Rear seat belt	RS-4
Rear side window	BT-35
Rear suspension	RA-10
Rear washer	EL-119
Rear window defogger	EL-131
Rear wiper	EL-119
Refrigerant connection precaution	HA-3
Refrigerant general precaution	HA-2
Refrigerant lines	HA-104
Refrigeration cycle	HA-11
Release bearing (clutch)	CL-9

ALPHABETICAL INDEX

Reverse clutch.....	AT-170
Reverse gear (MT).....	MT-12
Reverse idler shaft (MT).....	MT-12
Reverse lamp switch (MT) - See Back-up lamp switch (MT).....	MT-4
Revolution sensor (AT).....	AT-65
Ring gear diff. inspection (H233B).....	PD-40
Ring gear diff. inspection (R200A).....	PD-21
Road wheel size.....	GI-37
Roof trim.....	BT-18
Room lamp - See Interior lamp.....	EL-78
Rotor disc (front).....	FA-12
RR02LH - Wiring diagram.....	EC-160
RR02RH - Wiring diagram.....	EC-142

S

SAE J1930 terminology list.....	GI-44
Screw jack.....	GI-38
Seal - See Exterior.....	BT-20
SEAT - Wiring diagram.....	EL-159
Seat belt inspection.....	MA-24
Seat belt, front.....	RS-3
Seat belt, rear.....	RS-4
Seat, front.....	BT-26
Seat, rear.....	BT-29
Self-diagnostic results.....	EC-48
SHIFT - Wiring diagram.....	AT-126
Shift control (MT).....	MT-14
Shift control (TF).....	TF-12, 23
Shift fork (MT).....	MT-14
Shift lock system.....	AT-125
Shift schedule.....	AT-45
Shift solenoid valve (AT).....	AT-69, 72, 74, 79, 87, 92, 95
Shock absorber (rear).....	RA-12
Side bearing preload (R200A).....	PD-22
Side trim.....	BT-15
Smart entrance control unit.....	EL-239
SMJ (super multiple junction).....	Foldout
Spare tire size.....	GI-37
Spark plug replacement.....	MA-15
Speedometer.....	EL-84
Spiral cable.....	RS-9
Spot lamp.....	EL-78
Spring (Wheelarch) height.....	FA-6
SROOF - Wiring diagram.....	EL-157
SRS - See Supplemental Restraint System.....	RS-5
SRS - Wiring diagram.....	RS-20
SRS Trouble diagnoses.....	RS-17
S/SIG - Wiring diagram.....	EC-325
Stabilizer bar (front).....	FA-25
Stabilizer bar (rear).....	RA-13
Stall test (AT).....	AT-120
Standardized relay.....	EL-4
START - Wiring diagram.....	EL-28
Starter.....	EL-32
Starting system.....	EL-26

Steering gear, linkage and transfer gear inspection.....	MA-23
Steering linkage.....	ST-23
Steering switch.....	EL-40
Steering transfer gear.....	ST-14
Steering wheel and column.....	ST-10
Steering wheel play.....	ST-6
Steering wheel turning force.....	ST-8
Stop lamp.....	EL-57
STOP/L - Wiring diagram.....	EL-57
Striking rod (MT).....	MT-14
Strut (front).....	FA-24
Sun roof, electric.....	EL-157
Sunload sensor.....	HA-93
Sunroof.....	BT-30
Supplemental restraint system - Wiring diagram.....	RS-20
Supplemental Restraint System.....	RS-5
SW/V - Wiring diagram.....	EC-273
Symbols and abbreviations.....	GI-7
Synchronizer (MT).....	MT-12

T

2-pole lift.....	GI-40
Tachometer.....	EL-84
Tail lamp.....	EL-53
TAIL/L - Wiring diagram.....	EL-54
Temperature control cable and linkage adjustment (manual A/C).....	HA-52
TFTS - Wiring diagram.....	EC-188
THEFT - Wiring diagram.....	EL-220
Theft warning system.....	EL-214
Thermostat.....	LC-10
Three way catalyst precautions.....	GI-4
Throttle position sensor (TPS).....	EC-121
Throttle position sensor adjustment.....	EC-74
Throttle position switch.....	AT-60
Throwout bearing - See Clutch release bearing.....	CL-9
Tie-rod.....	ST-27
Tie-rod ball joints.....	ST-27
Tightening torque of standard bolts.....	GI-43
Timing belt.....	EM-12
Tire rotation.....	MA-21
Tire size.....	GI-37
Tooth contact (R200A).....	PD-28
Tooth contact diff. (H233B).....	PD-50
Torque converter clutch solenoid valve.....	AT-79, 82, 87
Torque converter installation.....	AT-136
Tow truck towing.....	GI-41
Towing point.....	GI-42
TP/SW - Wiring diagram.....	EC-257
TPS - Wiring diagram.....	EC-121
Transfer case.....	TF-10
Transfer gear oil.....	MA-8
Transfer oil replacement.....	MA-19
Transfer overhaul.....	TF-10
Transfer removal and installation.....	TF-8

ALPHABETICAL INDEX

Transfer serial number GI-36
 Transmission case (MT) MT-11
 TRANSMT - Wiring diagram EL-243
 Transverse link (front) FA-26
 Tread-FR&RR (Dimensions) GI-37
 Trim BT-15
 TURN - Wiring diagram EL-67
 Turn signal lamp EL-64

U

Under body BT-39

V

Vacuum cut valve EC-303
 Vacuum hose (brake system) BR-19
 Vacuum hose drawing (ECCS) EC-13
 Valve clearance EM-49
 Valve guide EM-26
 Valve seat EM-27
 Valve spring EM-28
 Vehicle identification number GI-35
 Vehicle speed sensor (VSS) EC-248
 VENT/V - Wiring diagram EC-238
 Viscosity number (SAE) MA-9
 VSS - Wiring diagram EC-248

W

WARN - Wiring diagram EL-96
 Warning buzzer EL-104

Warning lamps EL-95
 Washer, front EL-111
 Washer, rear EL-119
 Water cock control rod
 adjustment (auto A/C) HA-89
 Water cock control rod
 adjustment (manual A/C) HA-52
 Water pump LC-9
 Water temperature gauge EL-84
 Weatherstrip - See Exterior BT-20
 Wheel alignment (front) FA-8
 Wheel balance MA-21
 Wheel bearing (front axle) FA-6
 Wheel bearing (rear) RA-5
 Wheel hub (front) FA-12
 Wheel sensors (ABS) BR-34
 Wheel size GI-37
 Wheelarch height FA-6
 Wheelbase (Dimensions) GI-37
 Wide open & closed throttle position
 switch EC-121
 Width (Dimensions) GI-37
 WINDOW - Wiring diagram EL-185
 Window, rear side BT-35
 Windshield BT-34
 Windshield washer - See Front washer EL-111
 Windshield wiper - See Front wiper EL-111
 WIP/R - Wiring diagram EL-122
 WIPER - Wiring diagram EL-113
 Wiper and washer EL-111
 Wiper, front EL-111
 Wiper, rear EL-119
 Wiring diagrams GI-8
 Withdrawal lever (clutch) CL-9
 Wrist pin - See Piston pin inspection EM-38