

# ALPHABETICAL INDEX

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

# SECTION **IDX**

# ALPHABETICAL INDEX

## A

AAC/V - Wiring diagram .....EC-446, 453, 462  
ABS - Wiring diagram .....BR-40  
ABS sensor rotor .....AX-6, 20  
Absolute pressure sensor .....EC-197  
A/C air flow .....HA-27, 178  
A/C component layout .....HA-20, 176  
A/C compressor clutch removal and  
installation .....HA-148, 229  
A/C compressor description .....HA-171  
A/C compressor precaution .....HA-7, 163  
A/C compressor special service tool .....HA-11, 167  
A/C control linkage adjustment (manual  
A/C) .....HA-196, 213, 215  
A/C control operation (auto A/C) .....HA-25  
A/C control operation (manual A/C) .....HA-177  
A/C diagnostic work flow (auto A/C) .....HA-66  
A/C diagnostic work flow (manual A/C) .....HA-187  
A/C HFC134a (R134a) system  
precaution .....HA-3, 159  
A/C HFC134a (R134a) system service  
procedure .....HA-143, 224  
A/C HFC134a (R134a) system service  
tools .....HA-12, 168  
A/C HFC134a system service equip-  
ment precaution .....HA-8, 164  
A/C lubricant (R134a) .....HA-145, 226  
A/C operational check .....HA-67, 188  
A/C performance chart .....HA-116, 207  
A/C performance test diagnoses .....HA-114, 205  
A/C relay .....HA-110, 222  
A/C self-diagnoses (auto A/C) .....HA-45  
A/C service data specification .....HA-158, 239  
A/C switch .....HA-222  
A/C system description (auto A/C) .....HA-24  
A/C trouble diagnoses (auto A/C) .....HA-29  
A/C trouble diagnoses (manual A/C) .....HA-180  
A/C, A - Wiring diagram .....HA-33, 38  
A/C, M - Wiring diagram .....HA-184  
Accelerator control system .....FE-3  
Accelerator wire adjustment .....FE-3  
Actuator lever (Transfer) (ATX14A) .....TF-150  
Air bag .....RS-10  
Air bag disposal .....RS-22  
Air bag precautions .....GI-3  
Air bleeding (hydraulic clutch) .....CL-7  
Air bleeding for brake system .....BR-8  
Air cleaner filter replacement .....MA-18  
Air conditioner cut control .....EC-33  
Air flow meter - See Mass air flow  
sensor .....EC-184, 191, 481  
Air mix door control linkage adjustment .....HA-86  
Air mix. door motor .....HA-83, 140  
Air spoiler, rear .....BT-36  
All - mode 4WD system (ATX14A) .....TF-42  
Alternator .....SC-29  
Ambient sensor .....HA-129  
Angular tightening application .....EM-3

Antenna - See Power antenna .....EL-198  
Anti-lock brake system - Wiring  
diagram .....BR-40  
ASCD (automatic speed control device) .....EL-248  
ASCD - Wiring diagram .....EL-252  
A/T - Wiring diagram - AT - FTS .....AT-107  
A/T - Wiring diagram - AT - MAIN .....AT-96  
A/T - Wiring diagram - AT - PNP/SW .....AT-101  
A/T - Wiring diagram - AT - VSS A/T .....AT-113  
A/T control .....EC-476  
A/T diagnosis communication line .....EC-660  
A/T fluid temperature sensor .....AT-110  
A/T self-diagnoses .....AT-46  
A/T shift lock system .....AT-264  
A/T shift lock system - Wiring diagram .....AT-265  
A/T trouble diagnoses .....AT-53  
A/T Wiring diagram - AT - ENG SS .....AT-117  
A/T Wiring diagram AT - 1ST .....AT-123  
A/T Wiring diagram AT - 2ND .....AT-129  
A/T Wiring diagram AT - 3RD .....AT-135  
A/T Wiring diagram AT - 4TH .....AT-142  
A/T Wiring diagram AT - BA/FTS .....AT-192  
A/T Wiring diagram AT - LPSV .....AT-164  
A/T Wiring diagram AT - NONDTC .....AT-215  
A/T Wiring diagram AT - OVRCSV .....AT-187  
A/T Wiring diagram AT - SSV/A .....AT-169  
A/T Wiring diagram AT - SSV/B .....AT-173  
A/T Wiring diagram AT - TCCSIG .....AT-156  
A/T Wiring diagram AT - TCV .....AT-150  
A/T Wiring diagram AT - TPS .....AT-179  
A/T Wiring diagram AT - VSSMTR .....AT-199  
AT/C - Wiring diagram .....EC-477  
ATP switch (ATX14A) .....TF-142  
ATP warning lamp (ATX14A) .....TF-132  
Audio .....EL-186  
AUDIO - Wiring diagram .....EL-187  
Audio and A/C control removal and  
installation - See Instrument panel .....BT-22  
AUT/DP - Wiring diagram .....EL-218  
Auto air conditioner - Wiring diagram .....HA-33, 38  
Automatic amplifier .....HA-42, 73  
Automatic drive positioner .....EL-213  
Automatic speed control system - See  
ASCD .....EL-248  
Automatic transmission fluid  
replacement .....MA-23  
Automatic transmission number .....GI-43  
Auxiliary air control (AAC) valve .....EC-443, 450, 459  
Axle .....MA-29  
Axle housing (rear) .....AX-20

## B

Back door .....BT-16  
Back door opener - See Back door .....BT-16  
Back door trim .....BT-35  
Back-up lamp .....EL-73  
Back-up lamp switch (M/T) .....MT-5  
BACK/L - Wiring diagram .....EL-73  
Ball joint (front) .....SU-14

# ALPHABETICAL INDEX

Base idle air volume initialiging.....	EC-70
Basic inspection.....	EC-117
Battery.....	SC-4
Battery/Starting/Charging System	
Tester.....	SC-7, 13, 22
Baulk ring (M/T).....	MT-11
Blower motor.....	HA-95, 198
Blower resistor.....	HA-198
Body alignment.....	BT-62
Brake booster.....	BR-22
Brake control valve (Proportioning	
valve).....	BR-11
Brake fluid change.....	BR-7
Brake fluid level.....	MA-27
Brake fluid level and line check.....	BR-7
Brake hydraulic line.....	BR-9
Brake inspection.....	MA-27
Brake lines and cables inspection.....	MA-27
Brake lining wear temporary checking.....	MA-28
Brake master cylinder.....	BR-16, 19
Brake pedal.....	BR-14
Bulb specifications.....	EL-476
Bumper, front.....	BT-13
Bumper, rear.....	BT-16
BYPS/V - Wiring diagram.....	EC-644, 651

C

Camshaft inspection.....	EM-42
Camshaft position sensor (PHASE).....	EC-333
Canister-See EVAP canister.....	EC-34
Center bearing assembly (propeller	
shaft).....	PD-11
Center bearing disassembly (propeller	
shaft).....	PD-9
Center case (Transfer) (ATX14A).....	TF-153
Center case (Transfer) (TX10A).....	TF-16
CHARGE - Wiring diagram.....	SC-21
Charging system.....	SC-20
Chassis and body maintenance.....	MA-22
CHIME - Wiring diagram.....	EL-148
CIGAR - Wiring diagram.....	EL-172
Cigarette lighter.....	EL-172
Circuit breaker.....	EL-16
Clock.....	EL-173
CLOCK - Wiring diagram.....	EL-173
Closed loop control (Bank 1).....	EC-567
Closed loop control (Bank 2).....	EC-567
Closed throttle position switch.....	EC-468
Clutch cover.....	CL-12
Clutch disc.....	CL-12
Clutch drum (Transfer) (ATX14A).....	TF-155
Clutch fluid level.....	MA-22
Clutch force release limit adjustment	
(ATX14A).....	TF-71
Clutch master cylinder.....	CL-8
Clutch operating cylinder.....	CL-9
Clutch pedal.....	CL-5
Clutch pressure switch (Transfer)	
(ATX14A).....	TF-141

Clutch release bearing.....	CL-10	GI
Clutch withdrawal lever.....	CL-10	
Coil spring (front).....	SU-9	
Coil spring (rear).....	SU-20	MA
Collision diagnosis.....	RS-59	
Combination lamp, front, removal and		
installation.....	BT-13	EM
Combination lamp, rear, removal and		
installation.....	BT-36	
Combination meter.....	EL-118	LC
Combination meter removal and instal-		
lation - See Instrument panel.....	BT-22	
Combination switch.....	EL-28	EC
COMPAS - Wiring diagram.....	EL-133	
Compass.....	EL-132	
Component Location (auto A/C).....	HA-29	FE
Component Location (manual A/C).....	HA-180	
Compression pressure.....	EM-14	
Compressor clutch removal and		CL
installation.....	HA-148, 229	
Compressor description.....	HA-171	
Compressor precaution.....	HA-7, 163	MT
Compressor special service tool.....	HA-11, 167	
Connecting rod.....	EM-67	
Connecting rod bearing clearance.....	EM-71	AT
Connecting rod bushing clearance.....	EM-72	
Connector inspection.....	GI-21	TF
Console box - See Instrument panel.....	BT-22	
CONSULT for ABS.....	BR-46	
CONSULT for all-mode 4WD (ATX14A).....	TF-62	PD
CONSULT for engine.....	EC-97	
CONSULT-II for engine.....	EC-97	
CONSULT-II general information.....	GI-39	AX
Control valve (A/T).....	AT-301	
Control valve (Transfer) (ATX14A).....	TF-158	
Converter housing installation.....	AT-277	SU
Coolant mixture ratio.....	MA-13	
Coolant overtemperature enrichment		
potection.....	EC-306	BR
Coolant replacement.....	MA-15	
Cooling circuit (engine).....	LC-11	
Counter gear (M/T).....	MT-11	ST
Counter gear (Transfer) (TX10A).....	TF-17	
Coupling sleeve (M/T).....	MT-11	
Crankcase emission control system -		RS
See positive crankcase ventilation.....	EC-49	
Crankshaft.....	EM-69	
Crankshaft position sensor (POS).....	EC-325	BT
Crankshaft position sensor (POS)		
chipping.....	EC-586	
Crankshaft position sensor (REF).....	EC-580	HA
Cruise control - See ASCD.....	EL-248	
Cylinder block.....	EM-63	
Cylinder head.....	EM-38	SC
Cylinder head bolt tightening.....	EM-50	

D

Data link connector for Consult.....	EC-97
Daytime light system.....	EL-45

# ALPHABETICAL INDEX

Daytime running light - See Daytime light system .....	EL-45
DEF - Wiring diagram .....	EL-176
Detonation sensor - See Knock sensor .....	EC-291, 320
Diagnostic trouble code (DTC) for OBD system .....	EC-8, 73
Diagnostic trouble code (DTC) inspection priority chart .....	EC-130
Differential carrier assembly .....	PD-31, 58
Differential carrier disassembly .....	PD-45
Differential gear oil replacement .....	MA-26
Dimensions .....	GI-44
D/LOCK - Wiring diagram .....	EL-289
Dome light - See Interior lamp .....	EL-92
Door glass .....	BT-19
Door lock .....	BT-19
Door mirror .....	BT-61
Door trim .....	BT-31
Door, front .....	BT-19
Door, rear .....	BT-21
Drive belt inspection .....	MA-14
Drive chain (Transfer) (ATX14A) .....	TF-155
Drive chain (Transfer) (TX10A) .....	TF-17
Drive pinion diff. inspection .....	PD-24, 48
Drive pinion height .....	PD-26, 54
Drive plate runout .....	EM-72
Drive shaft .....	MA-30
Drive shaft (front) .....	AX-12
Dropping resistor (A/T) .....	AT-167
DTC work support .....	EC-108
DTRL - Wiring diagram .....	EL-50

## E

ECM input/output signal .....	EC-141
ECTS - Wiring diagram .....	EC-205
Electric sun roof .....	EL-202
Electrical diagnoses .....	GI-24
Electrical ignition system .....	EC-32
Electrical unit .....	Foldout
Electrical units location .....	EL-457
Engine compartment .....	BT-63
Engine control circuit diagram .....	EC-26
Engine control component parts location .....	EC-22
Engine control module (ECM) .....	EC-479
Engine control system diagram and chart .....	EC-27
Engine coolant temperature sensor (ECTS) .....	EC-203, 227
Engine fail-safe system .....	EC-131
Engine oil filter replacement .....	MA-19
Engine oil precautions .....	GI-7
Engine oil replacement .....	MA-18
Engine outer component parts .....	EM-10
Engine removal .....	EM-59
Engine room - See Engine compartment .....	BT-63
Engine serial number .....	GI-43

EVAP canister .....	EC-35
EVAP canister purge volume control solenoid valve .....	EC-34, 370, 594
EVAP canister vent control valve .....	EC-377, 606, 614
EVAP control system (small leak) diagnosis .....	EC-354, 399, 412, 623
EVAP control system pressure sensor .....	EC-384, 390
EVAP control system purge flow monitoring diagnosis .....	EC-343
EVAP vapor lines inspection .....	MA-21
Evaporative emission (EVAP) system .....	EC-34
Exhaust system .....	FE-9
Exhaust system inspection .....	MA-22
Exterior .....	BT-36

## F

4LO indicator lamp (ATX14A) .....	TF-134
4WD shift indicator lamp (ATX14A) .....	TF-128
4WD shift switch (ATX14A) .....	TF-141
4WD solenoid valve (ATX14A) .....	TF-141
4WD warning lamp (ATX14A) .....	TF-45
Fan control amp. ....	HA-98
Fan switch .....	HA-198
F/FOG - Wiring diagram .....	EL-75
Final drive disassembly .....	PD-44
Final drive pre-inspection .....	PD-44
Final drive removal and installation .....	PD-44
Finisher, interior - See Trim .....	BT-29
FLS1 - Wiring diagram .....	EC-429
FLS2 - Wiring diagram .....	EC-435
FLS3 - Wiring diagram .....	EC-640
Fluid temperature sensor (A/T) .....	AT-110
Fluids .....	MA-12
Flywheel (clutch) .....	CL-13
Flywheel runout .....	EM-72
Fog lamp, front .....	EL-74
Fog lamp, front, removal and installation .....	BT-13
Fork rod (M/T) .....	MT-13
Forward clutch .....	AT-320
F/PUMP - Wiring diagram .....	EC-698
Freeze frame data .....	EC-74
Front axle .....	AX-2
Front bumper .....	BT-13
Front case (Transfer) (ATX14A) .....	TF-163
Front case (Transfer) (TX10A) .....	TF-16
Front combination lamp removal and installation .....	BT-13
Front disc brake .....	BR-25
Front door .....	BT-19
Front drive shaft (Transfer) (ATX14A) .....	TF-155
Front drive shaft (Transfer) (TX10A) .....	TF-17
Front final drive disassembly (4WD) .....	PD-19
Front final drive pre-inspection (4WD) .....	PD-19
Front final drive removal and installation (4WD) .....	PD-19
Front fog lamp .....	EL-74

# ALPHABETICAL INDEX

Front og lamp removal and installation .....	BT-13
Front revolution sensor (Transfer)	
(ATX14A) .....	TF-142
Front seat .....	BT-43
Front seat belt .....	RS-4
Front suspension .....	SU-2
Front washer .....	EL-160
Front wiper .....	EL-160
Fuel cut control (at no load & high	
engine speed) .....	EC-34
Fuel filler lid .....	BT-16
Fuel filter replacement .....	MA-17
Fuel gauge .....	EL-118
Fuel injection system .....	EC-283
Fuel injection system (Bank 1) .....	EC-283, 291
Fuel injection system (Bank 2) .....	EC-283, 291
Fuel level sensor .....	EC-428, 432, 434, 639
Fuel line inspection .....	MA-17
Fuel precautions .....	GI-8
Fuel pressure check .....	EC-51
Fuel pressure regulator .....	EC-52
Fuel pressure release .....	EC-51
Fuel pump .....	EC-696
Fuel system .....	FE-4
Fuel tank temperature sensor .....	EC-298, 301
Fuel tank vacuum relief valve .....	EC-35
Fuse .....	EL-16
Fuse and fusible link box .....	Foldout
Fuse block .....	Foldout
Fusible link .....	EL-16

## G

Garage jack and safety stand .....	GI-46
Gauges .....	EL-118
Gear components (M/T) .....	MT-11
Generator - See Alternator .....	SC-29
Generic scan tool (GST) .....	EC-111
Glass .....	BT-19
Grease .....	MA-12
Ground distribution .....	EL-17

## H

Harness connector .....	EL-5
Harness connector inspection .....	GI-21
Harness layout .....	EL-460
Hazard warning lamp .....	EL-78
Headlamp .....	EL-31
Headlining - See Roof trim .....	BT-34
Heated oxygen sensor 1	
(bank 1) .....	EC-232, 241, 254, 531, 539
Heated oxygen sensor 1	
(bank 2) .....	EC-232, 241, 254, 531, 539
Heated oxygen sensor 2	
(bank 1) .....	EC-264, 273, 547, 557
Heated oxygen sensor 2	
(bank 2) .....	EC-264, 273, 547, 557

Heated oxygen sensor 2 heater		GI
(bank 1) .....	EC-169, 176	
Heated oxygen sensor 2 heater		MA
(bank 2) .....	EC-169, 176	
Heated oxygen sensor heater .....	EC-169, 176	
Heated seat .....	BT-46, EL-211	
Height (Dimensions) .....	GI-44	EM
HFC134a (R134a) system precaution .....	HA-3, 159	
HFC134a (R134a) system service		LC
procedure .....	HA-143, 224	
HFC134a (R134a) system service		EC
tools .....	HA-12, 168	
HFC134a system service equipment		EC
precaution .....	HA-8, 164	
High clutch .....	AT-317	
H/LAMP - Wiring diagram .....	EL-35	FE
Homelink universal transceiver .....	EL-381	
Hood .....	BT-13	CL
Horn .....	EL-171	
HORN - Wiring diagram .....	EL-171	
How to erase DTC for OBD system .....	EC-86	MT
HSEAT - Wiring diagram .....	EL-211	

## I

IACV-AAC valve .....	EC-443, 450, 459	TF
IATS - Wiring diagram .....	EC-200	
Identification plate .....	GI-43	
Idle air control valve (IACV) .....	EC-443, 450, 459	PD
Idle air volume learning .....	EC-70	
Idle mixture ratio .....	EC-55	AX
Idle speed .....	EC-55	
IGN/SG - Wiring diagram .....	EC-678	
Ignition control system .....	EC-677	
Ignition timing .....	EC-55	SU
ILL - Wiring diagram .....	EL-86	
Illumination .....	EL-83	
In vehicle sensor .....	HA-132	BR
INJECT - Wiring diagram .....	EC-688	
Injector .....	EC-687	
Injector removal and installation .....	EC-53	ST
Instrument panel .....	BT-22	
INT/L - Wiring diagram .....	EL-95	
Intake air temperature sensor .....	EC-199, 230	RS
Intake door control linkage adjustment .....	HA-94, 196	
Intake door motor .....	HA-87, 191	
Intake manifold .....	EM-12	BT
Intake sensor .....	HA-138	
Intake valve timing control .....	EC-164	HA
Intake valve timing control (Bank 1) .....	EC-164	
Intake valve timing control (Bank 2) .....	EC-164	
Intake valve timing control position		SC
sensor (Bank 1) .....	EC-522	
Intake valve timing control position		EL
sensor (Bank 2) .....	EC-522	
Intake valve timing control solenoid		
valve (Bank 1) .....	EC-487	
Intake valve timing control solenoid		
valve (Bank 2) .....	EC-487	
Integrated homelink transmitter .....	EL-381	



# ALPHABETICAL INDEX

Interior .....	BT-29
Interior lamp .....	EL-92
Interior lamp on-off control.....	EL-93
Internal gear (Transfer) (ATX14A) .....	TF-164

## J

Jacking points.....	GI-45
Journal bearing assembly (propeller shaft) .....	PD-11
Journal bearing disassembly (propeller shaft).....	PD-10
Junction box (J/B).....	Foldout

## K

KEYLES - Wiring diagram .....	EL-315
Keyless entry system - See Multi-remote control system.....	EL-310
Knock sensor (KS) .....	EC-320
Knuckle spindle .....	AX-10
KS - Wiring diagram.....	EC-321

## L

Length (Dimensions) .....	GI-44
License lamp .....	EL-61
Lifting points .....	GI-47
Limited slip diff. adjustment.....	PD-51
Limited slip diff. assembly .....	PD-52
Limited slip diff. disassembly.....	PD-49
Limited slip diff. inspection .....	PD-50
Line pressure solenoid valve .....	AT-147, 161, 167
Line pressure switch (Transfer) (ATX14A) .....	TF-141
Line pressure test (A/T) .....	AT-62
Liquid gasket application .....	EM-3
LOAD - Wiring diagram .....	EC-716
Location of electrical units .....	EL-457
Lock, door .....	BT-19
Low and reverse brake .....	AT-324
LSV (Load sensing valve) .....	BR-12
Lubricant (R134a) A/C .....	HA-145, 226
Lubricants.....	MA-12
Lubrication circuit (engine) .....	LC-3
Lubrication-locks, hinges and hood latches .....	MA-30
Luggage room lamp.....	EL-92

## M

MAFS - Wiring diagram .....	EC-187, 193, 483
Magnet clutch.....	HA-104, 148, 229
MAIN - Wiring diagram.....	EC-156
Main drive gear (M/T).....	MT-11

Main gear (Transfer) (TX10A).....	TF-17
Main oil pump (Transfer) (ATX14A) .....	TF-161
Mainshaft (M/T).....	MT-11
Mainshaft (Transfer) (ATX14A) .....	TF-155
Mainshaft (Transfer) (TX10A) .....	TF-17
Maintenance (engine) .....	MA-14
MAJOR OVERHALL.....	AT-281
Major overhaul (Transfer) (ATX14A).....	TF-150
Major overhaul (Transfer) (TX10A).....	TF-15
Malfunction indicator lamp (MIL).....	EC-88
Manual air conditioner - Wiring diagram.....	HA-184
Manual transmission number .....	GI-43
Manual transmission oil replacement .....	MA-22
Mass air flow sensor (MAFS) .....	EC-184, 191, 481
Master cylinder (brake) .....	BR-16, 19
Master cylinder (clutch) .....	CL-8
Meter .....	EL-118
METER - Wiring diagram.....	EL-123
MIL & Data link connectors circuit .....	EC-720
MIL/DL - Wiring diagram .....	EC-720
MIRROR - Wiring diagram.....	EL-208
Mirror defogger .....	EL-174
Mirror, door.....	BT-61
Mirror, out side .....	BT-61
Misfire .....	EC-312
Mode door control linkage adjustment...HA-82, 215	
Mode door motor.....	HA-76
Model variation .....	GI-41
Molding - See Exterior .....	BT-36
M/T major overhaul .....	MT-10
M/T removal and installation .....	MT-7
MULTI - Wiring diagram.....	EL-315
Multi-remote control system.....	EL-310
Multiplex communication .....	HA-141
Multiport fuel injection (MFI) system .....	EC-30
Multiport fuel injection precautions.....	GI-6

## N

NATS (Nissan anti-theft system).....	EL-385
NATS - Wiring diagram.....	EL-387
NAVI - wiring diagram.....	EL-414
Navigation System .....	EL-405
Neutral-4LO switch (ATX14A).....	TF-142
NVH troubleshooting (AX) .....	AX-3, 19
NVH troubleshooting (BR).....	BR-6
NVH troubleshooting (CL) .....	CL-4
NVH troubleshooting (M/T) .....	MT-4
NVH troubleshooting (PD).....	PD-4
NVH troubleshooting (ST).....	ST-6
NVH troubleshooting (SU) .....	SU-3, 17
NVH troubleshooting (Transfer) (TX10A).....	TF-10
NVIS (Nissan vehicle immobilizer system).....	EL-385

# ALPHABETICAL INDEX

## O

O2H1B1 - Wiring diagram .....	EC-171
O2H1B2 - Wiring diagram .....	EC-172
O2H2B1 - Wiring diagram .....	EC-179
O2H2B2 - Wiring diagram .....	EC-180
O2S1B1 - Wiring diagram .....	EC-235, 245, 258
O2S1B2 - Wiring diagram .....	EC-236, 246, 259
O2S2B1 - Wiring diagram .....	EC-267, 276, 550, 560
O2S2B2 - Wiring diagram .....	EC-268, 277, 551, 561
Oil change (capacity) .....	MA-12
Oil filter (Transfer) (ATX14A) .....	TF-148
Oil pan (engine) .....	EM-15
Oil pressure (engine) .....	LC-5
Oil pump (A/T) .....	AT-297
Oil pump (engine) .....	LC-6
Oil pump regulator valve (engine) .....	LC-7
Oil seal replacement (engine) .....	EM-36
Oil seal replacement (front final drive 4WD) .....	PD-16
Oil seal replacement (front of final drive) .....	PD-41
On board diagnostic system .....	EC-72
Operating cylinder (clutch) .....	CL-9
ORVR (On-board Refueling Vapor Recovery) .....	EC-40
Out side mirror .....	BT-61
Overdrive control switch .....	AT-262
Overheat .....	EC-575
Overrun clutch .....	AT-320
Overrun clutch solenoid valve .....	AT-189

## P

P/ANT - Wiring diagram .....	EL-199
Park/Neutral position switch .....	EC-661
Park/neutral position switch (A/T) .....	AT-103, 262
Park/neutral position switch (M/T) .....	MT-5
Parking brake control .....	BR-33
Parking lamp .....	EL-61
PCV (positive crankcase ventilation) .....	EC-49
Periodic maintenance .....	MA-7
PGC/V - Wiring diagram .....	EC-373, 597
PHASE - Wiring diagram .....	EC-335
Pinion bearing preload diff. .....	PD-26
Pinion gear height diff. .....	PD-26, 54
Piston assembly .....	EM-73
Piston pin inspection .....	EM-65
Piston ring inspection .....	EM-66
Piston to bore clearance .....	EM-68
Planetary carrier (Transfer) (ATX14A) .....	TF-164
PNP/SW - Wiring diagram .....	EC-664
POS - Wiring diagram .....	EC-328, 588
POWER - Wiring diagram .....	EL-10
Power antenna .....	EL-198
Power door lock .....	EL-287
Power door mirror .....	EL-208
Power seat .....	EL-209

Power steering fluid level .....	MA-29, ST-8	GI
Power steering gear .....	ST-17	
Power steering hydraulic pressure .....	ST-10	
Power steering oil pressure switch .....	EC-705	MA
Power steering oil pump .....	ST-27	
Power steering system bleeding .....	ST-9	
Power supply routing .....	EL-9	EM
Power transistor & ignition coil .....	EC-677	
Power window .....	EL-268	
PRE/SE - Wiring diagram .....	EC-386, 392	LC
Precautions (General) .....	GI-4	
Pressure plate - See Clutch cover .....	CL-12	
Pressure test (A/T) .....	AT-62	EC
Propeller shaft .....	PD-3	
Propeller shaft greasing .....	MA-25	FE
Propeller shaft inspection .....	MA-25	
Propeller shaft on vehicle service .....	PD-8	
Propeller shaft vibration .....	PD-8	
PST/SW - Wiring diagram .....	EC-706	CL

## R

Rack retainer adjustment .....	ST-8	AT
Radiator .....	LC-21, 23	
Radio - See Audio .....	EL-186	
Rear air spoiler .....	BT-36	TF
Rear axle .....	AX-18	
Rear bumper .....	BT-16	
Rear case (Transfer) (ATX14A) .....	TF-153	PD
Rear case (Transfer) (TX10A) .....	TF-16	
Rear combination lamp removal and installation .....	BT-36	AX
Rear cover packing replacement diff. .....	PD-17	
Rear door .....	BT-21	SU
Rear drum brake .....	BR-29	
Rear heated oxygen sensor (HO2S) .....	EC-547	
Rear seat .....	BT-47	BR
Rear seat belt .....	RS-5	
Rear side window .....	BT-60	
Rear suspension .....	SU-17	ST
Rear washer .....	EL-165	
Rear window defogger .....	EL-174	
Rear wiper .....	EL-165	RS
REF - Wiring diagram .....	EC-582	
Refrigerant pressure sensor .....	HA-111, 222	
Refrigerant connection precaution .....	HA-5, 161	BT
Refrigerant discharging evacuating charging .....	HA-143	
Refrigerant general precaution .....	HA-4, 160	HA
Refrigerant lines .....	HA-152, 233	
Refrigerant pressure sensor .....	EC-710	
Refrigeration cycle .....	HA-15, 171	SC
Release bearing (clutch) .....	CL-10	
REMOTE - Wiring diagram .....	EL-197	
Removal and installation (A/T) .....	AT-276	EL
Removal and installation (Transfer) (ATX14A) .....	TF-149	
Removal and installation (Transfer) (TX10A) .....	TF-14	
Reverse clutch .....	AT-314	

# ALPHABETICAL INDEX

Reverse idler shaft (M/T).....	MT-11
Reverse lamp switch (M/T) - See	
Back-up lamp switch (M/T).....	MT-5
Reverse main gear (M/T) .....	MT-11
Revolution sensor (A/T).....	AT-115
Ring gear diff. inspection .....	PD-24, 48
Road wheel size .....	GI-44
Roof trim .....	BT-34
Room lamp - See Interior lamp .....	EL-92
RP/SEN - Wiring diagram.....	EC-711

S

SAE J1930 terminology list .....	GI-52
Screw jack .....	GI-45
Seal - See Exterior .....	BT-36
SEAT - Wiring diagram .....	EL-209
Seat belt inspection .....	MA-31, RS-7
Seat belt pre-tensioner .....	RS-3
Seat belt pre-tensioner disposal .....	RS-22
Seat belt, front.....	RS-4
Seat belt, rear.....	RS-5
Seat, front .....	BT-43
Seat, rear .....	BT-47
Self-diagnosis (Transfer) (ATX14A) .....	TF-59
SHIFT - Wiring diagram .....	AT-265
Shift control (Transfer) (TX10A) .....	TF-18, 30
Shift control components (M/T).....	MT-13
Shift fork (M/T) .....	MT-13
Shift lever .....	MT-13
Shift lock system .....	AT-264
Shift schedule.....	AT-356
Shift solenoid valve A (A/T) ..AT-125, 137, 147, 171	
Shift solenoid valve B (A/T) ..AT-125, 131, 147, 175	
Shock absorber (rear) .....	SU-20
Side air bag .....	RS-21
Side bearing preload (front final drive	
4WD).....	PD-25
Side trim .....	BT-29
Side window - See Rear side window .....	BT-60
Smart entrance control unit .....	EL-372
SMJ (super multiple junction).....	Foldout
Spare tire size .....	GI-44
Spark plug replacement.....	MA-20
Specification value .....	EC-150
Speedometer .....	EL-118
Spiral cable.....	RS-16
Spot lamp .....	EL-92
Spring (Wheelarch) height .....	SU-6
SROOF - Wiring diagram .....	EL-203
SRS - See Supplemental Restraint	
System.....	RS-10
SRS - Wiring diagram .....	RS-35
S/SIG - Wiring diagram .....	EC-693
Stabilizer bar (front).....	SU-12
Stabilizer bar (rear) .....	SU-22
Stall test (A/T) .....	AT-59
Standardized relay .....	EL-7
START - Wiring diagram.....	SC-11
Start signal .....	EC-692

Starter .....	SC-19
Starting system.....	SC-10
Steering gear, linkage and transfer	
gear inspection .....	MA-28
Steering linkage .....	ST-17
Steering switch.....	EL-30
Steering transfer gear .....	ST-15
Steering wheel and column.....	ST-11
Steering wheel play .....	ST-7
Steering wheel turning force.....	ST-9
Stop lamp.....	EL-71
STOP/L - Wiring diagram.....	EL-71
Striking rod (M/T) .....	MT-13
Strut (front) .....	SU-9
Sub-gear (M/T) .....	MT-11
Sub-oil pump (Transfer) (ATX14A) .....	TF-161
Sun gear (Transfer) (ATX14A).....	TF-164
Sun roof, electric.....	EL-202
Sunload sensor .....	HA-135
Sunroof.....	BT-48
Supplemental Restraint System.....	RS-10
Supplemental restraint system - Wiring	
diagram.....	RS-35
Suspension .....	MA-29
S/VCSW - Wiring diagram .....	EC-571
Swirl control valve control solenoid	
valve .....	EC-493, 516
Swirl control valve control vacuum	
check switch .....	EC-569
SWL/V - Wiring diagram .....	EC-497, 518
Symbols and abbreviations .....	GI-10
Symptom matrix chart .....	EC-132
Synchronizer (M/T) .....	MT-11
System readiness test (SRT) code .....	EC-74

T

2-4WD shift solenoid valve (ATX14A) .....	TF-141
Tachometer.....	EL-118
Tail lamp.....	EL-61
TAIL/L - Wiring diagram .....	EL-64
TCM circuit diagram.....	AT-13
TCM inspection table .....	AT-92
Temperature control cable and linkage	
adjustment .....	HA-213
TFTS - Wiring diagram.....	EC-303
THEFT - Wiring diagram.....	EL-346
Theft warning system.....	EL-339
Thermometer.....	EL-132
Thermostat.....	LC-18
Three way catalyst function (Bank 1) .....	EC-338
Three way catalyst function (Bank 2) .....	EC-338
Three way catalyst precautions.....	GI-6
Throttle body .....	EM-12
Throttle position sensor (TPS) .....	EC-208, 219
Throttle position sensor adjustment .....	EC-117
Throttle position switch .....	EC-468, AT-184, 263
Throwout bearing - See Clutch release	
bearing .....	CL-10
Tie-rod.....	ST-21



# ALPHABETICAL INDEX

Tie-rod ball joints.....ST-21  
 Tightening torque of standard bolts.....GI-50  
 Timing chain.....EM-20  
 Tire rotation .....MA-26  
 Tire size .....GI-44  
 Tooth contact (front final drive 4WD) .....PD-30  
 Tooth contact diff. ....PD-57  
 Torque converter installation .....AT-277  
 Torque convertor clutch solenoid  
 valve .....AT-152, 161  
 Tow truck towing.....GI-47  
 Towing point.....GI-49  
 TP/SW - Wiring diagram .....EC-471  
 TPS - Wiring diagram .....EC-213, 222  
 Transfer case (TX10A).....TF-16  
 Transfer control unit inspection table  
 (ATX14A) .....TF-86  
 Transfer dropping resistor (ATX14A) .....TF-142  
 Transfer fluid replacement (All-mode  
 4WD model) .....MA-24  
 Transfer fluid replacement (Part time  
 4WD model) .....MA-24  
 Transfer fluid temperature sensor  
 (ATX14A) .....TF-141  
 Transfer motor (ATX14A).....TF-147  
 Transfer motor relay (ATX14A).....TF-143  
 Transfer serial number .....GI-44  
 Transmission case (M/T).....MT-10  
 TRANSMT - Wiring diagram .....EL-381  
 Tread-FR&RR (Dimensions).....GI-44  
 Trim .....BT-29  
 TRNSCV - Wiring diagram .....EL-381  
 Trouble diagnoses .....GI-34  
 Turbine revolution sensor.....AT-202  
 TURN - Wiring diagram .....EL-80  
 Turn signal lamp .....EL-78  
 Two trip detection logic .....EC-72  
 Two-pole lift .....GI-47

U

Under body .....BT-65

V

Vacuum cut valve .....EC-34  
 Vacuum cut valve bypass valve.....EC-34, 642, 648  
 Vacuum hose (brake system).....BR-24  
 Vacuum hose drawing (Engine control) .....EC-28  
 Valve clearance.....EM-53  
 Valve guide.....EM-44  
 Valve seat.....EM-45

Valve spring.....EM-46  
 Vanity mirror lamp .....EL-92  
 Vehicle identification number.....GI-42  
 Vehicle recovery (freeing a stuck  
 vehicle).....GI-49  
 VEHICLE SECURITY (THEFT WARN-  
 ING) SYSTEM .....EL-339  
 Vehicle speed sensor (VSS) .....EC-438  
 VENT/V - Wiring diagram .....EC-379, 608, 617  
 VIAS .....EC-669  
 VIAS/V - Wiring diagram .....EC-671  
 Viscosity number (SAE) .....MA-13  
 VSS - Wiring diagram .....EC-441

W

Wait detection switch (ATX14A) .....TF-142  
 WARN - Wiring diagram .....EL-137  
 Warning chime .....EL-146  
 Warning lamps .....EL-136  
 Washer, front.....EL-160  
 Washer, rear.....EL-165  
 Water pump .....LC-13  
 Water temperature gauge .....EL-118  
 Weatherstrip - See Exterior .....BT-36  
 Wheel balance .....MA-26  
 Wheel bearing (front).....AX-4  
 Wheel bearing (rear) .....AX-19  
 Wheel hub (front).....AX-6  
 Wheel sensors (ABS).....BR-59, 83  
 Wheel size .....GI-44  
 Wheelarch height .....SU-6  
 Wheelbase (Dimensions) .....GI-44  
 Wide open & closed throttle position  
 switch.....EC-208, 219  
 Width (Dimensions) .....GI-44  
 WINDOW - Wiring diagram .....EL-272  
 Window, door .....BT-19  
 Window, rear side .....BT-60  
 Window, side - See Rear side window .....BT-60  
 Windshield.....BT-58  
 WIP/R - Wiring diagram .....EL-167  
 WIPER - Wiring diagram .....EL-162  
 Wiper, front.....EL-160  
 Wiper, rear .....EL-165  
 Wiring Diagram (Cell code) list.....EL-477  
 Wiring diagram (Transfer) (ATX14A) .....TF-50  
 Wiring Diagram - VEHSEC - .....EL-346  
 Wiring diagrams .....GI-11  
 Withdrawal lever (clutch) .....CL-10  
 Wrist pin - See Piston pin inspection.....EM-65

GI  
 MA  
 EM  
 LC  
 EC  
 FE  
 CL  
 MT  
 AT  
 TF  
 PD  
 AX  
 SU  
 BR  
 ST  
 RS  
 BT  
 HA  
 SC  
 EL

## NOTES