

ALPHABETICAL INDEX

SECTION **IDX**

GI
MA
EM
LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

ALPHABETICAL INDEX

A

ABS - Wiring diagram BR-37
 ABS sensor rotor AX-6, 20
 ABS/TCS C/U signal EC-549, 551
 A/C air flow HA-27, 169
 A/C component layout HA-20, 167
 A/C compressor clutch removal and installation HA-139, 220
 A/C compressor description HA-162
 A/C compressor precaution HA-7, 154
 A/C compressor special service tool HA-10, 157
 A/C control linkage adjustment (manual A/C) HA-187, 204, 206
 A/C control operation (auto A/C) HA-25
 A/C control operation (manual A/C) HA-168
 A/C diagnostic work flow (auto A/C) HA-59
 A/C diagnostic work flow (manual A/C) HA-178
 A/C HFC134a (R134a) system
 precaution HA-3, 150
 A/C HFC134a (R134a) system service
 procedure HA-134, 215
 A/C HFC134a (R134a) system service
 tools HA-11, 158
 A/C HFC134a system service equipment
 precaution HA-8, 155
 A/C lubricant (R134a) HA-136, 217
 A/C operational check HA-60, 179
 A/C performance chart HA-108, 198
 A/C performance test diagnoses HA-106, 196
 A/C relay HA-103, 213
 A/C self-diagnoses (auto A/C) HA-39
 A/C service data specification HA-149, 230
 A/C switch HA-213
 A/C system description (auto A/C) HA-24
 A/C trouble diagnoses (auto A/C) HA-29
 A/C trouble diagnoses (manual A/C) HA-171
 A/C, A - Wiring diagram HA-32
 A/C, M - Wiring diagram HA-175
 Accelerator control system FE-3
 Accelerator pedal position (APP)
 sensor EC-562, 675, 682, 697
 Accelerator pedal released position
 learning EC-73
 Actuator lever (Transfer) TF-156
 Air bag RS-11
 Air bag precautions GI-3
 Air bleeding for brake system BR-9
 Air cleaner filter replacement MA-18
 Air conditioner cut control EC-37
 Air flow meter - See Mass air flow
 sensor EC-187, 194
 Air mix door control linkage adjustment HA-78
 Air mix. door motor HA-75, 133
 Air spoiler, rear BT-38
 All-mode 4WD system TF-43
 Alternator SC-30
 Ambient sensor HA-121
 Angular tightening application EM-3

Antenna - See Power antenna EL-218
 Anti-lock brake system - Wiring diagram BR-37
 APPS1 - Wiring diagram EC-678
 APPS2 - Wiring diagram EC-685
 APPS3 - Wiring diagram EC-700
 ASC/BS - Wiring diagram EC-655
 ASC/SW - Wiring diagram EC-647
 ASCBOF - Wiring diagram EC-742
 ASCD EC-54
 ASCD (automatic speed control device) EL-271
 ASCD brake switch EC-652, 741
 ASCD clutch switch EC-652, 741
 ASCD steering switch EC-645
 ASCIND - Wiring diagram EC-750
 A/T - Wiring diagram - AT - FTS AT-110
 A/T - Wiring diagram - AT - MAIN AT-99
 A/T - Wiring diagram - AT - PNP/SW AT-104
 A/T - Wiring diagram - AT - VSS A/T AT-116
 A/T fluid temperature sensor AT-113
 A/T self-diagnoses AT-48
 A/T shift lock system AT-262
 A/T shift lock system - Wiring diagram AT-263
 A/T trouble diagnoses AT-55
 A/T Wiring diagram - AT - ENG SS AT-120
 A/T Wiring diagram AT - 1ST AT-126
 A/T Wiring diagram AT - 2ND AT-132
 A/T Wiring diagram AT - 3RD AT-138
 A/T Wiring diagram AT - 4TH AT-145
 A/T Wiring diagram AT - BA/FTS AT-192
 A/T Wiring diagram AT - CAN AT-204
 A/T Wiring diagram AT - LPSV AT-167
 A/T Wiring diagram AT - NONDTC AT-215
 A/T Wiring diagram AT - OVRCVS AT-187
 A/T Wiring diagram AT - SSV/A AT-172
 A/T Wiring diagram AT - SSV/B AT-176
 A/T Wiring diagram AT - TCCSIG AT-159
 A/T Wiring diagram AT - TCV AT-153
 A/T Wiring diagram AT - TPS AT-182
 A/T Wiring diagram AT - VSSMTR AT-199
 ATP switch TF-148
 ATP warning lamp TF-138
 Audio EL-206
 AUDIO - Wiring diagram EL-207
 Audio and A/C control removal and installation - See Instrument panel BT-24
 AUT/DP - Wiring diagram EL-241
 Auto air conditioner - Wiring diagram HA-32
 Automatic amplifier HA-36, 66
 Automatic drive positioner EL-236
 Automatic speed control system - See
 ASCD EL-271
 Automatic transmission fluid
 replacement MA-23
 Automatic transmission number GI-45
 Axle MA-29
 Axle housing (rear) AX-20

ALPHABETICAL INDEX

B

Back door	BT-17
Back door opener - See Back door	BT-17
Back door trim	BT-37
Back-up lamp	EL-78
Back-up lamp switch (M/T)	MT-5
BACK/L - Wiring diagram	EL-78
Ball joint (front)	SU-15
Basic inspection	EC-123
Battery	SC-4
Battery/Starting/Charging System	
Tester	SC-7, 13, 23
Baulk ring (M/T)	MT-11
Blower motor	HA-87, 189
Blower resistor	HA-189
Body alignment	BT-64
Brake booster	BR-19
Brake control valve (Proportioning valve)	BR-12
Brake fluid change	BR-8
Brake fluid level	MA-27
Brake fluid level and line check	BR-8
Brake hydraulic line	BR-10
Brake inspection	MA-27
Brake lines and cables inspection	MA-27
Brake lining wear temporary checking	MA-28
Brake master cylinder	BR-15
Brake pedal	BR-13
Brake switch	EC-669
BRK/SW - Wiring diagram	EC-671
Bulb specifications	EL-498
Bumper, front	BT-13
Bumper, rear	BT-17
BYPS/V - Wiring diagram	EC-629, 636

C

Camshaft inspection	EM-48
Camshaft position sensor (PHASE)	EC-326
CAN (Controller Area Network) ...	EL-409, 414, 438, 460, 473
CAN - Wiring diagram	EC-167, EL-415, 439, 461, 474
CAN communication ...	EC-54, 166, BR-90, EL-409, 414, 438, 460, 473
Canister - See EVAP canister	EC-38
Center bearing assembly (propeller shaft)	PD-11
Center bearing disassembly (propeller shaft)	PD-9
Center case (Transfer)	TF-17, 159
CHARGE - Wiring diagram	SC-22
Charging system	SC-21
Chassis and body maintenance	MA-22
CHIME - Wiring diagram	EL-166
CIGAR - Wiring diagram	EL-190
Cigarette lighter	EL-190

Circuit breaker	EL-18
Clock	EL-191
CLOCK - Wiring diagram	EL-191
Closed loop control (Bank 1)	EC-541
Closed loop control (Bank 2)	EC-541
Clutch cover	CL-12
Clutch disc	CL-12
Clutch drum (Transfer)	TF-161
Clutch fluid level	MA-22
Clutch force release limit adjustment	TF-74
Clutch master cylinder	CL-8
Clutch operating cylinder	CL-9
Clutch pedal	CL-5
Clutch pressure switch (Transfer)	TF-147
Clutch release bearing	CL-10
Clutch withdrawal lever	CL-10
Coil spring (front)	SU-10
Coil spring (rear)	SU-40
Collision diagnosis	RS-53
Combination lamp, front, removal and installation	BT-13
Combination lamp, rear, removal and installation	BT-38
Combination meter	EL-124
Combination meter removal and installation - See Instrument panel	BT-24
Combination switch	EL-32
COMPAS - Wiring diagram	EL-142
Compass	EL-141
Component Location (auto A/C)	HA-29
Component Location (manual A/C)	HA-171
Compression pressure	EM-17
Compressor clutch removal and installation	HA-139, 220
Compressor description	HA-162
Compressor precaution	HA-7, 154
Compressor special service tool	HA-10, 157
Connecting rod	EM-70
Connecting rod bearing clearance	EM-74
Connecting rod bushing clearance	EM-75
Connector inspection	GI-21
Console box - See Instrument panel	BT-24
CONSULT for ABS	BR-43
CONSULT for all-mode 4WD	TF-64
CONSULT for engine	EC-103
CONSULT for VDC	BR-103
CONSULT-II general information	GI-39
Control valve (A/T)	AT-298
Control valve (Transfer)	TF-164
Controller Area Network (CAN)	EL-409, 414, 438, 460, 473
Converter housing installation	AT-274
Coolant mixture ratio	MA-13
Coolant replacement	MA-15
Cooling circuit (engine)	LC-11
Counter gear (M/T)	MT-11
Counter gear (Transfer)	TF-18
Coupling sleeve (M/T)	MT-11
Crankcase emission control system - See positive crankcase ventilation	EC-53
Crankshaft	EM-72

ALPHABETICAL INDEX

Crankshaft position sensor (POS)	EC-319
Cruise control - See ASCD	EL-271
Cylinder block	EM-66
Cylinder head.....	EM-44
Cylinder head bolt tightening	EM-55

D

Data link connector for Consult.....	EC-103
Daytime light system.....	EL-50
Daytime running light - See Daytime light system	EL-50
DEF - Wiring diagram	EL-194
Detonation sensor - See Knock sensor	EC-314
Diagnostic trouble code (DTC) for OBD system	EC-9, 78
Diagnostic trouble code (DTC) inspec- tion priority chart	EC-129
Differential carrier assembly.....	PD-31, 58
Differential carrier disassembly	PD-45
Differential gear oil replacement	MA-26
Dimensions	GI-46
D/LOCK - Wiring diagram	EL-293
Dome light - See Interior lamp	EL-98
Door glass	BT-21
Door lock	BT-21
Door mirror	BT-63
Door trim	BT-33
Door, front	BT-21
Door, rear	BT-23
Drive belt inspection	MA-14
Drive chain (Transfer)	TF-18, 161
Drive pinion diff. inspection	PD-24, 48
Drive pinion height	PD-26, 54
Drive plate runout	EM-76
Drive shaft.....	MA-30
Drive shaft (front)	AX-12
Dropping resistor (A/T)	AT-170
DTC work support.....	EC-114
DTRL - Wiring diagram	EL-55

E

ECM input/output signal	EC-141
ECM power supply	EC-443
ECM/PW - Wiring diagram	EC-445
ECTS - Wiring diagram	EC-206
Electric sun roof	EL-222
Electric throttle control actuator	EC-457, 459
Electrical diagnoses.....	GI-24
Electrical ignition system	EC-36
Electrical unit	Foldout
Electrical units location	EL-479
Engine compartment.....	BT-65
Engine control circuit diagram.....	EC-30
Engine control component parts location	EC-25
Engine control module (ECM)	EC-441

Engine control system diagram and chart	EC-31
Engine coolant temperature sensor (ECTS).....	EC-204, 217
Engine fail-safe system	EC-130
Engine oil filter replacement	MA-19
Engine oil precautions	GI-7
Engine oil replacement	MA-18
Engine outer component parts	EM-10
Engine removal	EM-62
Engine room - See Engine compartment.....	BT-65
Engine serial number	GI-45
ETC1 - Wiring diagram	EC-461
ETC2 - Wiring diagram	EC-469
ETC3 - Wiring diagram	EC-474
EVAP canister.....	EC-39
EVAP canister purge volume control solenoid valve.....	EC-38, 364, 582
EVAP canister vent control valve	EC-371, 594, 602
EVAP control system (small leak) diagnosis	EC-349, 394, 407, 567, 611
EVAP control system pressure sensor	EC-378, 384
EVAP control system purge flow moni- toring diagnosis.....	EC-339
EVAP vapor lines inspection	MA-21
Evaporative emission (EVAP) system.....	EC-38
Exhaust system	FE-9
Exhaust system inspection	MA-22
Exterior	BT-38

F

4LO indicator lamp.....	TF-140
4WD shift indicator lamp.....	TF-134
4WD shift switch	TF-147
4WD solenoid valve	TF-147
4WD warning lamp	TF-46
Fan control amp.	HA-90
Fan switch	HA-189
F/FOG - Wiring diagram	EL-80
Final drive disassembly	PD-44
Final drive pre-inspection	PD-44
Final drive removal and installation	PD-44
Finisher, interior - See Trim	BT-31
Fluid temperature sensor (A/T)	AT-113
Fluids.....	MA-12
Flywheel (clutch)	CL-13
Flywheel runout.....	EM-76
Fog lamp, front.....	EL-79
Fog lamp, front, removal and installation	BT-13
Fork rod (M/T)	MT-13
Forward clutch	AT-317
F/PUMP - Wiring diagram	EC-731
Freeze frame data.....	EC-79
Front axle.....	AX-2
Front bumper	BT-13

ALPHABETICAL INDEX

Front case (Transfer)	TF-17, 169		
Front combination lamp removal and installation	BT-13	GI	
Front disc brake	BR-22		
Front door	BT-21	MA	
Front drive shaft (Transfer)	TF-18, 161		
Front final drive disassembly (4WD)	PD-19		
Front final drive pre-inspection (4WD)	PD-19		
Front final drive removal and installa- tion (4WD)	PD-19	EM	
Front fog lamp	EL-79		
Front fog lamp removal and installation	BT-13		
Front revolution sensor (Transfer)	TF-148		
Front seat	BT-45	LC	
Front seat belt	RS-5		
Front suspension	SU-3	EC	
Front washer	EL-178		
Front wiper	EL-178		
Fuel cut control (at no load & high engine speed)	EC-38	FE	
Fuel filler lid	BT-17	AT	
Fuel filter replacement	MA-17	TF	
Fuel gauge	EL-124		
Fuel injection system	EC-273, 282		
Fuel injection system (Bank 1)	EC-273, 282		
Fuel injection system (Bank 2)	EC-273, 282		
Fuel level sensor	EC-423, 425, 428		
Fuel line inspection	MA-17	PD	
Fuel precautions	GI-8		
Fuel pressure check	EC-56	AX	
Fuel pressure regulator	EC-57		
Fuel pressure release	EC-56	SU	
Fuel pump	EC-729		
Fuel system	FE-4	BR	
Fuel tank temperature sensor	EC-290, 293		
Fuel tank vacuum relief valve	EC-39		
FUELB1 - Wiring diagram	EC-275, 284		
FUELB2 - Wiring diagram	EC-276, 285		
Fuse	EL-18		
Fuse and fusible link box	Foldout		
Fuse block	Foldout		
Fusible link	EL-18		
 <table border="1" style="width: 100%;"><tr><td style="text-align: center; padding: 5px;">G</td></tr></table>			G
G			
Garage jack and safety stand	GI-48		
Gauges	EL-124	RS	
Gear components (M/T)	MT-11		
Generator - See Alternator	SC-30	BT	
Generic scan tool (GST)	EC-117		
Glass	BT-21	HA	
Glass hatch opener, electric	EL-229		
Grease	MA-12	SC	
Ground distribution	EL-19		
 <table border="1" style="width: 100%;"><tr><td style="text-align: center; padding: 5px;">H</td></tr></table>			H
H			
Harness connector	EL-7	EL	
Harness connector inspection	GI-21	IDX	
Harness layout	EL-482		
Hazard warning lamp	EL-83		
Headlamp	EL-35		
Headlining - See Roof trim	BT-36		
Heated oxygen sensor 1 (bank 1)	EC-224, 233, 246, 504, 512		
Heated oxygen sensor 1 (bank 2)	EC-224, 233, 246, 504, 512		
Heated oxygen sensor 1 heater (bank 1)	EC-173		
Heated oxygen sensor 1 heater (bank 2)	EC-173		
Heated oxygen sensor 2 (bank 1)	EC-255, 263, 521, 531		
Heated oxygen sensor 2 (bank 2)	EC-255, 263, 521, 531		
Heated oxygen sensor 2 heater (bank 1)	EC-181		
Heated oxygen sensor 2 heater (bank 2)	EC-181		
Heated oxygen sensor heater	EC-173, 181		
Heated seat	BT-48, EL-232		
Height (Dimensions)	GI-46		
HFC134a (R134a) system precaution	HA-3, 150		
HFC134a (R134a) system service procedure	HA-134, 215		
HFC134a (R134a) system service tools	HA-11, 158		
HFC134a system service equipment precaution	HA-8, 155		
High clutch	AT-314		
H/LAMP - Wiring diagram	EL-39		
Homelink universal transceiver	EL-385		
Hood	BT-13		
Horn	EL-189		
HORN - Wiring diagram	EL-189		
How to erase DTC for OBD system	EC-91		
HSEAT - Wiring diagram	EL-232		
 <table border="1" style="width: 100%;"><tr><td style="text-align: center; padding: 5px;">I</td></tr></table>			I
I			
IATS - Wiring diagram	EC-201		
Identification plate	GI-45		
Idle air volume learning	EC-73		
Idle mixture ratio	EC-61		
Idle speed	EC-61, 123		
IGN/SG - Wiring diagram	EC-715		
Ignition control system	EC-714		
Ignition timing	EC-61, 123		
ILL - Wiring diagram	EL-91		
Illumination	EL-88		
In vehicle sensor	HA-124		
INJECT - Wiring diagram	EC-725		
Injector	EC-724		
Injector removal and installation	EC-58		
Instrument panel	BT-24		
INT/L - Wiring diagram	EL-101		
Intake air temperature sensor	EC-200, 220		
Intake door control linkage adjustment ..	HA-86, 187		

ALPHABETICAL INDEX

Intake door motor	HA-79, 182
Intake manifold	EM-12
Intake sensor	HA-131
Intake valve timing control	EC-169, 448
Intake valve timing control (Bank 1)	EC-169, 448
Intake valve timing control (Bank 2)	EC-169, 448
Intake valve timing control solenoid valve	EC-172
Intake valve timing control solenoid valve (Bank 1).....	EC-451
Intake valve timing control solenoid valve (Bank 2).....	EC-451
Integrated homelink transmitter	EL-385
Interior	BT-31
Interior lamp	EL-98
Interior lamp on-off control	EL-99
Internal gear (Transfer)	TF-170
IVCB1 - Wiring diagram	EC-453
IVCB2 - Wiring diagram	EC-454

J

Jacking points	GI-47
Journal bearing assembly (propeller shaft)	PD-11
Journal bearing disassembly (propeller shaft)	PD-10
Junction box (J/B).....	Foldout

K

KEYLES - Wiring diagram	EL-319
Keyless entry system - See Multi-re- mote control system.....	EL-314
Knock sensor (KS)	EC-314
Knuckle spindle	AX-10
KS - Wiring diagram	EC-315

L

Length (Dimensions)	GI-46
License lamp	EL-66
Lifting points	GI-49
Limited slip diff. adjustment.....	PD-51
Limited slip diff. assembly	PD-52
Limited slip diff. disassembly.....	PD-49
Limited slip diff. inspection	PD-50
Line pressure solenoid valve	AT-150, 164, 170
Line pressure switch (Transfer)	TF-147
Line pressure test (A/T)	AT-64
Liquid gasket application	EM-3
LOAD - Wiring diagram.....	EC-753
Location of electrical units	EL-479
Lock, door	BT-21
Low and reverse brake	AT-321
Low tire pressure warning system	SU-16

Low tire pressure warning system - trouble diagnoses	SU-25
Low tire pressure warning system - Wiring diagram.....	SU-18
Lubricant (R134a) A/C	HA-136, 217
Lubricants.....	MA-12
Lubrication circuit (engine)	LC-3
Lubrication-locks, hinges and hood latches	MA-30
Luggage room lamp	EL-98

M

MAFS - Wiring diagram	EC-190, 196
Magnet clutch.....	HA-97, 139, 220
MAIN - Wiring diagram.....	EC-157
Main drive gear (M/T)	MT-11
Main gear (Transfer)	TF-18
Main oil pump (Transfer).....	TF-167
Mainshaft (M/T).....	MT-11
Mainshaft (Transfer).....	TF-18, 161
Maintenance (engine)	MA-14
MAJOR OVERHALL.....	AT-278
Major overhaul (Transfer)	TF-16, 156
Malfunction indicator lamp (MIL)	EC-94
Manual air conditioner - Wiring diagram.....	HA-175
Manual transmission number	GI-45
Manual transmission oil replacement	MA-22
Mass air flow sensor (MAFS).....	EC-187, 194
Master cylinder (brake)	BR-15
Master cylinder (clutch)	CL-8
Meter	EL-124
METER - Wiring diagram.....	EL-132
MIL & Data link connectors circuit	EC-757
MIL/DL - Wiring diagram	EC-757
MIRROR - Wiring diagram.....	EL-228
Mirror defogger	EL-192
Mirror, door.....	BT-63
Mirror, outside	BT-63
Misfire	EC-305
Mode door control linkage adjustment...HA-74, 206	
Mode door motor	HA-68
Model variation	GI-43
Molding - See Exterior	BT-38
M/T major overhaul	MT-10
M/T removal and installation	MT-7
Multi-remote control system.....	EL-314
Multiport fuel injection (MFI) system	EC-34
Multiport fuel injection precautions	GI-6

N

NATS (Nissan anti-theft system).....	EL-389
NATS - Wiring diagram	EL-391
Neutral-4LO switch	TF-148
NVH troubleshooting (AX)	AX-3, 19
NVH troubleshooting (BR).....	BR-7
NVH troubleshooting (CL)	CL-4

ALPHABETICAL INDEX

NVH troubleshooting (M/T)	MT-4
NVH troubleshooting (PD)	PD-4
NVH troubleshooting (ST)	ST-6
NVH troubleshooting (SU)	SU-4, 37
NVH troubleshooting (Transfer)	TF-10
NVIS (Nissan vehicle immobilizer system)	EL-389

O

O2H1B1 - Wiring diagram	EC-176
O2H1B2 - Wiring diagram	EC-177
O2H2B1 - Wiring diagram	EC-183
O2H2B2 - Wiring diagram	EC-184
O2S1B1 - Wiring diagram	EC-226, 236, 249
O2S1B2 - Wiring diagram	EC-227, 237, 250
O2S2B1 - Wiring diagram	EC-257, 266, 524, 534
O2S2B2 - Wiring diagram	EC-258, 267, 525, 535
Oil change (capacity)	MA-12
Oil filter (Transfer)	TF-154
Oil pan (engine)	EM-19
Oil pressure (engine)	LC-5
Oil pump (A/T)	AT-294
Oil pump (engine)	LC-6
Oil pump regulator valve (engine)	LC-7
Oil seal replacement (engine)	EM-42
Oil seal replacement (front final drive 4WD)	PD-16

Oil seal replacement (front of final drive)	PD-41
On board diagnostic system	EC-77
Operating cylinder (clutch)	CL-9
ORVR (On-board Refueling Vapor Recovery)	EC-44
Outside mirror	BT-63
Overdrive control switch	AT-260
Overheat	EC-553
Overrun clutch	AT-317
Overrun clutch solenoid valve	AT-189

P

P/ANT - Wiring diagram	EL-219
Park/Neutral position switch	EC-663
Park/neutral position switch (A/T)	AT-106, 260
Park/neutral position switch (M/T)	MT-5
Parking brake control	BR-30
Parking lamp	EL-66
PCV (positive crankcase ventilation)	EC-53
Periodic maintenance	MA-7
PGC/V - Wiring diagram	EC-367, 585
PHASE - Wiring diagram	EC-328
Pinion bearing preload diff.	PD-26
Pinion gear height diff.	PD-26, 54
Piston assembly	EM-76
Piston pin inspection	EM-69
Piston ring inspection	EM-69
Piston to bore clearance	EM-71

Planetary carrier (Transfer)	TF-170
PNP/SW - Wiring diagram	EC-665
POS - Wiring diagram	EC-321
POWER - Wiring diagram	EL-12
Power antenna	EL-218
Power door lock	EL-291
Power door mirror	EL-228
Power seat	EL-230
Power steering fluid level	MA-29, ST-8
Power steering gear	ST-17
Power steering hydraulic pressure	ST-10
Power steering oil pump	ST-27
Power steering pressure (PSP) sensor	EC-436
Power steering system bleeding	ST-9
Power supply routing	EL-11
Power transistor & ignition coil	EC-714
Power window	EL-272
PRE/SE - Wiring diagram	EC-380, 386
Precautions (General)	GI-4
Pressure plate - See Clutch cover	CL-12
Pressure test (A/T)	AT-64
Propeller shaft	PD-3
Propeller shaft greasing	MA-25
Propeller shaft inspection	MA-25
Propeller shaft on vehicle service	PD-8
Propeller shaft vibration	PD-8
PS/SEN - Wiring diagram	EC-437

R

Rack retainer adjustment	ST-8
Radiator	LC-22, 24
Radio - See Audio	EL-206
Rear air spoiler	BT-38
Rear axle	AX-18
Rear bumper	BT-17
Rear case (Transfer)	TF-17, 159
Rear combination lamp removal and installation	BT-38
Rear cover packing replacement diff.	PD-17
Rear door	BT-23
Rear drum brake	BR-26
Rear heated oxygen sensor (HO2S)	EC-521
Rear seat	BT-49
Rear seat belt	RS-6
Rear side window	BT-62
Rear suspension	SU-37
Rear washer	EL-183
Rear window defogger	EL-192
Rear wiper	EL-183
Refrigerant pressure sensor	HA-103, 213
Refrigerant connection precaution	HA-5, 152
Refrigerant discharging evacuating charging	HA-134
Refrigerant general precaution	HA-4, 151
Refrigerant lines	HA-143, 224
Refrigerant pressure sensor	EC-736
Refrigeration cycle	HA-15, 162
Release bearing (clutch)	CL-10
REMOTE - Wiring diagram	EL-217

ALPHABETICAL INDEX

Removal and installation (A/T)	AT-273
Removal and installation (Transfer)	TF-15, 155
Reverse clutch	AT-311
Reverse idler shaft (M/T)	MT-11
Reverse lamp switch (M/T) - See Back-up lamp switch (M/T)	MT-5
Reverse main gear (M/T)	MT-11
Revolution sensor (A/T)	AT-118
Ring gear diff. inspection	PD-24, 48
Road wheel size	GI-46
Roof trim	BT-36
Room lamp - See Interior lamp	EL-98
RP/SEN - Wiring diagram	EC-737

S

SAE J1930 terminology list	GI-54
Screw jack	GI-47
Seal - See Exterior	BT-38
SEAT - Wiring diagram	EL-230
Seat belt inspection	MA-31, RS-8
Seat belt pre-tensioner	RS-3
Seat belt, front	RS-5
Seat belt, rear	RS-6
Seat, front	BT-45
Seat, rear	BT-49
Self-diagnosis (Transfer)	TF-61
SEN/PW - Wiring diagram	EC-564
SHIFT - Wiring diagram	AT-263
Shift control (Transfer)	TF-19, 31
Shift control components (M/T)	MT-13
Shift fork (M/T)	MT-13
Shift lever	MT-13
Shift lock system	AT-262
Shift schedule	AT-353
Shift solenoid valve A (A/T)	AT-128, 140, 150, 174
Shift solenoid valve B (A/T)	AT-128, 134, 150, 178
Shock absorber (rear)	SU-40
Side bearing preload (front final drive 4WD)	PD-25
Side trim	BT-31
Side window - See Rear side window	BT-62
Smart entrance control unit	EL-376
SMJ (super multiple junction)	Foldout
Spare tire size	GI-46
Spark plug replacement	MA-20
Speedometer	EL-124
Spiral cable	RS-17
Splice location	EL-414, 438, 460, 473
Spot lamp	EL-98
Spring (Wheelarch) height	SU-7
SROOF - Wiring diagram	EL-223
SRS - See Supplemental Restraint System	RS-11
SRS - Wiring diagram	RS-28
Stabilizer bar (front)	SU-13
Stabilizer bar (rear)	SU-42
Stall test (A/T)	AT-61
Standardized relay	EL-9
START - Wiring diagram	SC-11

Starter	SC-19
Starting system	SC-10
Steering gear, linkage and transfer gear inspection	MA-28
Steering linkage	ST-17
Steering switch	EL-34
Steering transfer gear	ST-15
Steering wheel and column	ST-11
Steering wheel play	ST-7
Steering wheel turning force	ST-9
Stop lamp	EL-76
Stop lamp switch	EC-652, 669, 741
STOP/L - Wiring diagram	EL-76
Striking rod (M/T)	MT-13
Strut (front)	SU-10
Sub-gear (M/T)	MT-11
Sub-oil pump (Transfer)	TF-167
Sun gear (Transfer)	TF-170
Sunload sensor	HA-128
Sunroof	BT-50
Sunroof, electric	EL-222
Supplemental Restraint System	RS-11
Supplemental restraint system - Wiring diagram	RS-28
Suspension	MA-29
S/VCSW - Wiring diagram	EC-545
Swirl control valve control solenoid valve	EC-477, 498
Swirl control valve control vacuum check switch	EC-543
SWL/V - Wiring diagram	EC-481, 500
Symbols and abbreviations	GI-10
Symptom matrix chart	EC-131
Synchronizer (M/T)	MT-11
System readiness test (SRT) code	EC-79

T

2-4WD shift solenoid valve	TF-147
T&FLID - Wiring diagram	EL-229
Tachometer	EL-124
Tail lamp	EL-66
TAIL/L - Wiring diagram	EL-69
TCM circuit diagram	AT-13
TCM inspection table	AT-95
Temperature control cable and linkage adjustment	HA-204
TFTS - Wiring diagram	EC-295
Theft warning system	EL-343
Thermometer	EL-141
Thermostat	LC-19
Three way catalyst function (Bank 1)	EC-334
Three way catalyst function (Bank 2)	EC-334
Three way catalyst precautions	GI-6
Throttle body	EM-12
Throttle control motor	EC-472
Throttle control motor relay	EC-467
Throttle position sensor (TPS)	EC-210, 298, 558, 560, 690
Throttle valve closed position learning	EC-73

ALPHABETICAL INDEX

Throwout bearing - See Clutch release bearing	CL-10
Tie-rod	ST-21
Tie-rod ball joints	ST-21
Tightening torque of standard bolts	GI-52
Timing chain	EM-24
Tire rotation	MA-26
Tire size	GI-46
Tooth contact (front final drive 4WD)	PD-30
Tooth contact diff.	PD-57
Torque converter clutch solenoid valve	AT-155, 164
Torque converter installation	AT-274
Tow truck towing	GI-49
Towing point	GI-51
TPS1 - Wiring diagram	EC-301
TPS2 - Wiring diagram	EC-213
TPS3 - Wiring diagram	EC-693
Transfer case	TF-17
Transfer control unit inspection table	TF-89
Transfer dropping resistor	TF-148
Transfer fluid replacement (All-mode 4WD model)	MA-24
Transfer fluid replacement (Part time 4WD model)	MA-24
Transfer fluid temperature sensor	TF-147
Transfer motor	TF-154
Transfer motor relay	TF-149
Transfer serial number	GI-46
Transmission case (M/T)	MT-10
TRANSMT - Wiring diagram	EL-385
Tread-FR&RR (Dimensions)	GI-46
Trim	BT-31
TRNSCV - Wiring diagram	EL-385
Trouble diagnoses	GI-34
Turbine revolution sensor	AT-206
TURN - Wiring diagram	EL-85
Turn signal lamp	EL-83
Two trip detection logic	EC-77
Two-pole lift	GI-49

U

Under body	BT-67
------------	-------

V

Vacuum cut valve	EC-38
Vacuum cut valve bypass valve	EC-38, 627, 633
Vacuum hose (brake system)	BR-21
Vacuum hose drawing (Engine control)	EC-32
Valve clearance	EM-58

Valve guide	EM-50
Valve seat	EM-51
Valve spring	EM-52
Vanity mirror lamp	EL-98
VDC (vehicle dynamics control)	BR-88
Vehicle identification number	GI-44
Vehicle recovery (freeing a stuck vehicle)	GI-51
Vehicle security (theft warning) system	EL-343
Vehicle speed sensor (VSS)	EC-430
VEHSEC - Wiring Diagram	EL-350
VENT/V - Wiring diagram	EC-373, 596, 605
VIAS	EC-705
VIAS/V - Wiring diagram	EC-707
Viscosity number (SAE)	MA-13

W

Wait detection switch	TF-148
WARN - Wiring diagram	EL-146, 155
Warning chime	EL-164
Warning lamps	EL-145
Washer, front	EL-178
Washer, rear	EL-183
Water pump	LC-14
Water temperature gauge	EL-124
Weatherstrip - See Exterior	BT-38
Wheel balance	MA-26
Wheel bearing (front)	AX-4
Wheel bearing (rear)	AX-19
Wheel hub (front)	AX-6
Wheel sensor (VDC)	BR-139
Wheel sensors (ABS)	BR-56, 80
Wheel size	GI-46
Wheelarch height	SU-7
Wheelbase (Dimensions)	GI-46
Width (Dimensions)	GI-46
WINDOW - Wiring diagram	EL-276
Window, door	BT-21
Window, rear side	BT-62
Window, side - See Rear side window	BT-62
Windshield	BT-60
WIP/R - Wiring diagram	EL-185
WIPER - Wiring diagram	EL-180
Wiper, front	EL-178
Wiper, rear	EL-183
Wiring Diagram (Cell code) list	EL-499
Wiring diagram (Transfer)	TF-52
Wiring diagrams	GI-11
Withdrawal lever (clutch)	CL-10
Wrist pin - See Piston pin inspection	EM-69

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

NOTES