

**SECTION IDX
ALPHABETICAL INDEX**

A

B

C

D

E

F

G

H

I

J

K

L

IDX

ALPHABETICAL INDEX

Numerics

2-4WD shift solenoid valve	TF-95 , TF-167
4LO switch	TF-230
4WD - Wiring diagram	TF-26 , TF-205
4WD shift switch	TF-68 , TF-234
4WD solenoid valve	TF-91 , TF-167
4WD system description	TF-17 , TF-196
4WD system diagram	TF-21 , TF-199

A

A/C air flow	ATC-30 , MTC-26
A/C compressor clutch removal and installation ..	ATC-159 , MTC-102
A/C compressor mounting	ATC-158 , MTC-101
A/C compressor precaution	ATC-11 , MTC-9
A/C compressor special service tool .	ATC-14 , MTC-12
A/C control operation (auto A/C)	ATC-27
A/C control operation (manual A/C)	MTC-25
A/C diagnostic work flow (auto A/C)	ATC-115
A/C evaporator	ATC-166 , MTC-108
A/C HFC134a (R134a) system identification	ATC-6 , MTC-5
A/C HFC134a (R134a) system precaution	ATC-5 , MTC-4
A/C HFC134a (R134a) system service procedure	ATC-154 , MTC-98
A/C HFC134a (R134a) system service tools ..	ATC-14 , MTC-12
A/C HFC134a system service equipment precaution ...	ATC-11 , MTC-9
A/C lubricant (R134a)	ATC-22 , MTC-19
A/C lubrication oil	ATC-22 , MTC-19
A/C operational check	ATC-53 , ATC-55 , MTC-40
A/C self-diagnoses (auto A/C)	ATC-51 , ATC-115
A/C service data specification	ATC-174 , MTC-113
A/C trouble diagnoses (auto A/C)	ATC-34
A/C trouble diagnoses (manual A/C)	MTC-29
A/C, A - Wiring diagram	ATC-41
A/C, M - Wiring diagram	MTC-35
A/T fluid checking	AT-13 , AT-53 , MA-22
A/T fluid cooler cleaning	AT-15
A/T fluid replacement	AT-14 , MA-24
A/T fluid temperature sensor	AT-133
A/T IND - Wiring diagram	DI-44
A/T indicator	DI-44
A/T self-diagnoses	AT-101
A/T shift lock system	AT-223
A/T shift lock system - Wiring diagram	AT-224
A/T trouble diagnoses	AT-44
ABS - Wiring diagram	BRC-17 , BRC-80
ABS (anti-lock brake system)	BRC-8 , BRC-70
Accelerator control system	ACC-3
Accelerator pedal position (APP) sensor .	EC-582 , EC-588 , EC-602
Accelerator pedal released position learning	EC-77
AF1B1-Wiring diagram	EC-230 , EC-239 , EC-248 , EC-258 , EC-611

AF1B2-Wiring diagram	EC-232 , EC-241 , EC-250 , EC-260 , EC-613
AF1HB1-Wiring diagram	EC-164
AF1HB2-Wiring diagram	EC-166
Aiming adjustment	LT-25 , LT-62
Air bag	SRS-3
Air cleaner and air duct	EM-16
Air cleaner filter	EM-16
Air cleaner filter replacement	MA-17
Air conditioner cut control	EC-28
Air flow meter - See Mass air flow sensor	EC-186 , EC-195
Air fuel ratio sensor 1 ..	EC-227 , EC-237 , EC-246 , EC-255 , EC-609
Air fuel ratio sensor 1 heater	EC-162
Air mix. door motor	ATC-63 , MTC-49
Ambient sensor	ATC-117 , ATC-128
Angular tightening application	EM-5
APPS1 - Wiring diagram	EC-584
APPS2 - Wiring diagram	EC-590
APPS3 - Wiring diagram	EC-604
ASC/BS - Wiring diagram	EC-544
ASC/SW - Wiring diagram	EC-537
ASCBOF - Wiring diagram	EC-622
ASCD	EC-29
ASCD (automatic speed control device)	ACS-2
ASCIND - Wiring diagram	EC-629
ATP switch	TF-116 , TF-255
Audio	AV-6
AUDIO - Wiring diagram	AV-12
AUT/DP - Wiring diagram	SE-15
Auto air conditioner - Wiring diagram	ATC-41
Auto anti-dazzling inside mirror	GW-69
Autolamp	LT-40
Automatic drive positioner	SE-11
Automatic transmission number	GI-50
AV communication line	AV-91

B

B/COMP - Wiring diagram	DI-61
Back door trim	EI-25
BACK/L - Wiring diagram	LT-88
Back-up lamp	LT-88
Ball joint (front)	FSU-15
Basic inspection	EC-70
Battery	SC-4
Battery current sensor .	EC-507 , EC-514 , EC-521 , EC-528
Battery/Starting/Charging System Tester	SC-6 , SC-11 , SC-20
BCM (Body control module)	BCS-3
Block heater	EM-107
Blower motor	ATC-75 , ATC-132 , MTC-57 , MTC-84
Body alignment	BL-137
Body component parts	BL-124
Body construction	BL-136
Body exterior paint color	BL-123
Body mounting	BL-122

ALPHABETICAL INDEX

Body repair	BL-123	Console box - See Instrument panel	IP-10
Body sealing	BL-133	CONSULT for VDC	BRC-29, BRC-93
Boring/horning cylinder block	EM-128	CONSULT general information	GI-37
Bose speaker amp.	AV-7	Control units (terminal arrangement)	PG-80
Brake booster	BR-18	Control valve (A/T)	AT-38
Brake fluid level	MA-30	Control valve (Transfer)	TF-167
Brake hydraulic line	BR-13	Converter housing installation	AT-248, AT-251
Brake inspection	MA-31	COOL/F - Wiring diagram	EC-497
Brake lines and cables inspection	MA-30	Coolant mixture ratio	MA-12
Brake master cylinder	BR-16	Coolant replacement	CO-10, MA-13
Brake switch	EC-558	Cooling circuit (engine)	CO-7
BRK/SW - Wiring diagram	EC-559	Cooling fan	CO-17
Bulb specifications	LT-151	Cooling fan motor	EC-502
Bumper, front	EI-14	Cooling unit (A/C evaporator)	ATC-136, ATC-166, MTC-87, MTC-108
Bumper, rear	EI-15	Corrosion protection	BL-130
C			
Camshaft	EM-75	Crankcase ventilation system - See Positive crankcase ventilation	EC-44
Camshaft inspection	EM-77	Crankshaft	EM-129
Camshaft position sensor (PHASE)	EC-366	Crankshaft position sensor (POS)	EC-359
CAN - Wiring diagram	EC-154, AT-104, LAN-27, LAN-41, LAN-55, LAN-69, LAN-84, LAN-101, LAN-116, LAN-131, LAN-146, LAN-161, LAN-177	Crash zone sensor	SRS-55
CAN communication	EC-153, EC-156	CUR/SE - Wiring diagram	EC-509, EC-516, EC-523, EC-530
Canister-See EVAP canister	EC-35	Cylinder block	EM-107
Center case (Transfer)	TF-167	Cylinder head	EM-92
CHARGE - Wiring diagram	SC-19	Cylinder head bolt tightening	EM-95
Charging system	SC-17	D	
Chassis and body maintenance	MA-21	D/LOCK - Wiring diagram	BL-20
Chassis and body maintenanceSchedule 1	MA-8	Daytime light system	LT-29
Chassis and body maintenanceSchedule 2	MA-10	Daytime running light - See Daytime light system ..	LT-29
CHIME - Wiring diagram	DI-48	DEF - Wiring diagram	GW-73
Circuit breaker	PG-17	Diagnosis sensor unit	SRS-58
Closed loop control	EC-25	Diagnostic trouble code (DTC) for OBD system ..	EC-8
Clutch drum (Transfer)	TF-167	Diagnostic trouble code (DTC) inspection priority chart	EC-87
Clutch pressure switch (Transfer)	TF-167	Differential gear oil replacement	MA-27, MA-28
Coil spring (front)	FSU-10	Dimensions	GI-51
Collision diagnosis	SRS-60	Direct clutch solenoid valve	AT-153, AT-155
Combination lamp, rear, removal and installation ..	LT-105	Display and amp.assembly	MTC-42
Combination meter	DI-4	Display Control Unit-Description	AV-80
Combination switch	LT-79	Display Unit-Description	AV-80
COMBSW - Wiring diagram	LT-79	Dome light - See Interior lamp	LT-115
COMM - Wiring diagram	AV-91	Door glass	GW-57, GW-61
COMPAS - Wiring diagram	DI-28	Door lock	BL-95
Compass	DI-27	Door mirror lamp	LT-115
Component Location (auto A/C)	ATC-37	Door trim	EI-25
Component Location (manual A/C)	MTC-32	Door, front	BL-90, GW-57
Compression pressure	EM-92	Door, rear	BL-90, GW-61
Compressor clutch removal and installation	ATC-159, MTC-102	Drive belt	EM-14
Compressor mounting	ATC-158, MTC-101	Drive chain (Transfer)	TF-149, TF-176, TF-278, TF-280, TF-286
Compressor precaution	ATC-11, MTC-9	Drive shaft (rear)	RAX-7
Compressor special service tool	ATC-14, MTC-12	Driver air bag	SRS-45
Condenser	ATC-165, MTC-106	DTC work support	EC-123
Connecting rod	EM-125	DTRL - Wiring diagram	LT-33
Connecting rod bearing clearance	EM-129	Duct and grilles	ATC-149, MTC-94
Connecting rod bushing clearance	EM-125		

IDX

ALPHABETICAL INDEX

DVD - Wiring Diagram	AV-72	Fluorescent leak detector	ATC-170, MTC-109
DVD Player	AV-77	Fog lamp, front	LT-56
E			
ECM input/output signal	EC-104	Foot lamp	LT-116
ECM power supply	EC-145, EC-472	Freeze frame data	EC-52
ECM/PW - Wiring diagram	EC-473	Front brake solenoid valve	AT-149, AT-151
ECTS - Wiring diagram	EC-209	Front bumper	EI-14
Electric sunroof	RF-10	Front case (Transfer)	TF-149, TF-176, TF-278, TF-280, TF-286
Electric throttle control actuator ..	EM-19, EC-569, EC-580	Front door	BL-90, BL-95, GW-57
Electrical load signal circuit	EC-631	Front Door Trim	EI-25
Electrical units location	PG-73	Front drive shaft (Transfer) ..	TF-149, TF-176, TF-278, TF-280, TF-286, TF-299
Electronic ignition (EI) system	EC-26	Front final drive removal and installation (4WD) ..	FFD-14
Engine control circuit diagram	EC-102	Front fog lamp	LT-56
Engine control component parts location	EC-94	Front passenger air bag	SRS-49
Engine control module (ECM)	EC-476	Front seat	SE-85
Engine control system diagram	EC-23	Front seat belt	SB-3
Engine coolant temperature sensor (ECTS) ...	EC-207, EC-219	Front seat belt pre-tensioner	SRS-3, SRS-57
Engine fail-safe system	EC-89	Front washer	WW-4
Engine oil	LU-7	Front wiper	WW-4
Engine oil filter replacement	LU-10, MA-18	FTS - Wiring diagram	AT-134
Engine oil precautions	GI-7	FTTS - Wiring diagram	EC-331, EC-335
Engine oil replacement	MA-17	Fuel cut control (at no load high engine speed) ..	EC-27
Engine removal	EM-104	Fuel filter replacement	FL-6
Engine room cover	EM-13	Fuel gauge	DI-4
Engine serial number	GI-50	Fuel injection system (Bank 1)	EC-305, EC-317
ETC1 - Wiring diagram	EC-570	Fuel injection system (Bank 2)	EC-305, EC-317
ETC2 - Wiring diagram	EC-565	Fuel injector and fuel tube	EM-35
ETC3 - Wiring diagram	EC-576	Fuel level sensor	EC-455, EC-457, EC-459
EVAP canister	EC-35	Fuel line inspection	FL-5
EVAP canister purge volume control solenoid valve	EC-402	Fuel pressure check	EC-79
EVAP canister vent control valve	EC-409, EC-416	Fuel pressure release	EC-79
EVAP control system (small leak) diagnosis ..	EC-386, EC-439	Fuel pump	EC-640
EVAP control system pressure sensor	EC-422, EC-425, EC-431	Fuel pump and gauge	FL-6
EVAP control system purge flow monitoring diagnosis	EC-381	Fuel system	FL-5
EVAP vapor lines inspection	MA-20	Fuel tank	FL-12
Evaporative emission (EVAP) system	EC-32	Fuel tank temperature sensor	EC-329, EC-334
Evaporator	ATC-166, MTC-108	Fuel tank vacuum relief valve	EC-35
Exhaust manifold	EM-22	FUELB1 - Wiring diagram	EC-307, EC-319
Exhaust system	EX-3	FUELB2 - Wiring diagram	EC-309, EC-321
Exhaust system inspection	EX-3	Fuse	PG-17, PG-86
Expansion valve	ATC-169, MTC-109	Fuse and fusible link box	PG-86
F			
F/FOG - Wiring diagram	LT-58	Fuse block	PG-85
F/PUMP - Wiring diagram	EC-641	Fusible link	PG-17, PG-86
Final drive pre-inspection	FFD-17, RFD-17	G	
Final drive removal and installation	RFD-13	Garage jack and safety stand	GI-42
Flow charts	GI-27	Gauges	DI-4
Fluid temperature sensor (A/T)	AT-133	Generator	SC-17
Fluids	MA-11	Generic scan tool (GST)	EC-125
		Glass	GW-11, GW-57, GW-61
		GPS antenna	AV-79
		Grease	MA-11
		Ground distribution	PG-35

ALPHABETICAL INDEX

H

H/LAMP - Wiring diagram	LT-8
Handling precautions for plastics	BL-152
Harness connector	PG-76
Harness layout	PG-45
Hazard warning lamp	LT-64
Headlamp	LT-5
Heated oxygen sensor 2 (bank 1)	EC-267 , EC-279 , EC-293
Heated oxygen sensor 2 (bank 2)	EC-267 , EC-279 , EC-293
Heated oxygen sensor 2 heater (bank 1)	EC-170
Heated oxygen sensor 2 heater (bank 2)	EC-170
Heated seat	SE-82
Heater and cooling unit (Heater core) .	ATC-136 , ATC-140 , MTC-87 , MTC-89
Heater unit (heater core)	ATC-136 , ATC-140 , MTC-87 , MTC-89
Height (Dimensions)	GI-51
HFC134a (R134a) system identification	ATC-6 , MTC-5
HFC134a (R134a) system precaution ..	ATC-5 , MTC-4
HFC134a (R134a) system service procedure	ATC-154 , MTC-98
HFC134a (R134a) system service tools	ATC-14 , MTC-12
HFC134a system service equipment precaution	ATC-11 , MTC-9
High and low reverse clutch solenoid valve	AT-157 , AT-159
Homelink universal transceiver	BL-119
Horn	WW-48
HORN - Wiring diagram	WW-48
How to erase DTC for OBD system	EC-60
HSEAT - Wiring diagram	SE-83

I

I/MIRR - Wiring diagram	GW-68
IATS - Wiring diagram	EC-204
Identification plate	GI-49
Idle air volume learning	EC-77
Idle speed control (ISC)	EC-463 , EC-465
Ignition coil	EM-32 , EC-646
Ignition control system	EC-646
Ignition key hole illumination	LT-115
IGNSYS - Wiring diagram	EC-647
ILL - Wiring diagram	LT-141
Illumination	LT-135
Illumination control	LT-150
In vehicle sensor	ATC-120 , ATC-129
INJECT - Wiring diagram	EC-634
Injector	EC-633
Input clutch solenoid valve	AT-145 , AT-147
Instrument panel	IP-10
INT/L - Wiring diagram	LT-121
Intake air temperature sensor	EC-202 , EC-222
Intake door control linkage adjustment	MTC-54
Intake door motor	ATC-72 , ATC-74 , ATC-143 , MTC-53 ,

MTC-90

Intake manifold	EM-20
Intake manifold collector	EM-17
Intake sensor ..	ATC-125 , ATC-131 , MTC-80 , MTC-83
Intake valve timing control (Bank 1)	EC-158
Intake valve timing control (Bank 2)	EC-158
Intake valve timing control solenoid valve (Bank 1)	EC-179
Intake valve timing control solenoid valve (Bank 2)	EC-179
Integrated homelink transmitter - See Homelink universal transceiver	BL-119
Interior	EI-27
Interior lamp	LT-115
Interior lamp on-off control	LT-116
Internal gear (Transfer) ..	TF-149 , TF-176 , TF-278 , TF-280 , TF-286
IPDM (Intelligent power distribution module engine room)	PG-18
IVCB1 - Wiring diagram	EC-180
IVCB2 - Wiring diagram	EC-182
IVIS (Infiniti vehicle immobilizer system) precautions ...	GI-3

J

Jacking points	GI-42
Junction box (J/B)	PG-85

K

Key illumination	LT-116
KEYLES - Wiring diagram	BL-45 , BL-46
Knock sensor (KS)	EC-354
KS - Wiring diagram	EC-355

L

Length (Dimensions)	GI-51
License lamp	LT-90
Lifting points	GI-43
Line pressure solenoid valve	AT-128
Line pressure switch (Transfer)	TF-167
Line pressure test (A/T)	AT-54
Liquid gasket application	EM-5 , LU-2 , CO-2
Location of electrical units	PG-73
Low coast brake solenoid valve	AT-161 , AT-163
Low tire pressure warning system	WT-8
Low tire pressure warning system - trouble diagnoses	WT-11
Low tire pressure warning system - Wiring diagram	WT-11
Lubricant (R134a) A/C	ATC-22 , MTC-19
Lubricants	MA-11
Lubrication circuit (engine)	LU-5
Lubrication oil A/C	ATC-22 , MTC-19
Lubrication-locks, hinges and hood latches	MA-33

A
B
C
D
E
F
G
H
J
K
L
IDX

ALPHABETICAL INDEX

M

MAFS - Wiring diagram	EC-189 , EC-197
Magnet clutch .	ATC-96 , ATC-159 , MTC-65 , MTC-102
MAIN - Wiring diagram	EC-145 , AT-173
Main oil pump (Transfer)	TF-167
Mainshaft (Transfer)	TF-167 , TF-278 , TF-280 , TF-286
Maintenance (engine)Schedule 1	MA-7
Maintenance (engine)Schedule 2	MA-9
Major overhaul (Final drive)	FFD-16 , RFD-16
Major overhaul (Transfer)	TF-146 , TF-278
Malfunction indicator lamp (MIL)	EC-61
Manual air conditioner - Wiring diagram	MTC-35
Map lamp	LT-116
Mass air flow sensor (MAFS)	EC-186 , EC-195
Meter	DI-4
METER - Wiring diagram	DI-8
MIL data link connectors circuit	EC-673
MIL/DL - Wiring diagram	EC-673
MIRROR - Wiring diagram	GW-88
Misfire	EC-345
Mode door control linkage adjustment	MTC-46
Mode door motor	ATC-59 , ATC-61 , ATC-144 , MTC-45 , MTC-91
Model variation	GI-48
Multiport fuel injection (MFI) system	EC-24
Multiport fuel injection precautions	GI-6
Multi-remote control system - See Remote keyless entry system	BL-41

N

NATS - Wiring diagram	BL-103
NAVI - Wiring diagram	AV-83
NAVI Control Unit	AV-80 , AV-159
Neutral-4LO switch	TF-64
NONDTC - Wiring diagram	AT-181
NVH troubleshooting (AX)	FAX-4
NVH troubleshooting (EM)	EM-11
NVH troubleshooting (Final drive)	FFD-6 , RFD-7
NVH troubleshooting (Propeller shaft)	PR-3
NVH troubleshooting (RAX)	RAX-4
NVH troubleshooting (RSU)	RSU-4
NVH troubleshooting (ST)	PS-5
NVH troubleshooting (Transfer)	TF-12 , TF-192
NVH troubleshooting (WT)NVH troubleshooting (WT) .	WT-4
NVIS (Nissan vehicle immobilizer system)	BL-100
NVIS (Nissan vehicle immobilizer system) precautions	GI-3

O

O2H2B1 - Wiring diagram	EC-172
O2H2B2 - Wiring diagram	EC-174
O2S2B1 - Wiring diagram ...	EC-270 , EC-282 , EC-296
O2S2B2 - Wiring diagram ...	EC-272 , EC-284 , EC-298
Oil cooler (engine)	LU-11
Oil filter	LU-10

Oil filter (Transfer)	TF-143
Oil pan (engine)	EM-27
Oil pressure (engine)	LU-8
Oil pump (A/T)	AT-281
Oil pump (engine)	LU-13
Oil pump regulator valve (engine)	LU-13
Oil seal replacement (engine)	EM-89
Oil seal replacement (front of final drive)	FFD-9 , RFD-10
Oil seal replacement (side of final drive)	FFD-12 , RFD-12
On board diagnostic system	EC-47
ORVR (On-board Refueling Vapor Recovery) ..	EC-39
Overheat	EC-493
Oversize piston	EM-127

P

P/SCKT - Wiring diagram	WW-46
Pantograph jack	GI-42
Park/Neutral position switch	EC-485
Park/neutral position switch (A/T)	AT-111
Parking brake control	PB-4
PCV (positive crankcase ventilation)	EC-44
Personal lamp	LT-116
PGC/V - Wiring diagram	EC-396 , EC-404
PHSB1 - Wiring diagram	EC-368
PHSB2 - Wiring diagram	EC-370
Pilot bushing replacement - See Pilot converter ...	EM-108
Piston assembly	EM-118
Piston pin inspection	EM-123
Piston ring inspection	EM-124
Piston to bore clearance	EM-127
Planetary carrier (Transfer) ..	TF-149 , TF-176 , TF-278 , TF-280 , TF-286 , TF-295
PNP/SW - Wiring diagram	EC-487 , AT-112
POS - Wiring diagram	EC-361
POWER - Wiring diagram	PG-6
Power door lock	BL-16
Power door mirror	GW-88
Power seat	SE-78
Power steering fluid level	MA-32
Power steering gear	PS-15
Power steering oil pump	PS-20
Power steering pressure (PSP) sensor	EC-467
Power steering system bleeding	PS-6
Power supply routing	PG-4
Power window	GW-15
PRE/SE - Wiring diagram	EC-427 , EC-433
Precautions (General)	GI-4
Precautions in repairing high strength steel ..	BL-155
Pressure switch 1	AT-151 , AT-165
Pressure switch 2	AT-163
Pressure switch 3	AT-147 , AT-167
Pressure switch 5	AT-155 , AT-169
Pressure switch 6	AT-159 , AT-171
Pressure test (A/T)	AT-54
Propeller shaft	PR-4 , PR-9

ALPHABETICAL INDEX

Propeller shaft inspection	MA-26		Shock absorber (front)	FSU-10
Propeller shaft on vehicle service	PR-9		Shock absorber (rear)	RSU-13
Propeller shaft vibration	PR-4, PR-9		Side air bag (satellite) sensor	SRS-56
PS/SEN - Wiring diagram	EC-468		Side curtain air bag	SRS-53
R				
Radiator	CO-14		Side trim	EI-27
Radio - See Audio	AV-6		SMJ (super multiple junction)	PG-83
Rear axle	RAX-5		Spare tire size	GI-51
Rear bumper	EI-15		Spark plug	EM-33
Rear case (Transfer) TF-148, TF-181, TF-278, TF-280, TF-286			Spark plug replacement	EM-33, MA-19
Rear combination lamp removal and installation ...	LT-105		Specification value	EC-134
Rear cover packing replacement diff.	FFD-13		Speedometer	DI-4
Rear door	BL-90, GW-61		Spiral cable	SRS-47
Rear seat	SE-96		SROOF - Wiring diagram	RF-13
Rear seat belt	SB-5		SRS - See Supplemental Restraint System	SRS-5
Rear suspension	RSU-5		SRS - Wiring diagram	SRS-12
Rear washer	WW-31		SRS Trouble diagnoses	SRS-8
Rear window defogger	GW-70		Stabilizer bar (front)	FSU-12
Rear wiper	WW-31		Stabilizer bar (rear)	RSU-20
Refrigerant connection precaution	ATC-6, MTC-5		Stall test (A/T)	AT-53
Refrigerant discharging evacuating charging ATC-154, MTC-98			Standardized relay	PG-81
Refrigerant general precaution	ATC-6, MTC-5		START - Wiring diagram	SC-9
Refrigerant lines ATC-154, ATC-162, ATC-163, MTC-98, MTC-105, MTC-106			Starting system	SC-8
Refrigerant pressure sensor .	EC-659, ATC-165, MTC-106		Steering gear, linkage and transfer gear inspection	
Relay box	PG-87		MA-31	
Remote keyless entry system	BL-41		Steering linkage	PS-15
Removal and installation (A/T)	AT-246, AT-249		Steering wheel and column	PS-8
Removal and installation (Transfer) ...	TF-145, TF-277		Step lamp	LT-116
Revolution sensor (A/T)	AT-117		Stop lamp	LT-85
Road wheel size	GI-51		Stop lamp switch	EC-558
Rocker cover	EM-41		STOP/L - Wiring diagram	LT-86
Room lamp	LT-115		Strut (front)	FSU-10
Room lamp - See Interior lamp	LT-115		STSIG - Wiring diagram	AT-107
ROOM/L - Wiring diagram	LT-121		Sub-oil pump (Transfer)	TF-167
RP/SEN - Wiring diagram	EC-660		Sun gear (Transfer) TF-149, TF-176, TF-278, TF-280, TF-286	
S				
SAE J1979 - Service \$01 - 09	EC-47		Sun roof, electric	RF-10
SEAT - Wiring diagram	SE-78, SE-79		Sunload sensor	ATC-123
Seat belt inspection	SB-9, MA-34		Sunroof	RF-24
Seat belt pre-tensioner	SRS-57		Supplemental Restraint System	SRS-5
Seat belt, front	SB-3		Symbols and abbreviations	GI-10, GI-22
Seat belt, rear	SB-5		Symptom matrix chart	EC-90
Seat, front	SE-85		System readiness test (SRT) code	EC-53
Seat, rear	SE-96			
Self-diagnosis (Transfer)	TF-52, TF-217			
SEN/PW - Wiring diagram	EC-480			
SHIFT - Wiring diagram	AT-224			
Shift control (Transfer) ..	TF-149, TF-176, TF-278, TF-280, TF-286, TF-301			
Shift lock system	AT-223			
T				
T/TOW - Wiring diagram			T/TOW - Wiring diagram	LT-110
Tachometer			Tachometer	DI-4
Tail lamp			Tail lamp	LT-90
TAIL/L - Wiring diagram			TAIL/L - Wiring diagram	LT-93
TCM circuit diagram			TCM circuit diagram	AT-52
TCM inspection table			TCM inspection table	AT-86
TCS - Wiring diagram			TCS - Wiring diagram	BRC-17, BRC-80
TCS (traction control system)			TCS (traction control system)	BRC-8, BRC-70
TCS component parts and connector location			TCS component parts and connector location	BRC-15, BRC-78
Thermometer			TCS wheel sensors	BRC-15, BRC-78
			Theft warning system - See Vehicle security (Theft warning) system	BL-68
			Thermometer	DI-27

IDX

ALPHABETICAL INDEX

Thermostat	CO-24	Vehicle speed sensor (VSS)	EC-461 , EC-552
Three way catalyst	EM-22	VEHSEC - Wiring diagram	BL-72
Three way catalyst function (Bank 1)	EC-375	VENT/V - Wiring diagram	EC-411 , EC-418
Three way catalyst function (Bank 2)	EC-375	VIAS - Wiring diagram	EC-666
Three way catalyst precautions	GI-5	VIAS/V - Wiring diagram	EC-554
Throttle control motor	EC-575	VIN registration	EC-76
Throttle control motor relay	EC-563	Viscosity number (SAE)	MA-12
Throttle position sensor (TPS) ..	EC-212 , EC-338 , EC-503 , EC-505 , EC-595	VSS A/T - Wiring diagram	AT-119
Tie-rod	PS-15	W	
Timing chain	EM-55	W/ANT - Wiring diagram	AV-67
Tire rotation	MA-30	Wait detection switch	TF-71 , TF-237
Tire size	GI-51	WARN - Wiring diagram	DI-34
Torque converter installation	AT-248 , AT-251	Warning chime	DI-46
Torque convertor clutch solenoid valve ...	AT-124 , AT-126	Warning lamps	DI-33
Towing point	GI-45	Washer, front	WW-4
TPS1 - Wiring diagram	EC-340	Washer, rear	WW-31
TPS2 - Wiring diagram	EC-214	Water pump	CO-19
TPS3 - Wiring diagram	EC-597	Water temperature gauge	DI-4
Traction control system - Wiring diagram	BRC-17 , BRC-80	Wheel alignment (front)	FSU-6
Transfer control device	TF-78 , TF-82 , TF-138 , TF-244 , TF-273	Wheel alignment (rear)	RSU-6
Transfer control unit inspection table	TF-37 , TF-211	Wheel balance	MA-28
Transfer dropping resistor	TF-91	Wheel bearing (front)	FAX-5
Transfer fluid temperature sensor	TF-105 , TF-167	Wheel bearing (rear)	RAX-5
Transfer motor	TF-103 , TF-142	Wheel hub (rear)	RAX-5
Transfer motor relay	TF-103	Wheel size	GI-51
Transfer oil replacement	MA-25	Wheelbase (Dimensions)	GI-51
Transfer serial number	GI-50	Width (Dimensions)	GI-51
Transmission serial number	GI-50	WINDOW - Wiring diagram	GW-21
Tread-FR&RR (Dimensions)	GI-51	Window antenna	AV-66
Trim	EI-27	Window, door	GW-57 , GW-61
TRNSCV - Wiring diagram	BL-119	Windshield	GW-11
Trouble diagnoses	GI-10	WIP/R - Wiring diagram	WW-33
Turbine revolution sensor	AT-115	WIPER - Wiring diagram	WW-8
TURN - Wiring diagram	LT-67	Wiper, front	WW-4
Turn signal lamp	LT-64	Wiper, rear	WW-31
Two trip detection logic	EC-47	Wiring Diagram (Cell code) list	PG-70
Two-pole lift	GI-43	Wiring diagrams	GI-15
		WT-T/WARN - Wiring diagram	WT-11

V

Vacuum hose (brake system)	BR-21
Vacuum hose drawing (Engine control)	EC-101
Valve clearance	EM-84
Valve guide	EM-99 , EM-100
Valve lifter	EM-79
Valve seat	EM-101
Valve spring	EM-102 , EM-103
Vanity mirror lamp	LT-115
Variable induction air control system (VIAS) ..	EC-553 , EC-664
VDC (vehicle dynamics control)	BRC-8 , BRC-70
VDC -Wiring diagram	BRC-17 , BRC-80
Vehicle identification number	GI-49
Vehicle recovery (freeing a stuck vehicle)	GI-45
Vehicle security (theft warning) system	BL-68