

SECTION **IDX**
ALPHABETICAL INDEX

A
B
C
D
E
F
G
H
I
J
K
L

IDX

ALPHABETICAL INDEX

Numerics

2-4WD shift solenoid valve [TF-95](#), [TF-167](#)
4LO switch [TF-230](#)
4WD - Wiring diagram [TF-26](#), [TF-205](#)
4WD shift switch [TF-68](#), [TF-234](#)
4WD solenoid valve [TF-91](#), [TF-167](#)
4WD system description [TF-17](#), [TF-196](#)
4WD system diagram [TF-21](#), [TF-199](#)

A

A/C air flow [ATC-30](#), [MTC-26](#)
A/C compressor clutch removal and installation .. [ATC-163](#), [MTC-103](#)
A/C compressor mounting [ATC-162](#), [MTC-102](#)
A/C compressor precaution [ATC-11](#), [MTC-9](#)
A/C compressor special service tool . [ATC-14](#), [MTC-12](#)
A/C control operation (auto A/C) [ATC-27](#)
A/C control operation (manual A/C) [MTC-25](#)
A/C diagnostic work flow (auto A/C) [ATC-118](#)
A/C evaporator [ATC-170](#), [MTC-109](#)
A/C HFC134a (R134a) system identification [ATC-6](#), [MTC-5](#)
A/C HFC134a (R134a) system precaution [ATC-5](#), [MTC-4](#)
A/C HFC134a (R134a) system service procedure [ATC-158](#), [MTC-99](#)
A/C HFC134a (R134a) system service tools .. [ATC-14](#), [MTC-12](#)
A/C HFC134a system service equipment precaution ... [ATC-11](#), [MTC-9](#)
A/C lubricant (R134a) [ATC-22](#), [MTC-19](#)
A/C lubrication oil [ATC-22](#), [MTC-19](#)
A/C operational check [ATC-52](#), [ATC-54](#), [MTC-39](#)
A/C self-diagnoses (auto A/C) [ATC-50](#), [ATC-118](#)
A/C service data specification [ATC-178](#), [MTC-114](#)
A/C trouble diagnoses (auto A/C) [ATC-34](#)
A/C trouble diagnoses (manual A/C) [MTC-29](#)
A/C, A - Wiring diagram [ATC-40](#)
A/C, M - Wiring diagram [MTC-34](#)
A/T fluid checking [AT-12](#), [AT-52](#), [MA-22](#)
A/T fluid cooler cleaning [AT-15](#)
A/T fluid replacement [AT-14](#), [MA-24](#)
A/T fluid temperature sensor [AT-127](#)
A/T IND - Wiring diagram [DI-39](#)
A/T indicator [DI-39](#)
A/T self-diagnoses [AT-95](#)
A/T shift lock system [AT-217](#)
A/T shift lock system - Wiring diagram [AT-218](#)
A/T trouble diagnoses [AT-43](#)
ABS - Wiring diagram [BRC-17](#), [BRC-79](#)
ABS (anti-lock brake system) [BRC-8](#), [BRC-69](#)
Accelerator control system [ACC-3](#)
Accelerator pedal position (APP) sensor . [EC-579](#), [EC-585](#), [EC-599](#)
Accelerator pedal released position learning [EC-77](#)
AF1B1-Wiring diagram [EC-231](#), [EC-239](#), [EC-247](#), [EC-256](#), [EC-608](#)

AF1B2-Wiring diagram [EC-233](#), [EC-241](#), [EC-249](#), [EC-258](#), [EC-610](#)
AF1HB1-Wiring diagram [EC-165](#)
AF1HB2-Wiring diagram [EC-167](#)
Aiming adjustment [LT-23](#), [LT-58](#)
Air bag [SRS-3](#)
Air cleaner and air duct [EM-16](#)
Air cleaner filter [EM-16](#)
Air cleaner filter replacement [MA-17](#)
Air conditioner cut control [EC-28](#)
Air flow meter - See Mass air flow sensor [EC-187](#), [EC-196](#)
Air fuel ratio sensor 1 .. [EC-228](#), [EC-237](#), [EC-245](#), [EC-253](#), [EC-606](#)
Air fuel ratio sensor 1 heater [EC-163](#)
Air mix. door motor [ATC-63](#), [MTC-47](#)
Ambient sensor [ATC-121](#), [ATC-132](#)
Angular tightening application [EM-5](#)
APPS1 - Wiring diagram [EC-581](#)
APPS2 - Wiring diagram [EC-587](#)
APPS3 - Wiring diagram [EC-601](#)
ASC/BS - Wiring diagram [EC-541](#)
ASC/SW - Wiring diagram [EC-534](#)
ASCBOF - Wiring diagram [EC-619](#)
ASCD [EC-29](#)
ASCD (automatic speed control device) [ACS-2](#)
ASCIND - Wiring diagram [EC-626](#)
ATP switch [TF-116](#), [TF-255](#)
Audio [AV-6](#)
AUDIO - Wiring diagram [AV-12](#)
AUT/DP - Wiring diagram [SE-15](#)
Auto air conditioner - Wiring diagram [ATC-40](#)
Auto anti-dazzling inside mirror [GW-73](#)
Autolamp [LT-38](#)
Automatic drive positioner [SE-11](#)
Automatic transmission number [GI-50](#)
AV communication line [AV-91](#)

B

B/COMP - Wiring diagram [DI-54](#)
Back door trim [EI-26](#)
BACK/L - Wiring diagram [LT-81](#)
Back-up lamp [LT-81](#)
Ball joint (front) [FSU-15](#)
Basic inspection [EC-70](#)
Battery [SC-4](#)
Battery current sensor . [EC-504](#), [EC-511](#), [EC-518](#), [EC-525](#)
Battery/Starting/Charging System Tester [SC-6](#), [SC-13](#), [SC-22](#)
BCM (Body control module) [BCS-3](#)
Block heater [EM-107](#)
Blower motor [ATC-76](#), [ATC-136](#), [MTC-56](#), [MTC-85](#)
Body alignment [BL-131](#)
Body component parts [BL-118](#)
Body construction [BL-130](#)
Body exterior paint color [BL-117](#)
Body mounting [BL-116](#)

ALPHABETICAL INDEX

E

ECM input/output signal [EC-105](#)
ECM power supply [EC-146](#), [EC-468](#)
ECM/PW - Wiring diagram [EC-469](#)
ECTS - Wiring diagram [EC-210](#)
Electric sunroof [RF-10](#)
Electric throttle control actuator .. [EM-19](#), [EC-566](#), [EC-577](#)
Electrical load signal circuit [EC-628](#)
Electrical units location [PG-73](#)
Electronic ignition (EI) system [EC-26](#)
Engine control circuit diagram [EC-103](#)
Engine control component parts location [EC-95](#)
Engine control module (ECM) [EC-472](#)
Engine control system diagram [EC-23](#)
Engine coolant temperature sensor (ECTS) ... [EC-208](#), [EC-220](#)
Engine fail-safe system [EC-90](#)
Engine oil [LU-7](#)
Engine oil filter replacement [LU-10](#), [MA-18](#)
Engine oil precautions [GI-7](#)
Engine removal [EM-104](#)
Engine room cover [EM-13](#)
Engine serial number [GI-50](#)
ETC1 - Wiring diagram [EC-567](#)
ETC2 - Wiring diagram [EC-562](#)
ETC3 - Wiring diagram [EC-573](#)
EVAP canister [EC-35](#)
EVAP canister purge volume control solenoid valve [EC-398](#)
EVAP canister vent control valve [EC-405](#), [EC-412](#)
EVAP control system (small leak) diagnosis .. [EC-382](#), [EC-435](#)
EVAP control system pressure sensor [EC-418](#), [EC-421](#), [EC-427](#)
EVAP control system purge flow monitoring diagnosis [EC-377](#)
EVAP vapor lines inspection [MA-20](#)
Evaporative emission (EVAP) system [EC-32](#)
Evaporator [ATC-170](#), [MTC-109](#)
Exhaust manifold [EM-22](#)
Exhaust system [EX-3](#)
Exhaust system inspection [EX-3](#)
Expansion valve [ATC-173](#), [MTC-110](#)

F

F/FOG - Wiring diagram [LT-53](#)
F/PUMP - Wiring diagram [EC-638](#)
Final drive pre-inspection [FFD-16](#), [RFD-19](#)
Final drive removal and installation [RFD-15](#)
Flow charts [GI-27](#)
Fluid temperature sensor (A/T) [AT-127](#)
Fluids [MA-11](#)
Fluorescent leak detector [ATC-174](#), [MTC-110](#)
Fog lamp, front [LT-51](#)
Foot lamp [LT-109](#)
Freeze frame data [EC-52](#)

Front brake solenoid valve [AT-143](#), [AT-145](#)
Front bumper [EI-14](#)
Front case (Transfer) [TF-149](#), [TF-176](#), [TF-278](#), [TF-280](#), [TF-286](#)
Front door [BL-84](#), [BL-89](#), [GW-61](#)
Front Door Trim [EI-26](#)
Front drive shaft (Transfer) .. [TF-149](#), [TF-176](#), [TF-278](#), [TF-280](#), [TF-286](#), [TF-299](#)
Front final drive removal and installation (4WD) . [FFD-13](#)
Front fog lamp [LT-51](#)
Front passenger air bag [SRS-42](#)
Front seat [SE-84](#)
Front seat belt [SB-3](#)
Front seat belt pre-tensioner [SRS-3](#), [SRS-50](#)
Front washer [WW-4](#)
Front wiper [WW-4](#)
FTS - Wiring diagram [AT-128](#)
FTTS - Wiring diagram [EC-328](#), [EC-332](#)
Fuel cut control (at no load high engine speed) [EC-27](#)
Fuel filter replacement [FL-6](#)
Fuel gauge [DI-4](#)
Fuel injection system (Bank 1) [EC-303](#), [EC-315](#)
Fuel injection system (Bank 2) [EC-303](#), [EC-315](#)
Fuel injector and fuel tube [EM-35](#)
Fuel level sensor [EC-451](#), [EC-453](#), [EC-455](#)
Fuel line inspection [FL-5](#)
Fuel pressure check [EC-79](#)
Fuel pressure release [EC-79](#)
Fuel pump [EC-637](#)
Fuel pump and gauge [FL-6](#)
Fuel system [FL-5](#)
Fuel tank [FL-12](#)
Fuel tank temperature sensor [EC-326](#), [EC-331](#)
Fuel tank vacuum relief valve [EC-35](#)
FUELB1 - Wiring diagram [EC-305](#), [EC-317](#)
FUELB2 - Wiring diagram [EC-307](#), [EC-319](#)
Fuse [PG-17](#), [PG-86](#)
Fuse and fusible link box [PG-86](#)
Fuse block [PG-85](#)
Fusible link [PG-17](#), [PG-86](#)

G

Garage jack and safety stand [GI-42](#)
Gauges [DI-4](#)
Generator [SC-19](#)
Generic scan tool (GST) [EC-126](#)
Glass [GW-11](#), [GW-61](#), [GW-65](#)
Glove box lamp [LT-127](#)
GPS antenna [AV-79](#)
Grease [MA-11](#)
Ground distribution [PG-33](#)

H

H/LAMP - Wiring diagram [LT-8](#)
Handling precautions for plastics [BL-146](#)
Harness connector [PG-76](#)

ALPHABETICAL INDEX

[Mainshaft \(Transfer\) TF-167, TF-278, TF-280, TF-286](#)
[Maintenance \(engine\)Schedule 1 MA-7](#)
[Maintenance \(engine\)Schedule 2 MA-9](#)
[Major overhaul \(Final drive\) FFD-15, RFD-18](#)
[Major overhaul \(Transfer\) TF-146, TF-278](#)
[Malfunction indicator lamp \(MIL\) EC-61](#)
[Manual air conditioner - Wiring diagram MTC-34](#)
[Map lamp LT-109](#)
[Mass air flow sensor \(MAFS\) EC-187, EC-196](#)
[Meter DI-4](#)
[METER - Wiring diagram DI-8](#)
[MIL data link connectors circuit EC-670](#)
[MIL/DL - Wiring diagram EC-670](#)
[MIRROR - Wiring diagram GW-90](#)
[Misfire EC-342](#)
[Mode door control linkage adjustment MTC-44](#)
[Mode door motor ATC-58, ATC-61, ATC-148, MTC-43, MTC-92](#)
[Model variation GI-48](#)
[Multiport fuel injection \(MFI\) system EC-24](#)
[Multiport fuel injection precautions GI-6](#)
[Multi-remote control system - See Remote keyless entry system BL-39](#)

N

[NATS - Wiring diagram BL-97](#)
[NAVI - Wiring diagram AV-83](#)
[NAVI Control Unit AV-80, AV-151](#)
[Neutral-4LO switch TF-64](#)
[NONDTC - Wiring diagram AT-175](#)
[NVH troubleshooting \(AX\) FAX-4](#)
[NVH troubleshooting \(EM\) EM-11](#)
[NVH troubleshooting \(Final drive\) FFD-6, RFD-7](#)
[NVH troubleshooting \(Propeller shaft\) PR-3](#)
[NVH troubleshooting \(RAX\) RAX-4](#)
[NVH troubleshooting \(RSU\) RSU-4](#)
[NVH troubleshooting \(ST\) PS-5](#)
[NVH troubleshooting \(Transfer\) TF-12, TF-192](#)
[NVH troubleshooting \(WT\)NVH troubleshooting \(WT\) WT-4](#)
[NVIS \(Nissan vehicle immobilizer system\) BL-94](#)
[NVIS \(Nissan vehicle immobilizer system\) precautions GI-3](#)

O

[O2H2B1 - Wiring diagram EC-173](#)
[O2H2B2 - Wiring diagram EC-175](#)
[O2S2B1 - Wiring diagram EC-268, EC-280, EC-294](#)
[O2S2B2 - Wiring diagram EC-270, EC-282, EC-296](#)
[Oil cooler \(engine\) LU-11](#)
[Oil filter LU-10](#)
[Oil filter \(Transfer\) TF-143](#)
[Oil pan \(engine\) EM-27](#)
[Oil pressure \(engine\) LU-8](#)
[Oil pump \(A/T\) AT-276](#)
[Oil pump \(engine\) LU-13](#)
[Oil pump regulator valve \(engine\) LU-13](#)

[Oil seal replacement \(engine\) EM-89](#)
[Oil seal replacement \(front of final drive\) FFD-9, RFD-10](#)
[Oil seal replacement \(side of final drive\) FFD-11, RFD-12](#)
[On board diagnostic system EC-47](#)
[ORVR \(On-board Refueling Vapor Recovery\) EC-39](#)
[Overheat EC-488](#)
[Oversize piston EM-127](#)

P

[P/SCKT - Wiring diagram WW-42](#)
[Pantograph jack GI-42](#)
[Park/Neutral position switch EC-480](#)
[Park/neutral position switch \(A/T\) AT-105](#)
[Parking brake control PB-4](#)
[PCV \(positive crankcase ventilation\) EC-44](#)
[Personal lamp LT-109](#)
[PGC/V - Wiring diagram EC-392, EC-400](#)
[PHSB1 - Wiring diagram EC-364](#)
[PHSB2 - Wiring diagram EC-366](#)
[Pilot bushing replacement - See Pilot converter EM-108](#)
[Piston assembly EM-118](#)
[Piston pin inspection EM-123](#)
[Piston ring inspection EM-124](#)
[Piston to bore clearance EM-127](#)
[Planetary carrier \(Transfer\) TF-149, TF-176, TF-278, TF-280, TF-286, TF-295](#)
[PNP/SW - Wiring diagram EC-482, AT-106](#)
[POS - Wiring diagram EC-357](#)
[POWER - Wiring diagram PG-6](#)
[Power door lock BL-16](#)
[Power door mirror GW-90](#)
[Power seat SE-77](#)
[Power steering fluid level MA-33](#)
[Power steering gear PS-15](#)
[Power steering oil pump PS-20](#)
[Power steering pressure \(PSP\) sensor EC-463](#)
[Power steering system bleeding PS-6](#)
[Power supply routing PG-4](#)
[Power window GW-15](#)
[PRE/SE - Wiring diagram EC-423, EC-429](#)
[Precautions \(General\) GI-4](#)
[Precautions in repairing high strength steel BL-149](#)
[Pressure switch 1 AT-145, AT-159](#)
[Pressure switch 2 AT-157](#)
[Pressure switch 3 AT-141, AT-161](#)
[Pressure switch 5 AT-149, AT-163](#)
[Pressure switch 6 AT-153, AT-165](#)
[Pressure test \(A/T\) AT-53](#)
[Propeller shaft PR-4, PR-9](#)
[Propeller shaft inspection MA-27](#)
[Propeller shaft on vehicle service PR-9](#)
[Propeller shaft vibration PR-4, PR-9](#)
[PS/SEN - Wiring diagram EC-464](#)

ALPHABETICAL INDEX

R

| | |
|--|--|
| Radiator | CO-14 |
| Radio - See Audio | AV-6 |
| Rear axle | RAX-5 |
| Rear bumper | EI-15 |
| Rear case (Transfer) TF-148 , TF-181 , TF-278 , TF-280 , TF-286 | |
| Rear combination lamp removal and installation | LT-98 |
| Rear door | BL-84 , GW-65 |
| Rear seat | SE-95 |
| Rear seat belt | SB-6 |
| Rear suspension | RSU-5 |
| Rear washer | WW-28 |
| Rear window defogger | GW-74 |
| Rear wiper | WW-28 |
| Refrigerant connection precaution | ATC-6 , MTC-5 |
| Refrigerant discharging evacuating charging | ATC-158 , MTC-99 |
| Refrigerant general precaution | ATC-6 , MTC-5 |
| Refrigerant lines ATC-158 , ATC-166 , ATC-167 , MTC-99 , MTC-106 , MTC-107 | |
| Refrigerant pressure sensor . | EC-656 , ATC-169 , MTC-107 |
| Relay box | PG-87 |
| Remote keyless entry system | BL-39 |
| Remove and installation (A/T) | AT-240 , AT-243 |
| Removal and installation (Transfer) ... | TF-145 , TF-277 |
| Revolution sensor (A/T) | AT-111 |
| Road wheel size | GI-51 |
| Rocker cover | EM-41 |
| Room lamp | LT-108 |
| Room lamp - See Interior lamp | LT-108 |
| ROOM/L - Wiring diagram | LT-114 |
| RP/SEN - Wiring diagram | EC-657 |

S

| | |
|---------------------------------------|---|
| SAE J1979 - Service \$01 - 09 | EC-47 |
| SEAT - Wiring diagram | SE-77 , SE-78 |
| Seat belt inspection | SB-10 , MA-35 |
| Seat belt pre-tensioner | SRS-50 |
| Seat belt, front | SB-3 |
| Seat belt, rear | SB-6 |
| Seat, front | SE-84 |
| Seat, rear | SE-95 |
| Self-diagnosis (Transfer) | TF-52 , TF-217 |
| SEN/PW - Wiring diagram | EC-476 |
| SHIFT - Wiring diagram | AT-218 |
| Shift control (Transfer) .. | TF-149 , TF-176 , TF-278 , TF-280 , TF-286 , TF-301 |
| Shift lock system | AT-217 |
| Shock absorber (front) | FSU-10 |
| Shock absorber (rear) | RSU-13 |
| Side air bag (satellite) sensor | SRS-49 |
| Side curtain air bag | SRS-46 |
| Side trim | EI-28 |
| SMJ (super multiple junction) | PG-83 |
| Spare tire size | GI-51 |

| | |
|--|---|
| Spark plug replacement | EM-33 , MA-19 |
| Specification value | EC-135 |
| Speedometer | DI-4 |
| Spiral cable | SRS-40 |
| SROOF - Wiring diagram | RF-13 |
| SRS - See Supplemental Restraint System | SRS-5 |
| SRS - Wiring diagram | SRS-13 |
| SRS Trouble diagnoses | SRS-9 |
| Stabilizer bar (front) | FSU-12 |
| Stabilizer bar (rear) | RSU-20 |
| Stall test (A/T) | AT-52 |
| Standardized relay | PG-81 |
| START - Wiring diagram | SC-11 |
| Starting system | SC-10 |
| Steering gear, linkage and transfer gear inspection | MA-32 |
| Steering linkage | PS-15 |
| Steering wheel and column | PS-8 |
| Step lamp | LT-109 |
| Stop lamp | LT-78 |
| Stop lamp switch | EC-555 |
| STOP/L - Wiring diagram | LT-79 |
| Strut (front) | FSU-10 |
| STSIG - Wiring diagram | AT-101 |
| Sub-oil pump (Transfer) | TF-167 |
| Sun gear (Transfer) TF-149 , TF-176 , TF-278 , TF-280 , TF-286 | |
| Sun roof, electric | RF-10 |
| Sunload sensor | ATC-127 |
| Sunroof | RF-23 |
| Supplemental Restraint System | SRS-5 |
| Symbols and abbreviations | GI-10 , GI-22 |
| Symptom matrix chart | EC-91 |
| System readiness test (SRT) code | EC-53 |

T

| | |
|--|---|
| T/TOW - Wiring diagram | LT-103 |
| Tachometer | DI-4 |
| Tail lamp | LT-83 |
| TAIL/L - Wiring diagram | LT-86 |
| TCM circuit diagram | AT-51 |
| TCM inspection table | AT-85 |
| TCS - Wiring diagram | BRC-17 , BRC-79 |
| TCS (traction control system) | BRC-8 , BRC-69 |
| TCS component parts and connector location | BRC-15 , BRC-77 |
| TCS wheel sensors | BRC-15 , BRC-77 |
| Theft warning system - See Vehicle security (Theft warning) system | BL-64 |
| Thermometer | DI-24 |
| Thermostat | CO-24 |
| Three way catalyst | EM-22 |
| Three way catalyst function (Bank 1) | EC-371 |
| Three way catalyst function (Bank 2) | EC-371 |
| Three way catalyst precautions | GI-5 |
| Throttle control motor | EC-572 |
| Throttle control motor relay | EC-560 |
| Throttle position sensor (TPS) ... | EC-213 , EC-335 , EC- |

A
B
C
D
E
F
G
H
I
J
K

L

IDX

ALPHABETICAL INDEX

[498](#), [EC-500](#), [EC-592](#)

Tie-rod [PS-15](#)
Timing chain [EM-55](#)
Tire rotation [MA-31](#)
Tire size [GI-51](#)
Torque converter installation [AT-242](#), [AT-245](#)
Torque convertor clutch solenoid valve ... [AT-118](#), [AT-120](#)
Towing point [GI-45](#)
TPS1 - Wiring diagram [EC-337](#)
TPS2 - Wiring diagram [EC-215](#)
TPS3 - Wiring diagram [EC-594](#)
Traction control system - Wiring diagram [BRC-17](#),
[BRC-79](#)
Transfer control device [TF-78](#), [TF-82](#), [TF-138](#), [TF-244](#),
[TF-273](#)
Transfer control unit inspection table [TF-37](#), [TF-211](#)
Transfer dropping resistor [TF-91](#)
Transfer fluid temperature sensor [TF-105](#), [TF-167](#)
Transfer motor [TF-103](#), [TF-142](#)
Transfer motor relay [TF-103](#)
Transfer oil replacement [MA-26](#)
Transfer serial number [GI-50](#)
Transmission serial number [GI-50](#)
Tread-FR&RR (Dimensions) [GI-51](#)
Trim [EI-28](#)
TRNSCV - Wiring diagram [BL-113](#)
Trouble diagnoses [GI-11](#)
Turbine revolution sensor [AT-109](#)
TURN - Wiring diagram [LT-63](#)
Turn signal lamp [LT-60](#)
Two trip detection logic [EC-47](#)
Two-pole lift [GI-43](#)

V

Vacuum hose (brake system) [BR-21](#)
Vacuum hose drawing (Engine control) [EC-102](#)
Valve clearance [EM-84](#)
Valve guide [EM-99](#), [EM-100](#)
Valve lifter [EM-79](#)
Valve seat [EM-101](#)
Valve spring [EM-102](#), [EM-103](#)
Vanity mirror lamp [LT-108](#)
Variable induction air control system (VIAS) .. [EC-550](#),
[EC-661](#)
VDC (vehicle dynamics control) [BRC-8](#), [BRC-69](#)
VDC -Wiring diagram [BRC-17](#), [BRC-79](#)
Vehicle identification number [GI-49](#)
Vehicle recovery (freeing a stuck vehicle) [GI-45](#)
Vehicle security (theft warning) system [BL-64](#)
Vehicle speed sensor (VSS) [EC-457](#), [EC-549](#)
VEHSEC - Wiring diagram [BL-68](#)
VENT/V - Wiring diagram [EC-407](#), [EC-414](#)
VIAS - Wiring diagram [EC-663](#)
VIAS/V - Wiring diagram [EC-551](#)
VIN registration [EC-76](#)
Viscosity number (SAE) [MA-12](#)
VSS A/T - Wiring diagram [AT-113](#)

W

W/ANT - Wiring diagram [AV-67](#)
Wait detection switch [TF-71](#), [TF-237](#)
WARN - Wiring diagram [DI-31](#)
Warning chime [DI-41](#)
Warning lamps [DI-30](#)
Washer, front [WW-4](#)
Washer, rear [WW-28](#)
Water pump [CO-19](#)
Water temperature gauge [DI-4](#)
Wheel alignment (front) [FSU-6](#)
Wheel alignment (rear) [RSU-6](#)
Wheel balance [MA-29](#)
Wheel bearing (front) [FAX-5](#)
Wheel bearing (rear) [RAX-5](#)
Wheel hub (rear) [RAX-5](#)
Wheel size [GI-51](#)
Wheelbase (Dimensions) [GI-51](#)
Width (Dimensions) [GI-51](#)
WINDOW - Wiring diagram [GW-21](#)
Window antenna [AV-66](#)
Window, door [GW-61](#), [GW-65](#)
Windshield [GW-11](#)
WIP/R - Wiring diagram [WW-30](#)
WIPER - Wiring diagram [WW-8](#)
Wiper, front [WW-4](#)
Wiper, rear [WW-28](#)
Wiring Diagram (Cell code) list [PG-70](#)
Wiring diagrams [GI-15](#)
WT-T/WARN - Wiring diagram [WT-11](#)