

SECTION **PWO**
POWER OUTLET

CONTENTS

PRECAUTION	2	POWER SOCKET	3
PRECAUTIONS	2	Wiring Diagram	3
Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TEN- SIONER"	2	CIGARETTE LIGHTER	6
		Wiring Diagram	6
COMPONENT DIAGNOSIS	3	ON-VEHICLE REPAIR	8
		POWER SOCKET	8
		Removal and Installation	8

A
B
C
D
E

F
G
H
I
J
K
L

PWO

N
O
P

PRECAUTIONS

< PRECAUTION >

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:0000000001723033

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

POWER SOCKET


< COMPONENT DIAGNOSIS >

COMPONENT DIAGNOSIS POWER SOCKET

Wiring Diagram

INFOID:0000000001723034

POWER SOCKET

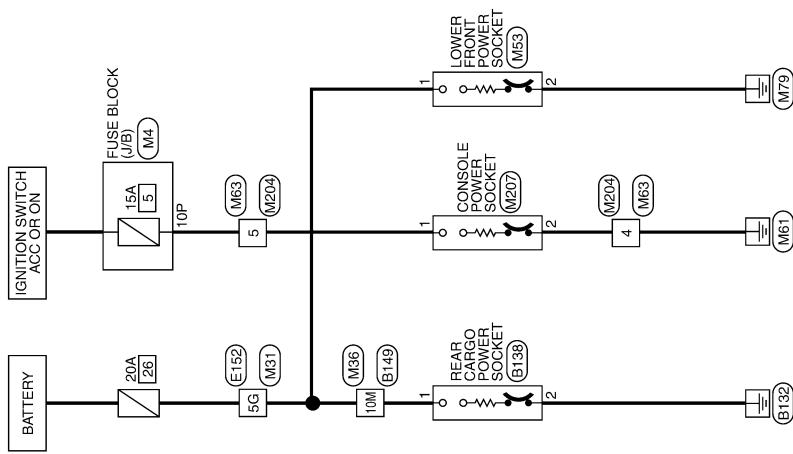

POWER SOCKET


< COMPONENT DIAGNOSIS >

POWER SOCKET CONNECTORS


Connector No.	M4
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE



Connector No.	M31
Connector Name	WIRE TO WIRE
Connector Color	WHITE

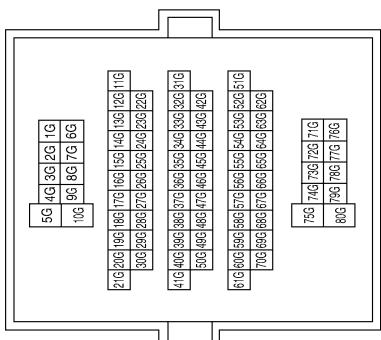

Connector No.	M36
Connector Name	WIRE TO WIRE
Connector Color	WHITE

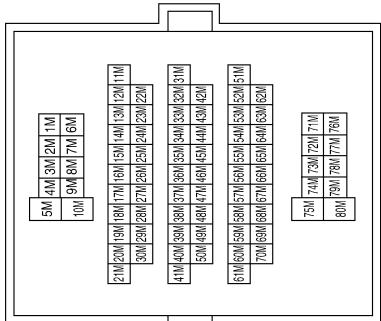

Terminal No.	Color of Wire	Signal Name
5G	R	-

Terminal No.	Color of Wire	Signal Name
10M	R	-

Terminal No.	Color of Wire	Signal Name
75M	R	-



Terminal No.	Color of Wire	Signal Name
75M	R	-

Terminal No.	Color of Wire	Signal Name
75M	R	-



Terminal No.	Color of Wire	Signal Name
75M	R	-

Terminal No.	Color of Wire	Signal Name
75M	R	-



ALMIA0161GB

POWER SOCKET


< COMPONENT DIAGNOSIS >

Connector No.	M207
Connector Name	CONSOLE POWER SOCKET
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	G/Y	-
2	B	-

Connector No.	E152
Connector Name	WIRE TO WIRE
Connector Color	WHITE

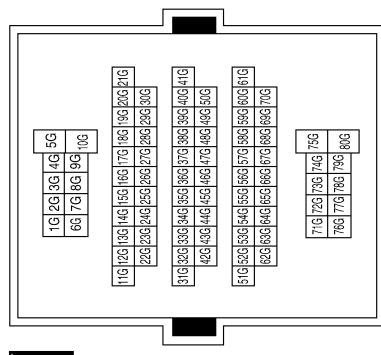


Terminal No.	Color of Wire	Signal Name
5G	R	-

Connector No.	B138
Connector Name	REAR CARGO POWER SOCKET
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
10M	R	-

Connector No.	B149
Connector Name	WIRE TO WIRE
Connector Color	WHITE

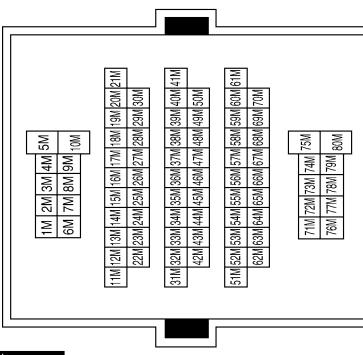

Terminal No.	Color of Wire	Signal Name
10M	R	-

PWO

O

Z

P

A B C D M F G I K L N P

ALMIA0162GB

CIGARETTE LIGHTER


< COMPONENT DIAGNOSIS >

CIGARETTE LIGHTER

Wiring Diagram

INFOID:0000000001723035

CIGARETTE LIGHTER

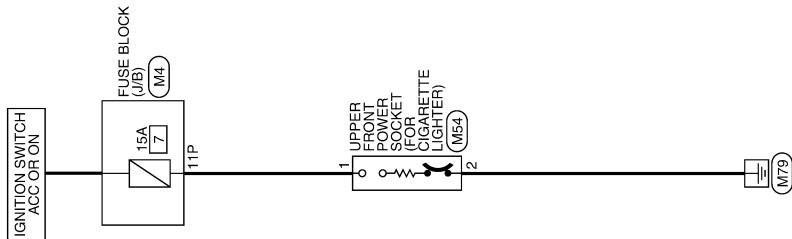


ALMWA0092GE

CIGARETTE LIGHTER

< COMPONENT DIAGNOSIS >

CIGARETTE LIGHTER CONNECTORS

Connector No.	M4
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
11P	G/B	-

Connector No.	M54
Connector Name	UPPER FRONT POWER SOCKET (FOR CIGARETTE LIGHTER)
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
1	G/B	-
2	B	-

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

PWO

POWER SOCKET

< ON-VEHICLE REPAIR >

ON-VEHICLE REPAIR

POWER SOCKET


Removal and Installation

INFOID:0000000001723036

LOWER FRONT POWER SOCKET AND REAR CARGO POWER SOCKET

Removal

1. Disconnect battery negative terminal.
2. Remove inner socket from the ring, while pressing the hook on the ring out from square hole.
3. Disconnect power socket connector.
4. Remove ring from power socket finisher while pressing pawls.

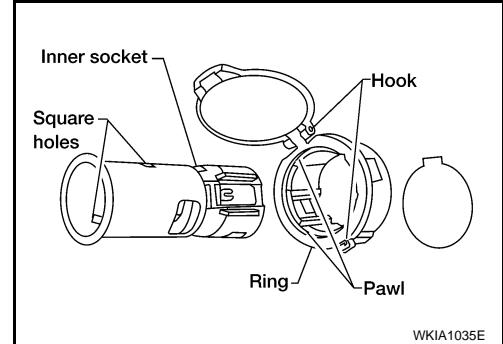


Installation

Installation is in the reverse order of removal.

UPPER FRONT POWER SOCKET (FOR CIGARETTE LIGHTER) AND CONSOLE POWER SOCKET

Removal

1. Remove inner socket from the ring, while pressing the hook on the ring out from square hole.
2. Disconnect power socket connector.
3. Remove ring from power socket finisher while pressing pawls.

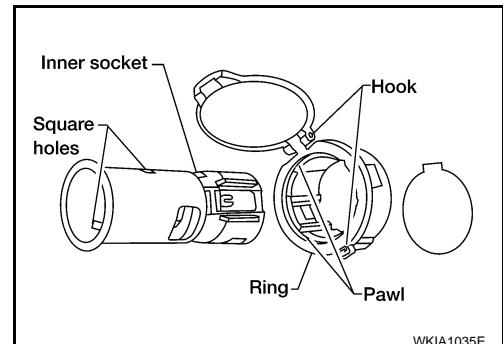

Installation

Installation is in the reverse order of removal.