

AUTOMATIC TRANSMISSION

SECTION **AT**

GI

MA

EM

LC

EC

FE

CL

MT

AT

PD

FA

RA

BR

ST

RS

BT

HA

EL

IDX

CONTENTS

PREPARATION AND PRECAUTIONS	3	Diagnostic Procedure 14	93
Special Service Tools	3	Diagnostic Procedure 15	94
Service Notice.....	4	Diagnostic Procedure 16	95
Supplemental Restraint System (SRS) "AIR BAG".....	5	Diagnostic Procedure 17	95
DESCRIPTION	6	Diagnostic Procedure 18	96
Cross-sectional View	6	Diagnostic Procedure 19	96
Hydraulic Control Circuit.....	7	Diagnostic Procedure 20	96
Shift Mechanism	8	Electrical Components Inspection	97
Control System	10	Final Check.....	104
TROUBLE DIAGNOSES	13	Symptom Chart.....	109
How to Perform Trouble Diagnoses for Quick and Accurate Repair	13	TROUBLE DIAGNOSES — A/T Shift Lock System	112
Remarks.....	17	Description.....	112
Diagnostic Trouble Code (DTC) Chart	18	Wiring Diagram — SHIFT —	113
Diagnosis by CONSULT	20	Diagnostic Procedure	114
Preliminary Check.....	23	Key Interlock Cable	116
A/T Electrical Parts Location	34	Component Check	117
Circuit Diagram for Quick Pinpoint Check.....	35	ON-VEHICLE SERVICE	119
Wiring Diagram — AT —	36	Control Valve Assembly and Accumulators Inspection.....	119
Self-diagnosis	41	Revolution Sensor Replacement.....	119
Diagnostic Procedure 1	82	Rear Oil Seal Replacement.....	120
Diagnostic Procedure 2	83	Parking Components Inspection.....	120
Diagnostic Procedure 3	83	Inhibitor Switch Adjustment	121
Diagnostic Procedure 4	84	Manual Control Linkage Adjustment.....	121
Diagnostic Procedure 5	85	REMOVAL AND INSTALLATION	122
Diagnostic Procedure 6	86	Removal.....	122
Diagnostic Procedure 7	87	Installation.....	124
Diagnostic Procedure 8	88	MAJOR OVERHAUL	126
Diagnostic Procedure 9	89	Oil Channel	128
Diagnostic Procedure 10	90	Locations of Needle Bearings, Thrust Washers and Snap Rings	129
Diagnostic Procedure 11	91	DISASSEMBLY	130
Diagnostic Procedure 12	92	Disassembly.....	130
Diagnostic Procedure 13	93		

CONTENTS (Cont'd)

REPAIR FOR COMPONENT PARTS	141	Rear Internal Gear and Forward Clutch Hub.....	174
Oil Pump.....	141	Band Servo Piston Assembly.....	177
Control Valve Assembly.....	145	Parking Pawl Components.....	181
Control Valve Upper Body.....	151	ASSEMBLY	183
Control Valve Lower Body.....	156	Assembly (1).....	183
Reverse Clutch.....	158	Adjustment.....	187
High Clutch.....	162	Assembly (2).....	191
Forward and Overrun Clutches.....	164	SERVICE DATA AND SPECIFICATIONS (SDS)	201
Low & Reverse Brake.....	168	General Specifications.....	201
Forward Clutch Drum Assembly.....	172	Specifications and Adjustment.....	201

When you read wiring diagrams:






- Read GI section, "HOW TO READ WIRING DIAGRAMS".
- See EL section, "POWER SUPPLY ROUTING" for power distribution circuit.

When you perform trouble diagnoses, read GI section, "HOW TO FOLLOW FLOW CHART IN TROUBLE DIAGNOSES" and "HOW TO PERFORM EFFICIENT DIAGNOSIS FOR AN ELECTRICAL INCIDENT".

PREPARATION AND PRECAUTIONS

Special Service Tools

The actual shapes of Kent-Moore tools may differ from those of special service tools illustrated here.

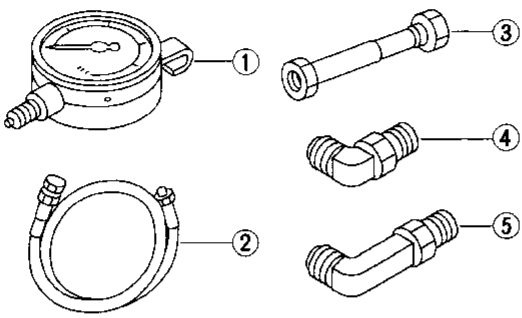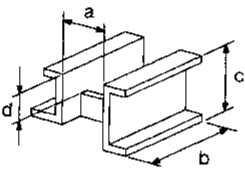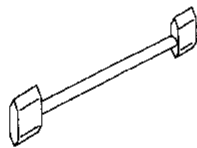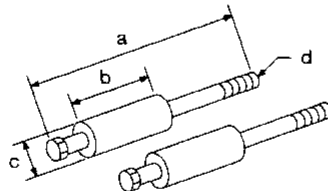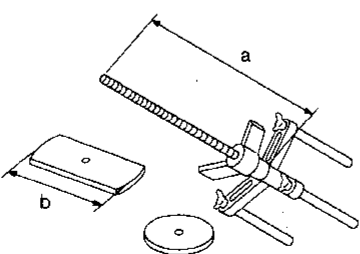Tool number (Kent-Moore No.) Tool name	Description	GI
ST2505S001 (J34301-C) Oil pressure gauge set ① ST25051001 (—) Oil pressure gauge ② ST25052000 (—) Hose ③ ST25053000 (—) Joint pipe ④ ST25054000 (—) Adapter ⑤ ST25055000 (—) Adapter	Measuring line pressure  NT097	MA
ST07870000 (J37068) Transmission case stand	Disassembling and assembling A/T  a: 182 mm (7.17 in) b: 282 mm (11.10 in) c: 230 mm (9.06 in) d: 100 mm (3.94 in) NT421	MT
KV31102100 (J37065) Torque converter one-way clutch check tool	Checking one-way clutch in torque converter  NT098	PD
ST25850000 (J25721-A) Sliding hammer	Removing oil pump assembly  a: 179 mm (7.05 in) b: 70 mm (2.76 in) c: 40 mm (1.57 in) dia. d: M12 x 1.75P NT422	FA
KV31102400 (J34285 and J34285-87) Clutch spring compressor	Removing and installing clutch return springs  a: 320 mm (12.60 in) b: 174 mm (6.85 in) NT423	RA

AT

BR

ST

RS

BT



HA

EL

IDX


PREPARATION AND PRECAUTIONS

Special Service Tools (Cont'd)

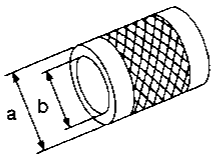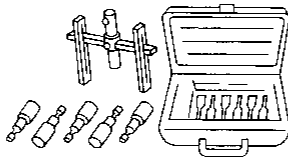Tool number (Kent-Moore No.) Tool name	Description
ST33200000 (J26082) Drift	 <p style="text-align: right;">Installing oil pump housing oil seal Installing rear oil seal</p> <p style="text-align: right;">a: 60 mm (2.36 in) dia. b: 44.5 mm (1.752 in) dia.</p>
(J34291) Shim setting gauge set	 <p style="text-align: right;">Selecting oil pump cover bearing race and oil pump thrust washer</p>

Service Notice

- Before proceeding with disassembly, thoroughly clean the outside of the transmission. It is important to prevent the internal parts from becoming contaminated by dirt or other foreign matter.
- Disassembly should be done in a clean work area.
- Use lint-free cloth or towels for wiping parts clean. Common shop rags can leave fibers that could interfere with the operation of the transmission.
- Place disassembled parts in order for easier and proper assembly.
- All parts should be carefully cleaned with a general purpose, non-flammable solvent before inspection or reassembly.
- Gaskets, seals and O-rings should be replaced any time the transmission is disassembled.
- When connecting A/T control unit harness connector, tighten bolt until red projection is in line with connector.
- The valve body contains precision parts and requires extreme care when parts are removed and serviced. Place removed parts in a parts rack in order to replace them in correct positions and sequences. Care will also prevent springs and small parts from becoming scattered or lost.
- Properly installed valves, sleeves, plugs, etc. will slide along bores in valve body under their own weight.
- Before assembly, apply a coat of recommended ATF to all parts. Apply petroleum jelly to protect O-rings and seals, and to hold bearings and washers in place during assembly. Do not use grease.
- Extreme care should be taken to avoid damage to O-rings, seals and gaskets when assembling.
- Flash or replace ATF cooler if excessive foreign material is found in oil pan or clogging strainer. Refer to TROUBLE DIAGNOSES Remarks, AT-17.
- After overhaul, refill the transmission with new ATF.
- When the A/T drain plug is removed, only some of the fluid is drained. Old A/T fluid will remain in torque converter and ATF cooling system. Always follow the procedures under "Changing A/T Fluid" in the MA section when changing A/T fluid.

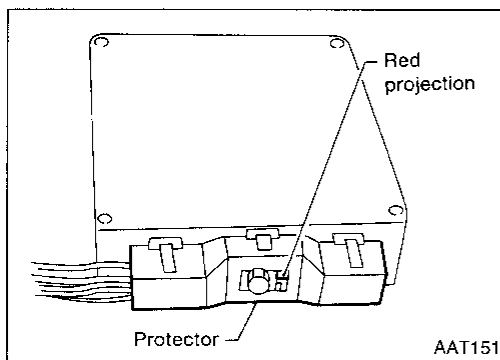

- It is very important to perform functional tests whenever they are indicated.

Supplemental Restraint System (SRS) "AIR BAG"

The Supplemental Restraint System "Air Bag", used along with a seat belt, helps to reduce the risk or severity of injury to the driver and front passenger in a frontal collision. The Supplemental Restraint System consists of air bag modules (located in the center of the steering wheel and on the instrument panel on the passenger side), a diagnosis sensor unit, warning lamp, wiring harness and spiral cable. Information necessary to service the system safely is included in the **RS section** of this Service Manual.

GI

MA

EM

LC

EC

FE

CL

MT

AT

PD

FA

RA

BR

ST

RS

BT

HA

EL


IDX

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses are covered with yellow insulation either just before the harness connectors or for the complete harness, for easy identification.


DESCRIPTION

Cross-sectional View

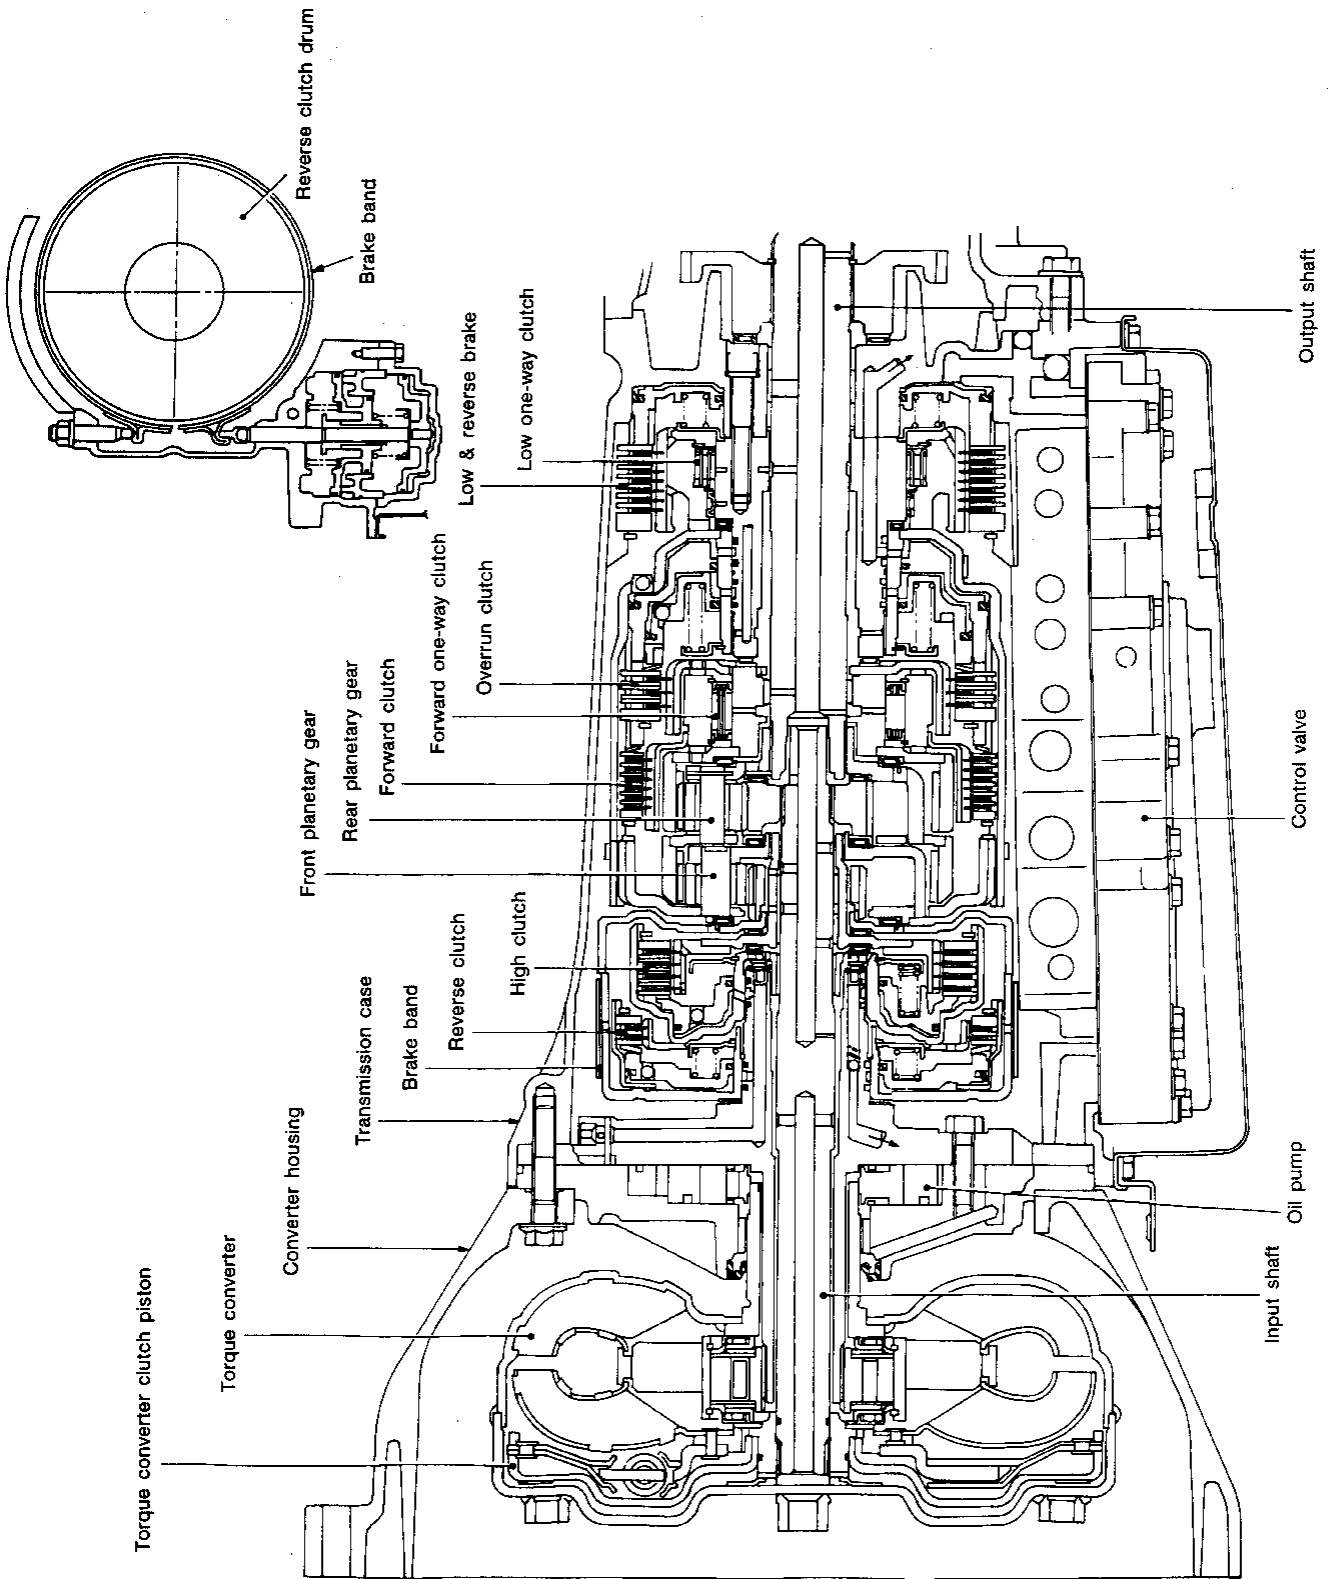

DESCRIPTION

Hydraulic Control Circuit

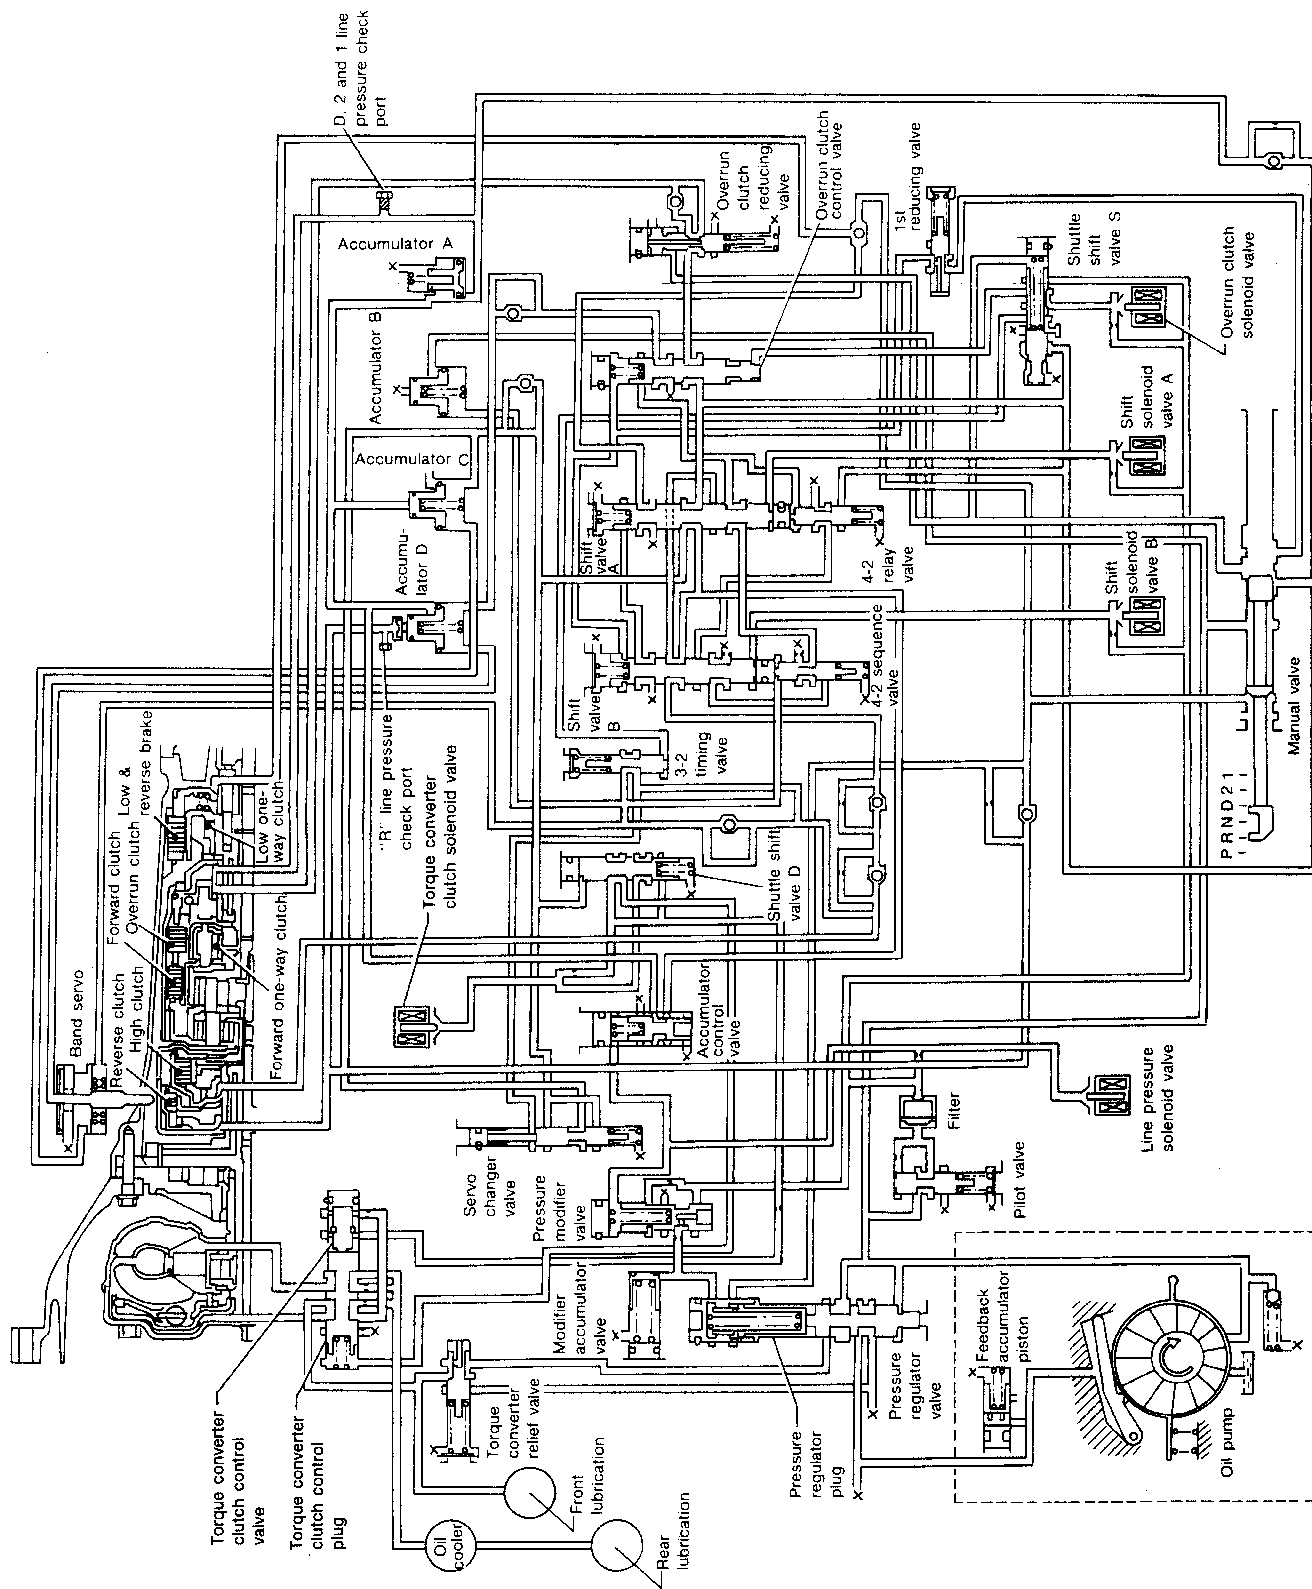


- GI
- MA
- EM
- LC
- EC
- FE
- CL
- MT
- AT**
- PD
- FA
- RA
- BR
- ST
- RS
- BT
- HA
- EL
- IDX

DESCRIPTION

Shift Mechanism

CONSTRUCTION

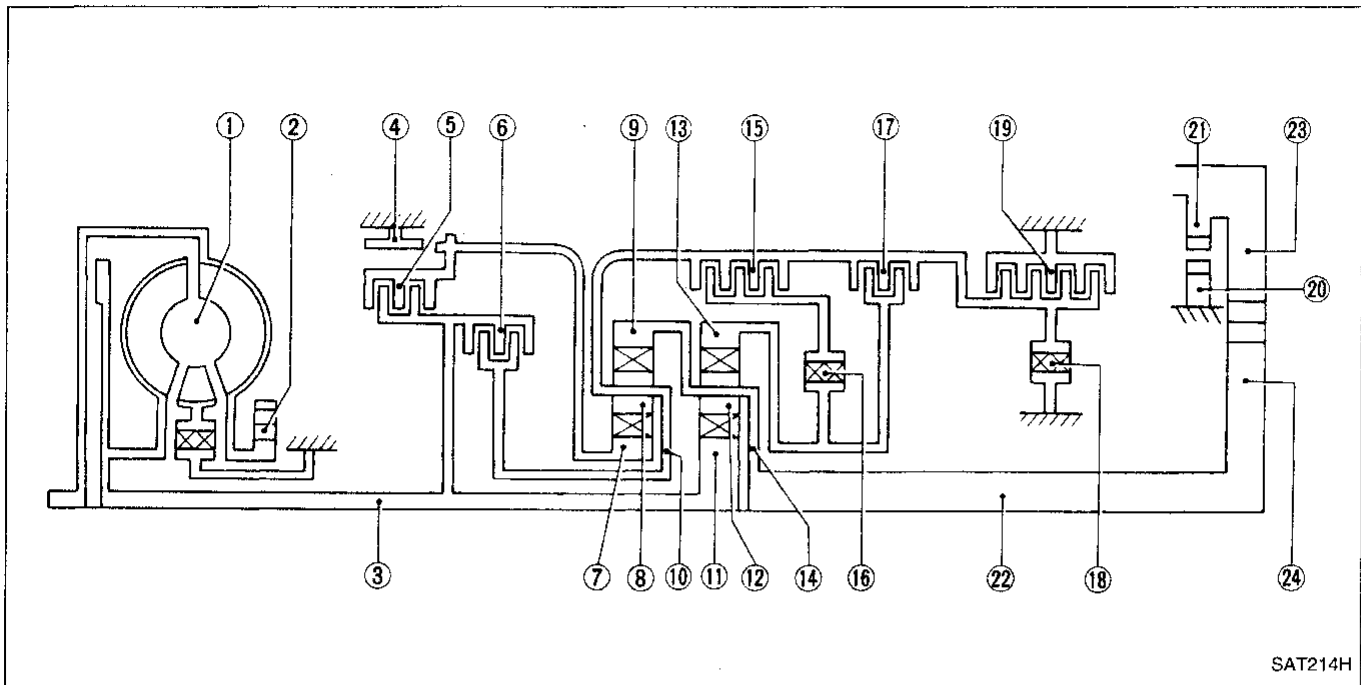

SAT214H

- | | | |
|---|---|---|
| <ul style="list-style-type: none"> ① Torque converter ② Oil pump ③ Input shaft ④ Brake band ⑤ Reverse clutch ⑥ High clutch ⑦ Front sun gear ⑧ Front pinion gear | <ul style="list-style-type: none"> ⑨ Front internal gear ⑩ Front planetary carrier ⑪ Rear sun gear ⑫ Rear pinion gear ⑬ Rear internal gear ⑭ Rear planetary carrier ⑮ Forward clutch ⑯ Forward one-way clutch | <ul style="list-style-type: none"> ⑰ Overrun clutch ⑱ Low one-way clutch ⑲ Low & reverse brake ⑳ Parking pawl ㉑ Parking gear ㉒ Output shaft ㉓ Idle gear ㉔ Output gear |
|---|---|---|

FUNCTION OF CLUTCH AND BRAKE

Clutch and brake components	Abbr.	Function
⑤ Reverse clutch	R/C	To transmit input power to front sun gear ⑪.
⑥ High clutch	H/C	To transmit input power to front planetary carrier ⑩.
⑮ Forward clutch	F/C	To connect front planetary carrier ⑩ with forward one-way clutch ⑯.
⑰ Overrun clutch	O/C	To connect front planetary carrier ⑩ with rear internal gear ⑬.
④ Brake band	B/B	To lock front sun gear ⑦.
⑯ Forward one-way clutch	F/O.C	When forward clutch ⑮ is engaged, to stop rear internal gear ⑬ from rotating in opposite direction against engine revolution.
⑱ Low one-way clutch	L/O.C	To stop front planetary carrier ⑩ from rotating in opposite direction against engine revolution.
⑲ Low & reverse brake	L & R/B	To lock front planetary carrier ⑩.

DESCRIPTION

Shift Mechanism (Cont'd)

OPERATION OF CLUTCH AND BRAKE

Shift position	Reverse clutch	High clutch	Forward clutch	Overrun clutch	Band servo			Forward one-way clutch	Low one-way clutch	Low & reverse brake	Lock-up	Remarks
					2nd apply	3rd release	4th apply					
P												PARK POSITION
R	○									○		REVERSE POSITION
N												NEUTRAL POSITION
D*4	1st		○	*1⊗				●	●			Automatic shift 1 ↔ 2 ↔ 3 ↔ 4
	2nd		○	*1⊙	○			●				
	3rd		○	○	*1⊙	*2⊗	⊗	●			*5○	
	4th		○	⊗		*3⊗	⊗	○			○	
2	1st		○	⊗				●	●			Automatic shift 1 ↔ 2 ↔ 3
	2nd		○	⊙	○			●				
1	1st		○	○				●		○		Locks (held stationary) in 1st speed 1 ← 2 ← 3
	2nd		○	○	○			●				

*1: Operates when overdrive switch is being set in "OFF" position.

*2: Oil pressure is applied to both 2nd "apply" side and 3rd "release" side of band servo piston. However, brake band does not contract because oil pressure area on the "release" side is greater than that on the "apply" side.

*3: Oil pressure is applied to 4th "apply" side in condition *2 above, and brake band contracts.

*4: A/T will not shift to 4th when overdrive switch is set in "OFF" position.

*5: Operates when overdrive switch is off.

- : Operates
- ⊙ : Operates when throttle opening is less than 1/16, activating engine brake.
- : Operates during "progressive" acceleration.
- ⊗ : Operates but does not affect power transmission.
- ⊗ : Operates when throttle opening is less than 1/16, but does not affect engine brake.


GI
 MA
 EM
 LC
 EC
 FE
 CL
 MT
 AT
 PD
 FA
 RA
 BR
 ST
 RS
 BT
 HA
 EL
 IDX

DESCRIPTION


Control System

OUTLINE

The RE4R01A automatic transmission senses vehicle operating conditions through various sensors. It always controls the optimum shaft position and reduces shifting and lock-up shocks.

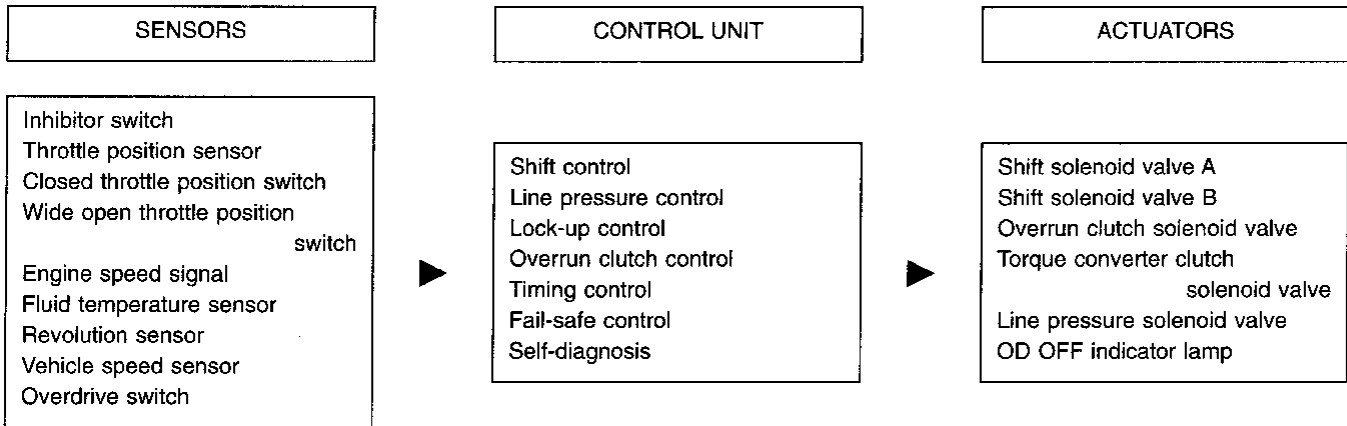

CONTROL SYSTEM

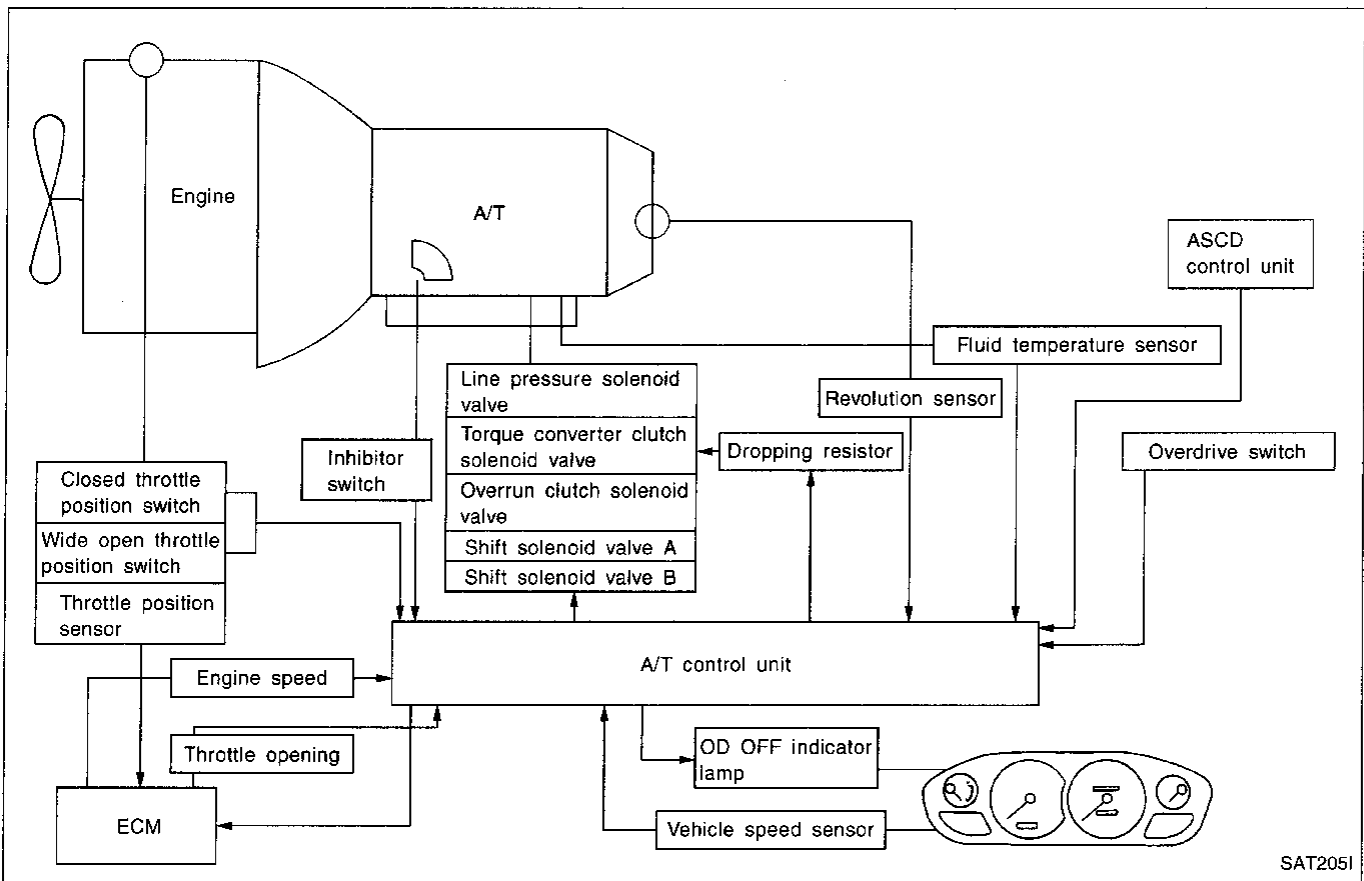

DESCRIPTION

Control System (Cont'd)

A/T CONTROL UNIT FUNCTION

The function of the A/T control unit is to:

- Receive input signals sent from various switches and sensors.
- Determine required line pressure, shifting point, lock-up operation, and engine brake operation.
- Send required output signals to the respective solenoids.

INPUT/OUTPUT SIGNAL OF A/T CONTROL UNIT

	Sensors and solenoid valves	Function
Input	Inhibitor switch	Detects select lever position and sends a signal to A/T control unit.
	Throttle position sensor	Detects throttle valve position and sends a signal to A/T control unit.
	Closed throttle position switch	Detects throttle valve's fully-closed position and sends a signal to A/T control unit.
	Wide open throttle position switch	Detects a throttle valve position of greater than 1/2 of full throttle and sends a signal to A/T control unit.
	Engine speed signal	From ECM (ECCS control module).
	Fluid temperature sensor	Detects transmission fluid temperature and sends a signal to A/T control unit.
	Revolution sensor	Detects output shaft rpm and sends a signal to A/T control unit.
	Vehicle speed sensor	Used as an auxiliary vehicle speed sensor. Sends a signal when revolution sensor (installed on transmission) malfunctions.
	OD switch	Sends a signal, which prohibits a shift to D ₄ (OD) position, to the A/T control unit.
Output	Shift solenoid valve A/B	Selects shifting point suited to driving conditions in relation to a signal sent from A/T control unit.
	Line pressure solenoid valve	Regulates (or decreases) line pressure suited to driving conditions in relation to a signal sent from A/T control unit.
	Torque converter clutch solenoid valve	Regulates (or decreases) lock-up pressure suited to driving conditions in relation to a signal sent from A/T control unit.
	Overrun clutch solenoid valve	Controls an "engine brake" effect suited to driving conditions in relation to a signal sent from A/T control unit.
	OD OFF indicator lamp	Shows A/T control unit faults, when A/T control components malfunction.

DESCRIPTION

NOTE


TROUBLE DIAGNOSES

How to Perform Trouble Diagnoses for Quick and Accurate Repair

A good understanding of the malfunction conditions can make troubleshooting faster and more accurate. In general, each customer feels differently about a problem. It is important to fully understand the symptoms or conditions for a customer complaint.

Make good use of the two sheets provided, "INFORMATION FROM CUSTOMER" and "DIAGNOSTIC WORKSHEET", to perform the best troubleshooting possible.

WORK FLOW

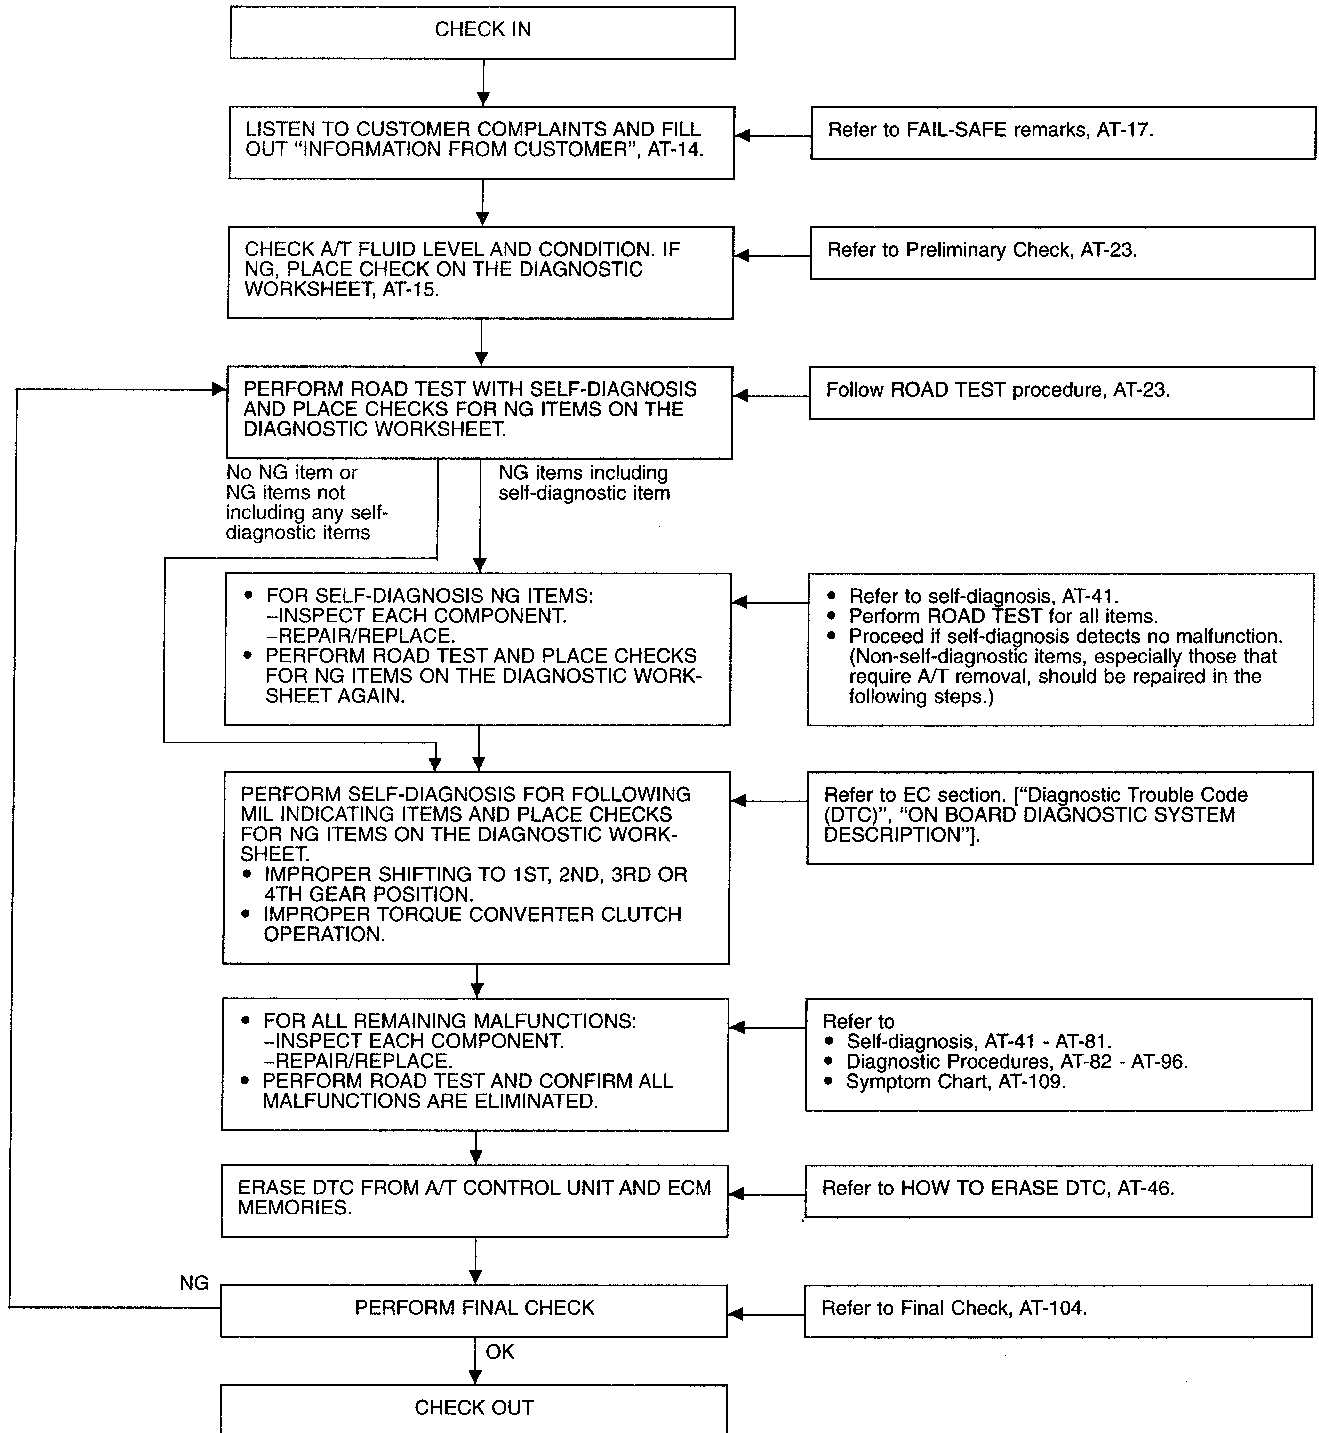

GI

MA

EM

LC

EC

FE

CL

MT

AT

PD

FA

RA

BR

ST

RS

BT

HA

EL

IDX

TROUBLE DIAGNOSES

How to Perform Trouble Diagnoses for Quick and Accurate Repair (Cont'd)

INFORMATION FROM CUSTOMER

KEY POINTS
WHAT Vehicle & A/T model

WHEN Date, Frequencies

WHERE Road conditions

HOW Operating conditions, Symptoms

Customer name MR/MS	Model & Year	VIN
Trans. model	Engine	Mileage
Incident Date	Manuf. Date	In Service Date
Frequency	<input type="checkbox"/> Continuous <input type="checkbox"/> Intermittent (times a day)	
Symptoms	<input type="checkbox"/> Vehicle does not move. (<input type="checkbox"/> Any position <input type="checkbox"/> Particular position)	
	<input type="checkbox"/> No up-shift (<input type="checkbox"/> 1st → 2nd <input type="checkbox"/> 2nd → 3rd <input type="checkbox"/> 3rd → O/D)	
	<input type="checkbox"/> No down-shift (<input type="checkbox"/> O/D → 3rd <input type="checkbox"/> 3rd → 2nd <input type="checkbox"/> 2nd → 1st)	
	<input type="checkbox"/> Lockup malfunction	
	<input type="checkbox"/> Shift point too high or too low.	
	<input type="checkbox"/> Shift shock or slip (<input type="checkbox"/> N → D <input type="checkbox"/> Lockup <input type="checkbox"/> Any drive position)	
	<input type="checkbox"/> Noise or vibration	
	<input type="checkbox"/> No kickdown	
	<input type="checkbox"/> No pattern select	
	<input type="checkbox"/> Others ()	
OD OFF indicator lamp	Blinks for about 8 seconds.	
	<input type="checkbox"/> Continuously lit	<input type="checkbox"/> Not lit
Malfunction indicator lamp (MIL)	<input type="checkbox"/> Continuously lit	<input type="checkbox"/> Not lit

TROUBLE DIAGNOSES

How to Perform Trouble Diagnoses for Quick and Accurate Repair (Cont'd)

DIAGNOSTIC WORKSHEET

1.	<input type="checkbox"/> Read the Fail-safe Remarks and listen to customer complaints.	AT-17	
2.	<input type="checkbox"/> CHECK A/T FLUID <input type="checkbox"/> Leakage (Follow specified procedure) <input type="checkbox"/> Fluid condition <input type="checkbox"/> Fluid level	AT-23	GI MA
3.	<input type="checkbox"/> Perform all ROAD TEST and mark required procedures.	AT-23	EM
	3-1 Check before engine is started. <input type="checkbox"/> SELF-DIAGNOSTIC PROCEDURE — Mark detected items. <ul style="list-style-type: none"> <input type="checkbox"/> Revolution sensor <input type="checkbox"/> Vehicle speed sensor <input type="checkbox"/> Throttle position sensor <input type="checkbox"/> Shift solenoid valve A <input type="checkbox"/> Shift solenoid valve B <input type="checkbox"/> Overrun clutch solenoid valve <input type="checkbox"/> Torque converter clutch solenoid valve <input type="checkbox"/> Fluid temperature sensor and A/T control unit power source <input type="checkbox"/> Engine speed signal <input type="checkbox"/> Line pressure solenoid valve <input type="checkbox"/> Battery <input type="checkbox"/> Others 	AT-24	LC EC FE CL MT
	3-2. Check at idle <ul style="list-style-type: none"> <input type="checkbox"/> Diagnostic Procedure 1 (OD OFF indicator lamp come on for 2 seconds.) <input type="checkbox"/> Diagnostic Procedure 2 (Engine starts only in P and N position) <input type="checkbox"/> Diagnostic Procedure 3 (In P position, vehicle does not move when pushed) <input type="checkbox"/> Diagnostic Procedure 4 (In N position, vehicle moves when pushed) <input type="checkbox"/> Diagnostic Procedure 5 (Select shock. N → R position) <input type="checkbox"/> Diagnostic Procedure 6 (Vehicle creeps backward in R position) <input type="checkbox"/> Diagnostic Procedure 7 (Vehicle creeps forward in D, 2 or 1 position) 	AT-25	AT PD FA
	3-3. Cruise test Part-1 <ul style="list-style-type: none"> <input type="checkbox"/> Diagnostic Procedure 8 (Vehicle starts from D₁) <input type="checkbox"/> Diagnostic Procedure 9 <input type="checkbox"/> Diagnostic Procedure 10 <input type="checkbox"/> Diagnostic Procedure 11 } (A/T shift schedule: D ₁ → D ₂ /D ₂ → D ₃ /D ₃ → D ₄ /D ₄ → D ₂) <ul style="list-style-type: none"> <input type="checkbox"/> Diagnostic Procedure 12 (Shift schedule: Lock-up) <input type="checkbox"/> Diagnostic Procedure 13 (Lock-up condition more than 30 seconds) <input type="checkbox"/> Diagnostic Procedure 14 (Lock-up released) <input type="checkbox"/> Diagnostic Procedure 15 (Engine speed return to idle. Light braking D₄ → D₃) 	AT-26, AT-29	RA BR ST RS

GI
MA
EM
LC
EC
FE
CL
MT
AT
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX

TROUBLE DIAGNOSES

How to Perform Trouble Diagnoses for Quick and Accurate Repair (Cont'd)

3.	<p>Part-2</p> <ul style="list-style-type: none"> <input type="checkbox"/> Diagnostic Procedure 16 (Vehicle starts from D₁) <input type="checkbox"/> Diagnostic Procedure 9 (Kickdown: D₄ → D₂) <input type="checkbox"/> Diagnostic Procedure 10 (Shift schedule: D₂ → D₃) <input type="checkbox"/> Diagnostic Procedure 11 (Shift schedule: D₃ → D₄ and engine brake) 	AT-31
	<p>Part-3</p> <ul style="list-style-type: none"> <input type="checkbox"/> Diagnostic Procedure 17 (D₄ → D₃ when OD OFF switch ON → OFF) <input type="checkbox"/> Diagnostic Procedure 15 (Engine brake in D₃) <input type="checkbox"/> Diagnostic Procedure 18 (D₃ → 2₂ when selector lever D → 2 position) <input type="checkbox"/> Diagnostic Procedure 15 (Engine brake in 2₂) <input type="checkbox"/> Diagnostic Procedure 19 (2₂ → 1₁, when selector lever 2 → 1 position) <input type="checkbox"/> Diagnostic Procedure 20 (Engine brake in 1₁) <input type="checkbox"/> SELF-DIAGNOSTIC PROCEDURE — Mark detected items. <ul style="list-style-type: none"> <input type="checkbox"/> Revolution sensor <input type="checkbox"/> Vehicle speed sensor <input type="checkbox"/> Throttle position sensor <input type="checkbox"/> Shift solenoid valve A <input type="checkbox"/> Shift solenoid valve B <input type="checkbox"/> Overrun clutch solenoid valve <input type="checkbox"/> Torque converter clutch solenoid valve <input type="checkbox"/> Fluid temperature sensor and A/T control unit power source <input type="checkbox"/> Engine speed signal <input type="checkbox"/> Line pressure solenoid valve <input type="checkbox"/> Battery <input type="checkbox"/> Others 	AT-32
4.	<input type="checkbox"/> For self-diagnosis NG items, inspect each component. Repair or replace the damaged parts.	AT-41
5.	<input type="checkbox"/> Perform all ROAD TEST and re-mark required procedures.	AT-23
6.	<input type="checkbox"/> Perform SELF-DIAGNOSIS for following MIL indicating items and check out NG items. Refer to EC section ["Diagnostic Trouble Code (DTC)", "ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION"]. <ul style="list-style-type: none"> <input type="checkbox"/> DTC (P0731, 1103) Improper shifting to 1st gear position <input type="checkbox"/> DTC (P0732, 1104) Improper shifting to 2nd gear position <input type="checkbox"/> DTC (P0733, 1105) Improper shifting to 3rd gear position <input type="checkbox"/> DTC (P0734, 1106) Improper shifting to 4th gear position or TCC 	EC section
7.	<input type="checkbox"/> Perform the Diagnostic Procedures for all remaining items marked NG. Repair or replace the damaged parts. Refer to the Symptom Chart when you perform the procedures. (The chart also shows some other possible symptoms and the component inspection orders.)	AT-97 AT-109
8.	<input type="checkbox"/> Erase DTC from A/T control unit and ECM memories.	AT-46
9.	<p>Perform FINAL CHECK.</p> <ul style="list-style-type: none"> <input type="checkbox"/> Stall test — Mark possible damaged components/others. <ul style="list-style-type: none"> <li style="width: 50%;"><input type="checkbox"/> Torque converter one-way clutch <li style="width: 50%;"><input type="checkbox"/> Low & reverse brake <li style="width: 50%;"><input type="checkbox"/> Reverse clutch <li style="width: 50%;"><input type="checkbox"/> Low one-way clutch <li style="width: 50%;"><input type="checkbox"/> Forward clutch <li style="width: 50%;"><input type="checkbox"/> Engine <li style="width: 50%;"><input type="checkbox"/> Overrun clutch <li style="width: 50%;"><input type="checkbox"/> Line pressure is low <li style="width: 50%;"><input type="checkbox"/> Forward one-way clutch <li style="width: 50%;"><input type="checkbox"/> Clutches and brakes except high clutch and brake band are OK <input type="checkbox"/> Pressure test — Suspected parts: 	AT-104

Remarks

FAIL-SAFE

The A/T control unit has an electronic Fail-Safe (limp home mode). This allows the vehicle to be driven even if a major electrical input/output device circuit is damaged.

Under Fail-Safe, the vehicle always runs in third gear with shift lever position of 1, 2 or D. Customer may say "Sluggish, poor acceleration".

When Fail-Safe operation occurs the next time the key is turned to the ON position, the OD OFF indicator lamp will blink for about 8 seconds. (For diagnosis, refer to AT-24.)

Fail-Safe may activate without electrical circuit damages if the vehicle is driven under extreme conditions (such as excessive wheel spins and emergency braking immediately afterwards). In this case, turn key OFF for 5 seconds and then ON to recover normal shift pattern.

The blinking of the OD OFF indicator lamp for about 8 seconds will appear only once and be cleared. The customer may resume normal driving conditions by chance.

Always follow the "WORK FLOW" (Refer to AT-13).

The SELF-DIAGNOSIS results will be as follows:

The first SELF-DIAGNOSIS will indicate the damage of the vehicle speed sensor or the revolution sensor.

During the next SELF-DIAGNOSIS performed after checking the sensor, no damages will be indicated.

ATF COOLER SERVICE

Flash or replace ATF cooler if excessive foreign material is found in oil pan or clogging strainer.

KA24DE engine (RE4R01A) ... fin type cooler

Replace radiator lower tank (which includes ATF cooler) with a new one and flush cooler line using cleaning solvent and compressed air.

OBD-II SELF-DIAGNOSIS

- A/T self-diagnosis is performed by the A/T control unit in combination with the ECM. The results can be read through the blinking pattern of the OD OFF indicator or the malfunction indicator lamp (MIL). Refer to the table on AT-41 for the indicator used to display each self-diagnostic result.

- The self-diagnostic results indicated by the MIL are automatically stored in both the ECM and A/T control unit memories.

Always perform the procedure "HOW TO ERASE DTC" on AT-46 to complete the repair and avoid unnecessary blinking of the MIL.

- The following self-diagnostic items can be detected using ECM self-diagnostic results mode* only when the OD OFF indicator lamp does not indicate any malfunctions.

-Improper shifting to 1st, 2nd, 3rd, or 4th gear position

-Improper torque converter clutch operation.

*: Refer to EC section ["Malfunction Indicator Lamp (MIL)", "ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION"].

GI

MA

EM

LC

EC

FE

CL

MT

AT

PD

FA

RA

BR

ST

RS

BT

HA

EL

IDX

TROUBLE DIAGNOSES

Diagnostic Trouble Code (DTC) Chart

A/T RELATED ITEMS

Diagnostic trouble code No.		Detected items (Screen terms for CONSULT, "SELF-DIAG RESULTS" mode)	Malfunction is detected when ...
CONSULT GST	MIL		
P0705	1101	Inhibitor switch circuit (INHIBITOR SWITCH)	<ul style="list-style-type: none"> A/T control unit does not receive the correct voltage signal from the switch based on the gear position.
P0710	1208	Fluid temperature sensor (FLUID TEMP SENSOR)	<ul style="list-style-type: none"> A/T control unit receives an excessively low or high voltage from the sensor.
P0720	1102	Revolution sensor (VHCL SPEED SEN-A/T)	<ul style="list-style-type: none"> A/T control unit does not receive the proper voltage signal from the sensor.
P0725	1207	Engine speed signal (ENGINE SPEED SIG)	<ul style="list-style-type: none"> A/T control unit does not receive the proper voltage signal from the ECM.
P0731	1103	Improper shifting to 1st gear position (A/T 1ST SIGNAL)	<ul style="list-style-type: none"> A/T can not be shifted to the 1st gear position even if electrical circuit is good.
P0732	1104	Improper shifting to 2nd gear position (A/T 2ND SIGNAL)	<ul style="list-style-type: none"> A/T can not be shifted to the 2nd gear position even if electrical circuit is good.
P0733	1105	Improper shifting to 3rd gear position (A/T 3RD SIGNAL)	<ul style="list-style-type: none"> A/T can not be shifted to the 3rd gear position even if electrical circuit is good.
P0734	1106	Improper shifting to 4th gear position or TCC (A/T 4TH SIGNAL OR TCC)	<ul style="list-style-type: none"> A/T can not be shifted to the 4th gear position or perform lock-up even electrical circuit is good.
P0740	1204	T/C clutch solenoid valve (TOR CONV CLUTCH SV)	<ul style="list-style-type: none"> A/T control unit detects the improper voltage drop when it tries to operate the solenoid valve.
P0745	1205	Line pressure solenoid valve (LINE PRESSURE S/V)	<ul style="list-style-type: none"> A/T control unit detects the improper voltage drop when it tries to operate the solenoid valve.
P0750	1108	Shift solenoid valve A (SHIFT SOLENOID/V A)	<ul style="list-style-type: none"> A/T control unit detects the improper voltage drop when it tries to operate the solenoid valve.
P0755	1201	Shift solenoid valve B (SHIFT SOLENOID/V B)	<ul style="list-style-type: none"> A/T control unit detects the improper voltage drop when it tries to operate the solenoid valve.
P1705	1206	Throttle position sensor Throttle position switch (THRTL POSI SEN-A/T)	<ul style="list-style-type: none"> A/T control unit receives an excessively low or high voltage from the sensor.
P1760	1203	Overrun clutch solenoid valve (OVERRUN CLUTCH S/V)	<ul style="list-style-type: none"> A/T control unit detects the improper voltage drop when it tries to operate the solenoid valve.

TROUBLE DIAGNOSES

Diagnostic Trouble Code (DTC) Chart (Cont'd)

X: Applicable
—: Not applicable

Check Items (Possible Cause)	DTC *1 Confirmation Procedure Quick Ref.	Fail Safe System	MIL Illumination	Reference Page	
<ul style="list-style-type: none"> • Harness or connectors (The switch circuit is open or shorted.) • Inhibitor switch 	DRIVING (pattern 1)	—	2 trip	AT-68	GI
<ul style="list-style-type: none"> • Harness or connectors (The sensor circuit is open or shorted.) • Fluid temperature sensor 	DRIVING (pattern 6)	X	2 trip	AT-61	MA EM
<ul style="list-style-type: none"> • Harness or connectors (The sensor circuit is open or shorted.) • Revolution sensor 	DRIVING (pattern 2)	X	2 trip	AT-47	LC
<ul style="list-style-type: none"> • Harness or connectors (The signal circuit is open or shorted.) 	DRIVING (pattern 5)	X	2 trip	AT-64	EC
<ul style="list-style-type: none"> • Shift solenoid valve A • Shift solenoid valve B • Overrun clutch solenoid valve • Line pressure solenoid valve • Each clutch • Hydraulic control circuit 	DRIVING (pattern 3)	—	2 trip	AT-72	FE
.....				AT-74	CL
• T/C clutch solenoid valve				AT-76	MT
				AT-78	AT
<ul style="list-style-type: none"> • Harness or connectors (The solenoid circuit is open or shorted.) • T/C clutch solenoid valve 	IGN: ON	X	2 trip	AT-59	PD
<ul style="list-style-type: none"> • Harness or connectors (The solenoid circuit is open or shorted.) • Line pressure solenoid valve 	IGN: ON	X	2 trip	AT-66	FA
<ul style="list-style-type: none"> • Harness or connectors (The solenoid circuit is open or shorted.) • Shift solenoid valve A 	IGN: ON	X	2 trip	AT-53	RA
<ul style="list-style-type: none"> • Harness or connectors (The solenoid circuit is open or shorted.) • Shift solenoid valve B 	IGN: ON	X	2 trip	AT-55	BR
<ul style="list-style-type: none"> • Harness or connectors (The sensor circuit is open or shorted.) • Throttle position sensor 	DRIVING (pattern 4)	X	2 trip	AT-51	ST
<ul style="list-style-type: none"> • Harness or connectors (The solenoid circuit is open or shorted.) • Overrun clutch solenoid valve 	IGN: ON	X	2 trip	AT-57	RS

*1: DRIVING pattern 1-6 means as follows:
 Pattern 1 should meet b and c.
 Pattern 2 should meet a and c.
 Pattern 3 should meet a through e.
 Pattern 4 should meet a and b.
 Pattern 5 should meet a through c.
 Pattern 6 should meet a through d.

a: Selector lever is in "D" position.
 b: Vehicle speed is over 10 km/h (6 MPH).
 c: Throttle opening is over 1/8.
 d: Engine speed is over 450 rpm.
 e: A/T fluid temperature is 20 - 120°C (68 - 248°F).

Diagnosis by CONSULT

NOTICE

1. The CONSULT electrically displays shift timing and lock-up timing (that is, operation timing of each solenoid).
Check for time difference between actual shift timing and the CONSULT display. If the difference is noticeable, mechanical parts (except solenoids, sensors, etc.) may be malfunctioning. Check mechanical parts using applicable diagnostic procedures.
2. Shift schedule (which implies gear position) displayed on CONSULT and that indicated in Service Manual may differ slightly. This occurs because of the following reasons:
 - Actual shift schedule has more or less tolerance or allowance,
 - Shift schedule indicated in Service Manual refers to the point where shifts start. Gear position displayed on CONSULT indicates the point where shifts are completed.
3. Shift solenoid valve "A" or "B" is displayed on CONSULT at the start of shifting. Gear position is displayed upon completion of shifting (which is computed by A/T control unit).
4. Additional CONSULT information can be found in the Operation Manual supplied with the CONSULT unit.

SELF-DIAGNOSTIC RESULT TEST MODE

Refer to AT-41.

DATA MONITOR DIAGNOSTIC TEST MODE

Item	Display	Monitor item		Description	Remarks
		ECU input signals	Main signals		
Vehicle speed sensor 1 (A/T) (Revolution sensor)	VHCL/S SE-A/T [km/h] or [mph]	X	—	• Vehicle speed computed from signal of revolution sensor is displayed.	When racing engine in N or P position with vehicle stationary, CONSULT data may not indicate 0 km/h (0 mph).
Vehicle speed sensor 2 (Meter)	VHCL/S SE-MTR [km/h] or [mph]	X	—	• Vehicle speed computed from signal of vehicle speed sensor is displayed.	Vehicle speed display may not be accurate under approx. 10 km/h (6 mph). It may not indicate 0 km/h (0 mph) when vehicle is stationary.
Throttle position sensor	THRTL POS SEN [V]	X	—	• Throttle position sensor signal voltage is displayed.	
Fluid temperature sensor	FLUID TEMP SEN [V]	X	—	• Fluid temperature sensor signal voltage is displayed. • Signal voltage lowers as fluid temperature rises.	
Battery voltage	BATTERY VOLT [V]	X	—	• Source voltage of control unit is displayed.	
Engine speed	ENGINE SPEED [rpm]	X	X	• Engine speed, computed from engine speed signal, is displayed.	Engine speed display may not be accurate under approx. 800 rpm. It may not indicate 0 rpm even when engine is not running.
Overdrive switch	OVERDRIVE SW [ON/OFF]	X	—	• ON/OFF state computed from signal of overdrive SW is displayed.	
P/N position switch	P/N POSI SW [ON/OFF]	X	—	• ON/OFF state computed from signal of P/N position SW is displayed.	
R position switch	R POSITION SW [ON/OFF]	X	—	• ON/OFF state computed from signal of R position SW is displayed.	
D position switch	D POSITION SW [ON/OFF]	X	—	• ON/OFF state computed from signal of D position SW is displayed.	
2 position switch	2 POSITION SW [ON/OFF]	X	—	• ON/OFF status, computed from signal of 2 position SW, is displayed.	

TROUBLE DIAGNOSES

Diagnosis by CONSULT (Cont'd)

Item	Display	Monitor item		Description	Remarks
		ECU input signals	Main signals		
1 position switch	1 POSITION SW [ON/OFF]	X	—	• ON/OFF status, computed from signal of 1 position SW, is displayed.	
ASCD-cruise signal	ASCD-CRUISE [ON/OFF]	X	—	• Status of ASCD cruise signal is displayed. ON ... Cruising state OFF ... Normal running state	• This is displayed even when no ASCD is mounted.
ASCD-OD cut signal	ASCD-OD CUT [ON/OFF]	X	—	• Status of ASCD-OD release signal is displayed. ON ... OD released OFF ... OD not released	• This is displayed even when no ASCD is mounted.
Kickdown switch	KICKDOWN SW [ON/OFF]	X	—	• ON/OFF status, computed from signal of kickdown SW, is displayed.	• This is displayed even when no kickdown switch is equipped.
Closed throttle position switch	CLOSED THL/SW [ON/OFF]	X	—	• ON/OFF status, computed from signal of closed throttle position SW, is displayed.	
Wide open throttle position switch	W/O THRL/P-SW [ON/OFF]	X	—	• ON/OFF status, computed from signal of wide open throttle position SW, is displayed.	
Gear position	GEAR	—	X	• Gear position data used for computation by control unit, is displayed.	
Selector lever position	SLCT LVR POSI	—	X	• Selector lever position data, used for computation by control unit, is displayed.	• A specific value used for control is displayed if fail-safe is activated due to error.
Vehicle speed	VEHICLE SPEED [km/h] or [mph]	—	X	• Vehicle speed data, used for computation by control unit, is displayed.	
Throttle position	THROTTLE POSI [/8]	—	X	• Throttle position data, used for computation by control unit, is displayed.	• A specific value used for control is displayed if fail-safe is activated due to error.
Line pressure duty	LINE PRES DTY [%]	—	X	• Control value of line pressure solenoid valve, computed by control unit from each input signal, is displayed.	
Torque converter clutch solenoid valve duty	TCC S/V DUTY [%]	—	X	• Control value of torque converter clutch solenoid valve, computed by control unit from each input signal, is displayed.	
Shift solenoid valve A	SHIFT S/V A [ON/OFF]	—	X	• Control value of shift solenoid valve A, computed by control unit from each input signal, is displayed.	Control value of solenoid is displayed even if solenoid circuit is disconnected. The "OFF" signal is displayed if solenoid circuit is shorted.
Shift solenoid valve B	SHIFT S/V B [ON/OFF]	—	X	• Control value of shift solenoid valve B, computed by control unit from each input signal, is displayed.	
Overrun clutch solenoid valve	OVERRUN/C S/V [ON/OFF]	—	X	• Control value of overrun clutch solenoid valve computed by control unit from each input signal is displayed.	
Self-diagnosis display lamp (OD OFF indicator lamp)	SELF-D DP LMP [ON/OFF]	—	X	• Control status of OD OFF indicator lamp is displayed.	

X: Applicable

—: Not applicable

TROUBLE DIAGNOSES

Diagnosis by CONSULT (Cont'd)

DATA ANALYSIS

Item	Display form	Meaning
Torque converter clutch solenoid valve duty	Approximately 4%	Lock-up "OFF"
	↓	↓
	Approximately 94%	Lock-up "ON"
Line pressure solenoid valve duty	Approximately 0%	Low line-pressure (Small throttle opening)
	↓	↓
	Approximately 95%	High line-pressure (Large throttle opening)
Throttle position sensor	Approximately 0.5V	Fully-closed throttle
	Approximately 4V	Fully-open throttle
Fluid temperature sensor	Approximately 1.5V	Cold [20°C (68°F)]
	↓	↓
	Approximately 0.5V	Hot [80°C (176°F)]

Gear position	1	2	3	4
Shift solenoid valve A	ON	OFF	OFF	ON
Shift solenoid valve B	ON	ON	OFF	OFF

Preliminary Check

A/T FLUID CHECK

Fluid leakage check

1. Clean area suspected of leaking. — for example, mating surface of converter housing and transmission case.
2. Start engine, apply foot brake, place selector lever in "D" position and wait a few minutes.
3. Stop engine.
4. Check for fresh leakage.

GI
MA
EM


Fluid condition check

Fluid color	Suspected problem
Dark or black with burned odor	Wear of frictional material
Milky pink	Water contamination — Road water entering through filler tube or breather
Varnished fluid, light to dark brown and tacky	Oxidation — Over or under filling, — Overheating

LC
EC
FE


Fluid level check — Refer to MA section (CHASSIS AND BODY MAINTENANCE).

CL

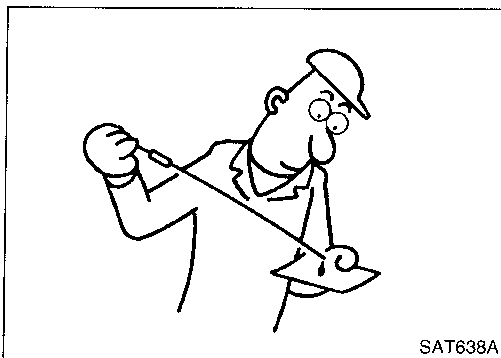

SAT638A

ROAD TEST PROCEDURE

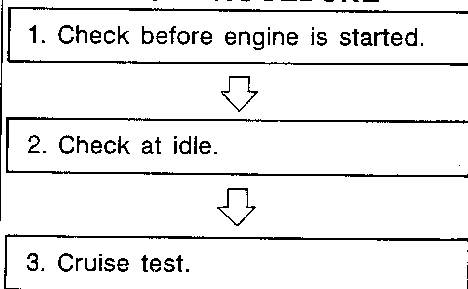

SAT786A

ROAD TEST

Description

- The purpose of the test is to determine overall performance of A/T and analyze causes of problems.
 - The road test consists of the following three parts:
 1. Check before engine is started
 2. Check at idle
 3. Cruise test
-
- Before road test, familiarize yourself with all test procedures and items to check.
 - Conduct tests on all items until specified symptom is found. Troubleshoot items which check out No Good after road test. Refer to "Self-diagnosis" and "Diagnostic Procedure", AT-41, 82.

MT
AT
PD

FA

RA

BR

ST


RS

BT

HA

EL

IDX

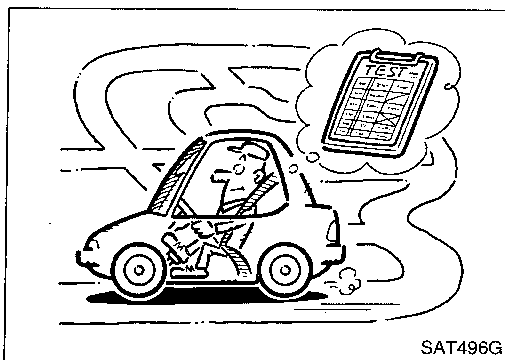


SAT496G

TROUBLE DIAGNOSES

Preliminary Check (Cont'd)

1. Check before engine is started

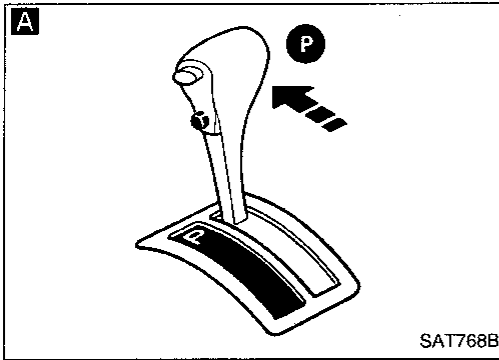


A B

1. Park vehicle on flat surface.
2. Turn ignition switch to "OFF" position.
3. Move selector lever to "P" position.
4. Set overdrive switch to "ON" position.
5. Turn ignition switch to "ON" position.
(Do not start engine.)
6. Does OD OFF indicator lamp come on for about 2 seconds?

No → Go to Diagnostic Procedure 1, AT-82.

Yes

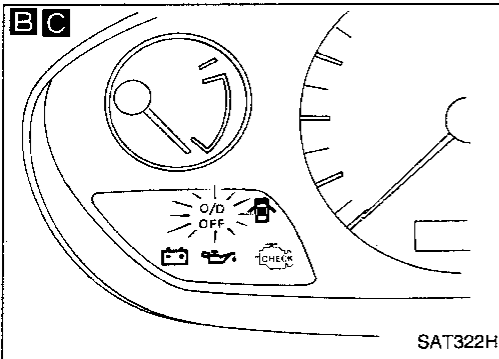

C

Does OD OFF indicator lamp flicker for about 8 seconds?


Yes → Perform self-diagnosis. Refer to SELF-DIAGNOSIS PROCEDURE, AT-41.

No

1. Turn ignition switch to "OFF" position.
2. Perform self-diagnosis and note NG items.
Refer to SELF-DIAGNOSIS PROCEDURE, AT-41.
3. Go to "2. Check at idle", AT-25.

TROUBLE DIAGNOSES

Preliminary Check (Cont'd)

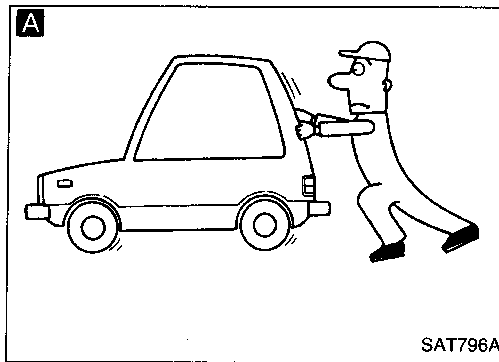

2. Check at idle

1. Park vehicle on flat surface.
2. Turn ignition switch to "OFF" position.
3. Move selector lever to "P" or "N" position.
4. Turn ignition switch to start position.
5. Is engine started?

No

Go to Diagnostic Procedure 2, AT-83.


Yes

1. Turn ignition switch to "OFF" position.
2. Move selector lever to "D", "1", "2" or "R" position.
3. Turn ignition switch to start position.
4. Is engine started?

Yes

Go to Diagnostic Procedure 2, AT-83.

No

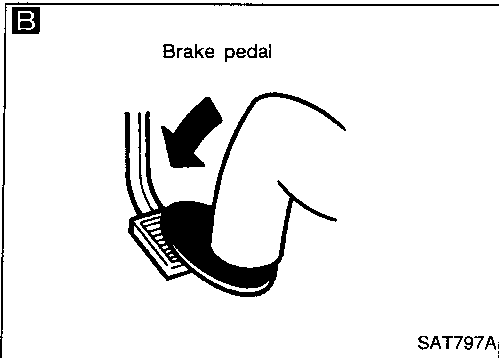

A

1. Turn ignition switch to "OFF" position.
2. Move selector lever to "P" position.
3. Release parking brake.
4. Push vehicle forward or backward.
5. Does vehicle move when it is pushed forward or backward?

Yes

Go to Diagnostic Procedure 3, AT-83.

No

1. Apply parking brake.
2. Move selector lever to "N" position.
3. Turn ignition switch to "START" position and start engine.
4. Release parking brake.
5. Does vehicle move forward or backward?

Yes

Go to Diagnostic Procedure 4, AT-84.

No

B

1. Apply foot brake.
2. Move selector lever to "R" position.
3. Is there large shock when changing from "N" to "R" position?

Yes

Go to Diagnostic Procedure 5, AT-85.

No

1. Release foot brake for several seconds.
2. Does vehicle creep backward when foot brake is released?

No

Go to Diagnostic Procedure 6, AT-86.

Yes

1. Move selector lever to "D", "1" and "2" position and check if vehicle creeps forward.
2. Does vehicle creep forward in all three positions?

No

Go to Diagnostic Procedure 7, AT-87.

Yes

Go to "3. Cruise test", AT-26.

GI

MA

EM

LC

EC

FE

CL

MT

AT

PD

FA

RA

BR

ST

RS

BT


HA

EL

IDX

TROUBLE DIAGNOSES

Preliminary Check (Cont'd)

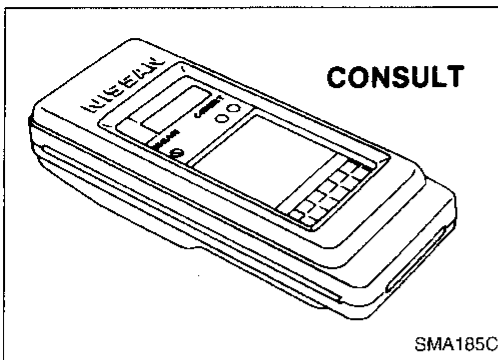


3. Cruise test

- Check all items listed in Parts 1 through 3.


With CONSULT

- Using CONSULT, conduct a cruise test and record the result.
- Print the result and ensure that shifts and lock-ups take place as per "Shift Schedule".

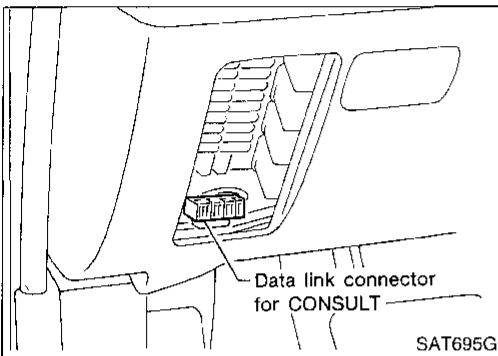


CONSULT setting procedure


1. Turn off ignition switch.
2. Connect "CONSULT" to Data link connector for CONSULT. Data link connector for CONSULT is located in left side dash panel.

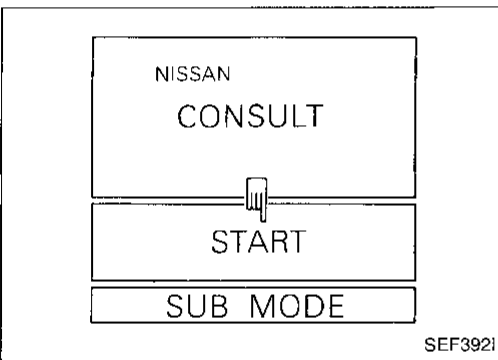

3. Turn on ignition switch.
4. Touch "START".

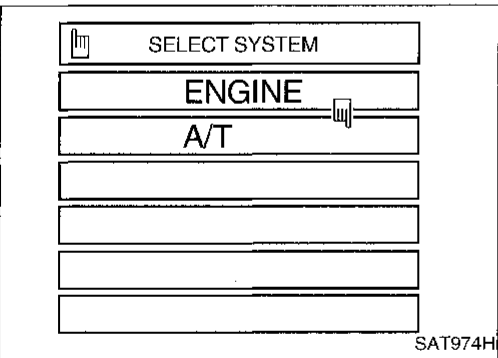


5. Touch "A/T".

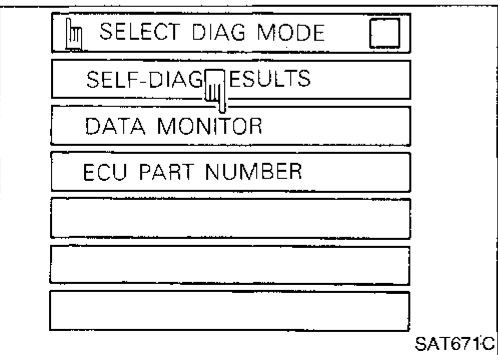


6. Touch "DATA MONITOR".

TROUBLE DIAGNOSES


Preliminary Check (Cont'd)

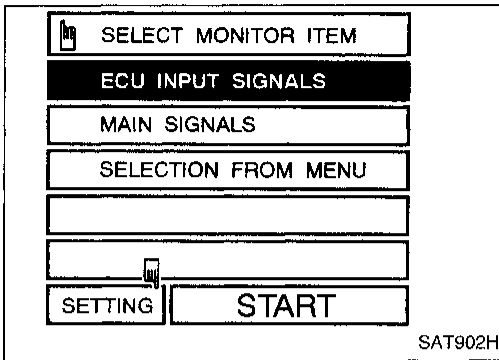

7. Touch "SETTING" to set recording condition.

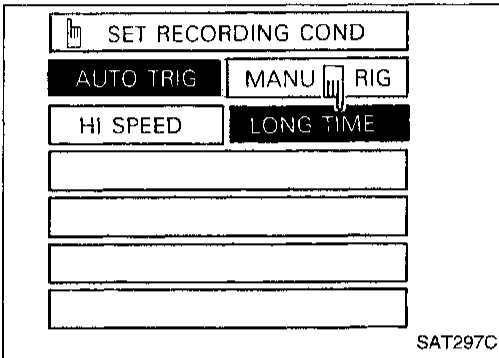


8. Touch "LONG TIME" and "ENTER" key.

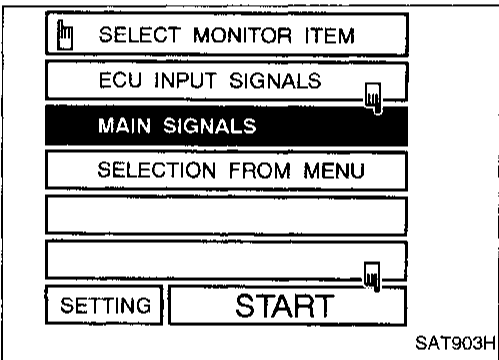


9. Go back to SELECT MONITOR ITEM and touch "MAIN SIGNALS".

10. Touch "START".

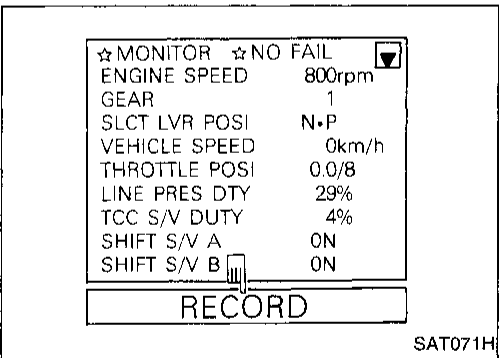

11. When performing cruise test, touch "RECORD".

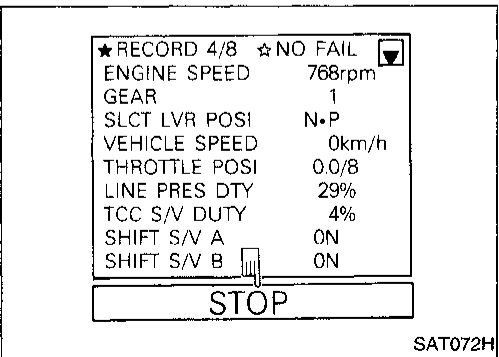


12. After finishing cruise test part 1, touch "STOP".

GI
MA
EM
LC
EC
FE
CL
MT
AT
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX


TROUBLE DIAGNOSES

Preliminary Check (Cont'd)


13. Touch "DISPLAY".

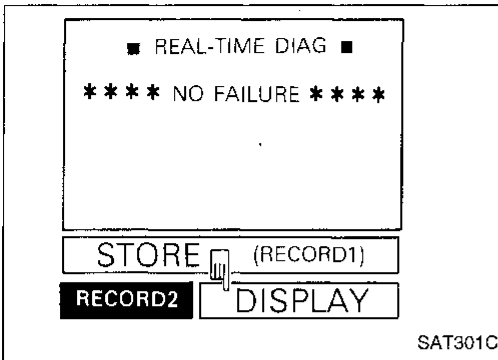

14. Touch "PRINT".

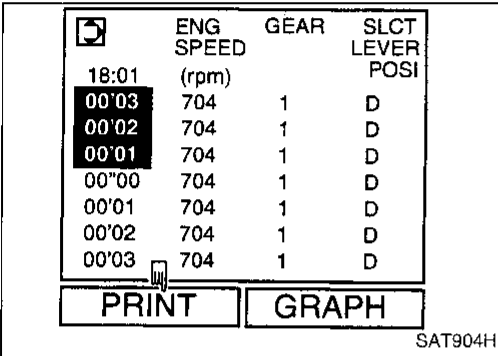


15. Touch "PRINT" again.

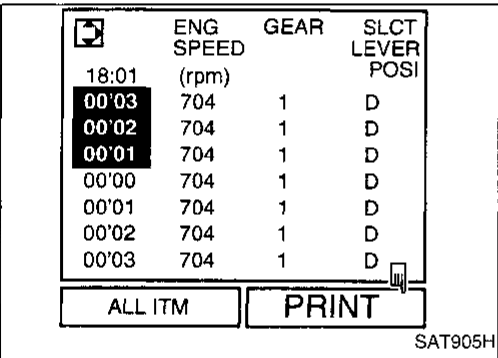


16. Check the monitor data printed out.

17. Continue cruise test part 2 and 3.

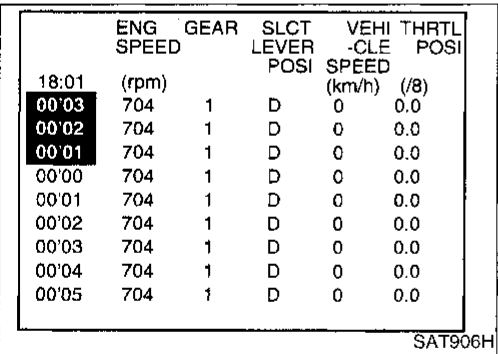

Without CONSULT


- Throttle position can be checked by voltage across terminals ③④ and ③⑤ of A/T control unit.

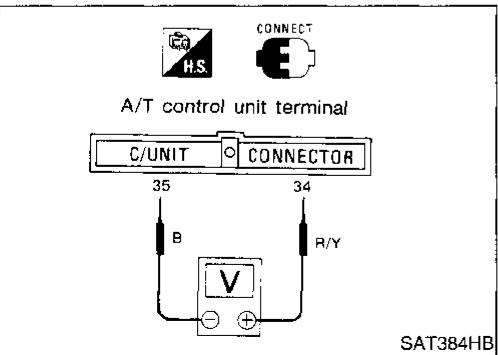


TROUBLE DIAGNOSES

Preliminary Check (Cont'd)

Cruise test — Part 1

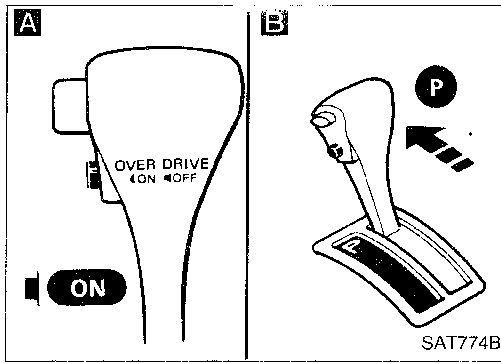


1. Drive vehicle for approx. 10 minutes to warm engine oil and ATF up to operating temperature.
ATF operating temperature:
50 - 80°C (122 - 176°F)

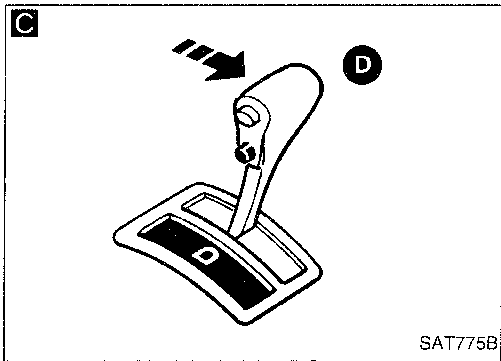

1. Park vehicle on flat surface.
2. Set overdrive switch to "ON" position.
3. Move selector lever to "P" position.
4. Start engine.

C Move selector lever to "D" position.

D Accelerate vehicle by constantly depressing accelerator pedal halfway.

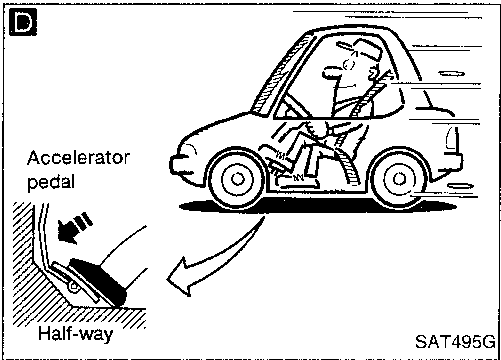


Does vehicle start from D₁?
Read gear position.

No → Go to Diagnostic Procedure 8, AT-88.

E Does A/T shift from D₁ to D₂ at the specified speed?
Read gear position, throttle opening and vehicle speed.
Specified speed when shifting from D₁ to D₂:
Refer to Shift schedule, AT-33.

No → Go to Diagnostic Procedure 9, AT-89.

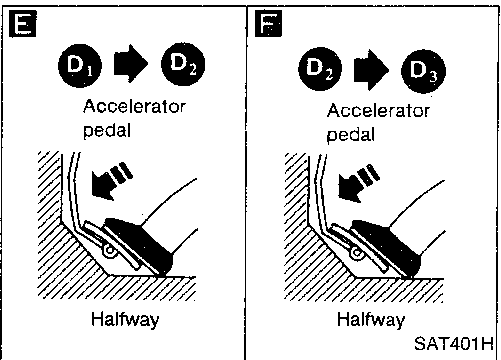

F Does A/T shift from D₂ to D₃ at the specified speed?
Read gear position, throttle position and vehicle speed.
Specified speed when shifting from D₂ to D₃:
Refer to Shift schedule, AT-33.






No → Go to Diagnostic Procedure 10, AT-90.

Yes → **A**

GI
MA
EM
LC
EC
FE
CL
MT
AT
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX

TROUBLE DIAGNOSES




Preliminary Check (Cont'd)

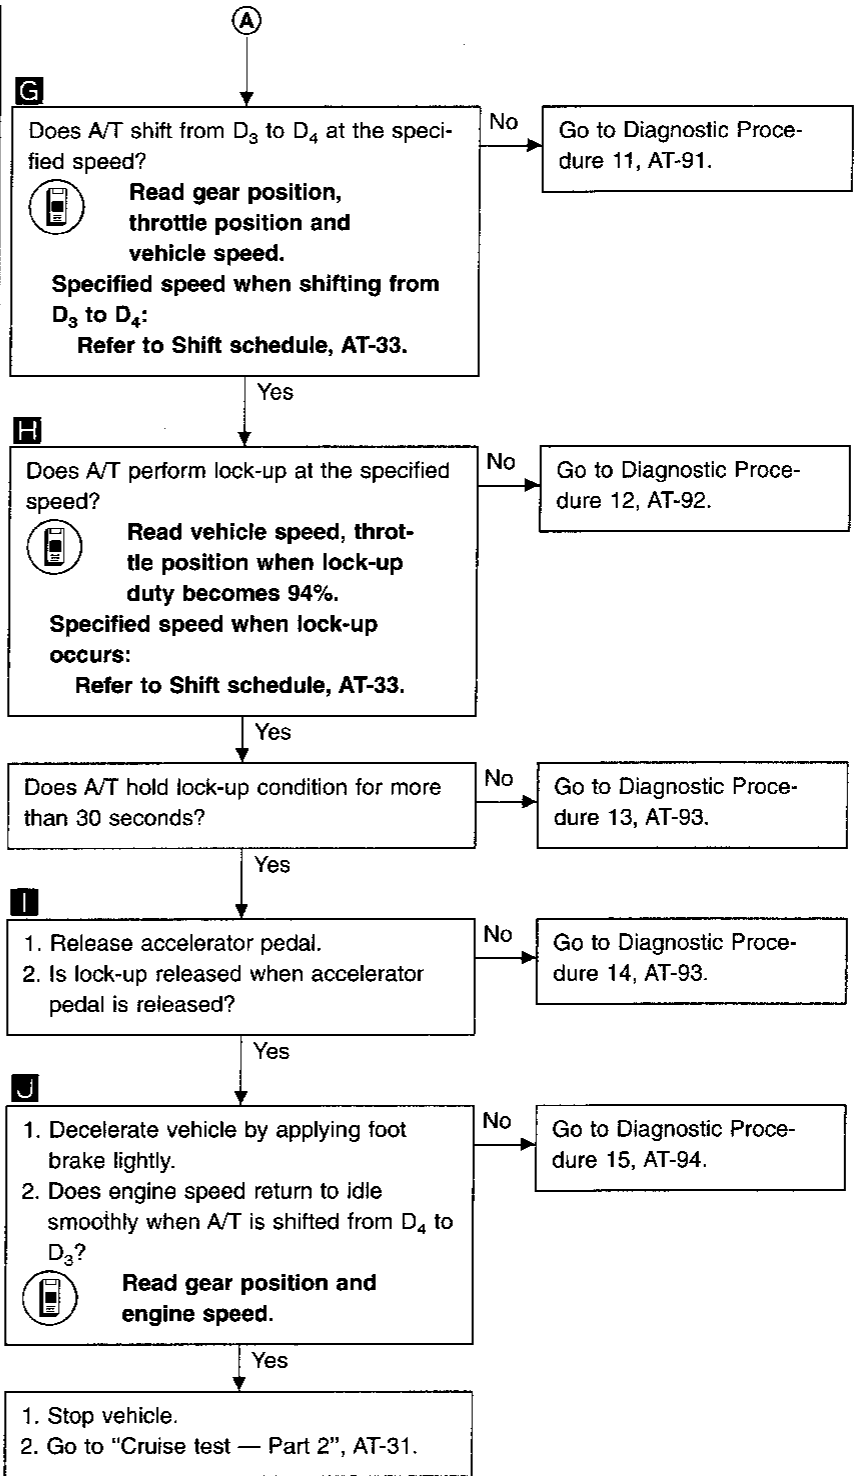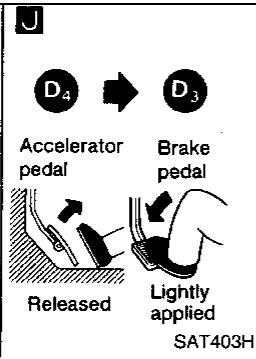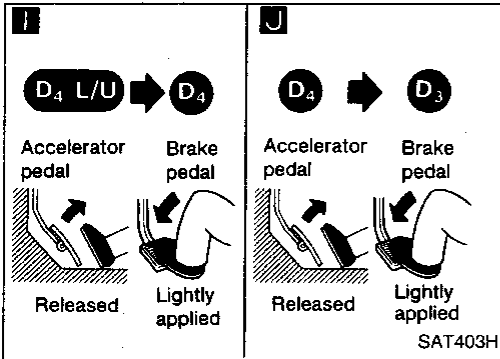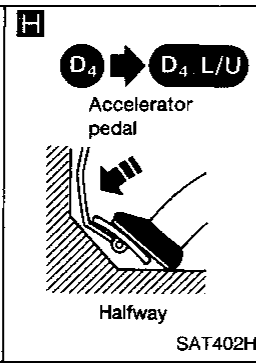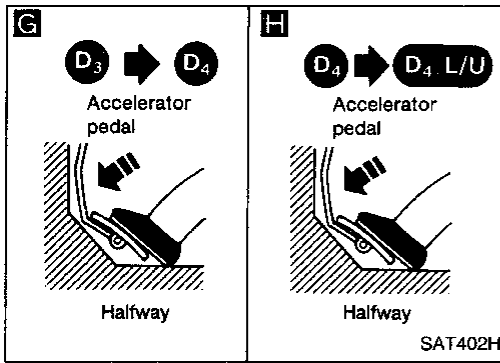

TROUBLE DIAGNOSES

Preliminary Check (Cont'd)

Cruise test — Part 2

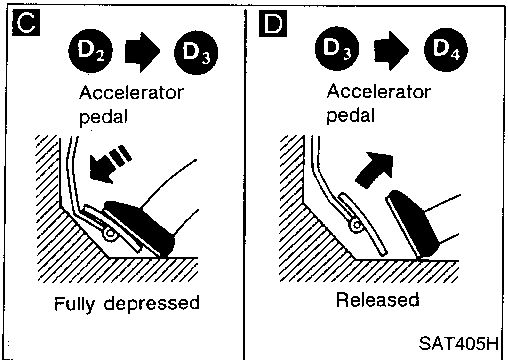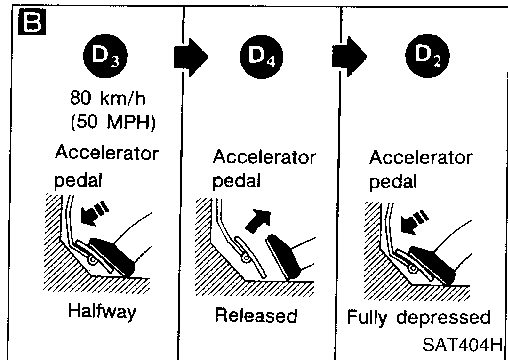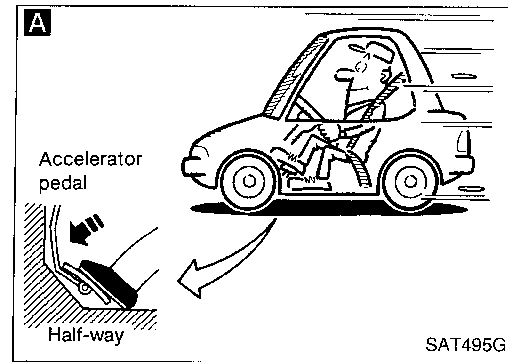

1. Confirm overdrive switch is in "ON" position.
2. Confirm selector lever is in "D" position.

A

1. Accelerate vehicle by half throttle again.
2. Does vehicle start from D₁?

Read gear position.

No → Go to Diagnostic Procedure 16, AT-95.

B

1. Accelerate vehicle to 80 km/h (50 MPH) as shown in illustration.
2. Release accelerator pedal and then quickly depress it fully.
3. Does A/T shift from D₄ to D₂ as soon as accelerator pedal is depressed fully?

Read gear position and throttle position.

No → Go to Diagnostic Procedure 9, AT-89.

C

Does A/T shift from D₂ to D₃ at the specified speed?

Read gear position, throttle position and vehicle speed.

Specified speed when shifting from D₂ to D₃:
Refer to Shift schedule, AT-33.

No → Go to Diagnostic Procedure 10, AT-90.

D

Release accelerator pedal after shifting from D₂ to D₃. Does A/T shift from D₃ to D₄ and does vehicle decelerate by engine brake?

Read gear position, throttle position and vehicle speed.

No → Go to Diagnostic Procedure 11, AT-91.






1. Stop vehicle.
2. Go to "Cruise test — Part 3", AT-32.

GI
MA
EM
LC
EC
FE
CL
MT
AT
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX

TROUBLE DIAGNOSES

Preliminary Check (Cont'd)

Cruise test — Part 3

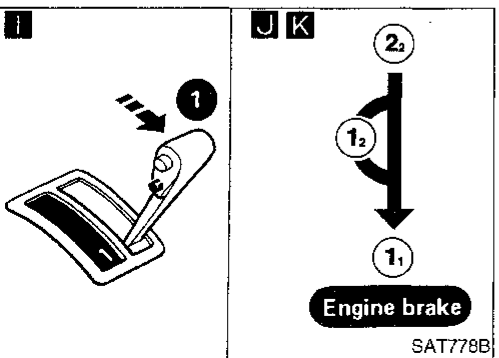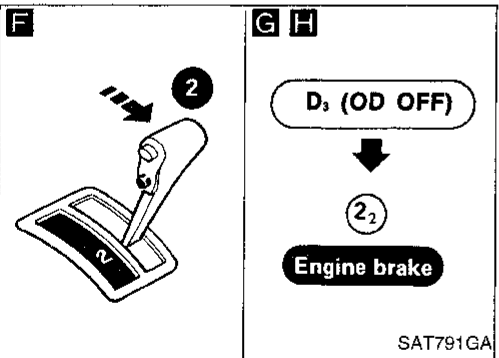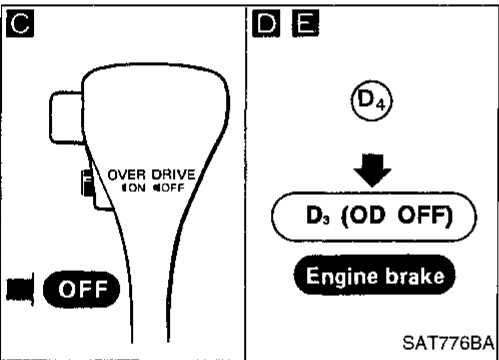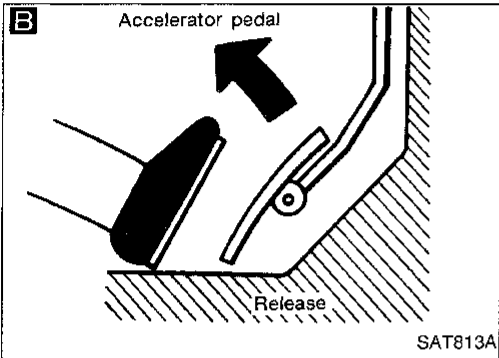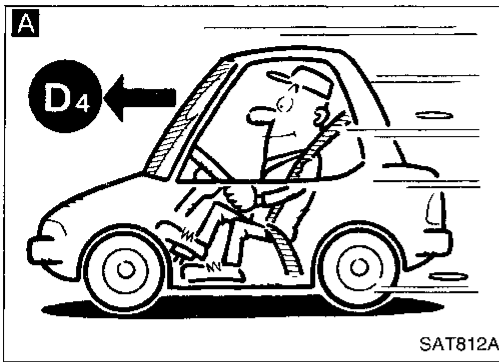

1. Confirm overdrive switch is in "ON" position.
2. Confirm selector lever is in "D" position.

A
Accelerate vehicle using half-throttle to D₄.

B
Release accelerator pedal.

C
Set overdrive switch to "OFF" position while driving in D₄.

D
Does A/T shift from D₄ to D₃?
Read gear position and vehicle speed.

No → Go to Diagnostic Procedure 17, AT-95.

E
Does vehicle decelerate by engine brake?
No → Go to Diagnostic Procedure 15, AT-94.

F
Move selector lever from "D" to "2" position while driving in D₃.

G
Does A/T shift from D₃ to 2₂?
Read gear position.

No → Go to Diagnostic Procedure 18, AT-96.

H
Does vehicle decelerate by engine brake?
No → Go to Diagnostic Procedure 15, AT-94.

I J
1. Move selector lever from "2" to "1" position while driving in 2₂.
2. Does A/T shift from 2₂ to 1₁ position?
Read gear position.

No → Go to Diagnostic Procedure 19, AT-96.

K
Does vehicle decelerate by engine brake?
No → Go to Diagnostic Procedure 20, AT-96.

1. Stop vehicle.
2. Perform self-diagnosis. Refer to SELF-DIAGNOSTIC PROCEDURE, AT-41.

TROUBLE DIAGNOSES

Preliminary Check (Cont'd)

SHIFT SCHEDULE

Vehicle speed when shifting gears

Throttle position	Vehicle speed km/h (MPH)						
	D ₁ → D ₂	D ₂ → D ₃	D ₃ → D ₄	D ₄ → D ₃	D ₃ → D ₂	D ₂ → D ₁	1 ₂ → 1 ₁
Full throttle	53 - 57 (33 - 35)	96 - 104 (60 - 65)	149 - 159 (93 - 99)	143 - 153 (89 - 95)	86 - 94 (53 - 58)	40 - 44 (25 - 27)	53 - 57 (33 - 35)
Half throttle	39 - 43 (24 - 27)	74 - 80 (46 - 50)	112 - 120 (70 - 75)	56 - 64 (35 - 40)	27 - 33 (17 - 21)	10 - 14 (6 - 9)	53 - 57 (33 - 35)

Vehicle speed when performing and releasing lock-up

Throttle position	OD switch [Shift position]	Vehicle speed km/h (MPH)	
		Lock-up "ON"	Lock-up "OFF"
Full throttle	ON [D ₄]	150 - 158 (93 - 98)	144 - 152 (89 - 94)
	OFF [D ₃]	91 - 99 (57 - 62)	86 - 94 (53 - 58)
Half throttle	ON [D ₄]	112 - 120 (70 - 75)	107 - 115 (66 - 71)
	OFF [D ₃]	91 - 99 (57 - 62)	86 - 94 (53 - 58)

GI

MA

EM

LC

EC

FE

CL

MT

AT

PD

FA

RA

BR

ST

RS


BT

HA


EL

IDX

A/T Electrical Parts Location

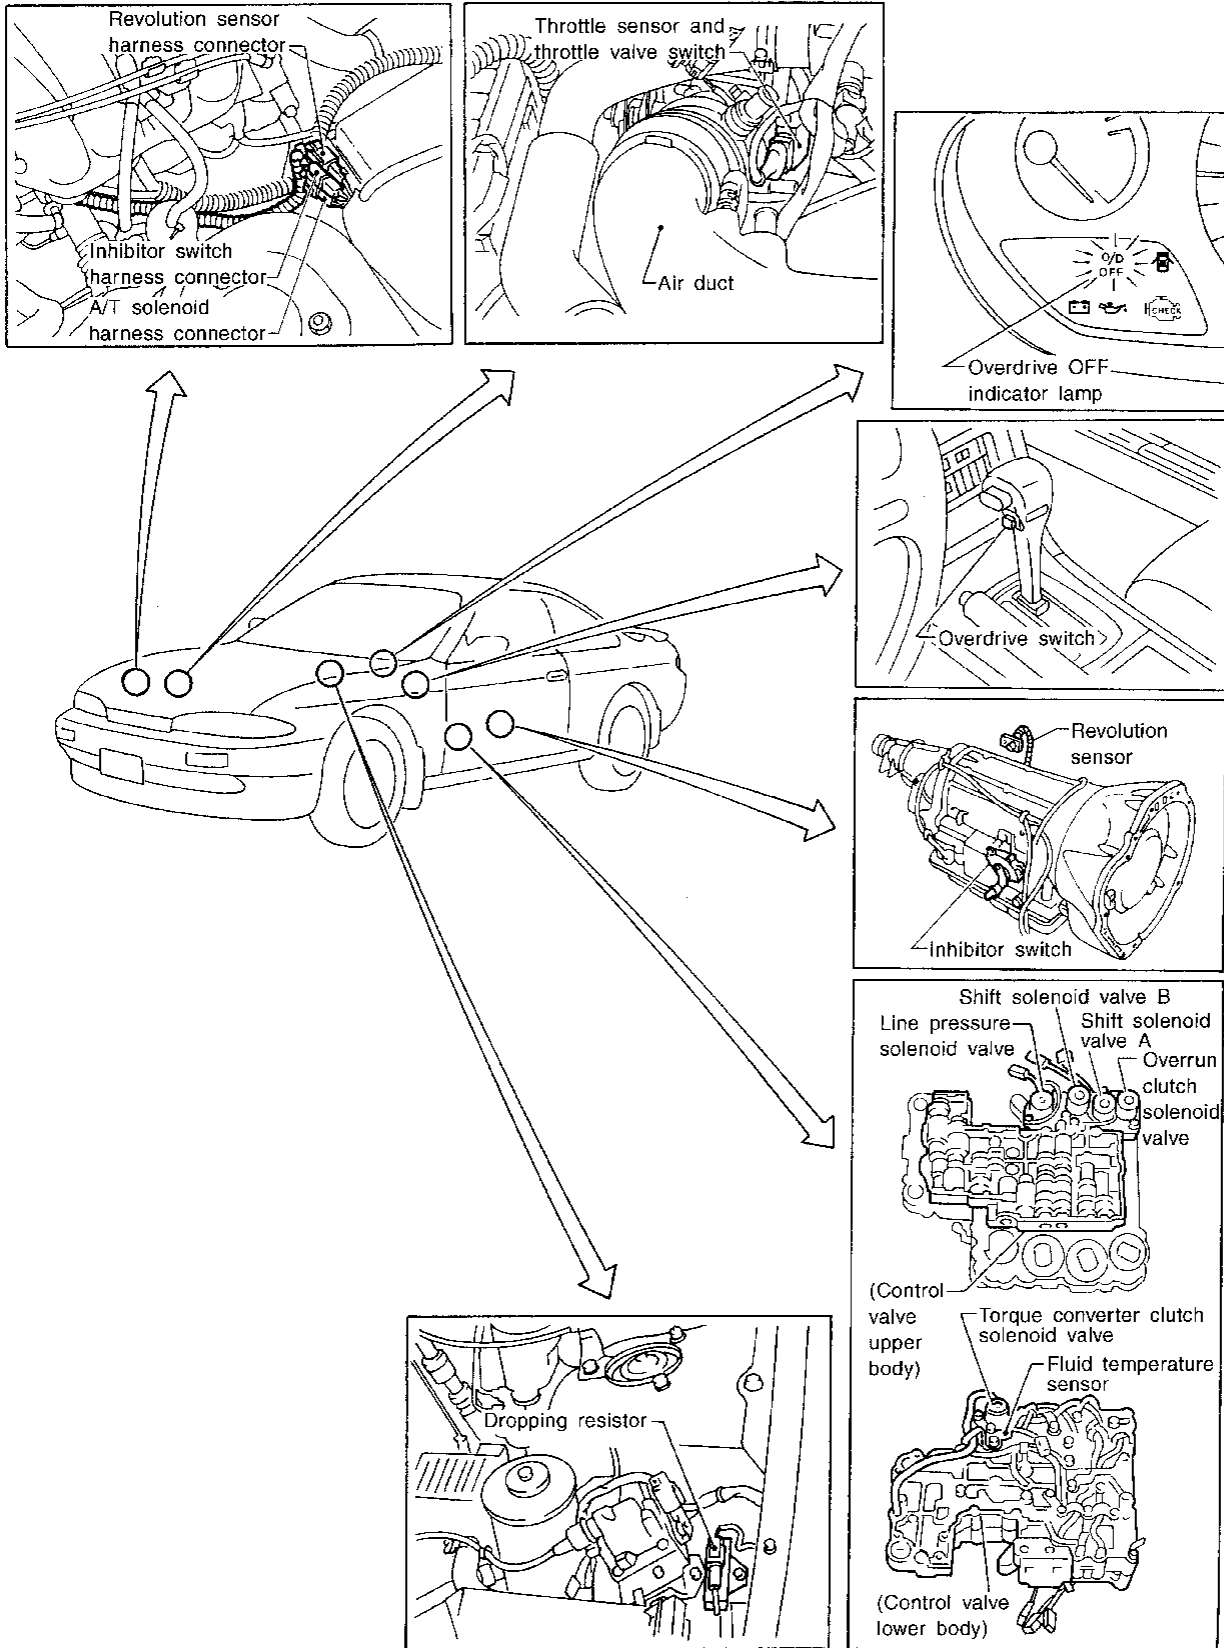

Circuit Diagram for Quick Pinpoint Check





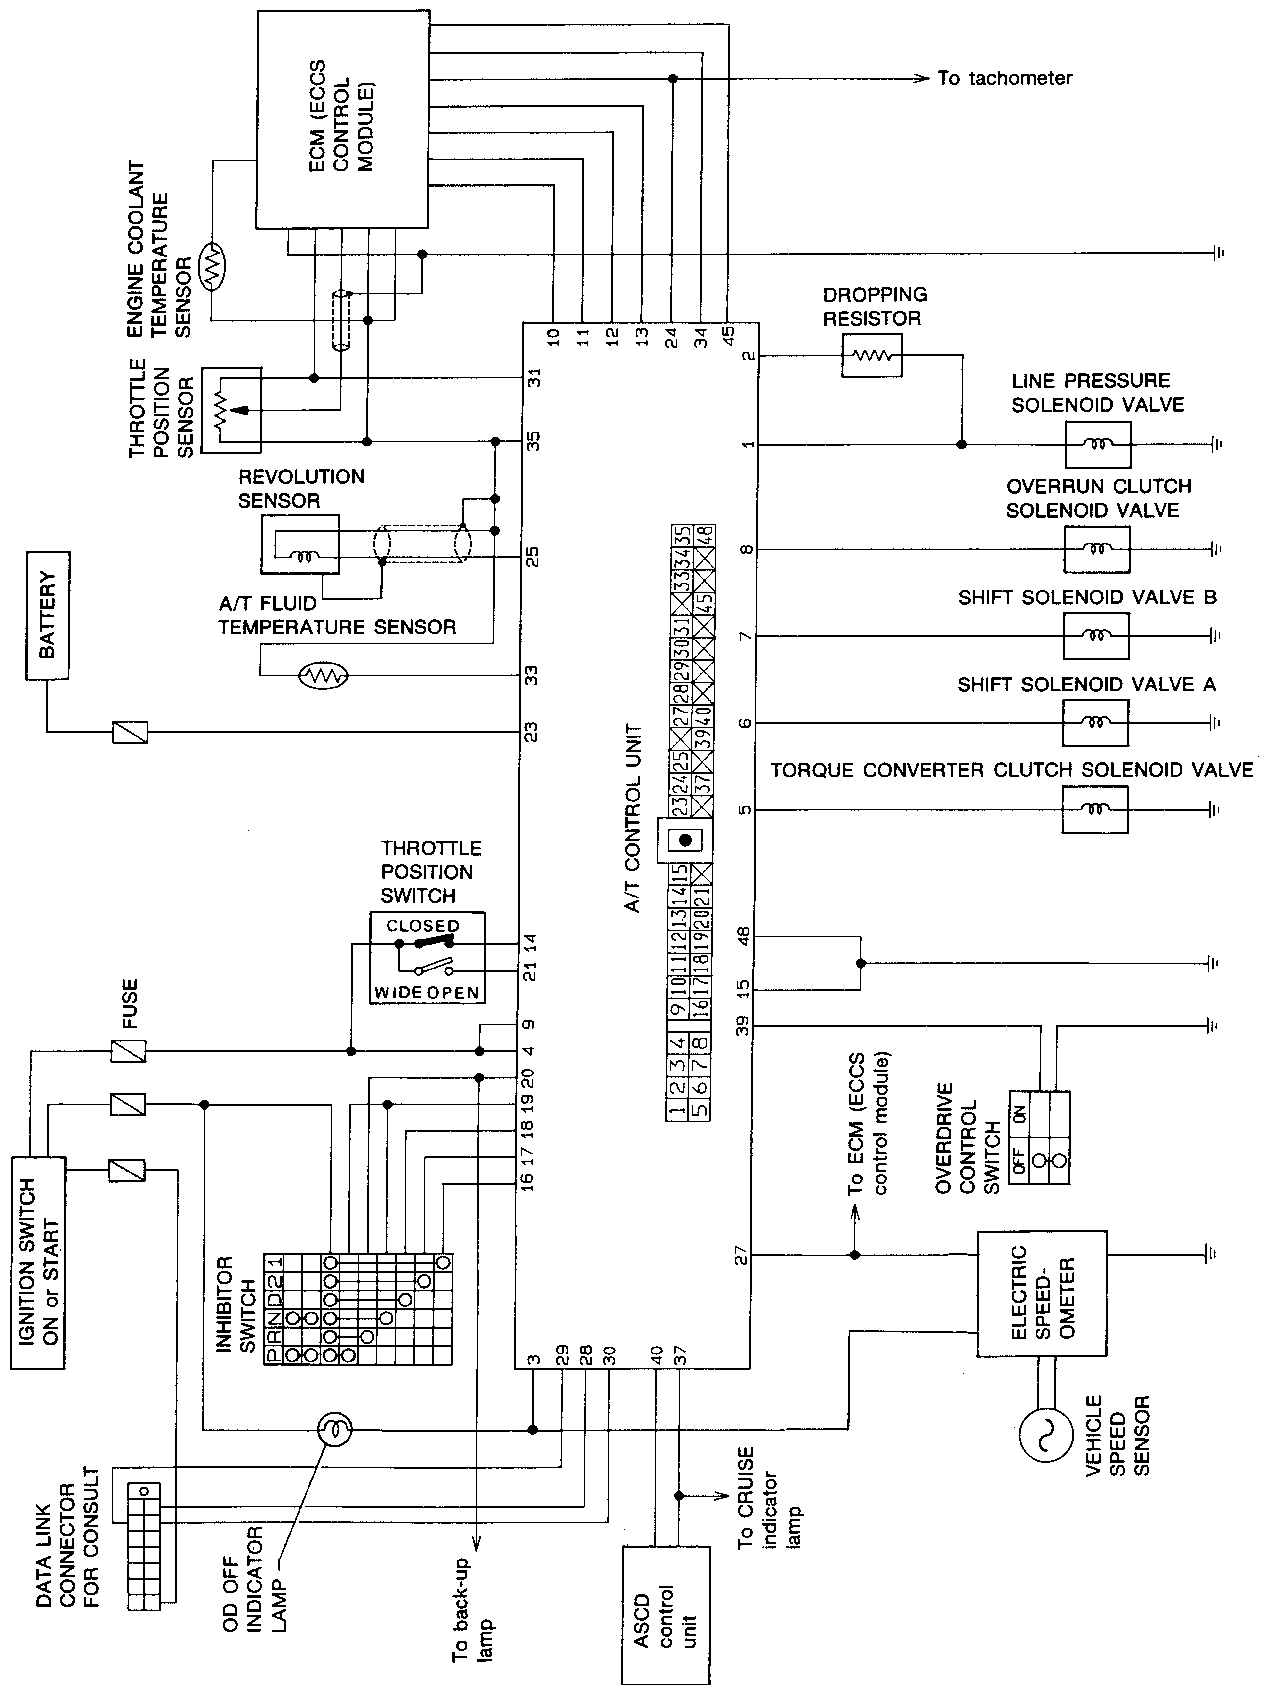


- GI
- MA
- EM
- LC
- EC
- FE
- CL
- MT
- AT**
- PD
- FA
- RA
- BR
- ST
- RS
- BT
- HA
- EL
- IDX

TROUBLE DIAGNOSES

Wiring Diagram — AT —

    AT-A/T-01

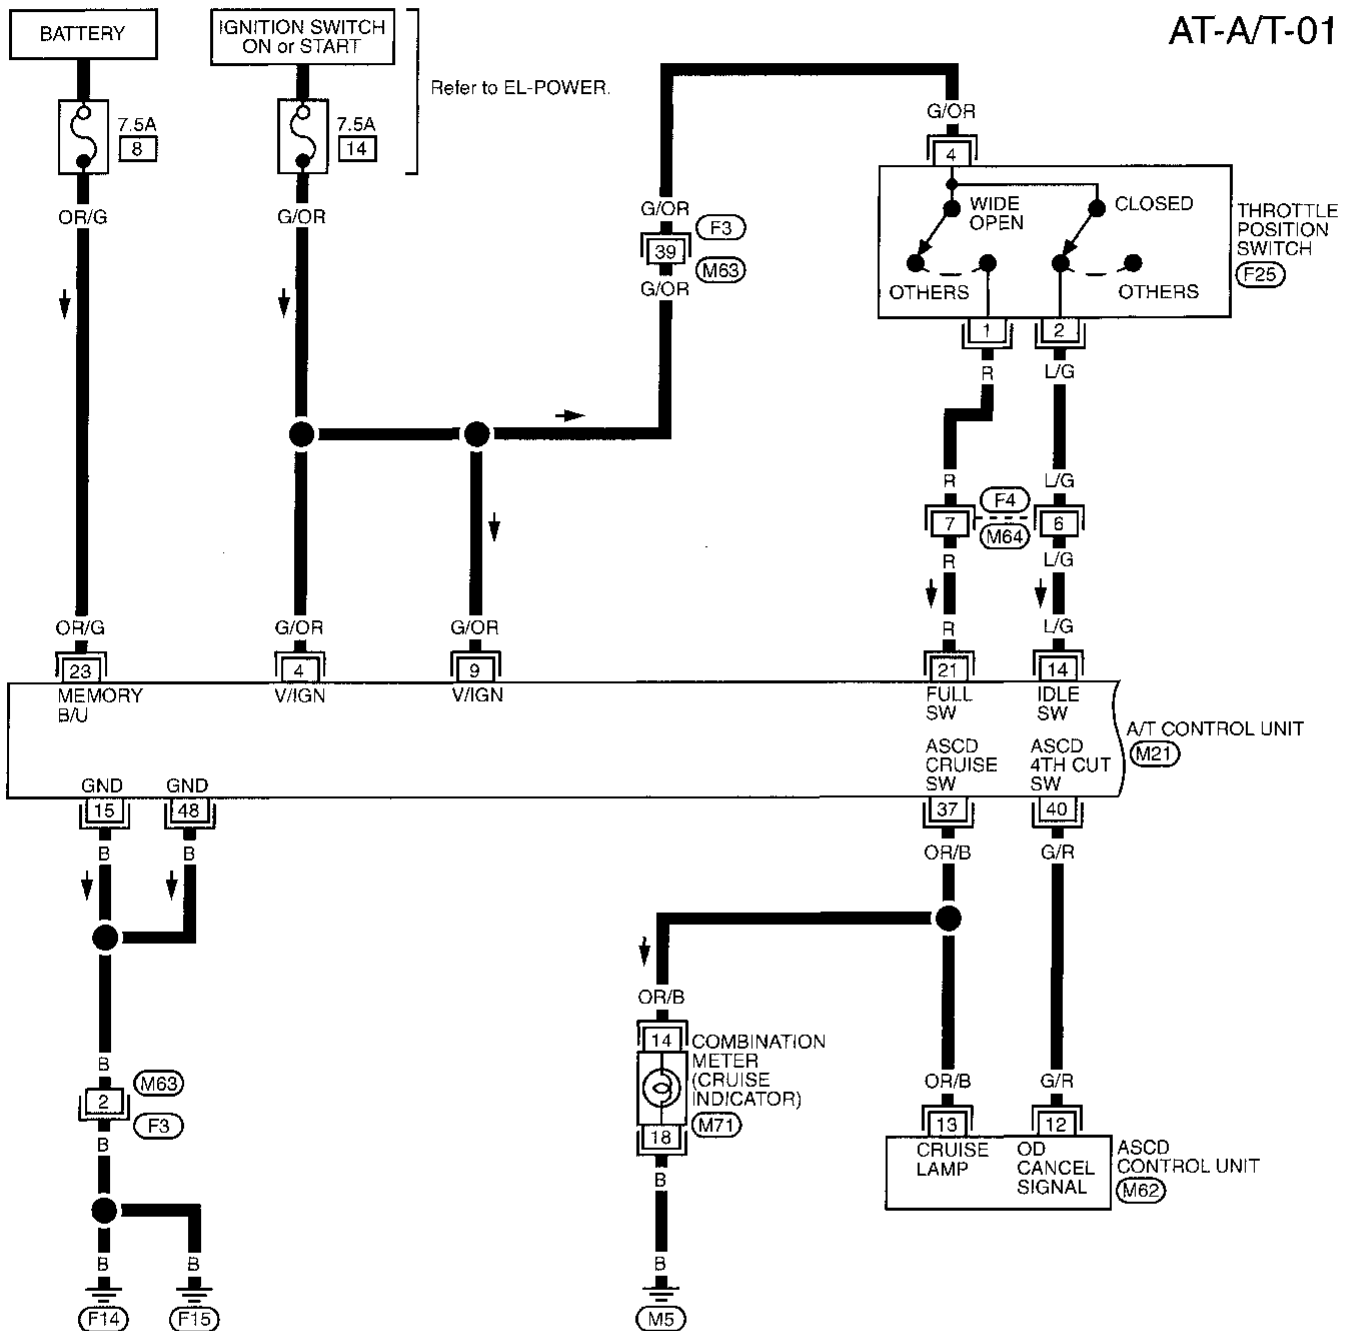



Refer to last page (Foldout page).

M21
F3 , M63

TROUBLE DIAGNOSES

Wiring Diagram — AT — (Cont'd)

AT-A/T-02

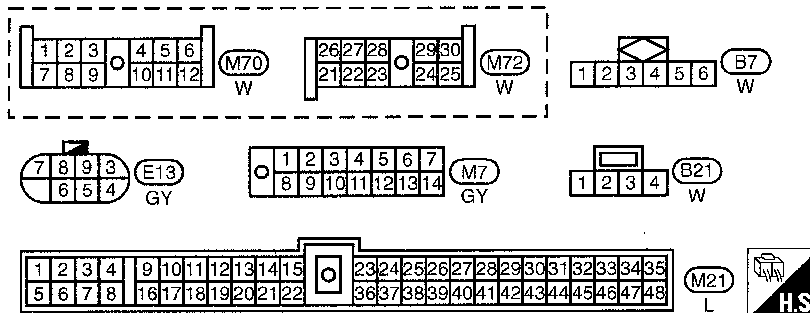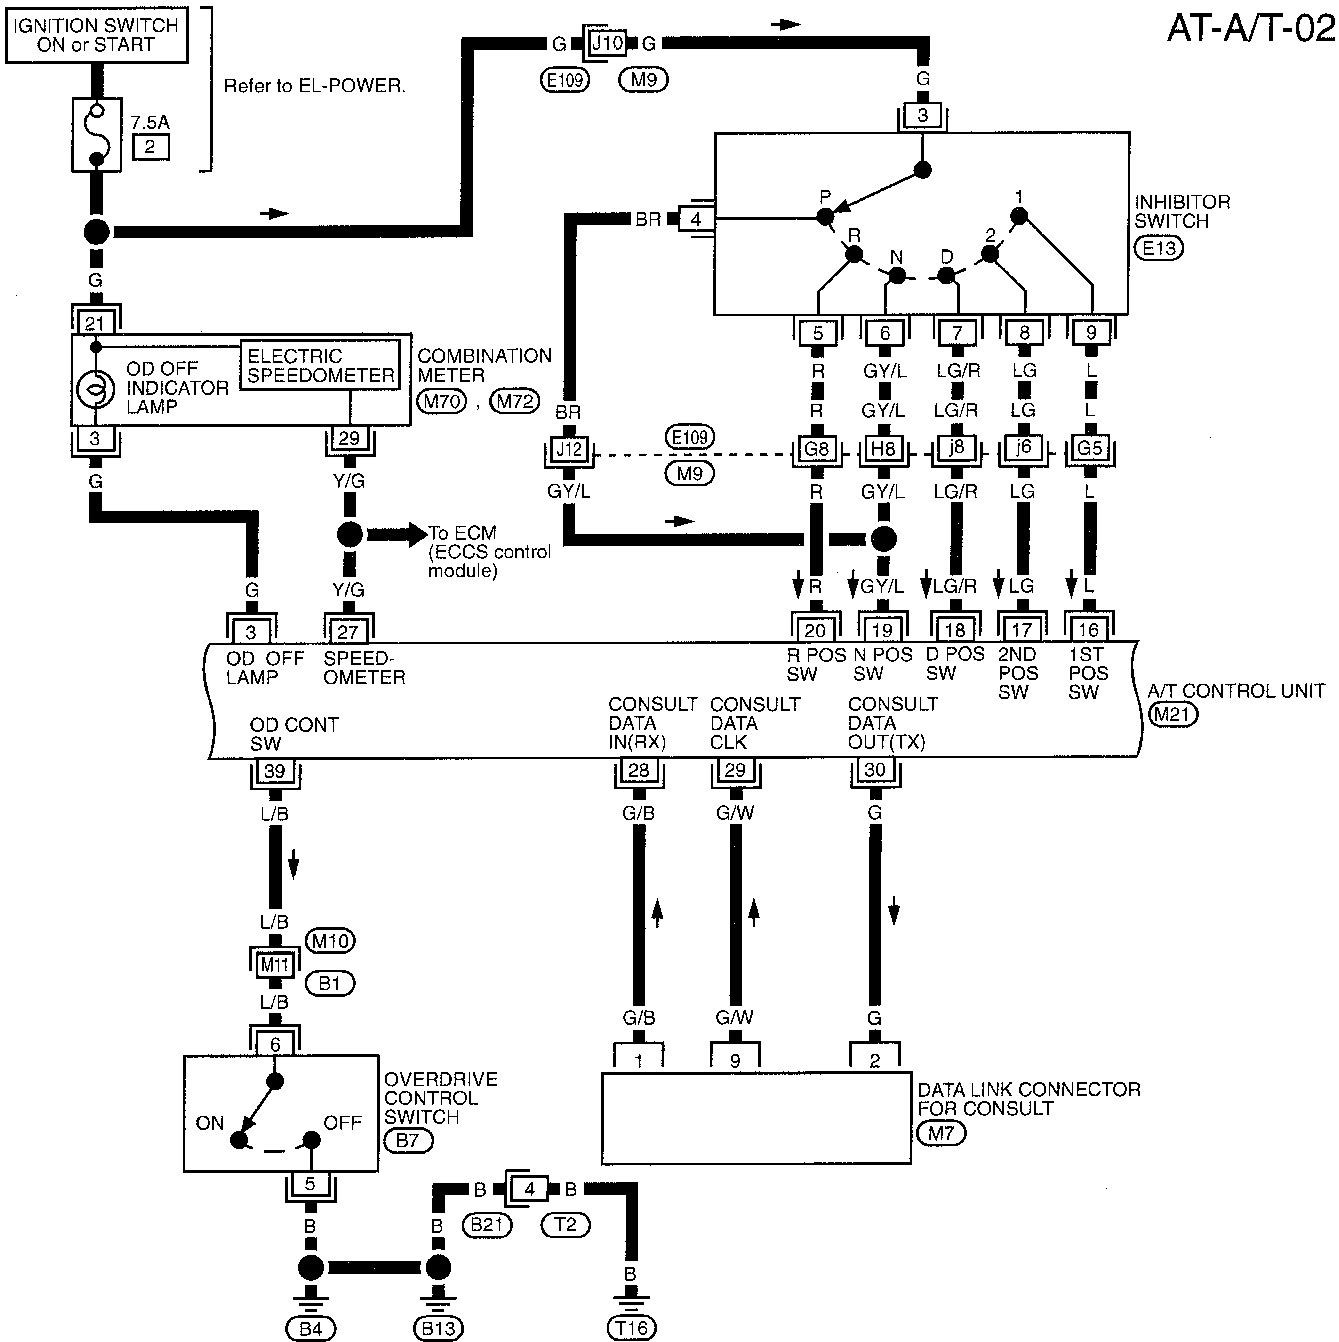

Refer to last page (Foldout page).

 
 
 

(M9, E109)
(M10, B1)
(M21)




TROUBLE DIAGNOSES

Wiring Diagram — AT — (Cont'd)

AT-A/T-03

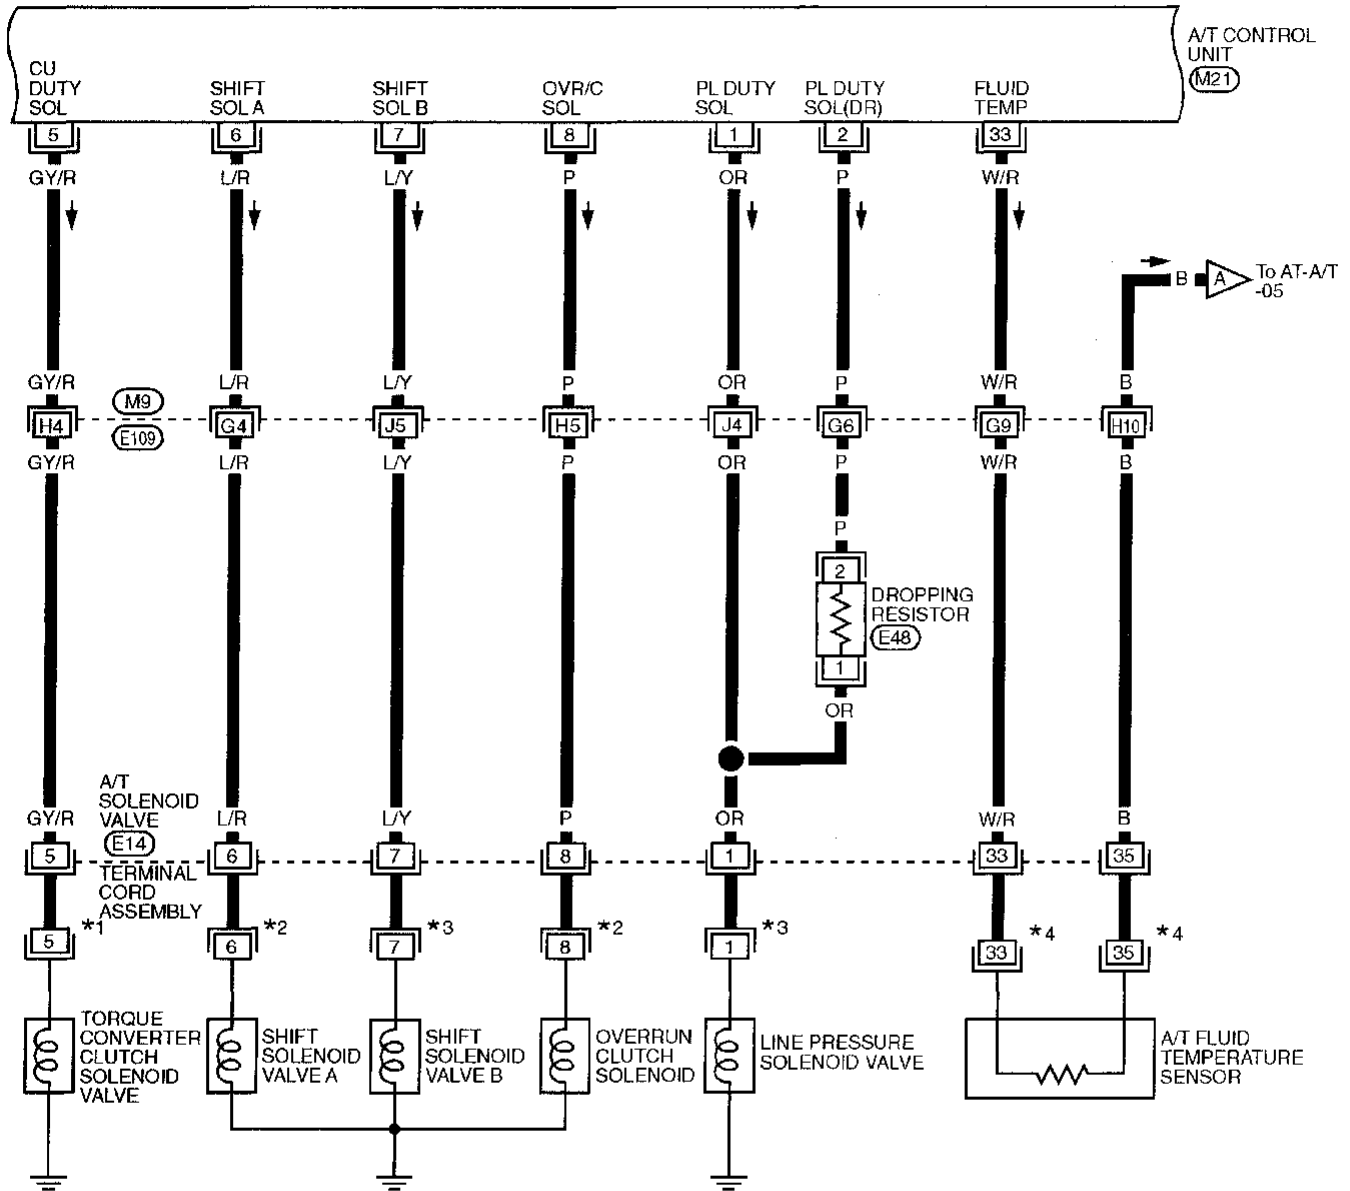

(M21)
L

 

Refer to last page (Foldout page).

(M9) . (E109)

 

(M21)

TROUBLE DIAGNOSES

Wiring Diagram — AT — (Cont'd)

AT-A/T-04

GI
MA
EM
LC
EC
FE
CL
MT
AT
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX

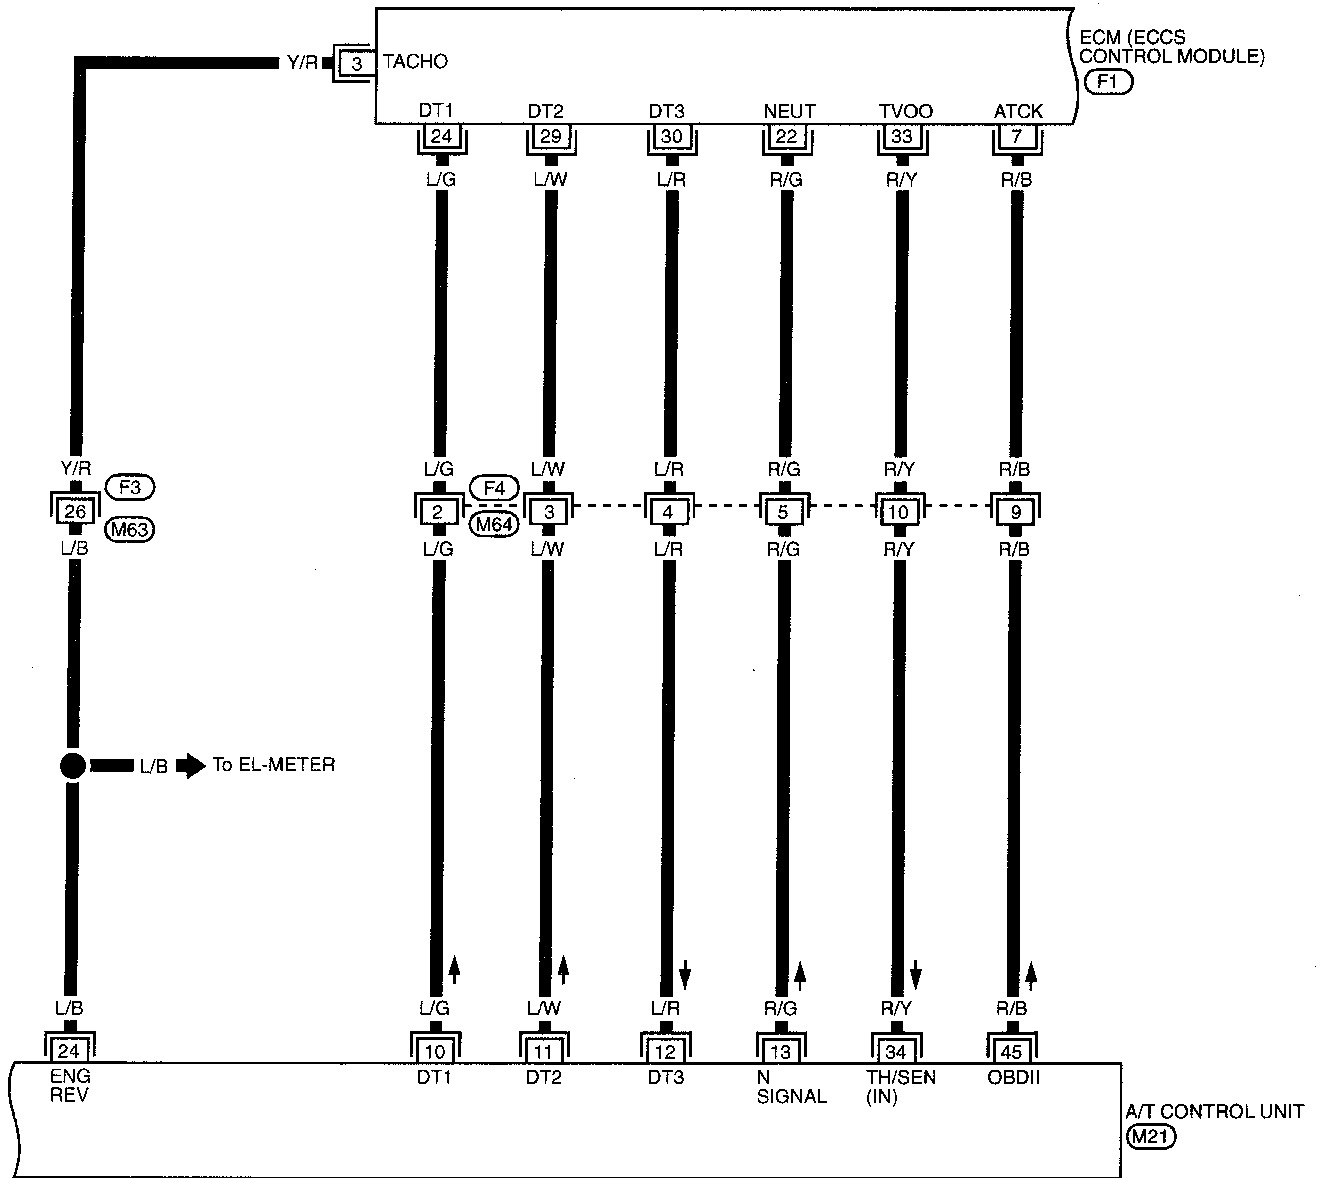



Refer to last page (Foldout page).

- (M21)
- (F1)
- (F3) (M63)

TROUBLE DIAGNOSES


Wiring Diagram — AT — (Cont'd)

AT-A/T-05

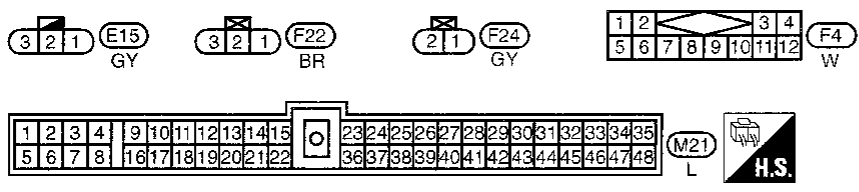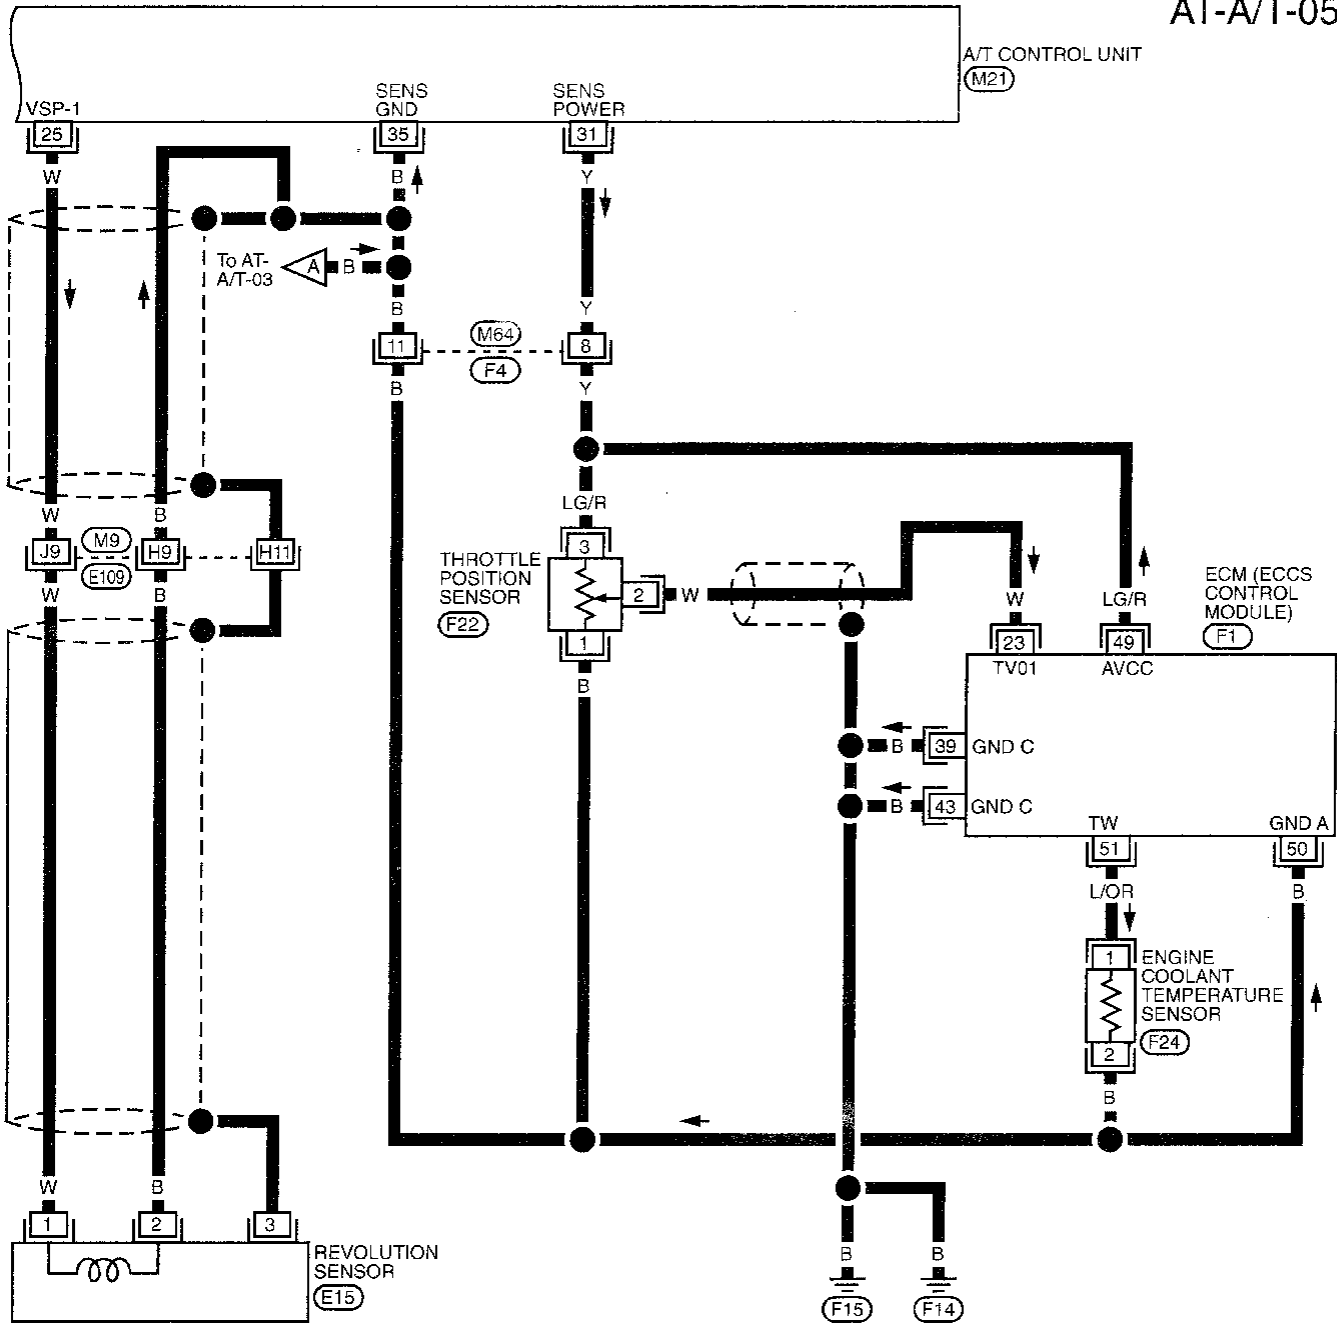

Refer to last page (Foldout page).
 (M9), (E109)
 (M21)
 (F1)

TROUBLE DIAGNOSES

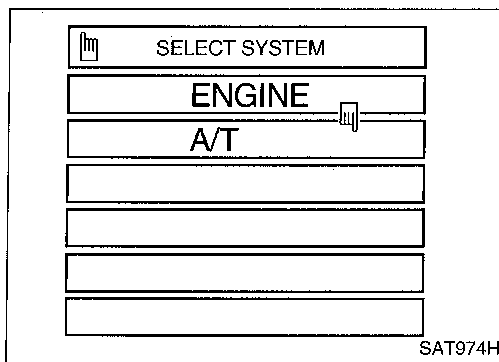




Self-diagnosis

After performing this procedure, place check marks for results on the "DIAGNOSTIC WORKSHEET", AT-15. Reference pages are provided following the items.

SELF-DIAGNOSTIC PROCEDURE (With CONSULT)

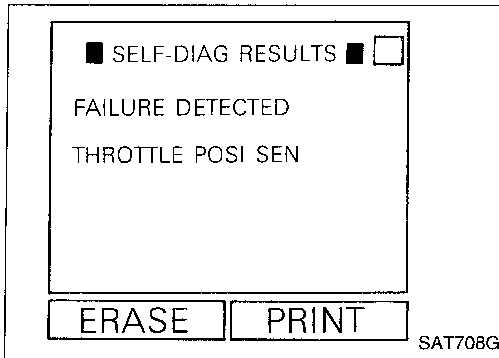

1. Turn on CONSULT and touch "A/T".
If A/T is not displayed, check A/T control unit power supply and ground circuit. Refer to AT-97. If result is NG, refer to EL section ("POWER SUPPLY ROUTING").
2. Touch "SELF-DIAG RESULTS".
Display shows malfunction experienced since the last erasing operation.
CONSULT performs REAL-TIME SELF-DIAGNOSIS.
Also, any malfunction detected while in this mode will be displayed at real time.



Detected items (Screen terms for CONSULT, "SELF-DIAG RESULTS" mode)	Malfunction is detected when ...	Indicator for Diagnostic Results	
		 OD OFF indicator lamp (Available when "A/T" on CONSULT is touched.)	 Malfunction indicator lamp*2 (Available when "ENGINE" on CON- SULT is touched.)
Inhibitor switch circuit (INHIBITOR SWITCH)	• A/T control unit does not receive the correct voltage signal (based on the gear position) from the switch.	—	X
Revolution sensor (VHCL SPEED SEN-A/T)	• A/T control unit does not receive the proper voltage signal from the sensor.	X	X
Vehicle speed sensor (Meter) (VHCL SPEED SEN-MTR)	• A/T control unit does not receive the proper voltage signal from the sensor.	X	—
Improper shifting to 1st gear position (A/T 1ST SIGNAL)	• A/T cannot be shifted to the 1st gear position even when electrical circuit is good.	—	X*1
Improper shifting to 2nd gear position (A/T 2ND SIGNAL)	• A/T cannot be shifted to the 2nd gear position even when electrical circuit is good.	—	X*1
Improper shifting to 3rd gear position (A/T 3RD SIGNAL)	• A/T cannot be shifted to the 3rd gear position even when electrical circuit is good.	—	X*1
Improper shifting to 4th gear position or TCC (A/T 4TH SIG OR TCC)	• A/T cannot be shifted to the 4th gear position or can not perform lock-up, even when electrical circuit is good.	—	X*1
Shift solenoid valve A (SHIFT SOLENOID/V A)	• A/T control unit detects the improper voltage drop when it tries to operate the solenoid valve.	X	X
Shift solenoid valve B (SHIFT SOLENOID/V B)	• A/T control unit detects the improper voltage drop when it tries to operate the solenoid valve.	X	X
Overrun clutch solenoid valve (OVERRUN CLUTCH S/V)	• A/T control unit detects the improper voltage drop when it tries to operate the solenoid valve.	X	X
T/C clutch solenoid valve (TOR CONV CLUTCH SV)	• A/T control unit detects the improper voltage drop when it tries to operate the solenoid valve.	X	X
Line pressure solenoid valve (LINE PRESSURE S/V)	• A/T control unit detects the improper voltage drop when it tries to operate the solenoid valve.	X	X
Throttle position sensor Throttle position switch (THRTL POSI SEN-A/T)	• A/T control unit receives an excessively low or high voltage from the sensor.	X	X
Engine speed signal (ENGINE SPEED SIG)	• A/T control unit does not receive the proper voltage signal from the ECM.	X	X


TROUBLE DIAGNOSES

 
Self-diagnosis (Cont'd)

Detected items (Screen terms for CONSULT, "SELF-DIAG RESULTS" mode)	Malfunction is detected when ...	Indicator for Diagnostic Results	
		 OD OFF indicator lamp (Available when "A/T" on CONSULT is touched.)	 Malfunction indicator lamp*2 (Available when "ENGINE" on CONSULT is touched.)
Fluid temperature sensor (FLUID TEMP SENSOR)	• A/T control unit receives an excessively low or high voltage from the sensor.	X	X
Initial start INITIAL START	• This is not a malfunction message (Whenever shutting off a power supply to the control unit, this message appears on the screen.)	X	—
No failure (NO SELF DIAGNOSTIC FAILURE INDICATED FURTHER TESTING MAY BE REQUIRED**)	• No failure has been detected.	X	X


X : Applicable

- : Not applicable

 *1 : These malfunctions can not be displayed by MIL  if another malfunction is assigned to the OD OFF indicator lamp




*2 : Refer to EC section ["Malfunction Indicator Lamp (MIL)", "ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION"].


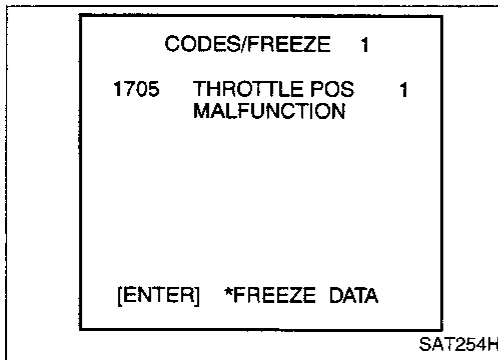


SELF-DIAGNOSTIC PROCEDURE [With Generic Scan Tool (GST)]

Refer to EC section ["Generic Scan Tool (GST)", "ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION"].


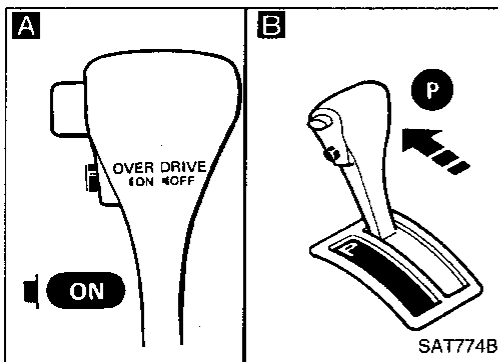


SELF-DIAGNOSTIC PROCEDURE (No Tools)

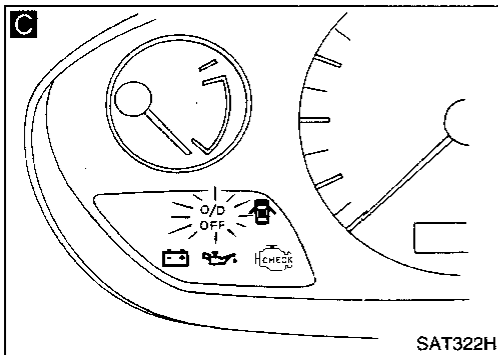
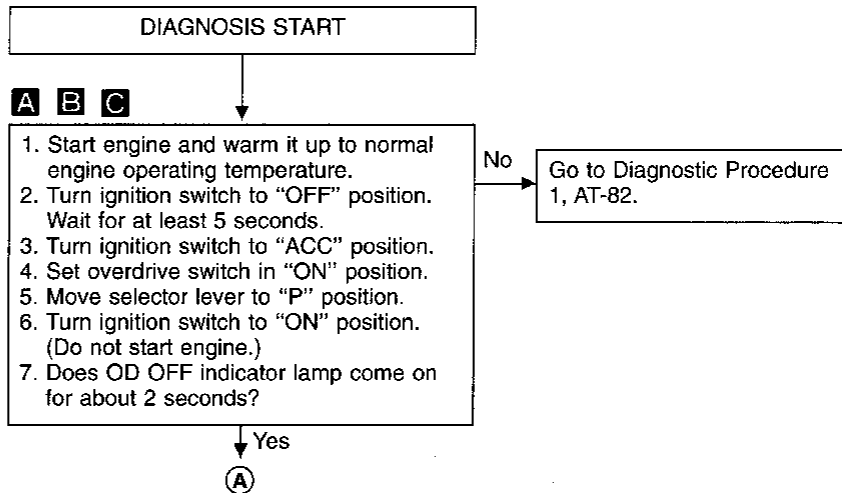


TROUBLE DIAGNOSES



Self-diagnosis (Cont'd)

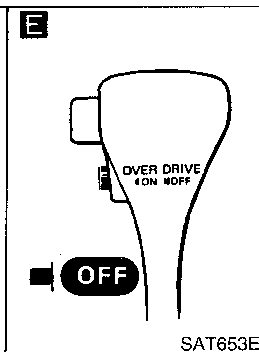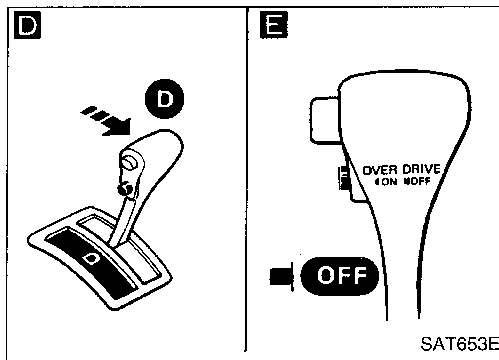

- A**
- D E**
1. Turn ignition switch to "OFF" position.
 2. Turn ignition switch to "ON" position
(Do not start engine.)
 3. Move selector lever to "D" position.
 4. Turn ignition switch to "OFF" position.
 5. Set overdrive switch to "OFF" position.
 6. Turn ignition switch to "ON" position
(Do not start engine.)
- Wait for more than 2 seconds after ignition switch "ON".

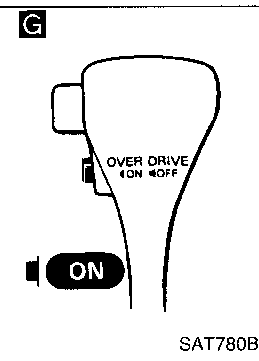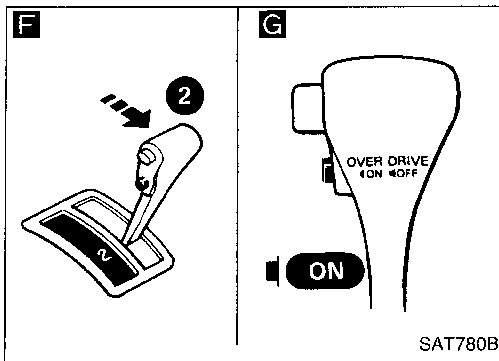

- F G**
1. Move selector lever to "2" position.
 2. Set overdrive switch in "ON" position.

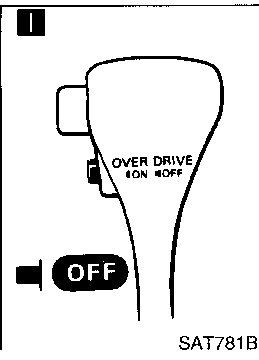
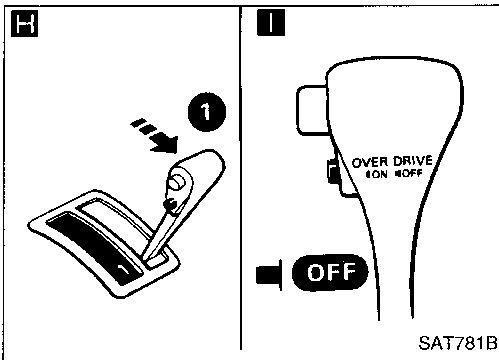


- H I**
- Move selector lever to "1" position.
Set overdrive switch in "OFF" position.

- J**
- Depress accelerator pedal fully and release it.

- K**
- Check OD OFF indicator lamp.
Refer to JUDGEMENT OF SELF-DIAGNOSIS CODE on next page.

DIAGNOSIS END







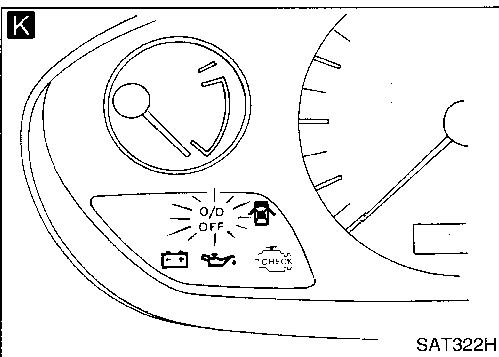
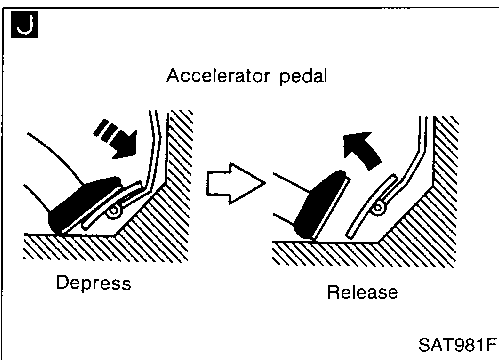


GI
MA
EM
LC
EC
FE
CL
MT
AT
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX

TROUBLE DIAGNOSES

Self-diagnosis (Cont'd)






JUDGEMENT OF SELF-DIAGNOSIS CODE

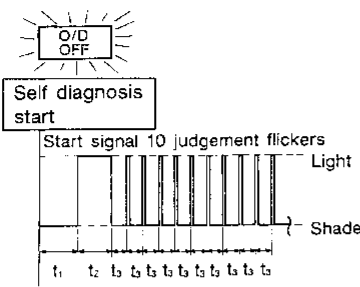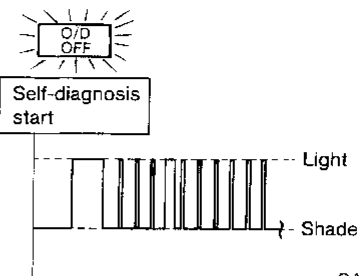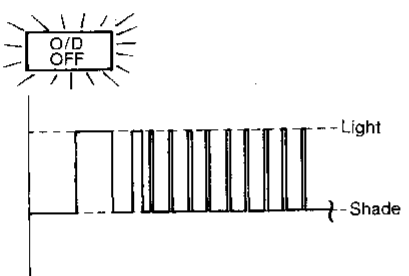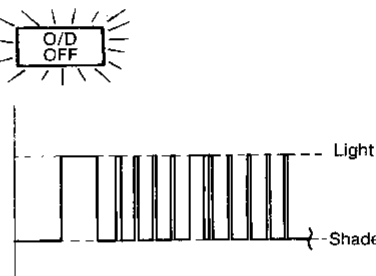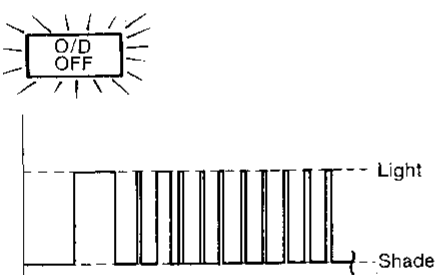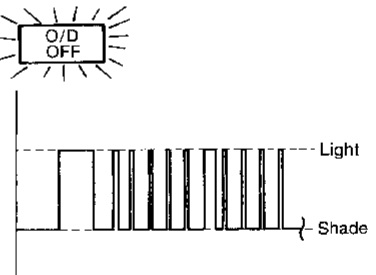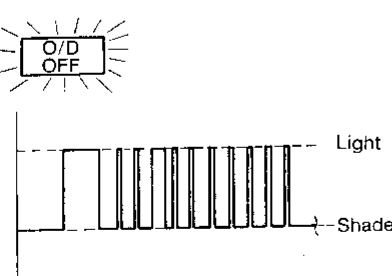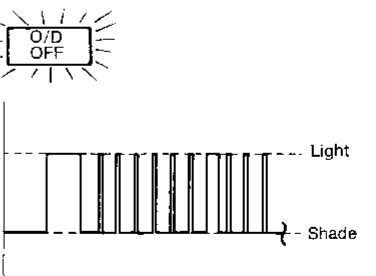OD OFF indicator lamp:	
<p>All judgement flickers are same.</p>  <p>SAT436F</p>	<p>4th judgement flicker is longer than others.</p>  <p>SAT443F</p> <p>Shift solenoid valve A circuit is short-circuited or disconnected. ➡ Go to SHIFT SOLENOID VALVE A CIRCUIT CHECK, AT-53.</p>
<p>All circuits that can be confirmed by self-diagnosis are OK.</p> <p>1st judgement flicker is longer than others.</p>  <p>SAT437F</p> <p>Revolution sensor circuit is short-circuited or disconnected. ➡ Go to REVOLUTION SENSOR CIRCUIT CHECK, AT-47.</p>	<p>5th judgement flicker is longer than others.</p>  <p>SAT445F</p> <p>Shift solenoid valve B circuit is short-circuited or disconnected. ➡ Go to SHIFT SOLENOID VALVE B CIRCUIT CHECK, AT-55.</p>
<p>2nd judgement flicker is longer than others.</p>  <p>SAT439F</p> <p>Vehicle speed sensor circuit is short-circuited or disconnected. ➡ Go to VEHICLE SPEED SENSOR CIRCUIT CHECK, AT-49.</p>	<p>6th judgement flicker is longer than others.</p>  <p>SAT447F</p> <p>Overrun clutch solenoid valve circuit is short-circuited or disconnected. ➡ Go to OVERRUN CLUTCH SOLENOID VALVE CIRCUIT CHECK, AT-57.</p>
<p>3rd judgement flicker is longer than others.</p>  <p>SAT441F</p> <p>Throttle position sensor circuit is short-circuited or disconnected. ➡ Go to THROTTLE POSITION SENSOR CIRCUIT CHECK, AT-51.</p>	<p>7th judgement flicker is longer than others.</p>  <p>SAT449F</p> <p>Torque converter clutch solenoid valve circuit is short-circuited or disconnected. ➡ Go to TORQUE CONVERTER CLUTCH SOLENOID VALVE CIRCUIT CHECK, AT-59.</p>

$t_1 = 2.5$ seconds $t_2 = 2.0$ seconds $t_3 = 1.0$ second

TROUBLE DIAGNOSES

Self-diagnosis (Cont'd)

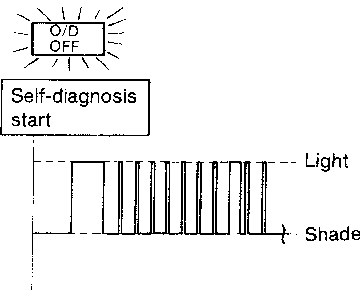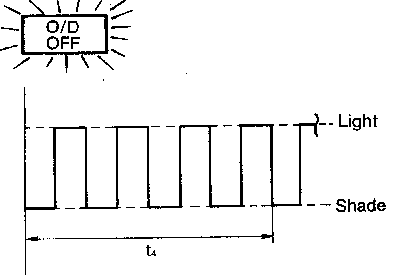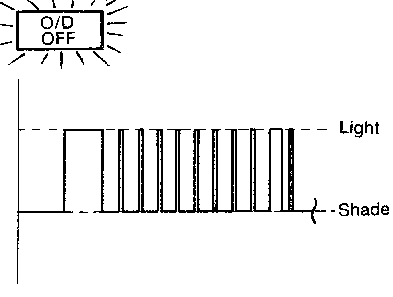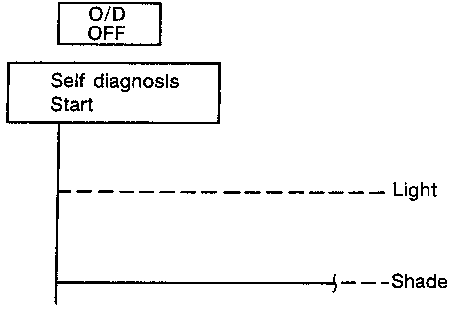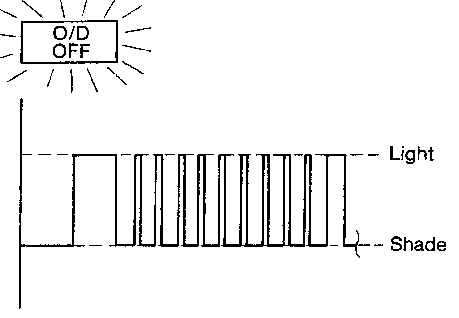OD OFF indicator lamp:	
<p>8th judgement flicker is longer than others.</p>  <p style="text-align: right;">SAT451F</p> <p>Fluid temperature sensor is disconnected or A/T control unit power source circuit is damaged. ➔ Go to FLUID TEMPERATURE SENSOR AND A/T CONTROL UNIT POWER SOURCE CIRCUIT CHECKS, AT-61.</p>	<p>Flickers as shown below.</p>  <p style="text-align: right;">SAT457F</p> <p>Battery power is low. Battery has been disconnected for a long time. Battery is connected conversely. (When reconnecting A/T control unit connectors. — This is not a problem.)</p>
<p>9th judgement flicker is longer than others.</p>  <p style="text-align: right;">SAT453F</p> <p>Engine speed signal circuit is short-circuited or disconnected. ➔ Go to ENGINE SPEED SIGNAL CIRCUIT CHECK, AT-64.</p>	<p>Does not come on.</p>  <p style="text-align: right;">SAT414G</p> <p>Inhibitor switch, overdrive switch or throttle position switch circuit is disconnected or A/T control unit is damaged. ➔ Go to INHIBITOR, OVERDRIVE AND THROTTLE POSITION SWITCH CIRCUIT CHECKS, AT-68.</p>
<p>10th judgement flicker is longer than others.</p>  <p style="text-align: right;">SAT455F</p> <p>Line pressure solenoid valve circuit is short-circuited or disconnected. ➔ Go to LINE PRESSURE SOLENOID VALVE CIRCUIT CHECK, AT-66.</p>	

t₄ = 1.0 second

GI

MA

EM

LC

EC

FE

CL

MT

AT

PD

FA

RA

BR

ST

RS

BT

HA

EL

IDX

TROUBLE DIAGNOSES


Self-diagnosis (Cont'd)

HOW TO ERASE DTC (With CONSULT)


1. If the ignition switch stays "ON" after repair work, be sure to turn ignition switch "OFF" once. Wait for at least 5 seconds and then turn it "ON" (engine stopped) again.
2. Turn CONSULT "ON", and touch "A/T".
3. Touch "SELF-DIAG RESULTS".
4. Touch "ERASE". (The DTC in the A/T control unit will be erased.)
5. Touch "BACK" twice.
6. Touch "ENGINE".
7. Touch "SELF-DIAG RESULTS".
8. Touch "ERASE". (The DTC in the ECM will be erased.)

How to erase DTC (With CONSULT)


1. If the ignition switch stays "ON" after repair work, be sure to turn ignition switch "OFF" once. Wait at least 5 seconds and then turn it "ON" (engine stopped) again.

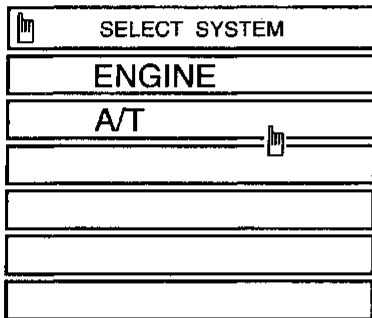


2. Turn CONSULT "ON", and touch "A/T".

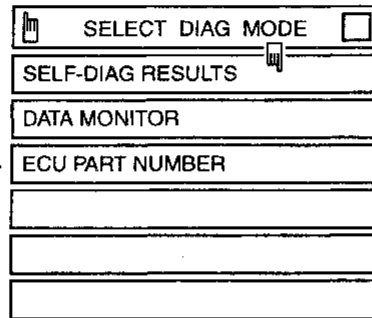


3. Touch "SELF-DIAG RESULTS".

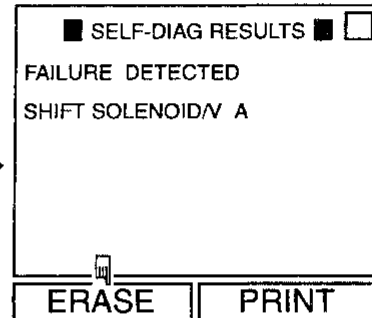


4. Touch "ERASE". (The DTC in the A/T control unit will be erased.)

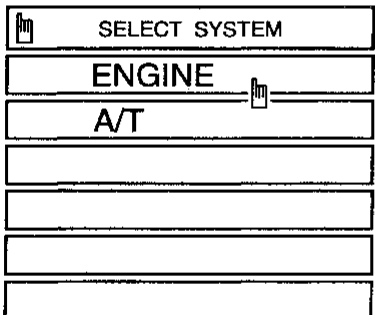

5. Touch "ENGINE".

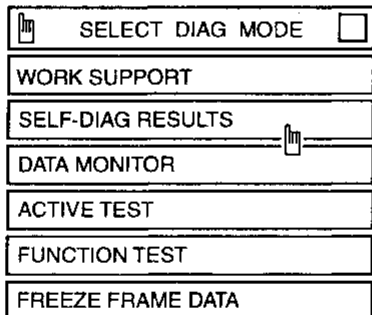

6. Touch "SELF-DIAG RESULTS".

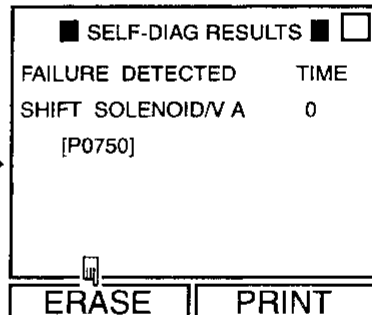

7. Touch "ERASE". (The DTC in the ECM will be erased.)

SEF338QA

HOW TO ERASE DTC (With Generic Scan Tool)

Select Mode 4 with Generic Scan Tool. For details, refer to EC section, "Generic Scan Tool (GST)", "ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION".

HOW TO ERASE DTC (No Tools)

1. If the ignition switch stays "ON" after repair work, be sure to turn ignition switch "OFF" once. Wait for at least 5 seconds and then turn it "ON" (engine stopped) again.
2. Perform "SELF-DIAGNOSTIC PROCEDURE (No Tools)" on AT-42. (The engine warm-up step can be skipped when performing the diagnosis only to erase the DTC.)
3. Change the diagnostic test mode from Mode II to Mode I by turning the mode selector on the ECM. Refer to EC section ["HOW TO SWITCH DIAGNOSTIC TEST MODES", "Malfunction Indicator Lamp (MIL)", "ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION"].





TROUBLE DIAGNOSES

Self-diagnosis (Cont'd)

VEHICLE SPEED SENSOR/A/T (REVOLUTION SENSOR) CIRCUIT CHECK

Description

The revolution sensor detects the revolution of the out put shaft parking pawl lock gear and emits a pulse signal. The pulse signal is sent to the A/T control unit which converts it into vehicle speed.

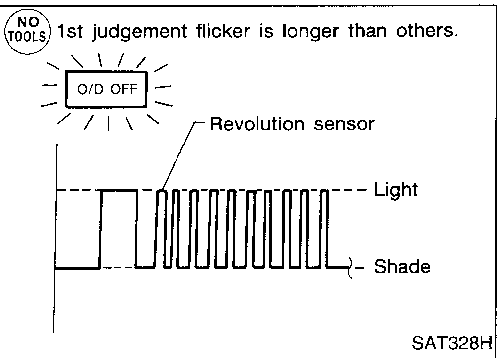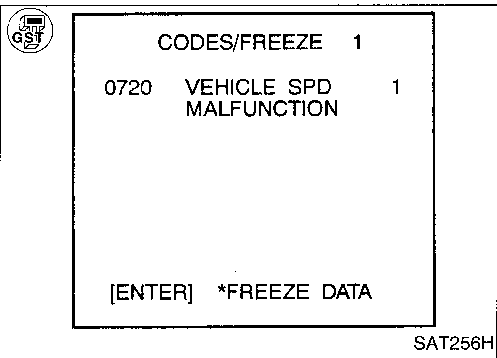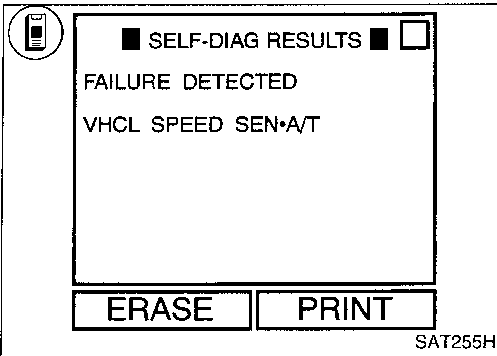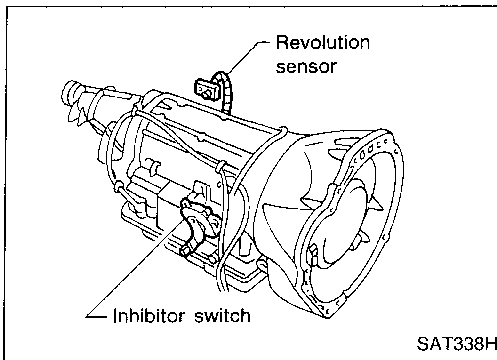

Diagnostic trouble code	Malfunction is detected when ...	Check item (Possible cause)
: VHCL SPEED : SEN-A/T	A/T control unit does not receive the proper voltage signal from the sensor.	<ul style="list-style-type: none"> • Harness or connectors (The sensor circuit is open or short.) • Revolution sensor
: P0720		
: 1st judgement flicker		

Diagnostic Trouble Code (DTC) confirmation procedure

After the repair, perform the following procedure to confirm the malfunction is eliminated.

- 1) Start engine.
 2) Select "SELF-DIAG RESULTS" mode with CONSULT.
 3) Drive vehicle under the following conditions:
 Selector lever in D, vehicle speed higher than 30 km/h (19 MPH), throttle opening greater than 1/8 of the full throttle position and driving for more than 5 seconds.

OR

- 1) Start engine.
 2) Drive vehicle under the following conditions:
 Selector lever in D, vehicle speed higher than 30 km/h (19 MPH), throttle opening greater than 1/8 of the full throttle position and driving for more than 5 seconds.
 3) Select "MODE 3" with GST.


OR

- 1) Start engine.
 2) Drive vehicle under the following conditions:
 Selector lever in D, vehicle speed higher than 30 km/h (19 MPH), throttle opening greater than 1/8 of the full throttle position and driving for more than 5 seconds.
 3) Perform self-diagnosis.
 Refer to SELF-DIAGNOSTIC PROCEDURE (No Tools), AT-42.

GI
MA
EM
LC
EC
FE
CL
MT
AT
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX

TROUBLE DIAGNOSES

Self-diagnosis (Cont'd)

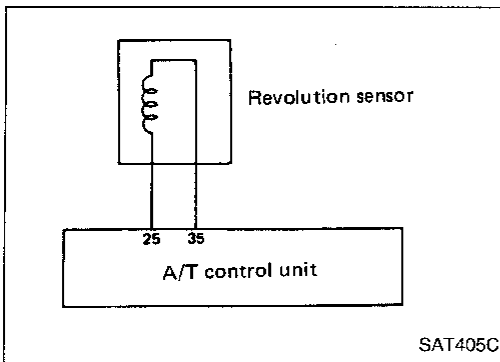

CHECK REVOLUTION SENSOR.
Refer to "Electrical Components Inspection", AT-103.

NG → Repair or replace revolution sensor.

OK

A

CHECK INPUT SIGNAL.

- Start engine.
- Select "ECU INPUT SIGNALS" in Data Monitor.
- Read out the value of "VHCL/S SE·A/T" while driving. Check the value changes according to driving speed.

OR

NG → Check the following items:

- Harness for short or open between A/T control unit and revolution sensor (Main harness)
- Harness for short or open between revolution sensor and ECM (Main harness)
- Ground circuit for ECM Refer to EC section ("TROUBLE DIAGNOSIS FOR POWER SUPPLY").

- Start engine.
- Check voltage between A/T control unit terminal (25) and ground while driving. (Measure with AC range.)

Voltage:

At 0 km/h (0 MPH):
0V

At 30 km/h (19 MPH):
1V or more


(Voltage rises gradually in response to vehicle speed.)

A

☆ MONITOR	☆ NO FAIL	
VHCL/S SE·A/T	0km/h	
VHCL/S SE·MTR	5km/h	
THRTL POS SEN	0.4V	
FLUID TEMP SE	1.2V	
BATTERY VOLT	13.4V	
ENGINE SPEED	1024rpm	
OVERDRIVE SW	O N	
P/N POSI SW	O N	
R POSITION SW	OFF	

RECORD

SAT076H

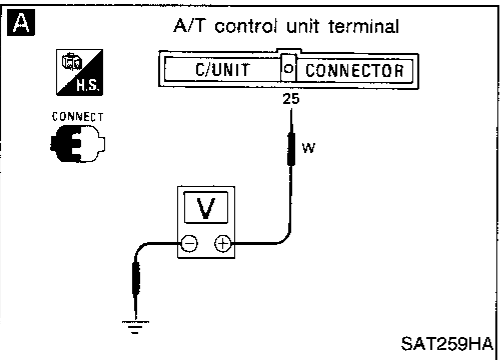

Perform Diagnostic Trouble Code (DTC) confirmation procedure, AT-47.

NG →

- Perform A/T control unit input/output signal inspection.
- If NG, recheck A/T control unit pin terminals for damage or loose connection with harness connector.

OK

INSPECTION END




TROUBLE DIAGNOSES

Self-diagnosis (Cont'd)

VEHICLE SPEED SENSOR-MTR CIRCUIT CHECK

Description

The vehicle speed sensor-MTR is built into the speedometer assembly. The sensor functions as an auxiliary device to the revolution sensor when it is malfunctioning. The A/T control unit will then use a signal sent from the vehicle speed sensor-MTR.

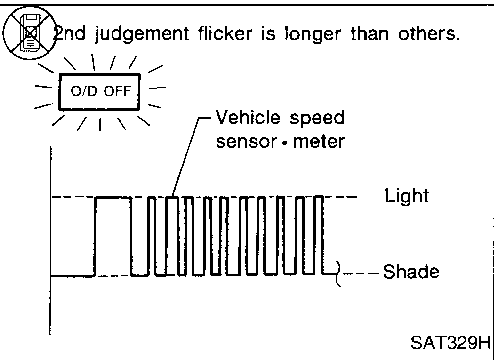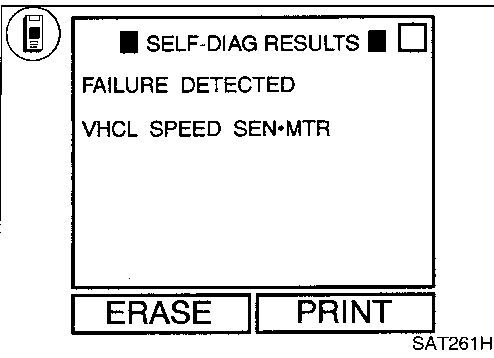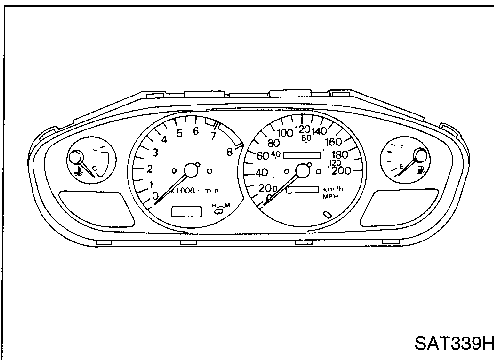

Diagnostic trouble code	Malfunction is detected when ...	Check item (Possible cause)
: VHCL SPEED SEN-MTR	A/T control unit does not receive the proper voltage signal from the sensor.	<ul style="list-style-type: none"> • Harness or connectors (The sensor circuit is open or short.) • Vehicle speed sensor
: 2nd judgement flicker		

Diagnostic Trouble Code (DTC) confirmation procedure

After the repair, perform the following procedure to confirm the malfunction is eliminated.

- 1) Start engine.
 2) Select "SELF-DIAG RESULTS" mode with CONSULT.
 3) Drive vehicle under the following conditions:
 Selector lever in D and vehicle speed higher than 20 km/h (12 MPH).


OR

- 1) Start engine.
 2) Drive vehicle under the following conditions:
 Selector lever in D and vehicle speed higher than 20 km/h (12 MPH).
 3) Perform self-diagnosis.
 Refer to SELF-DIAGNOSTIC PROCEDURE (No Tools), AT-42.

GI
 MA
 EM
 LC
 EC
 FE
 CL
 MT
 AT
 PD
 FA
 RA
 BR
 ST
 RS
 BT
 HA
 EL
 IDX

TROUBLE DIAGNOSES

Self-diagnosis (Cont'd)


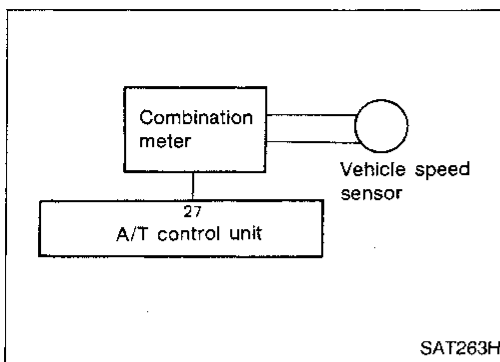


A

☆ MONITOR	☆ NO FAIL	
VHCL/S SE-A/T	0km/h	
VHCL/S SE-MTR	5km/h	
THRTL POS SEN	0.4V	
FLUID TEMP SE	1.2V	
BATTERY VOLT	13.4V	
ENGINE SPEED	1024rpm	
OVERDRIVE SW	O N	
P/N POSI SW	O N	
R POSITION SW	OFF	

RECORD

SAT076H

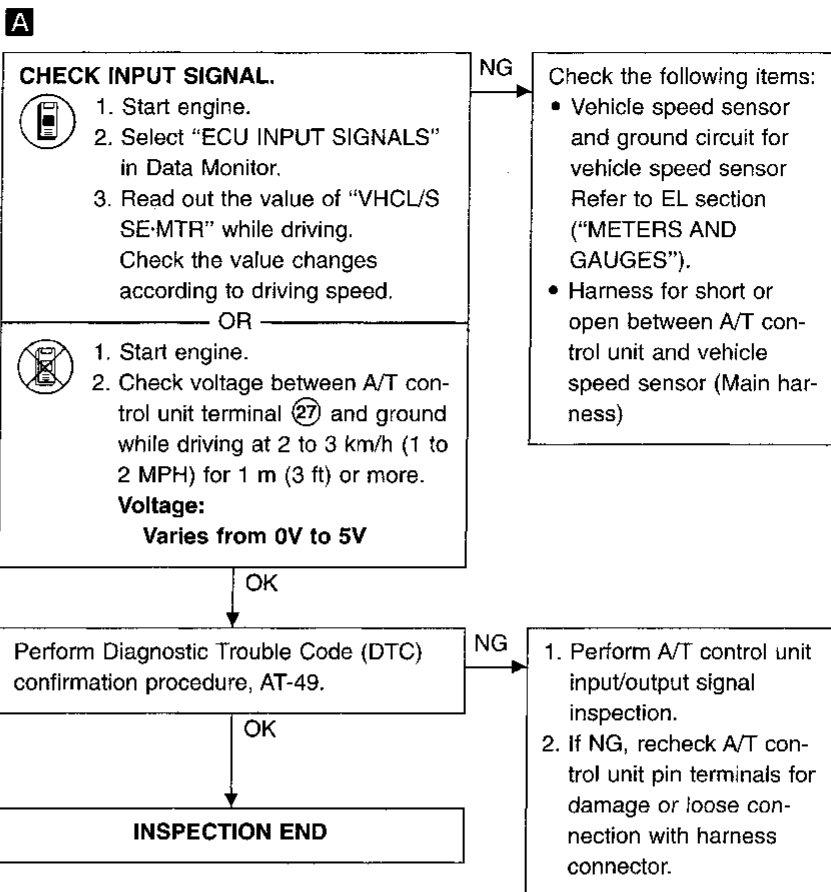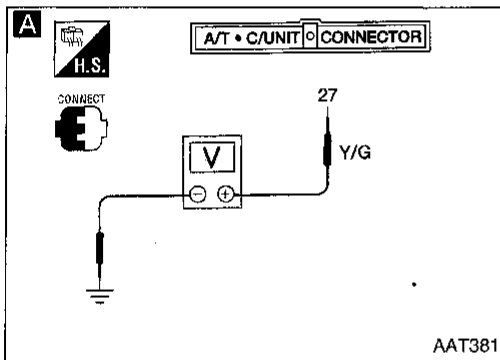





TROUBLE DIAGNOSES

Self-diagnosis (Cont'd)

THROTTLE POSITION SENSOR CIRCUIT CHECK

Description

The throttle position sensor detects the throttle valve position and sends a signal to the A/T control unit.

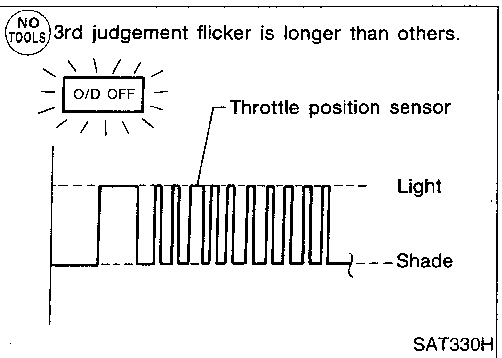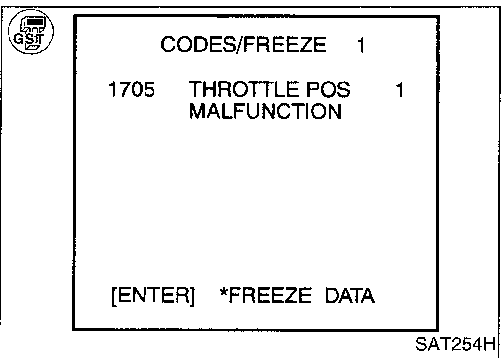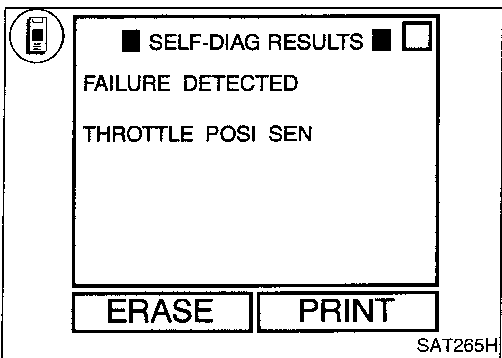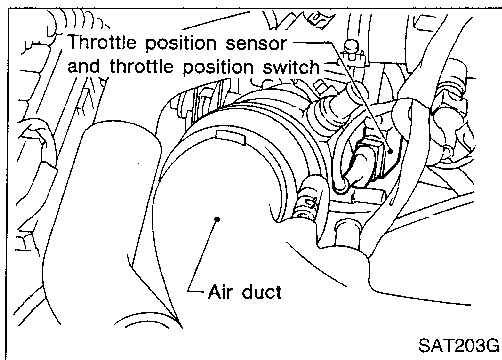

Diagnostic trouble code	Malfunction is detected when ...	Check item (Possible cause)
: THROTTLE POSITION : P1075 : 3rd judgement flicker	A/T control unit receives an excessively low or high voltage from the sensor.	<ul style="list-style-type: none"> • Harness or connectors (The sensor circuit is open or short.) • Throttle position sensor

Diagnostic Trouble Code (DTC) confirmation procedure

After the repair, perform the following procedure to confirm the malfunction is eliminated.

- 1) Start engine.
 2) Select "SELF-DIAG RESULTS" mode with CONSULT.
 3) Drive vehicle under the following conditions:
 Selector lever in D, vehicle speed higher than 10 km/h (6 MPH), throttle opening greater than 1/2 of the full throttle position and driving for more than 3 seconds.

OR

- 1) Start engine.
 2) Drive vehicle under the following conditions:
 Selector lever in D, vehicle speed higher than 10 km/h (6 MPH), throttle opening greater than 1/2 of the full throttle position and driving for more than 3 seconds.
 3) Select "MODE 3" with GST.

OR

- 1) Start engine.
 2) Drive vehicle under the following conditions:
 Selector lever in D, vehicle speed higher than 10 km/h (6 MPH), throttle opening greater than 1/2 of the full throttle position and driving for more than 3 seconds.
 3) Perform self-diagnosis.
 Refer to SELF-DIAGNOSTIC PROCEDURE (No Tools), AT-42.

GI

MA

EM

LC

EC

FE

CL

MT

AT

PD

FA

RA

BR

ST

RS

BT


HA

EL

IDX

TROUBLE DIAGNOSES

Self-diagnosis (Cont'd)

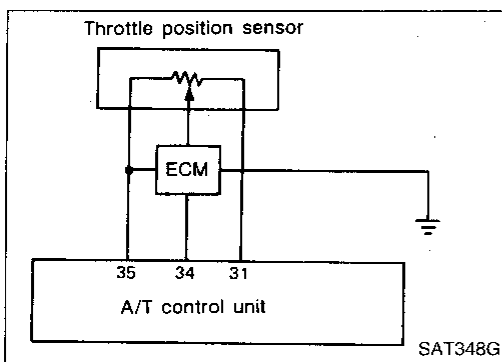


A

☆MONITOR	☆NO FAIL	<input type="checkbox"/>
VHCL/S SE•A/T	0km/h	
VHCL/S SE•MTR	5km/h	
THRTL POS SEN	0.4V	
FLUID TEMP SE	1.2V	
BATTERY VOLT	13.4V	
ENGINE SPEED	1024rpm	
OVERDRIVE SW	O N	
P/N POSI SW	O N	
R POSITION SW	OFF	

RECORD

SAT076H

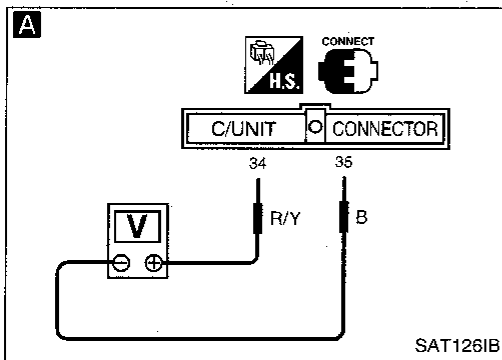

Perform diagnostic test mode II (self-diagnostic results) for engine control. Refer to EC section ["Malfunction Indicator Lamp (MIL)", "ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION"].

NG → Check throttle position sensor circuit for engine control. Refer to EC section ["Throttle Position Sensor (DTC : 0403)", "TROUBLE DIAGNOSIS FOR DTC P0120"].

OK

A

CHECK INPUT SIGNAL.

1. Turn ignition switch to "ON" position. (Do not start engine.)
2. Select "ECU INPUT SIGNALS" in Data Monitor.
3. Read out the value of "THRTL POS SEN".

Voltage:
Fully-closed throttle:
 Approximately 0.5V
Fully-open throttle:
 Approximately 4V

NG → Check harness for short or open between ECM and A/T control unit regarding throttle position sensor circuit. (Main harness)

A

1. Turn ignition switch to "ON" position. (Do not start engine.)
2. Check voltage between A/T control unit terminals (34) and (35) while accelerator pedal is depressed slowly.

Voltage:
Fully-closed throttle valve:
 Approximately 0.5V
Fully-open throttle valve:
 Approximately 4V
 (Voltage rises gradually in response to throttle position)

OK

CHECK THROTTLE POSITION SWITCH. Refer to "Self-diagnosis", "CHECK THROTTLE POSITION SWITCH CIRCUIT", AT-68.

NG → Repair or replace damaged parts.

OK

Perform Diagnostic Trouble Code (DTC) confirmation procedure, AT-51.

NG → 1. Perform A/T control unit input/output signal inspection.
 2. If NG, recheck A/T control unit pin terminals for damage or loose connection with harness connector.


OK

INSPECTION END

TROUBLE DIAGNOSES

Self-diagnosis (Cont'd)


SHIFT SOLENOID VALVE A CIRCUIT CHECK

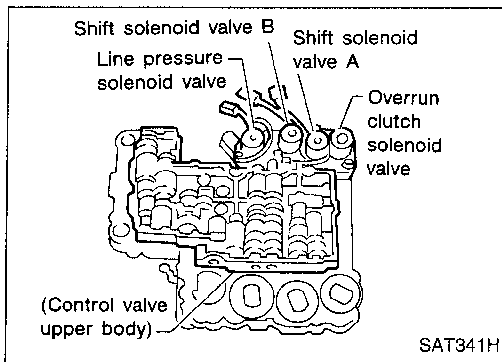


Description

Shift solenoid valves A and B are turned ON or OFF by the A/T control unit in response to signals sent from the inhibitor switch, vehicle speed and throttle position sensors. Gears will then be shifted to the optimum position.

Gear position	1	2	3	4
Shift solenoid valve A	ON	OFF	OFF	ON
Shift solenoid valve B	ON	ON	OFF	OFF

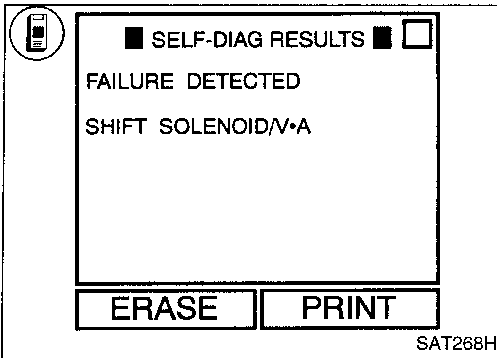


Diagnostic trouble code	Malfunction is detected when ...	Check item (Possible cause)
<ul style="list-style-type: none"> SHIFT SOLENOID/V-A P0750 4th judgement flicker 	A/T control unit detects the improper voltage drop when it tries to operate the solenoid valve.	<ul style="list-style-type: none"> Harness or connectors (The solenoid circuit is open or short.) Shift solenoid valve A

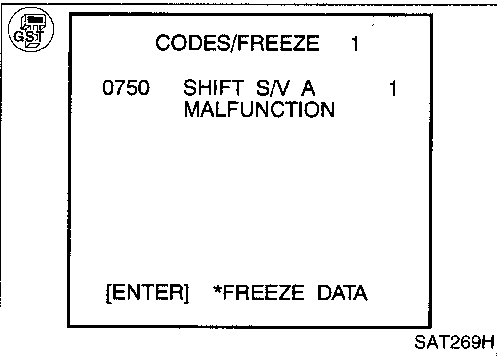

Diagnostic Trouble Code (DTC) confirmation procedure

After the repair, perform the following procedure to confirm the malfunction is eliminated.

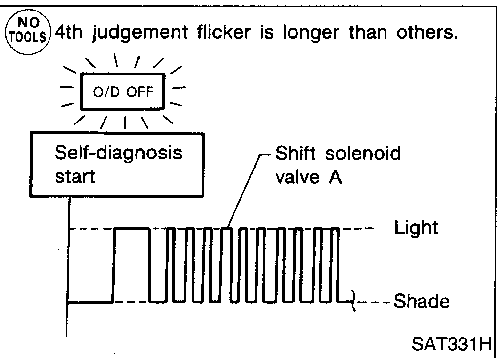


- 1) Start engine.
 2) Select "SELF-DIAG RESULTS" mode with CONSULT.
 3) Drive vehicle in D₁ → D₂ position.

- OR
- 1) Start engine.
 2) Drive vehicle in D₁ → D₂ position.
 3) Select "MODE 3" with GST.

- OR
- 1) Start engine.
 2) Drive vehicle in D₁ → D₂ position.
 3) Perform self-diagnosis.
 Refer to SELF-DIAGNOSTIC PROCEDURE (No Tools), AT-42.

TROUBLE DIAGNOSES

Self-diagnosis (Cont'd)

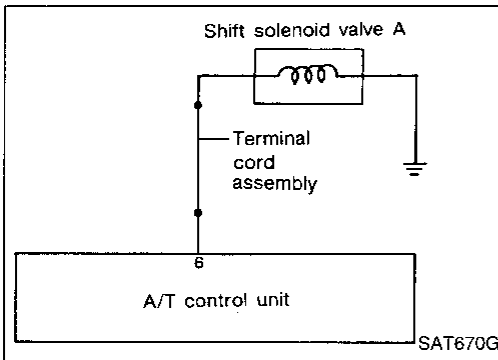

A

CHECK GROUND CIRCUIT.


1. Turn ignition switch to "OFF" position.
2. Disconnect terminal cord assembly connector in engine compartment.
3. Check resistance between terminal ⑥ and ground.

Resistance: 20 - 40Ω

NG

1. Remove control valve assembly. Refer to "ON-VEHICLE SERVICE", AT-119.
2. Check the following items:
 - Shift solenoid valve A (Refer to "Electrical Components Inspection", AT-101.)
 - Harness of terminal cord assembly for short or open

OK

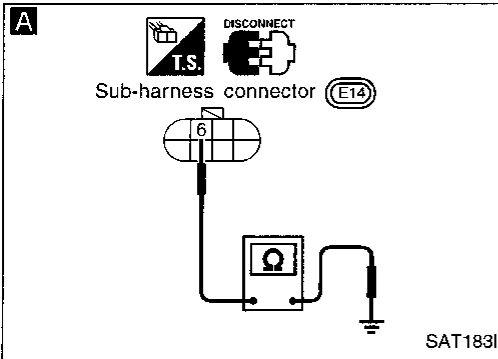

A

B

CHECK POWER SOURCE CIRCUIT.


1. Turn ignition switch to "OFF" position.
2. Disconnect A/T control unit harness connector.
3. Check resistance between terminal ⑥ and A/T control unit harness connector terminal ⑥.

Resistance: Approximately 0Ω

NG

- Repair or replace harness between A/T control unit and terminal cord assembly. (Main harness)

OK

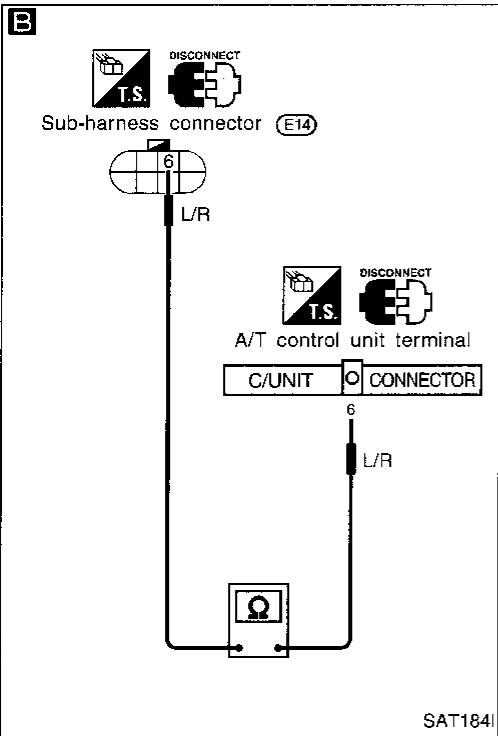

B

Perform Diagnostic Trouble Code (DTC) confirmation procedure, AT-53.

NG

1. Perform A/T control unit input/output signal inspection.
2. If NG, recheck A/T control unit pin terminals for damage or loose connection with harness connector.





OK

INSPECTION END

TROUBLE DIAGNOSES

Self-diagnosis (Cont'd)

SHIFT SOLENOID VALVE B CIRCUIT CHECK

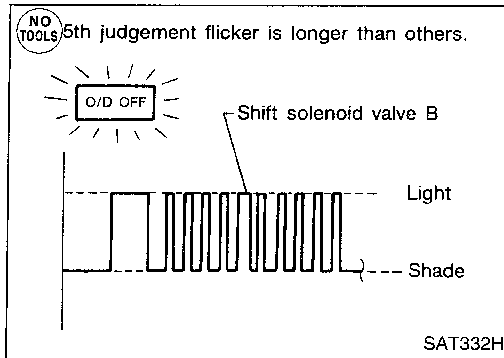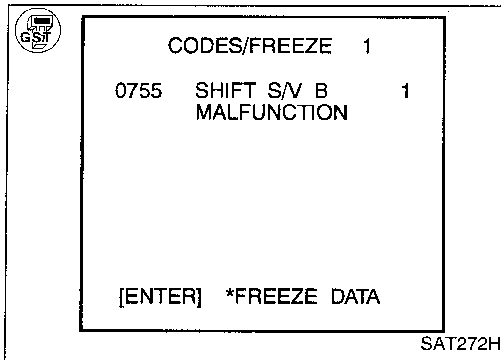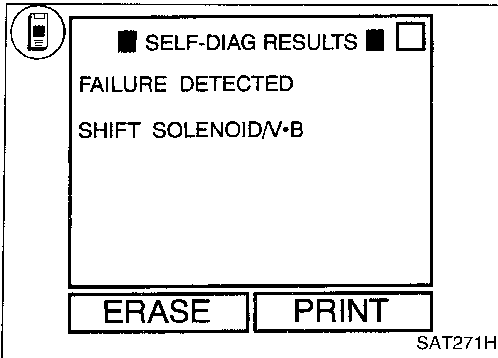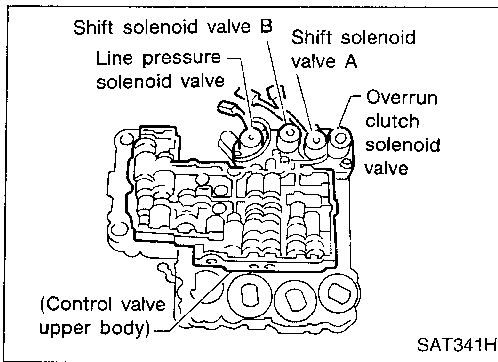

Description

Shift solenoid valves A and B are turned ON or OFF by the A/T control unit in response to signals sent from the inhibitor switch, vehicle speed and throttle position sensors. Gears will then be shifted to the optimum position.

Gear position	1	2	3	4
Shift solenoid valve A	ON	OFF	OFF	ON
Shift solenoid valve B	ON	ON	OFF	OFF

Diagnostic trouble code	Malfunction is detected when ...	Check item (Possible cause)
<ul style="list-style-type: none"> : SHIFT SOLENOID/V-B : P0755 : 5th judgement flicker 	A/T control unit detects the improper voltage drop when it tries to operate the solenoid valve.	<ul style="list-style-type: none"> • Harness or connectors (The solenoid circuit is open or short.) • Shift solenoid valve B


Diagnostic Trouble Code (DTC) confirmation procedure

After the repair, perform the following procedure to confirm the malfunction is eliminated.

- | | | |
|--|----|--|
| <ul style="list-style-type: none"> 1) Start engine. 2) Select "SELF-DIAG RESULTS" mode with CONSULT. 3) Drive vehicle in D₁ → D₂ → D₃ position. | OR | <ul style="list-style-type: none"> 1) Start engine. 2) Drive vehicle in D₁ → D₂ → D₃ position. 3) Select "MODE 3" with GST. |
| OR | | <ul style="list-style-type: none"> 1) Start engine. 2) Drive vehicle in D₁ → D₂ → D₃ position. 3) Perform self-diagnosis. |
- Refer to SELF-DIAGNOSTIC PROCEDURE (No Tools), AT-42.

TROUBLE DIAGNOSES

Self-diagnosis (Cont'd)

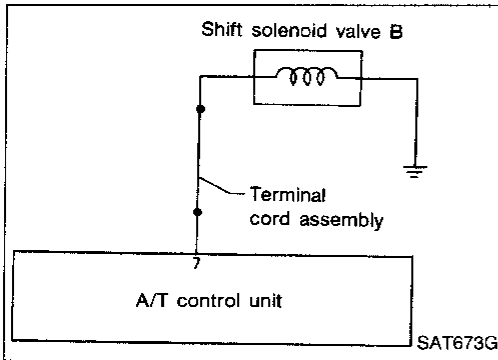

A


CHECK GROUND CIRCUIT.

1. Turn ignition switch to "OFF" position.
2. Disconnect terminal cord assembly connector in engine compartment.
3. Check resistance between terminal ⑦ and ground.

Resistance: 20 - 40Ω

NG →

1. Remove control valve assembly. Refer to "ON-VEHICLE SERVICE", AT-119.
2. Check the following items:
 - Shift solenoid valve B (Refer to "Electrical Components Inspection", AT-101.)
 - Harness of terminal cord assembly for short or open

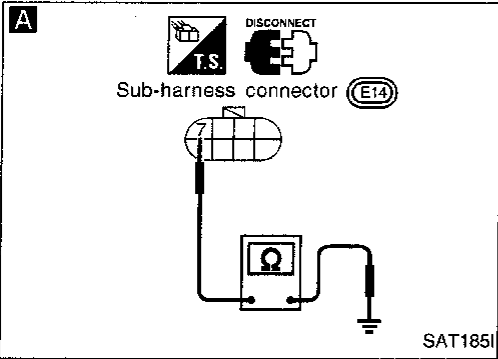

B

CHECK POWER SOURCE CIRCUIT.


1. Turn ignition switch to "OFF" position.
2. Disconnect A/T control unit harness connector.
3. Check resistance between terminal ⑦ and A/T control unit harness connector terminal ⑦.

Resistance: Approximately 0Ω

4. Reinstall any part removed.

NG →

Repair or replace harness between A/T control unit and terminal cord assembly. (Main harness)

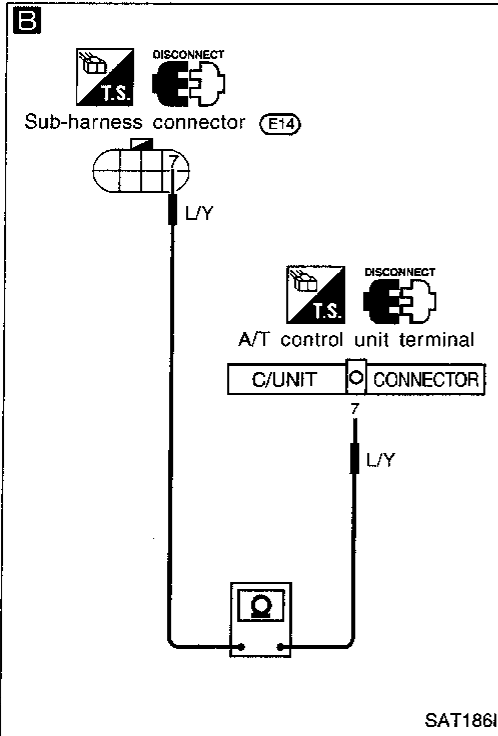

OK →

Perform Diagnostic Trouble Code (DTC) confirmation procedure, AT-55.

NG →

1. Perform A/T control unit input/output signal inspection.
2. If NG, recheck A/T control unit pin terminals for damage or loose connection with harness connector.

OK →

INSPECTION END





TROUBLE DIAGNOSES

Self-diagnosis (Cont'd)

OVERRUN CLUTCH SOLENOID VALVE CIRCUIT CHECK

Description

The overrun clutch solenoid valve is activated by the A/T control unit in response to signals sent from the inhibitor switch, vehicle speed and throttle position sensors. The overrun clutch operation will then be controlled.

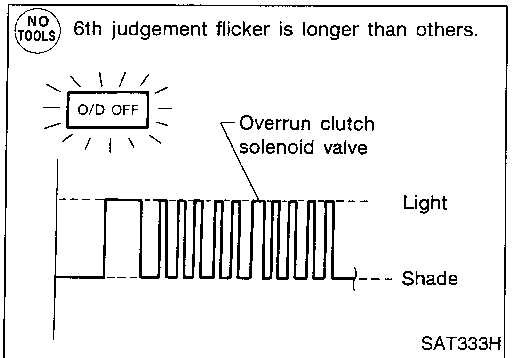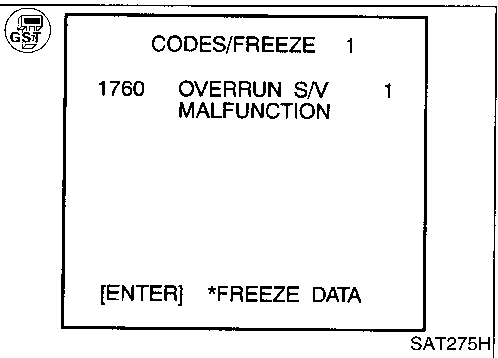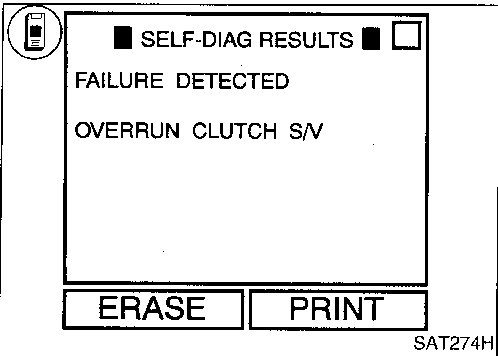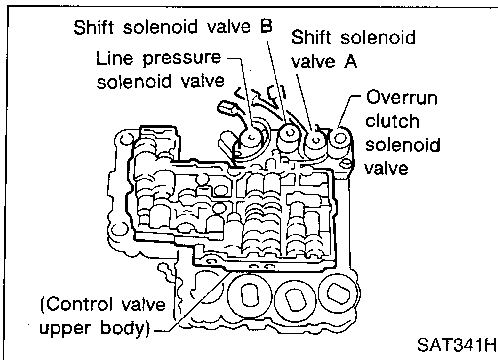

Diagnostic trouble code	Malfunction is detected when ...	Check item (Possible cause)
: OVERRUN CLUTCH S/V : P1760 : 6th judgement flicker	A/T control unit detects the improper voltage drop when it tries to operate the solenoid valve.	<ul style="list-style-type: none"> • Harness or connectors (The solenoid circuit is open or short.) • Overrun clutch solenoid valve

Diagnostic Trouble Code (DTC) confirmation procedure

After the repair, perform the following procedure to confirm the malfunction is eliminated.

- 1) Start engine.
- 2) Select "SELF-DIAG RESULTS" mode with CONSULT.
- 3) Drive vehicle under the following conditions:
Selector lever in D position and vehicle speed higher than 10 km/h (6 MPH).

OR


- 1) Start engine.
- 2) Drive vehicle under the following conditions:
Selector lever in D position and vehicle speed higher than 10 km/h (6 MPH).
- 3) Select "MODE 3" with GST.

OR

- 1) Start engine.
- 2) Drive vehicle under the following conditions:
Selector lever in D position and vehicle speed higher than 10 km/h (6 MPH).
- 3) Perform self-diagnosis.
Refer to SELF-DIAGNOSTIC PROCEDURE (No Tools), AT-42.

TROUBLE DIAGNOSES

Self-diagnosis (Cont'd)

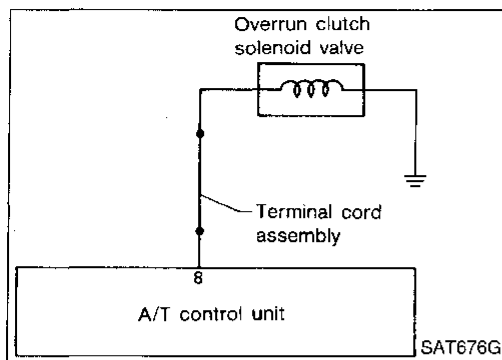

A

CHECK GROUND CIRCUIT.


1. Turn ignition switch to "OFF" position.
2. Disconnect terminal cord assembly connector in engine compartment.
3. Check resistance between terminal ⑧ and ground.

Resistance: 20 - 40Ω

NG

1. Remove control valve assembly. Refer to "ON-VEHICLE SERVICE", AT-119.
2. Check the following items:
 - Overrun clutch solenoid valve. (Refer to "Electrical Components Inspection", AT-101.)
 - Harness of terminal cord assembly for short or open

OK

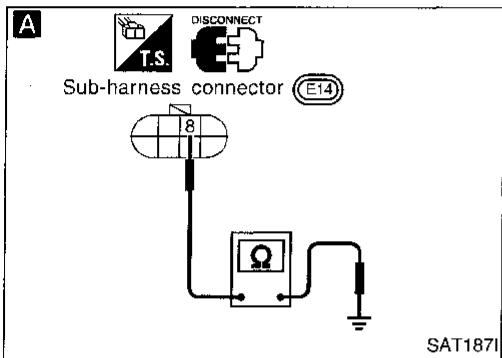

B

CHECK POWER SOURCE CIRCUIT.


1. Turn ignition switch to "OFF" position.
2. Disconnect A/T control unit harness connector.
3. Check resistance between terminal ⑧ and A/T control unit harness connector terminal ⑧.

Resistance: Approximately 0Ω

NG

1. Repair or replace harness between A/T control unit and terminal cord assembly. (Main harness)

OK

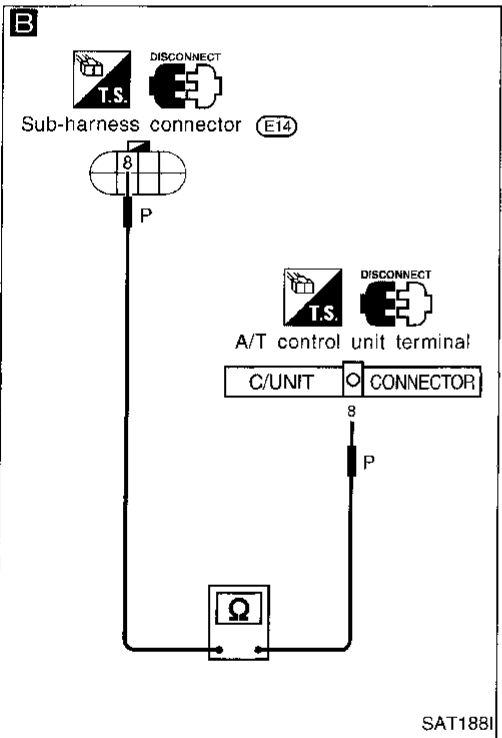

Perform Diagnostic Trouble Code (DTC) confirmation procedure, AT-57.

NG

1. Perform A/T control unit input/output signal inspection.
2. If NG, recheck A/T control unit pin terminals for damage or loose connection with harness connector.

OK

INSPECTION END

TROUBLE DIAGNOSES

Self-diagnosis (Cont'd)





TORQUE CONVERTER CLUTCH SOLENOID VALVE CIRCUIT CHECK

Description

The torque converter clutch solenoid valve is activated, with the gear in D₄, by the A/T control unit in response to signals sent from the vehicle speed and throttle position sensors. Lock-up piston operation will then be controlled.

Lock-up operation, however, is prohibited when ATF temperature is too low.

GI
MA
EM
LC
EC
FE
CL
MT
AT
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX

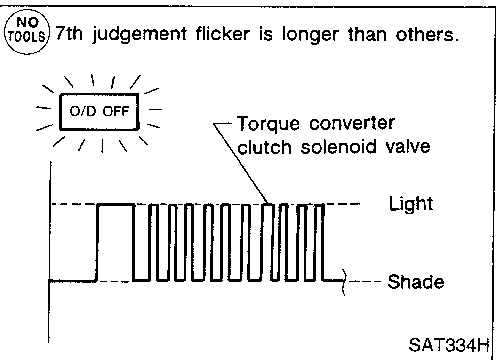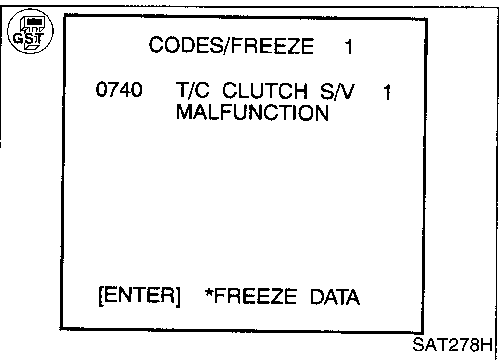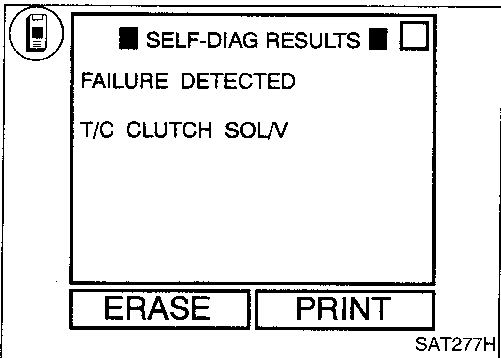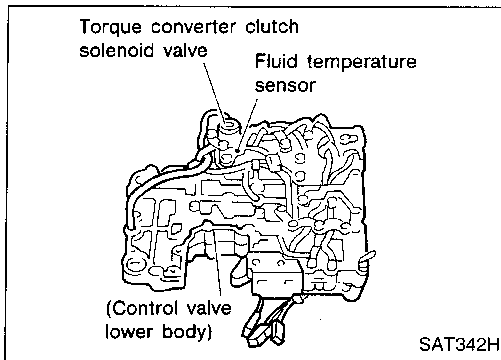

Diagnostic trouble code	Malfunction is detected when ...	Check item (Possible cause)
<ul style="list-style-type: none"> : T/C CLUTCH SOL/V : P0740 : 7th judgement flicker 	<p>A/T control unit detects the improper voltage drop when it tries to operate the solenoid valve.</p>	<ul style="list-style-type: none"> • Harness or connectors (The solenoid circuit is open or short.) • T/C clutch solenoid valve

Diagnostic Trouble Code (DTC) confirmation procedure

After the repair, perform the following procedure to confirm the malfunction is eliminated.

- 1) Start engine.
- 2) Select "SELF-DIAG RESULTS" mode with CONSULT.
- 3) Drive vehicle in D₁ → D₂ → D₃ → D₄ → D₄ lock-up position.

OR


- 1) Start engine.
- 2) Select "MODE 3" with GST.
- 3) Drive vehicle in D₁ → D₂ → D₃ → D₄ → D₄ lock-up position.

OR

- 1) Start engine.
- 2) Perform self-diagnosis. Refer to SELF-DIAGNOSTIC PROCEDURE (No Tools), AT-42.
- 3) Drive vehicle in D₁ → D₂ → D₃ → D₄ → D₄ lock-up position.

TROUBLE DIAGNOSES

Self-diagnosis (Cont'd)

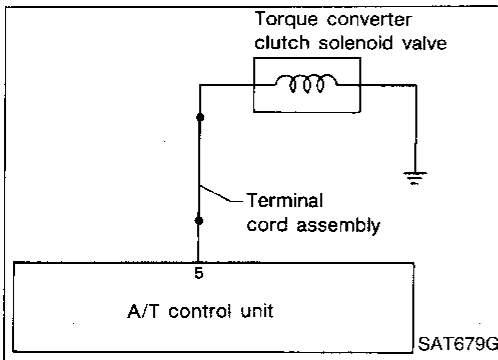

A

CHECK GROUND CIRCUIT.


1. Turn ignition switch to "OFF" position.
2. Disconnect terminal cord assembly connector in engine compartment.
3. Check resistance between terminal ⑤ and ground.

Resistance: 10 - 20Ω

NG

1. Remove oil pan. Refer to "ON-VEHICLE SERVICE", AT-119.
2. Check the following items:
 - Torque converter clutch solenoid valve (Refer to "Electrical Components Inspection", AT-101.)
 - Harness of terminal cord assembly for short or open

OK

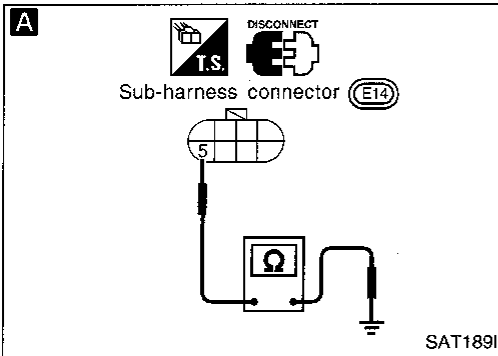

B

CHECK POWER SOURCE CIRCUIT.

1. Turn ignition switch to "OFF" position.
2. Disconnect A/T control unit harness connector.
3. Check resistance between terminal ⑤ and A/T control unit harness connector terminal ⑤.

Resistance:

Approximately 0Ω

4. Reinstall any part removed.

NG

- Repair or replace harness between A/T control unit and terminal cord assembly. (Main harness)

OK


Perform Diagnostic Trouble Code (DTC) confirmation procedure, AT-59.

NG

1. Perform A/T control unit input/output signal inspection.
2. If NG, recheck A/T control unit pin terminals for damage or loose connection with harness connector.

OK

INSPECTION END

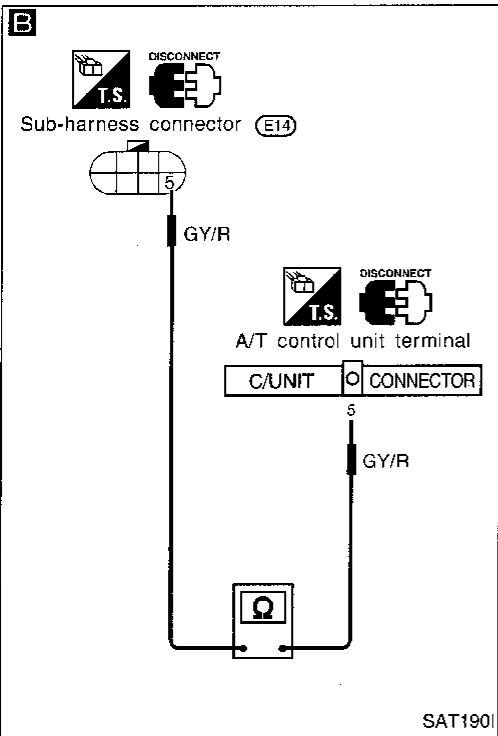





TROUBLE DIAGNOSES

Self-diagnosis (Cont'd)

FLUID TEMPERATURE SENSOR CIRCUIT AND A/T CONTROL UNIT POWER SOURCE CIRCUIT CHECKS

Description

The fluid temperature sensor detects the ATF temperature and sends a signal to the A/T control unit.

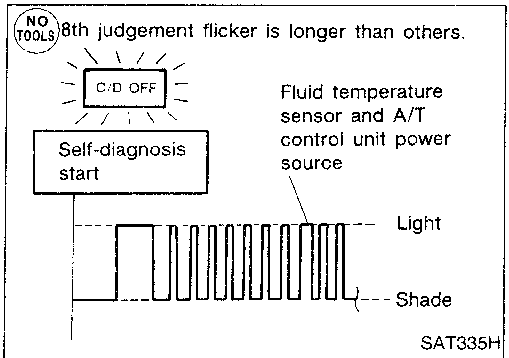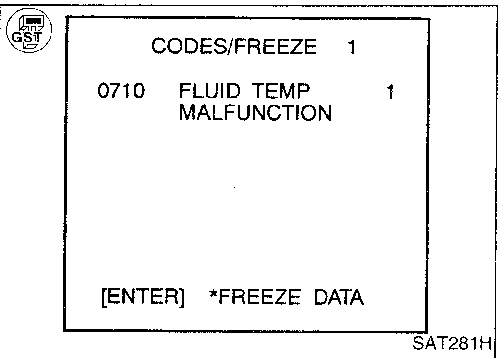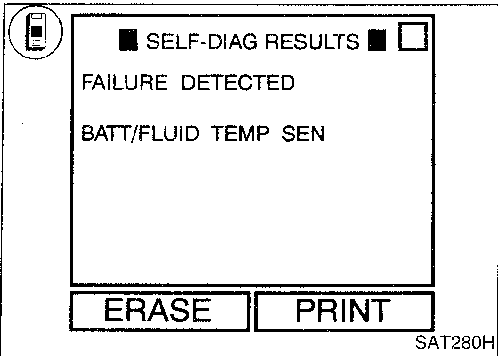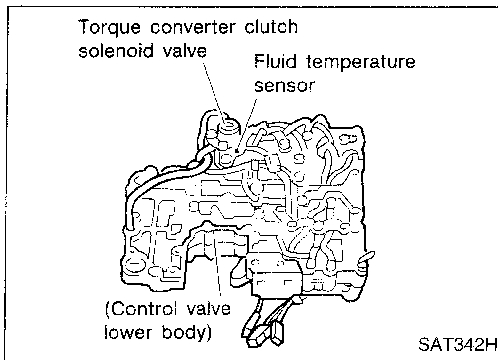

Diagnostic trouble code	Malfunction is detected when ...	Check item (Possible cause)
: BATT/FLUID TEMP	A/T control unit receives an excessively low or high voltage from the sensor.	<ul style="list-style-type: none"> • Harness or connectors (The sensor circuit is open or short.) • Fluid temperature sensor
: P0710		
: 8th judgement flicker		

Diagnostic Trouble Code (DTC) confirmation procedure

After the repair, perform the following procedure to confirm the malfunction is eliminated.

- 1) Start engine.
 2) Select "SELF-DIAG RESULTS" mode with CONSULT.
 3) Drive vehicle under the following conditions:
 Selector lever in D, vehicle speed higher than 10 km/h (6 MPH), throttle opening greater than 1/8 of the full open position, engine speed higher than 450 rpm and driving for more than 10 minutes.


- OR
- 1) Start engine.
 2) Drive vehicle under the following conditions:
 Selector lever in D, vehicle speed higher than 10 km/h (6 MPH), throttle opening greater than 1/8 of the full open position, engine speed higher than 450 rpm and driving for more than 10 minutes.
 3) Select "MODE 3" with GST.

- OR
- 1) Start engine.
 2) Drive vehicle under the following conditions:
 Selector lever in D, vehicle speed higher than 10 km/h (6 MPH), throttle opening greater than 1/8 of the full open position, engine speed higher than 450 rpm and driving for more than 10 minutes.
 3) Perform self-diagnosis.
 Refer to SELF-DIAGNOSTIC PROCEDURE (No Tools), AT-42.

GI
MA
EM
LC
EC
FE
CL
MT
AT
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX

TROUBLE DIAGNOSES

Self-diagnosis (Cont'd)

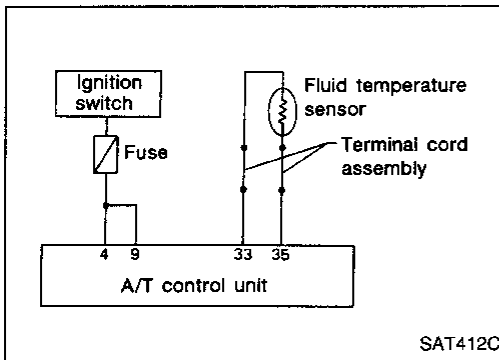

A

CHECK A/T CONTROL UNIT POWER SOURCE.


1. Turn ignition switch to "ON" position. (Do not start engine.)
2. Check voltage between A/T control unit terminals (4), (9) and ground. **Battery voltage should exist.**

NG

Check the following items:

- Harness for short or open between ignition switch and A/T control unit (Main harness)
- Ignition switch and fuse Refer to EL section ("POWER SUPPLY ROUTING").

OK

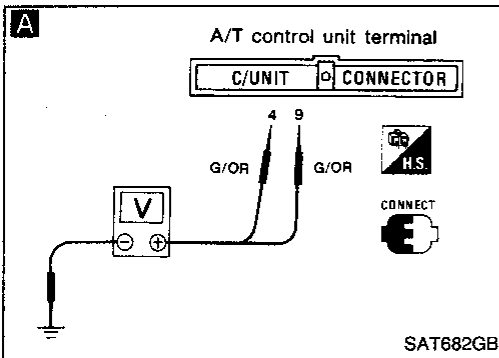

B

CHECK FLUID TEMPERATURE SENSOR WITH TERMINAL CORD ASSEMBLY.

1. Turn ignition switch to "OFF" position.
2. Disconnect terminal cord assembly connector in engine compartment.
3. Check resistance between terminals (33) and (35) when A/T is cold.

NG

1. Remove oil pan.

2. Check the following items:

- Fluid temperature sensor (Refer to "Electrical Components Inspection", AT-101.)
- Harness of terminal cord assembly for short or open

Resistance:


Cold [20°C (68°F)]

Approximately 2.5 kΩ

4. Reinstall any part removed.

OK

(A)

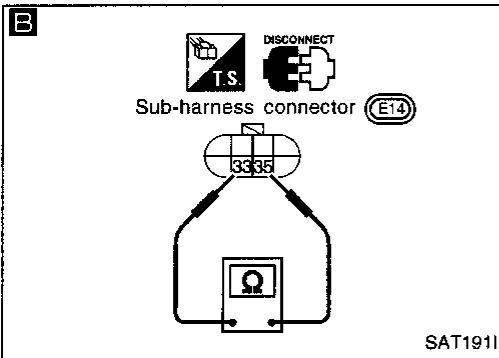

TROUBLE DIAGNOSES



Self-diagnosis (Cont'd)

C

☆ MONITOR	☆ NO FAIL	<input type="checkbox"/>
VHCL/S SE-A/T	0km/h	
VHCL/S SE-MTR	5km/h	
THRTL POS SEN	0.4V	
FLUID TEMP SE	1.2V	
BATTERY VOLT	13.4V	
ENGINE SPEED	1024rpm	
OVERDRIVE SW	O N	
P/N POSI SW	O N	
R POSITION SW	OFF	

RECORD

SAT076H

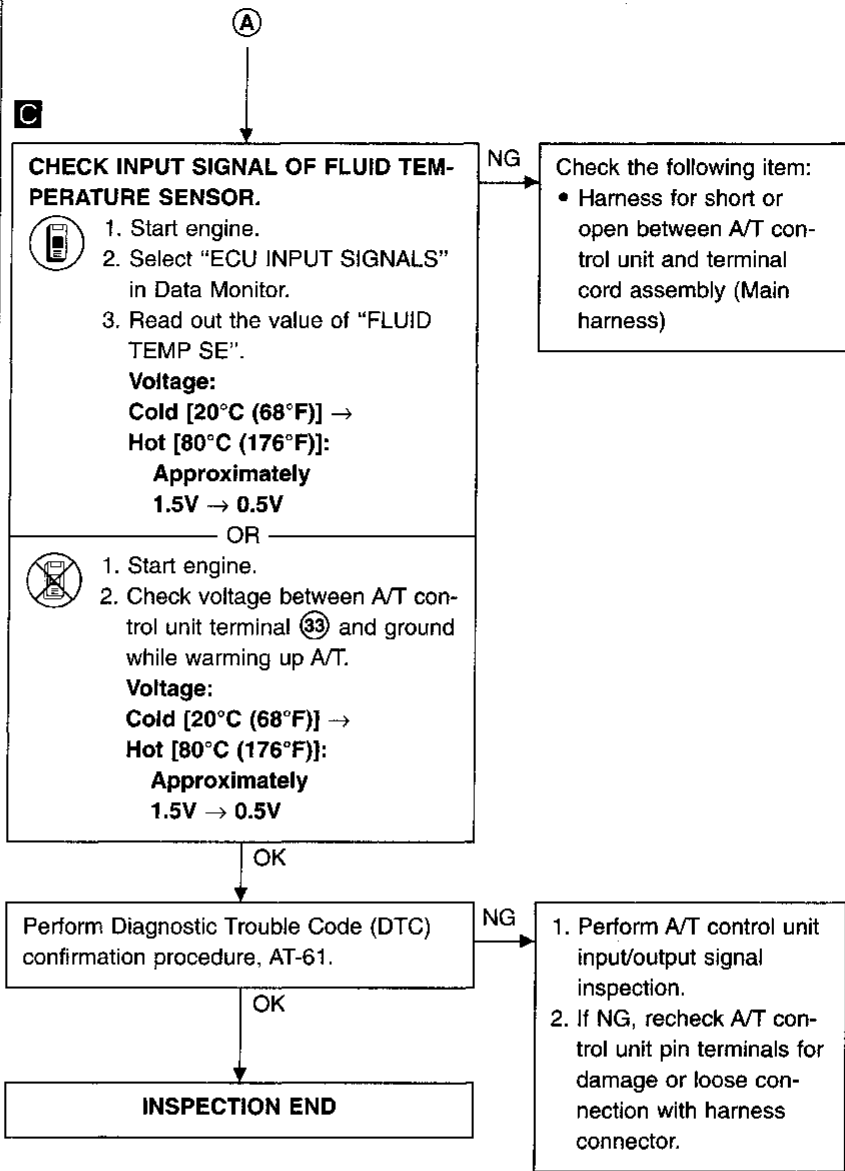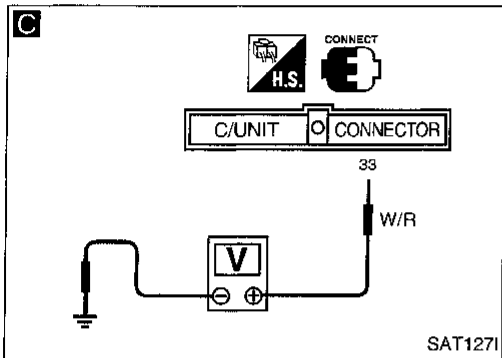

GI
 MA
 EM
 LC
 EC
 FE
 CL
 MT
 AT
 PD
 FA
 RA
 BR
 ST
 RS
 BT
 HA
 EL
 IDX




TROUBLE DIAGNOSES




Self-diagnosis (Cont'd)

ENGINE SPEED SIGNAL CIRCUIT CHECK

Description




The engine speed signal is sent from the ECM to the A/T control unit.

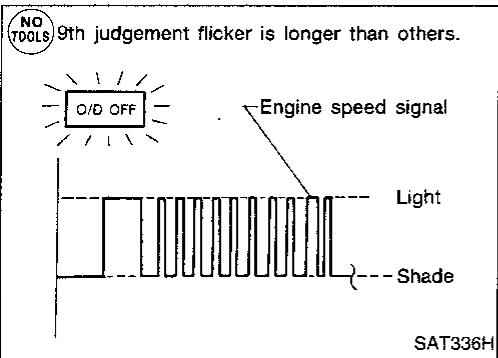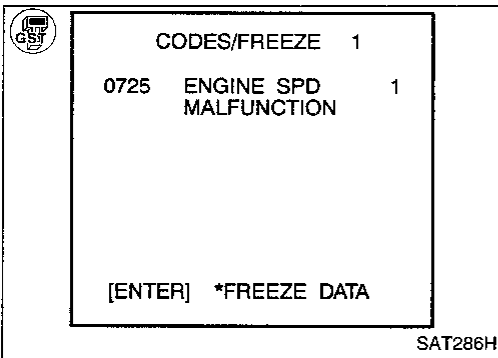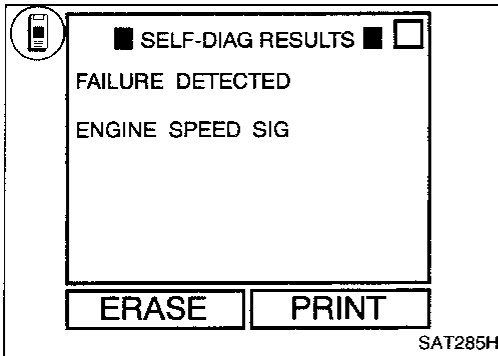Diagnostic trouble code	Malfunction is detected when ...	Check item (Possible cause)
 : ENGINE SPEED SIG  : P0725  : 9th judgement flicker	A/T control unit does not receive the proper voltage signal from ECM.	<ul style="list-style-type: none"> Harness or connectors (The sensor circuit is open or short.)






Diagnostic Trouble Code (DTC) confirmation procedure




After the repair, perform the following procedure to confirm the malfunction is eliminated.

-  1) Start engine.
-  2) Select "SELF-DIAG RESULTS" mode with CONSULT.
-  3) Drive vehicle under the following conditions:
Selector lever in D, vehicle speed higher than 10 km/h (6 MPH), throttle opening greater than 1/8 of the full throttle position and driving for more than 10 seconds.

OR


-  1) Start engine.
-  2) Drive vehicle under the following conditions:
Selector lever in D, vehicle speed higher than 10 km/h (6 MPH), throttle opening greater than 1/8 of the full throttle position and driving for more than 10 seconds.
-  3) Select "MODE 3" with GST.

OR

-  1) Start engine.
-  2) Drive vehicle under the following conditions:
Selector lever in D, vehicle speed higher than 10 km/h (6 MPH), throttle opening greater than 1/8 of the full throttle position and driving for more than 10 seconds.
-  3) Perform self-diagnosis.
Refer to SELF-DIAGNOSTIC PROCEDURE (No Tools), AT-42.

TROUBLE DIAGNOSES

Self-diagnosis (Cont'd)

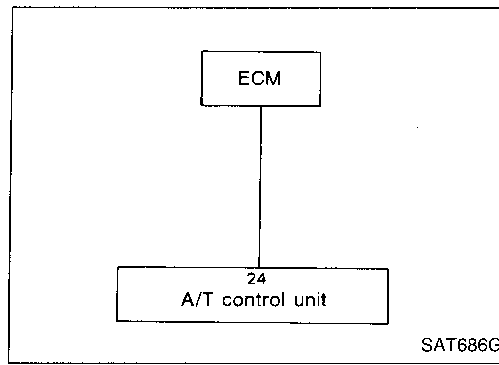


A

☆MONITOR	☆NO FAIL	
VHCL/S SE-A/T	0km/h	
VHCL/S SE-MTR	5km/h	
THRTL POS SEN	0.4V	
FLUID TEMP SE	1.2V	
BATTERY VOLT	13.4V	
ENGINE SPEED	1024rpm	
OVERDRIVE SW	O N	
P/N POSI SW	O N	
R POSITION SW	OFF	

RECORD

SAT076H

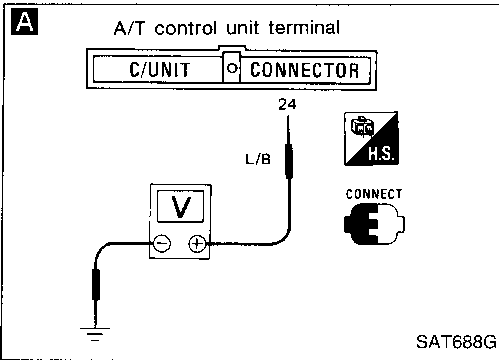

```

    graph TD
      Start[Perform diagnostic test mode II (self-diagnostic results) for engine control. Check ignition signal circuit condition.] -- NG --> NG1[Check ignition signal circuit for engine control. Refer to EC section ["Ignition Signal (DTC: 0201)", TROUBLE DIAGNOSIS FOR DTC P1320"].]
      Start -- OK --> A[A]
      A[CHECK INPUT SIGNAL. 1. Start engine. 2. Select "ECU INPUT SIGNALS" in Data Monitor. 3. Read out the value of "ENGINE SPEED". Check engine speed changes according to throttle position. OR 1. Start engine. 2. Check voltage between A/T control unit terminal 24 and ground. Voltage: 0.9 - 4.5V] -- NG --> NG2[Check the following items: • Harness for short or open between A/T control unit and ignition coil. • Resistor • Ignition coil Refer to EC section ["Ignition Signal (DTC: 0201)", "TROUBLE DIAGNOSIS FOR DTC P1320"].]
      A -- OK --> DTC[Perform Diagnostic Trouble Code (DTC) confirmation procedure, AT-64.]
      DTC -- NG --> NG3[1. Perform A/T control unit input/output signal inspection. 2. If NG, recheck A/T control unit pin terminals for damage or loose connection with harness connector.]
      DTC -- OK --> End[INSPECTION END]
  
```

GI
MA
EM
LC
EC
FE
CL
MT
AT
PD
FA
RA
BR
ST
RS
BT
HA
EL
FDX





TROUBLE DIAGNOSES

Self-diagnosis (Cont'd)

LINE PRESSURE SOLENOID VALVE CIRCUIT CHECK

Description

The line pressure solenoid valve regulates the oil pump discharge pressure to suit the driving condition in response to a signal sent from the A/T control unit.

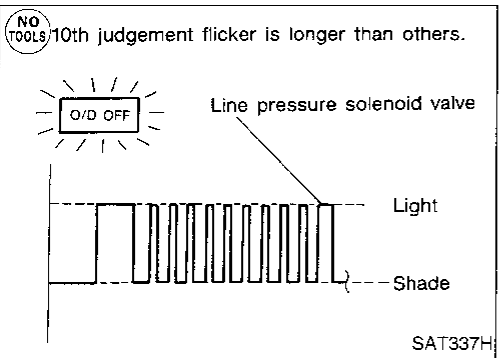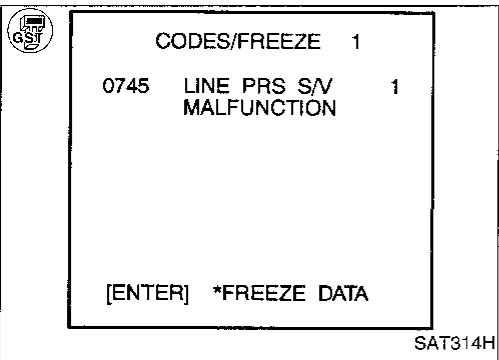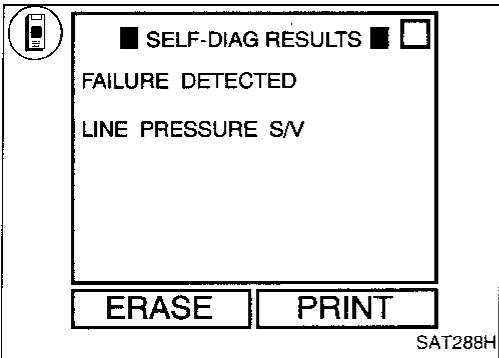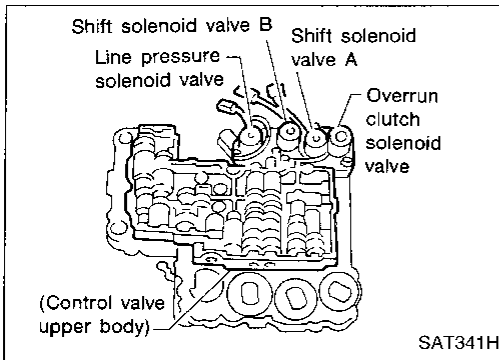

Diagnostic trouble code	Malfunction is detected when ...	Check item (Possible cause)
: LINE PRESSURE S/V : P0745 : 11th judgement flicker	A/T control unit detects the improper voltage drop when it tries to operate the solenoid valve.	<ul style="list-style-type: none"> Harness or connectors (The solenoid circuit is open or short.) Line pressure solenoid valve

Diagnostic Trouble Code (DTC) confirmation procedure

After the repair, perform the following procedure to confirm the malfunction is eliminated.

- 1) Start engine.
 2) Select "SELF-DIAG RESULTS" mode with CONSULT.
 3) With brake pedal depressed, shift the lever from P → N → D → N → P.

OR





- 1) Start engine.
 2) With brake pedal depressed, shift the lever from P → N → D → N → P.
 3) Select "MODE 3" with GST.

OR

- 1) Start engine.
 2) With brake pedal depressed, shift the lever from P → N → D → N → P.
 3) Perform self-diagnosis.
 Refer to SELF-DIAGNOSTIC PROCEDURE (No Tools), AT-42.

TROUBLE DIAGNOSES

Self-diagnosis (Cont'd)

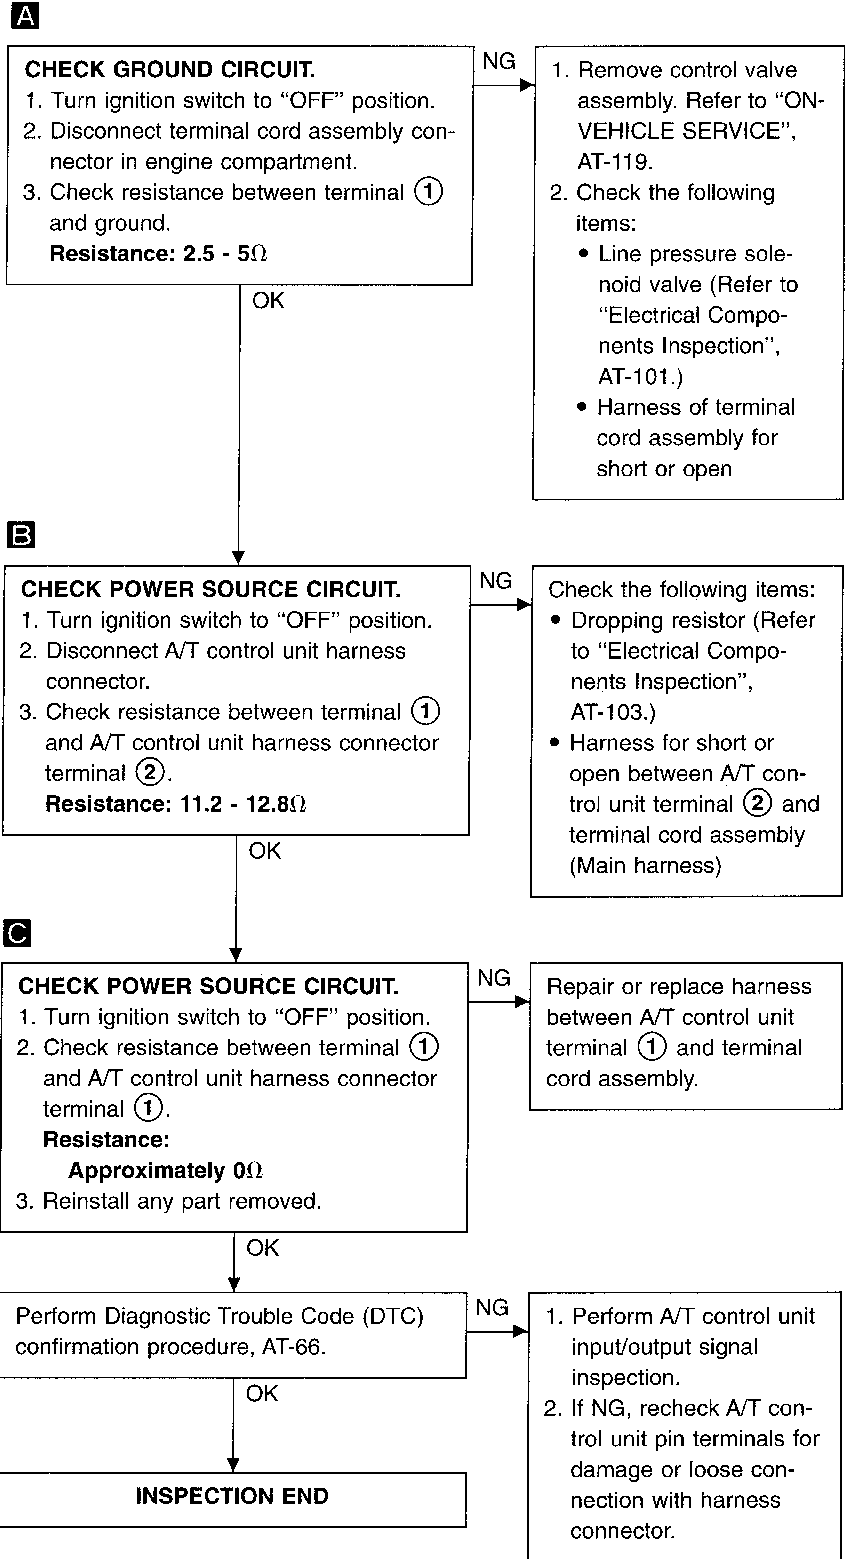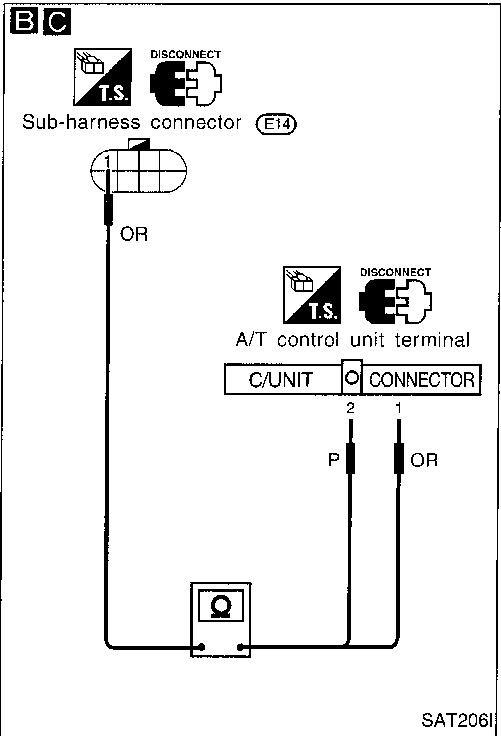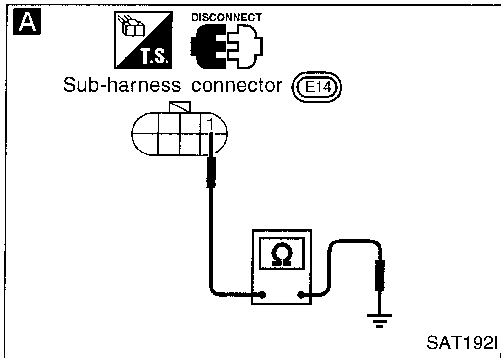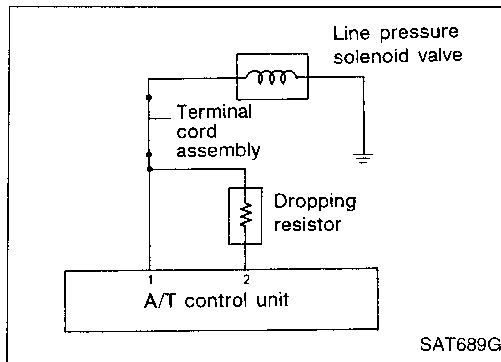

GI
MA
EM
LC
EC
FE
CL
MT
AT
PD
EA
RA
BR
ST
RS
BT
HA
EL
IDX

TROUBLE DIAGNOSES

Self-diagnosis (Cont'd)


INHIBITOR, OVERDRIVE AND THROTTLE POSITION SWITCH CIRCUIT CHECKS

Parts description


- Inhibitor switch
Detects the selector lever position and sends a signal to the A/T control unit.
- Overdrive switch
Detects the overdrive switch position (ON or OFF) and sends a signal to the A/T control unit.
- Throttle position switch
Consists of a wide-open throttle position switch and a closed throttle position switch.
The wide-open position switch sends a signal to the A/T control unit when the throttle valve is open at least 1/2 of the full throttle position. The closed throttle position switch sends a signal to the A/T control unit when the throttle valve is fully closed.

Overall function check


After the repair, perform the following procedure to confirm the malfunction is eliminated.






-  1) Start engine.
2) Select "SELF-DIAG RESULTS" mode for ECM with CONSULT.
3) Drive vehicle under the following conditions:
Selector lever in D, OD control switch in "OFF" position, vehicle speed higher than 10 km/h (6 MPH), throttle opening greater than 1/2 of the full throttle position and driving for more than 5 seconds.

OR

-  1) Start engine.
2) Drive vehicle under the following conditions:
Selector lever in D, OD control switch in "OFF" position, vehicle speed higher than 10 km/h (6 MPH), throttle opening greater than 1/2 of the full throttle position and driving for more than 5 seconds.
3) Select "MODE 3" with GST.




OR

-  1) Start engine.
2) Drive vehicle under the following conditions:
Selector lever in D, OD control switch in "OFF" position, vehicle speed higher than 10 km/h (6 MPH), throttle opening greater than 1/2 of the full throttle position and driving for more than 5 seconds.
3) Perform self-diagnosis for ECM.
Refer to EC section ["Malfunction Indicator Lamp (MIL)", "ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION"].

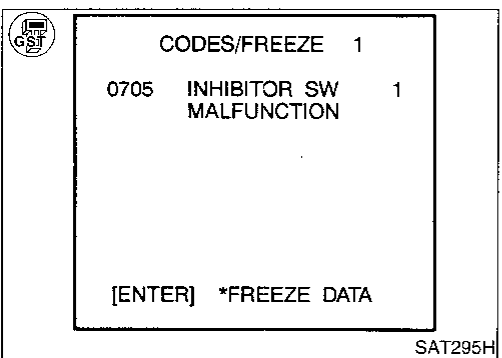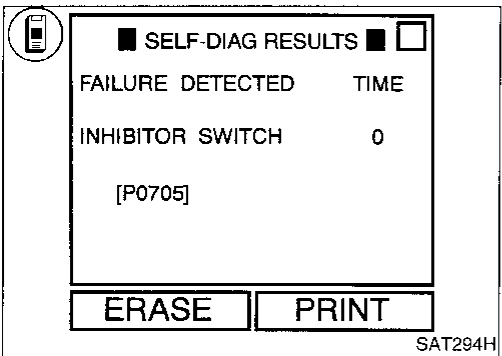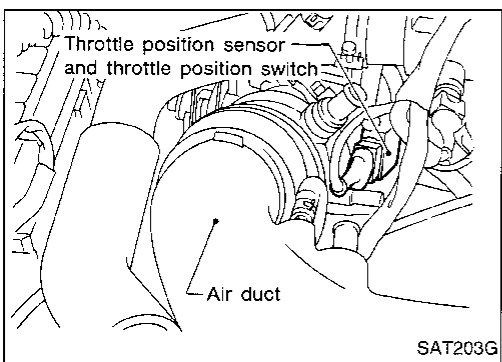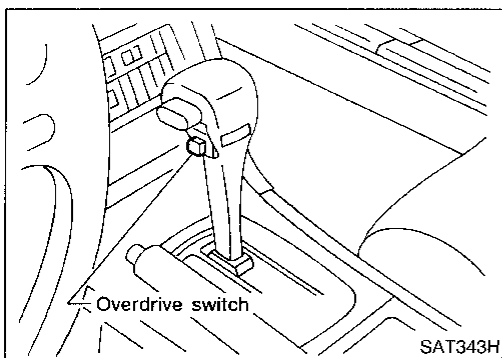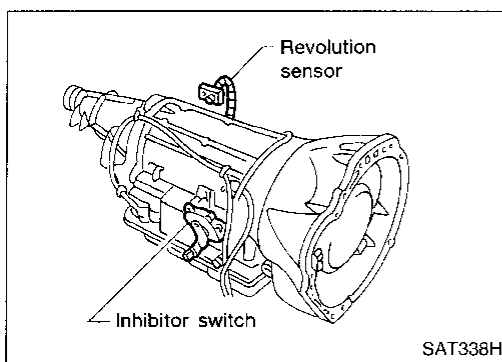

TROUBLE DIAGNOSES

Self-diagnosis (Cont'd)

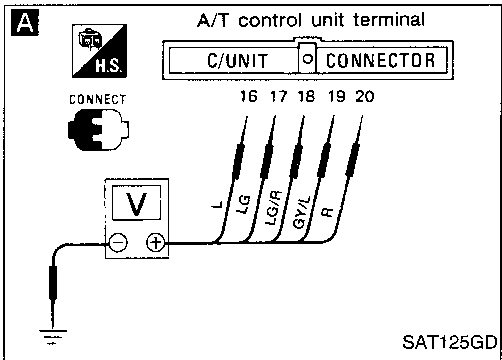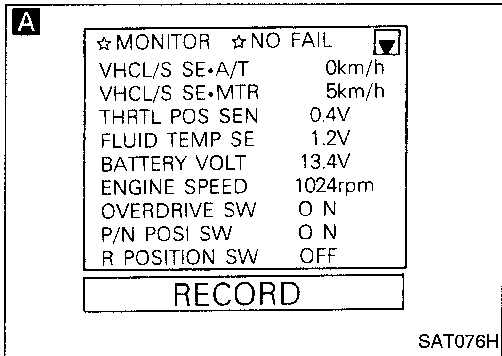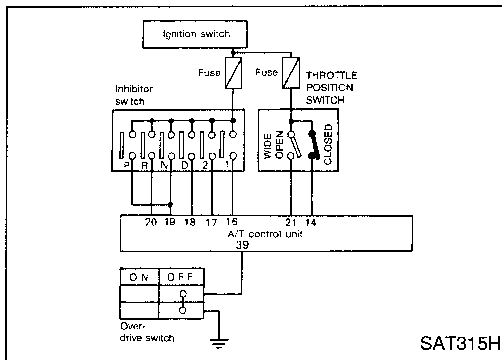

A

CHECK INHIBITOR SWITCH CIRCUIT.

1. Turn ignition switch to "ON" position. (Do not start engine.)
2. Select "ECU INPUT SIGNALS" in Data Monitor.
3. Read out "R, N, D, 1, 2 and 3 position switches" moving selector lever to each position. Check the signal of the selector lever position is indicated properly.

OR

1. Turn ignition switch to "ON" position. (Do not start engine.)
2. Check voltage between A/T control unit terminals (16), (17), (18), (19), (20) and ground while moving selector lever through each position.

Voltage:

B: Battery voltage

0: 0V

Lever position	Terminal No.				
	(19)	(20)	(18)	(17)	(16)
P, N	B	0	0	0	0
R	0	B	0	0	0
D	0	0	B	0	0
2	0	0	0	B	0
1	0	0	0	0	B

NG

Check the following items:

- Inhibitor switch (Refer to "Electrical Components Inspection", AT-102.)
- Harness for short or open between ignition switch and inhibitor switch (Main harness)
- Harness for short or open between inhibitor switch and A/T control unit (Main harness)

OK

A

GI

MA

EM

LC

EC

FE

CL

MT

AT

PD

FA

RA

BR

ST

RS

BT

HA

EL

IDX

TROUBLE DIAGNOSES


Self-diagnosis (Cont'd)

B

☆ MONITOR	☆ NO FAIL	
R POSITION SW	OFF	
D POSITION SW	OFF	
4 POSITION SW	OFF	
3 POSITION SW	OFF	
2 POSITION SW	OFF	
1 POSITION SW	OFF	
ASCD•CRUISE	OFF	
ASCD•OD CUT	OFF	
KICKDOWN SW	OFF	

RECORD

SAT118G

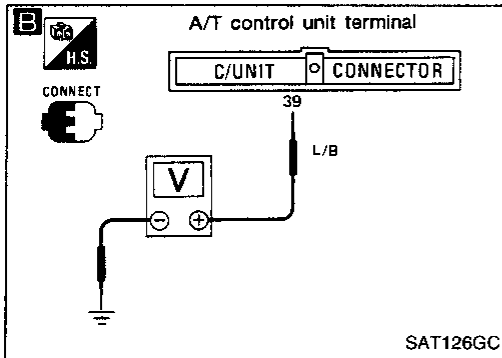

A

B

CHECK OVERDRIVE SWITCH CIRCUIT.

1. Turn ignition switch to "ON" position. (Do not start engine.)
2. Select "ECU INPUT SIGNALS" in Data Monitor.
3. Read out "OVERDRIVE SWITCH".

Check the signal of the overdrive switch is indicated properly. (Overdrive switch "ON" displayed on CONSULT means overdrive "OFF".)

OR

1. Turn ignition switch to "ON" position. (Do not start engine.)
2. Check voltage between A/T control unit terminal (39) and ground when overdrive switch is "ON" and "OFF".

NG

Check the following items.

- Overdrive switch
Refer to "Electrical Components Inspection", AT-102.
- Harness for short or open between A/T control unit and overdrive switch (Main harness)
- Harness for short or open of ground circuit for overdrive switch (Main harness)

Switch position	Voltage
ON	Battery voltage
OFF	1V or less


OK

B

TROUBLE DIAGNOSES

Self-diagnosis (Cont'd)

C


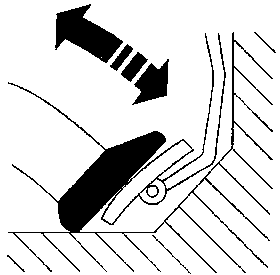


☆ MONITOR	☆ NO FAIL	
POWERSHIFT SW	OFF	
CLOSED THL/SW	ON	
W/O THRL/P-SW	OFF	
HOLD SW	OFF	

RECORD

SAT052I

C

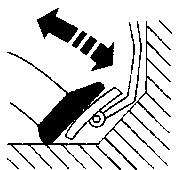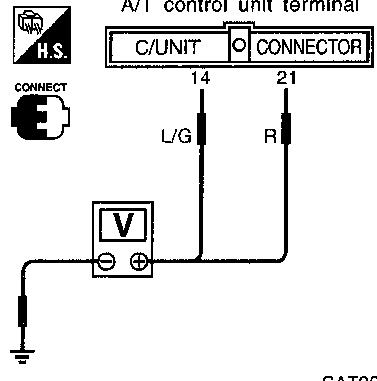A/T control unit terminal

C/UNIT CONNECTOR

14 L/G

21 R

V

SAT964HE

B

C

CHECK THROTTLE POSITION SWITCH CIRCUIT.

1. Turn ignition switch to "ON" position. (Do not start engine.)

2. Select "ECU INPUT SIGNALS" in Data Monitor.

3. Read out "CLOSED THL/SW" and "W/O THRL/P-SW" depressing and releasing accelerator pedal. Check the signal of throttle position switch is indicated properly.

Accelerator pedal condition	Data monitor	
	CLOSED THL/SW	W/O THRL/P-SW
Released	ON	OFF
Fully depressed	OFF	ON

OR

1. Turn ignition switch to "ON" position. (Do not start engine.)

2. Check voltage between A/T control unit terminals (14), (21) and ground while depressing, and releasing accelerator pedal slowly. (after warming up engine)

Accelerator pedal condition	Voltage	
	Terminal No. (14)	Terminal No. (21)
Released	Battery voltage	1V or less
Fully depressed	1V or less	Battery voltage

NG → Check the following items:

- Throttle position switch Refer to "Electrical Components Inspection", AT-103.
- Harness for short or open between ignition switch and throttle position switch (Main harness)
- Harness for short or open between throttle position switch and A/T control unit (Main harness)

OK → Perform self-diagnosis again after driving for a while.

OK → **INSPECTION END**

NG →

1. Perform A/T control unit input/output signal inspection.
2. If NG, recheck A/T control unit pin terminals for damage or loose connection with harness connector.

GI
MA
EM
LC
EC
FE
CL
MT
AT
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX






TROUBLE DIAGNOSES

Self-diagnosis (Cont'd)

IMPROPER SHIFTING TO 1ST GEAR POSITION

Description

- This is one of the items indicated by the MIL.
- This malfunction will not be detected while the OD OFF indicator lamp is indicating another self-diagnosis malfunction.
- This malfunction is detected when the A/T does not shift into first gear position as instructed by the A/T control unit. This is not caused by electrical malfunction (circuits open or shorted) but by mechanical malfunction such as control valve sticking, improper solenoid valve operation, etc.

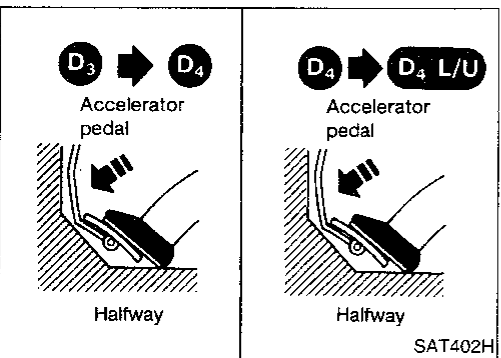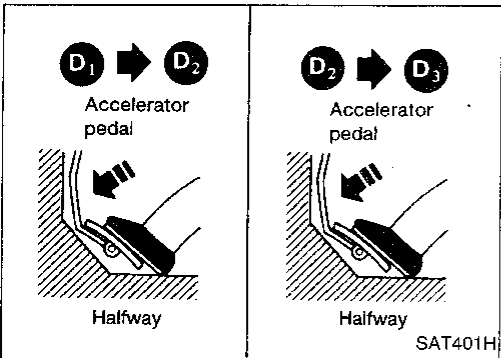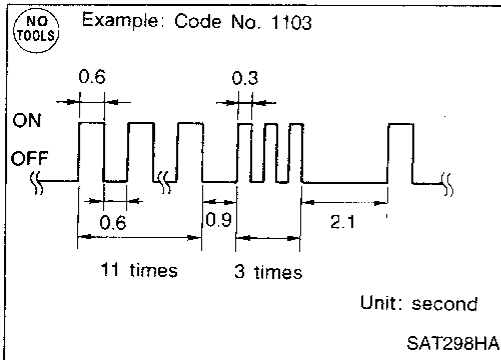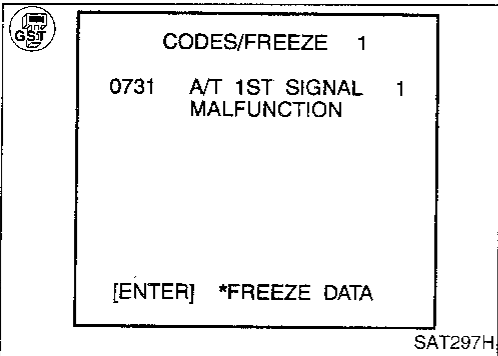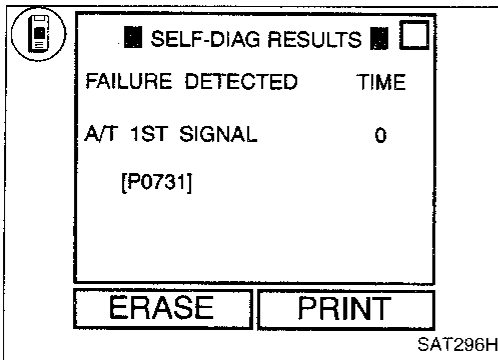

Overall function check

After the repair, perform the following procedure to confirm the malfunction is eliminated.

- 1) Start engine and warm up ATF.
- 2) Select "SELF-DIAG RESULTS" mode for ECM with CONSULT.
- 3) Start vehicle with selector lever in D and throttle opening halfway. Check that vehicle runs through gear shift of D₁ → D₂ → D₃ → D₄, in accordance with shift schedule. Refer to shift schedule, AT-33.

OR




- 1) Start engine and warm up ATF.
- 2) Start vehicle with selector lever in D and throttle opening halfway. Check that vehicle runs through gear shift of D₁ → D₂ → D₃ → D₄, in accordance with shift schedule. Refer to shift schedule, AT-33.
- 3) Select "MODE 3" with GST.

OR

- 1) Start engine and warm up ATF.
- 2) Start vehicle with selector lever in D and throttle opening halfway. Check that vehicle runs through gear shift of D₁ → D₂ → D₃ → D₄, in accordance with shift schedule. Refer to shift schedule, AT-33.
- 3) Perform self-diagnosis for ECM. Refer to EC section ["Malfunction Indicator Lamp (MIL)", "ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION"].

TROUBLE DIAGNOSES

Self-diagnosis (Cont'd)

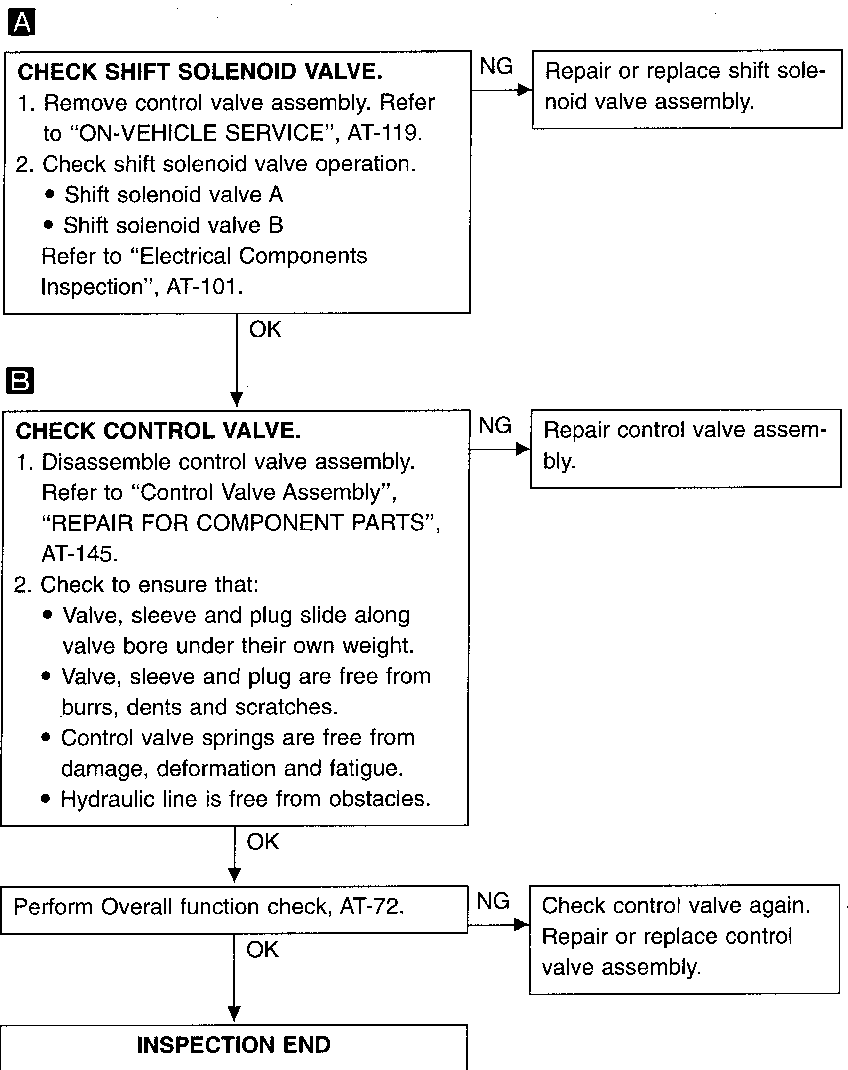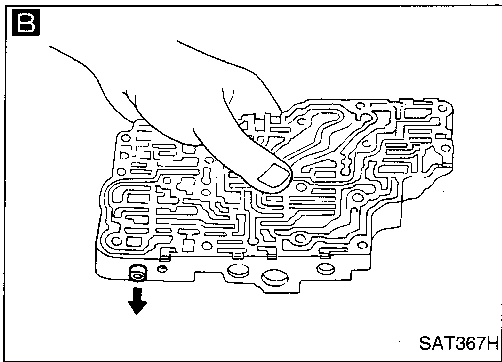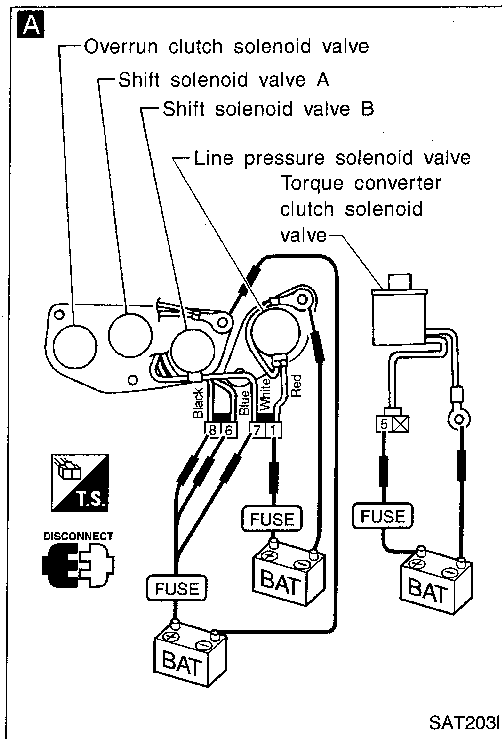

GI
MA
EM
LC
EC
FE
CL
MT
AT
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX


TROUBLE DIAGNOSES

Self-diagnosis (Cont'd)

IMPROPER SHIFTING TO 2ND GEAR POSITION


Description

- This is one of the items indicated by the MIL.
- This malfunction will not be detected while the OD OFF indicator lamp is indicating another self-diagnosis malfunction.
- This malfunction is detected when the A/T does not shift into second gear position as instructed by the A/T control unit. This is not caused by electrical malfunction (circuits open or shorted) but by mechanical malfunction such as control valve sticking, improper solenoid valve operation, etc.

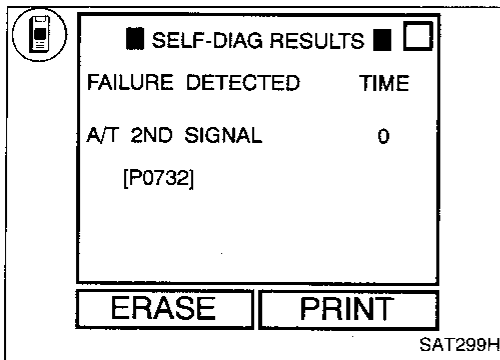

Overall function check

After the repair, perform the following procedure to confirm the malfunction is eliminated.

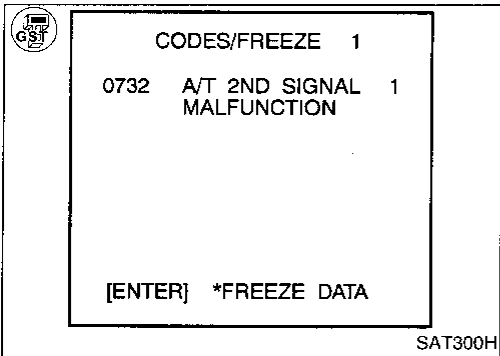




- 1) Start engine and warm up ATF.
- 2) Select "SELF-DIAG RESULTS" mode for ECM with CONSULT.
- 3) Start vehicle with selector lever in D and throttle opening halfway. Check that vehicle runs through gear shift of $D_1 \rightarrow D_2 \rightarrow D_3 \rightarrow D_4$, in accordance with shift schedule. Refer to shift schedule, AT-33.

OR

- 1) Start engine and warm up ATF.
- 2) Start vehicle with selector lever in D and throttle opening halfway. Check that vehicle runs through gear shift of $D_1 \rightarrow D_2 \rightarrow D_3 \rightarrow D_4$, in accordance with shift schedule. Refer to shift schedule, AT-33.
- 3) Select "MODE 3" with GST.




OR

- 1) Start engine and warm up ATF.
- 2) Start vehicle with selector lever in D and throttle opening halfway. Check that vehicle runs through gear shift of $D_1 \rightarrow D_2 \rightarrow D_3 \rightarrow D_4$, in accordance with shift schedule. Refer to shift schedule, AT-33.
- 3) Perform self-diagnosis for ECM. Refer to EC section ["Malfunction Indicator Lamp (MIL)", "ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION"].

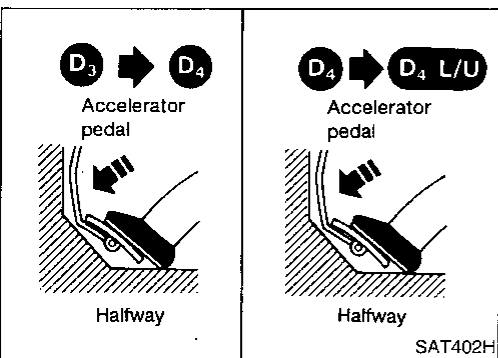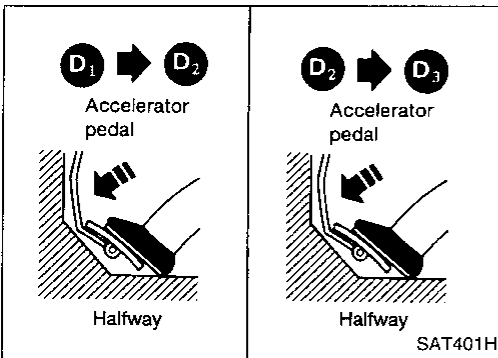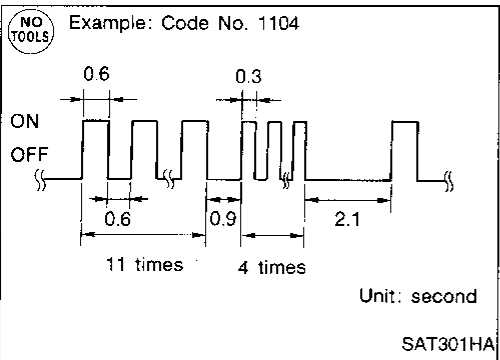

TROUBLE DIAGNOSES

Self-diagnosis (Cont'd)

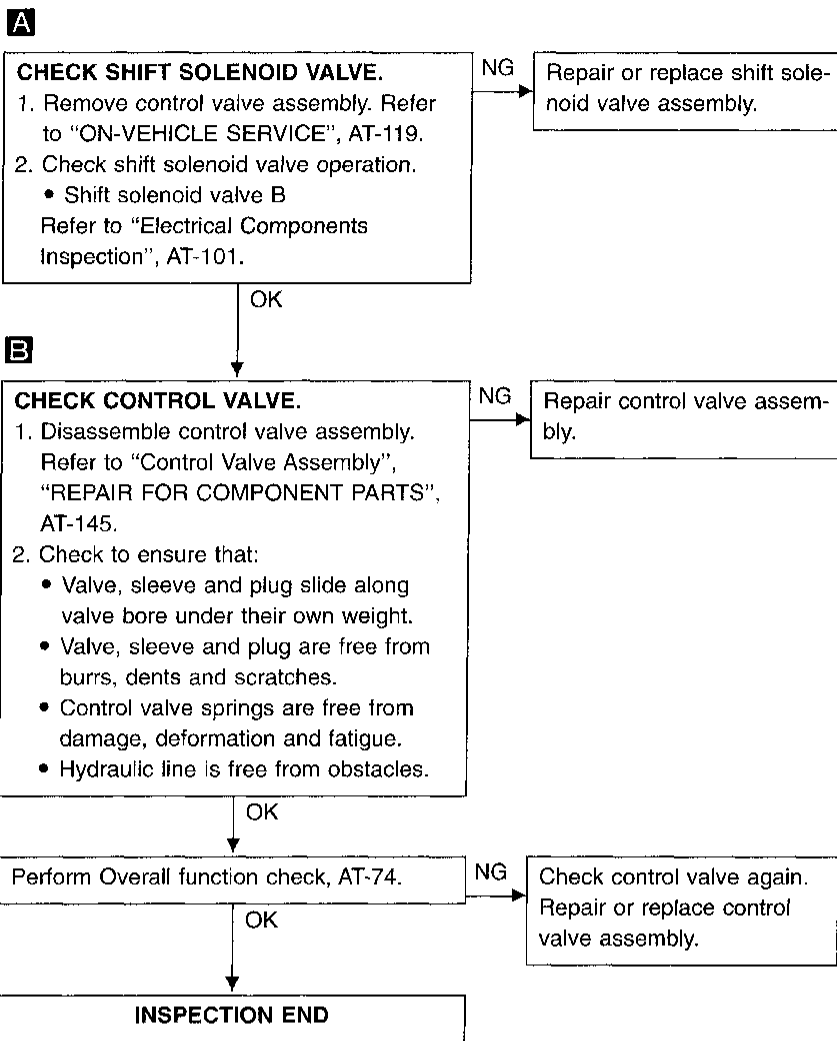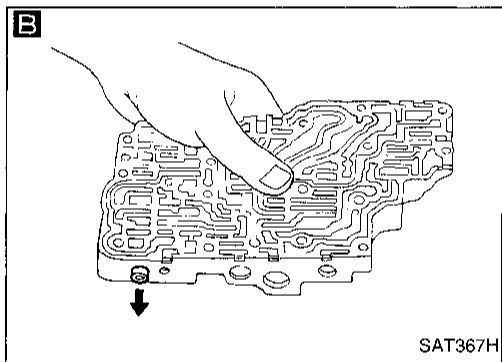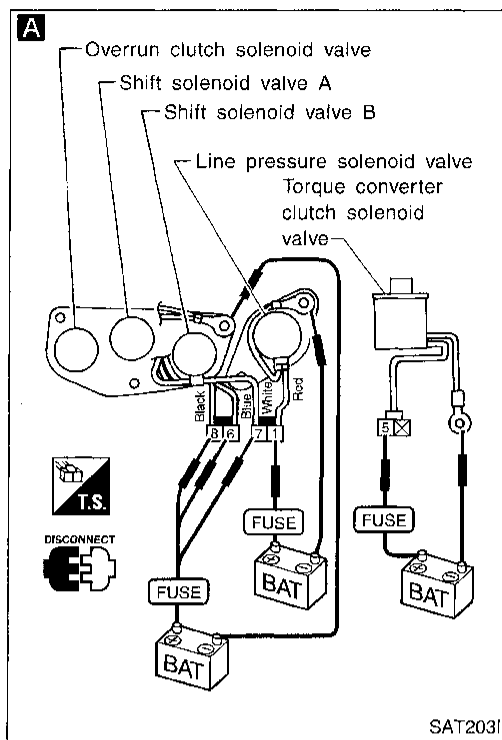

GI

MA

EM

LC

EC

FE

CL

MT

AT

PD

FA

RA

BR

ST

RS

BT

HA

EL

IDX




TROUBLE DIAGNOSES

Self-diagnosis (Cont'd)

IMPROPER SHIFTING TO 3RD GEAR POSITION

Description

- This is one of the items indicated by the MIL.
- This malfunction will not be detected while the OD OFF indicator lamp is indicating another self-diagnosis malfunction.
- This malfunction is detected when the A/T does not shift into third gear position as instructed by the A/T control unit. This is not caused by electrical malfunction (circuits open or shorted) but by mechanical malfunction such as control valve sticking, improper solenoid valve operation, malfunctioning servo piston or brake band, etc.

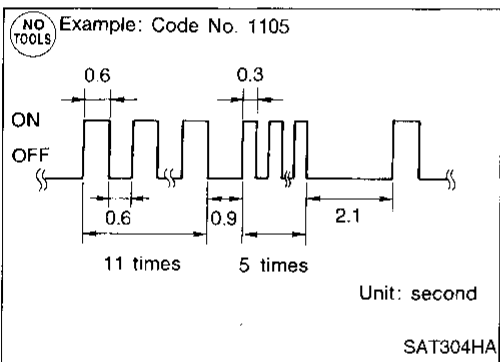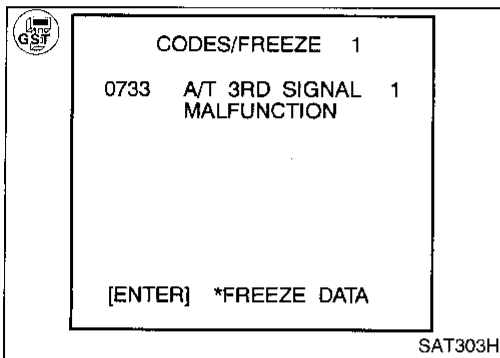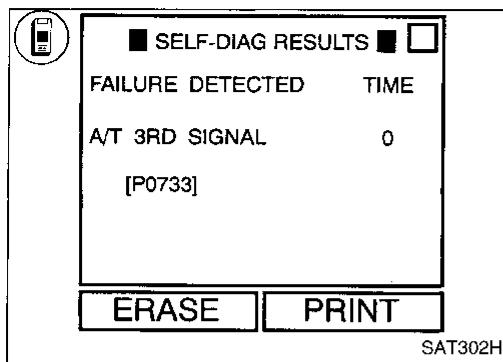

Overall function check

After the repair, perform the following procedure to confirm the malfunction is eliminated.



- 1) Start engine and warm up ATF.
- 2) Select "SELF-DIAG RESULTS" mode for ECM with CONSULT.
- 3) Start vehicle with selector lever in D and throttle opening halfway. Check that vehicle runs through gear shift of $D_1 \rightarrow D_2 \rightarrow D_3 \rightarrow D_4$, in accordance with shift schedule. Refer to shift schedule, AT-33.

OR

- 1) Start engine and warm up ATF.
- 2) Start vehicle with selector lever in D and throttle opening halfway. Check that vehicle runs through gear shift of $D_1 \rightarrow D_2 \rightarrow D_3 \rightarrow D_4$, in accordance with shift schedule. Refer to shift schedule, AT-33.
- 3) Select "MODE 3" with GST.




OR

- 1) Start engine and warm up ATF.
- 2) Start vehicle with selector lever in D and throttle opening halfway. Check that vehicle runs through gear shift of $D_1 \rightarrow D_2 \rightarrow D_3 \rightarrow D_4$, in accordance with shift schedule. Refer to shift schedule, AT-33.
- 3) Perform self-diagnosis for ECM. Refer to EC section ["Malfunction Indicator Lamp (MIL)", "ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION"].

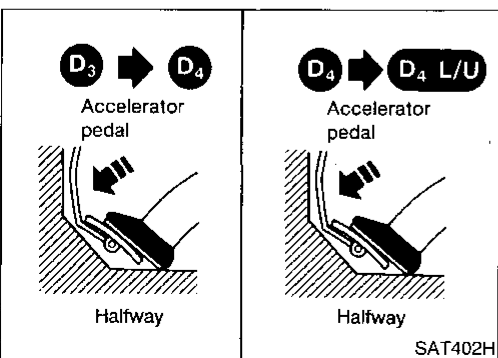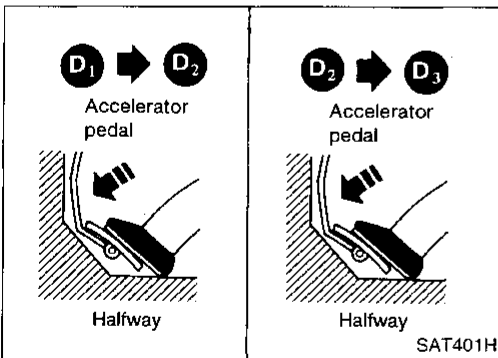

TROUBLE DIAGNOSES

Self-diagnosis (Cont'd)

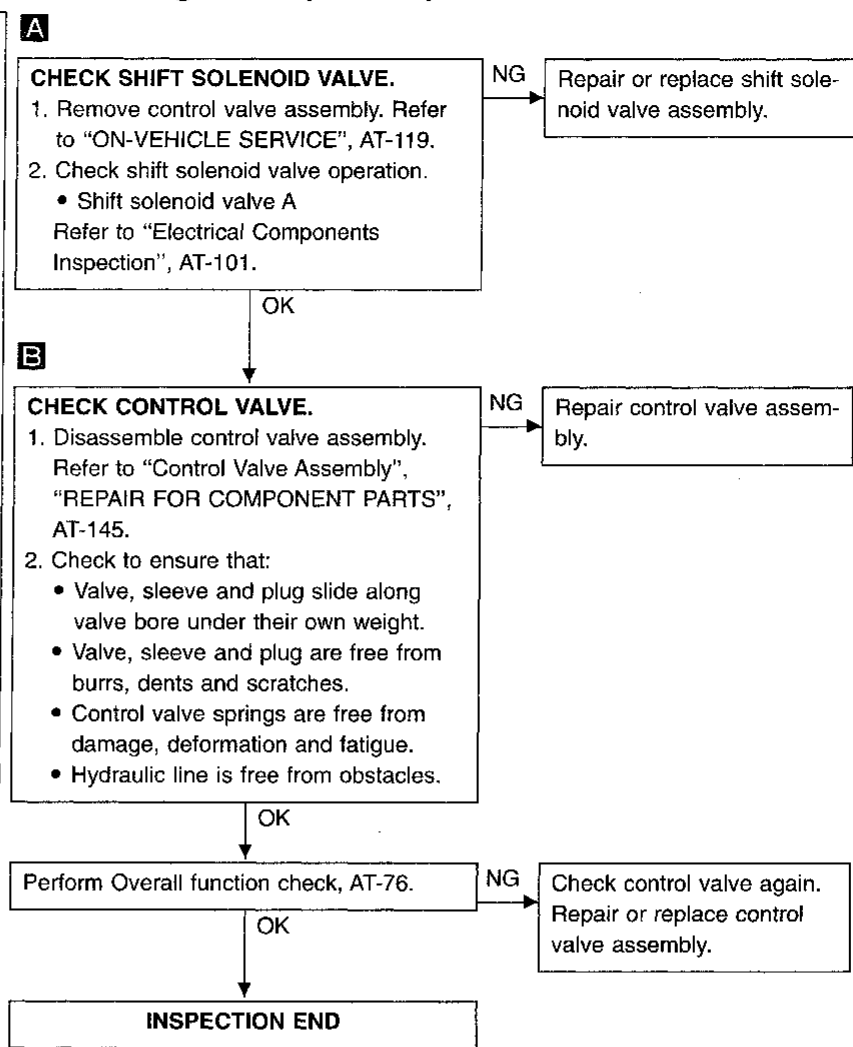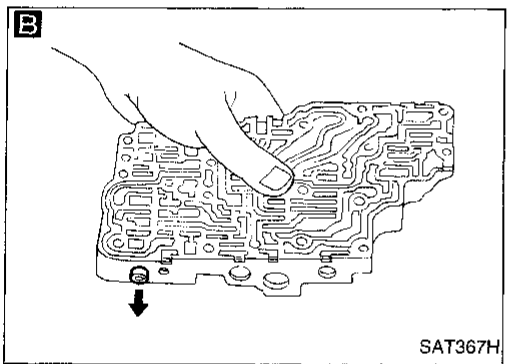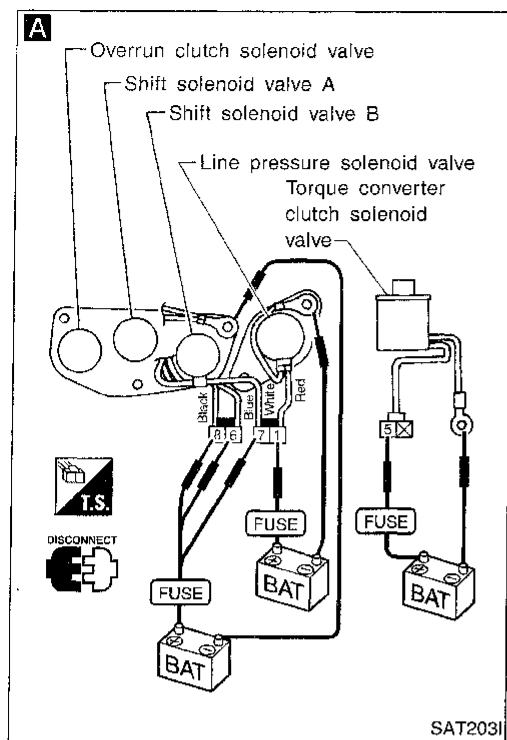

GI
MA
EM
LC
EC
FE
CL
MT
AT
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX

TROUBLE DIAGNOSES

Self-diagnosis (Cont'd)


IMPROPER SHIFTING TO 4TH GEAR POSITION OR IMPROPER TORQUE CONVERTER CLUTCH OPERATION

Description


- This is one of the items indicated by the MIL.
- This malfunction will not be detected while the OD OFF indicator lamp is indicating another self-diagnosis malfunction.
- This malfunction is detected when the A/T does not shift into fourth gear position or the torque converter clutch does not lock up as instructed by the A/T control unit. This is not caused by electrical malfunction (circuits open or shorted) but by mechanical malfunction such as control valve sticking, improper solenoid valve operation, malfunctioning oil pump or torque converter clutch, etc.

Overall function check


After the repair, perform the following procedure to confirm the malfunction is eliminated.






-  1) Start engine and warm up ATF.
 2) Select "SELF-DIAG RESULTS" mode for ECM with CONSULT.
 3) Start vehicle with selector lever in D and throttle opening halfway. Check that vehicle runs through gear shift of $D_1 \rightarrow D_2 \rightarrow D_3 \rightarrow D_4 \rightarrow D_4$ lock-up, in accordance with shift schedule. Refer to shift schedule, AT-33.

OR

-  1) Start engine and warm up ATF.
 2) Start vehicle with selector lever in D and throttle opening halfway. Check that vehicle runs through gear shift of $D_1 \rightarrow D_2 \rightarrow D_3 \rightarrow D_4 \rightarrow D_4$ lock-up, in accordance with shift schedule. Refer to shift schedule, AT-33.
 3) Select "MODE 3" with GST.


OR

-  1) Start engine and warm up ATF.
 2) Start vehicle with selector lever in D and throttle opening halfway. Check that vehicle runs through gear shift of $D_1 \rightarrow D_2 \rightarrow D_3 \rightarrow D_4 \rightarrow D_4$ lock-up, in accordance with shift schedule. Refer to shift schedule, AT-33.
 3) Perform self-diagnosis for ECM.
 Refer to EC section ["Malfunction Indicator Lamp (MIL)", "ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION"].

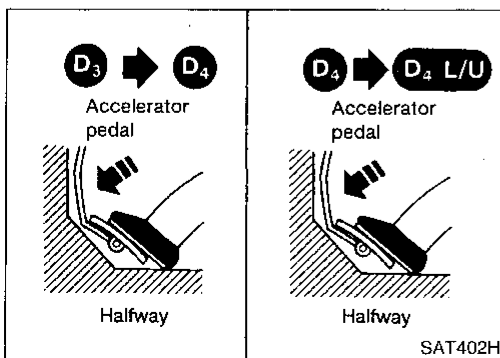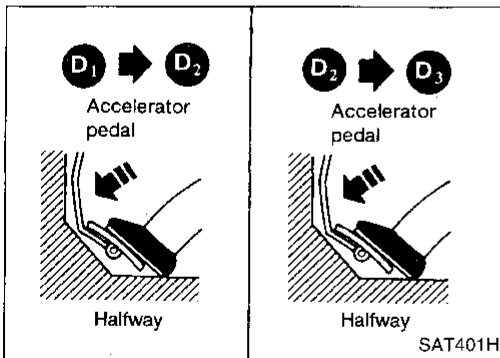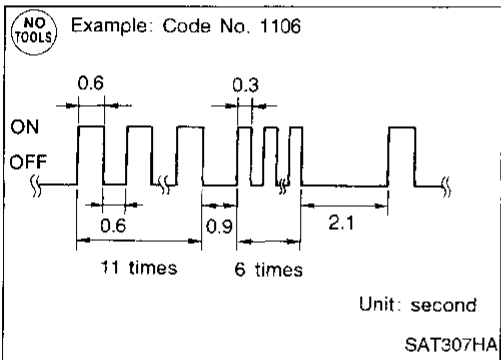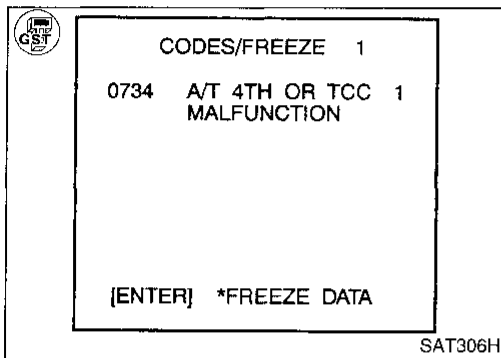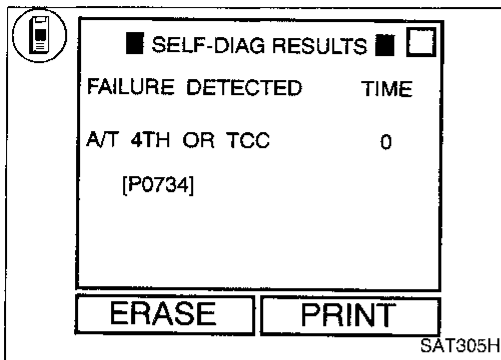

TROUBLE DIAGNOSES

Self-diagnosis (Cont'd)

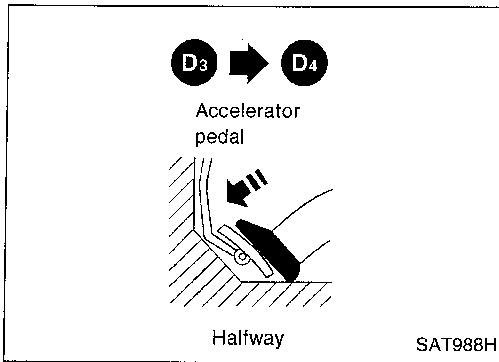

During "Cruise test – Part 1" (AT-29), does A/T shift from D₃ to D₄ at the specified speed?

Yes → Go to (B) and check for proper lock-up.

No → Perform pressure test. Refer to AT-107.


NG → Go to (A).

A

CHECK SOLENOID VALVES.

1. Remove control valve assembly. Refer to "ON-VEHICLE SERVICE", AT-119.
2. Check solenoid valve assembly operation. Refer to AT-101.

NG → Replace solenoid valve assembly.

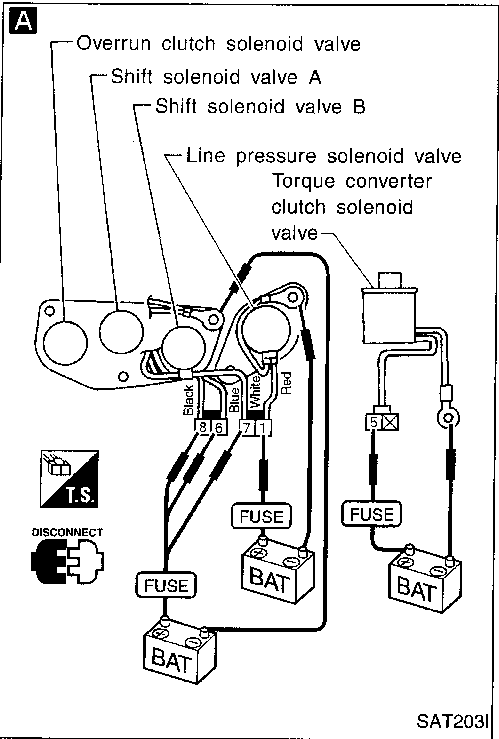


B

CHECK CONTROL VALVE.

1. Disassemble control valve assembly. Refer to AT-145.
2. Check to ensure that:
 - Valve, sleeve and plug slide along valve bore under their own weight.
 - Valve, sleeve and plug are free from burrs, dents and scratches.
 - Control valve springs are free from damage, deformation and fatigue.
 - Hydraulic line is free from obstacles.

NG → Repair control valve.

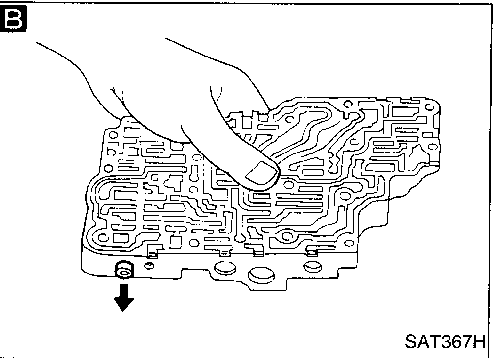

OK → Does A/T shift from D₃ to D₄ at the specified speed?

NG → Check control valve again. Repair or replace control valve assembly.

OK → Perform Overall function check procedure (AT-78).




NG → Go to (B) and check for proper lock-up.

OK → **INSPECTION END**

GI
MA
EM
LC
EC
FE
CL
MT
AT
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX





TROUBLE DIAGNOSES

Self-diagnosis (Cont'd)

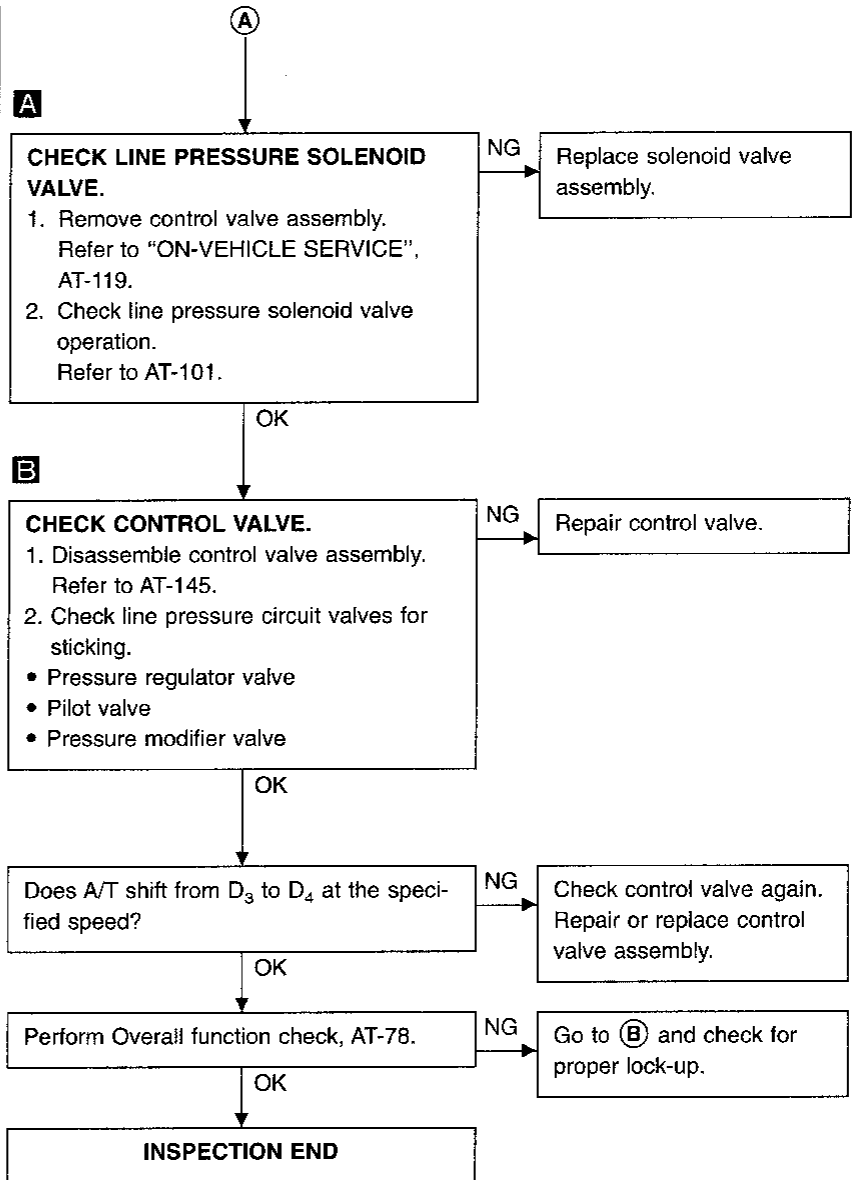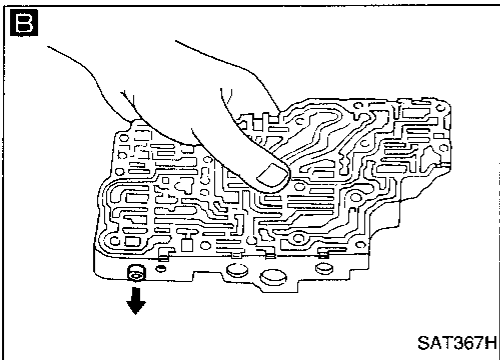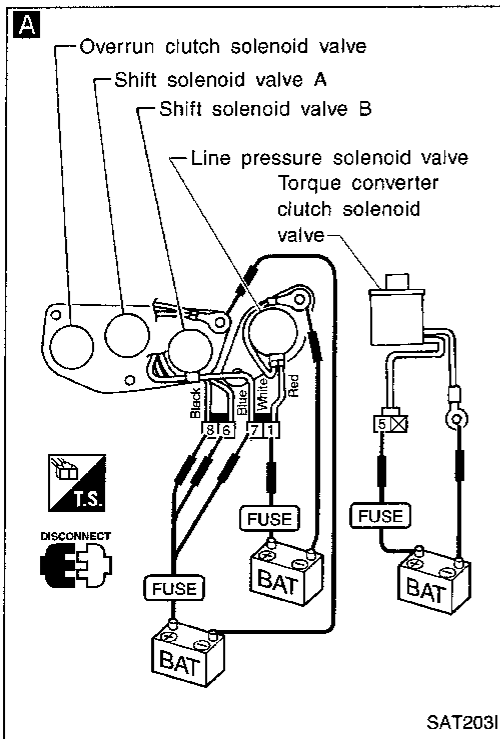

TROUBLE DIAGNOSES

Self-diagnosis (Cont'd)

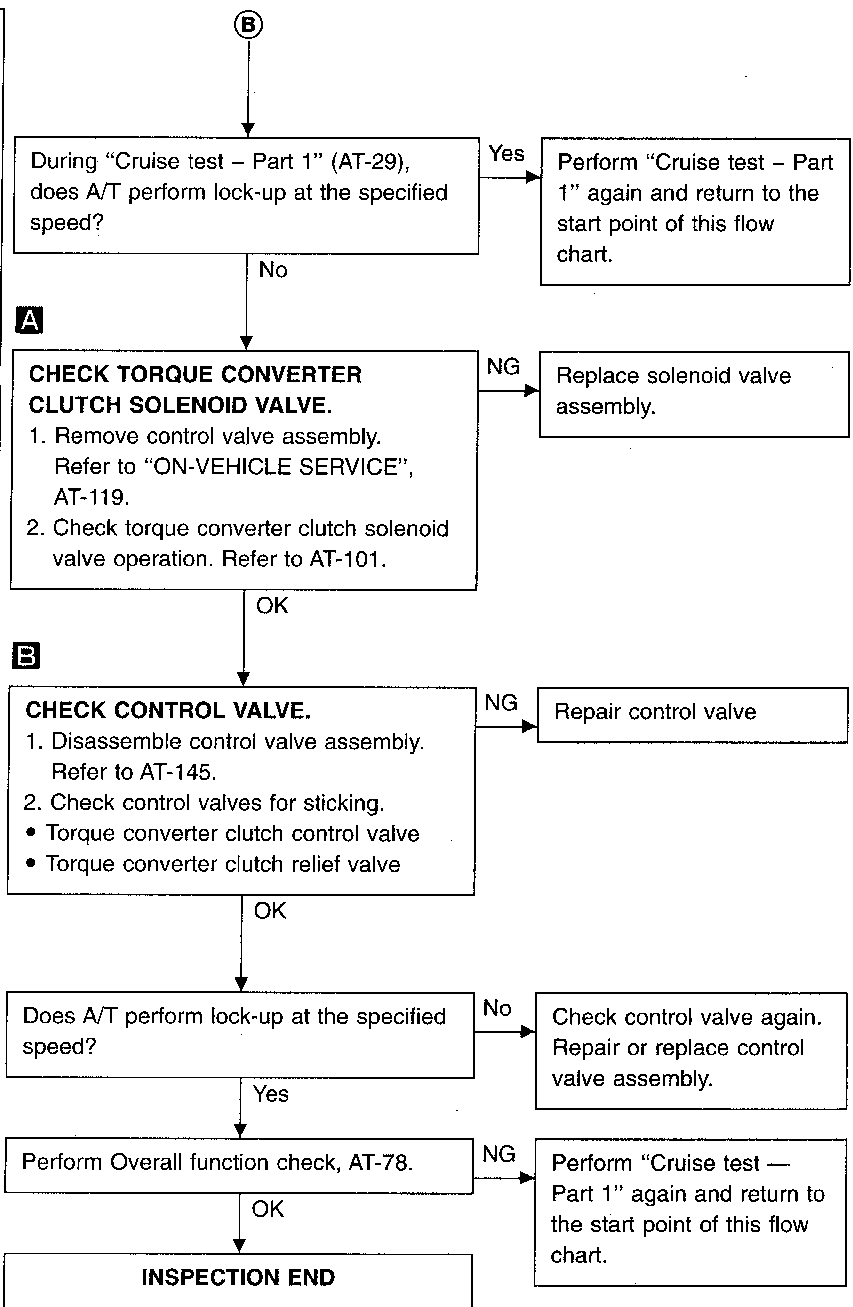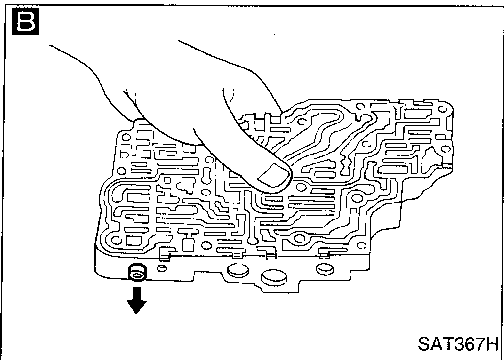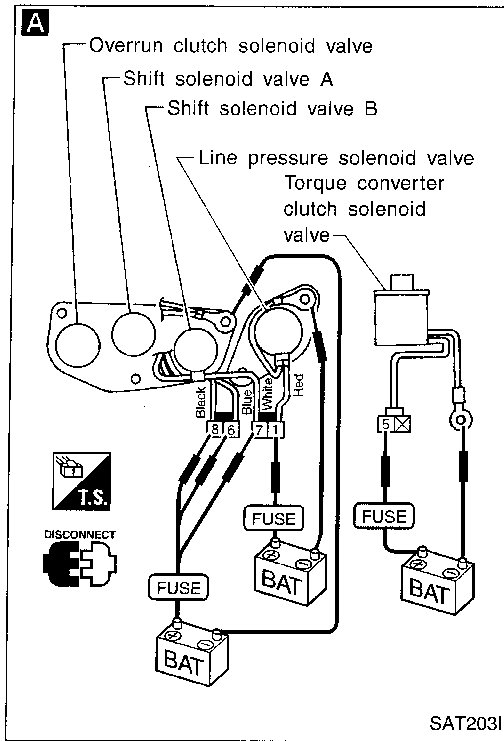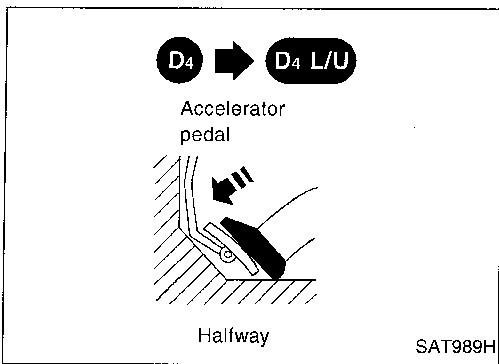





GI
MA
EM
LC
EC
FE
CL
MT
AT
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX

TROUBLE DIAGNOSES

Diagnostic Procedure 1

SYMPTOM:

OD OFF indicator lamp does not come on for about 2 seconds when turning ignition switch to "ON".

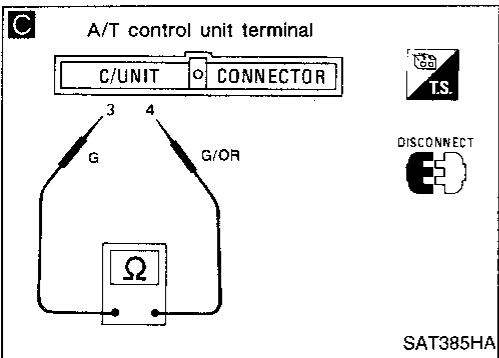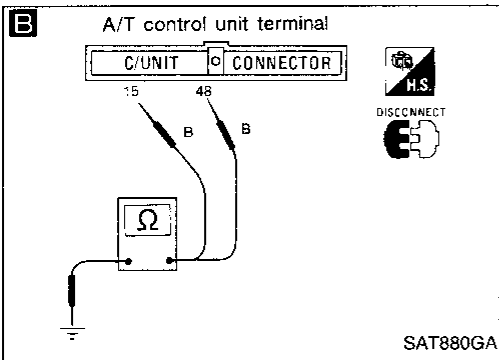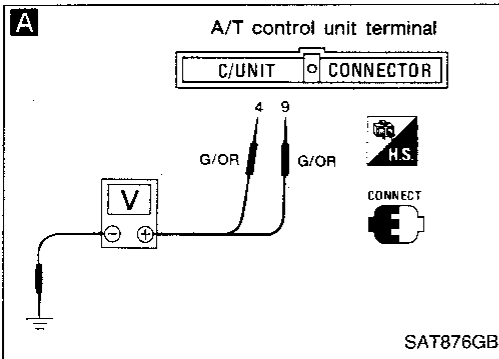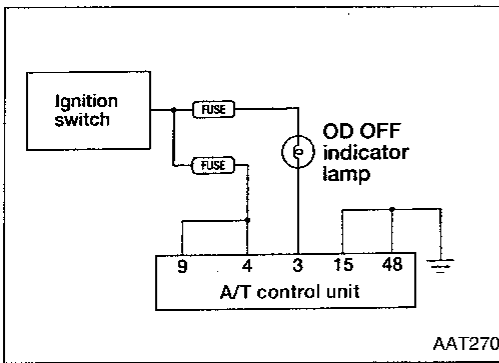

A

CHECK A/T CONTROL UNIT POWER SOURCE.

1. Turn ignition switch to "ON" position. (Do not start engine.)
2. Check voltage between A/T control unit terminals ④, ⑨ and ground.

Battery voltage should exist.

NG

Check the following items:

- Harness for short or open between ignition switch and A/T control unit (Main harness)
- Ignition switch and fuse

Refer to EL section ("POWER SUPPLY ROUTING").

B

CHECK A/T CONTROL UNIT GROUND CIRCUIT.

1. Turn ignition switch to "OFF" position.
2. Disconnect A/T control unit harness connector.
3. Check resistance between A/T control unit terminals ⑮, ④⑧ and ground.

Resistance:

Approximately 0Ω

NG

Check harness for short or open between A/T control unit and ground.

C

CHECK LAMP CIRCUIT.

1. Turn ignition switch to "OFF" position.
2. Check resistance between A/T control unit terminals ③ and ④.

Resistance: 50 - 100Ω

3. Reinstall any part removed.

NG

Check the following items:

- OD OFF indicator lamp
- Refer to EL section.
- Harness for short or open between ignition switch and OD OFF indicator lamp (Main harness)
- Harness for short or open between OD OFF indicator lamp and A/T control unit

Check again.



OK

INSPECTION END

NG

1. Perform A/T control unit input/output signal inspection.
2. If NG, recheck A/T control unit pin terminals for damage or loose connection with harness connector.



TROUBLE DIAGNOSES

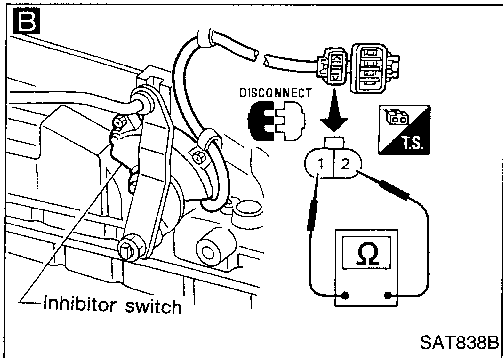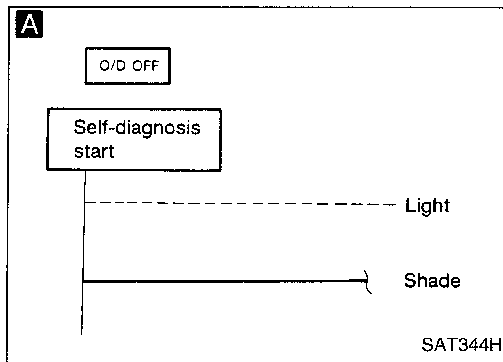

Diagnostic Procedure 2

SYMPTOM:


- Engine cannot be started with selector lever in “P” or “N” position.
- Engine can be started with selector lever in “D”, “2”, “1” or “R” position.

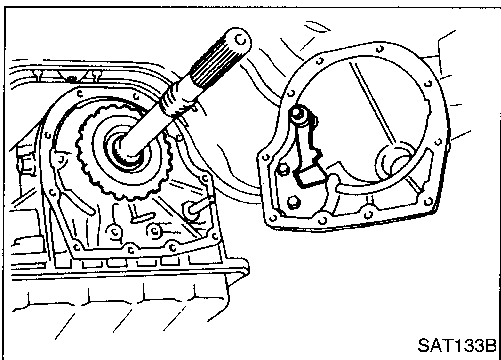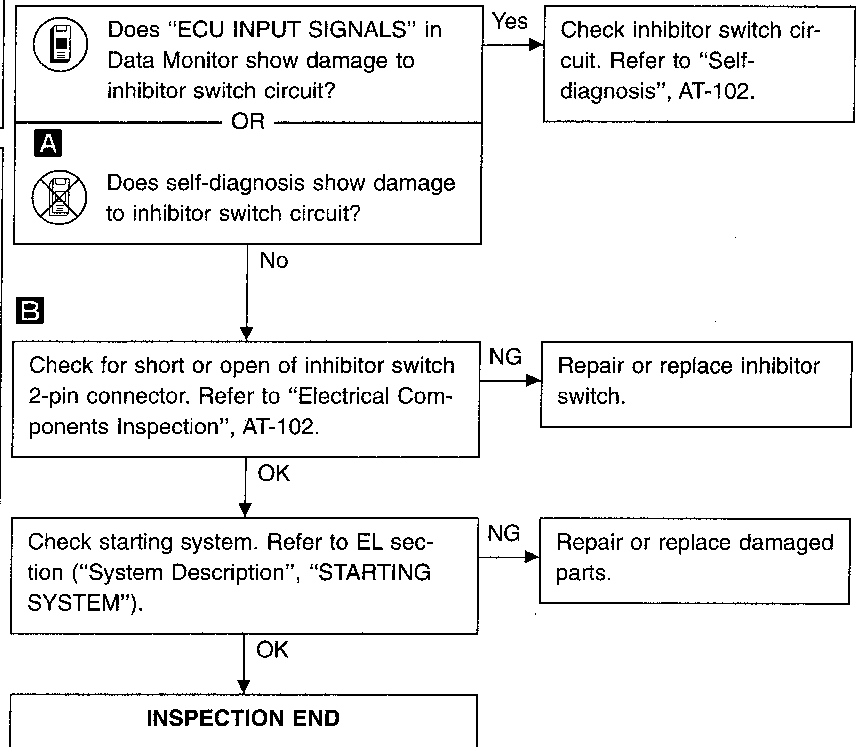

Diagnostic Procedure 3

SYMPTOM:

Vehicle moves when it is pushed forward or backward with selector lever in “P” position.





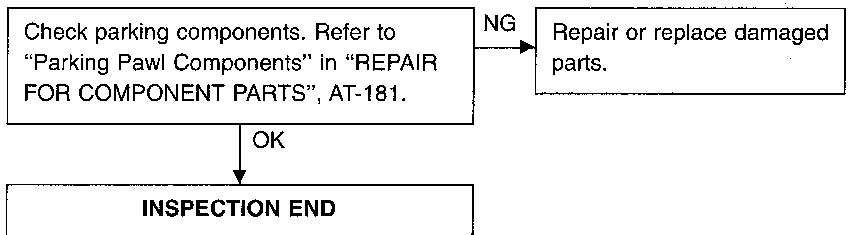


TROUBLE DIAGNOSES

Diagnostic Procedure 4

SYMPTOM:






Vehicle moves forward or backward when selecting "N" position.

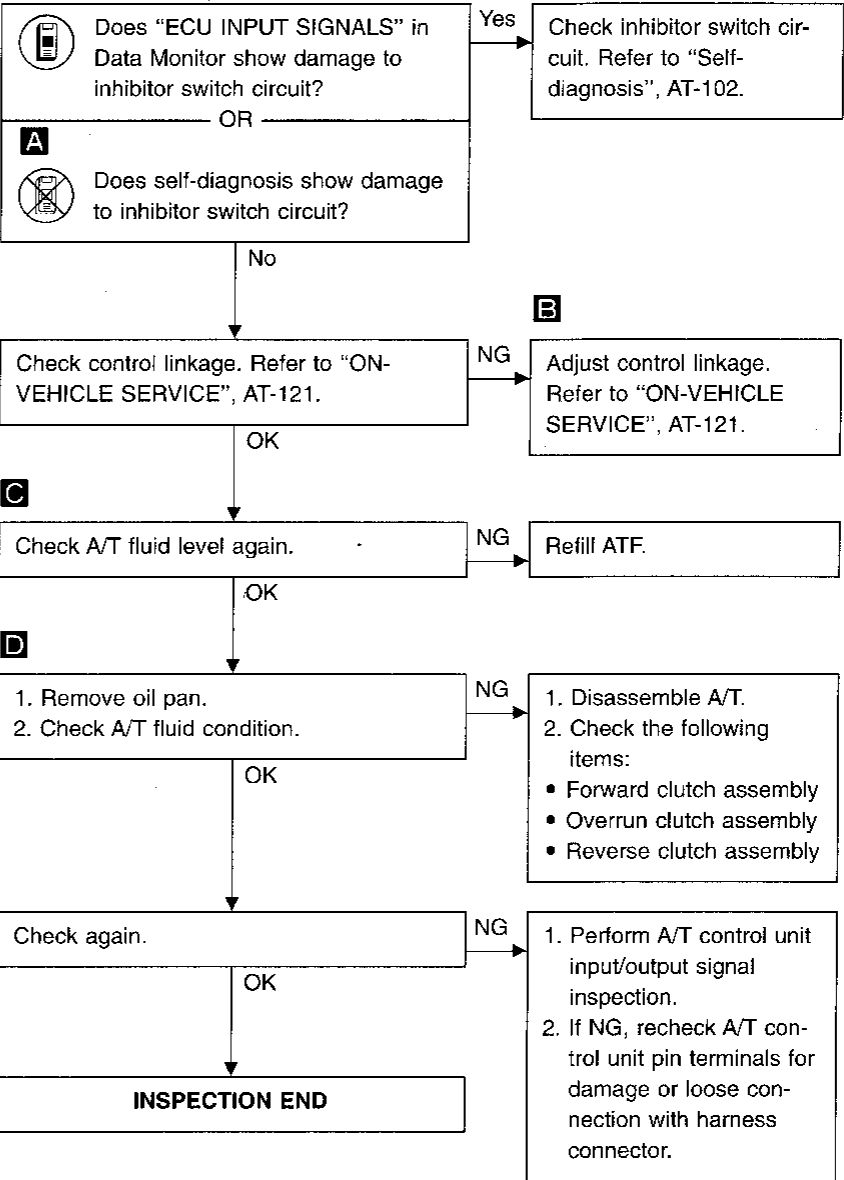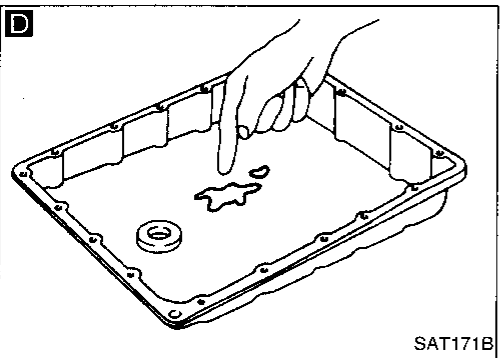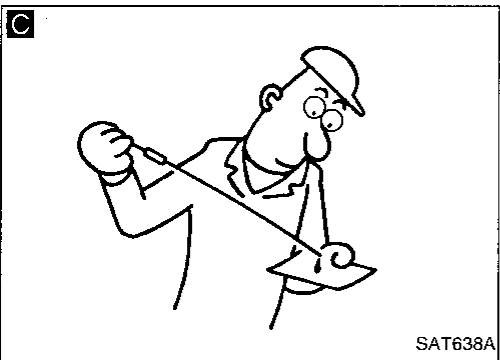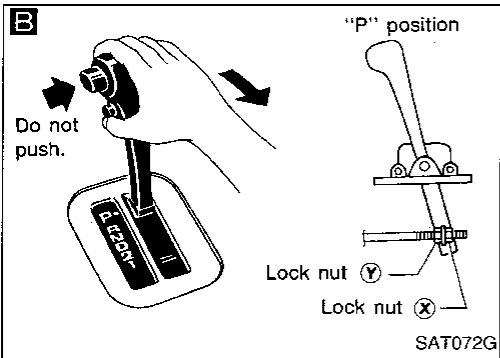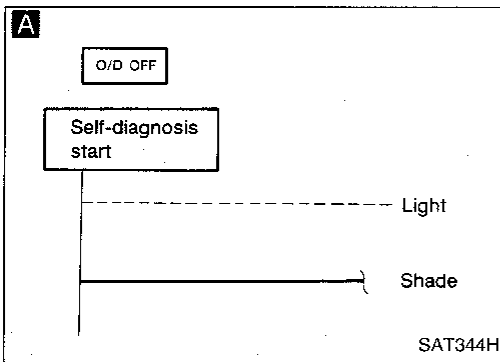

Diagnostic Procedure 5

SYMPTOM:

There is large shock when changing from "N" to "R" position.

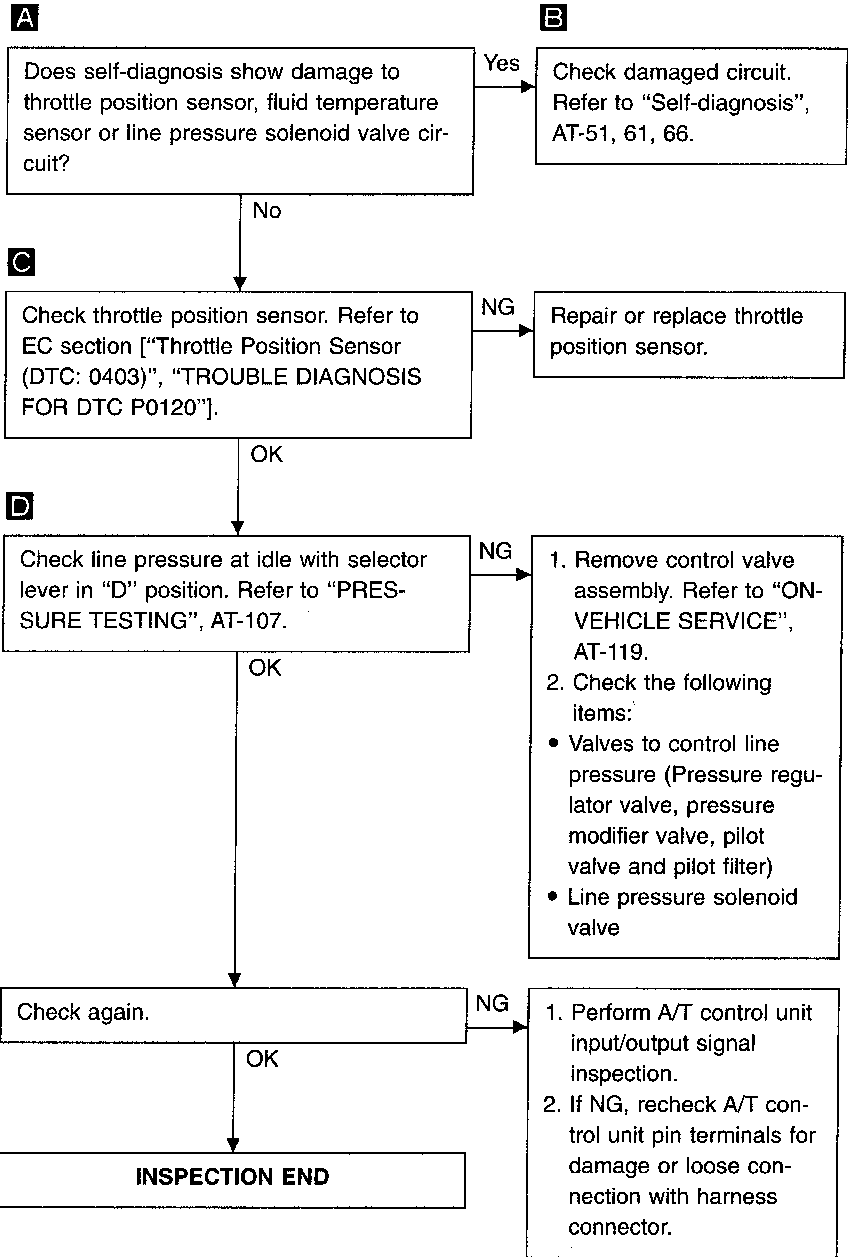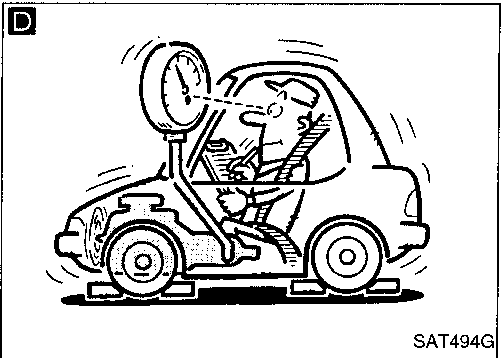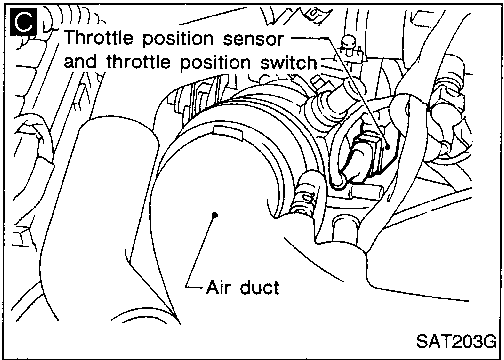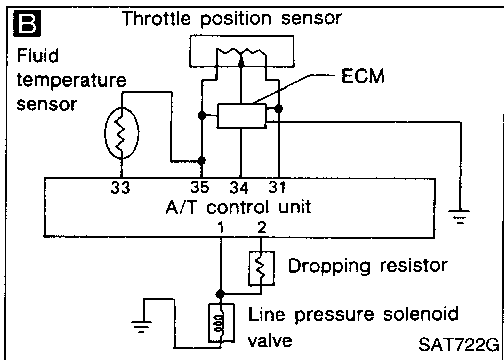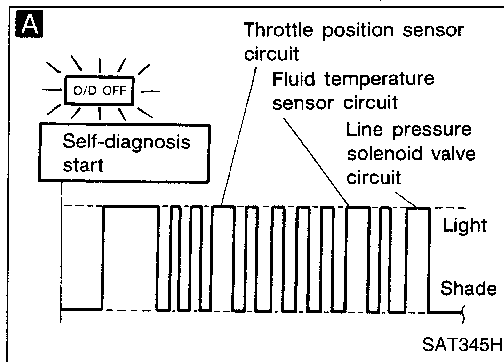

GI

MA

EM

LC

EC

FE

CL

MT

AT

PD

FA

RA

BR

ST

RS

BT

HA






EL

IDX


Diagnostic Procedure 6

SYMPTOM:

Vehicle does not creep backward when selecting "R" position.

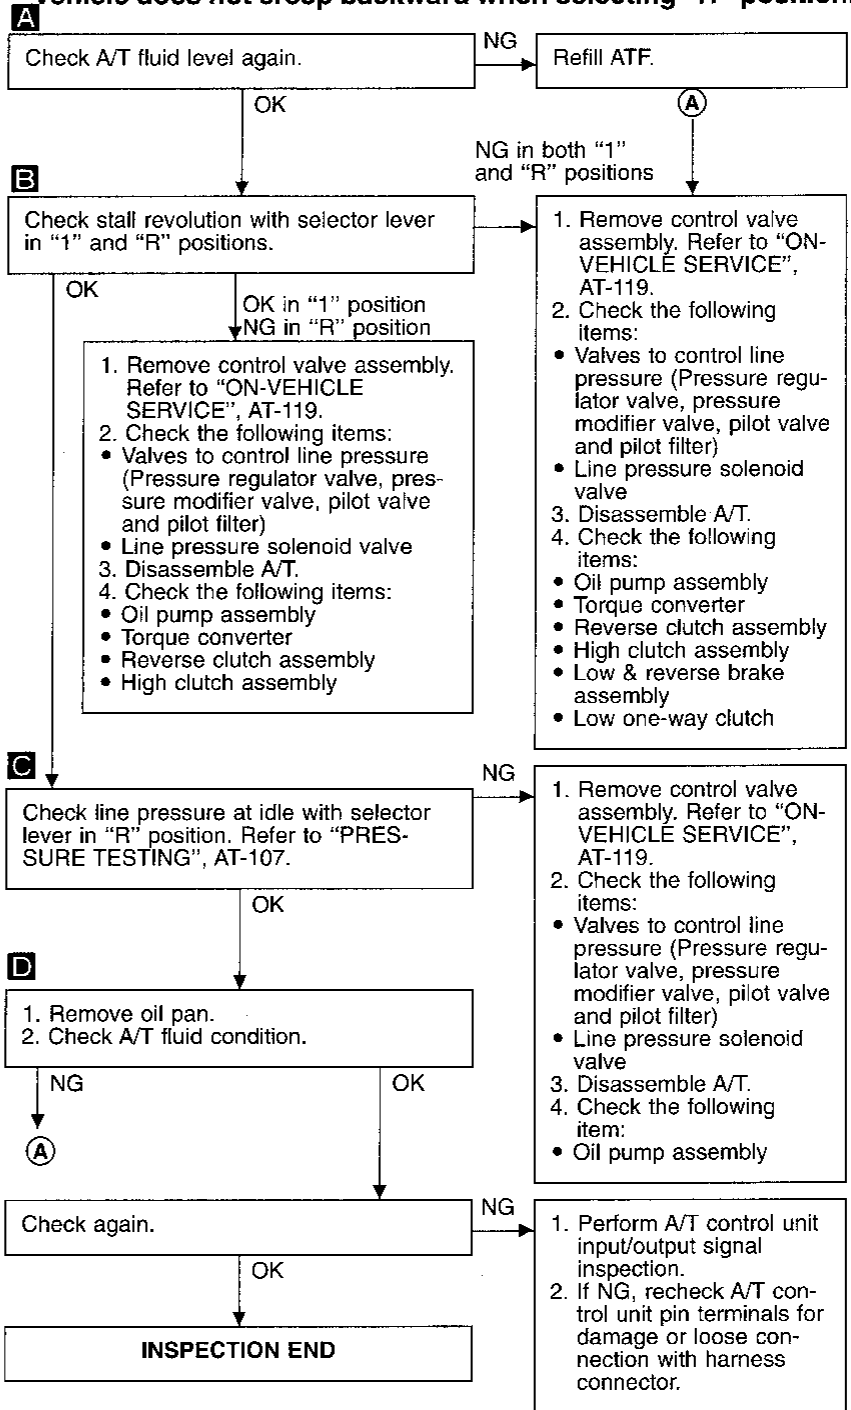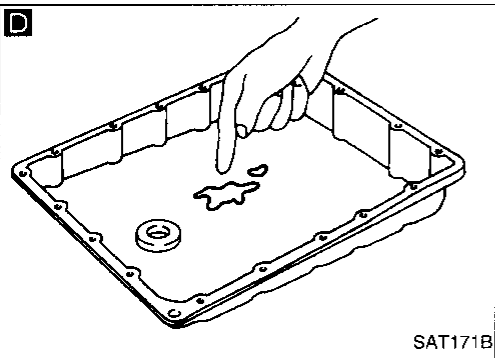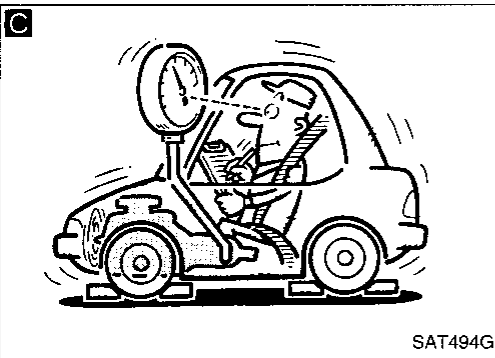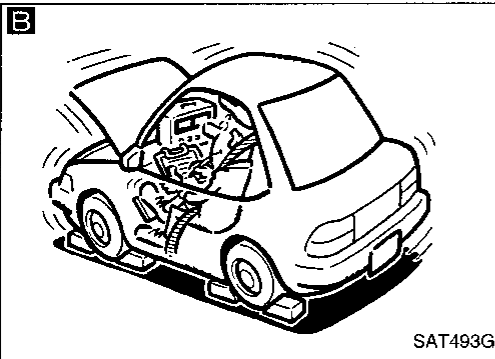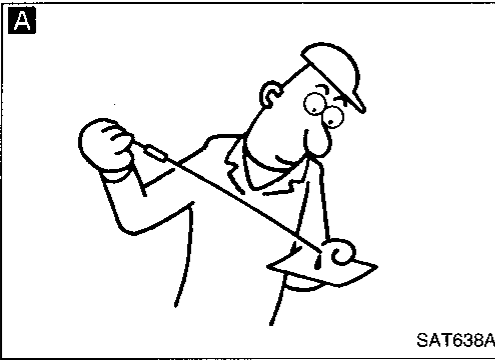





TROUBLE DIAGNOSES

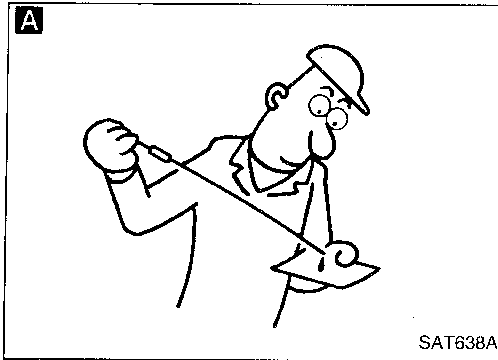

Diagnostic Procedure 7

SYMPTOM:

Vehicle does not creep forward when selecting "D", "2" or "1" position.


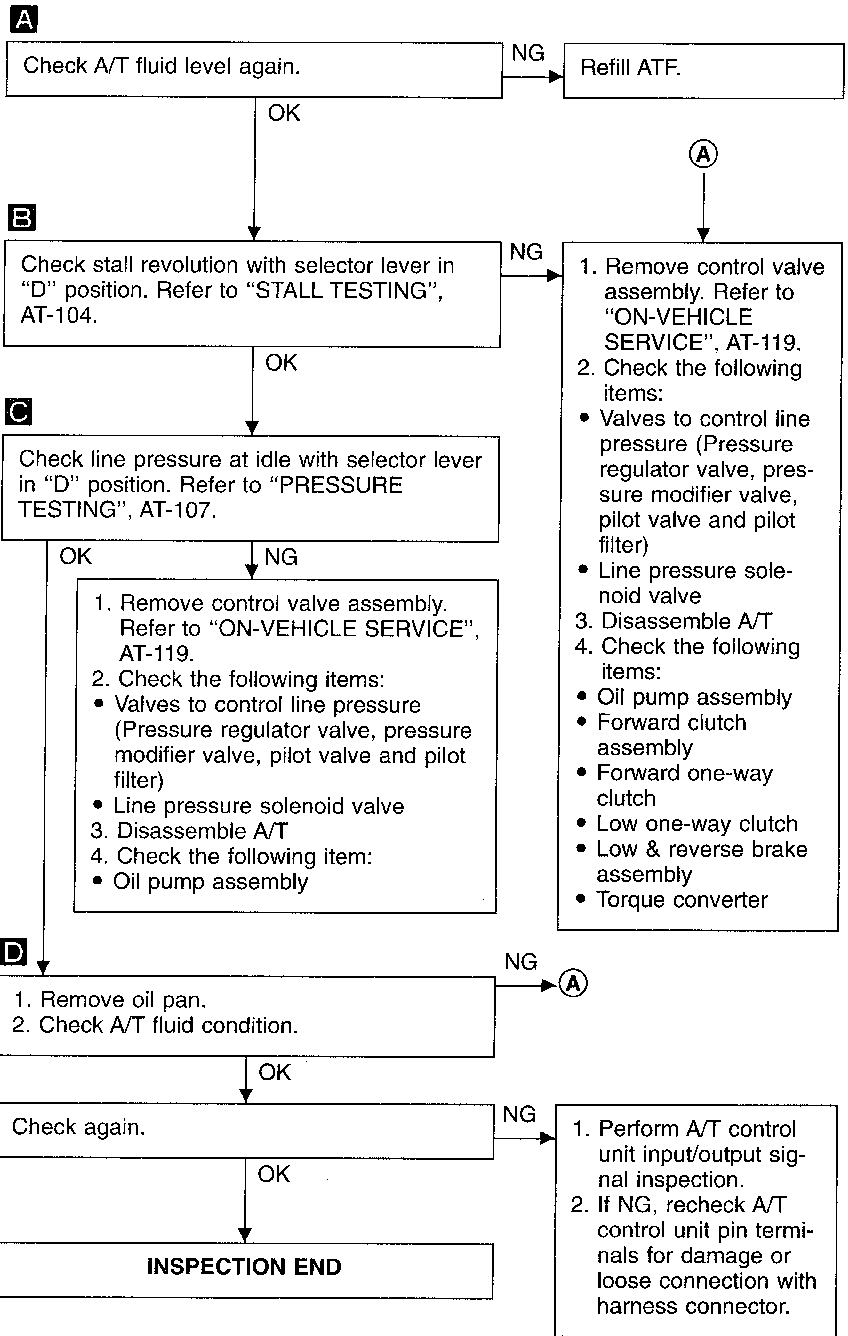
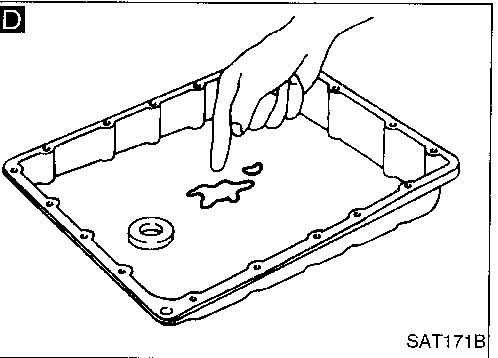
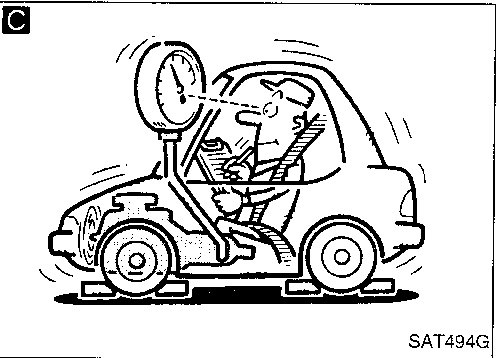
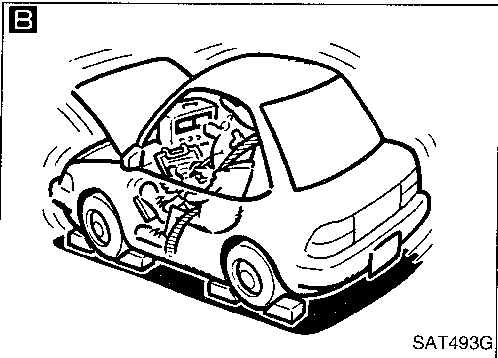


GI
MA
EM
LC
EC
FE
CL
MT
AT
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX

Diagnostic Procedure 8

SYMPTOM:

Vehicle cannot be started from D₁ on Cruise test — Part 1.

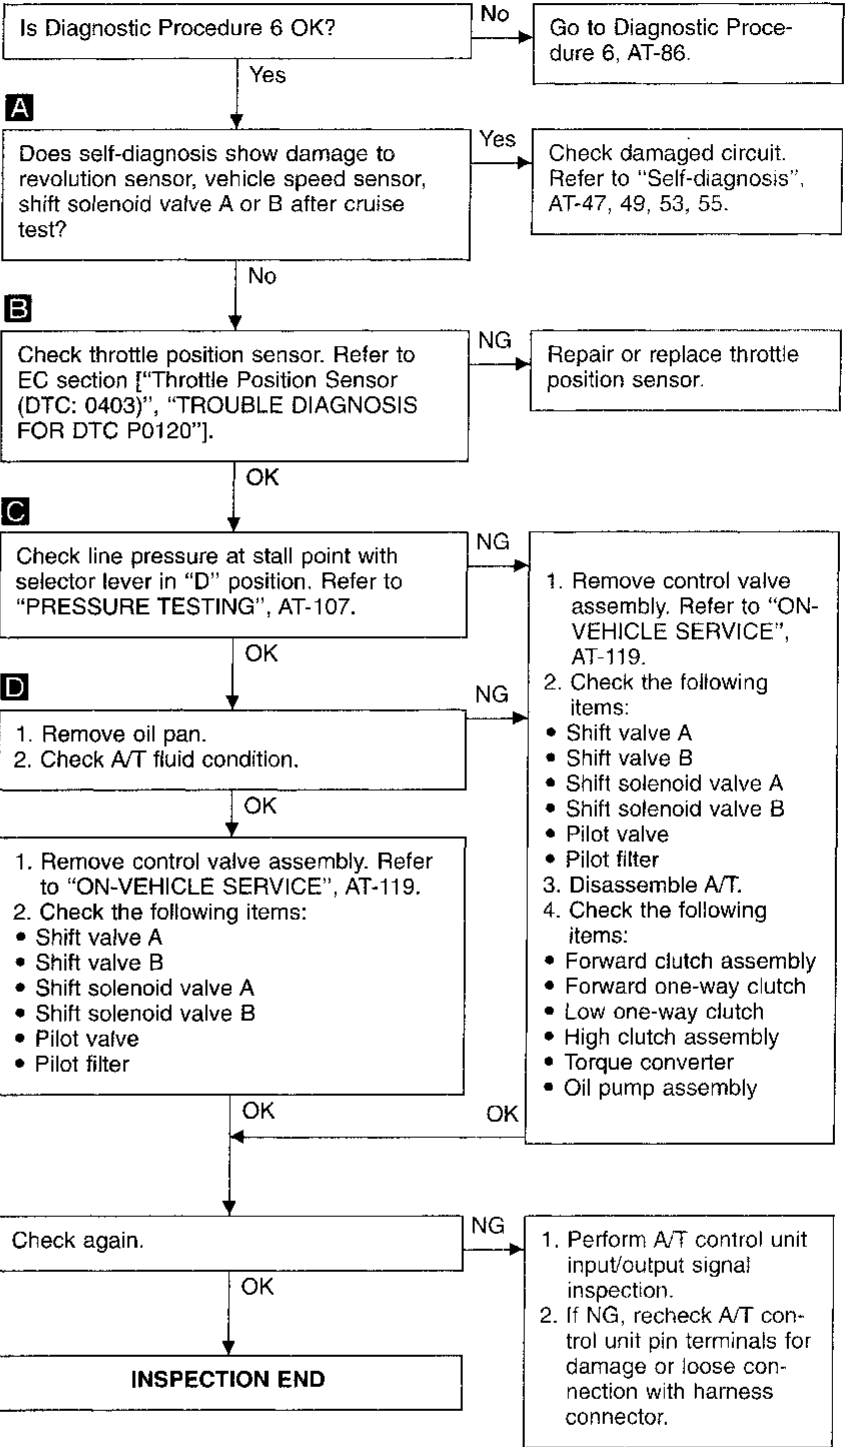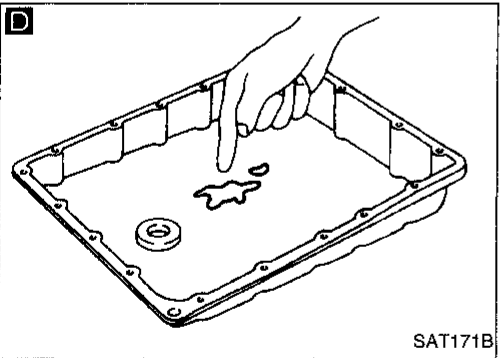
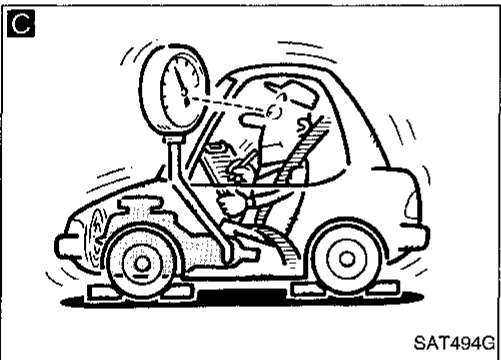
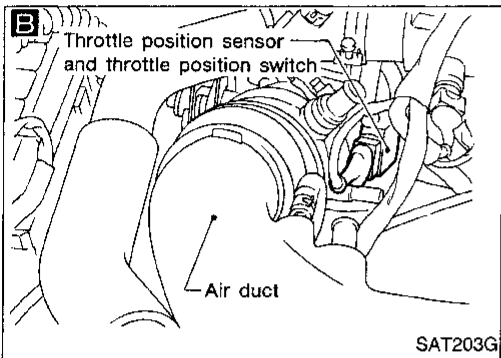
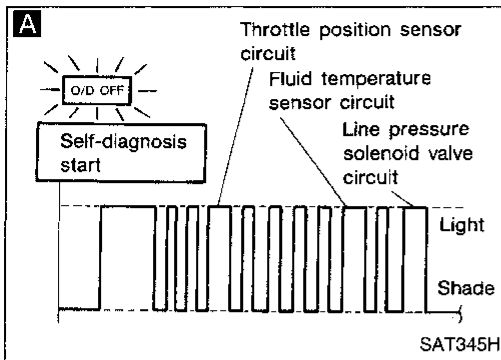


TROUBLE DIAGNOSES

Diagnostic Procedure 10

SYMPTOM:




A/T does not shift from D₂ to D₃ at the specified speed.

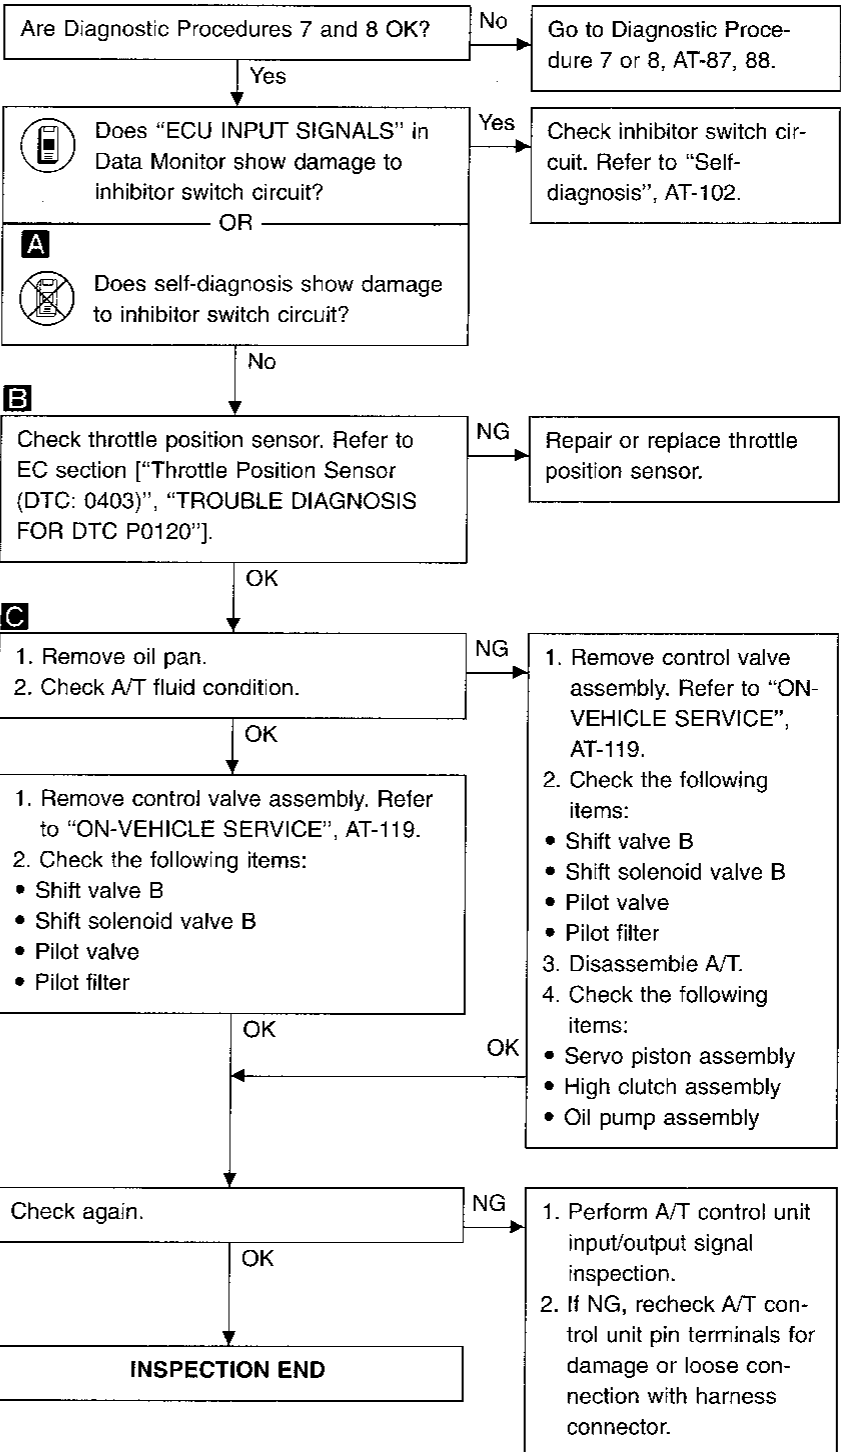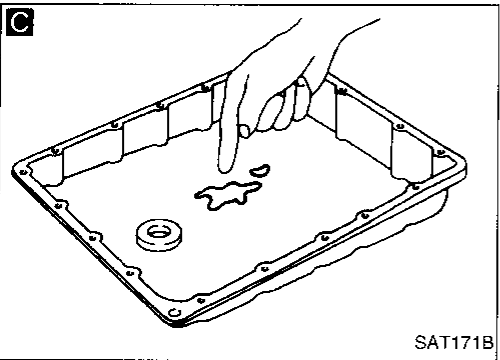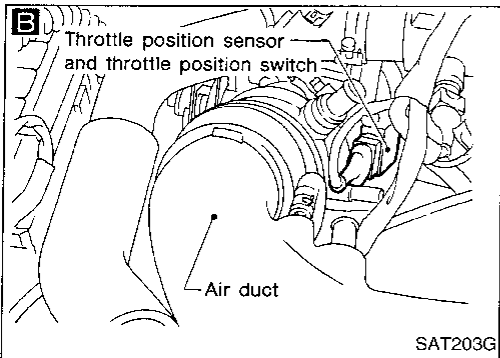
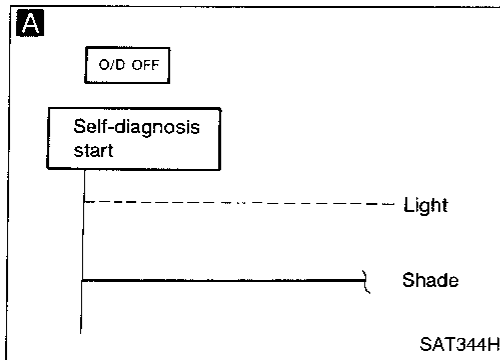


Diagnostic Procedure 12

SYMPTOM:

A/T does not perform lock-up at the specified speed.

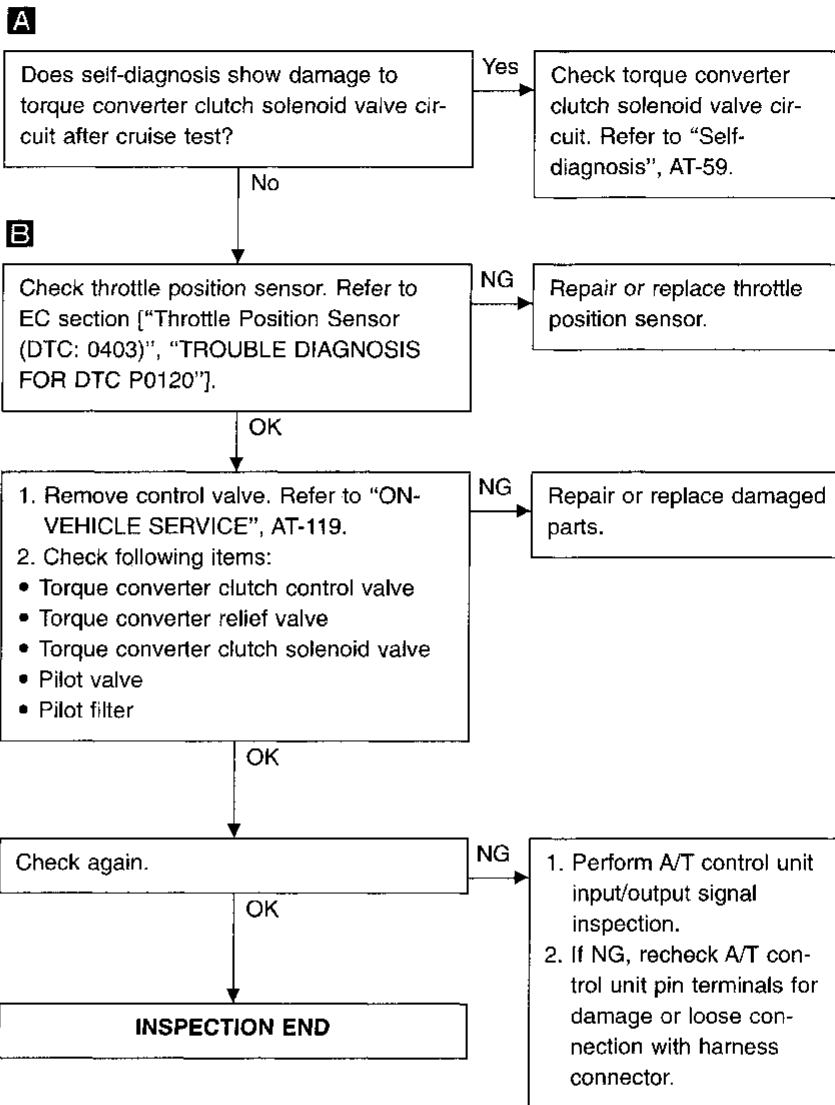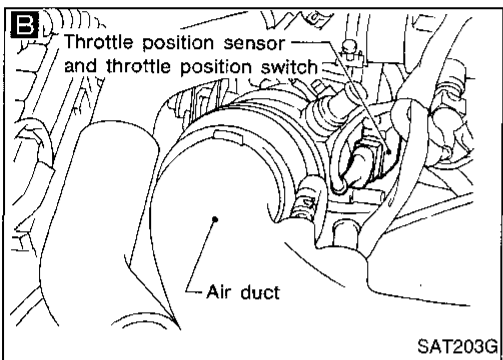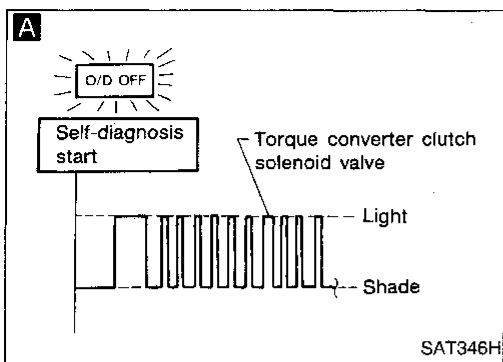


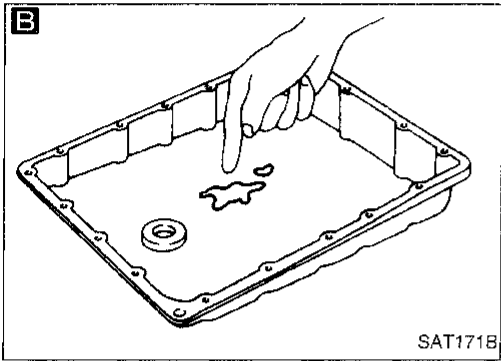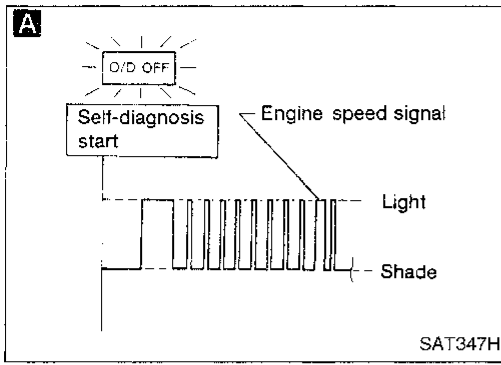


Diagnostic Procedure 13

SYMPTOM:

A/T does not hold lock-up condition for more than 30 seconds.

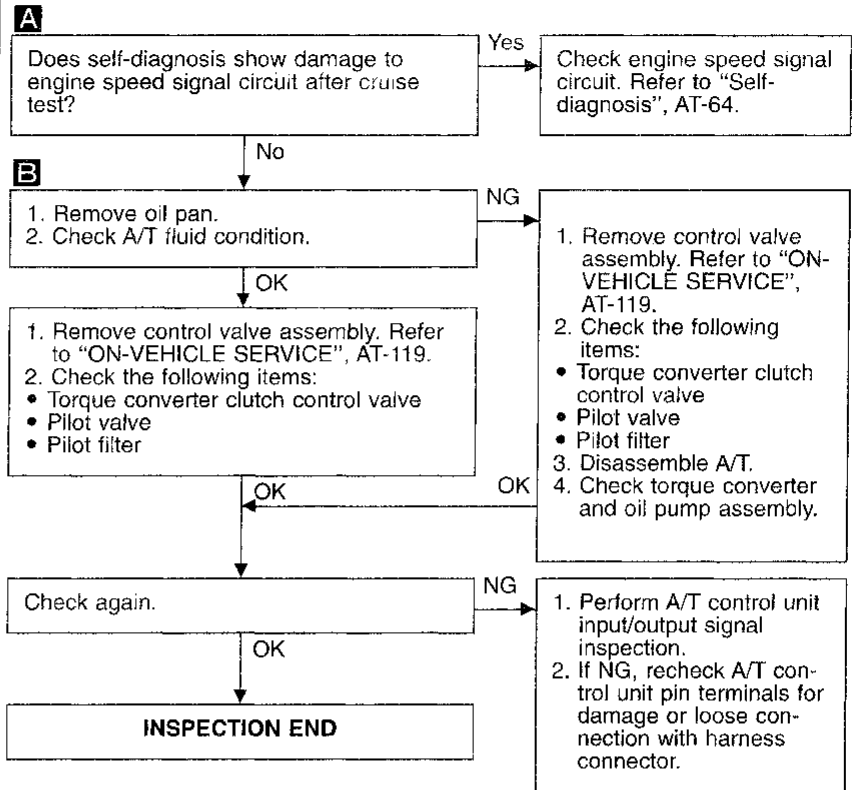


GI
MA
EM
LC
EC
FE
CL
MT
AT

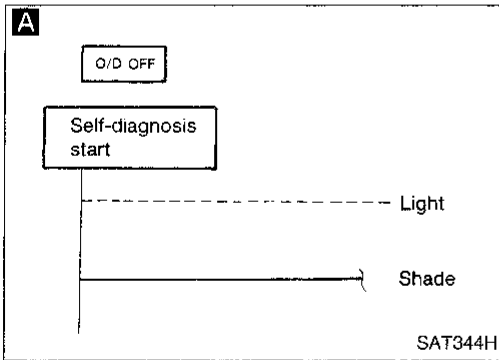

Diagnostic Procedure 14

SYMPTOM:

Lock-up is not released when accelerator pedal is released.




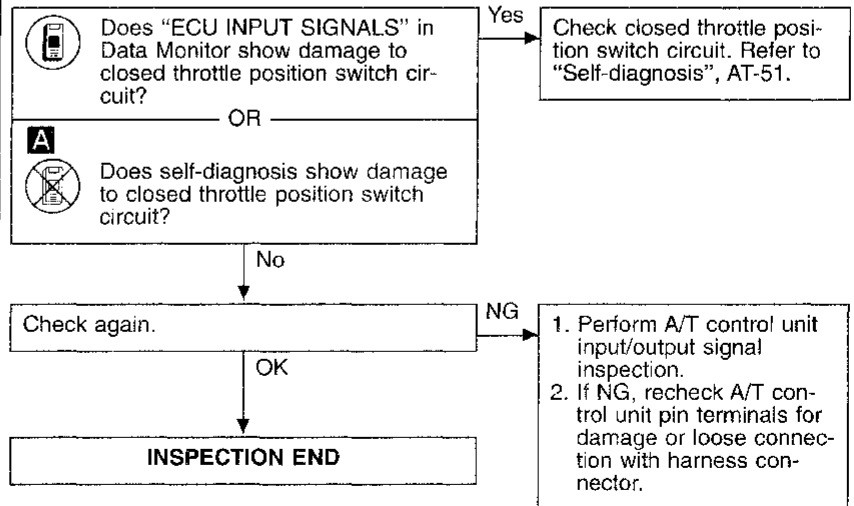



RA
BR
ST
RS
BT
HA
EL
DX

Diagnostic Procedure 15

SYMPTOM:

- Engine speed does not smoothly return to idle when A/T shifts from D₄ to D₃.
- Vehicle does not decelerate by engine brake when turning overdrive switch OFF.
- Vehicle does not decelerate by engine brake when shifting A/T from "D" to "2" position.

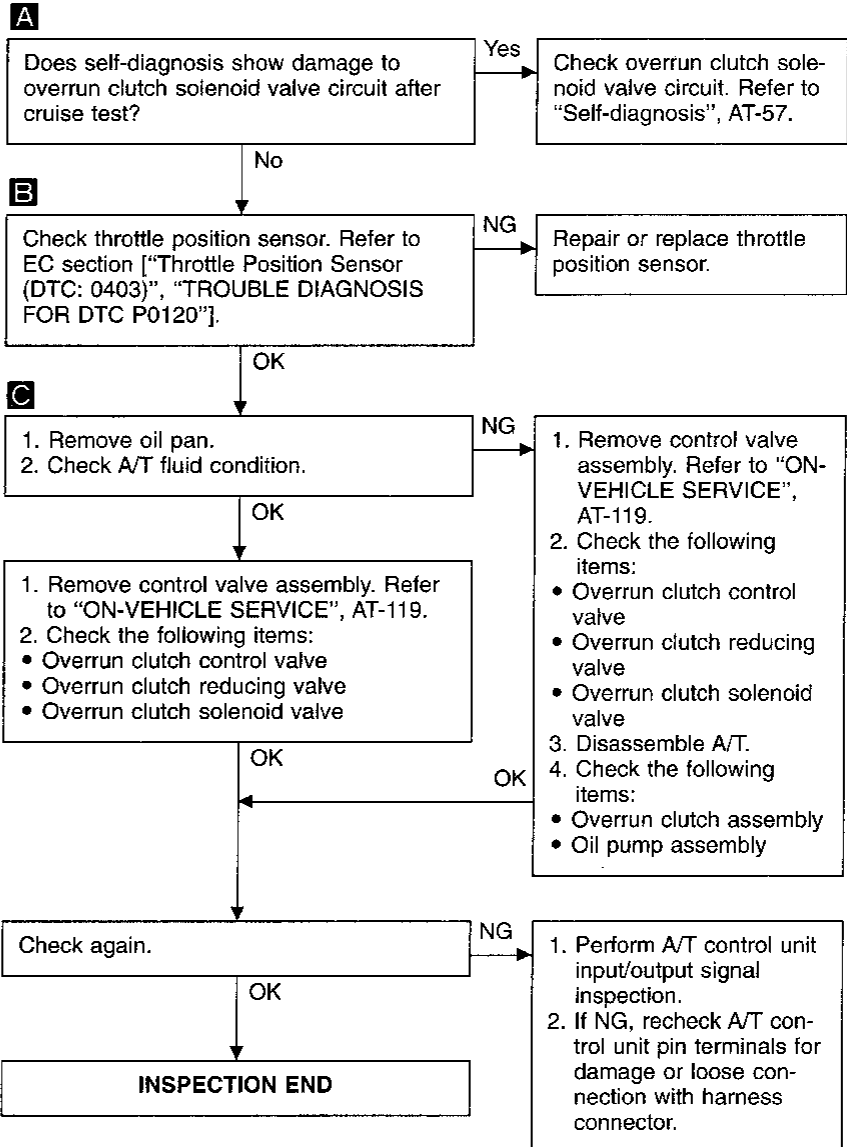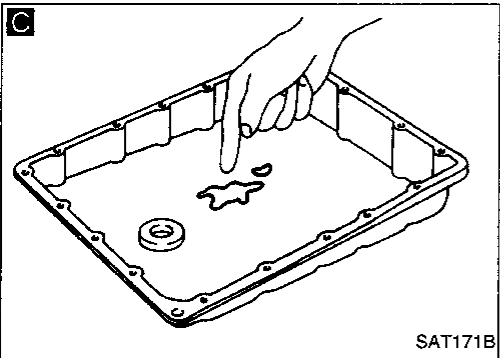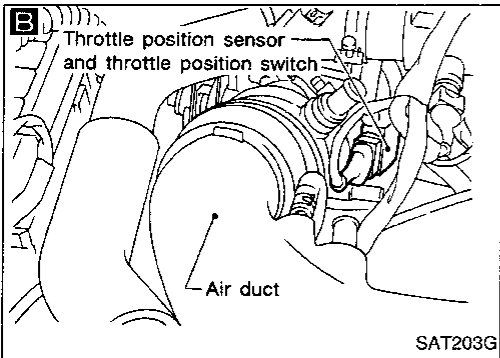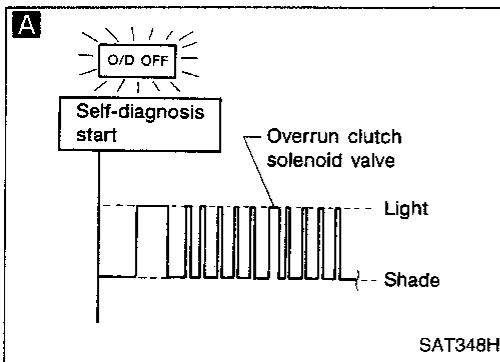


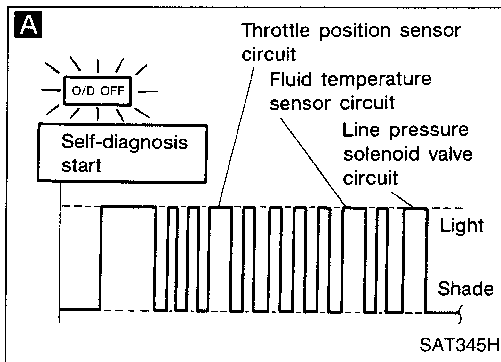


Diagnostic Procedure 16

SYMPTOM:

Vehicle does not start from D₁ on Cruise test — Part 2.

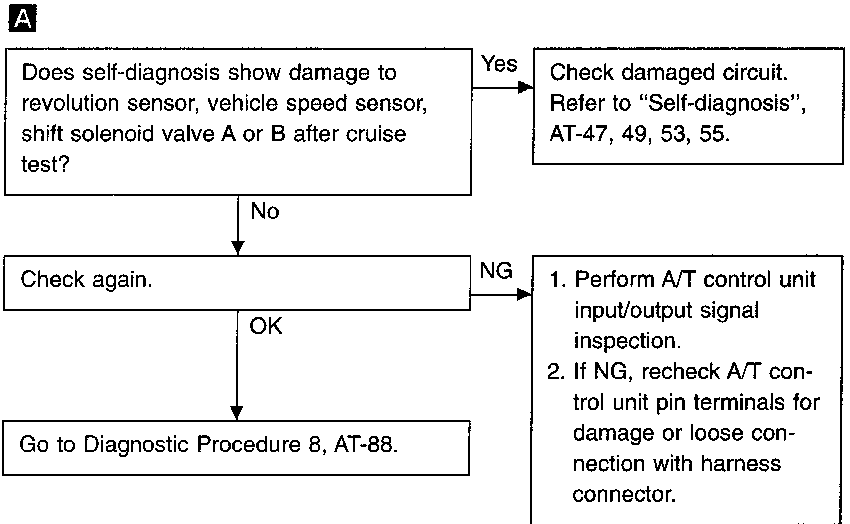


GI
MA
EM
LC
EC
FE
CL
MT
AT
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX

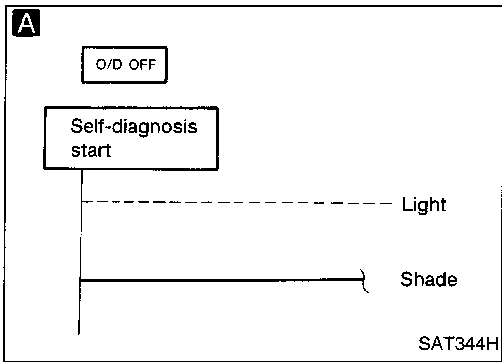


Diagnostic Procedure 17

SYMPTOM:

A/T does not shift from D₄ to D₃ when changing overdrive switch to "OFF" position.


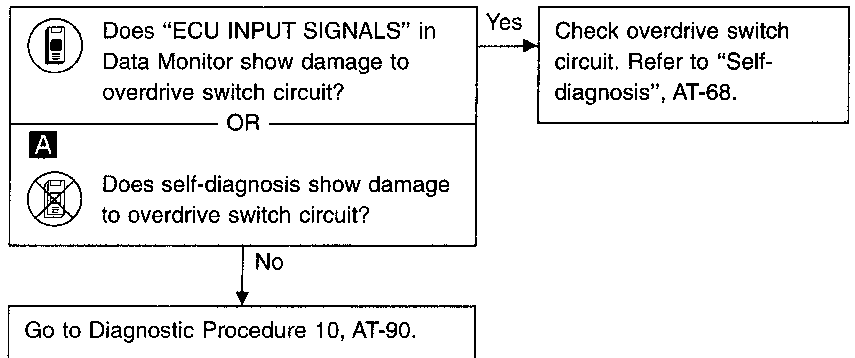


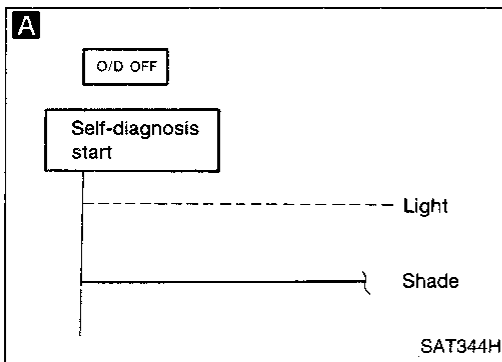

Diagnostic Procedure 18

SYMPTOM:



A/T does not shift from D_3 to 2_2 when changing selector lever from "D" to "2" position.

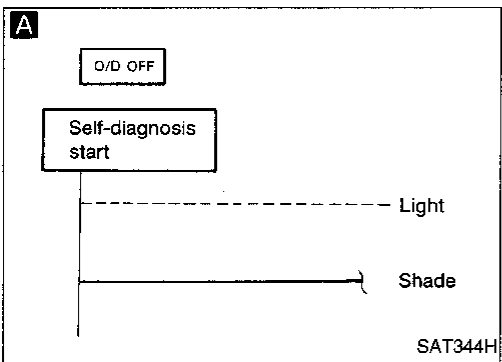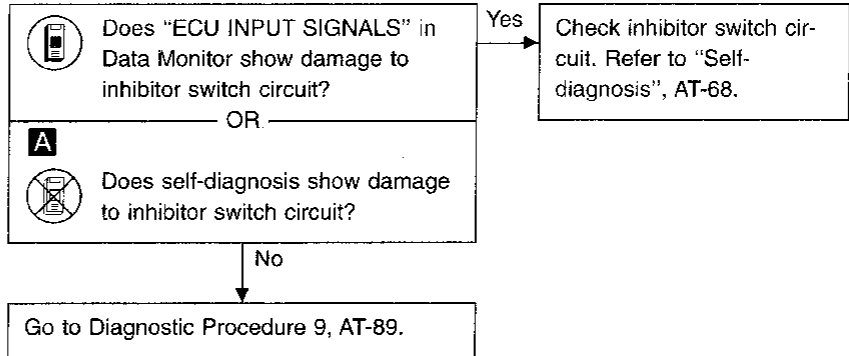

Diagnostic Procedure 19

SYMPTOM:


A/T does not shift from 2_2 to 1_1 when changing selector lever from "2" to "1" position.

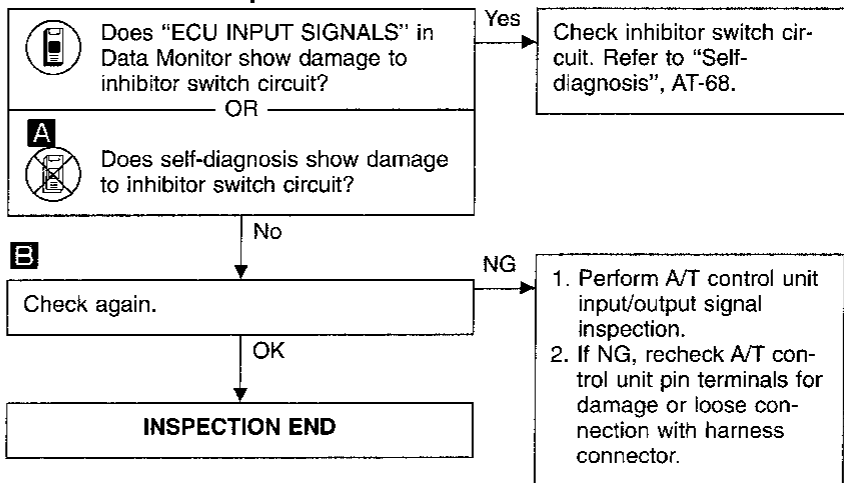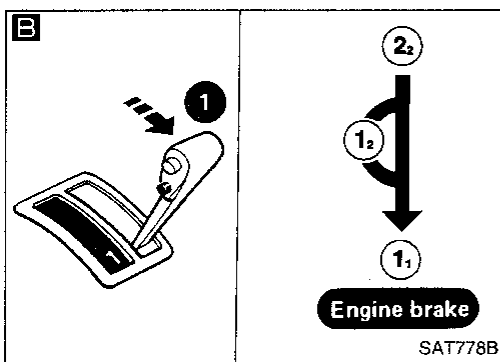


Diagnostic Procedure 20

SYMPTOM:

Vehicle does not decelerate by engine brake when shifting from 2_2 (1_2) to 1_1 .

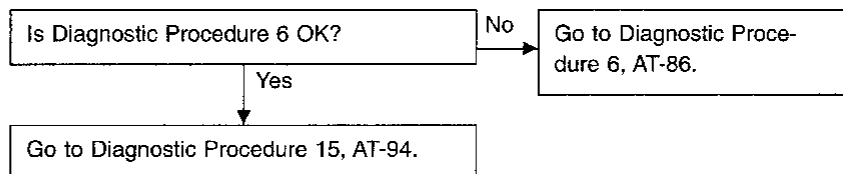

TROUBLE DIAGNOSES

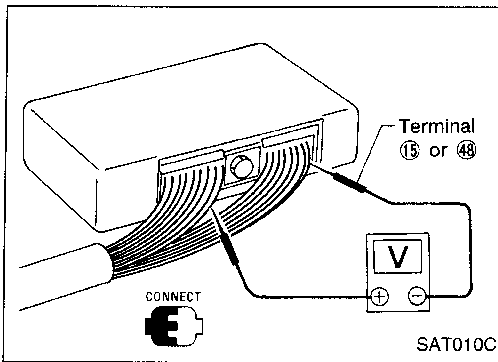


Electrical Components Inspection

INSPECTION OF A/T CONTROL UNIT

- Measure voltage between each terminal and terminal ⑮ or ④⑧ by following "A/T CONTROL UNIT INSPECTION TABLE".

 - Pin connector terminal layout



SAT2071

A/T CONTROL UNIT INSPECTION TABLE

(Data are reference values.)

Terminal No.	Item	Condition	Judgement standard
1	Line pressure solenoid valve	When releasing accelerator pedal after warming up engine.	1.5 - 2.5V
		When depressing accelerator pedal fully after warming up engine.	0.5V or less
2	Line pressure solenoid valve (with dropping resistor)	When releasing accelerator pedal after warming up engine.	5 - 14V
		When depressing accelerator pedal fully after warming up engine.	0.5V or less
3	OD OFF indicator lamp	When setting overdrive switch in "OFF" position.	1V or less
		When setting overdrive switch in "ON" position.	Battery voltage
4	Power source	When turning ignition switch to "ON".	Battery voltage
		When turning ignition switch to "OFF".	1V or less

GI

MA

EM

LC

EC

FE

CL

MT

AT

PD

FA

RA

BR

ST

RS

BT

HA

EL

IDX

TROUBLE DIAGNOSES

Electrical Components Inspection (Cont'd)











Terminal No.	Item	Condition	Judgement standard
5	Torque converter clutch solenoid valve	When A/T performs lock-up.	8 - 15V
		When A/T does not perform lock-up.	1V or less
6	Shift solenoid valve A	When shift solenoid valve A operates. (When driving in "D ₁ " or "D ₄ ".)	Battery voltage
		When shift solenoid valve A does not operate. (When driving in "D ₂ " or "D ₃ ".)	1V or less
7	Shift solenoid valve B	When shift solenoid valve B operates. (When driving in "D ₁ " or "D ₂ ".)	Battery voltage
		When shift solenoid valve B does not operate. (When driving in "D ₃ " or "D ₄ ".)	1V or less
8	Overrun clutch solenoid valve	When overrun clutch solenoid valve operates.	Battery voltage
		When overrun clutch solenoid valve does not operate.	1V or less
9	Power source	Same as No. 4	
10*	DT1	—	—
11*	DT2	—	—
12*	DT3	—	—
13*	"N" position signal	—	—
14	Closed throttle position switch (in throttle position switch)	When releasing accelerator pedal after warming up engine.	Battery voltage
		When depressing accelerator pedal after warming up engine.	1V or less
15	Ground	—	—
16	Inhibitor "1" position switch	When setting selector lever to "1" position.	Battery voltage
		When setting selector lever to other positions.	1V or less
17	Inhibitor "2" position switch	When setting selector lever to "2" position.	Battery voltage
		When setting selector lever to other positions.	1V or less
18	Inhibitor "D" position switch	When setting selector lever to "D" position.	Battery voltage
		When setting selector lever to other positions.	1V or less



*: These terminals are connected to the ECM (ECCS control module).

TROUBLE DIAGNOSES

Electrical Components Inspection (Cont'd)









Terminal No.	Item	Condition	Judgement standard		
19	Inhibitor "N" or "P" position switch		When setting selector lever to "N" or "P" position.	Battery voltage	GI
			When setting selector lever to other positions.	1V or less	
20	Inhibitor "R" position switch		When setting selector lever to "R" position.	Battery voltage	MA
			When setting selector lever to other positions.	1V or less	EM
21	Wide open throttle position switch (in throttle position switch)		When depressing accelerator pedal more than half-way after warming up engine.	Battery voltage	LC
			When releasing accelerator pedal after warming up engine.	1V or less	EC
22	—	—	—	—	
23	Power source (Back-up)	 or 	When turning ignition switch to "OFF".	Battery voltage	FE
			When turning ignition switch to "ON".	Battery voltage	CL
24	Engine speed signal	 	When engine runs at idle speed.	0.6V	
			When engine runs at 4,000 rpm.	Approximately 2.2V	MT
25	Revolution sensor (Measure in AC position)		When vehicle cruises at 30 km/h (19 MPH).	1V or more Voltage rises gradually in response to vehicle speed.	AT
			When vehicle parks.	0V	PD
26	—	—	—	—	
27	Vehicle speed sensor		When moving vehicle at 2 to 3 km/h (1 to 2 MPH) for 1 m (3 ft) or more.	Vary from 0 to 5V	FA
28*	—	—	—	—	RA
29*	—	—	—	—	
30*	—	—	—	—	BR
31	Throttle position sensor (Power source)		—	4.5 - 5.5V	
32	—	—	—	—	ST

*: These terminals are connected to the Data link connector for CONSULT.

RS
BT
HA
EL
IDX

TROUBLE DIAGNOSES

Electrical Components Inspection (Cont'd)

Terminal No.	Item	Condition	Judgement standard	
33	Fluid temperature sensor		When ATF temperature is 20°C (68°F).	Approximately 1.5V
			When ATF temperature is 80°C (176°F).	Approximately 0.5V
34	Throttle position sensor		When depressing accelerator pedal slowly after warming up engine. (Voltage rises gradually in response to throttle position.)	Fully-closed throttle: Approximately 0.5V Fully-open throttle: Approximately 4V
35	Throttle position sensor (Ground)		—	—
36	—		—	—
37	ASCD cruise signal		When ASCD cruise is being performed. ("CRUISE" light comes on.)	Battery voltage
			When ASCD cruise is not being performed. ("CRUISE" light does not come on.)	1V or less
38	—	—	—	
39	Overdrive OFF switch	 	When setting overdrive switch in "ON" position	Battery voltage
			When setting overdrive switch in "OFF" position	1V or less
40	ASCD OD cut signal		When "ACCEL" set switch on ASCD cruise is released.	5 - 8V
			When "ACCEL" set switch on ASCD cruise is applied.	1V or less
41	—	—	—	
42	—	—	—	
43	—		—	—
44	—		—	—
45*	OBD-II	—	—	
46	—		—	—
47	—		—	—
48	Ground		—	—

* This terminal is connected to the ECM (ECCS control module).

TROUBLE DIAGNOSES

Electrical Components Inspection (Cont'd)

SOLENOID VALVES

- For removal and installation, refer to "ON-VEHICLE SERVICE", AT-119.

Resistance check

- Check resistance between two terminals.

Solenoid valve	Terminal No.	Resistance (Approx.)
Shift solenoid valve A	⑥	20 - 40Ω
Shift solenoid valve B	⑦	
Overrun clutch solenoid valve	⑧	
Line pressure solenoid valve	①	2.5 - 5Ω
Torque converter clutch solenoid valve	⑤	10 - 16Ω

GI

MA

EM

LC

EC

FE

CL

MT

AT

PD

FA

RA

BR

ST




RS

BT

HA

EL

IDX

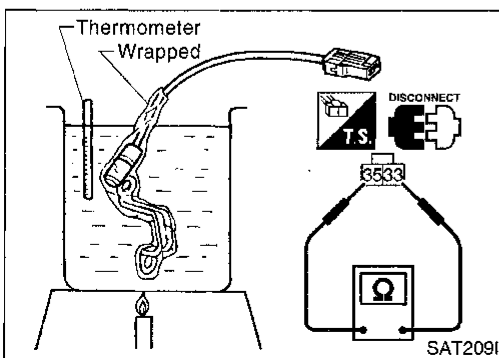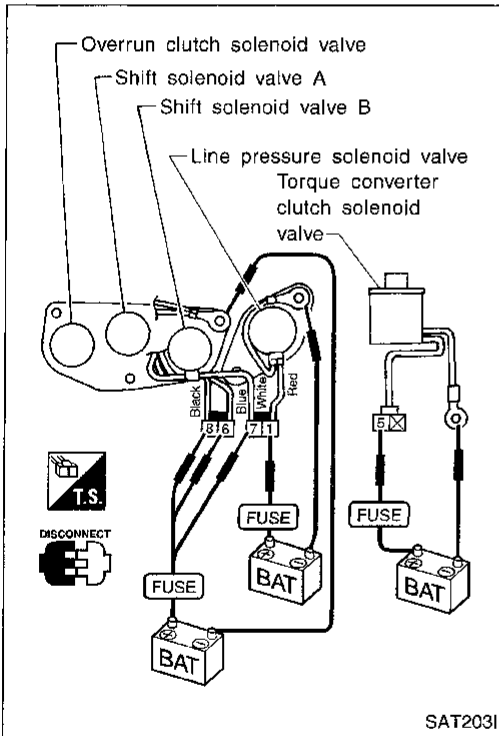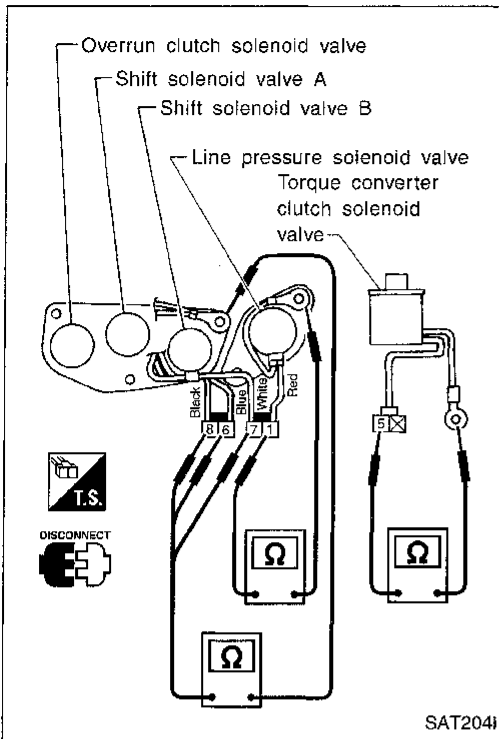

Operation check

- Check solenoid valve by listening for its operating sound while applying battery voltage to the terminal and ground.

FLUID TEMPERATURE SENSOR

- For removal and installation, refer to "ON-VEHICLE SERVICE".
- Check resistance between two terminals while changing temperature as shown at left.

Temperature °C (°F)	Resistance
20 (68)	Approximately 2.5 kΩ
80 (176)	Approximately 0.3 kΩ


TROUBLE DIAGNOSES

Electrical Components Inspection (Cont'd)

OVERDRIVE SWITCH

- Check continuity between two terminals.




OD switch position	Continuity
ON	No
OFF	Yes

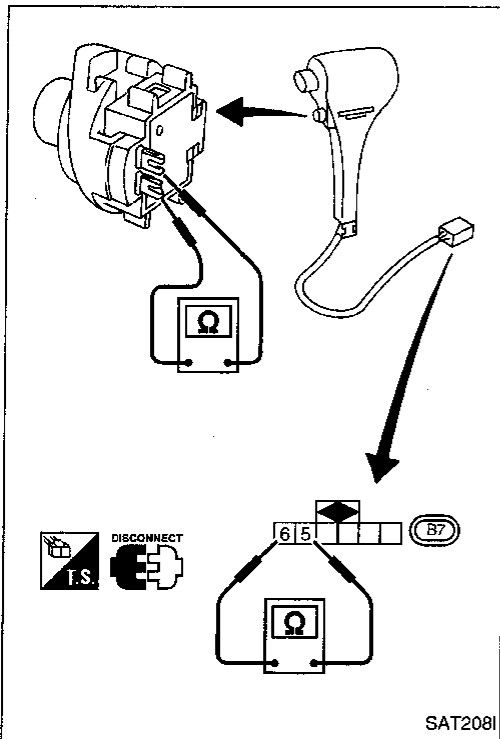

INHIBITOR SWITCH

1. Check continuity between terminals ① and ② and between terminals ③ and ④, ⑤, ⑥, ⑦, ⑧, ⑨ while moving selector lever through each range.

Lever position	Terminal No.	
P	① — ②	③ — ④
R	③ — ⑤	
N	① — ②	③ — ⑥
D	③ — ⑦	
2	③ — ⑧	
1	③ — ⑨	

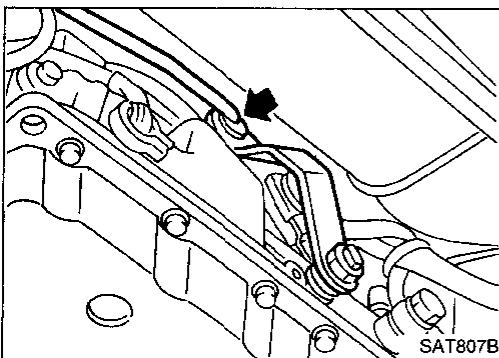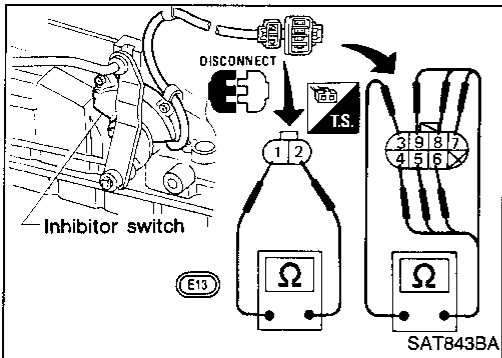
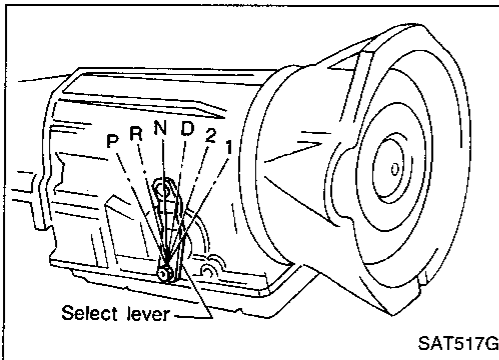


2. If NG, check again with manual control linkage disconnected from manual shaft of A/T assembly. Refer to step 1.
3. If OK on step 2, adjust manual control linkage. Refer to "ON-VEHICLE SERVICE", AT-121.

TROUBLE DIAGNOSES

Electrical Components Inspection (Cont'd)


4. If NG on step 2, remove inhibitor switch from A/T and check continuity of inhibitor switch terminals. Refer to step 1.
5. If OK on step 4, adjust inhibitor switch. Refer to "ON-VEHICLE SERVICE", AT-121.
6. If NG on step 4, replace inhibitor switch.

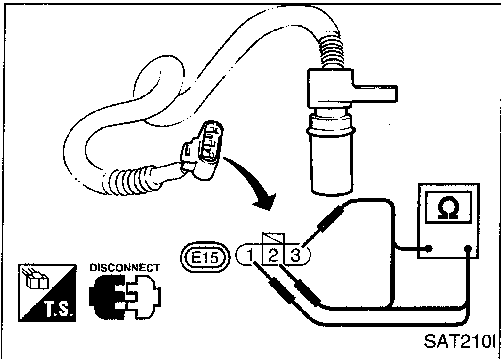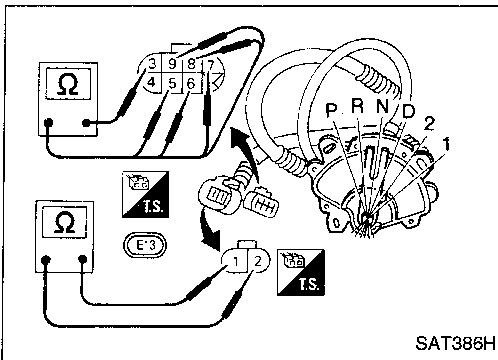

REVOLUTION SENSOR


- For removal and installation, refer to "ON-VEHICLE SERVICE", AT-119.
- Check resistance between terminals ①, ② and ③.

Terminal No.		Resistance
①	②	500 - 650Ω
②	③	No continuity
①	③	No continuity

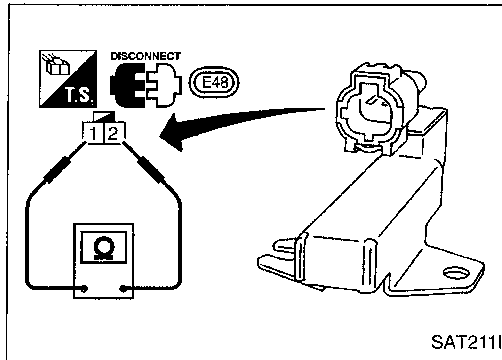

DROPPING RESISTOR

- Check resistance between two terminals.
Resistance: 11.2 - 12.8Ω

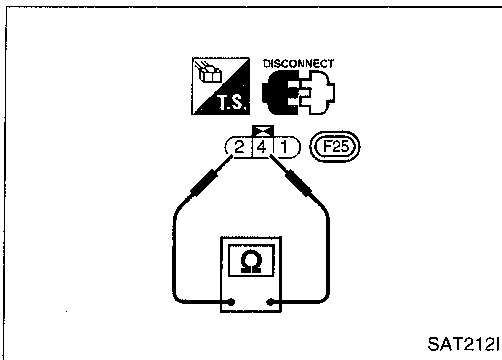


THROTTLE POSITION SWITCH

Closed throttle position switch (idle position)

- Check continuity between terminals ② and ④.

Accelerator pedal condition	Continuity
Released	Yes
Depressed	No

- To adjust closed throttle position switch, perform "Basic Inspection", "TROUBLE DIAGNOSIS — Basic Inspection" in EC section.

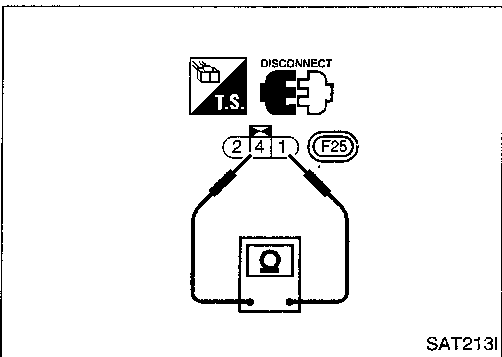


Wide open throttle position switch

- Check continuity between terminals ① and ④.

Accelerator pedal condition	Continuity
Released	No
Depressed	Yes

GI
MA
EM
LC
EC
FE
CL
MT
AT
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX

TROUBLE DIAGNOSES

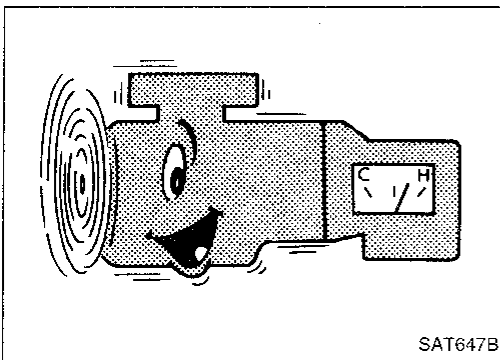


Final Check STALL TESTING


Stall test procedure

1. Check A/T and engine fluid levels. If necessary, add.
2. Drive vehicle for approx. 10 minutes or until engine oil and ATF reach operating temperature.

**ATF operating temperature:
50 - 80°C (122 - 176°F)**

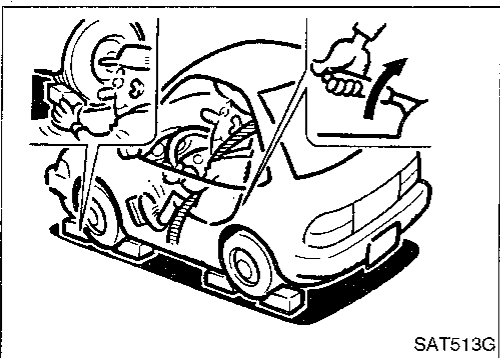


3. Set parking brake and block wheels.
 4. Install a tachometer where it can be seen by driver during test.
- **It is good practice to put a mark on point of specified engine rpm on indicator.**

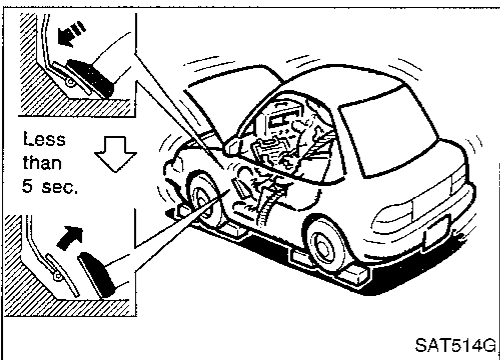

5. Start engine, apply foot brake, and place selector lever in "D" position.
6. Accelerate to wide-open throttle gradually while applying foot brake.
7. Quickly note the engine stall revolution and immediately release throttle.

- **During test, never hold throttle wide-open for more than 5 seconds.**

**Stall revolution:
2,050 - 2,250 rpm**

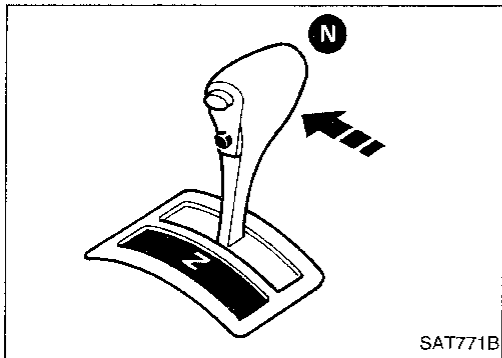

8. Move selector lever to "N" position.
 9. Cool off ATF.
- **Run engine at idle for at least one minute.**
10. Repeat steps 5 through 9 with selector lever in "2", "1" and "R" positions.

TROUBLE DIAGNOSES

Final Check (Cont'd)

JUDGEMENT OF STALL TEST

The test result and possible damaged components relating to each result are shown in the illustration. In order to pinpoint the possible damaged components, follow the WORK FLOW shown in AT-13.

Note

Stall revolution is too high in "D" or "2" position:

- Slippage occurs in 1st gear but not in 2nd and 3rd gears. Low one-way clutch slippage
- Slippage occurs at the following gears:
 - 1st through 3rd gears in "D" position and engine brake functions.
 - 1st and 2nd gears in "2" position and engine brake functions with accelerator pedal released (fully closed throttle). Forward clutch or forward one-way clutch slippage

Stall revolution is too high in "R" position:

- Engine brake does not function in "1" position. Low & reverse brake slippage
- Engine brake functions in "1" position. Reverse clutch slippage

Stall revolution within specifications:

- Vehicle does not achieve speed of more than 80 km/h. One-way clutch seizure in torque converter housing

CAUTION:

Be careful since automatic fluid temperature increases abnormally.

- Slippage occurs in 3rd and 4th gears in "D" position. High clutch slippage
- Slippage occurs in 2nd and 4th gear in "D" position. Brake band slippage

Stall revolution less than specifications:

- Poor acceleration during starts. One-way clutch seizure in torque converter

GI

MA

EM

LC

EC

FE

CL

MT

AT

PD

FA

RA

BR

ST

RS

BT

HA

EL

IDX


TROUBLE DIAGNOSES

Final Check (Cont'd)

Judgement of stall test

Selector lever position	Judgement		
D	L	O	H
2	L	O	H
1	L	O	O
R	L	H	H

- O : Stall revolution is normal.
- H : Stall revolution is higher than specified.
- L : Stall revolution is lower than specified.

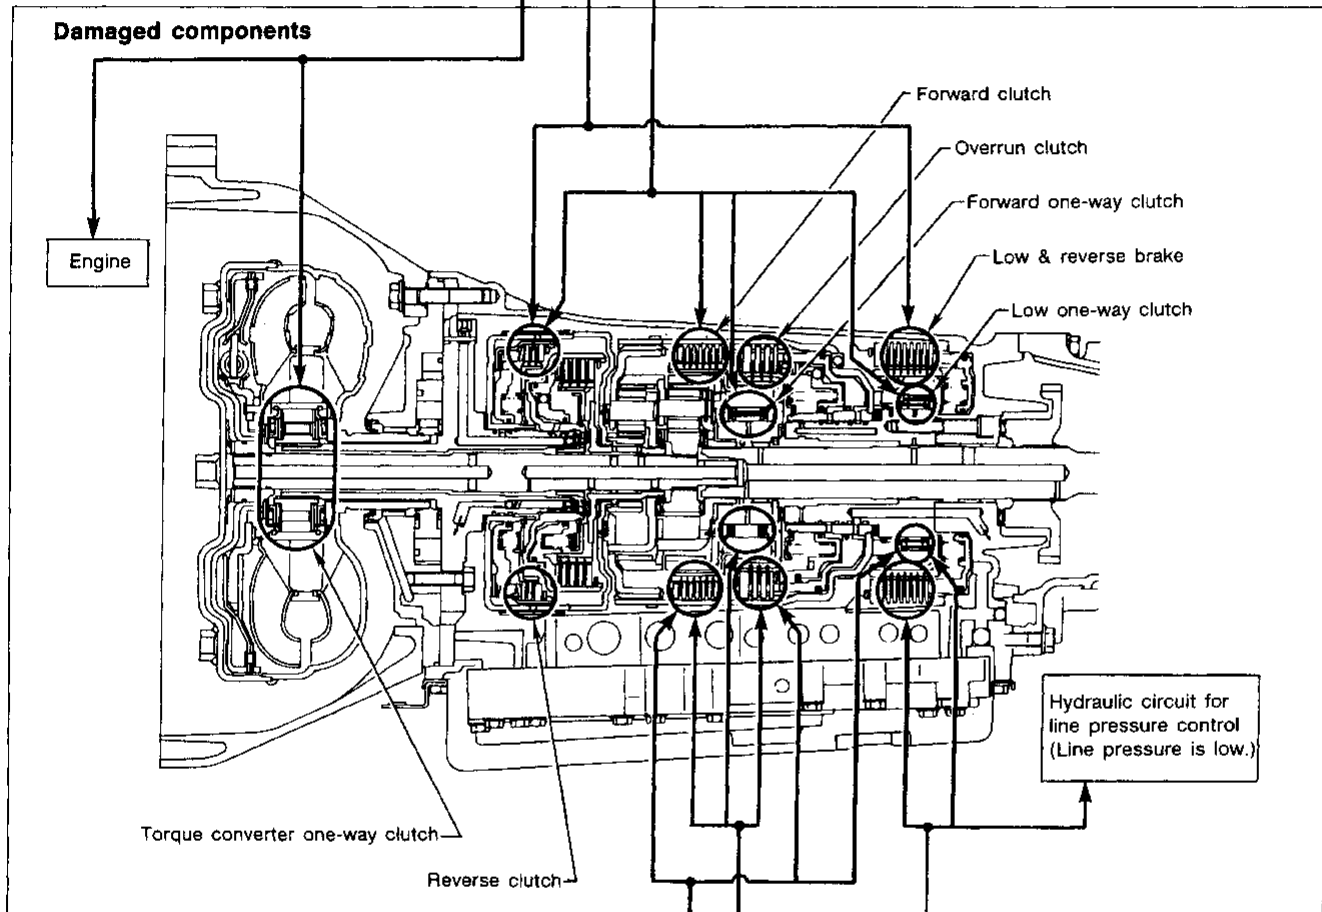

D	H	H	H	O
2	H	H	H	O
1	O	H	H	O
R	O	O	H	O
Selector lever position	Judgement			



TROUBLE DIAGNOSES

Final Check (Cont'd)

PRESSURE TESTING

- Location of pressure test ports.
- **Always replace line pressure plugs as they are self-sealing bolts.**


CI
MA
EM
LC
EC
FE
CL
WT
AT
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX

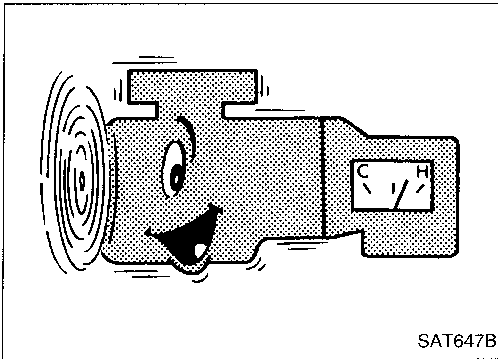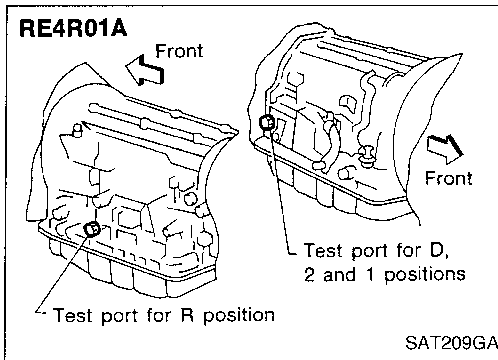



Line pressure test procedure

1. Check A/T and engine fluid levels. If necessary, add fluid.
2. Drive vehicle for approx. 10 minutes or until engine oil and ATF reach operating temperature.

ATF operating temperature:
50 - 80°C (122 - 176°F)

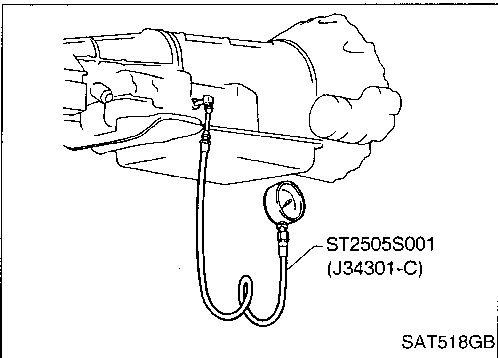


3. Install pressure gauge to corresponding line pressure port.

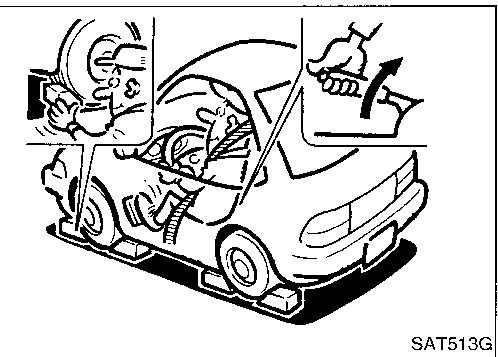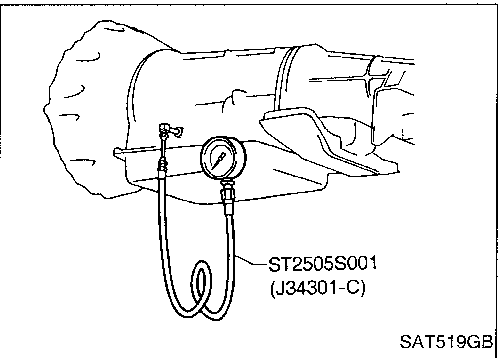

4. Set parking brake and block wheels.
 - **Continue to depress brake pedal fully while line pressure test is being performed at stall speed.**

TROUBLE DIAGNOSES

Final Check (Cont'd)

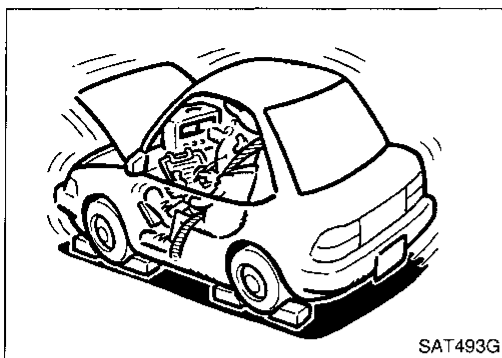

5. Start engine and measure line pressure at idle and stall speed.
 - **When measuring line pressure at stall speed, follow the stall test procedure.**
- Line pressure:
Refer to SDS, AT-201.

JUDGEMENT OF LINE PRESSURE TEST

Judgement		Suspected parts
At idle	Line pressure is low in all positions.	<ul style="list-style-type: none"> • Oil pump wear • Control piston damage • Pressure regulator valve or plug sticking • Spring for pressure regulator valve damaged • Fluid pressure leakage between oil strainer and pressure regulator valve • Clogged strainer
	Line pressure is low in particular position.	<ul style="list-style-type: none"> • Fluid pressure leakage between manual valve and particular clutch • For example, line pressure is: <ul style="list-style-type: none"> — Low in "R" and "1" positions, but — Normal in "D" and "2" positions. Then, fluid leakage exists at or around low and reverse brake circuit.
	Line pressure is high.	<ul style="list-style-type: none"> • Mal-adjustment of throttle position sensor • Fluid temperature sensor damaged • Line pressure solenoid valve sticking • Short circuit of line pressure solenoid valve circuit • Pressure modifier valve sticking • Pressure regulator valve or plug sticking • Open in dropping resistor circuit
At stall speed	Line pressure is low.	<ul style="list-style-type: none"> • Mal-adjustment of throttle position sensor • Line pressure solenoid valve sticking • Short circuit of line pressure solenoid valve circuit • Pressure regulator valve or plug sticking • Pressure modifier valve sticking • Pilot valve sticking

TROUBLE DIAGNOSES

Symptom Chart

Reference page (AT-)	Reference page (AT-)	ON vehicle											OFF vehicle																				
		23, 121	121	47, 49, 64	107	53, 119	55, 66	57, 59	61, 119	119	119	119	130, 141	158, 162	164	164, 173	168, 177	181															
Reference page (AT-)	Numbers are arranged in order of probability. Perform inspections starting with number one and work up. Circled numbers indicate that the transmission must be removed from the vehicle.	Fluid level	Control linkage	Inhibitor switch	Throttle position sensor (Adjustment)	Revolution sensor and speed sensor	Engine speed signal	Engine idling rpm	Line pressure	Control valve assembly	Shift solenoid valve A	Shift solenoid valve B	Line pressure solenoid valve	Torque converter clutch solenoid valve	Overrun clutch solenoid valve	Fluid temperature sensor	Accumulator N-D	Accumulator 1-2	Accumulator 2-3	Accumulator 3-4 (N-R)	Ignition switch and starter	Torque converter	Oil pump	Reverse clutch	High clutch	Forward clutch	Forward one-way clutch	Overrun clutch	Low one-way clutch	Low & reverse brake	Brake band	Parking components	
83	Engine does not start in "N", "P" positions.	2	3																	1													
83	Engine starts in position other than "N" and "P" positions.	1	2																														
—	Transmission noise in "P" and "N" positions.	1		3	4	5		2														7	6										
83	Vehicle moves when changing into "P" position or parking gear does not disengage when shifted out of "P" position.	1																													2		
84	Vehicle runs in "N" position.	1																															
86	Vehicle will not run in "R" position (but runs in "D", "2" and "1" positions). Clutch slips. Very poor acceleration.	1					2	4			3													5	6	7	8	9					
—	Vehicle braked when shifting into "R" position.	1	2				3	5		4														6	8	9		7					
—	Sharp shock in shifting from "N" to "D" position.			2	5	1	3	7		6			4	8											9								
—	Vehicle will not run in "D" and "2" positions (but runs in "1" and "R" positions).	1																										2					
87	Vehicle will not run in "D", "1", "2" positions (but runs in "R" position). Clutch slips. Very poor acceleration.	1					2	4		3				5										6	7	8	9	10					
—	Clutches or brakes slip somewhat in starting.	1	2	3			4	6		5				7									13	12	10	9			11				
—	Excessive creep.					1																											
86, 87	No creep at all.	1					2	3															6	5		4							
—	Failure to change gear from "D ₁ " to "D ₂ ".	2	1	5			4	3																						6			
—	Failure to change gear from "D ₂ " to "D ₃ ".	2	1	5			4	3																6						7			
—	Failure to change gear from "D ₃ " to "D ₄ ".	2	1	4			3						5																	6			
89, 90, 91	Too high a gear change point from "D ₁ " to "D ₂ ", from "D ₂ " to "D ₃ ", from "D ₃ " to "D ₄ ".			1	2			3	4																								
—	Gear change directly from "D ₁ " to "D ₃ " occurs.	1																2												3			
—	Engine stops when shifting lever into "R", "D", "2" and "1".					1	3			2													4										
—	Too sharp a shock in change from "D ₁ " to "D ₂ ".			1		2	4						5	3																6			
—	Too sharp a shock in change from "D ₂ " to "D ₃ ".			1		2	4																		5					6			

GI
 MA
 EM
 LC
 EC
 FE
 CL
 MT
AT
 PD
 FA
 RA
 BR
 ST
 RS
 BT
 HA
 EL
 IDX

TROUBLE DIAGNOSES

Symptom Chart (Cont'd)

		ON vehicle										OFF vehicle																							
—	Reference page (AT-)	23, 121	121	47, 49, 64	107	53, 119	55, 66	57, 59	61, 119	119	119	130, 141	158, 162	164	164, 173	168, 177	181																		
Reference page (AT-)	Numbers are arranged in order of probability. Perform inspections starting with number one and work up. Circled numbers indicate that the transmission must be removed from the vehicle.	Fluid level	Control linkage	Inhibitor switch	Throttle position sensor (Adjustment)	Revolution sensor and speed sensor	Engine speed signal	Engine idling rpm	Line pressure	Control valve assembly	Shift solenoid valve A	Shift solenoid valve B	Line pressure solenoid valve	Torque converter clutch solenoid valve	Overrun clutch solenoid valve	Fluid temperature sensor	Accumulator N-D	Accumulator 1-2	Accumulator 2-3	Accumulator 3-4 (N-R)	Ignition switch and starter	Torque converter	Oil pump	Reverse clutch	High clutch	Forward clutch	Forward one-way clutch	Overrun clutch	Low one-way clutch	Low & reverse brake	Brake band	Parking components			
—	Too sharp a shock in change from "D ₃ " to "D ₄ ".	.	.	1	.	.	2	4	3	6	.	.	5	.	.	.		
—	Almost no shock or clutches slipping in change from "D ₁ " to "D ₂ ".	1	.	2	.	.	3	5	4	6	.	.	.		
—	Almost no shock or slipping in change from "D ₂ " to "D ₃ ".	1	.	2	.	.	3	5	4	7	.	.	.		
—	Almost no shock or slipping in change from "D ₃ " to "D ₄ ".	1	.	2	.	.	3	5	4	7	.	.	.		
—	Vehicle braked by gear change from "D ₁ " to "D ₂ ".	1	2	4	.	.	.	5	3		
—	Vehicle braked by gear change from "D ₂ " to "D ₃ ".	1	2	.	.	.		
—	Vehicle braked by gear change from "D ₃ " to "D ₄ ".	1	4	.	3	2		
—	Maximum speed not attained. Acceleration poor.	1	.	2	.	.	.	5	3	4	11	10	6	7	.	.	.	9	8	.	.	.		
—	Failure to change gear from "D ₄ " to "D ₃ ".	1	.	2	.	.	.	6	4	5	3	8	7		
—	Failure to change gear from "D ₃ " to "D ₂ " or from "D ₄ " to "D ₂ ".	1	.	2	.	.	.	5	3	4	6	.	.	7	
—	Failure to change gear from "D ₂ " to "D ₁ " or from "D ₃ " to "D ₁ ".	1	.	2	.	.	.	5	3	4	7	.	6	8	
—	Gear change shock felt during deceleration by releasing accelerator pedal.	.	.	1	.	.	2	4	3	
—	Too high a change point from "D ₄ " to "D ₃ ", from "D ₃ " to "D ₂ ", from "D ₂ " to "D ₁ ".	.	.	1	2
—	Kickdown does not operate when depressing pedal in "D ₄ " within kickdown vehicle speed.	.	.	1	2	3	4
—	Kickdown operates or engine overruns when depressing pedal in "D ₄ " beyond kickdown vehicle speed limit.	.	.	2	1	3	4
—	Races extremely fast or slips in changing from "D ₄ " to "D ₃ " when depressing pedal.	1	.	2	.	.	3	5	.	4	6	7	
—	Races extremely fast or slips in changing from "D ₄ " to "D ₂ " when depressing pedal.	1	.	2	.	.	3	6	5	4	8	.	.	7	
—	Races extremely fast or slips in changing from "D ₃ " to "D ₂ " when depressing pedal.	1	.	2	.	.	3	5	.	4	.	.	6	.	7	10	9	.	.	8	
—	Races extremely fast or slips in changing from "D ₄ " or "D ₃ " to "D ₁ " when depressing pedal.	1	.	2	.	.	3	5	.	4	6	7	8	
—	Vehicle will not run in any position.	1	2	.	.	3	.	4	9	5	6	.	.	.	8	7	10	
—	Transmission noise in "D", "2", "1" and "R" positions.	1	2

TROUBLE DIAGNOSES


Symptom Chart (Cont'd)

Reference page (AT-)	Reference page (AT-)	ON vehicle										OFF vehicle																					
		23, 121	121	47, 49, 64	107	53, 119	55, 66	57, 59	61, 119	119	119	130, 141	158, 162	164	164, 173	168, 177	181																
Reference page (AT-)	Numbers are arranged in order of probability. Perform inspections starting with number one and work up. Circled numbers indicate that the transmission must be removed from the vehicle.	Fluid level	Control linkage	Inhibitor switch	Throttle position sensor (Adjustment)	Revolution sensor and speed sensor	Engine speed signal	Engine idling rpm	Line pressure	Control valve assembly	Shift solenoid valve A	Shift solenoid valve B	Line pressure solenoid valve	Torque converter clutch solenoid valve	Overrun clutch solenoid valve	Fluid temperature sensor	Accumulator N-D	Accumulator 1-2	Accumulator 2-3	Accumulator 3-4 (N-R)	Ignition switch and starter	Torque converter	Oil pump	Reverse clutch	High clutch	Forward clutch	Forward one-way clutch	Overrun clutch	Low one-way clutch	Low & reverse brake	Brake band	Parking components	
94	Failure to change from "D ₃ " to "2" when changing lever into "2" position.	7	1	2	6	5	4	.	3	9	.	.	8	.	.	
—	Gear change from "2" to "3" in "2" position.	.	1	
95	Engine brake does not operate in "1" position.	2	1	3	4	.	.	.	6	5	.	.	7	8	.	9	.	.	.	
—	Gear change from "1 ₁ " to "1 ₂ " in "1" position.	2	1	
—	Does not change from "1 ₂ " to "1 ₁ " in "1" position.	.	1	2	4	3	.	.	5	6	.	7	.	.	.		
—	Large shock changing from "1 ₂ " to "1 ₁ " in "1" position.	1	2	
—	Transmission overheats.	1	.	3	.	.	2	4	6	.	.	5	14	7	8	9	11	12	13	10	.	.	.	
—	ATF shoots out during operation. White smoke emitted from exhaust pipe during operation.	1	2	3	5	6	7	4	
—	Offensive smell at fluid charging pipe.	1	2	3	4	5	7	8	9	6	.	.	.	
—	Torque converter is not locked up.	.	3	1	2	4	.	6	8	.	.	.	7	5	9	
—	Torque converter clutch piston slip.	1	.	2	.	.	3	6	.	5	4	7	
92	Lock-up point is extremely high or low.	.	.	1	2	.	.	.	4	.	.	.	3	
—	A/T does not shift to "D ₄ " when driving with overdrive switch "ON".	.	.	2	1	3	.	8	6	4	.	.	5	7	10	.	9	.	.	.	
—	Engine is stopped at "R", "D", "2" and "1" positions.	1	5	4	3	.	2

GI
 MA
 EM
 LC
 EC
 FE
 CL
 MT
AT
 PD
 FA
 RA
 BR
 ST
 RS
 BT
 HA
 EL
 IDX


Description

- The mechanical key interlock mechanism also operates as a shift lock:
With the key switch turned to "ON", the selector lever cannot be shifted from "P" (parking) to any other position unless the brake pedal is depressed.
With the key removed, the selector lever cannot be shifted from "P" to any other position.
The key cannot be removed unless the selector lever is placed in "P".
- The shift lock and key interlock mechanisms are controlled by the ON-OFF operation of the shift lock solenoid and by the operation of the rotator and slider located inside the key cylinder, respectively.

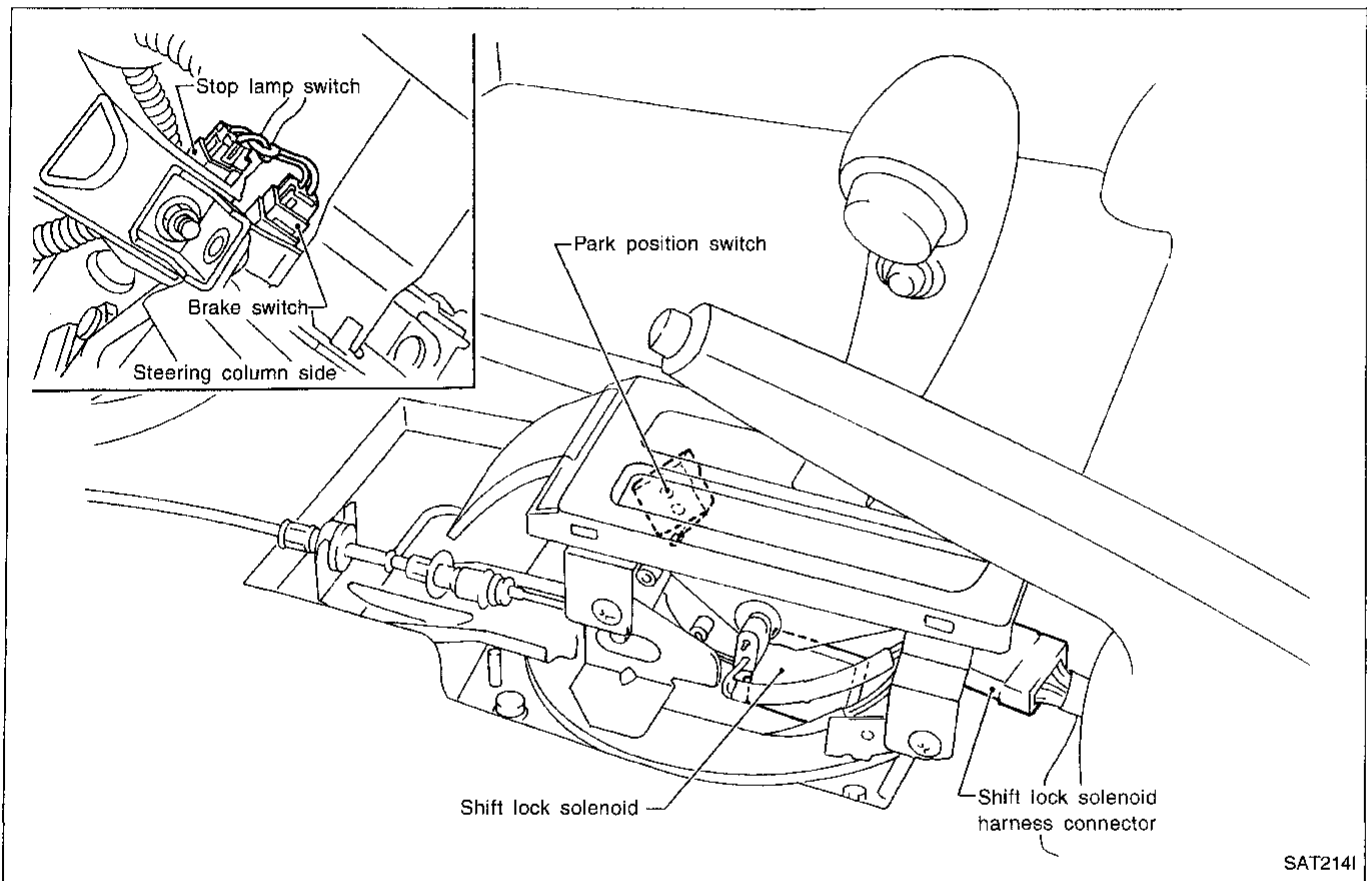

Wiring Diagram — SHIFT —

AT-SHIFT-01

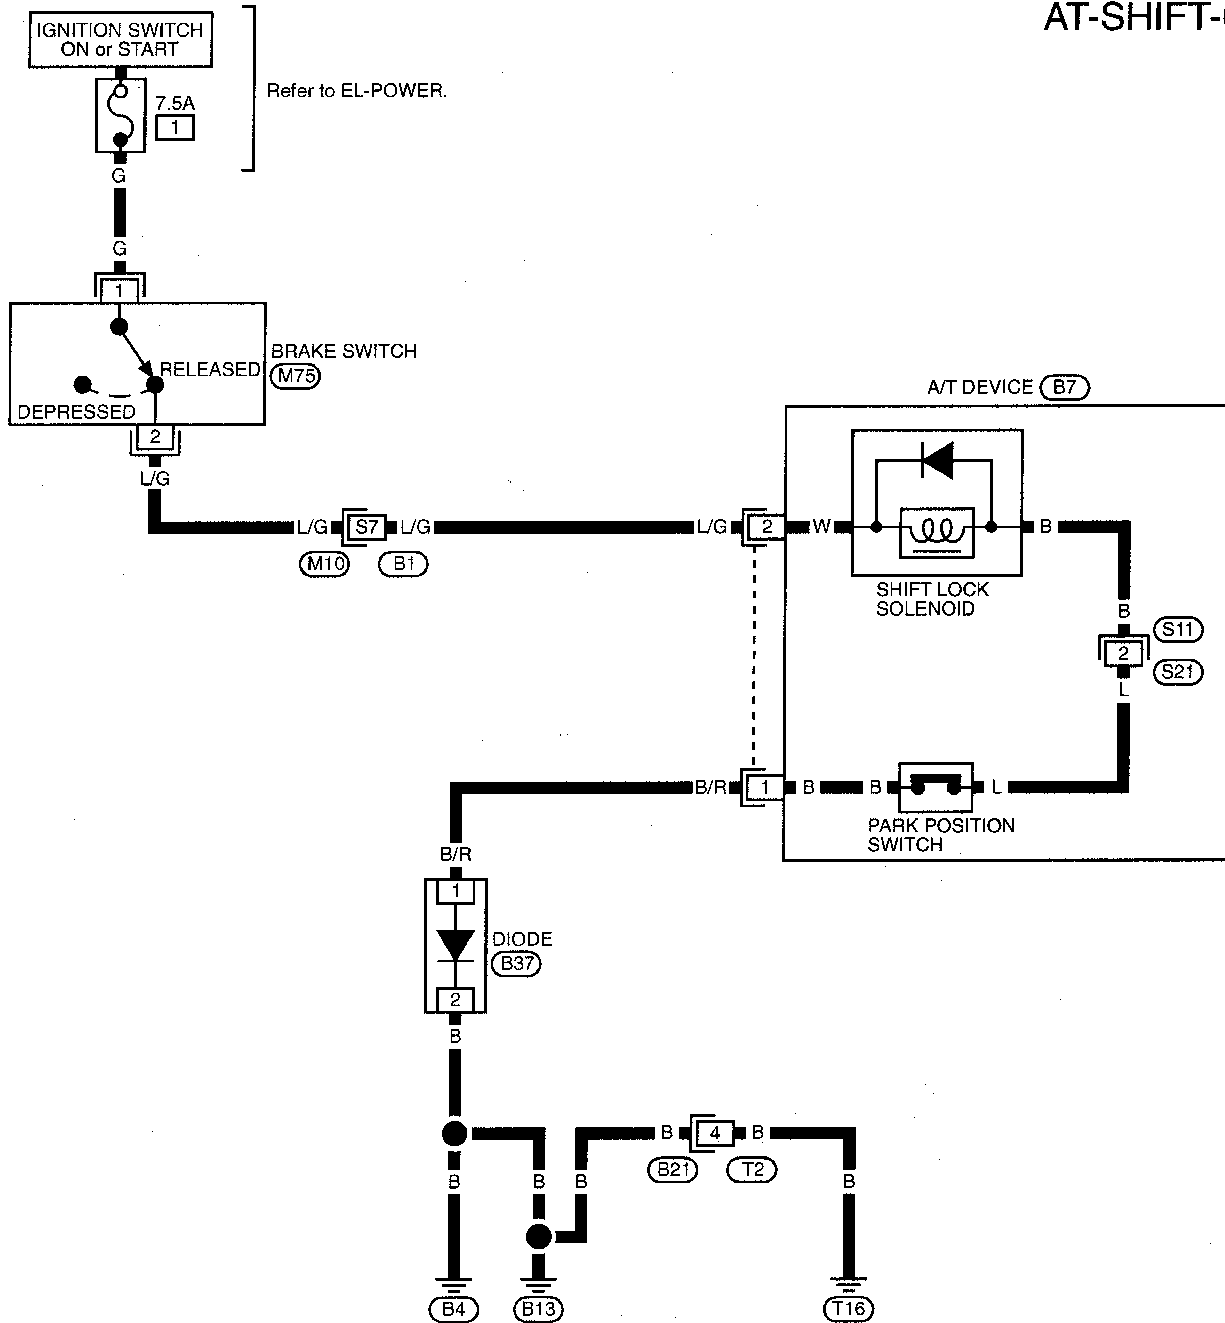

Refer to last page (Foldout page).
 (M10) (B1)

GI
 MA
 EM
 LC
 EC
 FE
 CL
 MT
AT
 PD
 FA
 RA
 BR
 ST
 RS
 BT
 HA
 EL
 IDX






Diagnostic Procedure

SYMPTOM 1:

- Selector lever cannot be moved from “P” position with key in “ON” position and brake pedal applied.
- Selector lever can be moved from “P” position with key in “ON” position and brake pedal released.
- Selector lever can be moved from “P” position when key is removed from key cylinder.

SYMPTOM 2:



Ignition key cannot be removed when selector lever is set to “P” position. It can be removed when selector lever is set to any position except “P”.

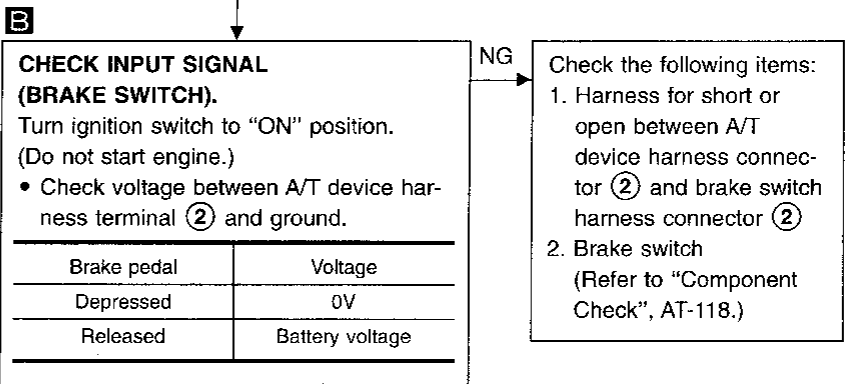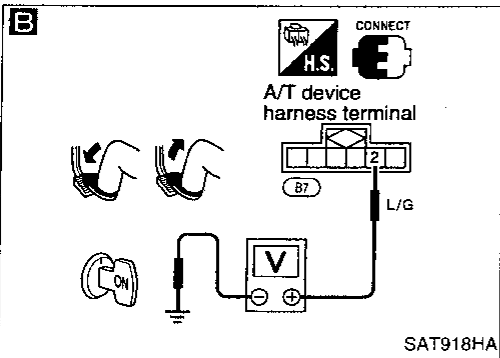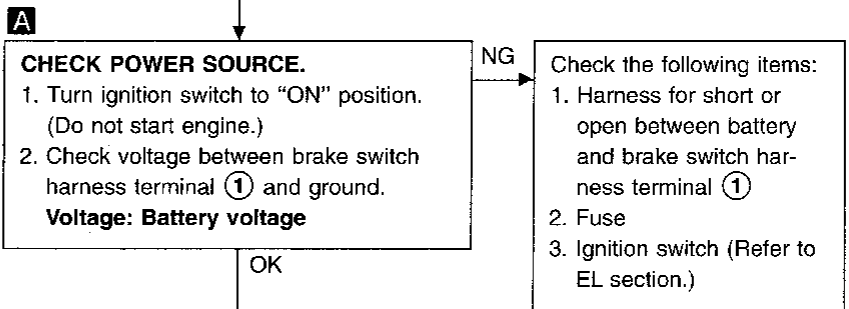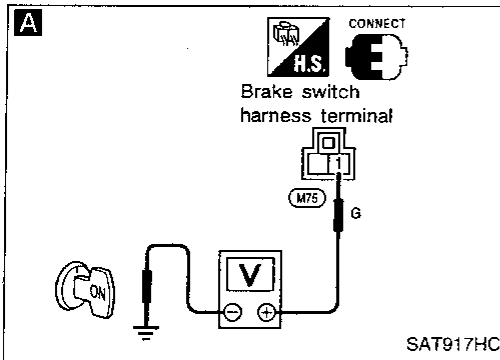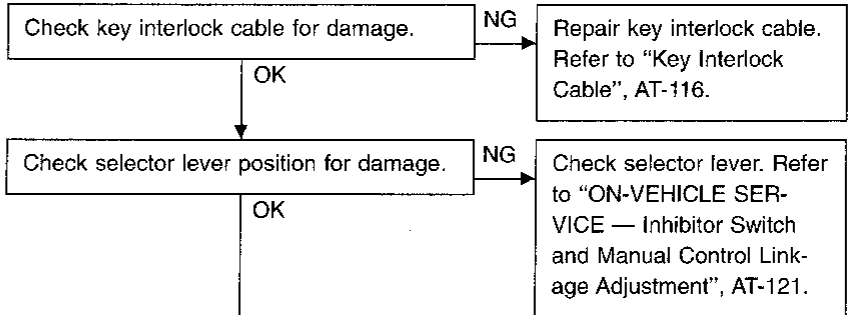

A


TROUBLE DIAGNOSES — A/T Shift Lock System

Diagnostic Procedure (Cont'd)

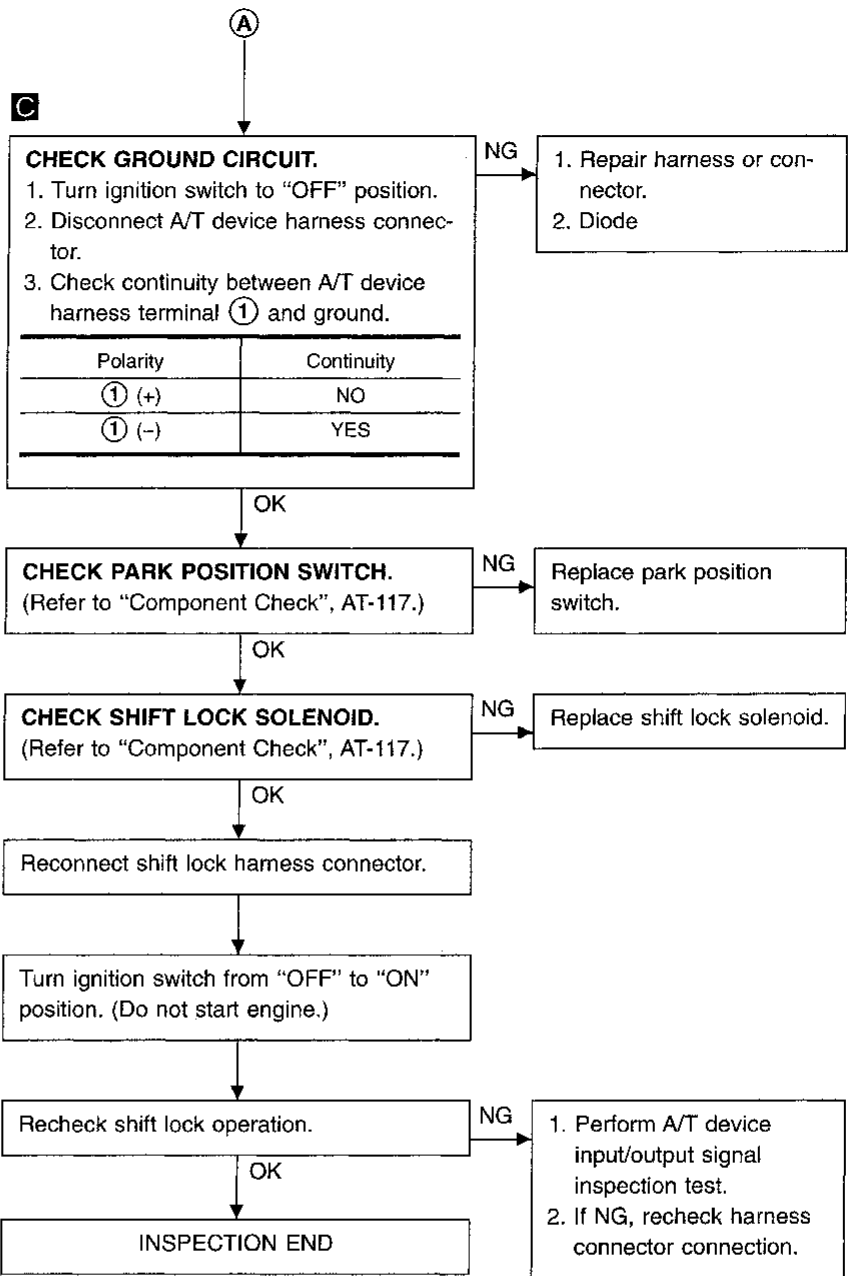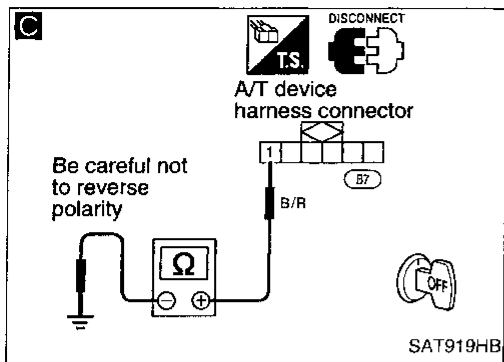


GI
MA
EM
LC
EC
FE
CL
MT
AT
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX

Key Interlock Cable

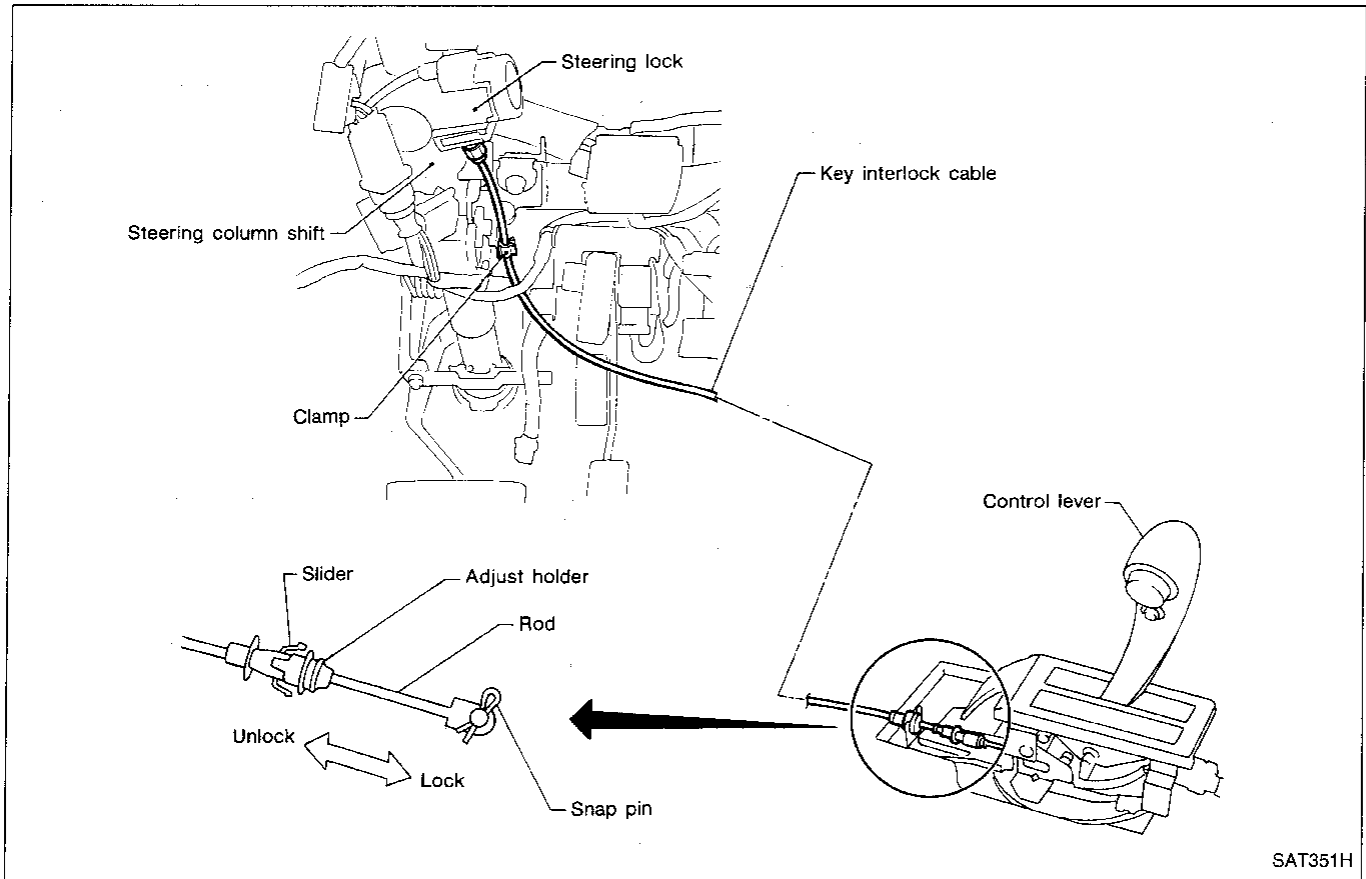

CAUTION:

- Install key interlock cable in such a way that it will not be damaged by sharp bends, twists or interference with adjacent parts.
- After installing key interlock cable to control device, make sure that casing cap and bracket are firmly secured in their positions. If casing cap can be removed with an external load of less than 39.2 N (4.0 kg, 8.8 lb), replace key interlock cable with new one.

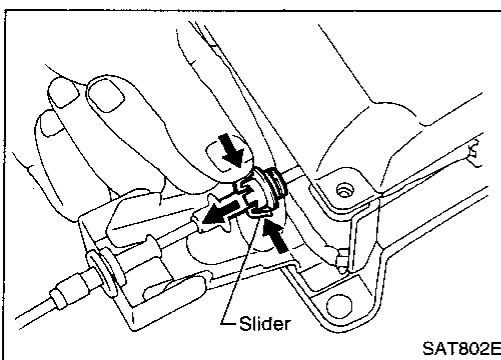

REMOVAL

Unlock slider from adjuster holder and remove rod from cable.

TROUBLE DIAGNOSES — A/T Shift Lock System

Key Interlock Cable (Cont'd)

INSTALLATION

1. Set key interlock cable to steering lock assembly and install lock plate.
2. Clamp cable to steering column and fix to control cable with band.
3. Set control lever to P position.
4. Insert interlock rod into adjuster holder.
5. Install casing cap to bracket.
6. Move slider in order to fix adjuster holder to interlock rod.

GI
MA
EM
LC
EC
FE
CL
MT

AT

PD
FA

RA

BR

ST






RS

BT

HA

EL

IDX

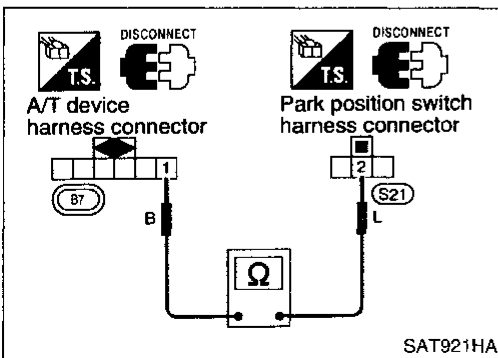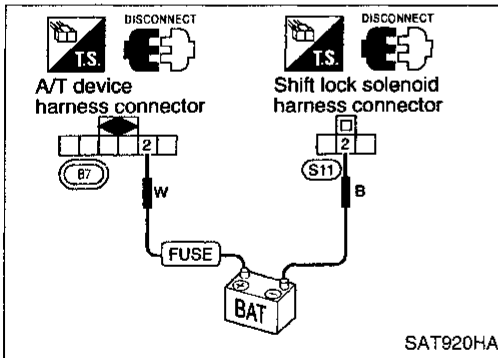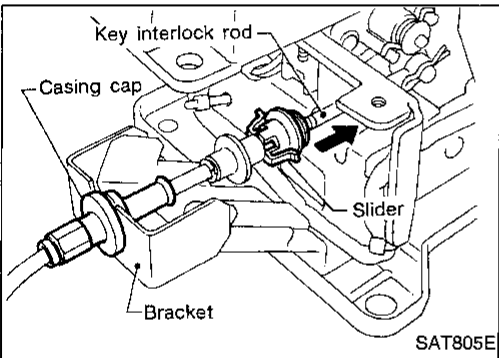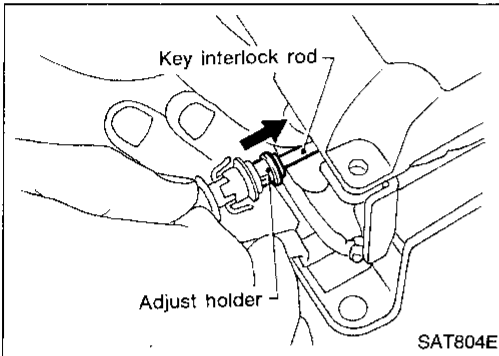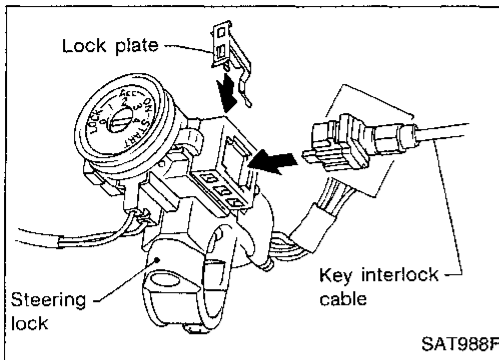

Component Check

SHIFT LOCK SOLENOID

- Check operation by applying battery voltage between shift lock solenoid harness connector terminal ② and A/T device harness connector terminal ②.

PARK POSITION SWITCH

- Check continuity between park position switch harness connector terminal ② and A/T device harness connector terminal ①.


Condition	Continuity
When selector lever is set in "P" position and selector lever button is released	No
Except above	Yes

TROUBLE DIAGNOSES — A/T Shift Lock System

Component Check (Cont'd)


BRAKE SWITCH

- Check continuity between brake switch harness connector terminals ① and ②.

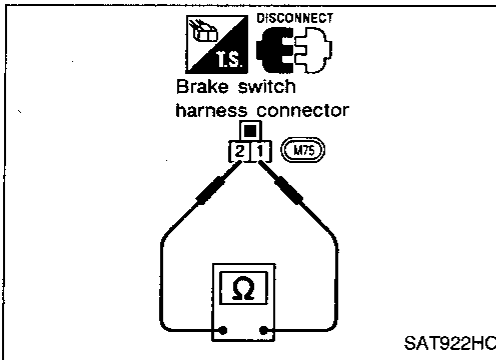

Condition	Continuity
When brake pedal is depressed	Yes
When brake pedal is released	No

Check brake switch after adjusting brake pedal — refer to BR section.

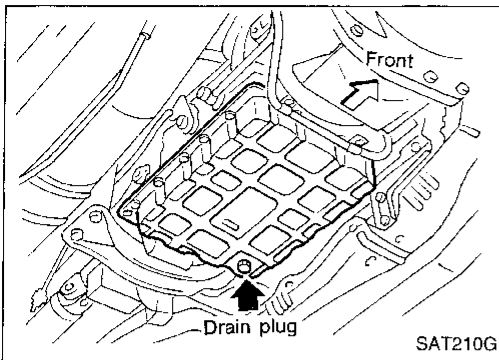

Control Valve Assembly and Accumulators Inspection

1. Drain fluid from drain plug.
2. Remove oil pan and gasket.
3. Remove oil strainer.

GI

MA

EM

LC

EC

FE

CL

MT

AT

PD

FA

RA

BR

ST

RS

BT

HA

EL

IDX

4. Remove control valve assembly by removing fixing bolts and disconnecting harness connector.

Bolt length and location

Bolt symbol	ℓ mm (in)	ℓ
(A)	33 (1.30)	
(B)	45 (1.77)	

5. Remove solenoids and valves from valve body if necessary.
6. Remove terminal cord assembly if necessary.

AT

PD

FA

RA

BR

ST


RS

BT

HA


EL

IDX

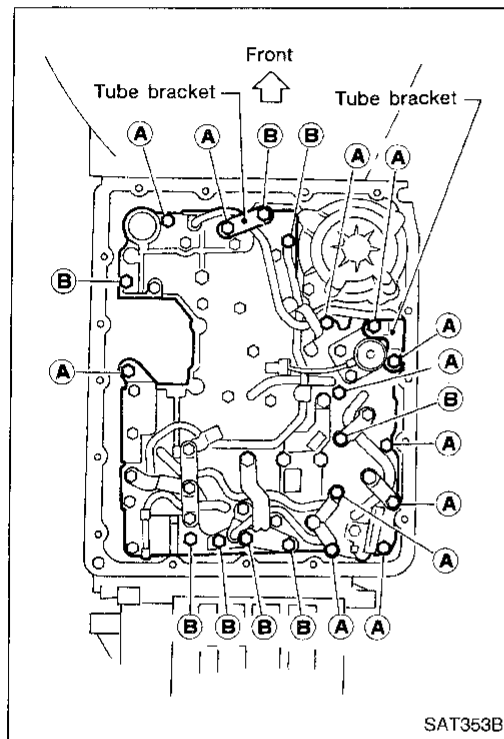


7. Remove accumulator (A), (B), (C) and (D) by applying compressed air if necessary.

- Hold each piston with rag.
- 8. Reinstall any part removed.
- Always use new sealing parts.

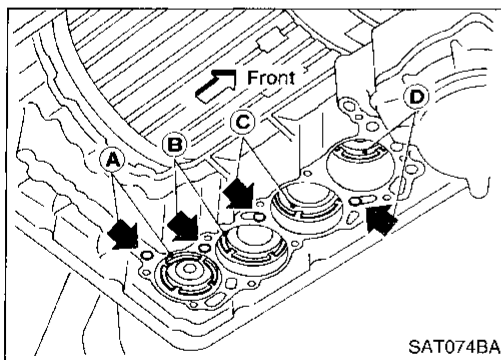


Revolution Sensor Replacement

1. Remove rear engine mounting member from body panel while supporting A/T with jack.
2. Lower A/T assembly as much as possible.

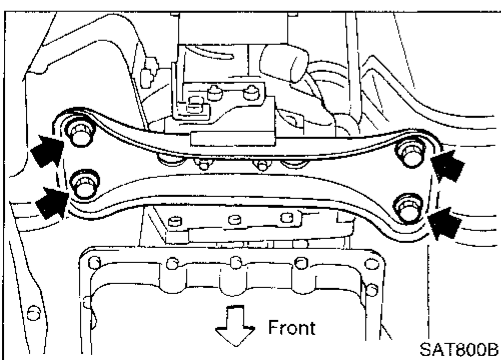


ON-VEHICLE SERVICE

Revolution Sensor Replacement (Cont'd)

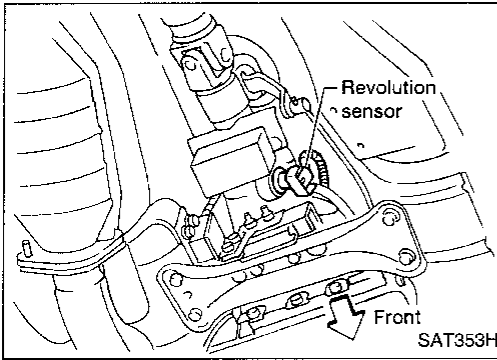


3. Remove revolution sensor from A/T assembly.
 4. Reinstall any part removed.
- **Always use new sealing parts.**

Rear Oil Seal Replacement

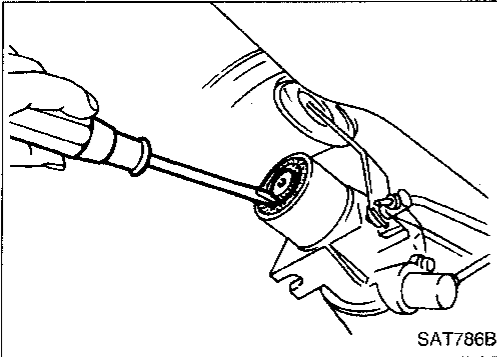


1. Remove propeller shaft from vehicle. Refer to PD section ("Removal", "PROPELLER SHAFT").
2. Remove rear oil seal.

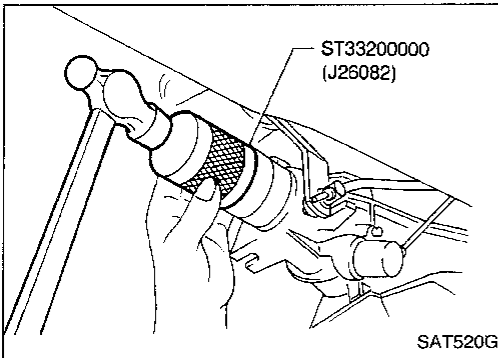


3. Install rear oil seal.
- **Apply ATF before installing.**
4. Reinstall any part removed.


Parking Components Inspection

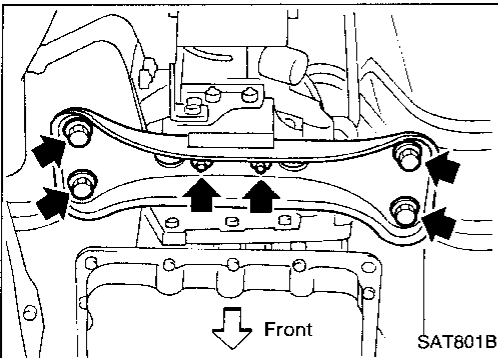

1. Remove propeller shaft from vehicle. Refer to PD section ("Removal", "PROPELLER SHAFT").
2. Remove rear engine mounting member from A/T assembly.

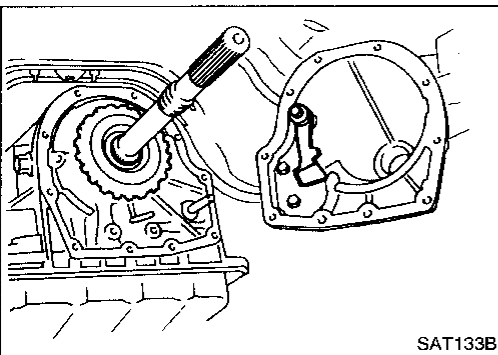

3. Remove rear extension from transmission case.
 4. Replace parking components if necessary.
 5. Reinstall any part removed.
- **Always use new sealing parts.**

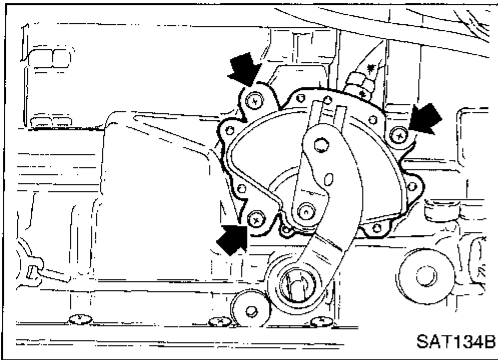

Inhibitor Switch Adjustment

1. Remove manual control linkage from manual shaft of A/T assembly.
2. Set manual shaft of A/T assembly in "N" position.
3. Loosen inhibitor switch fixing bolts.

GI

MA

EM

LC

EC

FE

CL

MT

AT

PD

FA

RA

BR

ST


RS

BT


HA

EL

IDX

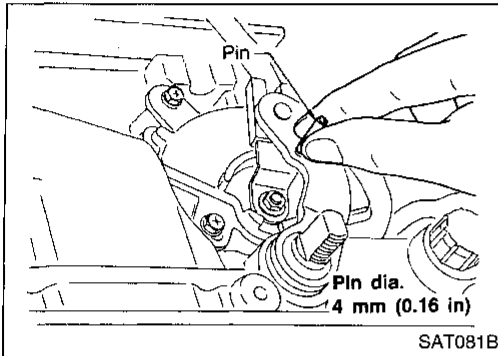

4. Insert pin into adjustment holes in both inhibitor switch and manual shaft of A/T assembly. Be sure to insert as vertical as possible.
5. Reinstall any part removed.
6. Check continuity of inhibitor switch. Refer to "Electrical Components Inspection", AT-102.

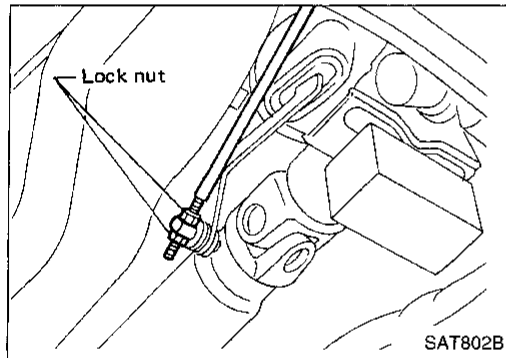


Manual Control Linkage Adjustment

Move selector lever from "P" position to "1" position. You should be able to feel the detentes in each position.

If no detentes are felt or the position pointer is not aligned properly, adjust the linkage.

1. Place selector lever in "P" position.
2. Loosen lock nuts.

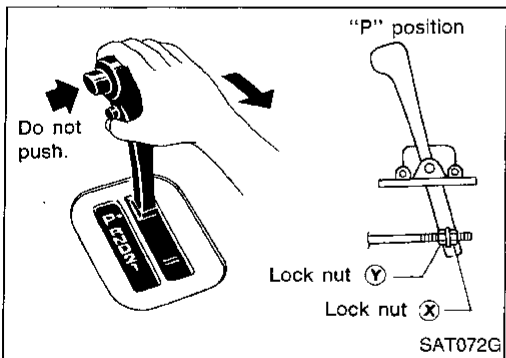


3. Tighten lock nut (X) until it touches trunnion pulling selector lever toward "R" position side without pushing button.
4. Back off lock nut (X) 1 turn and tighten lock nut (Y) to the specified torque.

Lock nut:

11 - 15 N·m (1.1 - 1.5 kg-m, 8 - 11 ft-lb)

5. Move selector lever from "P" position to "1" position. Make sure that selector lever can move smoothly.

REMOVAL AND INSTALLATION

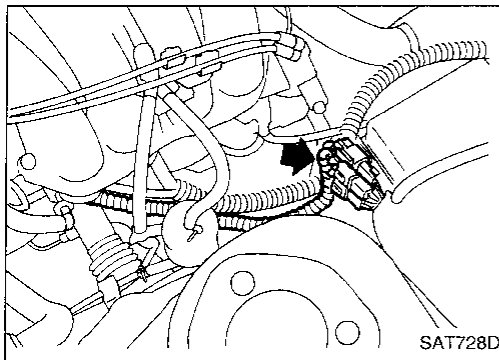


Removal

CAUTION:

When removing the A/T assembly from engine, first remove the crankshaft position sensor (OBD) from the A/T assembly upper side.

Be careful not to damage sensor edge.


- Disconnect A/T harness connector and clamps.

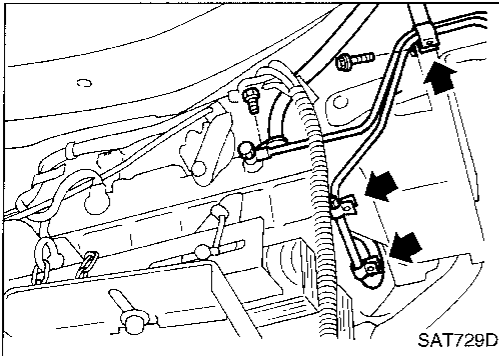


- Remove fluid charging pipe and oil cooler pipe at right side of A/T assembly. Plug up openings.
- Remove oil cooler pipe clamp at engine oil pan.
- Disconnect speed sensor harness connector.
- Remove control linkage from selector lever.

- Remove propeller shaft. Refer to PD section ("Removal", "PROPELLER SHAFT").

Insert plug into rear oil seal after removing propeller shaft. Be careful not to damage spline, sleeve yoke and rear oil seal, when removing propeller shaft.

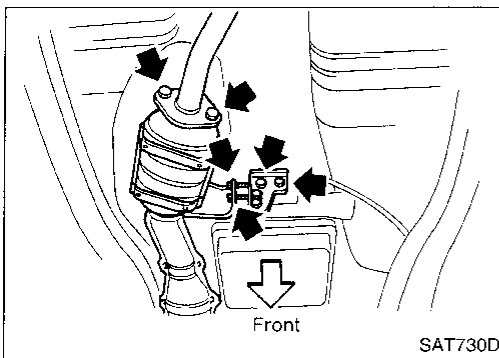


- Remove heat insulator from catalytic converter.
- Remove exhaust tube bracket and separate rear exhaust tube from converter.
- Remove starter motor.

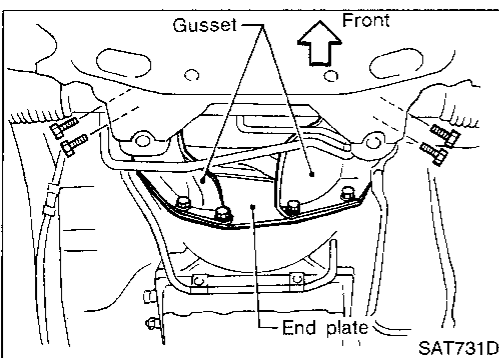



- Remove gussets and end plate.

REMOVAL AND INSTALLATION


Removal (Cont'd)

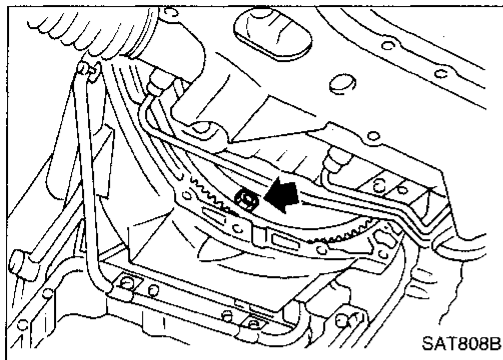


- Remove bolts securing torque converter to drive plate. Gain access to bolts by turning crankshaft.

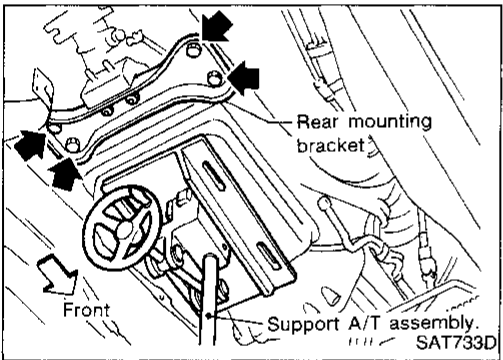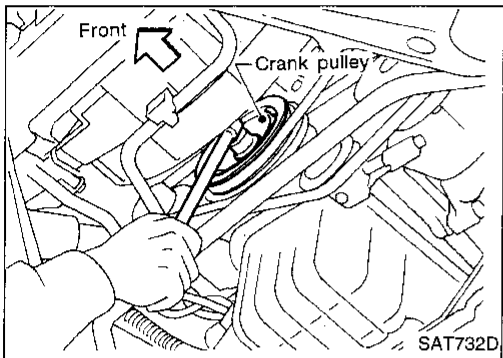

- Support A/T assembly by placing a jack under oil pan.
- Remove rear mounting bracket from body.

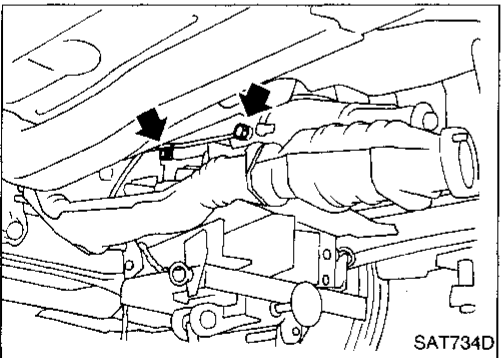

- Lower A/T assembly as much as possible.
- Remove oil cooler pipe from left side of A/T assembly. Plug up openings.

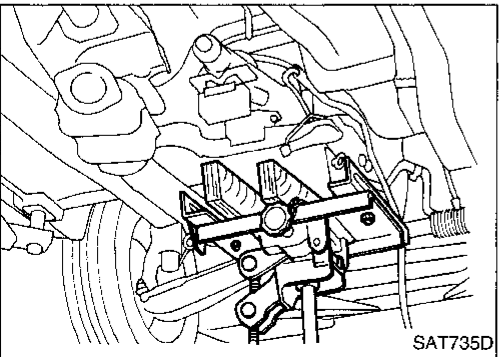

- Remove bolts securing A/T assembly to engine.
- Remove and lower A/T assembly.
Be careful not to damage steering gear and tubes.

GI

MA

EM

LC

EC

FE

CL

MT

AT

PD

FA

RA

BR

ST

RS


BT

HA

EL

IDX

REMOVAL AND INSTALLATION

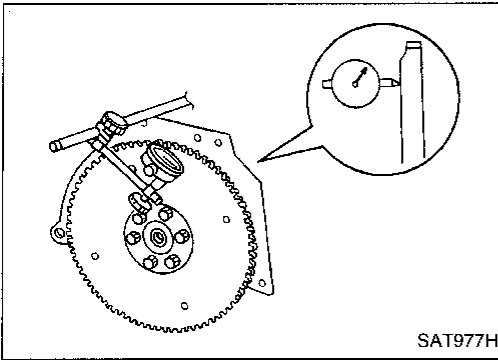

Installation

- Drive plate runout


CAUTION:

Do not allow any magnetic materials to contact the ring gear teeth.

Maximum allowable runout:

Refer to EM section ("Inspection", "CYLINDER BLOCK").

If this runout is out of allowance, replace drive plate with ring gear.

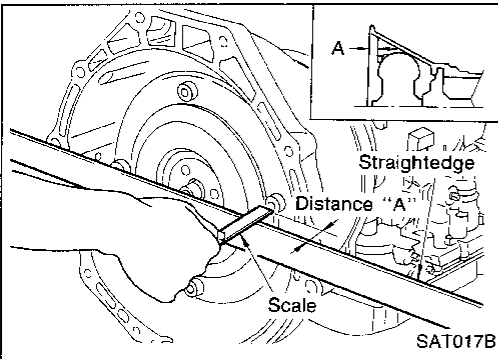


- When connecting torque converter to transmission, measure distance "A" to be certain that they are correctly assembled.

Distance "A":

26.0 mm (1.024 in) or more


- Install converter to drive plate.
- Reinstall any part removed.
- **After converter is installed to drive plate, rotate crankshaft several turns and check to be sure that transmission rotates freely without binding.**

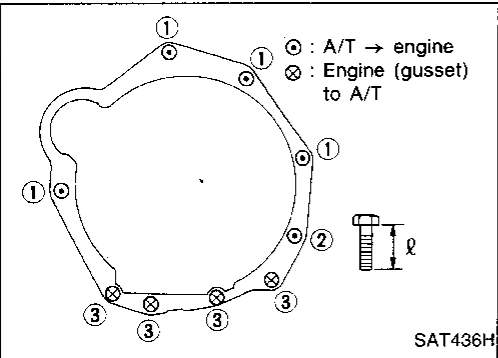

- Tighten bolts securing transmission.

Bolt No.	Tightening torque N-m (kg-m, ft-lb)	Bolt length "l" mm (in)
1	39 - 49 (4.0 - 5.0, 29 - 36)	40 (1.57)
2	39 - 49 (4.0 - 5.0, 29 - 36)	50 (1.97)
3	29 - 39 (3.0 - 4.0, 22 - 29)	25 (0.98)
Gusset to engine (4 bolts)	29 - 39 (3.0 - 4.0, 22 - 29)	20 (0.79)

- Reinstall any part removed.

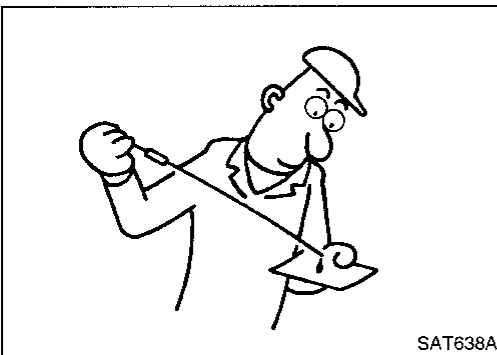

- Check fluid level in transmission.
- Move selector lever through all positions to be sure that transmission operates correctly. With parking brake applied, rotate engine at idling. Move selector lever through "N" to "D", to "2", to "1" and to "R" positions. A slight shock should be felt by hand gripping selector each time transmission is shifted.
- Perform road test. Refer to "ROAD TEST", AT-23.

REMOVAL AND INSTALLATION

NOTE

GI

MA

EM

LC

EC

FE

CL

MT

AT

PD

FA

RA

BR

ST

RS

BT

HA


EL

IDX

MAJOR OVERHAUL

SEC. 311-315-317







- : N·m (kg-m, in-lb)
- : N·m (kg-m, ft-lb)
- : Apply ATF.
- : Apply petroleum jelly.
- : Select with proper thickness.
- : Adjustment is required.

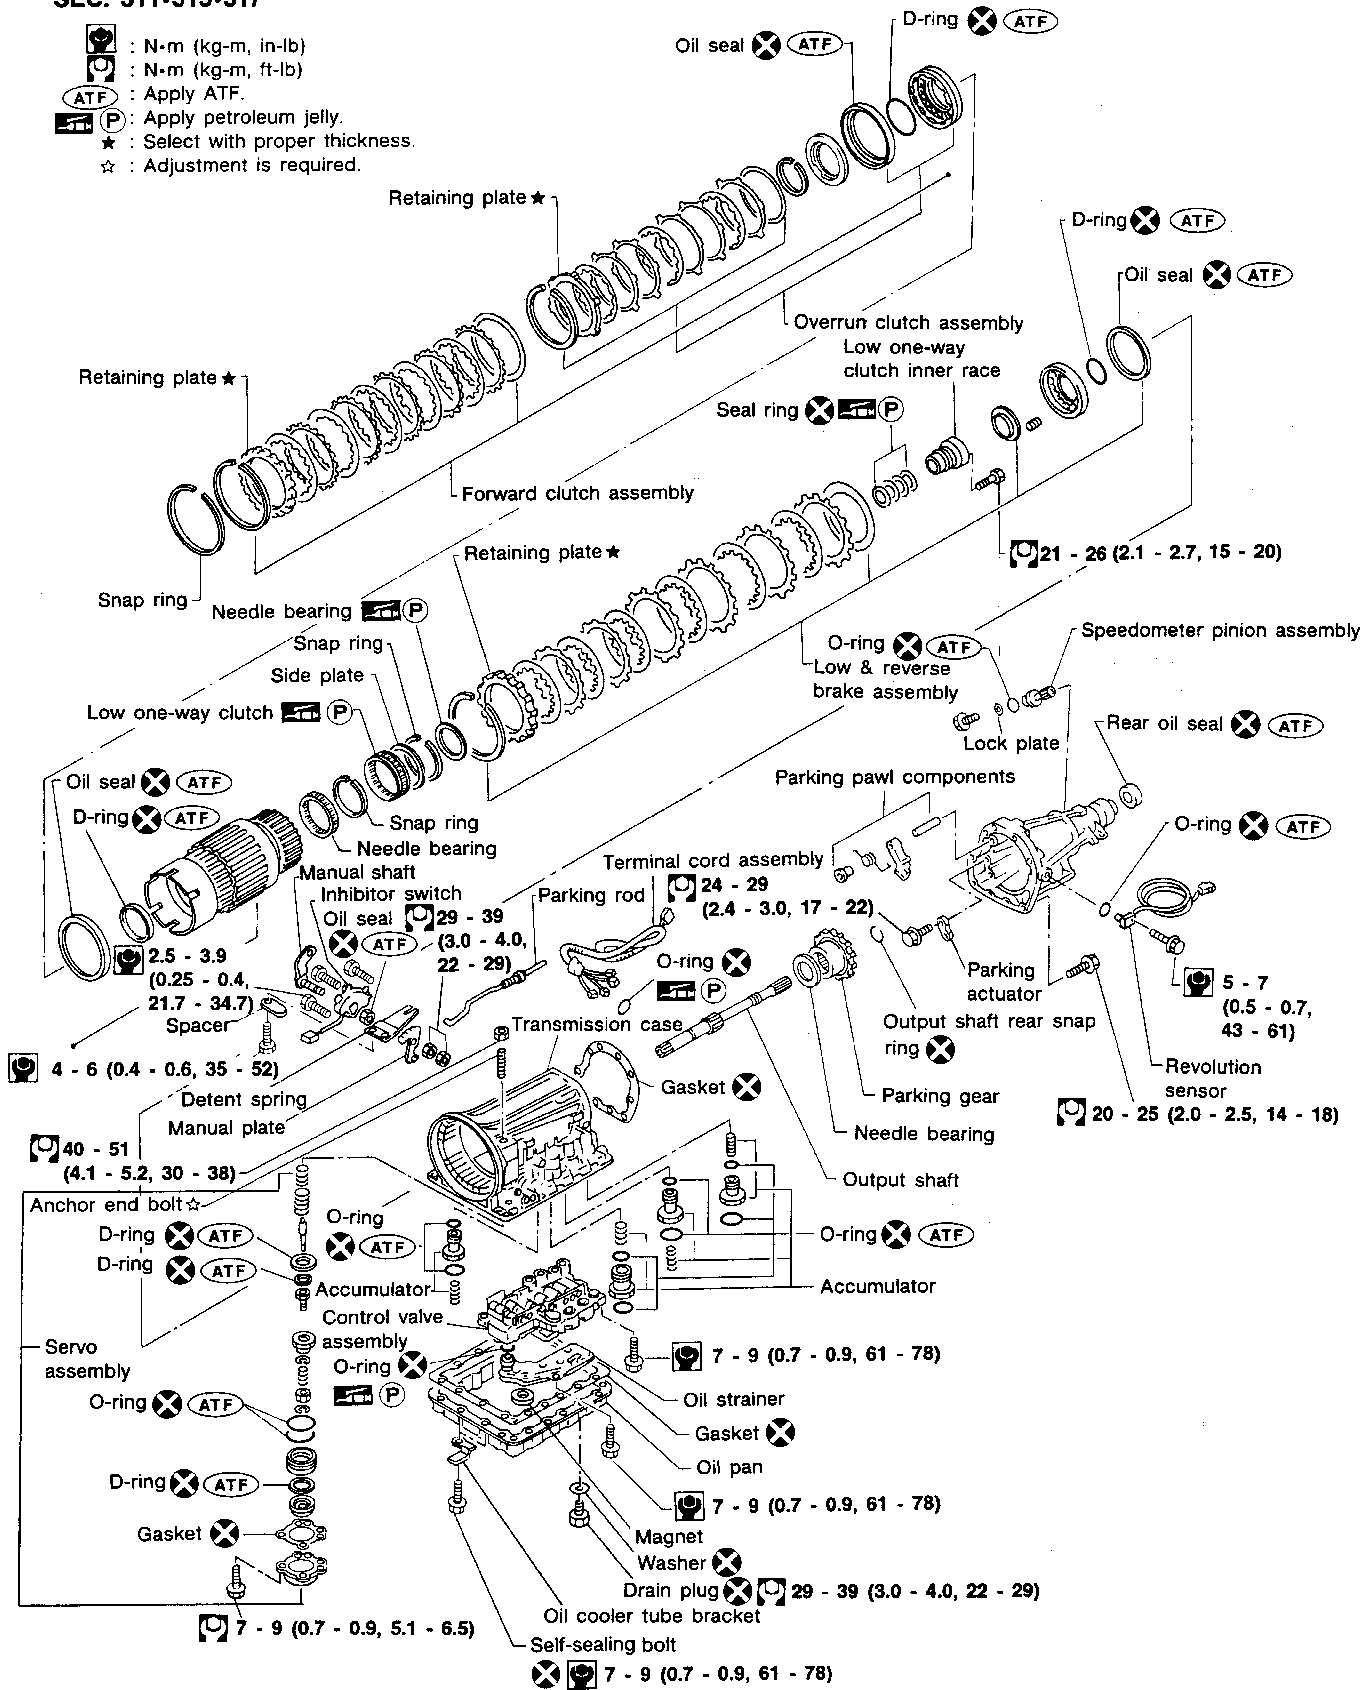

GI
MA
EM
LC
EC
FE
CL
MT
AT
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX

MAJOR OVERHAUL

Oil Channel

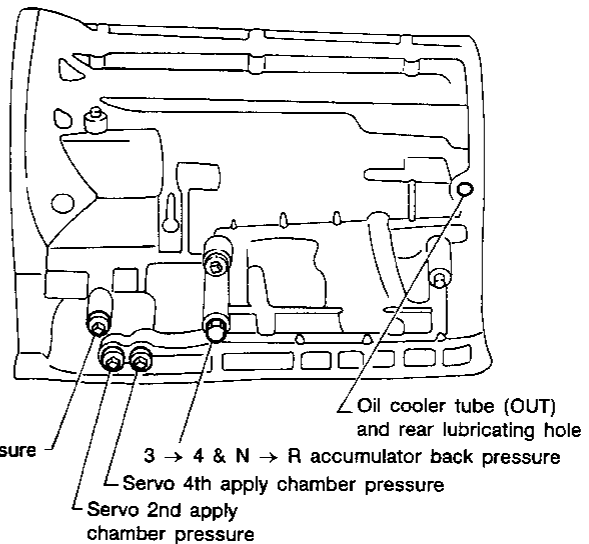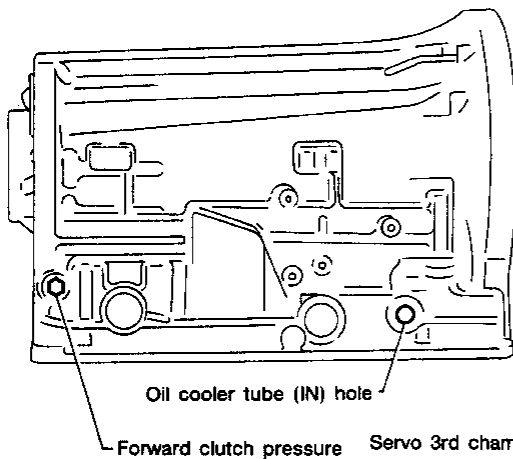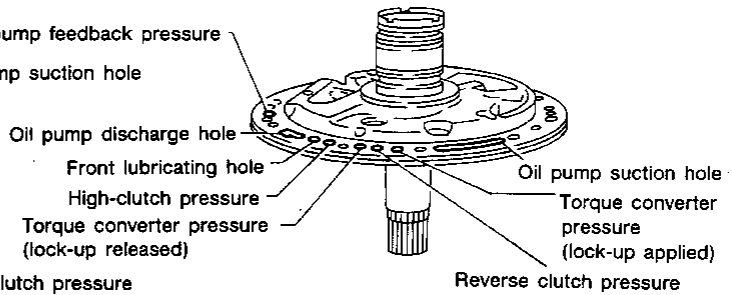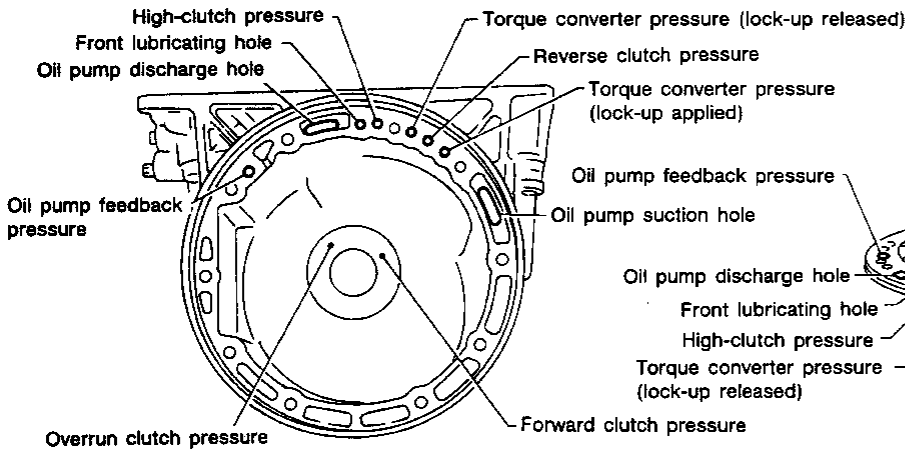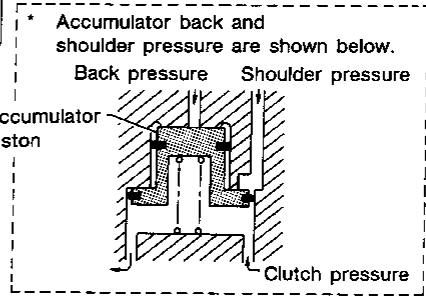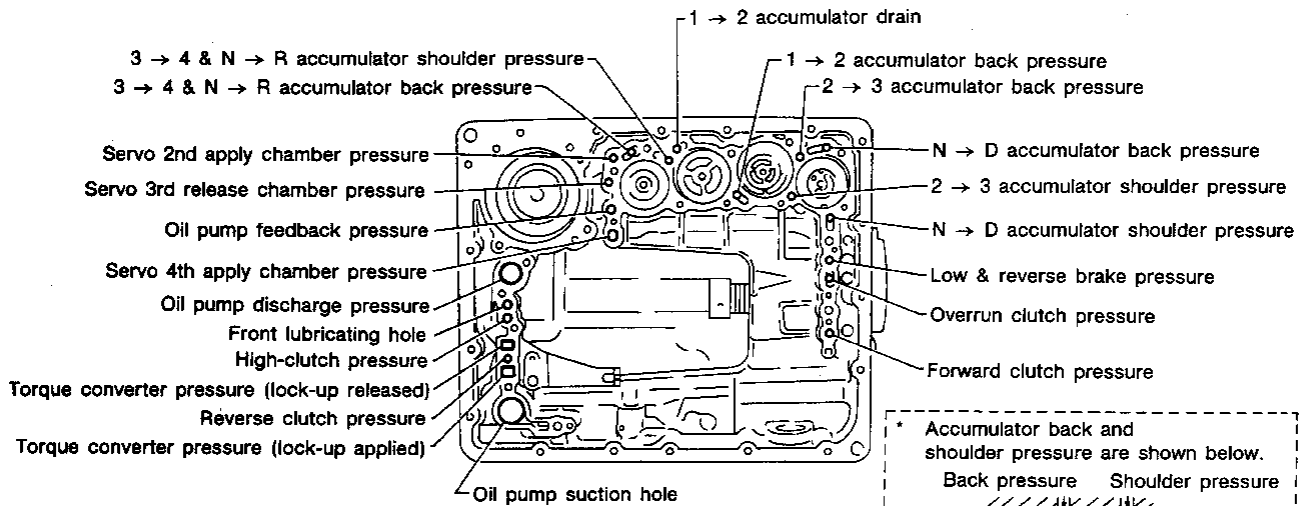

MAJOR OVERHAUL

Locations of Needle Bearings, Thrust Washers and Snap Rings


Outer diameter of snap rings	
Item number	Outer diameter mm (in)
②	161.0 (6.34)
③	140.1 (5.52)
④	156.4 (6.16)
⑥	142.0 (5.59)
⑦	159.2 (6.27)

Thrust washers	
Item number	Color
①	Black
⑤	White

Outer diameter of needle bearings	
Item number	Outer diameter mm (in)
⑧	47 (1.85)
⑨	53 (2.09)
⑩	53 (2.09)
⑪	78 (3.07)
⑫	53 (2.09)
⑬	78 (3.07)
⑭	59 (2.32)
⑮	78 (3.07)
⑯	64 (2.52)


Inner diameter of bearing races	
Item number	Outer diameter mm (in)
⑪	58 (2.28)
⑬	58.8 (2.315)

Installation of one-piece bearings	
Item number	Bearing race (black) location
⑫	Front
⑮	Rear side
⑯	Rear side

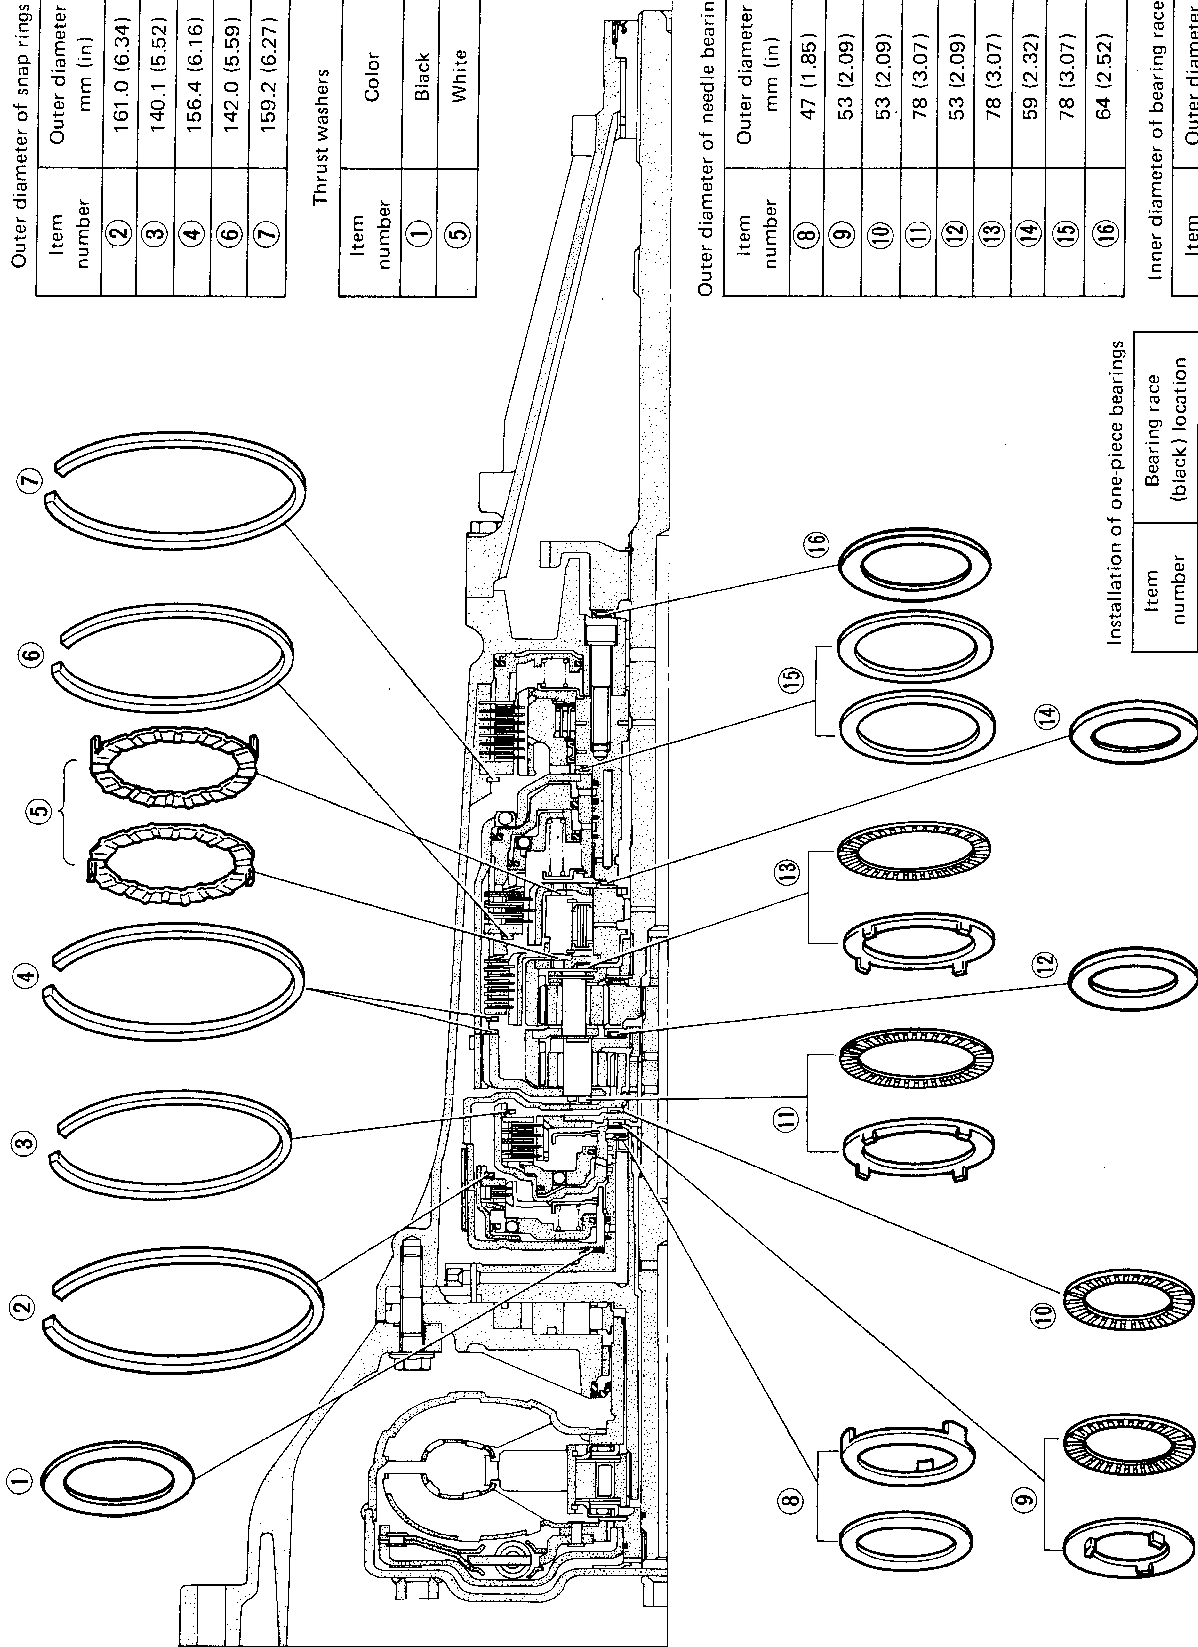


GI
MA
EM
LC
EC
FE
CL
MT
AT
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX

DISASSEMBLY

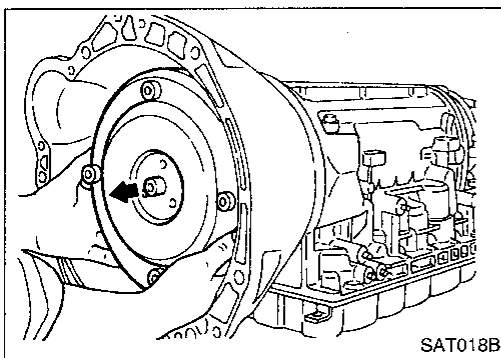


Disassembly


1. Drain ATF through drain plug.
2. Remove torque converter by holding it firmly and turning while pulling straight out.

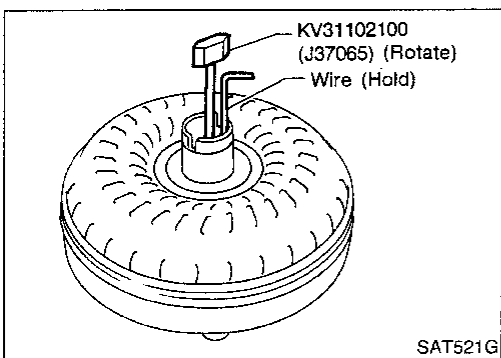


3. Check torque converter one-way clutch.
 - a. Insert Tool into spline of one-way clutch inner race.
 - b. Hook bearing support unitized with one-way clutch outer race with suitable wire.
 - c. Check that one-way clutch inner race rotates only clockwise with Tool while holding bearing support with wire.

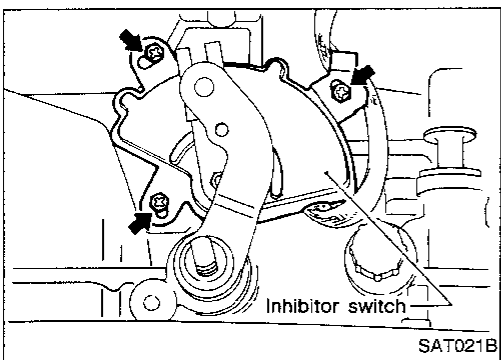

4. Remove inhibitor switch from transmission case.

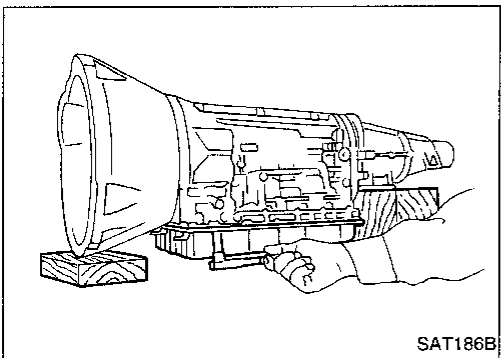


5. Remove oil pan.
 - **Always place oil pan straight down so that foreign particles inside will not move.**

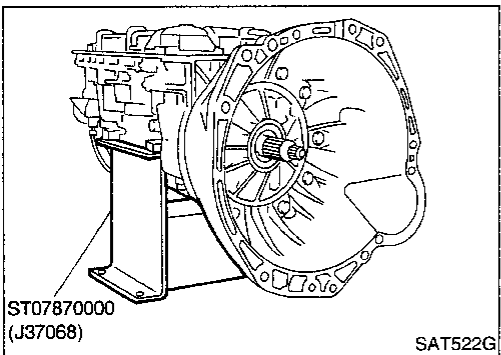

6. Place transmission into Tool with the control valve facing up.

DISASSEMBLY

Disassembly (Cont'd)

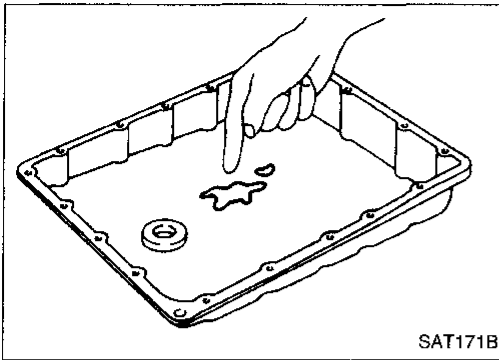

7. Check foreign materials in oil pan to help determine cause of malfunction. If the fluid is very dark, smells burned, or contains foreign particles, the frictional material (clutches, band) may need replacement. A tacky film that will not wipe clean indicates varnish build up. Varnish can cause valves, servo, and clutches to stick and may inhibit pump pressure.
 - **If frictional material is detected, replace radiator after repair of A/T. Refer to LC section ("Radiator", "ENGINE COOLING SYSTEM").**

GI

MA

EM

LC

EC

FE

CL

MT

AT

PD

FA

RA

BR

ST


RS

BT


HA

EL


IDX

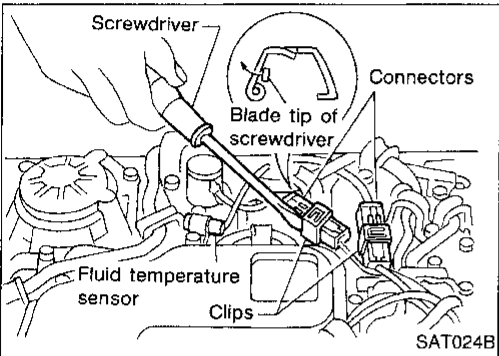


8. Remove torque converter clutch solenoid valve and fluid temperature sensor connectors.
 - **Be careful not to damage connector.**

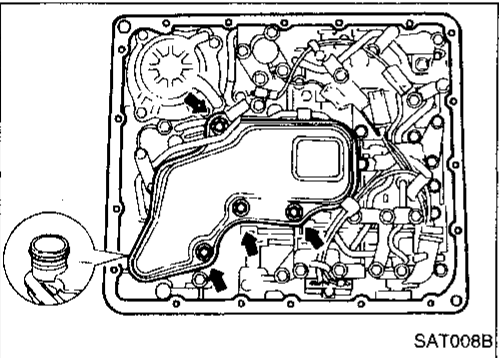

9. Remove oil strainer.
 - a. Remove oil strainer from control valve assembly. Then remove O-ring from oil strainer.

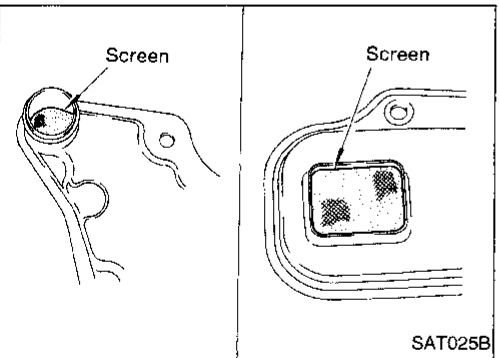

- b. Check oil strainer screen for damage.

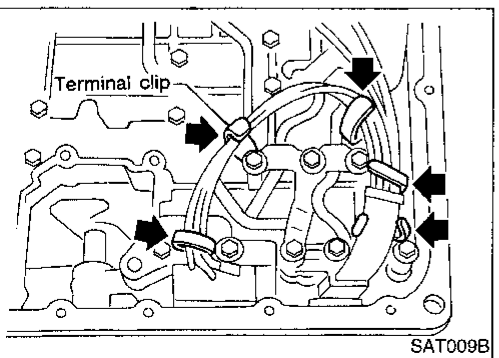


10. Remove control valve assembly.
 - a. Straighten terminal clips to free terminal cords then remove terminal clips.

DISASSEMBLY


Disassembly (Cont'd)

- b. Remove bolts (A) and (B), and remove control valve assembly from transmission.



Bolt symbol	Length mm (in)
(A)	33 (1.30)
(B)	45 (1.77)

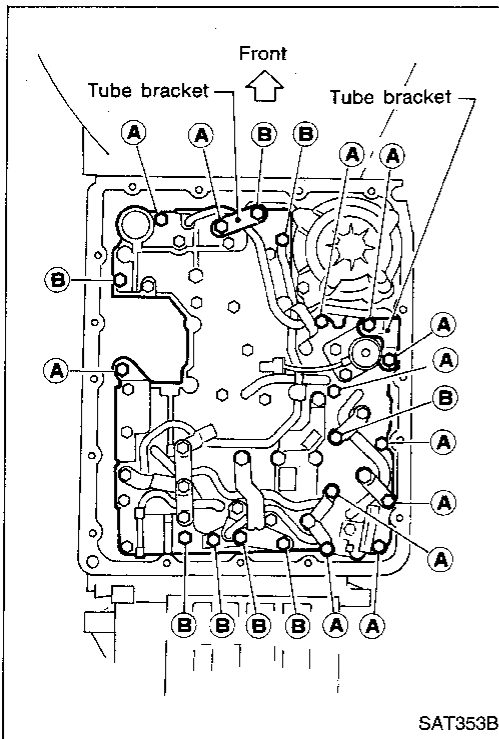

- c. Remove solenoid connector.
- **Be careful not to damage connector.**

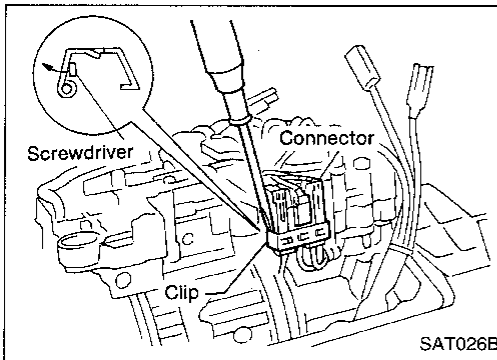


- d. Remove manual valve from control valve assembly.

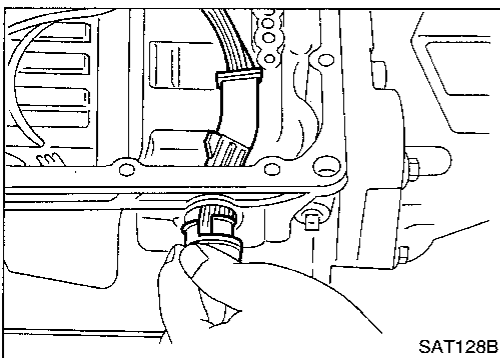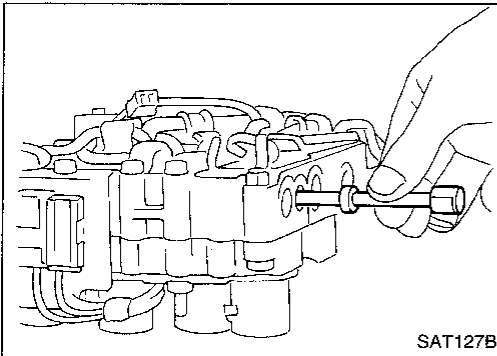

11. Remove terminal cord assembly from transmission case while pushing on stopper.
- **Be careful not to damage cord.**
 - **Do not remove terminal cord assembly unless it is damaged.**

DISASSEMBLY

Disassembly (Cont'd)

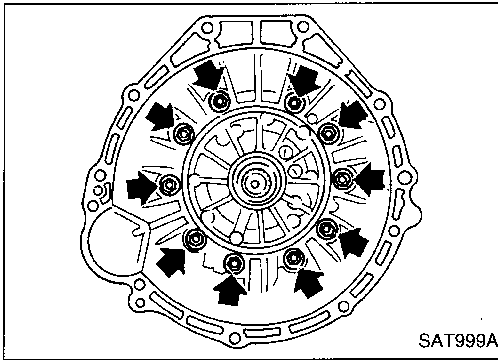

12. Remove converter housing from transmission case.

- **Be careful not to scratch converter housing.**

GI

MA


EM

LC

EC

FE

CL

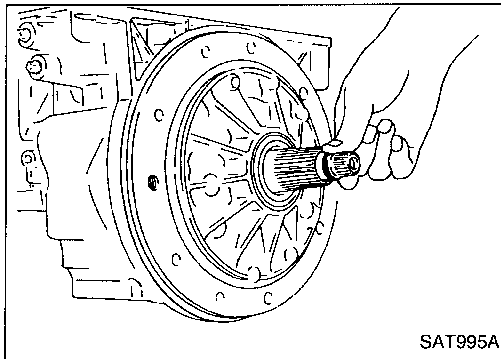

13. Remove O-ring from input shaft.

MT

AT

PD

FA

RA

BR

ST


RS

BT

HA


EL

IDX

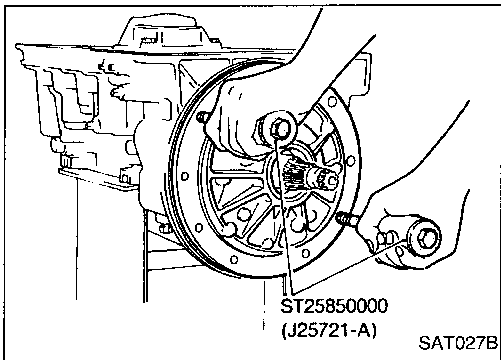

14. Remove oil pump assembly.


- a. Attach Tool to oil pump assembly and extract it evenly from transmission case.

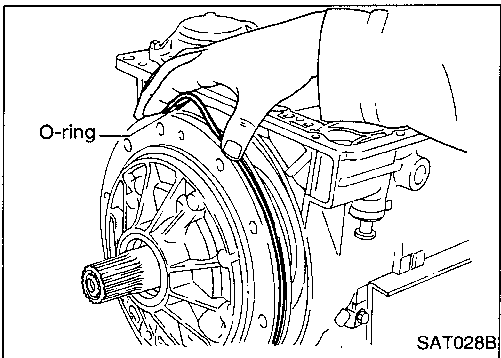

b. Remove O-ring from oil pump assembly.

c. Remove traces of sealant from oil pump housing.


- **Be careful not to scratch pump housing.**

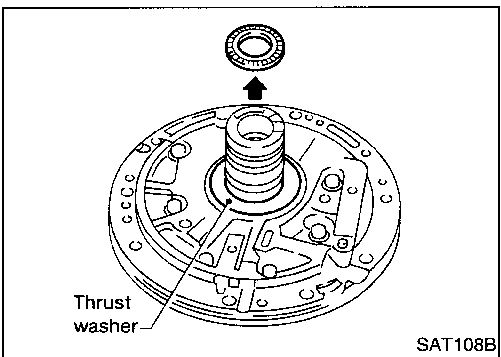


d. Remove needle bearing and thrust washer from oil pump assembly.

DISASSEMBLY

Disassembly (Cont'd)

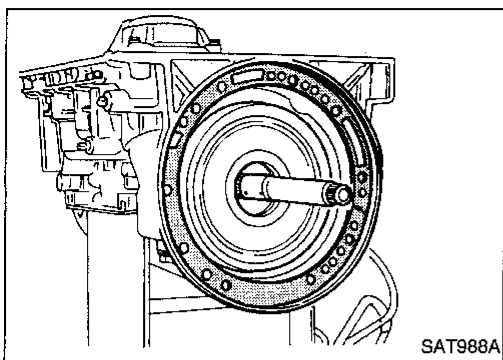


15. Remove input shaft and oil pump gasket.

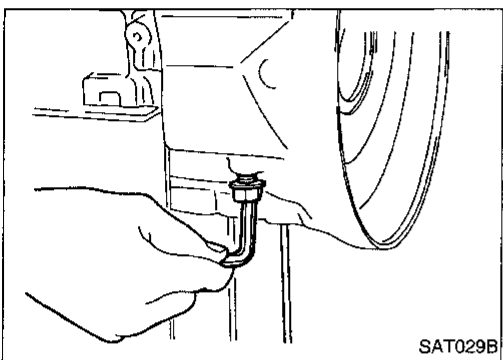


16. Remove brake band and band strut.


a. Loosen lock nut and remove band servo anchor end pin from transmission case.

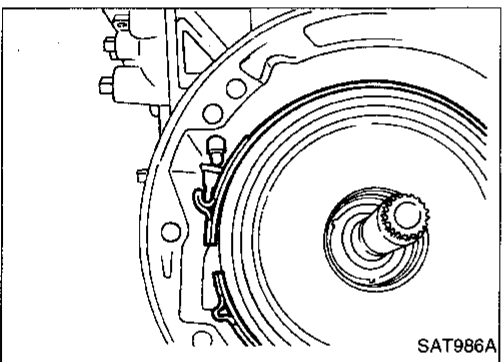

b. Remove brake band and band strut from transmission case.

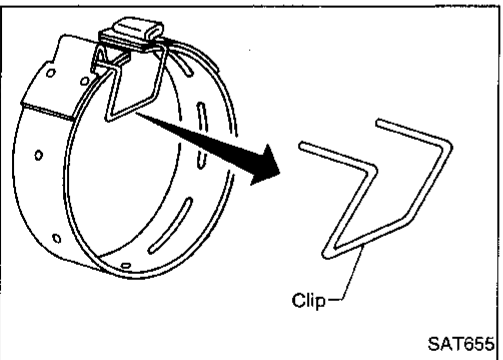

c. Hold brake band in a circular shape with clip.

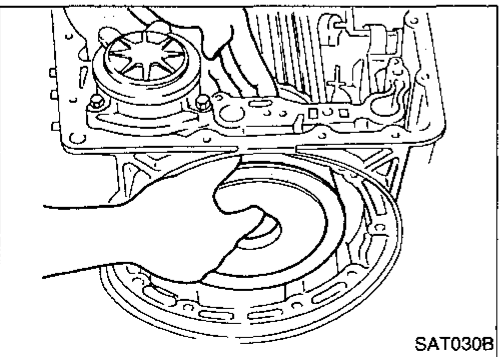


17. Remove front side clutch and gear components.


a. Remove clutch pack (reverse clutch, high clutch and front sun gear) from transmission case.

DISASSEMBLY


Disassembly (Cont'd)

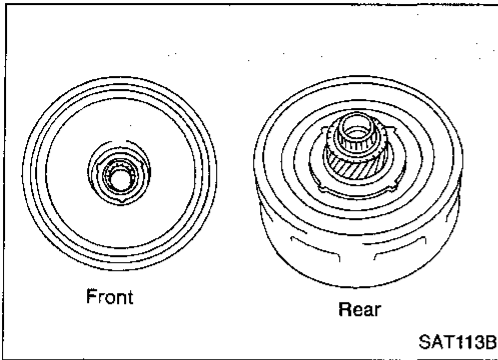


- b. Remove front bearing race from clutch pack.
- c. Remove rear bearing race from clutch pack.

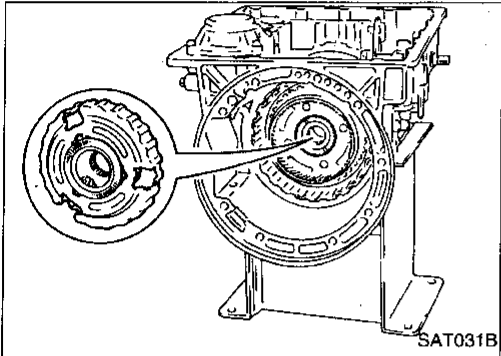


- d. Remove front planetary carrier from transmission case.

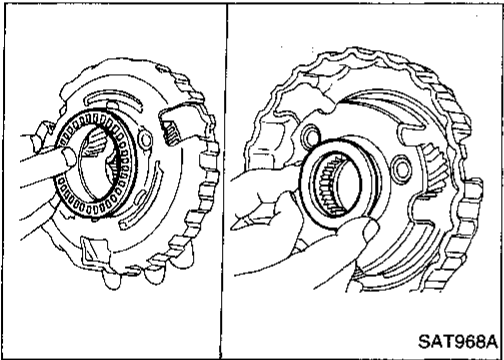

- e. Remove front needle bearing from front planetary carrier.
- f. Remove rear bearing from front planetary carrier.

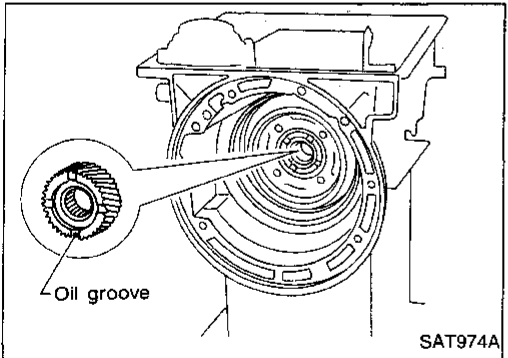

- g. Remove rear sun gear from transmission case.

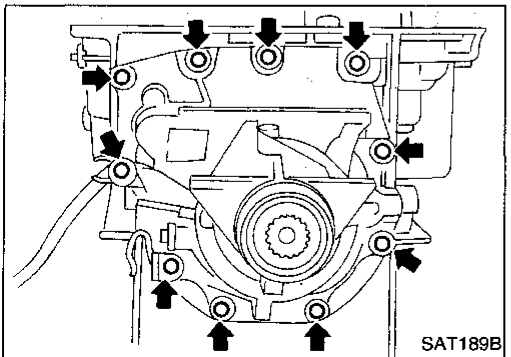

- 18. Remove rear extension.
 - a. Remove rear extension from transmission case.
 - b. Remove rear extension gasket from transmission case.

GI

MA

EM

LC

EC

FE

CL

MT

AT

PD

FA

RA

BR

ST

RS

BT


HA

EL


IDX

DISASSEMBLY


Disassembly (Cont'd)

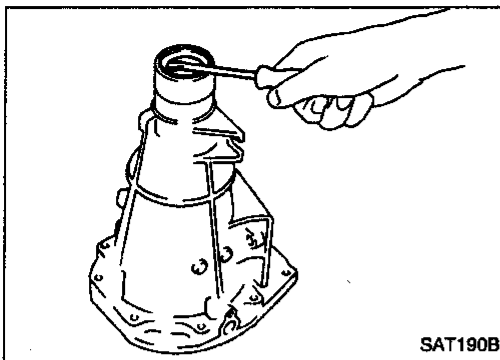


- c. Remove oil seal from rear extension.
- **Do not remove oil seal unless it is to be replaced.**

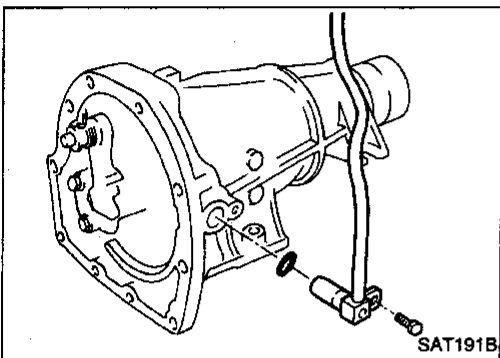


- d. Remove revolution sensor from rear extension.
- e. Remove O-ring from revolution sensor.

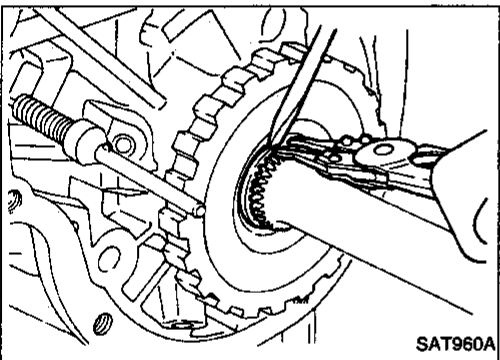

- 19. Remove output shaft and parking gear.
- a. Remove rear snap ring from output shaft.

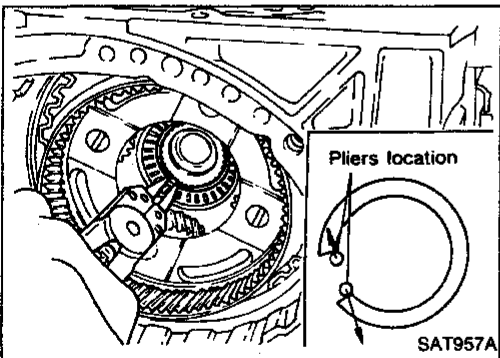

- b. Slowly push output shaft all the way forward.
- **Do not use excessive force.**
- c. Remove snap ring from output shaft.

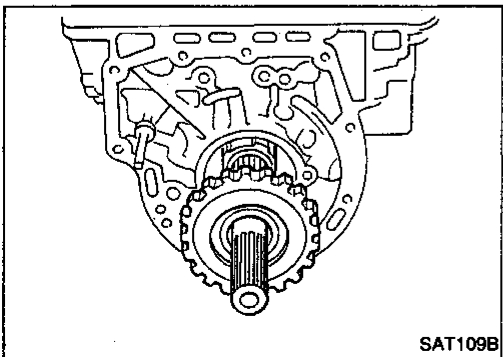


- d. Remove output shaft and parking gear as a unit from transmission case.
- e. Remove parking gear from output shaft.

DISASSEMBLY


Disassembly (Cont'd)

f. Remove needle bearing from transmission case.

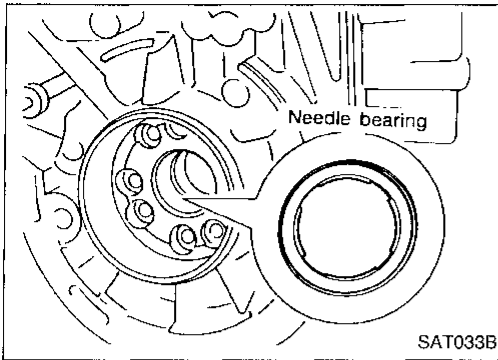


20. Remove rear side clutch and gear components.


a. Remove front internal gear.

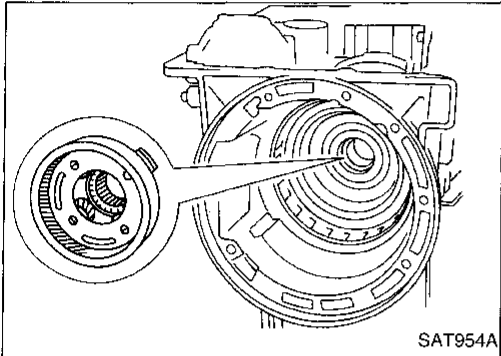


b. Remove bearing race from front internal gear.

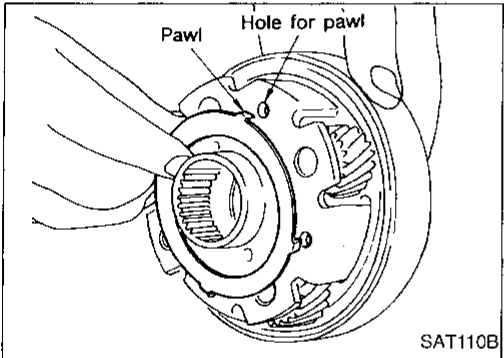

c. Remove needle bearing from rear internal gear.

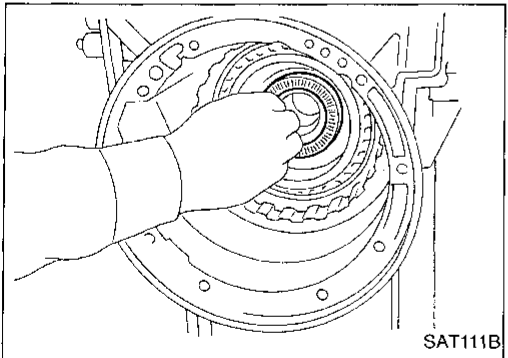

d. Remove rear internal gear, forward clutch hub and overrun clutch hub as a set from transmission case.

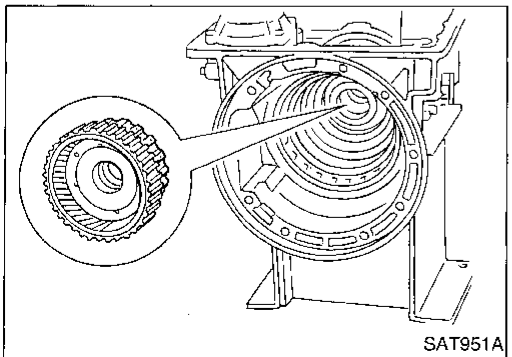

GI

MA

EM

LC

EC

FE

CL

MT

AT

PD

FA

RA

BR

ST

RS

BT


HA

EL


IDX

DISASSEMBLY


Disassembly (Cont'd)

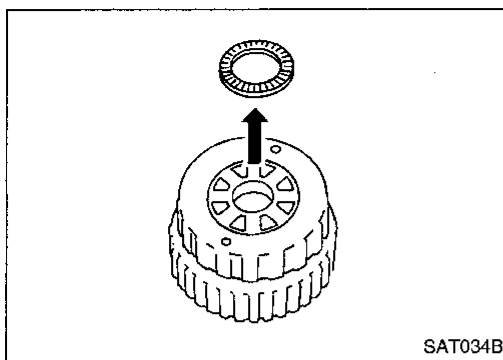


e. Remove needle bearing from overrun clutch hub.

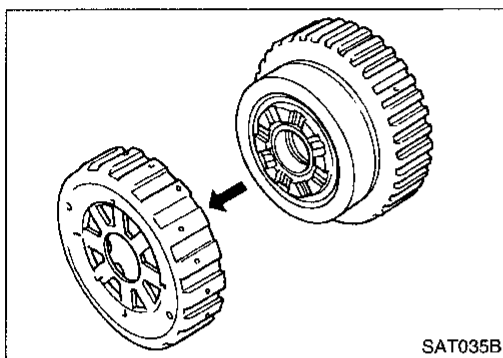


f. Remove overrun clutch hub from rear internal gear and forward clutch hub.

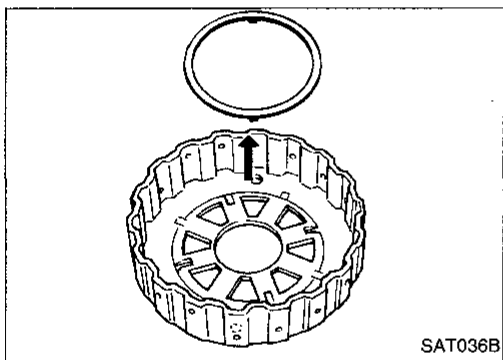

g. Remove thrust washer from overrun clutch hub.

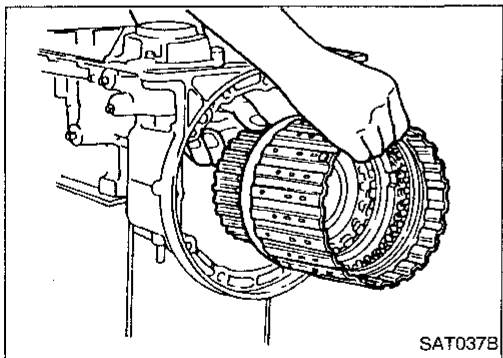


h. Remove forward clutch assembly from transmission case.

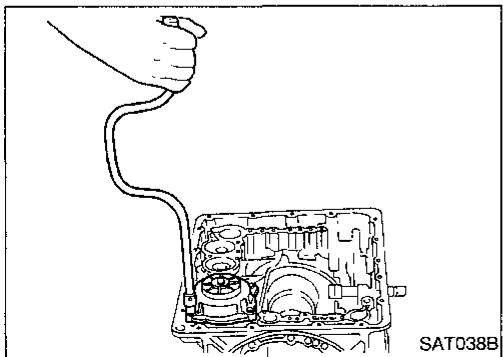


21. Remove band servo and accumulator components.
a. Remove band servo retainer from transmission case.

DISASSEMBLY

Disassembly (Cont'd)

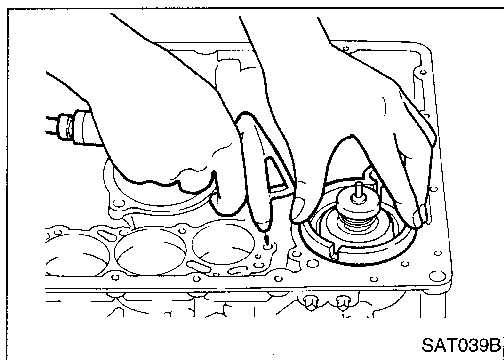


- b. Apply compressed air to oil hole until band servo piston comes out of transmission case.
 - **Hold piston with a rag and gradually direct air to oil hole.**
- c. Remove return springs.

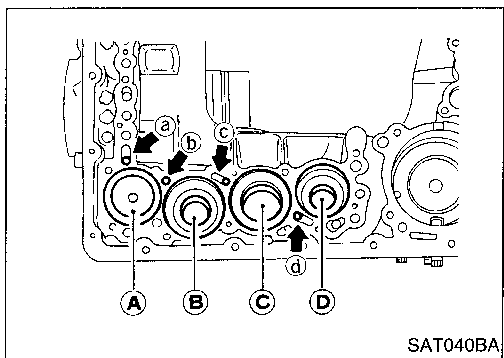


- d. Remove springs from accumulator pistons **(B)**, **(C)** and **(D)**.
- e. Apply compressed air to each oil hole until piston comes out.
 - **Hold piston with a rag and gradually direct air to oil hole.**

Identification of accumulator pistons	(A)	(B)	(C)	(D)
Identification of oil holes	(a)	(b)	(c)	(d)

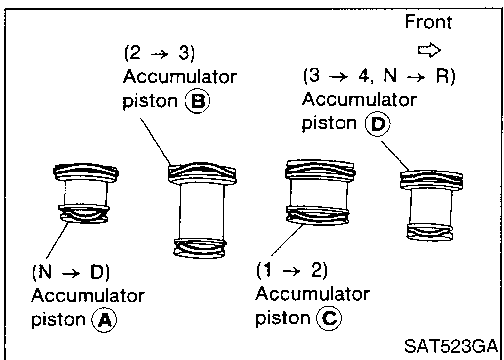


- f. Remove O-ring from each piston.

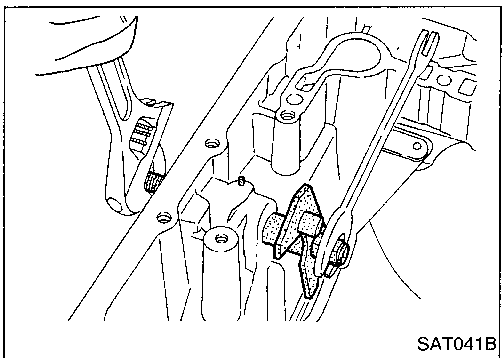

22. Remove manual shaft components, if necessary.

- a. Hold width across flats of manual shaft (outside the transmission case) and remove lock nut from shaft.

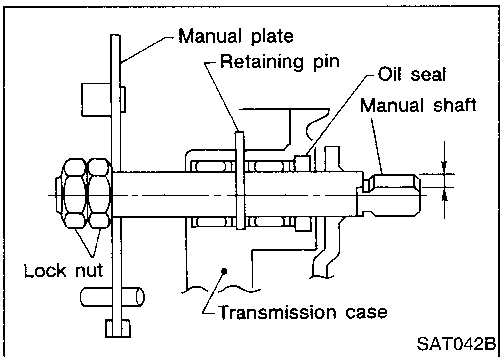


- b. Remove retaining pin from transmission case.


GI
MA
EM
LC
EC
FE
CL
MT
AT
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX

DISASSEMBLY


Disassembly (Cont'd)

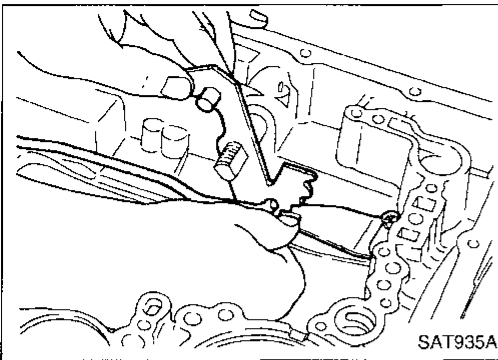


- c. While pushing detent spring down, remove manual plate and parking rod from transmission case.

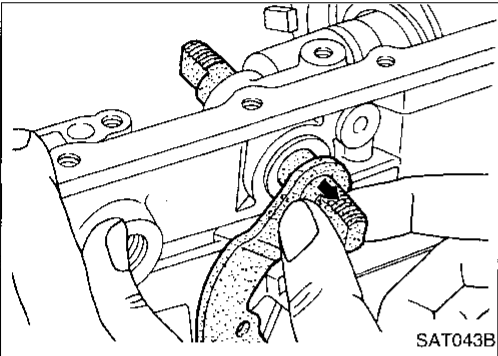

- d. Remove manual shaft from transmission case.


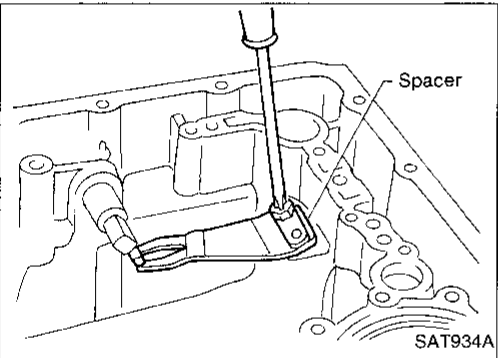


- e. Remove spacer and detent spring from transmission case.

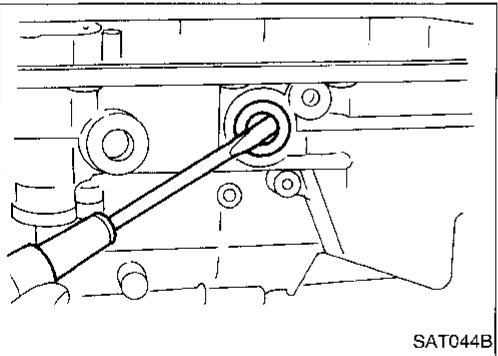


- f. Remove oil seal from transmission case.

Oil Pump

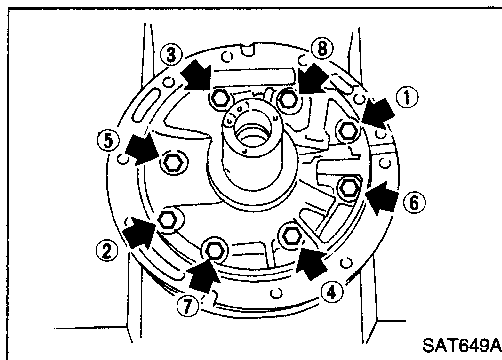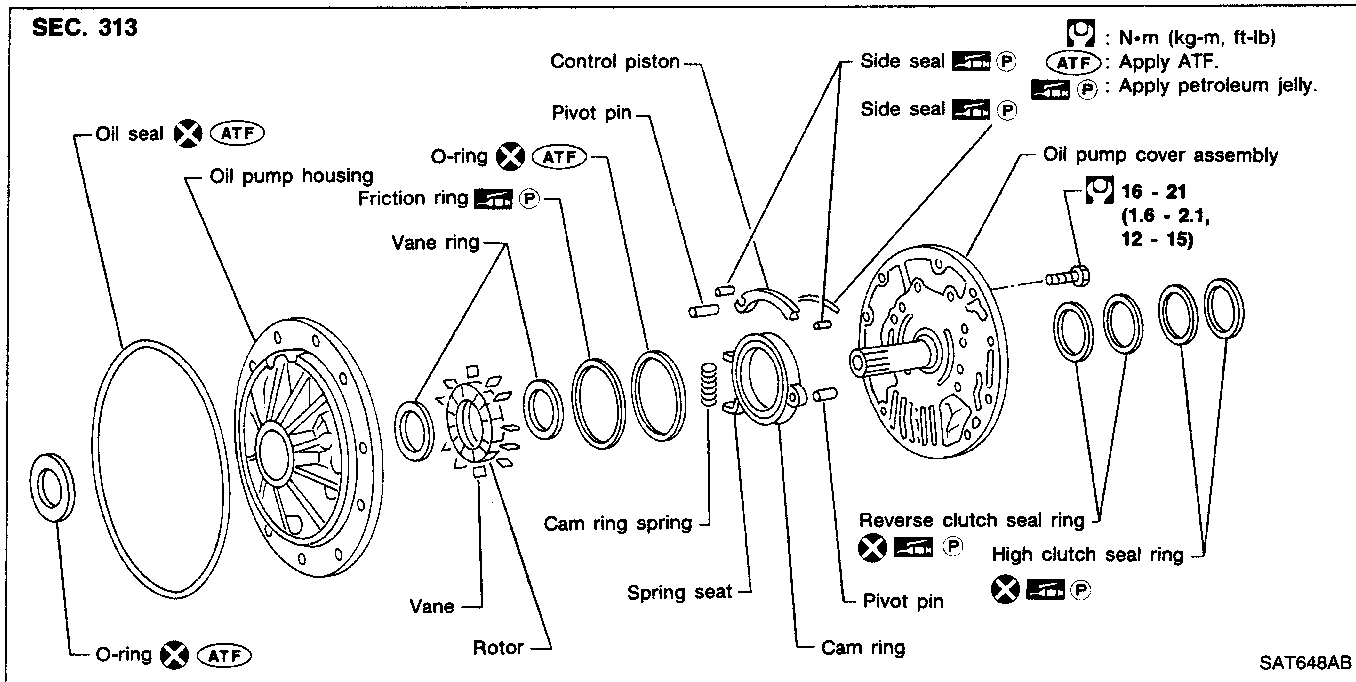


DISASSEMBLY

1. Loosen bolts in numerical order and remove oil pump cover.

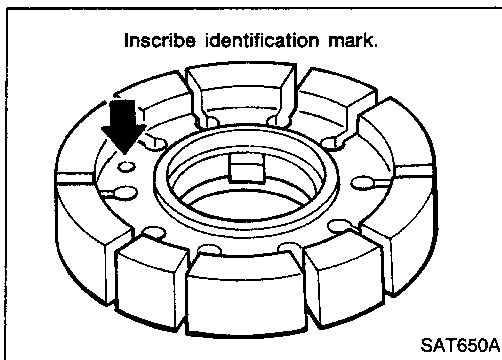

2. Remove rotor, vane rings and vanes.

- Inscribe a mark on back of rotor for identification of fore-aft direction when reassembling rotor. Then remove rotor.

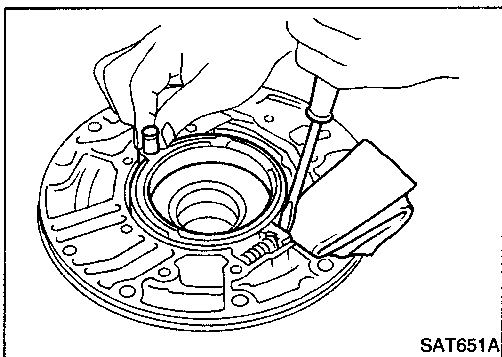


3. While pushing on cam ring remove pivot pin.

- Be careful not to scratch oil pump housing.


GI
MA
EM
LC
EC
FE
CL
MT
AT
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX

REPAIR FOR COMPONENT PARTS


Oil Pump (Cont'd)

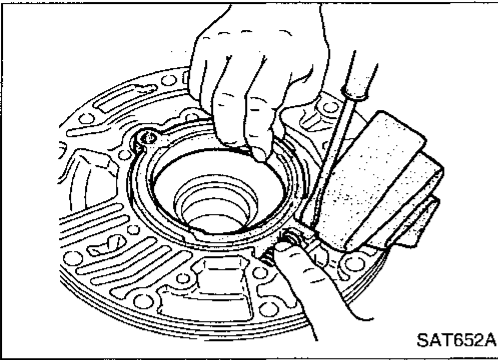


4. While holding cam ring and spring lift out cam ring spring.
 - **Be careful not to damage oil pump housing.**
 - **Hold cam ring spring to prevent it from jumping.**

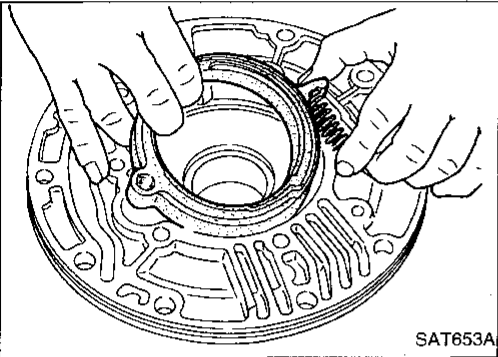


5. Remove cam ring and cam ring spring from oil pump housing.

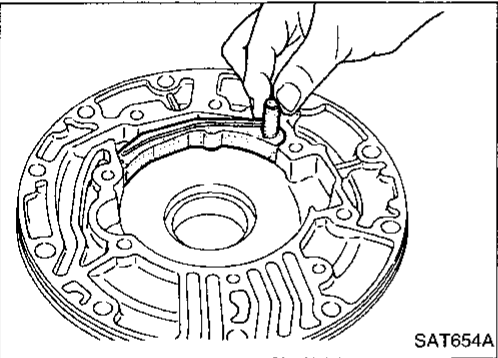

6. Remove pivot pin from control piston and remove control piston assembly.

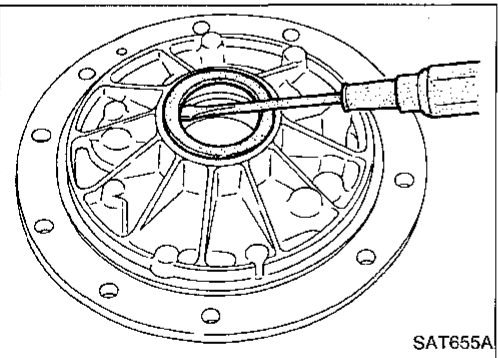

7. Remove oil seal from oil pump housing.
 - **Be careful not to scratch oil pump housing.**

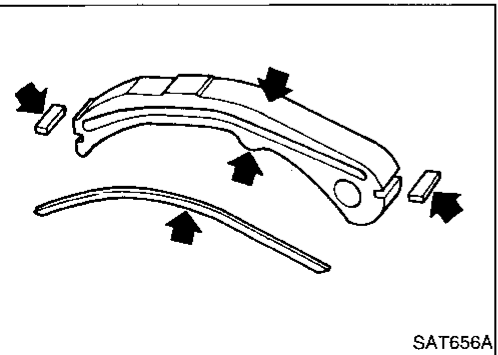


INSPECTION

Oil pump cover, rotor, vanes, control piston, side seals, cam ring and friction ring

- Check for wear or damage.

REPAIR FOR COMPONENT PARTS

Oil Pump (Cont'd)

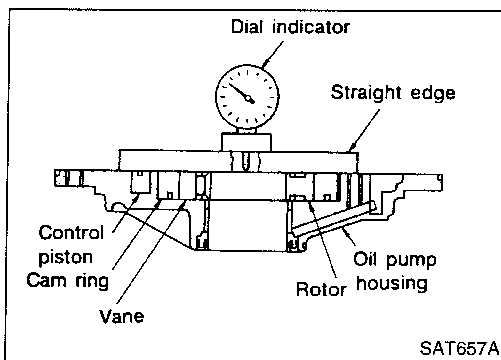

Side clearances

- Measure side clearances between end of oil pump housing and cam ring, rotor, vanes and control piston. Measure in at least four places along their circumferences. Maximum measured values should be within specified positions.

- **Before measurement, check that friction rings, O-ring, control piston side seals and cam ring spring are removed.**

Standard clearance (Cam ring, rotor, vanes and control piston):

Refer to SDS, AT-204.

- If not within standard clearance, replace oil pump assembly except oil pump cover assembly.

Seal ring clearance

- Measure clearance between seal ring and ring groove.


Standard clearance:

0.10 - 0.25 mm (0.0039 - 0.0098 in)

Wear limit:



0.25 mm (0.0098 in)

- If not within wear limit, replace oil pump cover assembly.

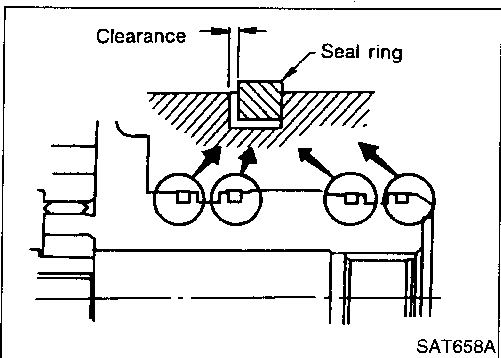


ASSEMBLY

1. Drive oil seal into oil pump housing.
 - **Apply ATF to outer periphery and lip surface.**

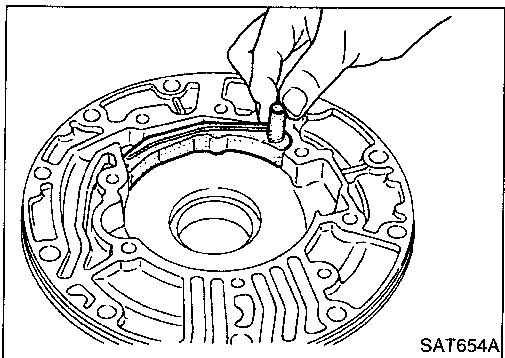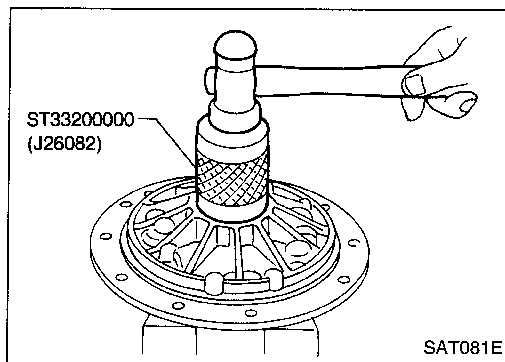


2. Install cam ring in oil pump housing by the following steps.
 - a. Install side seal on control piston.
 - **Pay attention to its direction — Black surface goes toward control piston.**
 - **Apply petroleum jelly to side seal.**
 - b. Install control piston on oil pump.

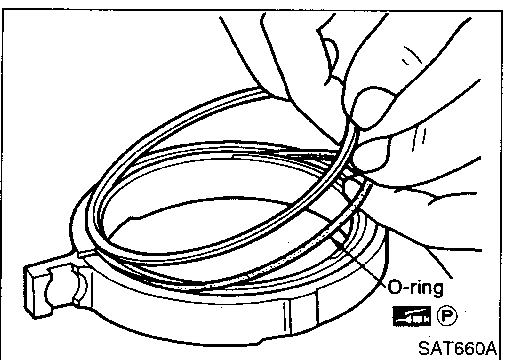


- c. Install O-ring and friction ring on cam ring.
 - **Apply petroleum jelly to O-ring.**

REPAIR FOR COMPONENT PARTS


Oil Pump (Cont'd)

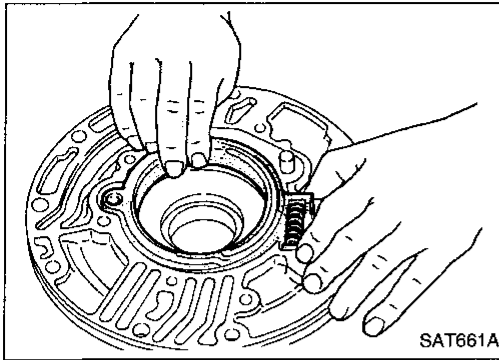


- d. Assemble cam ring, cam ring spring and spring seat. Install spring by pushing it against pump housing.

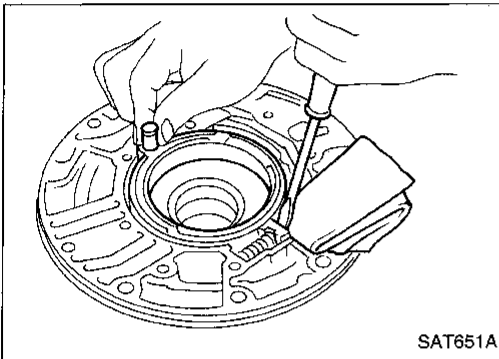


- e. While pushing on cam ring install pivot pin.

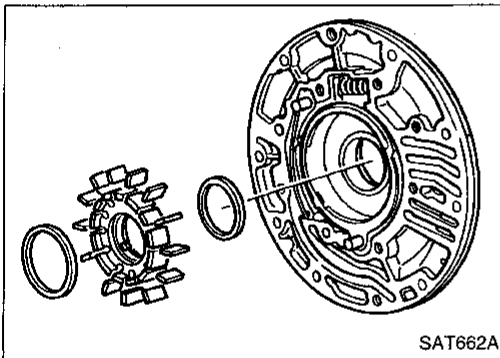

3. Install rotor, vanes and vane rings.
 • **Pay attention to direction of rotor.**

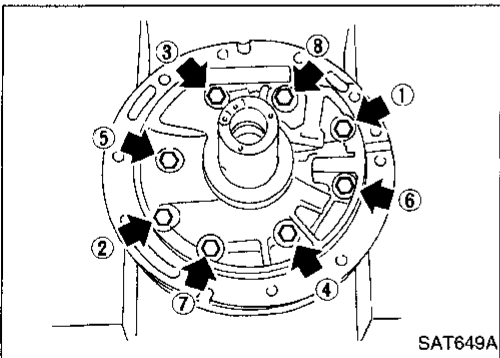


4. Install oil pump housing and oil pump cover.
 a. Wrap masking tape around splines of oil pump cover assembly to protect seal. Position oil pump cover assembly in oil pump housing assembly, then remove masking tape.
 b. Tighten bolts in a criss-cross pattern.

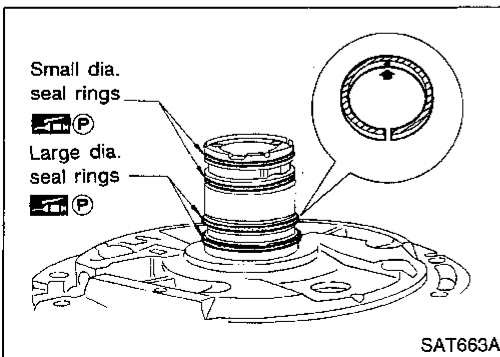

5. Install new seal rings carefully after packing ring grooves with petroleum jelly. Press rings down into jelly to a close fit.
 • **Seal rings come in two different diameters. Check fit carefully in each groove.**
 Small dia. seal ring:
 No mark
 Large dia. seal ring:
 Yellow mark in area shown by arrow
 • **Do not spread gap of seal ring excessively while installing. It may deform ring.**

Control Valve Assembly

SEC. 317

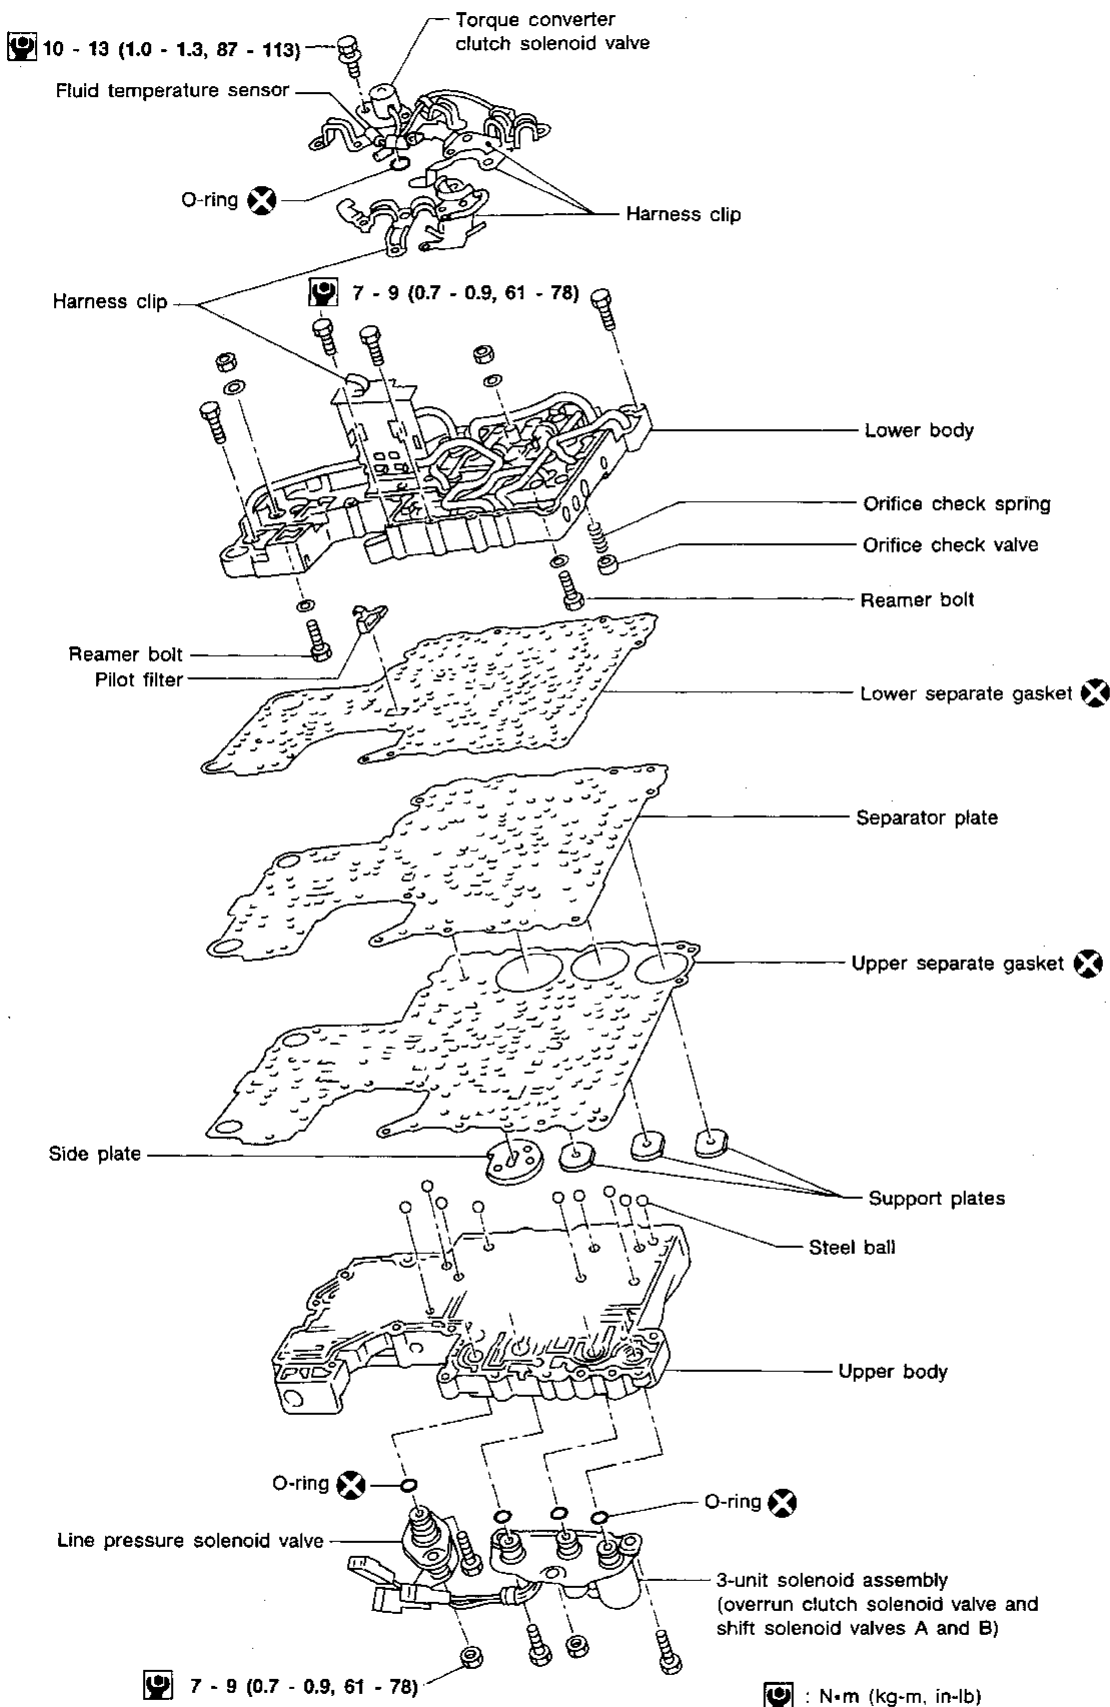


GI
MA
EM
LC
EC
FE
CL
MT
AT
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX


REPAIR FOR COMPONENT PARTS

Control Valve Assembly (Cont'd)


DISASSEMBLY

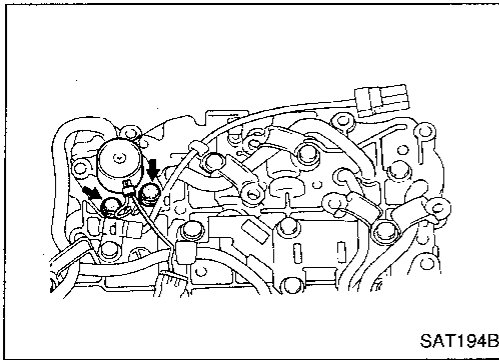


1. Remove solenoids.
 - a. Remove torque converter clutch solenoid valve and side plate from lower body.
 - b. Remove O-ring from solenoid.

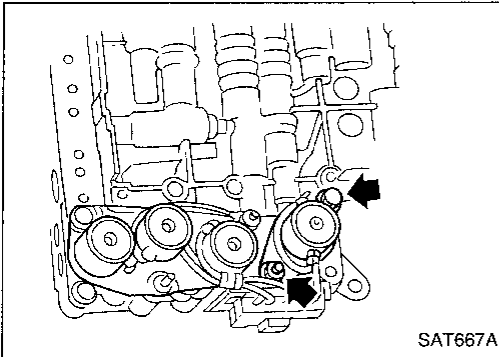


- c. Remove line pressure solenoid valve from upper body.
 - d. Remove O-ring from solenoid.

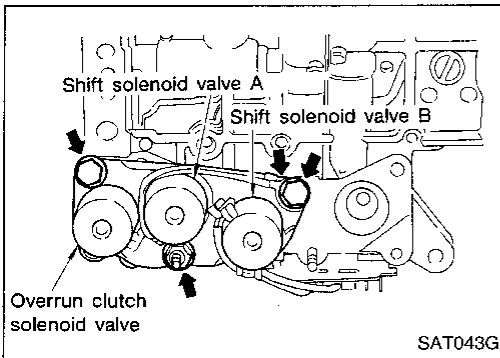

- e. Remove 3-unit solenoid assembly from upper body.
 - f. Remove O-rings from solenoids.

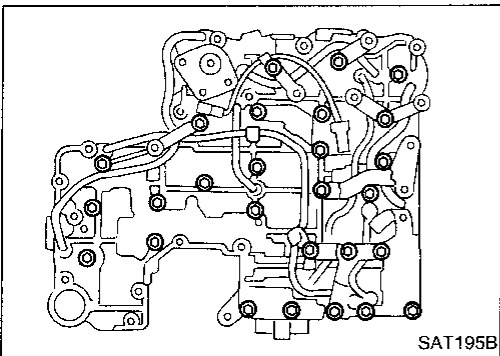

2. Disassemble upper and lower bodies.
 - a. Place upper body facedown, and remove bolts, reamer bolts and support plates.
 - b. Remove lower body, separator plate and separate gasket as a unit from upper body.
 - **Be careful not to drop pilot filter, orifice check valve, spring and steel balls.**





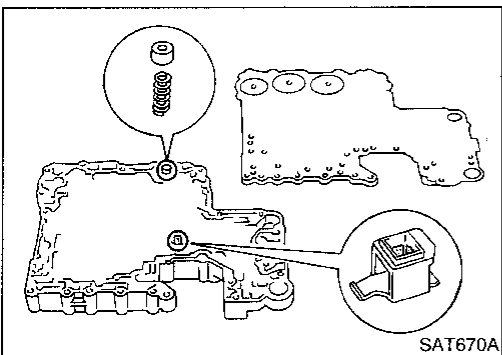


- c. Place lower body facedown, and remove separate gasket and separator plate.
 - d. Remove pilot filter, orifice check valve and orifice check spring.

REPAIR FOR COMPONENT PARTS

Control Valve Assembly (Cont'd)

- e. Check to see that steel balls are properly positioned in upper body. Then remove them from upper body.

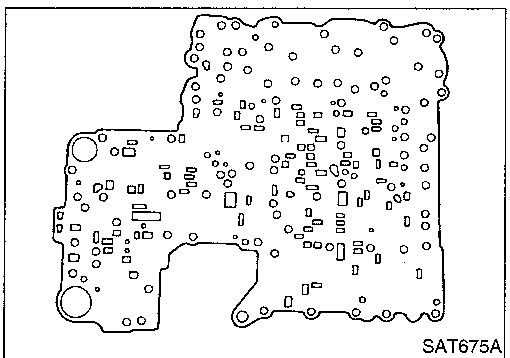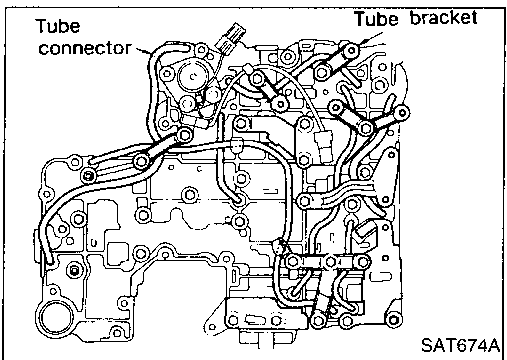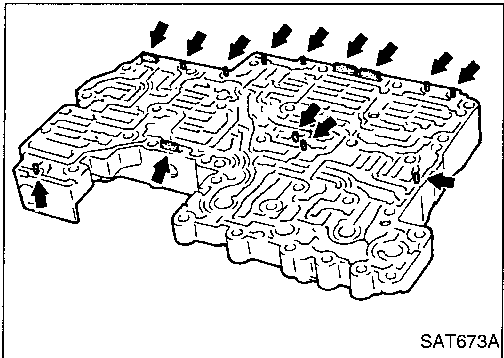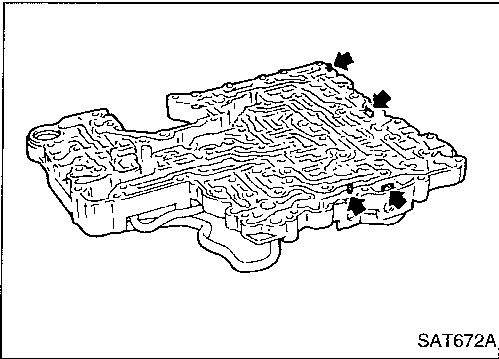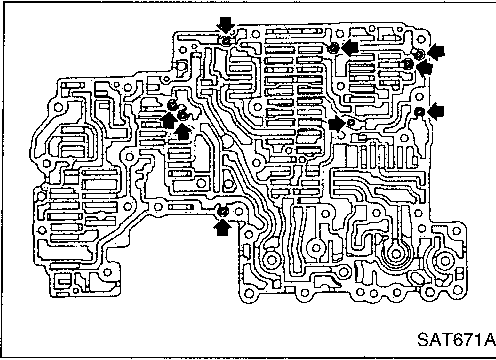

INSPECTION

Lower and upper bodies

- Check to see that there are pins and retainer plates in lower body.

- Check to see that there are pins and retainer plates in upper body.

- **Be careful not to lose these parts.**

- Check to make sure that oil circuits are clean and free from damage.

- Check tube brackets and tube connectors for damage.

Separator plates

- Make sure that separator plate is free of damage and not deformed and oil holes are clean.

GI

MA

EM

LC

EC

FE

CL

MT

AT

PD

FA

RA

BR

ST

RS

BT

HA

EL


IDX

REPAIR FOR COMPONENT PARTS

Control Valve Assembly (Cont'd)

Pilot filter


- Check to make sure that filter is not clogged or damaged.

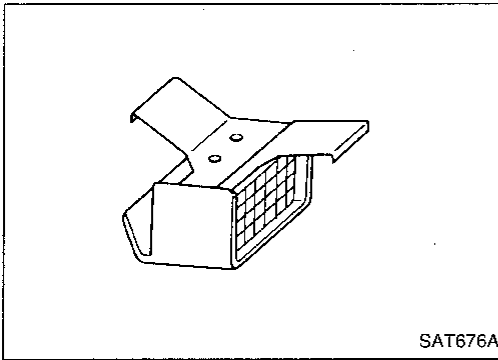

SAT676A

Torque converter clutch solenoid valve


- Check that filter is not clogged or damaged.
- Measure resistance. Refer to "Electrical Components Inspection", AT-101.

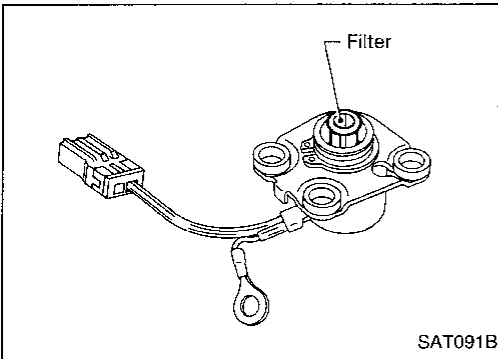

SAT091B

Line pressure solenoid valve


- Check that filter is not clogged or damaged.
- Measure resistance. Refer to "Electrical Components Inspection", AT-101.

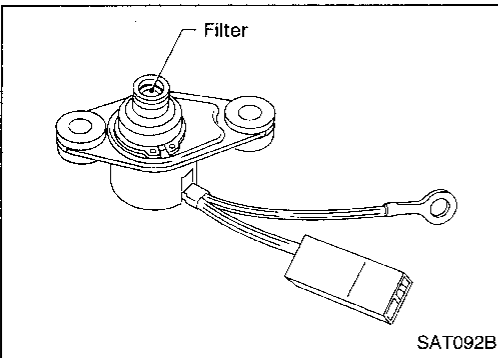

SAT092B

3-unit solenoid assembly (Overrun clutch solenoid valve and shift solenoid valves A and B)


- Measure resistance of each solenoid. Refer to "Electrical Components Inspection", AT-101.

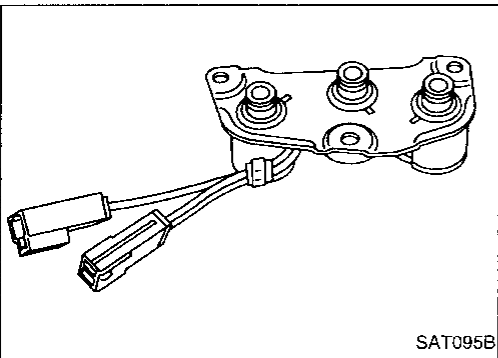

SAT095B

Fluid temperature sensor

- Measure resistance. Refer to "Electrical Components Inspection", AT-101.

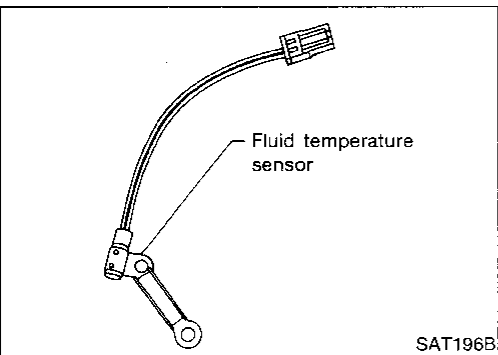


SAT196B

REPAIR FOR COMPONENT PARTS

Control Valve Assembly (Cont'd)

ASSEMBLY

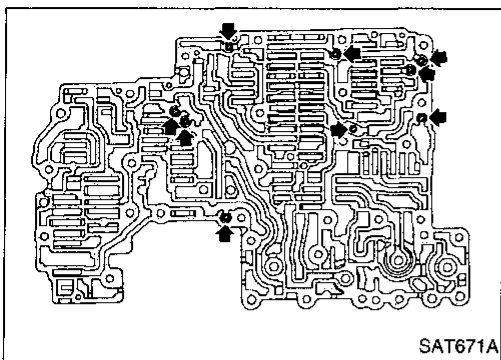

1. Install upper and lower bodies.
 - a. Place oil circuit of upper body face up. Install steel balls in their proper positions.

GI

MA

EM

LC

EC

FE

CL

MT

AT

PD

FA

RA

BR

ST


RS

BT


HA

EL


IDX

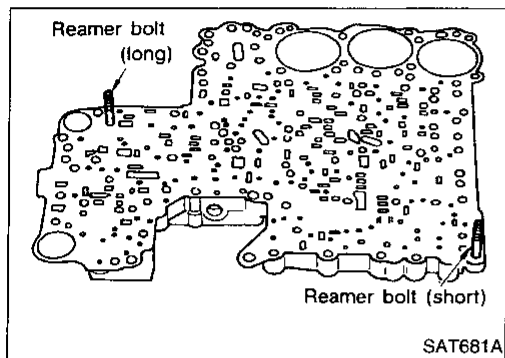

- b. Install reamer bolts from bottom of upper body and install separate gaskets.

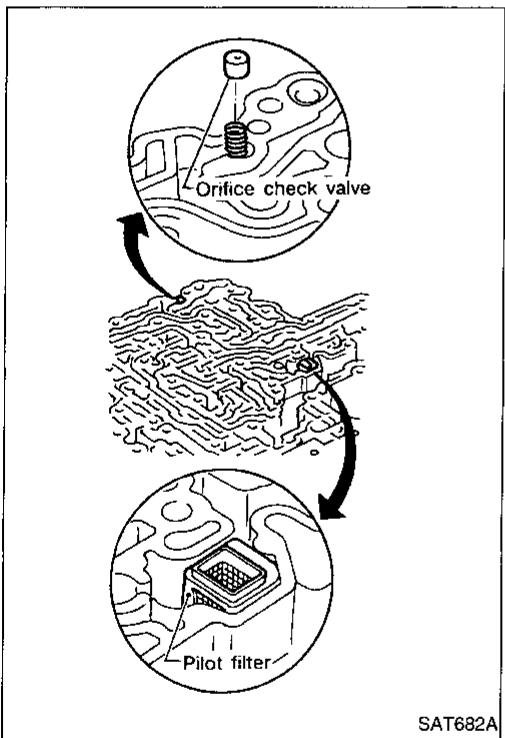


- c. Place oil circuit of lower body face up. Install orifice check spring, orifice check valve and pilot filter.

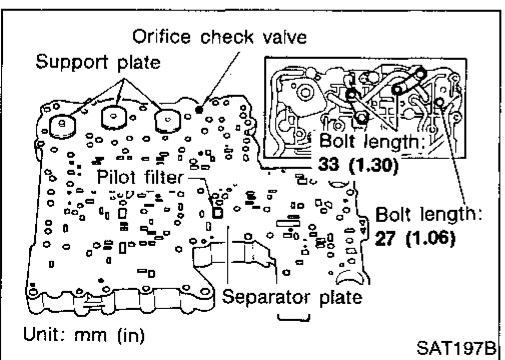


- d. Install lower separate gaskets and separator plates on lower body.
 - e. Install and temporarily tighten support plates, fluid temperature sensor and tube brackets.

REPAIR FOR COMPONENT PARTS

Control Valve Assembly (Cont'd)

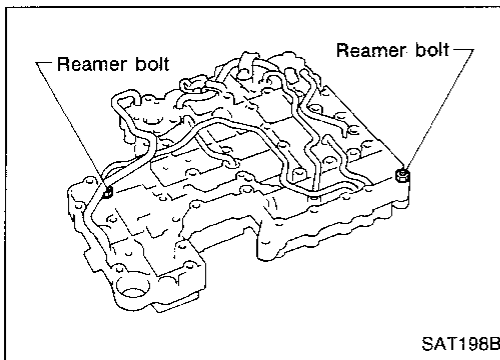


- f. Temporarily assemble lower and upper bodies, using reamer bolt as a guide.
- **Be careful not to dislocate or drop steel balls, orifice check spring, orifice check valve and pilot filter.**

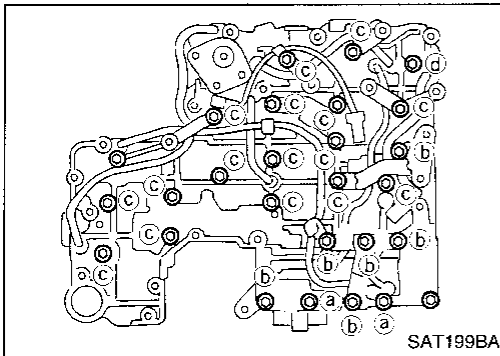


- g. Install and temporarily tighten bolts and tube brackets in their proper locations.

Bolt length and location:


Bolt symbol		(a)	(b)	(c)	(d)
Bolt length	mm (in)	70 (2.76)	50 (1.97)	33 (1.30)	27 (1.06)

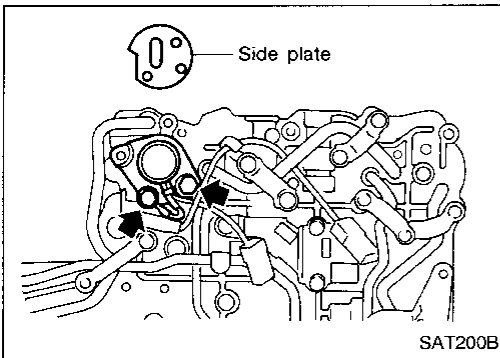

2. Install solenoids.
- a. Attach O-ring and install torque converter clutch solenoid valve and side plates onto lower body.

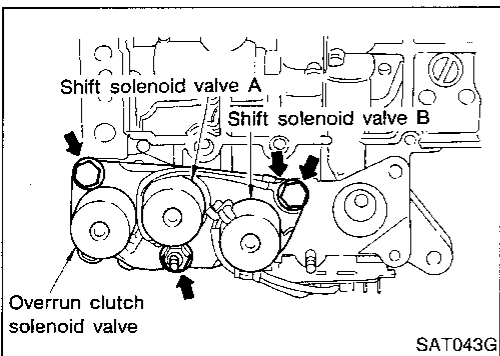


- b. Attach O-rings and install 3-unit solenoids assembly onto upper body.

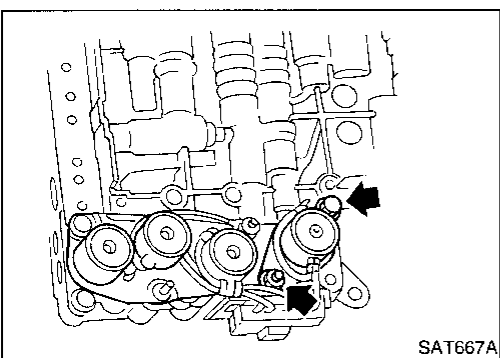

- c. Attach O-ring and install line pressure solenoid valve onto upper body.
3. Tighten all bolts.

Control Valve Upper Body

SEC. 317

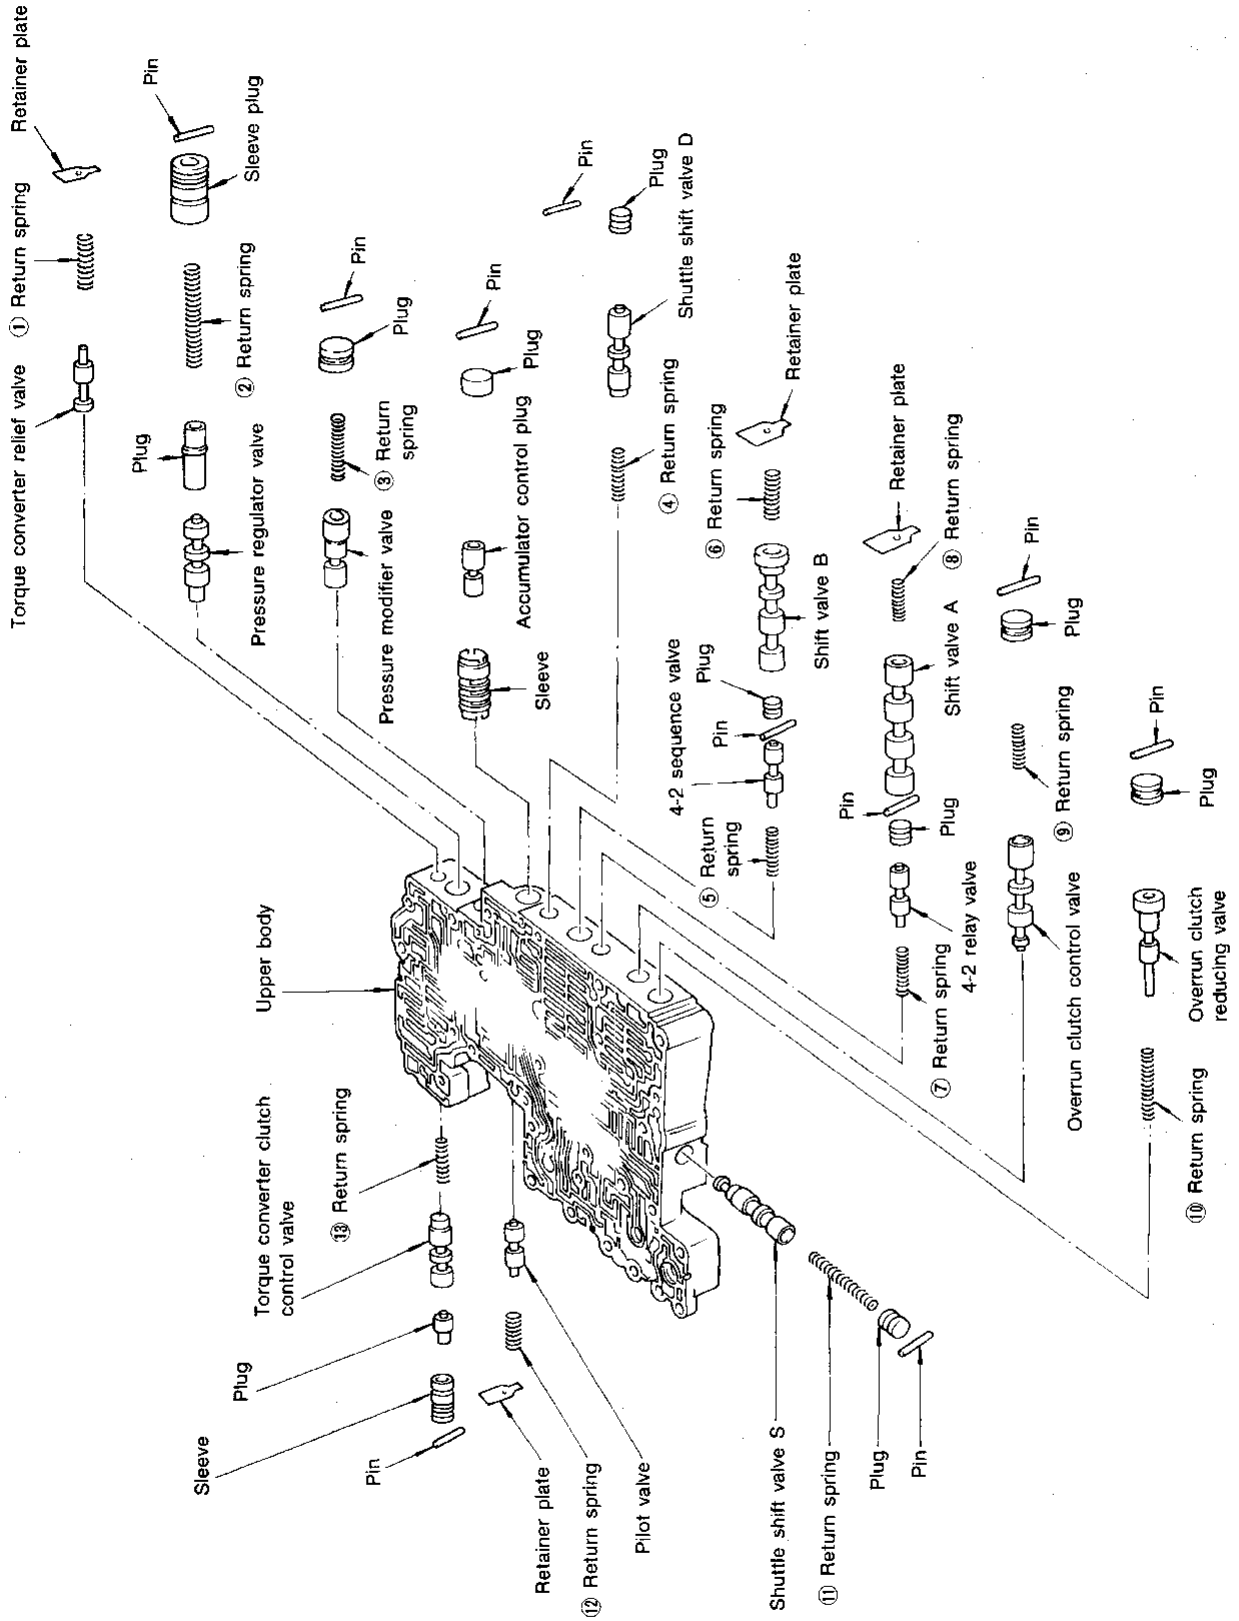

GI
MA
EM
LC
EC
FE
CL
MT
AT
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX


Apply ATF to all components before their installation.
Numbers preceding valve springs correspond with those shown in SDS on page AT-202.

SAT837BA


REPAIR FOR COMPONENT PARTS

Control Valve Upper Body (Cont'd)


DISASSEMBLY

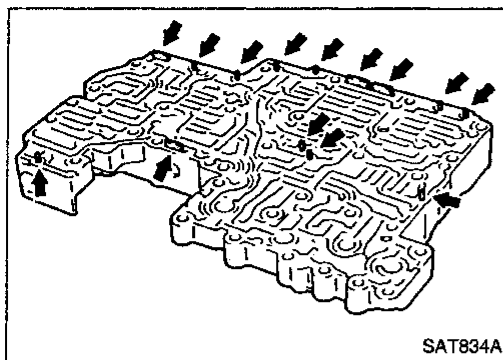


1. Remove valves at parallel pins.
 - Do not use a magnetic hand.

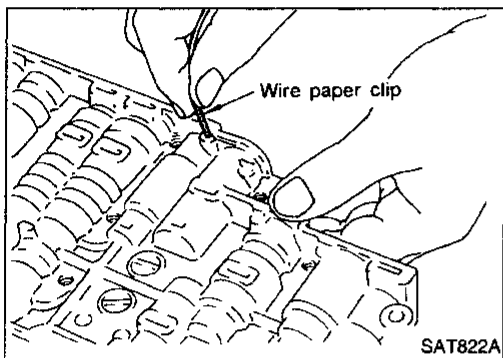


- a. Use a wire paper clip to push out parallel pins.

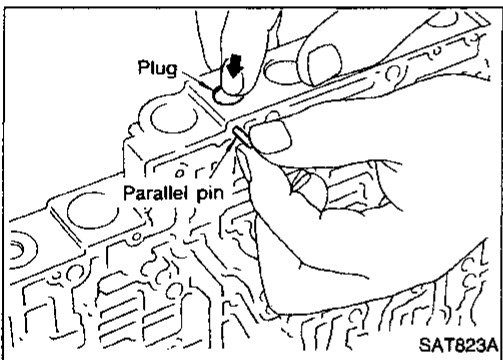

- b. Remove parallel pins while pressing their corresponding plugs and sleeves.
 - **Remove plug slowly to prevent internal parts from jumping out.**

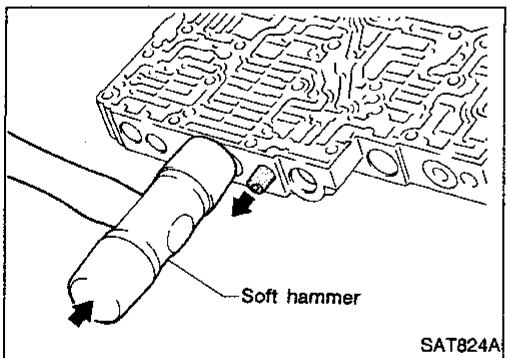


- c. Place mating surface of valve facedown, and remove internal parts.
 - **If a valve is hard to remove, place valve body facedown and lightly tap it with a soft hammer.**
 - **Be careful not to drop or damage valves and sleeves.**

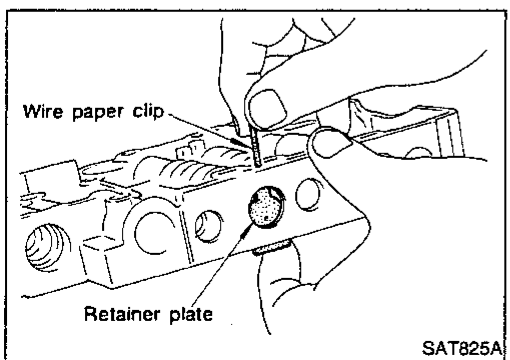

2. Remove valves at retainer plates.
 - a. Pry out retainer plate with wire paper clip.

REPAIR FOR COMPONENT PARTS

Control Valve Upper Body (Cont'd)

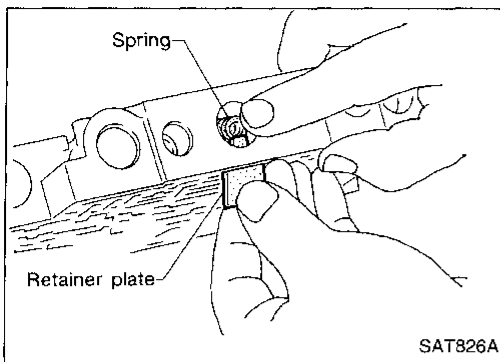

b. Remove retainer plates while holding spring.

GI

MA

EM

LC

EC

FE

CL

MT

AT

PD

FA

RA

BR

ST


RS

BT

HA


EL

IDX

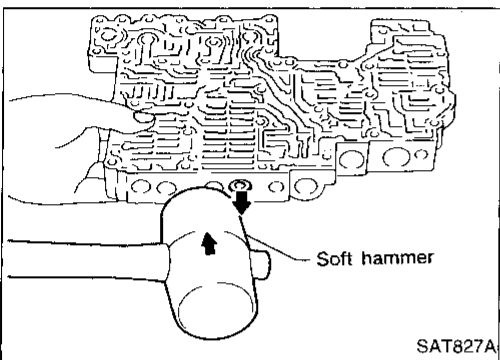


c. Place mating surface of valve facedown, and remove internal parts.

- If a valve is hard to remove, lightly tap valve body with a soft hammer.
- Be careful not to drop or damage valves, sleeves, etc.

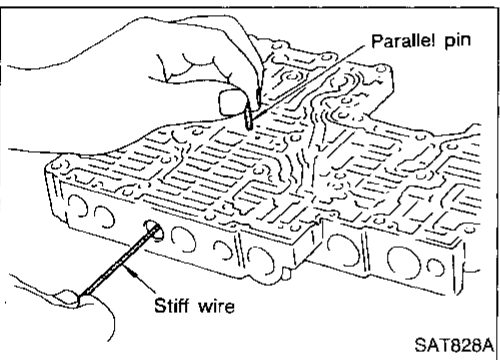

• 4-2 sequence valve and relay valve are located far back in upper body. If they are hard to remove, carefully push them out using stiff wire.

- Be careful not to scratch sliding surface of valve with wire.

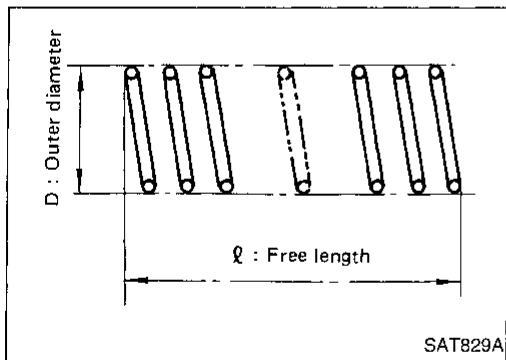

INSPECTION

Valve springs

- Measure free length and outer diameter of each valve spring. Also check for damage or deformation.


Inspection standard:

Refer to SDS, AT-202.

- Replace valve springs if deformed or fatigued.

Control valves

- Check sliding surfaces of valves, sleeves and plugs.

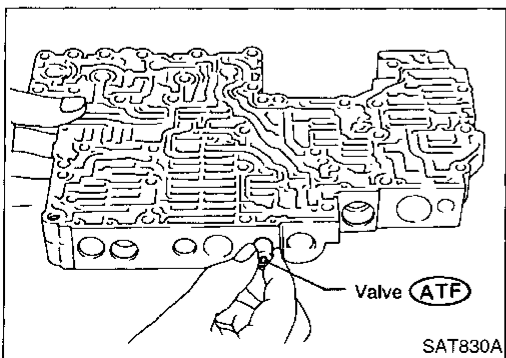


ASSEMBLY

1. Lubricate the control valve body and all valves with ATF. Install control valves by sliding them carefully into their bores.


- Be careful not to scratch or damage valve body.

REPAIR FOR COMPONENT PARTS

Control Valve Upper Body (Cont'd)

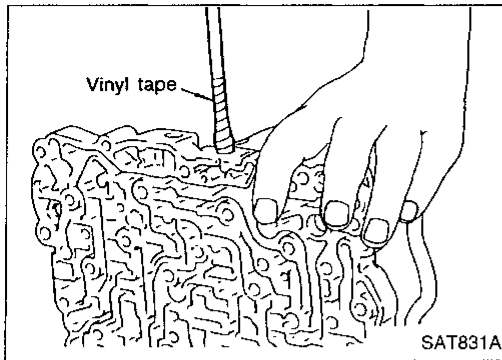


- Wrap a small screwdriver with vinyl tape and use it to insert the valves into proper position.

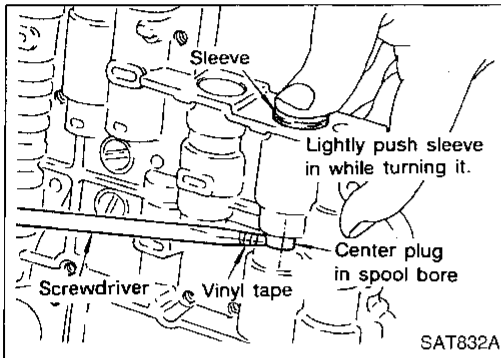


Pressure regulator valve

- If pressure regulator plug is not centered properly, sleeve cannot be inserted into bore in upper body. If this happens, use vinyl tape wrapped screwdriver to center sleeve until it can be inserted.
- Turn sleeve slightly while installing.

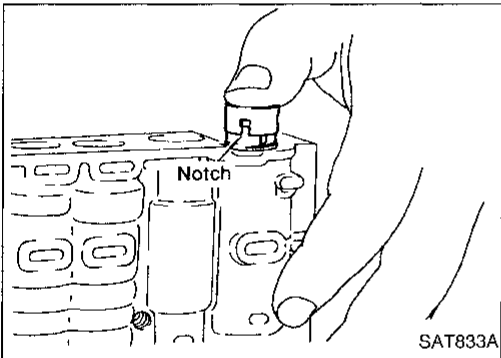


Accumulator control plug

- Align protrusion of accumulator control sleeve with notch in plug.
- Align parallel pin groove in plug with parallel pin, and install accumulator control valve.

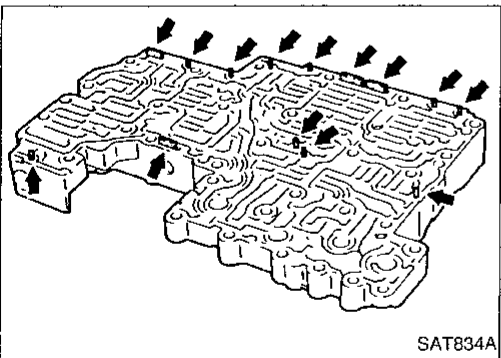

2. Install parallel pins and retainer plates.

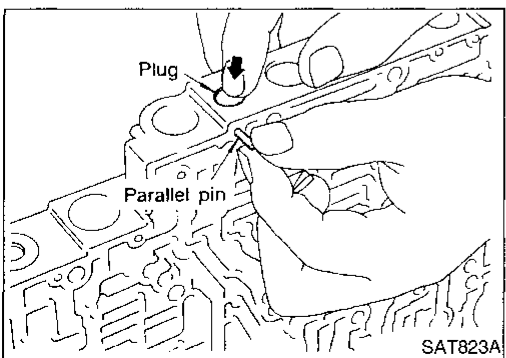



- While pushing plug, install parallel pin.

REPAIR FOR COMPONENT PARTS

Control Valve Upper Body (Cont'd)

4-2 sequence valve and relay valve

- Push 4-2 sequence valve and relay valve with wire wrapped in vinyl tape to prevent scratching valve body. Install parallel pins.

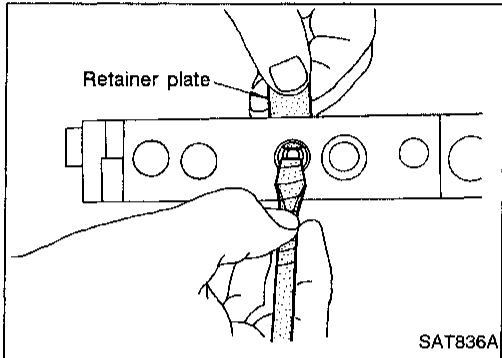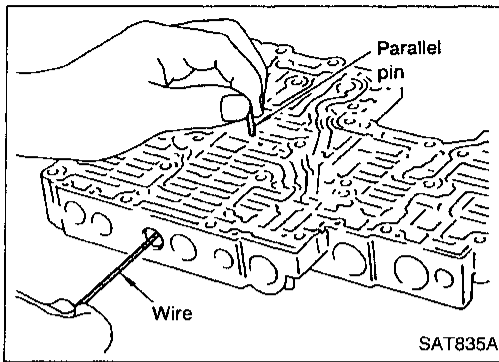

- Insert retainer plate while pushing spring.

GI

MA

EM

LC

EC

FE

CL

MT

AT

PD

FA

RA

BR

ST

RS


BT

HA

EL

IDX

Control Valve Lower Body

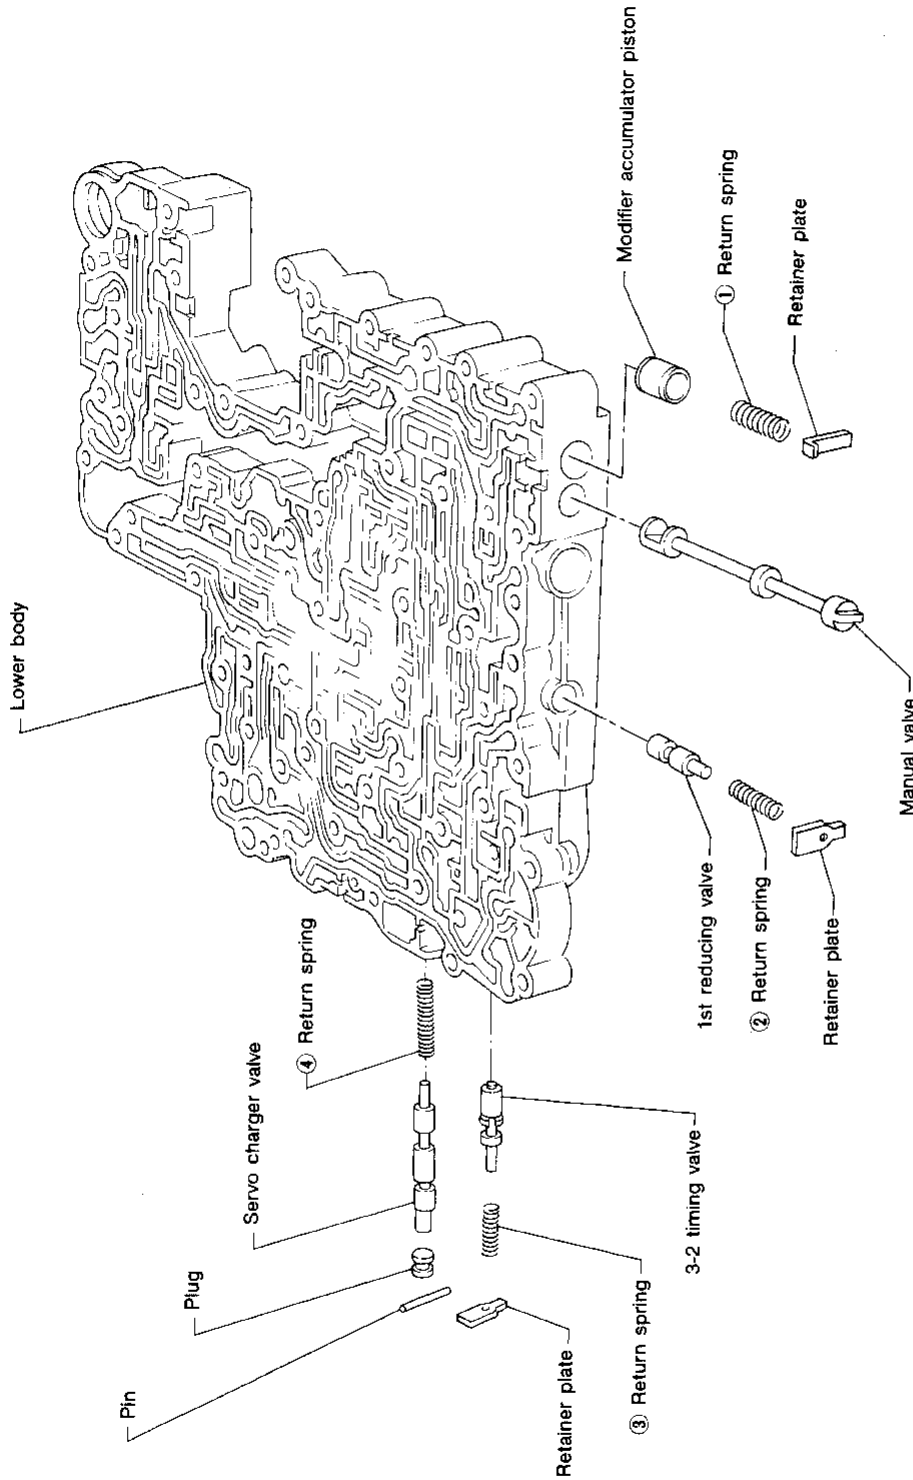

SEC. 317




Apply ATF to all components before their installation.
 Numbers preceding valve springs correspond with those shown in SDS on page AT-202.

REPAIR FOR COMPONENT PARTS

Control Valve Lower Body (Cont'd)

DISASSEMBLY

1. Remove valves at parallel pins.
 2. Remove valves at retainer plates.
- For removal procedures, refer to "DISASSEMBLY" of Control Valve Upper Body.

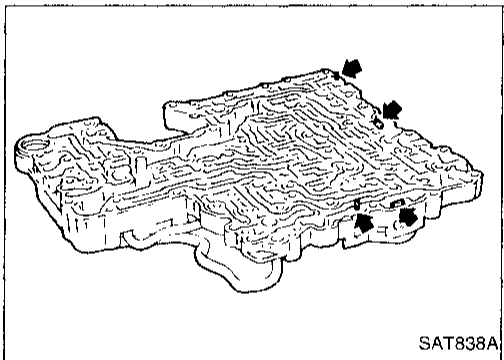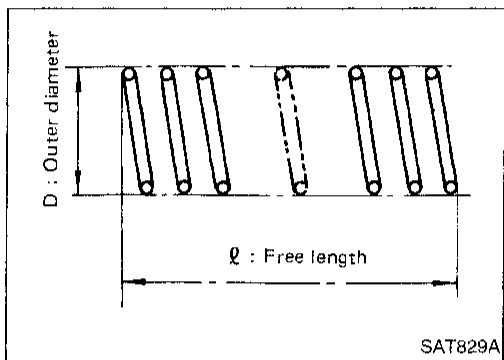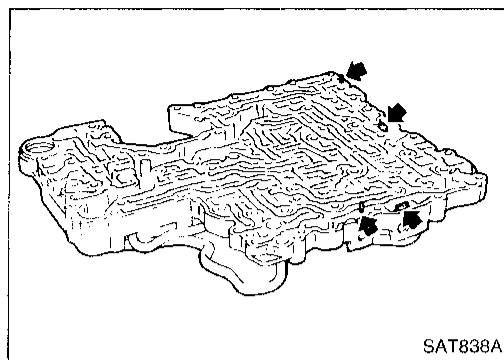

INSPECTION

Valve springs

- Check each valve spring for damage or deformation. Also measure free length and outer diameter.

Inspection standard:

Refer to SDS, AT-202.

- Replace valve springs if deformed or fatigued.

Control valves

- Check sliding surfaces of control valves, sleeves and plugs for damage.

ASSEMBLY

- Install control valves.
- For installation procedures, refer to "ASSEMBLY" of Control Valve Upper Body, AT-153.

GI

MA

EM

LC

EC

FE

CL

MT

AT

PD

FA

RA

BR

ST

RS

BT

HA


EL

IDX


Reverse Clutch

SEC. 315


(ATF) : Apply ATF.
 ★ : Select with proper thickness.

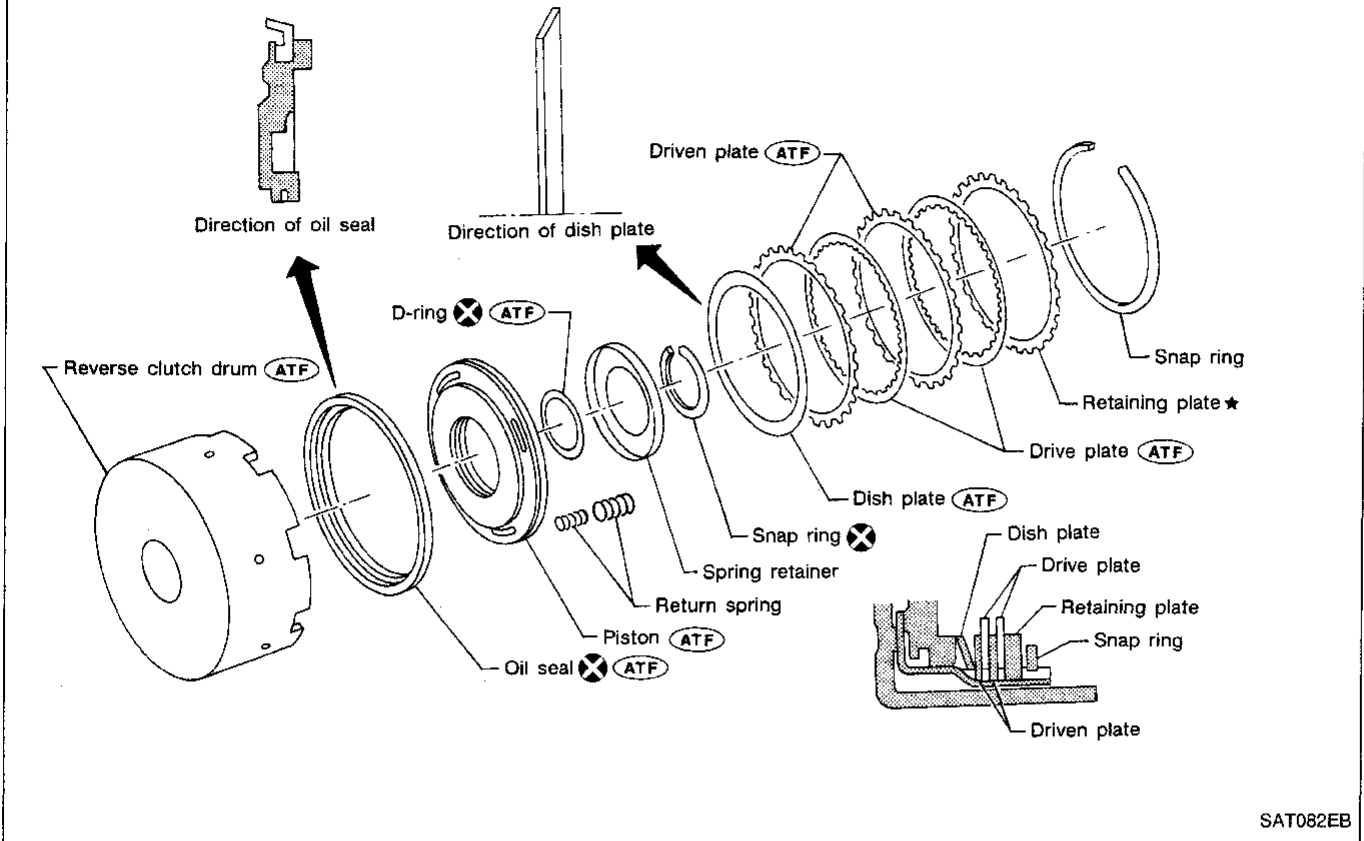

SAT082EB

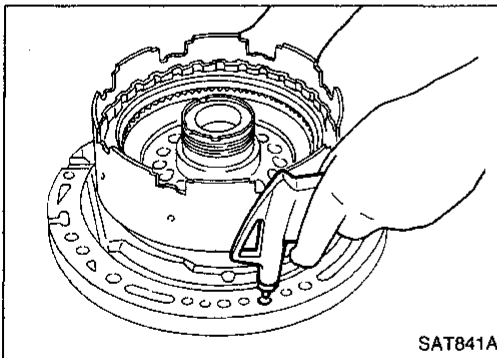

SAT841A

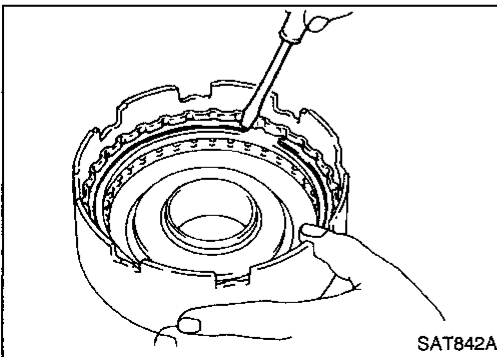


SAT842A

DISASSEMBLY

1. Check operation of reverse clutch.
 - a. Install seal ring onto oil pump cover and install reverse clutch. Apply compressed air to oil hole.
 - b. Check to see that retaining plate moves to snap ring.
 - c. If retaining plate does not contact snap ring,
 - D-ring might be damaged.
 - Oil seal might be damaged.
 - Fluid might be leaking past piston check ball.
2. Remove drive plates, driven plates, retaining plate, dish plate and snap ring.

REPAIR FOR COMPONENT PARTS

Reverse Clutch (Cont'd)

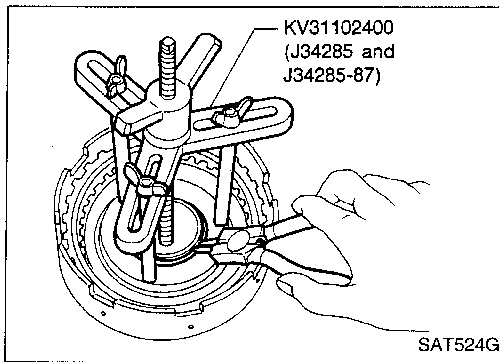

3. Remove snap ring from clutch drum while compressing clutch springs.
 - **Do not expand snap ring excessively.**
4. Remove spring retainer and return spring.

GI

MA

EM

LC

EC

FE

CL

MT

AT

PD

FA

RA

BR

ST


RS

BT

HA

EL

IDX

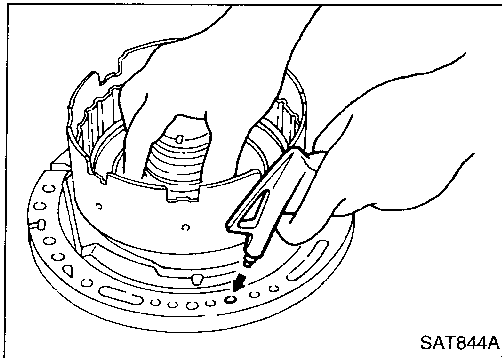


5. Install seal ring onto oil pump cover and install reverse clutch drum. While holding piston, gradually apply compressed air to oil hole until piston is removed.
 - **Do not apply compressed air abruptly.**
6. Remove D-ring and oil seal from piston.

INSPECTION

Reverse clutch snap ring and spring retainer

- Check for deformation, fatigue or damage.

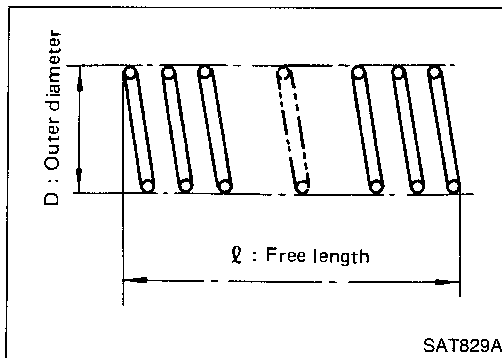


Reverse clutch return springs

- Check for deformation or damage. Also measure free length and outside diameter.

Inspection standard:

Refer to SDS, AT-202.

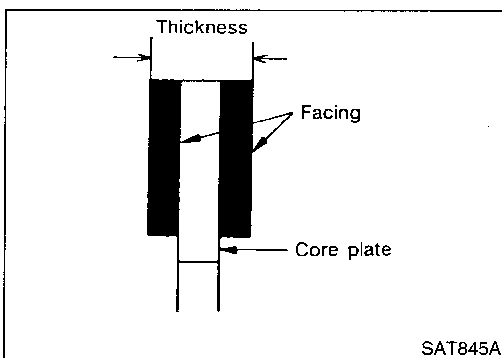

Reverse clutch drive plates

- Check facing for burns, cracks or damage.
- Measure thickness of facing.

Thickness of drive plate:

Standard value: 2.0 mm (0.079 in)

Wear limit: 1.8 mm (0.071 in)

- If not within wear limit, replace.

Reverse clutch dish plate



- Check for deformation or damage.

REPAIR FOR COMPONENT PARTS

Reverse Clutch (Cont'd)

Reverse clutch piston


- Shake piston to assure that balls are not seized.
- Apply compressed air to check ball oil hole opposite the return spring. Make sure there is no air leakage.
- Also apply compressed air to oil hole on return spring side to assure that air leaks past ball.

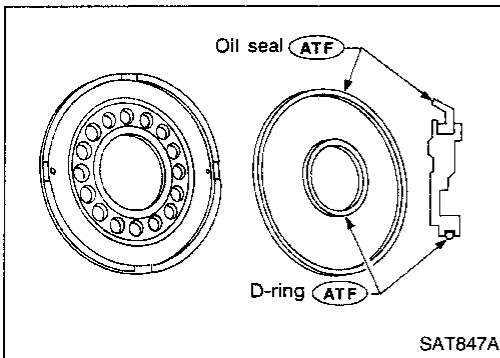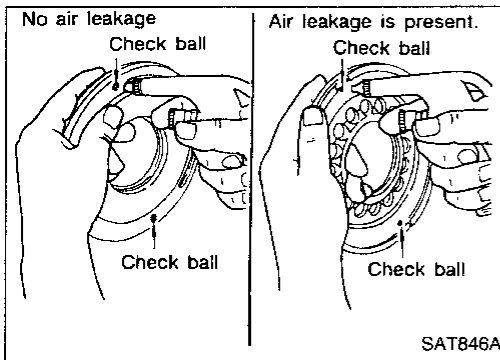

ASSEMBLY


1. Install D-ring and oil seal on piston.

- Apply ATF to both parts.

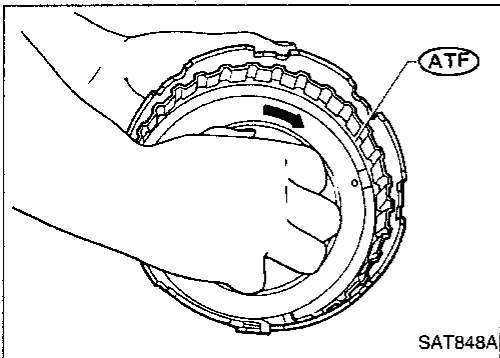


2. Install piston assembly by turning it slowly and evenly.

- Apply ATF to inner surface of drum.

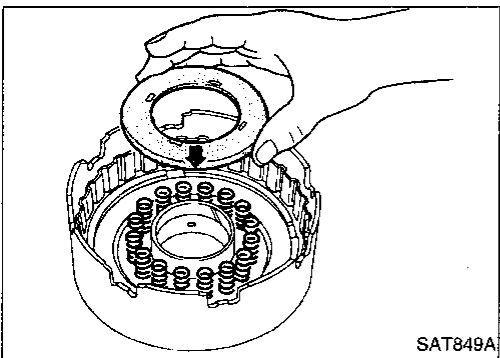

3. Install return springs and spring retainer.




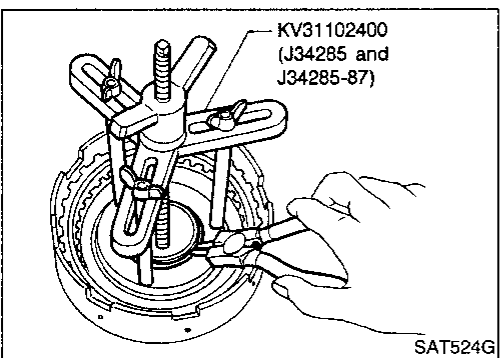


4. Install snap ring while compressing clutch springs.

REPAIR FOR COMPONENT PARTS

Reverse Clutch (Cont'd)

- Do not align snap ring gap with spring retainer stopper.

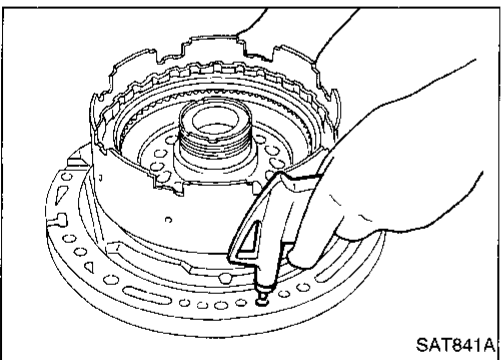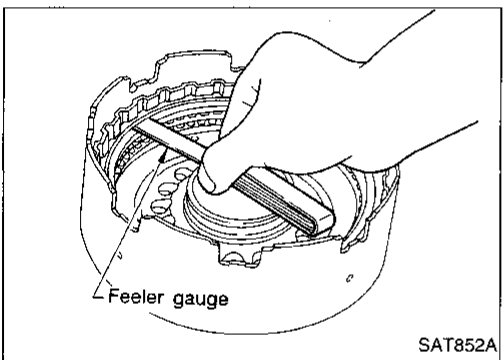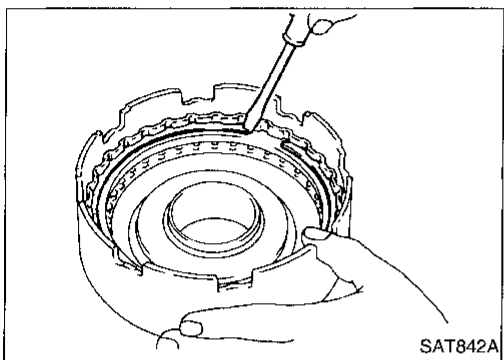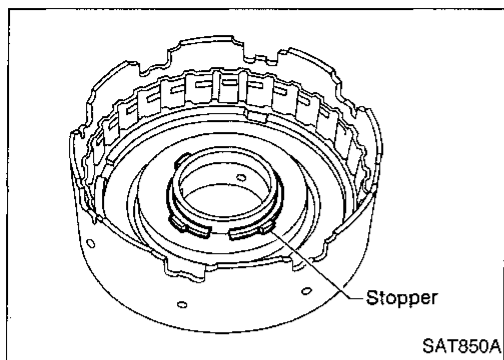

5. Install drive plates, driven plates, retaining plate and dish plate.
6. Install snap ring.

7. Measure clearance between retaining plate and snap ring. If not within allowable limit, select proper retaining plate.

Specified clearance:

Standard

0.5 - 0.8 mm (0.020 - 0.031 in)

Allowable limit

1.2 mm (0.047 in)

Retaining plate:

Refer to SDS, AT-203.

8. Check operation of reverse clutch.
Refer to "DISASSEMBLY" of Reverse Clutch, AT-158.

GI

MA

EM

LC

EC

FE

CL

MT

AT

PD

FA

RA

BR

ST

RS

BT


HA

EL

IDX


High Clutch

SEC. 315

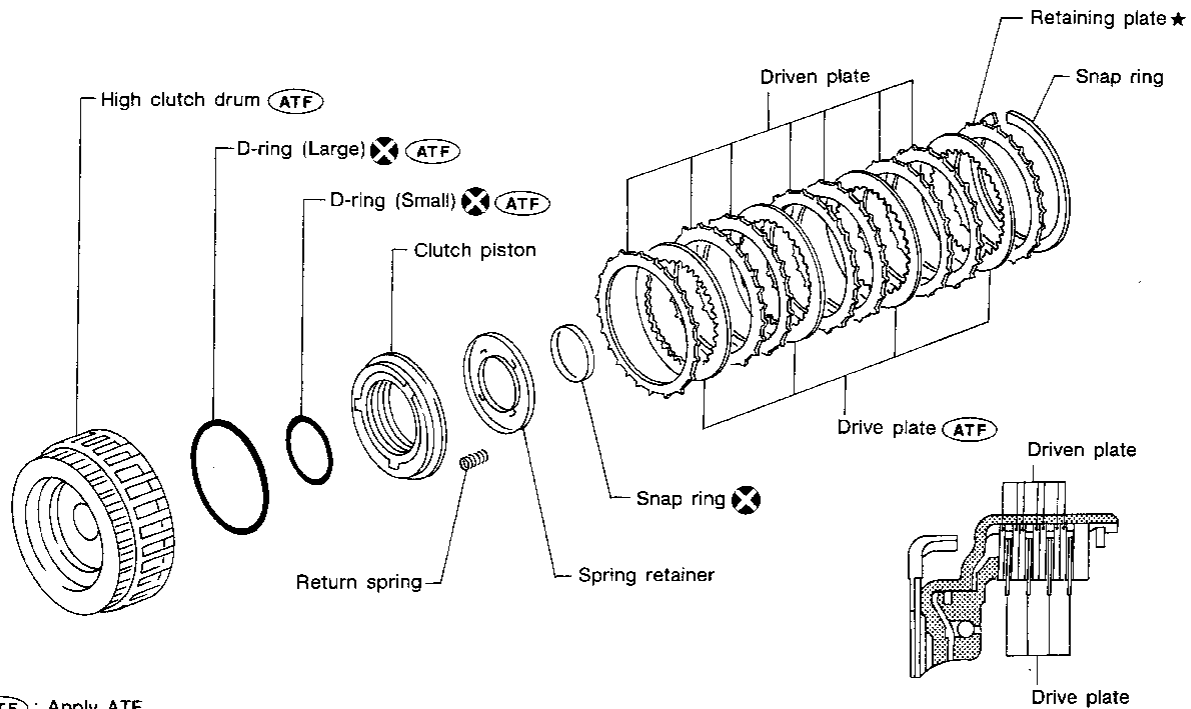


(ATF) : Apply ATF.
 ★ : Select with proper thickness.

SAT022EA

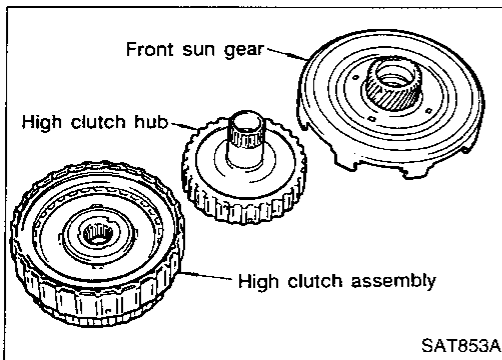

SAT853A

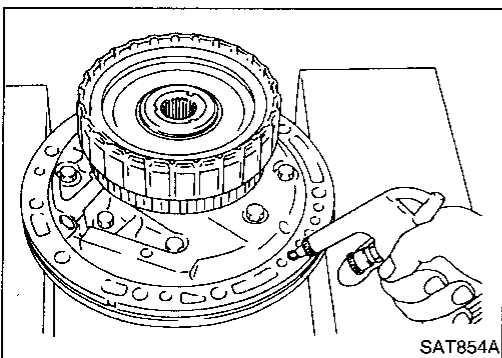

SAT854A

DISASSEMBLY AND ASSEMBLY



Service procedures for high clutch are essentially the same as those for reverse clutch, with the following exception:

- Check of high clutch operation

REPAIR FOR COMPONENT PARTS

High Clutch (Cont'd)


- Removal and installation of return spring

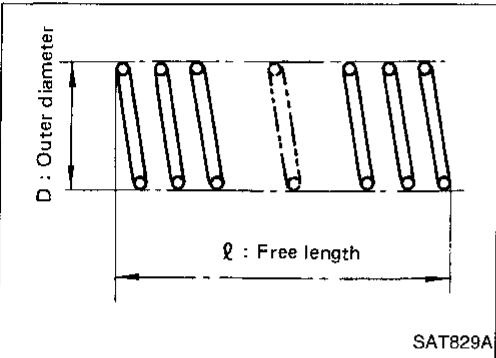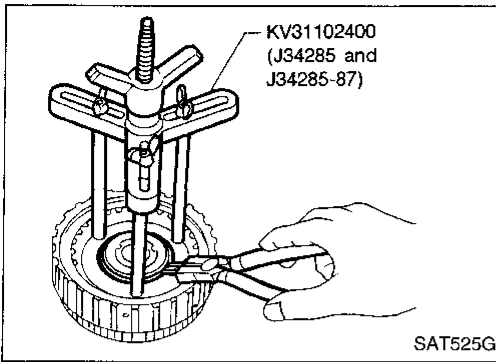

- Inspection of high clutch return springs

Inspection standard:

Refer to SDS, AT-202.

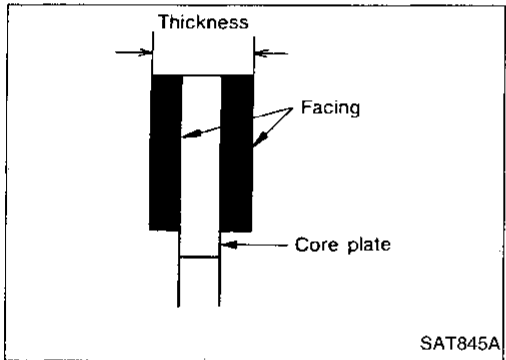

- Inspection of high clutch drive plate


Thickness of drive plate:

Standard

1.6 mm (0.063 in)

Wear limit

1.4 mm (0.055 in)

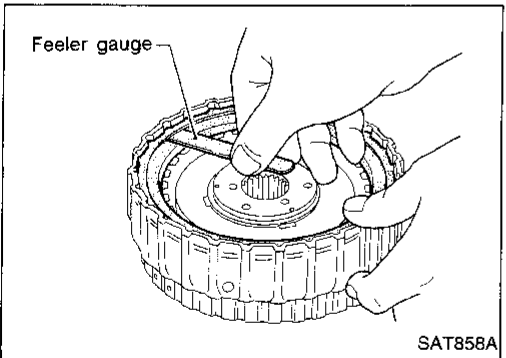

- Measurement of clearance between retaining plate and snap ring

Specified clearance:

Standard

1.8 - 2.2 mm (0.071 - 0.087 in)

Allowable limit

3.0 mm (0.118 in)

Retaining plate:

Refer to SDS, AT-203.

GI

MA

EM

LC

EC

FE

CL

MT

AT

PD

FA

RA

BR

ST

RS

BT


HA

EL

IDX

Forward and Overrun Clutches

SEC. 315

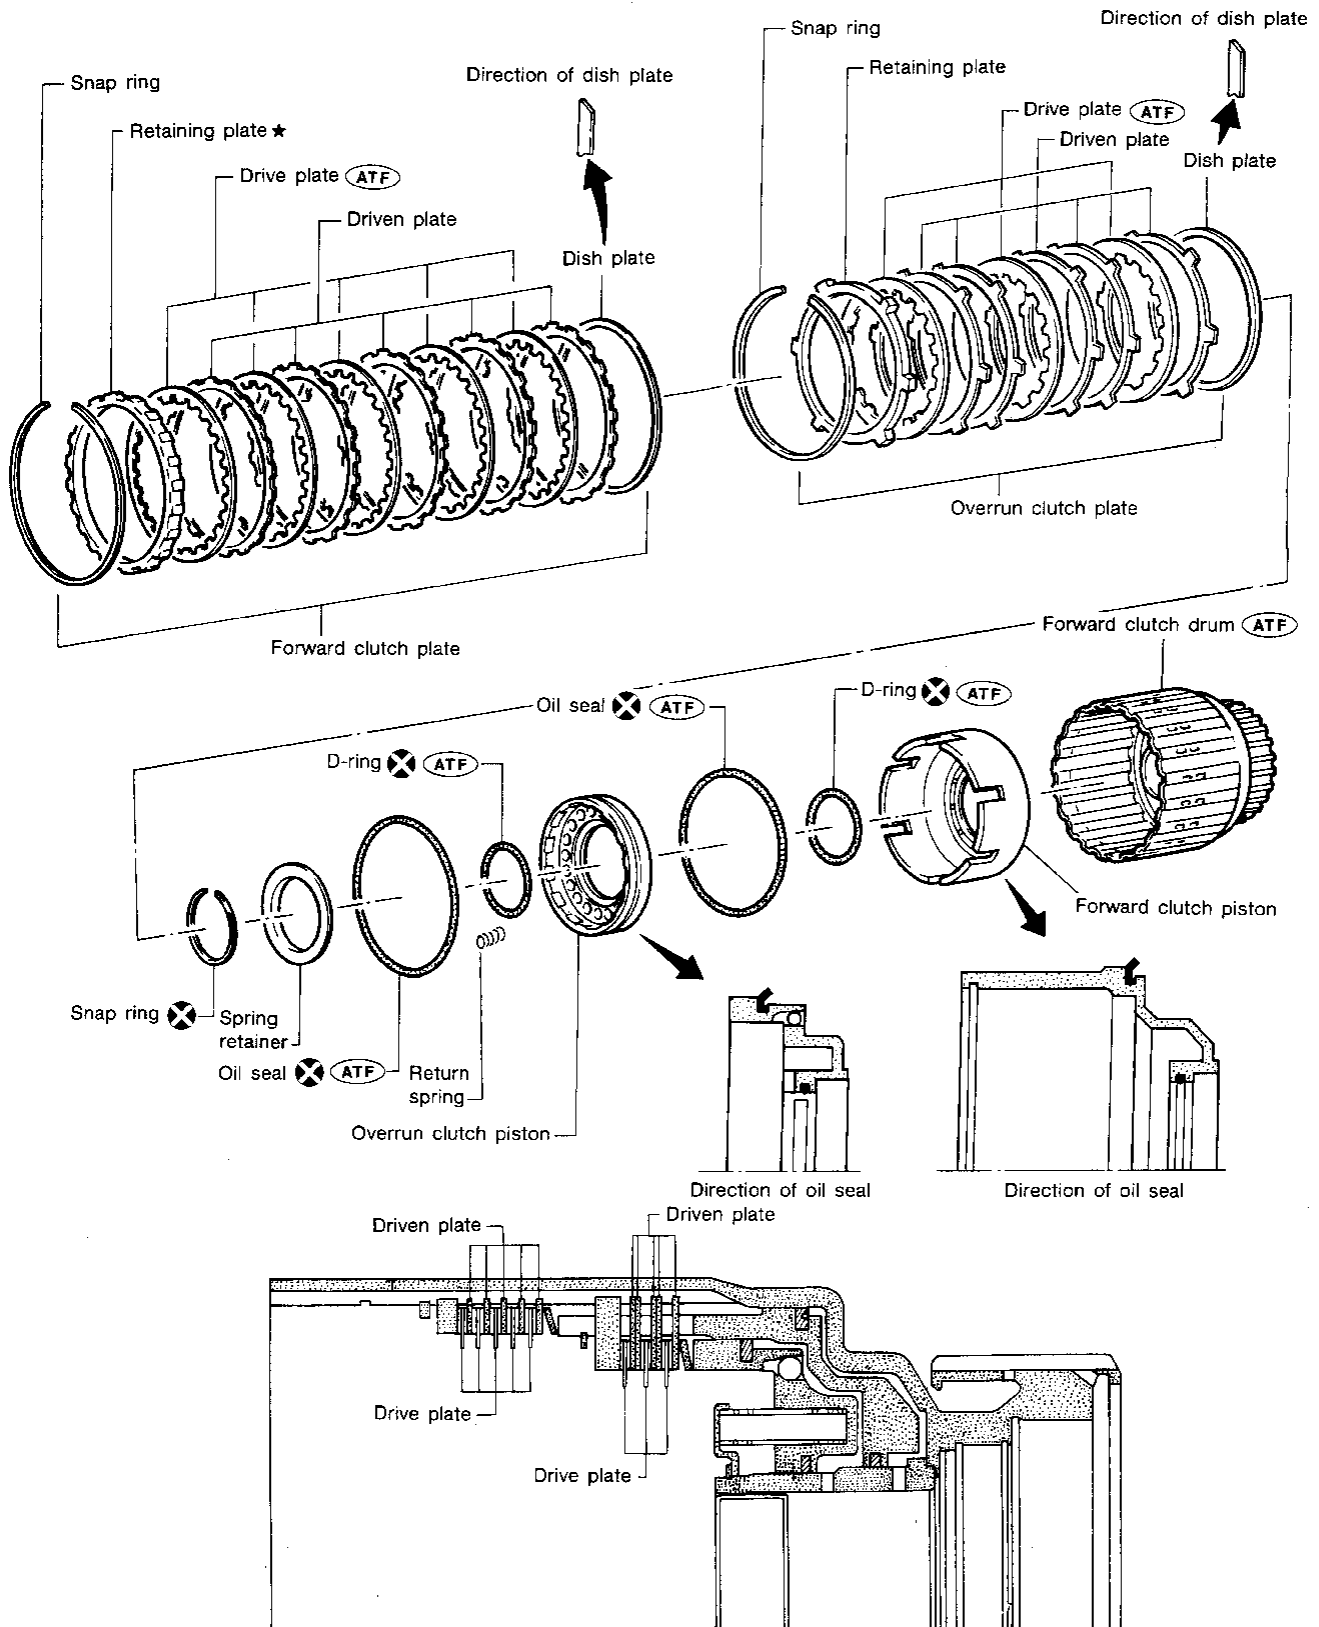

(ATF) : Apply ATF.
 ★ : Select with proper thickness.






REPAIR FOR COMPONENT PARTS

Forward and Overrun Clutches (Cont'd)

DISASSEMBLY AND ASSEMBLY

Forward and overrun clutches are serviced essentially the same way as reverse clutch is serviced. However, note the following exceptions.

- Check of forward clutch operation.

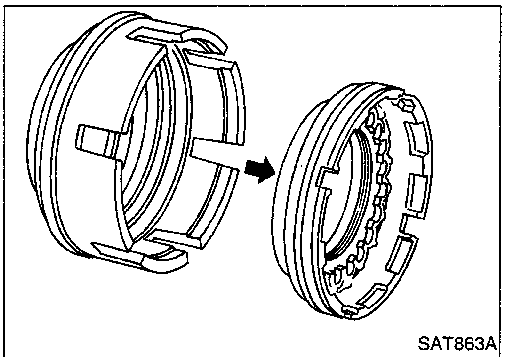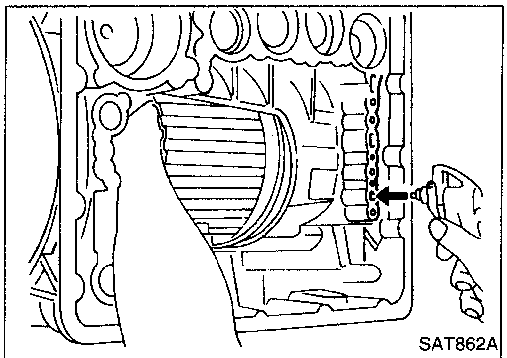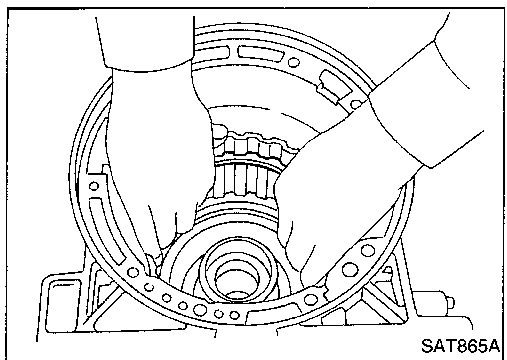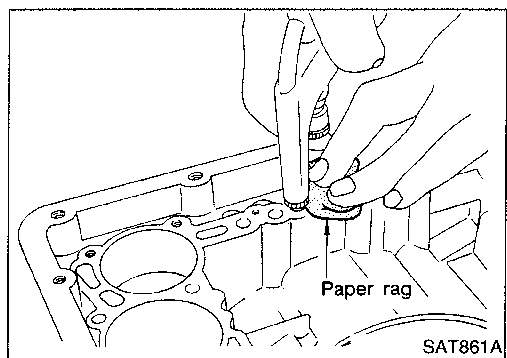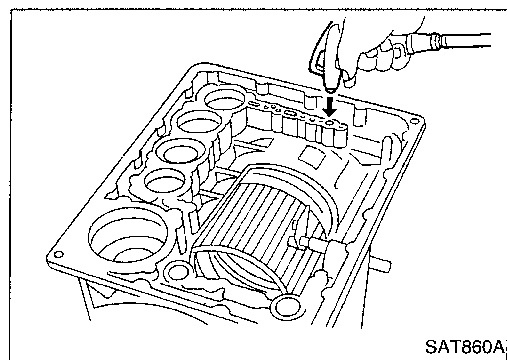

- Check of overrun clutch operation.

- Removal of forward clutch drum
Remove forward clutch drum from transmission case by holding snap ring.

- Removal of forward clutch and overrun clutch pistons
 1. While holding overrun clutch piston, gradually apply compressed air to oil hole.

2. Remove overrun clutch from forward clutch.

GI

MA

EM

LC

EC

FE

CL

MT

AT

PD

FA

RA

BR

ST

RS

BT


HA

EL


IDX

REPAIR FOR COMPONENT PARTS


Forward and Overrun Clutches (Cont'd)

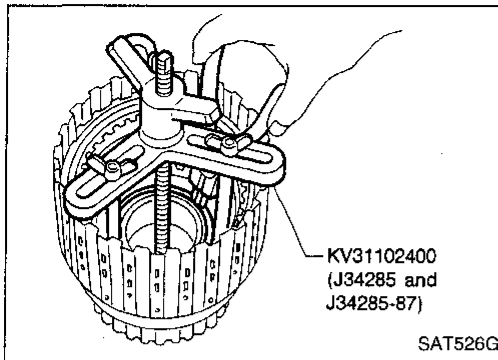


- Removal and installation of return springs

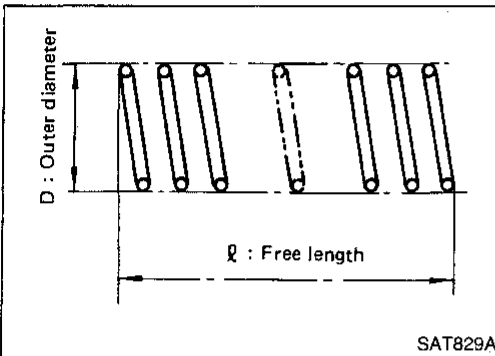


- Inspection of forward clutch and overrun clutch return springs
Inspection standard:
Refer to SDS, AT-202.

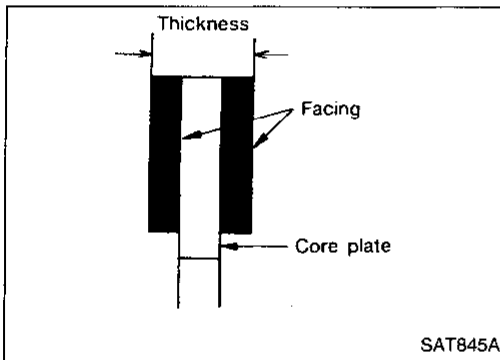

- Inspection of forward clutch drive plates
Thickness of drive plate:
Standard
1.6 mm (0.063 in)
Wear limit
1.4 mm (0.055 in)

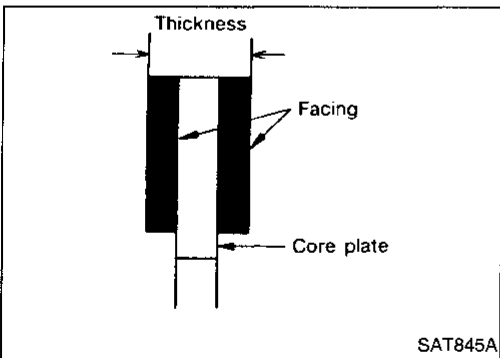


- Inspection of overrun clutch drive plates
Thickness of drive plate:
Standard
2.0 mm (0.079 in)
Wear limit
1.8 mm (0.071 in)

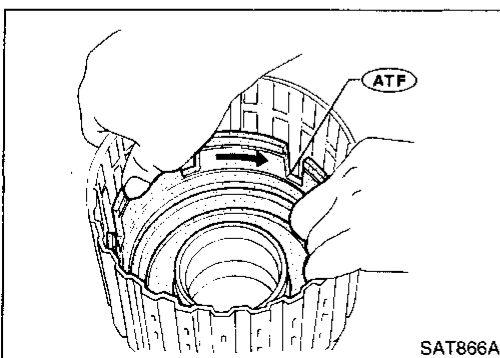

- Installation of forward clutch piston and overrun clutch piston
 1. Install forward clutch piston by turning it slowly and evenly.
 • **Apply ATF to inner surface of clutch drum.**

REPAIR FOR COMPONENT PARTS

Forward and Overrun Clutches (Cont'd)

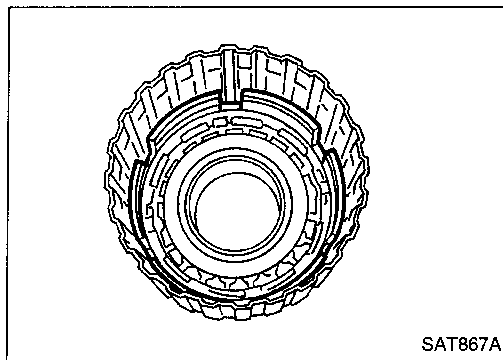

- Align notch in forward clutch piston with groove in forward clutch drum.

GI

MA

EM

LC

EC

FE

CL

MT

AT

PD

FA

RA

BR

ST


RS

BT


HA

EL

IDX

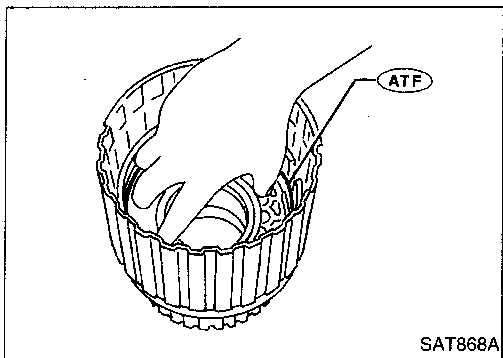

2. Install overrun clutch by turning it slowly and evenly.
- Apply ATF to inner surface of forward clutch piston.

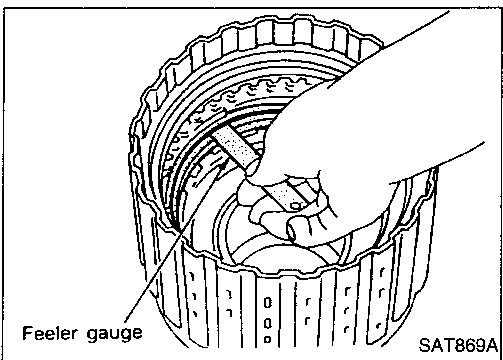

- Measurement of clearance between retaining plate and snap ring of overrun clutch

Specified clearance:

Standard


1.0 - 1.4 mm (0.039 - 0.055 in)

Allowable limit

2.0 mm (0.079 in)

Retaining plate:

Refer to SDS, AT-203.

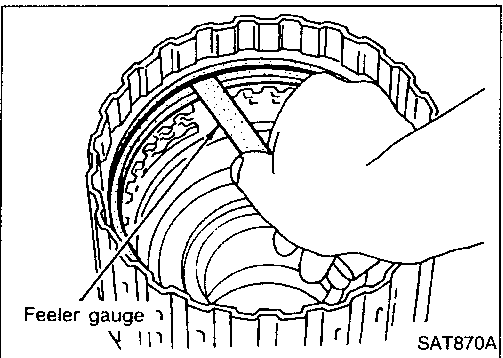

- Measurement of clearance between retaining plate and snap ring of forward clutch

Specified clearance:

Standard

0.45 - 0.85 mm (0.0177 - 0.0335 in)

Allowable limit


1.85 mm (0.0728 in)

Retaining plate:


Refer to SDS, AT-203.

Low & Reverse Brake

SEC. 315

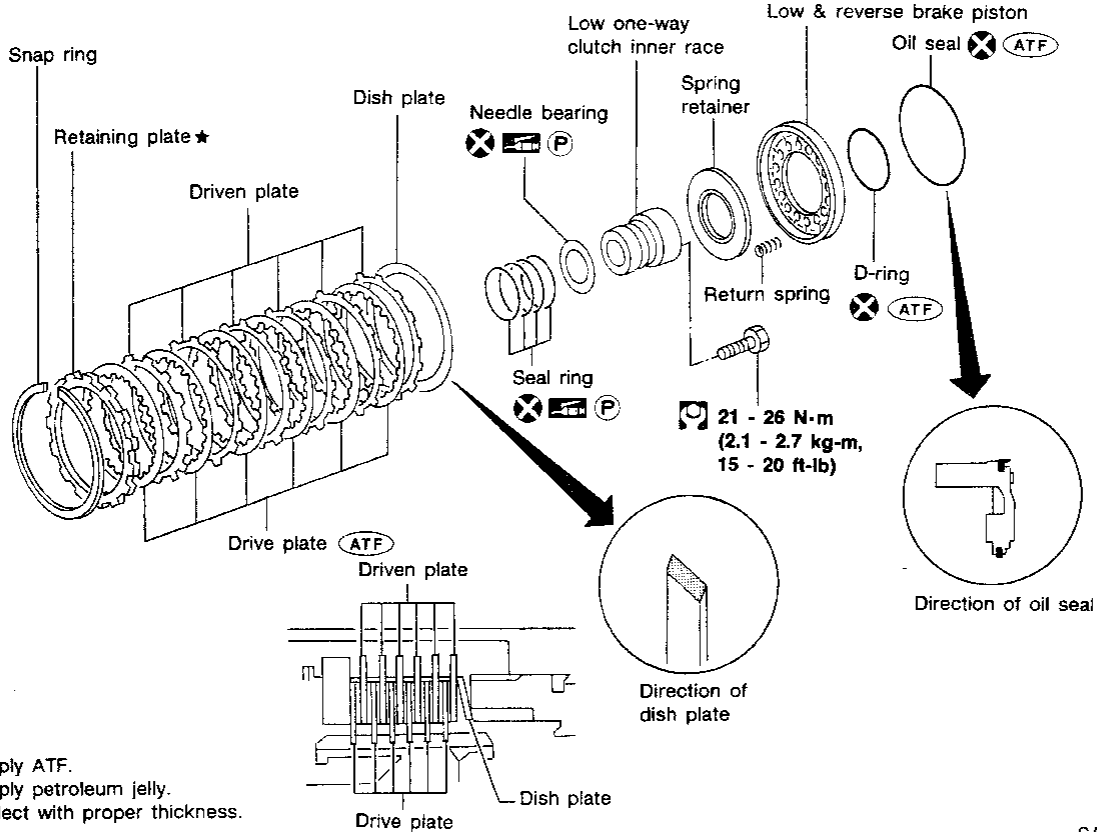


SAT349BB

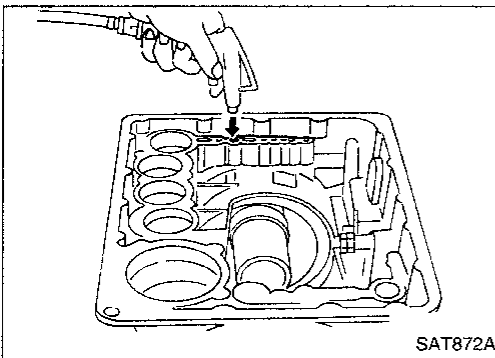


DISASSEMBLY

1. Check operation of low and reverse brake.
 - a. Install seal ring onto oil pump cover and install reverse clutch. Apply compressed air to oil hole.
 - b. Check to see that retaining plate moves to snap ring.
 - c. If retaining plate does not contact snap ring,
 - D-ring might be damaged.
 - Oil seal might be damaged.
 - Fluid might be leaking past piston check ball.
2. Remove snap ring, low and reverse brake drive plates, driven plates and dish plate.

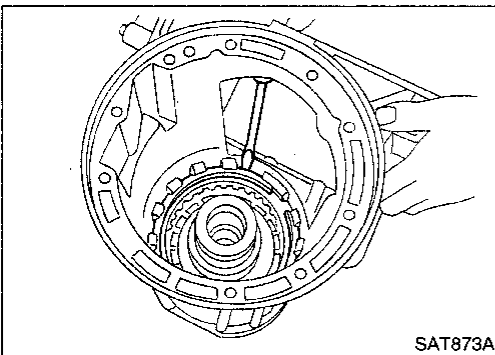


REPAIR FOR COMPONENT PARTS


Low & Reverse Brake (Cont'd)

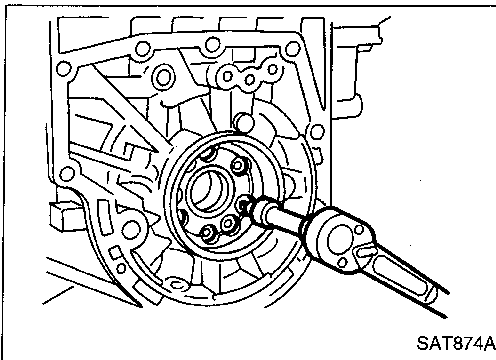

3. Remove low one-way clutch inner race, spring retainer and return spring from transmission case.

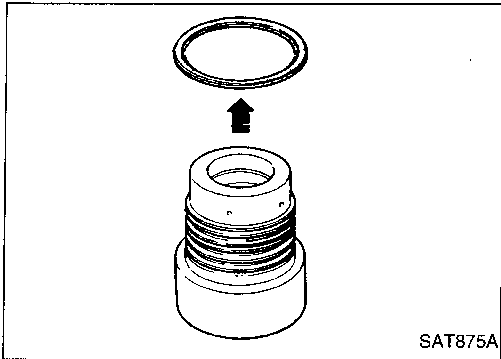

4. Remove seal rings from low one-way clutch inner race.
5. Remove needle bearing from low one-way clutch inner race.

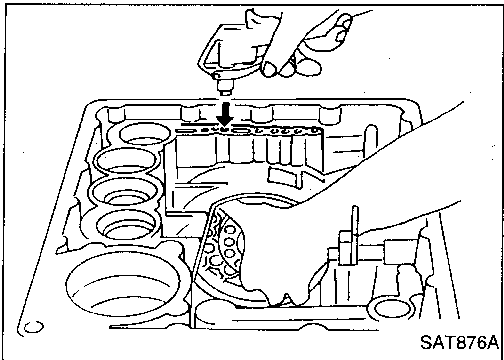

6. Remove low and reverse brake piston using compressed air.
7. Remove oil seal and D-ring from piston.

INSPECTION

Low and reverse brake snap ring and spring retainer


- Check for deformation, or damage.

Low and reverse brake return springs

- Check for deformation or damage. Also measure free length and outside diameter.

Inspection standard:

Refer to SDS, AT-202.

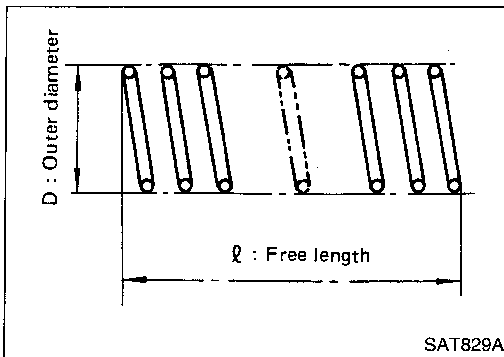

GI

MA

EM

LC

EC

FE

CL

MT

AT

PD

FA

RA

BR

ST

RS

BT

HA

EL

IDX

REPAIR FOR COMPONENT PARTS

Low & Reverse Brake (Cont'd)

Low and reverse brake drive plates

- Check facing for burns, cracks or damage.
- Measure thickness of facing.

Thickness of drive plate:


Standard value

2.0 mm (0.079 in)

Wear limit


1.8 mm (0.071 in)

- If not within wear limit, replace.

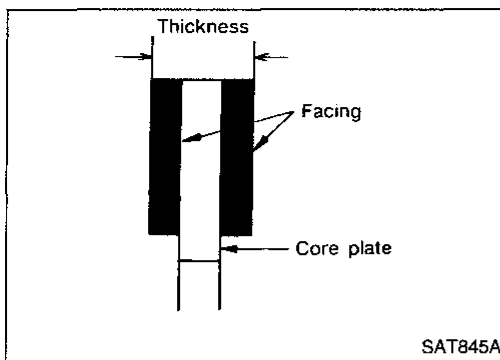

Low one-way clutch inner race

- Check frictional surface of inner race for wear or damage.

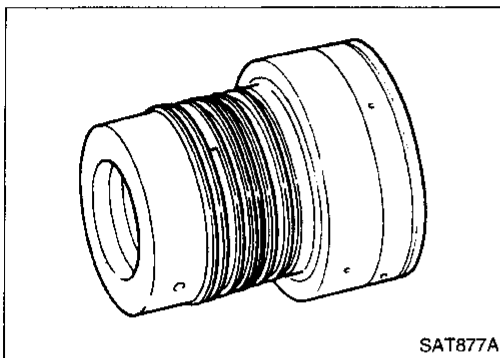


- Install a new seal rings onto low one-way clutch inner race.
- **Be careful not to expand seal ring gap excessively.**
- Measure seal ring-to-groove clearance.

Inspection standard:

Standard value: 0.10 - 0.25 mm (0.0039 - 0.0098 in)


Allowable limit: 0.25 mm (0.0098 in)

- If not within allowable limit, replace low one-way clutch inner race.

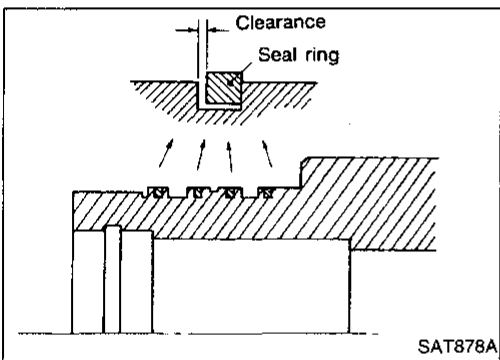


ASSEMBLY

1. Install bearing onto one-way clutch inner race.
 - **Pay attention to its direction — Black surface goes to rear side.**
 - **Apply petroleum jelly to needle bearing.**

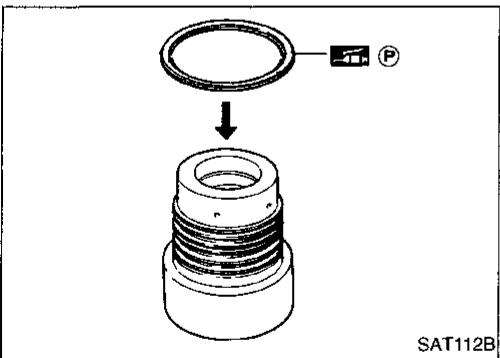


2. Install oil seal and D-ring onto piston.
 - **Apply ATF to oil seal and D-ring.**

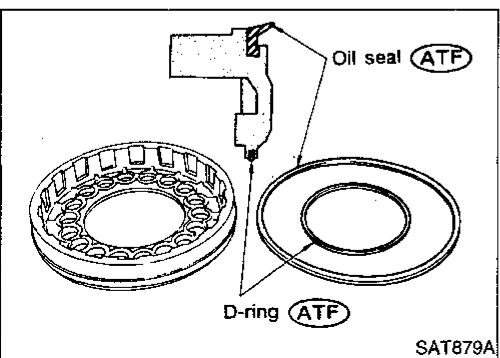


REPAIR FOR COMPONENT PARTS


Low & Reverse Brake (Cont'd)

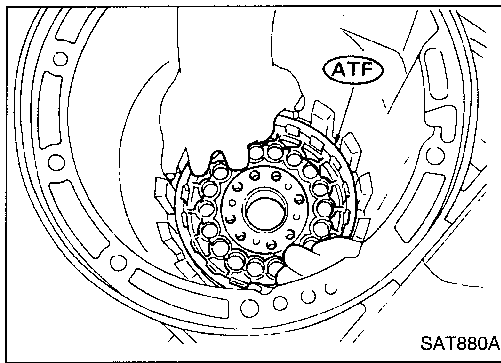


3. Install piston by rotating it slowly and evenly.
 - Apply ATF to inner surface of transmission case.

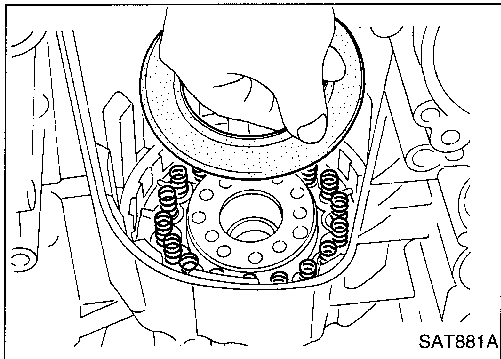

4. Install return springs, spring retainer and low one-way clutch inner race onto transmission case.
5. Install dish plate, low and reverse brake drive plates, driven plates and retaining plate.
6. Install snap ring on transmission case.

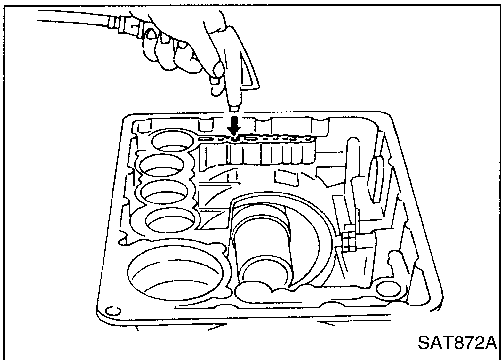

7. Check operation of low and reverse brake clutch piston. Refer to "DISASSEMBLY", AT-168.

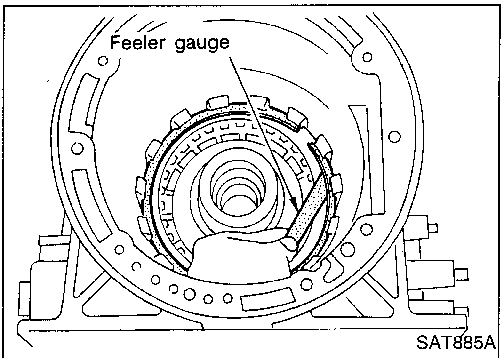

8. Measure clearance between retaining plate and snap ring. If not within allowable limit, select proper retaining plate.

Specified clearance:

Standard


0.7 - 1.1 mm (0.028 - 0.043 in)

Allowable limit

2.3 mm (0.091 in)

Retaining plate:

Refer to SDS, AT-204.

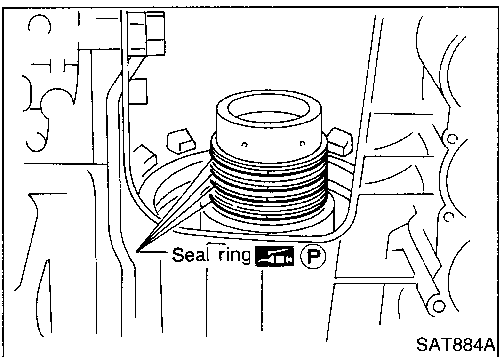

9. Install low one-way clutch inner race seal ring.
 - Apply petroleum jelly to seal ring.
 - Make sure seal rings are pressed firmly into place and held by petroleum jelly.

GI

MA

EM

LC

EC

FE

CL

MT

AT

PD

FA

RA

BR

ST

RS



BT

HA

EL


IDX

Forward Clutch Drum Assembly

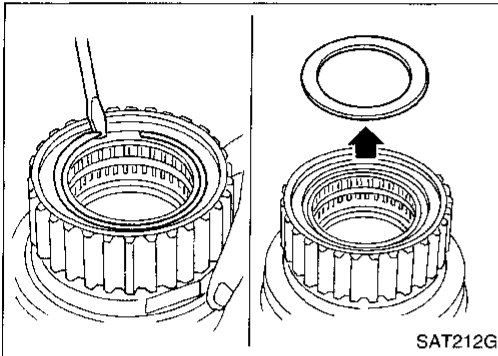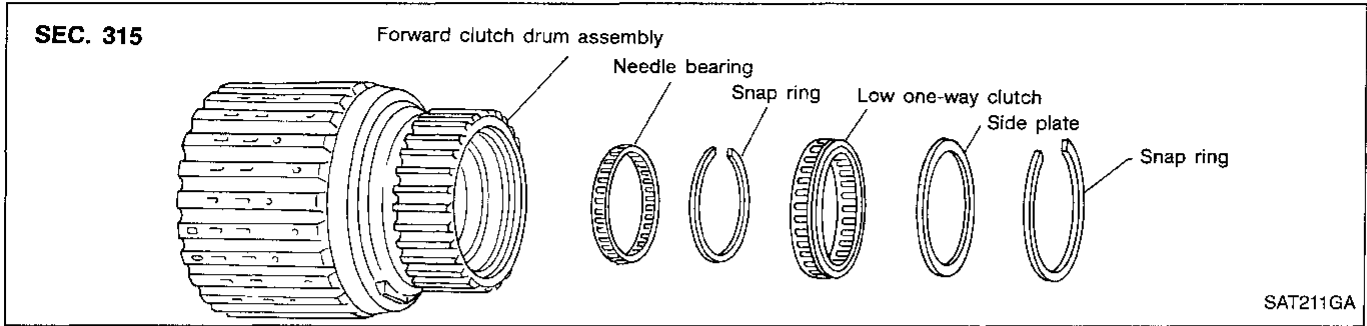


DISASSEMBLY


1. Remove snap ring from forward clutch drum.
2. Remove side plate from forward clutch drum.

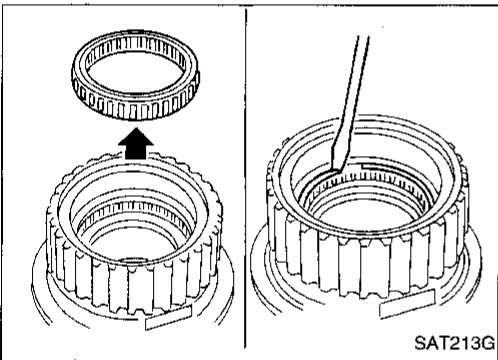

3. Remove low one-way clutch from forward clutch drum.
4. Remove snap ring from forward clutch drum.

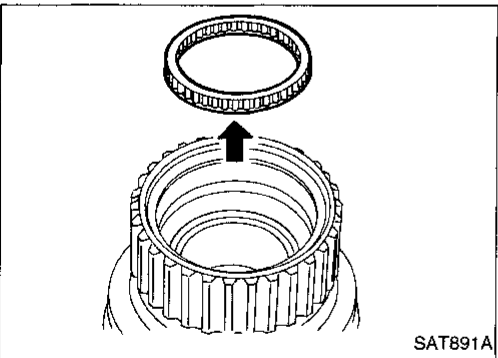

5. Remove needle bearing from forward clutch drum.

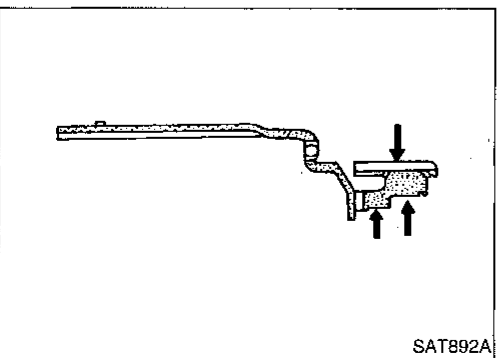

INSPECTION

Forward clutch drum






- Check spline portion for wear or damage.
- Check frictional surfaces of low one-way clutch and needle bearing for wear or damage.

REPAIR FOR COMPONENT PARTS

Forward Clutch Drum Assembly (Cont'd)

Needle bearing and low one-way clutch

- Check frictional surface for wear or damage.

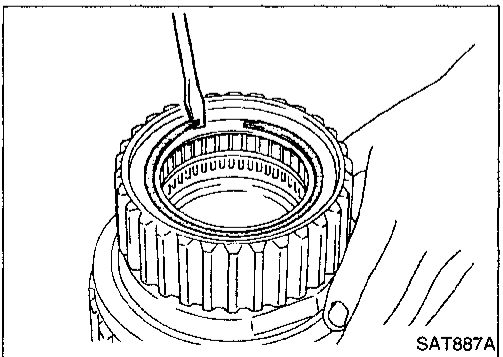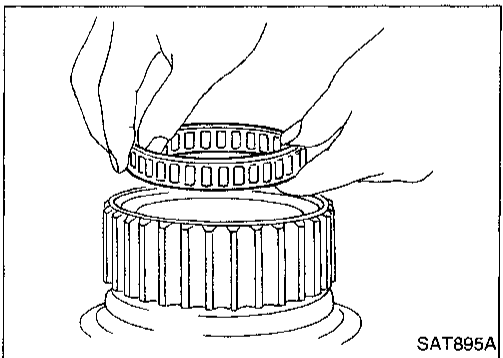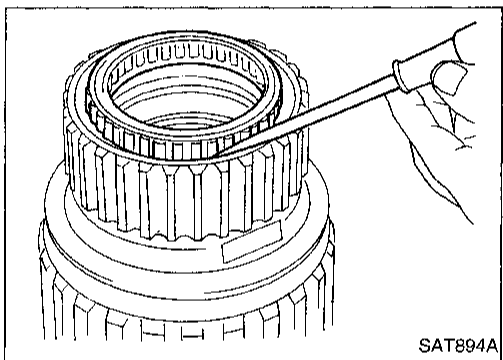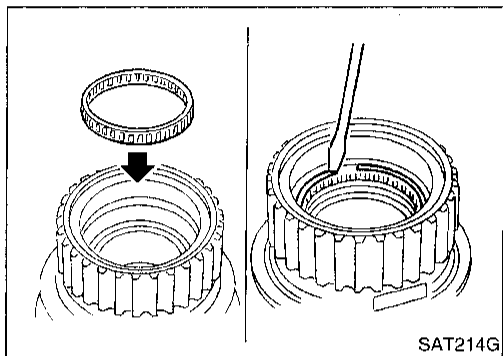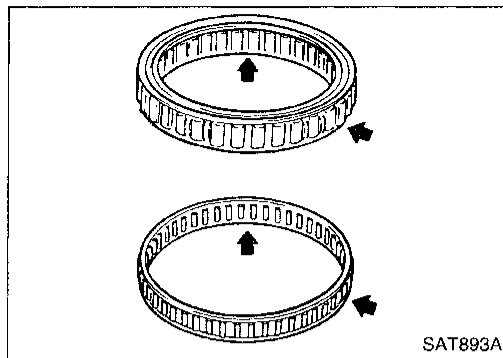

ASSEMBLY

1. Install needle bearing in forward clutch drum.
2. Install snap ring onto forward clutch drum.
3. Install low one-way clutch onto forward clutch drum by pushing the roller in evenly.
- **Install low one-way clutch with flange facing rearward.**
4. Install side plate onto forward clutch drum.
5. Install snap ring onto forward clutch drum.

CI

MA

EM

LC

EC

FE

CL

MT

AT

PD

FA

RA

BR

ST

RS



BT

HA

EL


IDX

Rear Internal Gear and Forward Clutch Hub

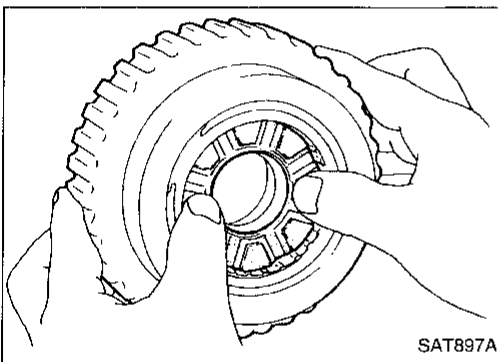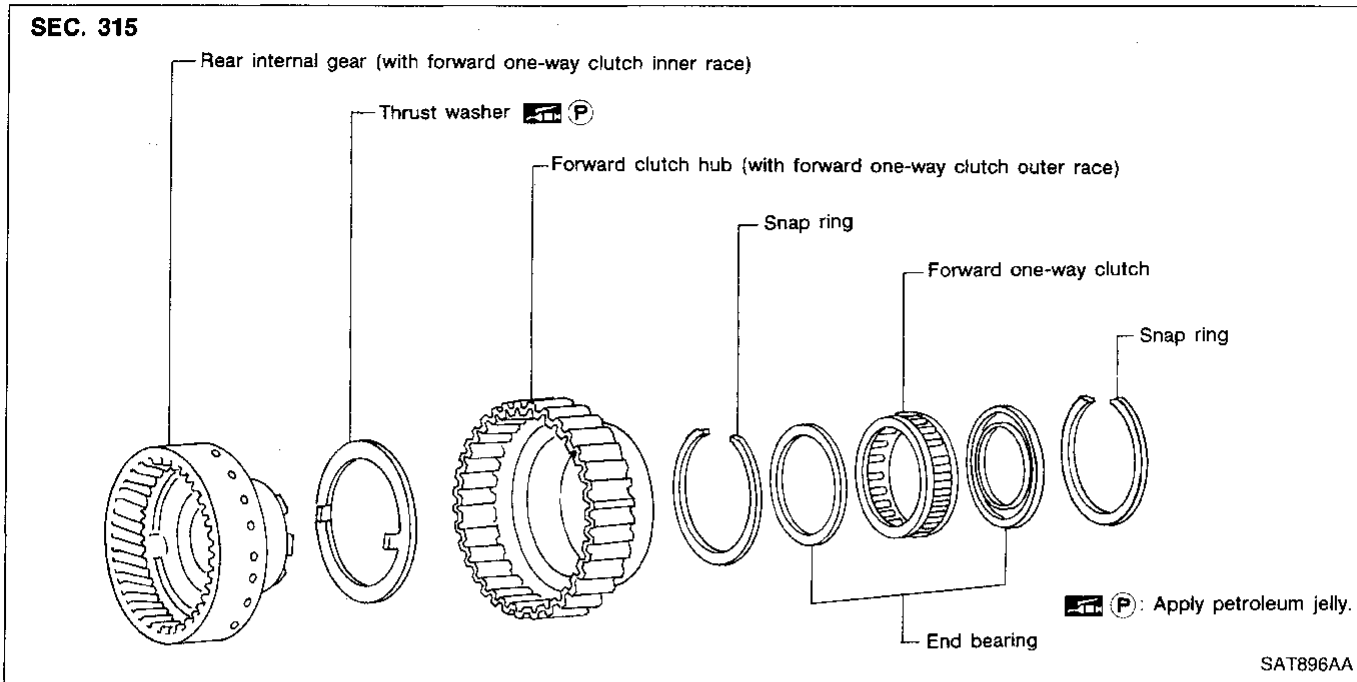


DISASSEMBLY

1. Remove rear internal gear by pushing forward clutch hub forward.

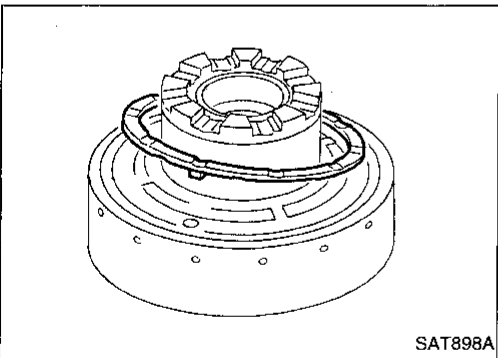


2. Remove thrust washer from rear internal gear.

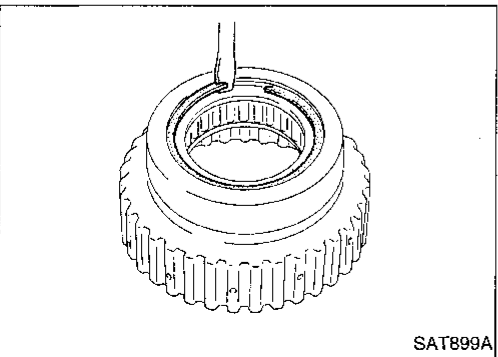


3. Remove snap ring from forward clutch hub.

REPAIR FOR COMPONENT PARTS


Rear Internal Gear and Forward Clutch Hub (Cont'd)

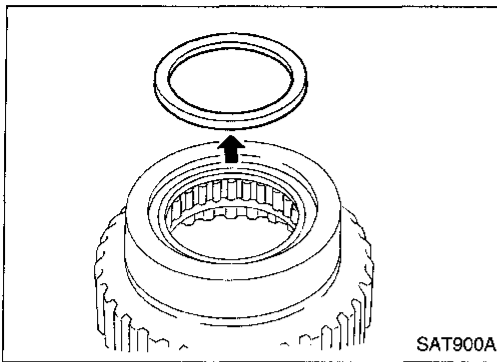


4. Remove end bearing.

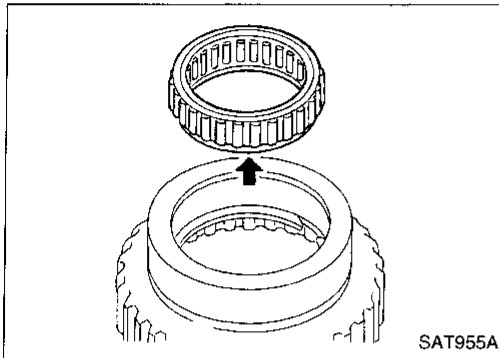

5. Remove forward one-way clutch and end bearing as a unit from forward clutch hub.

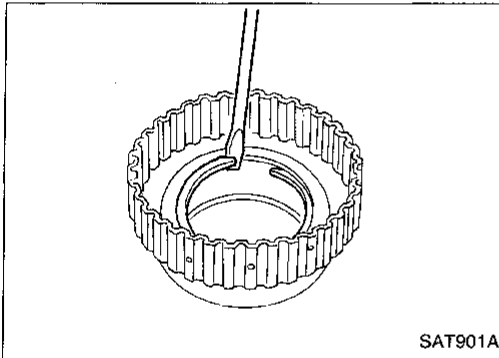


6. Remove snap ring from forward clutch hub.

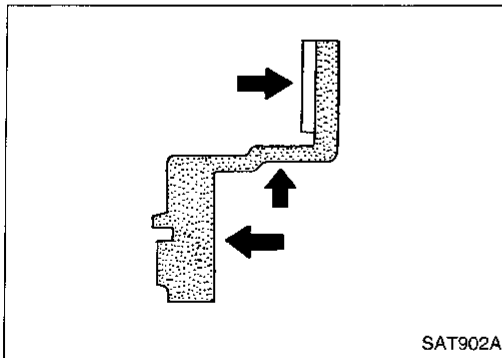

INSPECTION

Rear internal gear and forward clutch hub

- Check gear for excessive wear, chips or cracks.
- Check frictional surfaces of forward one-way clutch and thrust washer for wear or damage.
- Check spline for wear or damage.

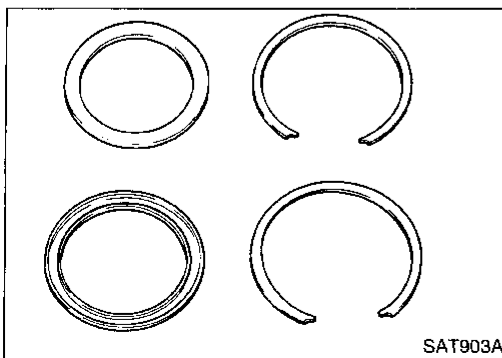

Snap ring and end bearing

- Check for deformation or damage.

GI

MA

EM

LC

EC

FE

CL

MT

AT

PD

FA

RA

BR

ST

RS

BT

HA

EL


IDX

REPAIR FOR COMPONENT PARTS


Rear Internal Gear and Forward Clutch Hub (Cont'd)

ASSEMBLY


1. Install snap ring onto forward clutch hub.
2. Install end bearing.

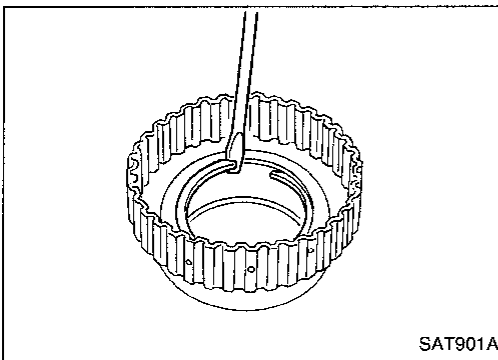


3. Install forward one-way clutch onto clutch hub.
 - **Install forward one-way clutch with flange facing rearward.**
4. Install end bearing.
5. Install snap ring onto forward clutch hub.

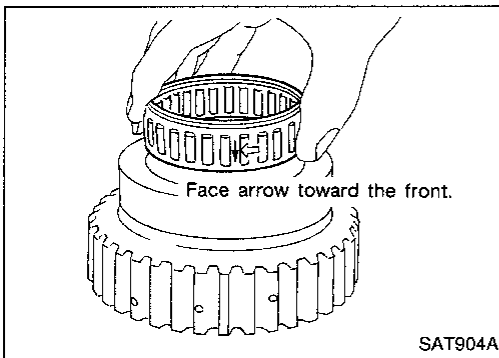


6. Install thrust washer onto rear internal gear.
 - **Apply petroleum jelly to thrust washer.**
 - **Securely insert pawls of thrust washer into holes in rear internal gear.**

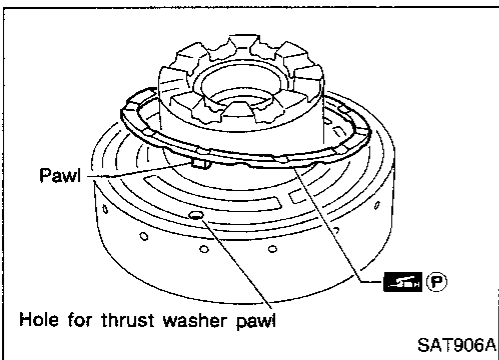

7. Position forward clutch hub in rear internal gear.

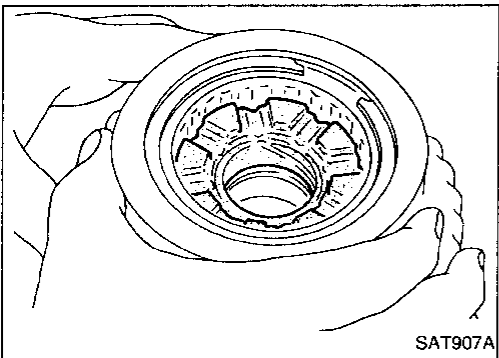


8. After installing, check to assure that forward clutch hub rotates clockwise.

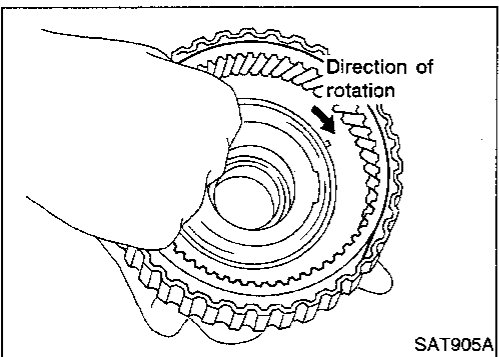

Band Servo Piston Assembly

SEC. 315

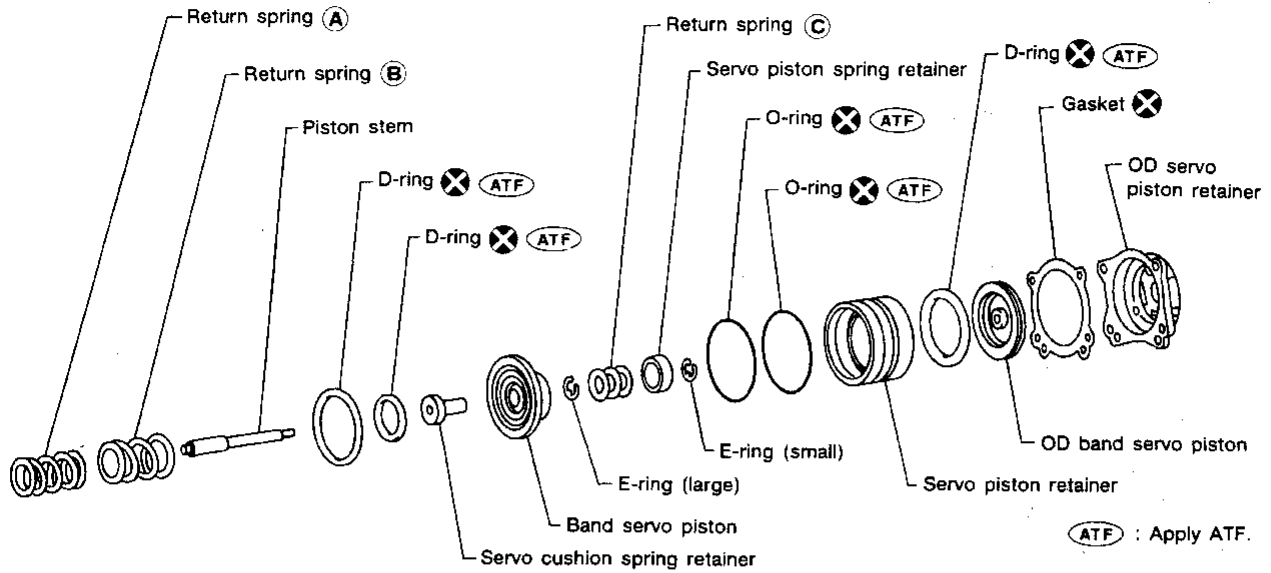

SAT908AC

GI
MA
EM
LC
EC
FE
CL

DISASSEMBLY

1. Block one oil hole in OD servo piston retainer and the center hole in OD band servo piston.
2. Apply compressed air to the other oil hole in piston retainer to remove OD band servo piston from retainer.
3. Remove D-ring from OD band servo piston.

MT
AT


PD
FA

RA
BR


ST
RS

BT
HA


EL
IDX

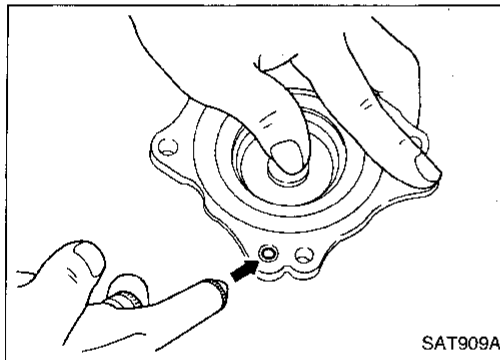

SAT909A

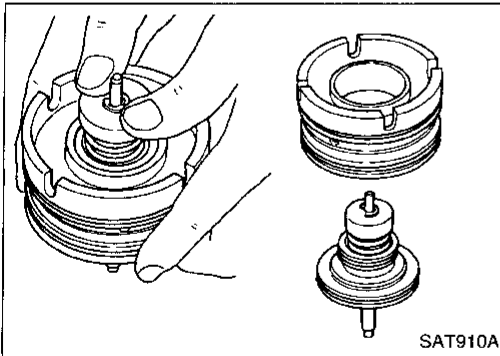

SAT910A

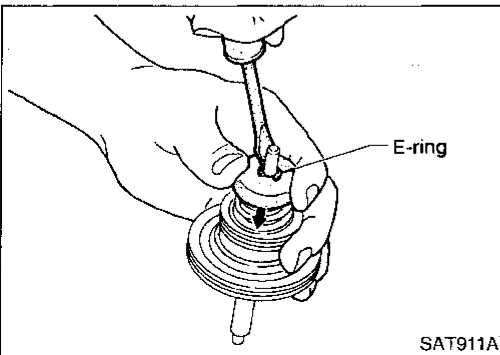


SAT911A

4. Remove band servo piston assembly from servo piston retainer by pushing it forward.


5. Place piston stem end on a wooden block. While pushing servo piston spring retainer down, remove E-ring.

REPAIR FOR COMPONENT PARTS


Band Servo Piston Assembly (Cont'd)

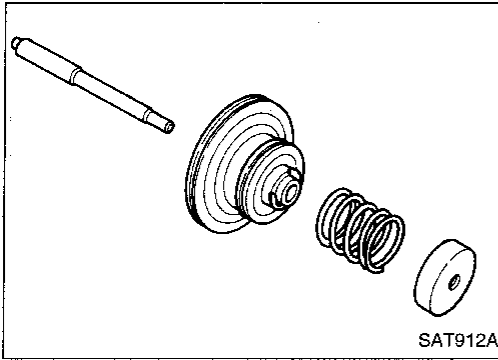


6. Remove servo piston spring retainer, return spring C and piston stem from band servo piston.

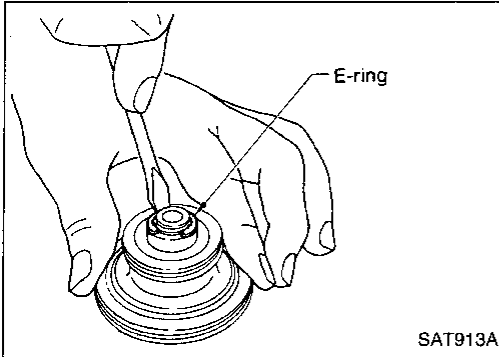

7. Remove E-ring from band servo piston.

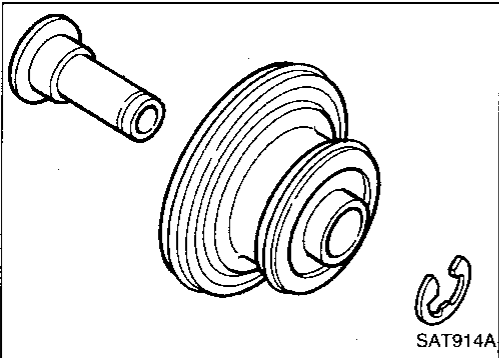

8. Remove servo cushion spring retainer from band servo piston.
9. Remove D-rings from band servo piston.
10. Remove O-rings from servo piston retainer.

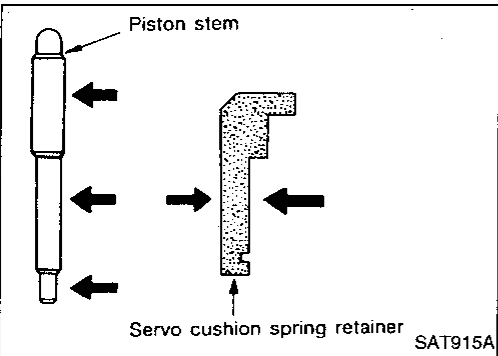

INSPECTION

Pistons, retainers and piston stem


- Check frictional surfaces for abnormal wear or damage.

Return springs

- Check for deformation or damage. Measure free length and outer diameter.

Inspection standard:


Refer to SDS, AT-202.

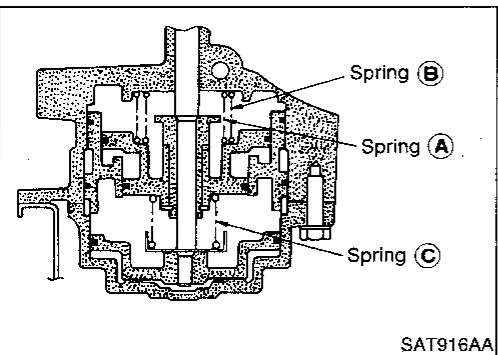


REPAIR FOR COMPONENT PARTS

Band Servo Piston Assembly (Cont'd)


ASSEMBLY

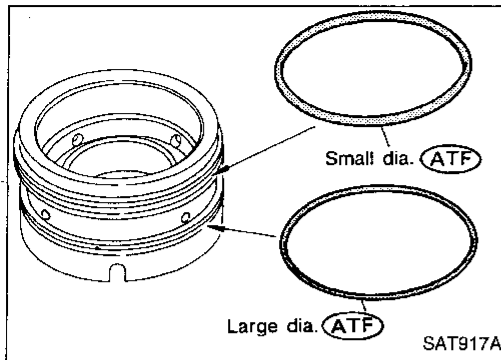


1. Install O-rings onto servo piston retainer.
 - Apply ATF to O-rings.
 - Pay attention to position of each O-ring.

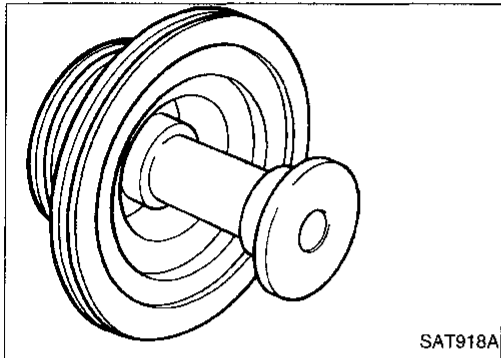


2. Install servo cushion spring retainer onto band servo piston.

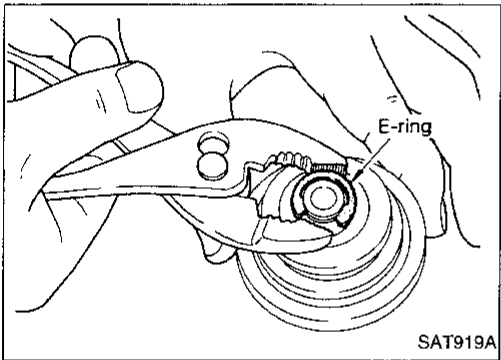

3. Install E-ring onto servo cushion spring retainer.

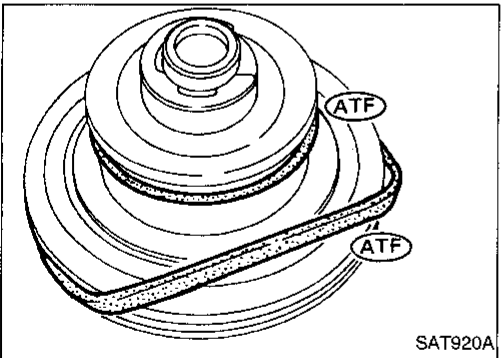

4. Install D-rings onto band servo piston.
 - Apply ATF to D-rings.

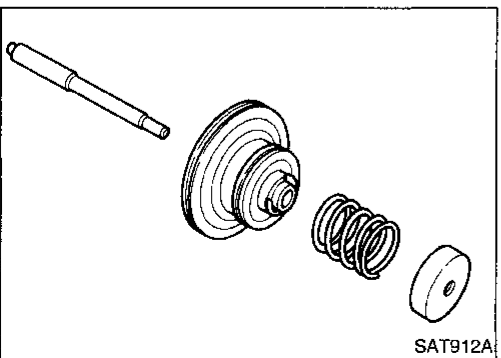

5. Install servo piston spring retainer, return spring C and piston stem onto band servo piston.

GI

MA

EM

LC

EC

FE

CL

MT

AT

PD

FA

RA

BR

ST

RS

BT


HA

EL


IDX

REPAIR FOR COMPONENT PARTS


Band Servo Piston Assembly (Cont'd)

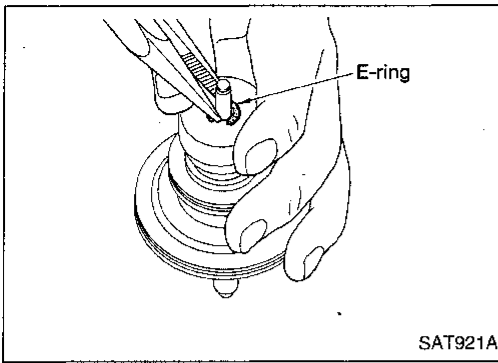


6. Place piston stem end on a wooden block. While pushing servo piston spring retainer down, install E-ring.

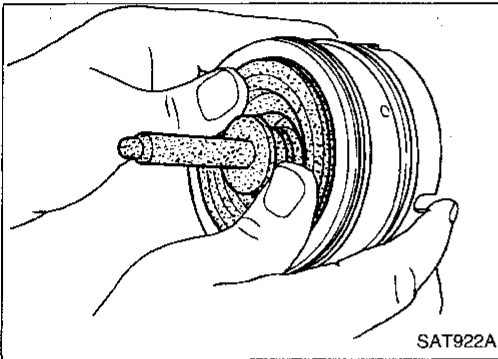

7. Install band servo piston assembly onto servo piston retainer by pushing it inward.


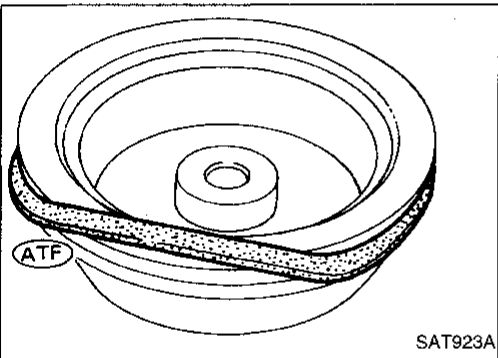


8. Install D-ring on OD band servo piston.
 - **Apply ATF to D-ring.**

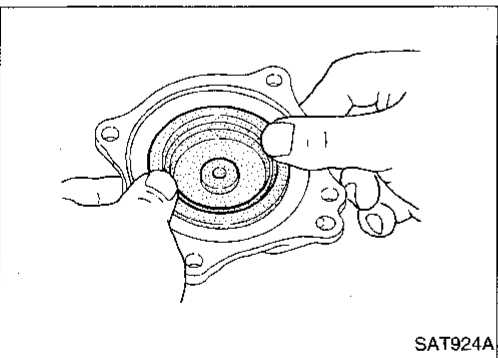


9. Install OD band servo piston onto servo piston retainer by pushing it inward.

Parking Pawl Components

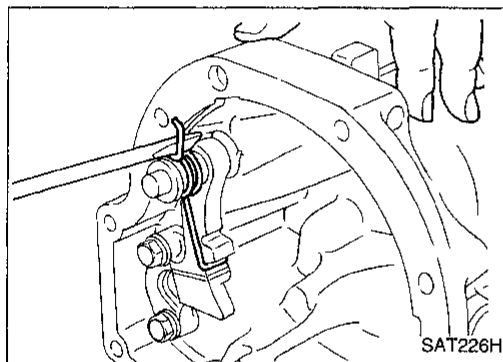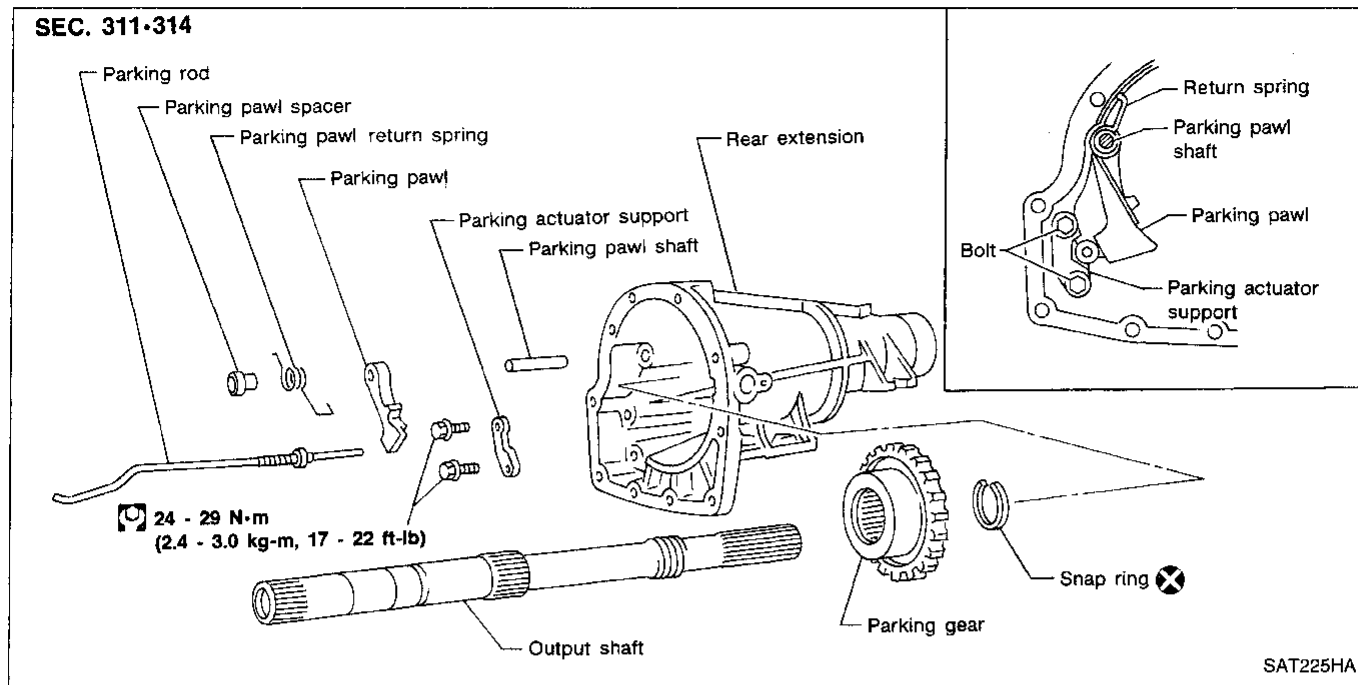


DISASSEMBLY

1. Slide return spring to the front of rear extension flange.

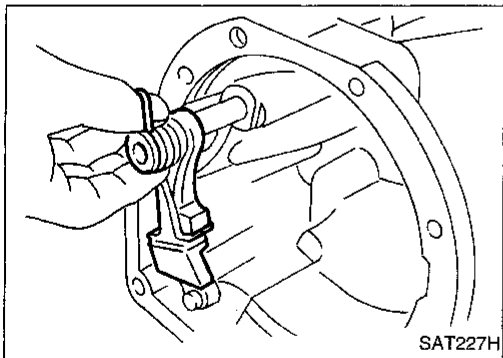

2. Remove return spring, pawl spacer and parking pawl from rear extension.
3. Remove parking pawl shaft from rear extension.

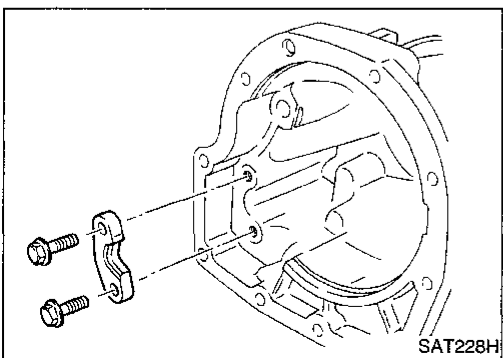

4. Remove parking actuator support and rod guide from rear extension.



GI
MA
EM
LC
EC
FE
CL
MT
AT
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX

REPAIR FOR COMPONENT PARTS

Parking Pawl Components (Cont'd) INSPECTION


Parking pawl and parking actuator support

- Check contact surface of parking rod for wear.

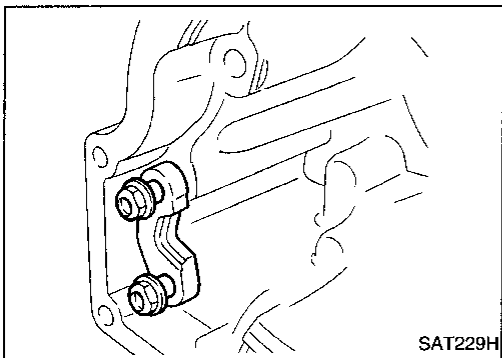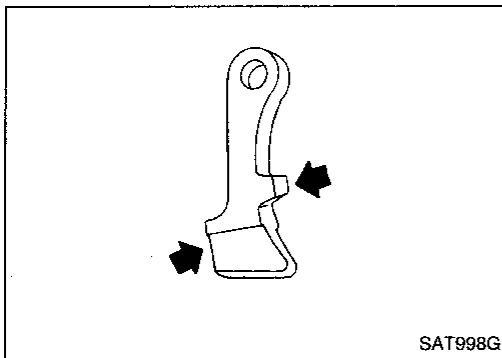


ASSEMBLY

1. Install rod guide and parking actuator support onto rear extension.
2. Insert parking pawl shaft into rear extension.

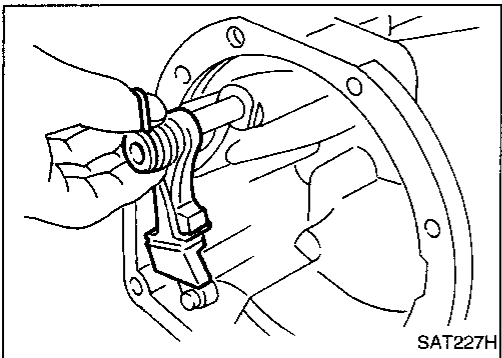


3. Install return spring, pawl spacer and parking pawl onto parking pawl shaft.

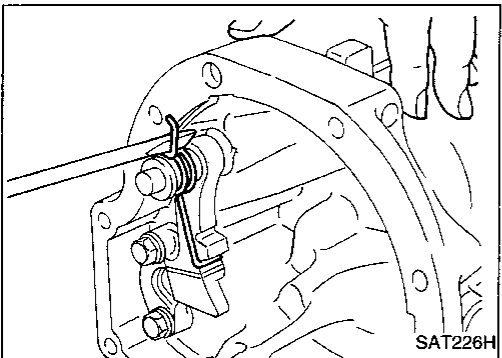

4. Bend return spring upward and install it onto rear extension.

ASSEMBLY

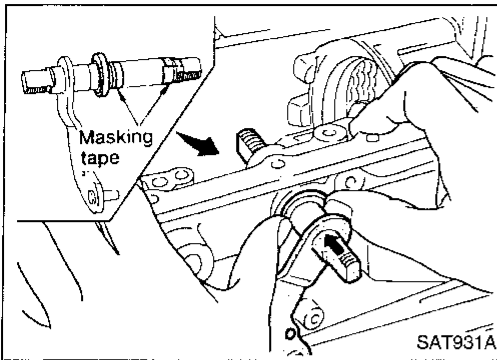

Assembly (1)

1. Install manual shaft components.
 - a. Install oil seal onto manual shaft.
 - **Apply ATF to oil seal.**
 - **Wrap threads of manual shaft with masking tape.**
 - b. Insert manual shaft and oil seal as a unit into transmission case.
 - c. Remove masking tape.

GI

MA

EM


- d. Push oil seal evenly and install it onto transmission case.

LC

EC

FE

CL

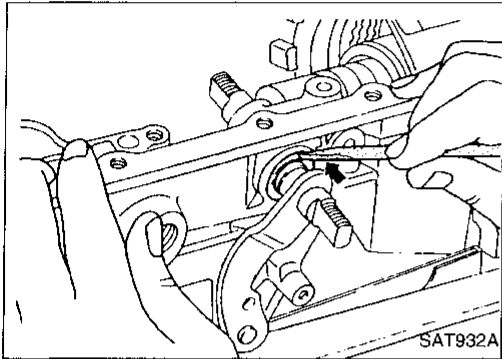

- e. Align groove in shaft with drive pin hole, then drive pin into position as shown in figure at left.

MT

AT

PD

FA

RA

BR

ST


RS

BT


HA

EL


IDX

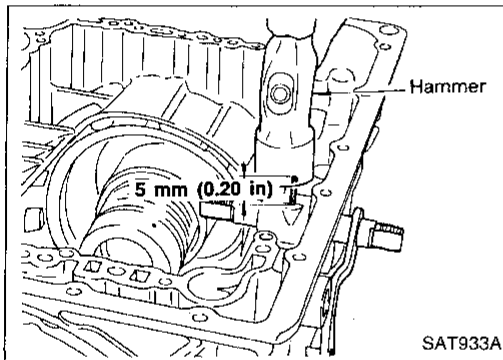

- f. Install detent spring and spacer.
 - g. While pushing detent spring down, install manual plate onto manual shaft.

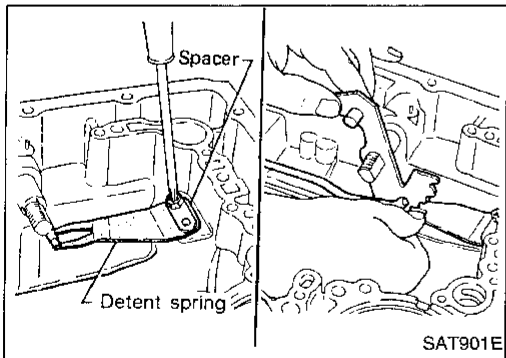


- h. Install lock nuts onto manual shaft.

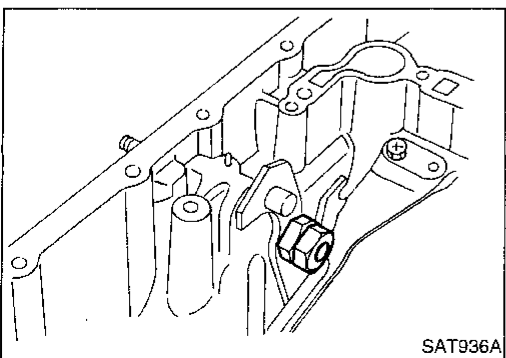

ASSEMBLY

Assembly (1) (Cont'd)

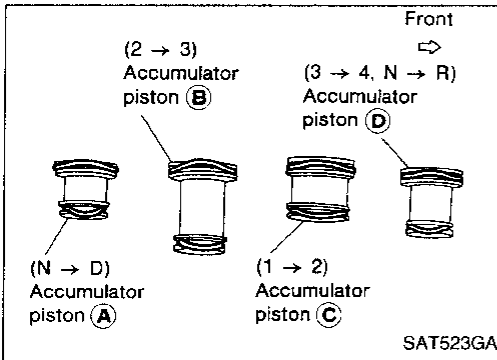


2. Install accumulator piston.
 - a. Install O-rings onto accumulator piston.
 - **Apply ATF to O-rings.**

Accumulator piston O-rings


Unit: mm (in)

Accumulator	Ⓐ	Ⓑ	Ⓒ	Ⓓ
Small diameter end	29 (1.14)	32 (1.26)	45 (1.77)	29 (1.14)
Large diameter end	45 (1.77)	50 (1.97)	50 (1.97)	45 (1.77)

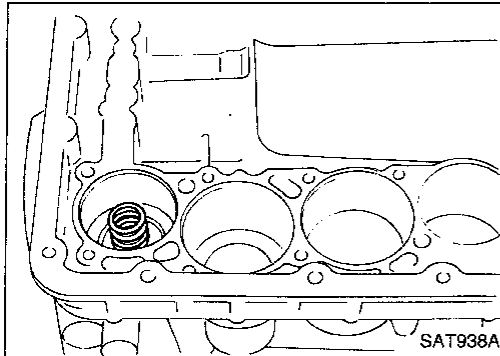


- b. Install return spring for accumulator A onto transmission case.


Free length of return spring:
Refer to SDS, AT-202.

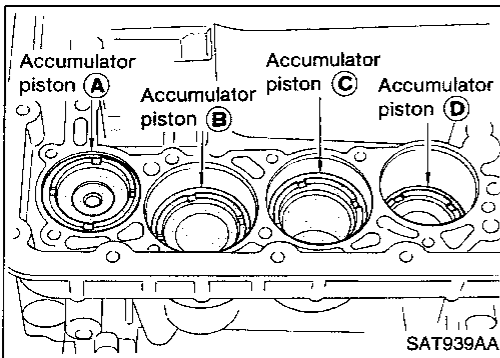

- c. Install accumulator pistons Ⓐ, Ⓑ, Ⓒ and Ⓓ.
 - **Apply ATF to transmission case.**

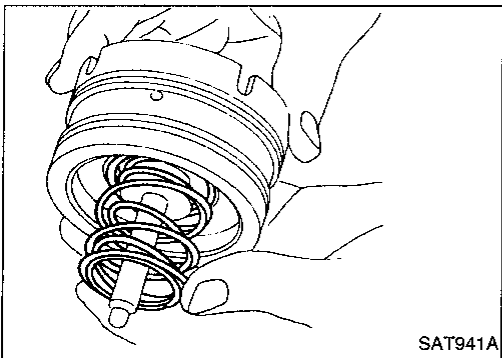

3. Install band servo piston.
 - a. Install return springs onto servo piston.

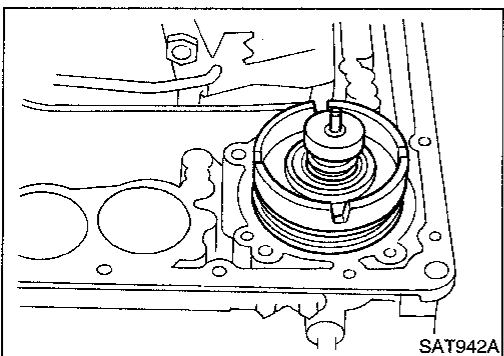


- b. Install band servo piston onto transmission case.
 - **Apply ATF to O-ring of band servo piston and transmission case.**
- c. Install gasket for band servo onto transmission case.

ASSEMBLY

Assembly (1) (Cont'd)


d. Install band servo retainer onto transmission case.

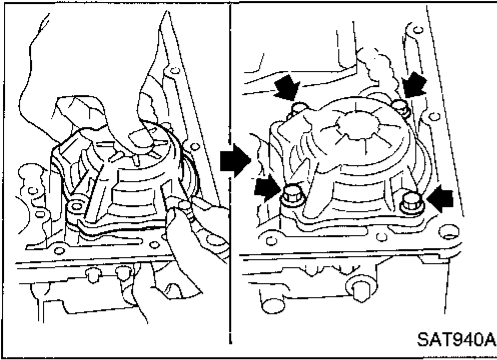

SAT940A


4. Install rear side clutch and gear components.

a. Place transmission case in vertical position.

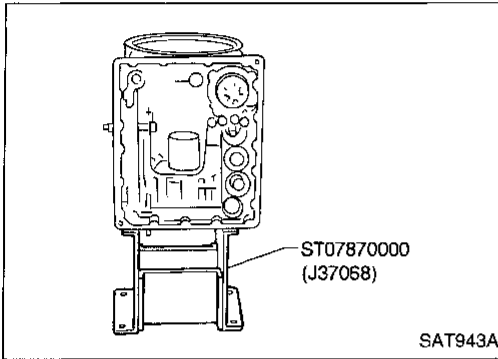


SAT943A

b. Slightly lift forward clutch drum assembly. Then slowly rotate it clockwise until its hub passes fully over clutch inner race inside transmission case.

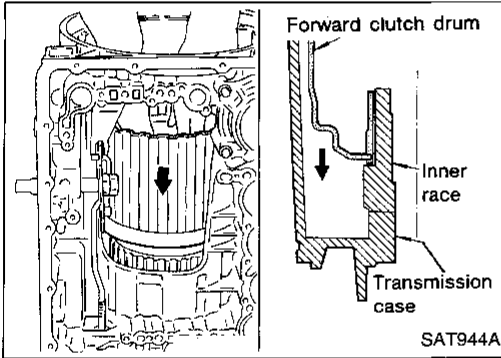

SAT944A


c. Check to be sure that rotation direction of forward clutch assembly is correct.

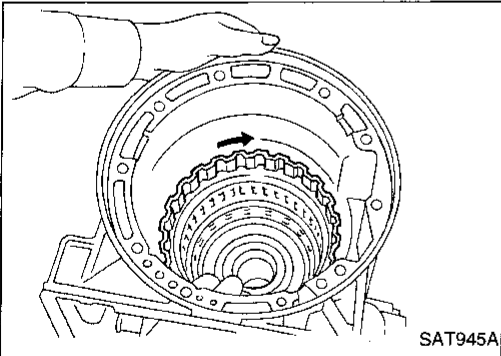

SAT945A

d. Install thrust washer onto front of overrun clutch hub.

- Apply petroleum jelly to the thrust washer.
- Insert pawls of thrust washer securely into holes in overrun clutch hub.

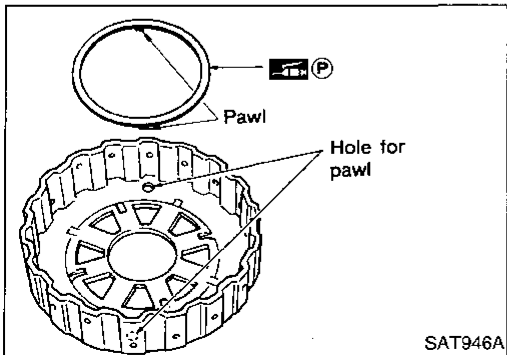

SAT946A

GI

MA

EM

LC

EC

FE

CL

MT

AT

PD

FA

RA

BR

ST

RS

BT


HA

EL


IDX

ASSEMBLY

Assembly (1) (Cont'd)

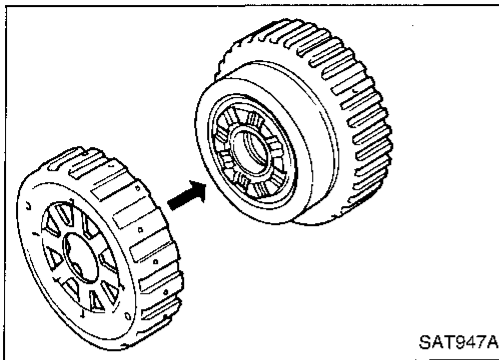


e. Install overrun clutch hub onto rear internal gear assembly.

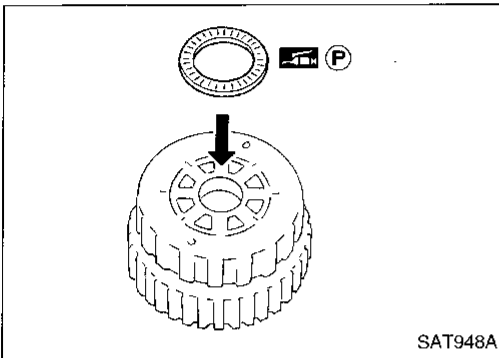


f. Install needle bearing onto rear of overrun clutch hub.


- Apply petroleum jelly to needle bearing.

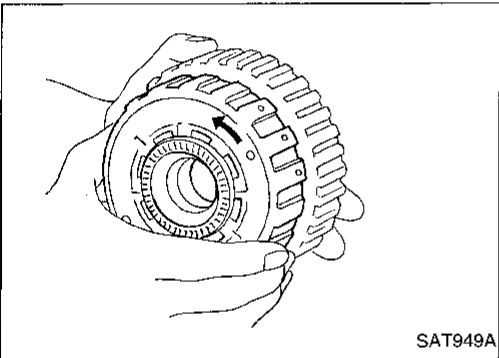

g. Check that overrun clutch hub rotates as shown while holding forward clutch hub.

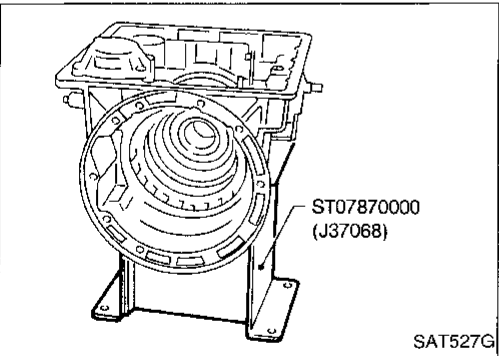


h. Place transmission case into horizontal position.

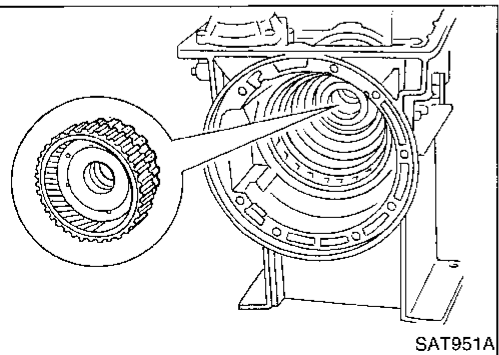

i. Install rear internal gear, forward clutch hub and overrun clutch hub as a unit onto transmission case.

ASSEMBLY

Assembly (1) (Cont'd)

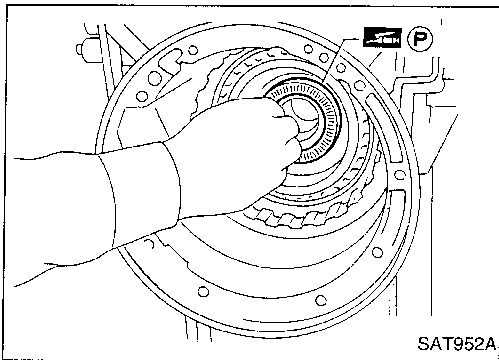

- j. Install needle bearing onto rear internal gear.
- Apply petroleum jelly to needle bearing.

GI

MA

EM

LC

EC

FE

CL

MT

AT

PD

FA

RA

BR

ST


RS

BT


HA

EL

IDX

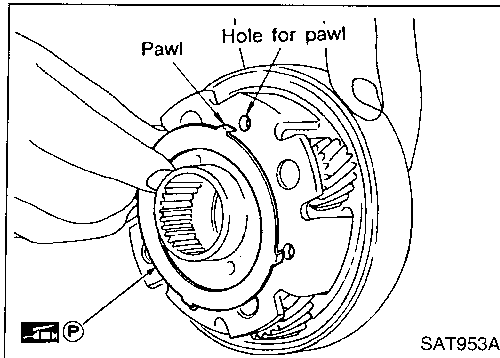

- k. Install bearing race onto rear of front internal gear.
- Apply petroleum jelly to bearing race.
 - Securely engage pawls of bearing race with holes in front internal gear.

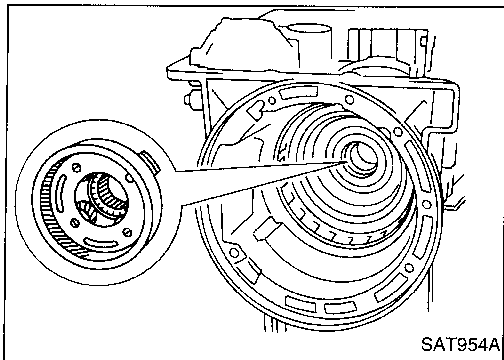

- l. Install front internal gear on transmission case.


Adjustment

When any parts listed in the following table are replaced, total end play or reverse clutch end play must be adjusted.


Part name	Total end play	Reverse clutch end play
Transmission case	•	•
Low one-way clutch inner race	•	•
Overrun clutch hub	•	•
Rear internal gear	•	•
Rear planetary carrier	•	•
Rear sun gear	•	•
Front planetary carrier	•	•
Front sun gear	•	•
High clutch hub	•	•
High clutch drum	•	•
Oil pump cover	•	•
Reverse clutch drum	—	•

ASSEMBLY


Adjustment (Cont'd)

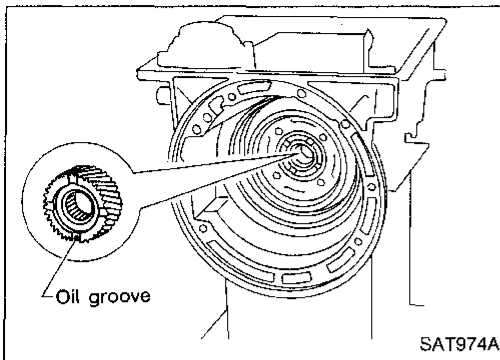


1. Install front side clutch and gear components.
 - a. Install rear sun gear on transmission case.
 - **Pay attention to its direction.**

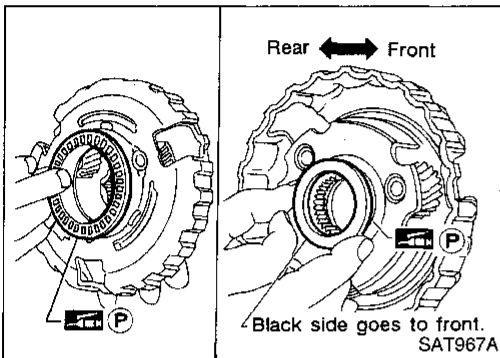


- b. Install needle bearing on front of front planetary carrier.
 - **Apply petroleum jelly to needle bearing.**
 - c. Install needle bearing on rear of front planetary carrier.
 - **Apply petroleum jelly to bearing.**
 - **Pay attention to its direction — Black side goes to front.**

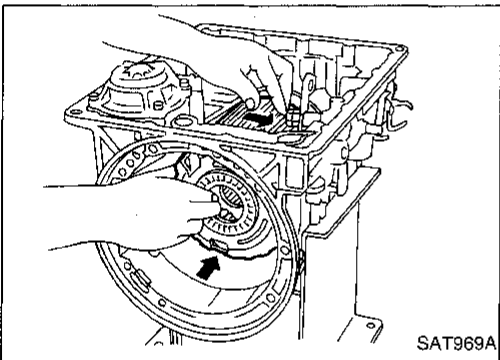

- d. While rotating forward clutch drum clockwise, install front planetary carrier on forward clutch drum.

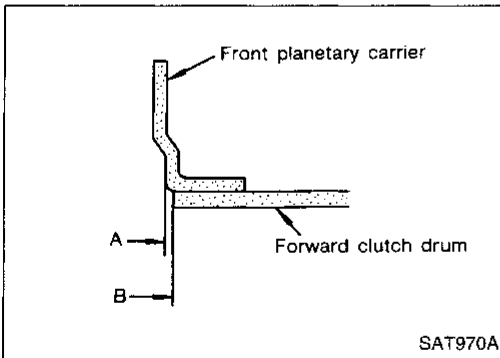

- **Check that portion A of front planetary carrier protrudes approximately 2 mm (0.08 in) beyond portion B of forward clutch assembly.**

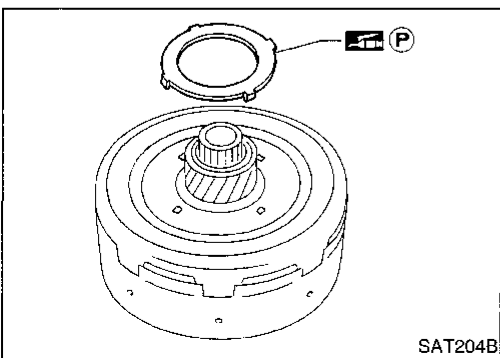


- e. Install bearing races on rear of clutch pack.
 - **Apply petroleum jelly to bearing races.**
 - **Securely engage pawls of bearing race with hole in clutch pack.**


ASSEMBLY

Adjustment (Cont'd)


f. Place transmission case in vertical position.

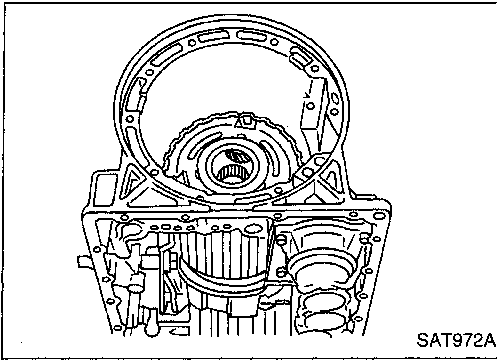


g. Install clutch pack into transmission case.

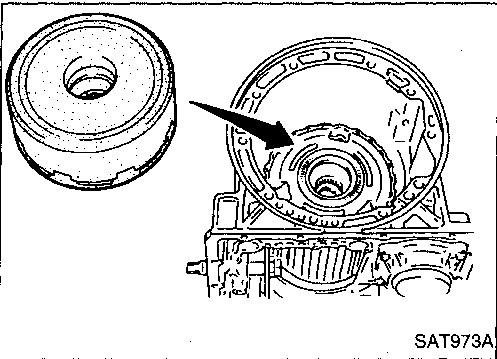


2. Adjust total end play.
Total end play "T₁":
0.25 - 0.55 mm (0.0098 - 0.0217 in)

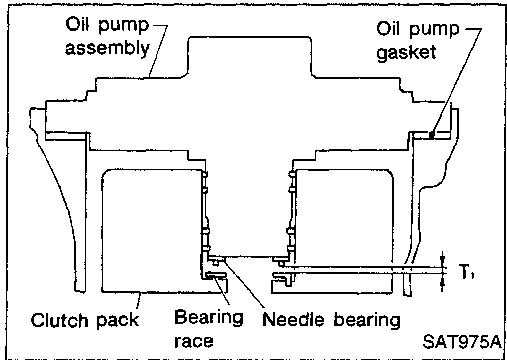

a. With needle bearing installed, place J34291-1 (bridge), J34291-2 (legs) and the J34291-5 (gauging cylinder) onto oil pump. The long ends of legs should be placed firmly on machined surface of oil pump assembly. The gauging cylinder should rest on top of the needle bearing. Lock gauging cylinder in place with set screw.

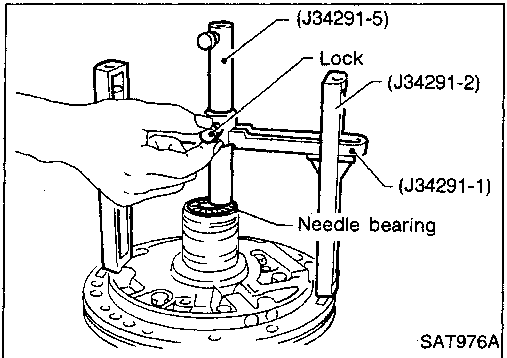


b. Install J34291-23 (gauging plunger) into gauging cylinder.

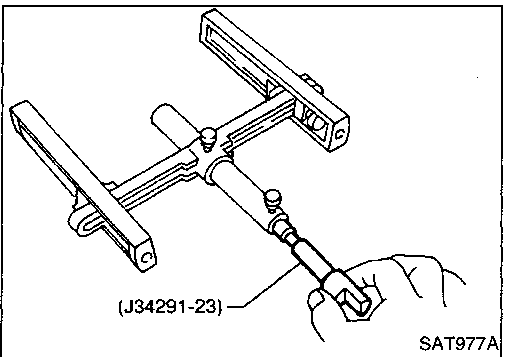


GI
MA
EM
LC
EC
FE
CL
MT
AT
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX

ASSEMBLY

Adjustment (Cont'd)

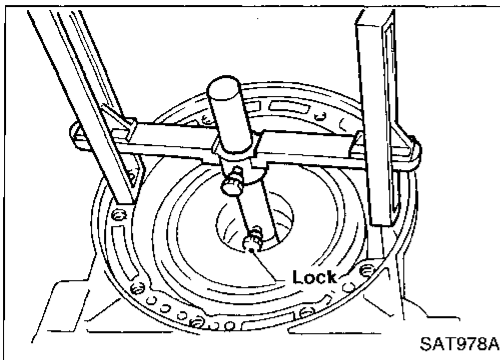

- c. Install original bearing race inside reverse clutch drum. Place shim selecting gauge with its legs on machined surface of transmission case (no gasket). Allow gauging plunger to rest on bearing race. Lock gauging plunger in place with set screw.

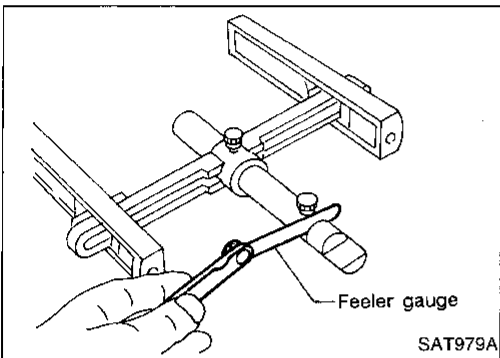


- d. Remove Tool and use feeler gauge to measure gap between gauging cylinder and gauging plunger. This measurement should give exact total end play.


Total end play "T₁":
0.25 - 0.55 mm (0.0098 - 0.0217 in)

- If end play is out of specification, decrease or increase thickness of oil pump cover bearing race as necessary.


Available oil pump cover bearing race:
Refer to SDS, AT-204.

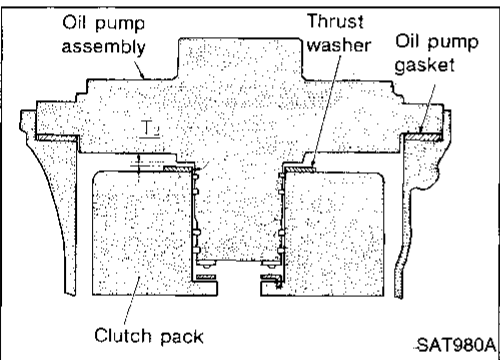

3. Adjust reverse clutch drum end play.
Reverse clutch drum end play "T₂":
0.55 - 0.90 mm (0.0217 - 0.0354 in)

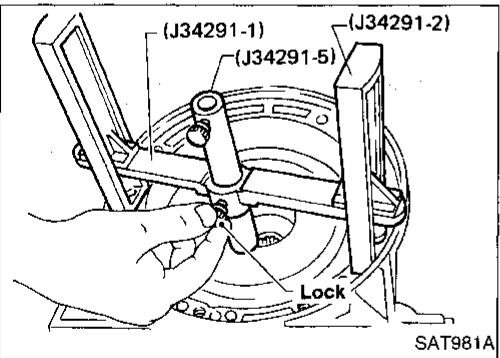



- a. Place J34291-1 (bridge), J34291-2 (legs) and J34291-5 (gauging cylinder) on machined surface of transmission case (no gasket). Allow gauging cylinder to rest on front thrust surface of reverse clutch drum. Lock cylinder in place with set screw.

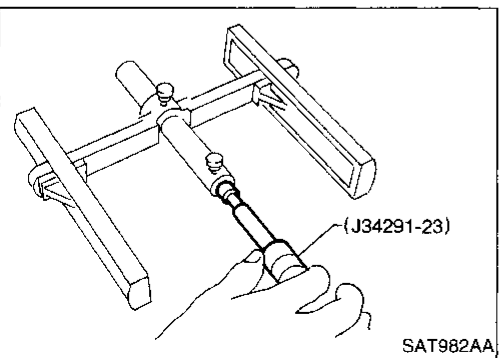

- b. Install J34291-23 (gauging plunger) into gauging cylinder.

ASSEMBLY

Adjustment (Cont'd)

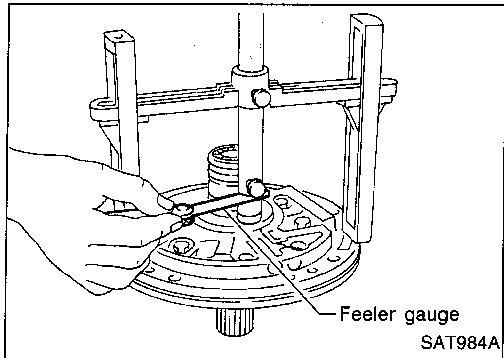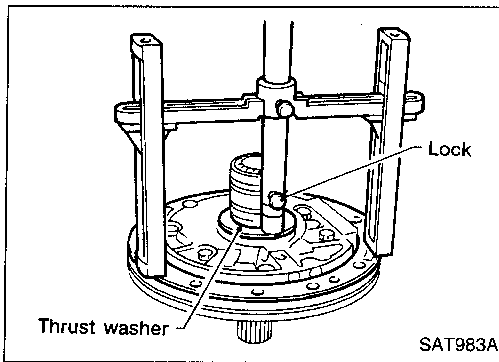

- c. Install original thrust washer on oil pump. Place shim setting gauge legs onto machined surface of oil pump assembly. Allow gauging plunger to rest on thrust washer. Lock plunger in place with set screw.

- d. Use feeler gauge to measure gap between gauging plunger and gauging cylinder. This measurement should give you exact reverse clutch drum end play.

Reverse clutch drum end play "T₂":
0.55 - 0.90 mm (0.0217 - 0.0354 in)

- If end play is out of specification, decrease or increase thickness of oil pump thrust washer as necessary.

Available oil pump thrust washer:
Refer to SDS, AT-204.

CI

MA

EM

LC

EC

FE

CL

WT

AT

PD

FA

RA

BR

ST

RS

BT



HA

EL


IDX

Assembly (2)

1. Install output shaft and parking gear.
 - a. Insert output shaft from rear of transmission case while slightly lifting front internal gear.
- **Do not force output shaft against front of transmission case.**

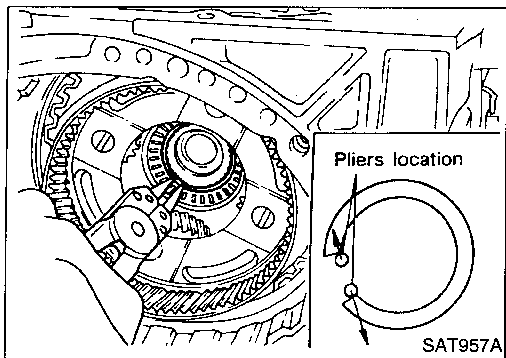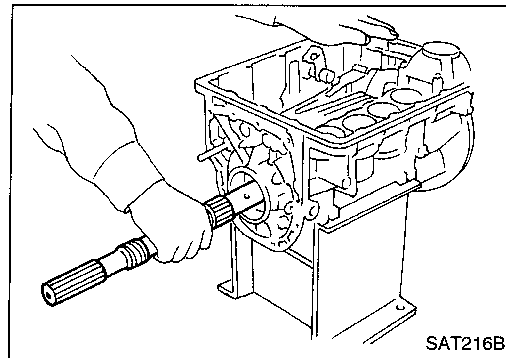


- b. Carefully push output shaft against front of transmission case. Install snap ring on front of output shaft.
- **Check to be sure output shaft cannot be removed in rear direction.**

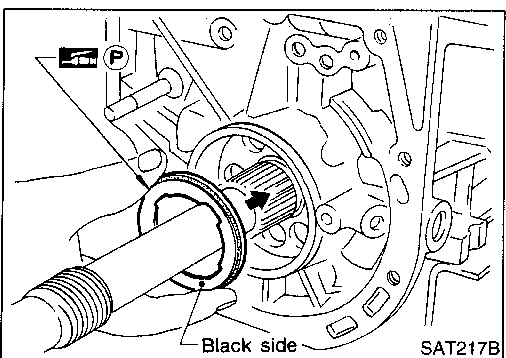


- c. Install needle bearing on transmission case.
- **Pay attention to its direction — Black side goes to rear.**
 - **Apply petroleum jelly to needle bearing.**

ASSEMBLY

Assembly (2) (Cont'd)

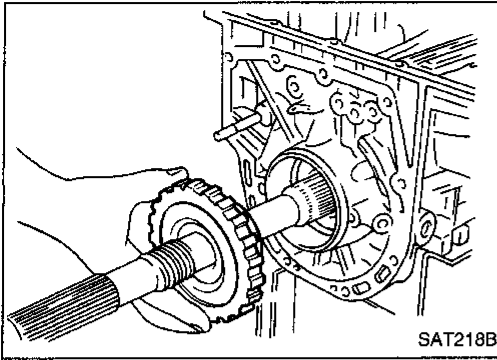


d. Install parking gear on transmission case.

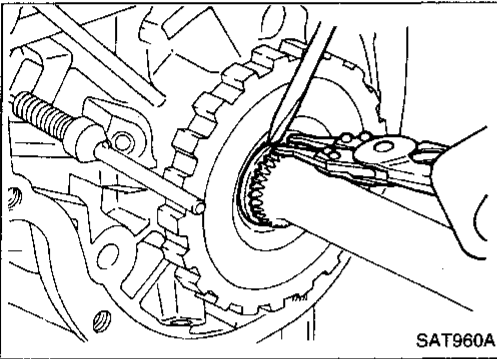

e. Install snap ring on rear of output shaft.


- **Check to be sure output shaft cannot be removed in forward direction.**

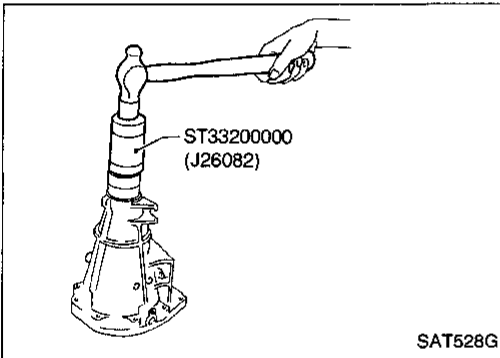

2. Install rear extension.

a. Install oil seal on rear extension.


- **Apply ATF to oil seal.**

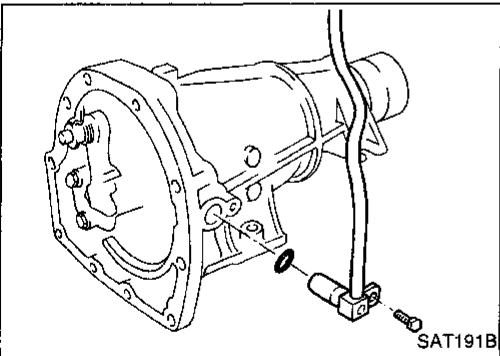

b. Install O-ring on revolution sensor.

- **Apply ATF to O-ring.**

c. Install revolution sensor on rear extension.

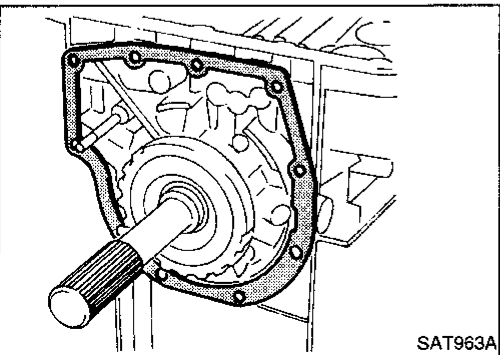


d. Install rear extension gasket on transmission case.


ASSEMBLY

Assembly (2) (Cont'd)

e. Install parking rod on transmission case.

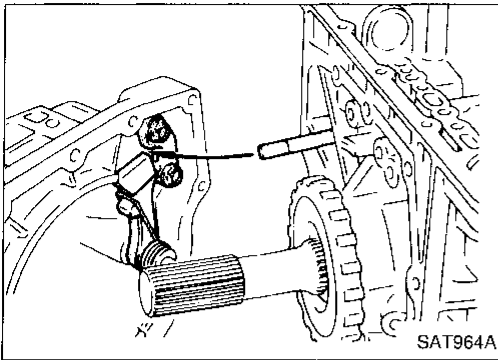


f. Install rear extension on transmission case.

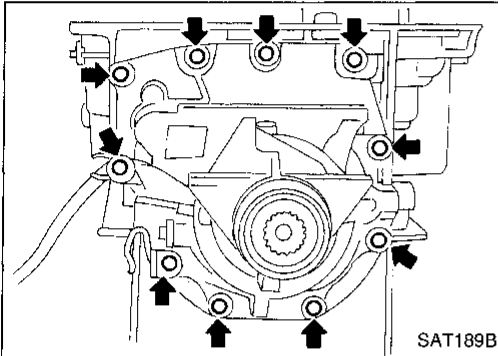

3. Install front side clutch and gear components.

a. Install rear sun gear on transmission case.

- **Pay attention to its direction.**

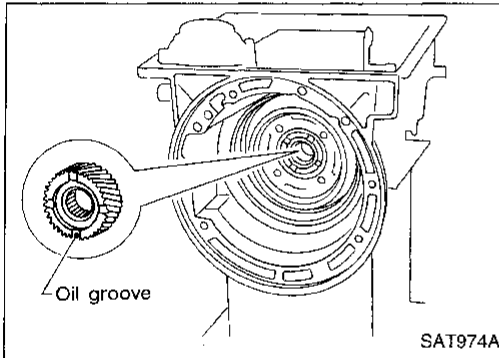


b. Make sure needle bearing is on front of front planetary carrier.

- **Apply petroleum jelly to needle bearing.**


c. Make sure needle bearing is on rear of front planetary carrier.

- **Apply petroleum jelly to bearing.**

- **Pay attention to its direction — Black side goes to front.**

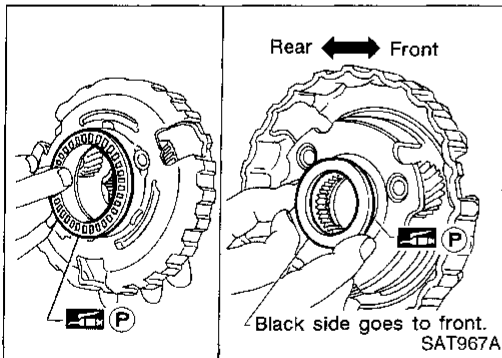

d. While rotating forward clutch drum clockwise, install front planetary carrier on forward clutch drum.

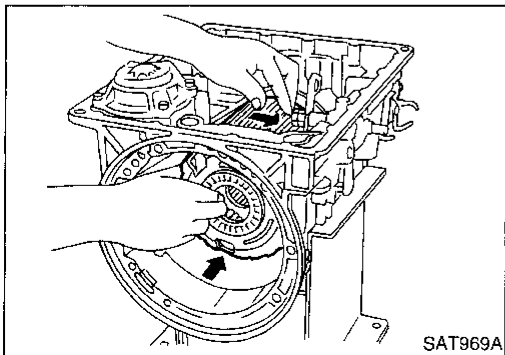

GI

MA

EM

LC

EC

FE

CL

MT

AT

PD

FA

RA

BR

ST

RS

BT


HA

EL


IDX

ASSEMBLY


Assembly (2) (Cont'd)

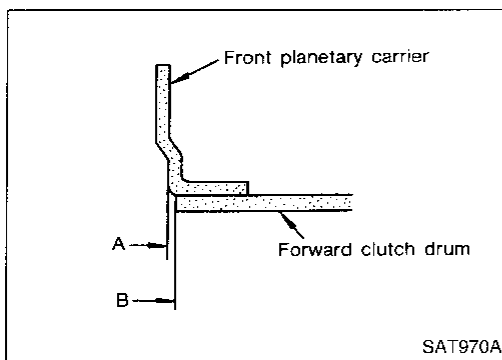


- Check that portion A of front planetary carrier protrudes approximately 2 mm (0.08 in) beyond portion B of forward clutch assembly.

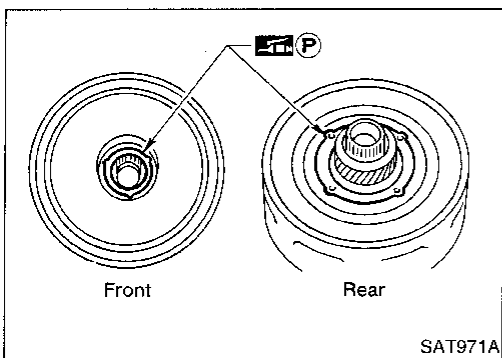


- e. Make sure bearing races are on front and rear of clutch pack.
- Apply petroleum jelly to bearing races.
- Securely engage pawls of bearing races with holes in clutch pack.

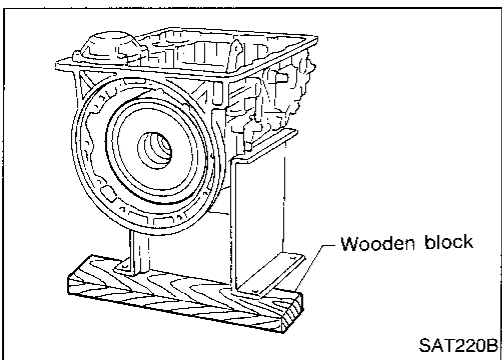

- f. Install clutch pack into transmission case.

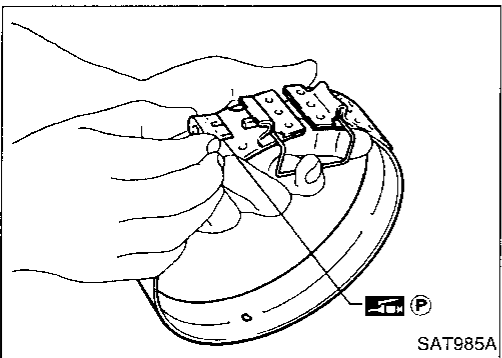


- 4. Install brake band and band strut.
- a. Install band strut on brake band.
- Apply petroleum jelly to band strut.

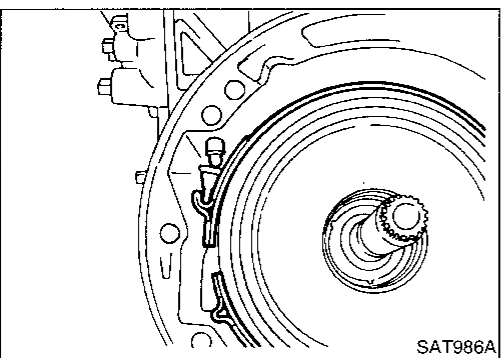

- b. Place brake band on periphery of reverse clutch drum, and insert band strut into end of band servo piston stem.

ASSEMBLY

Assembly (2) (Cont'd)

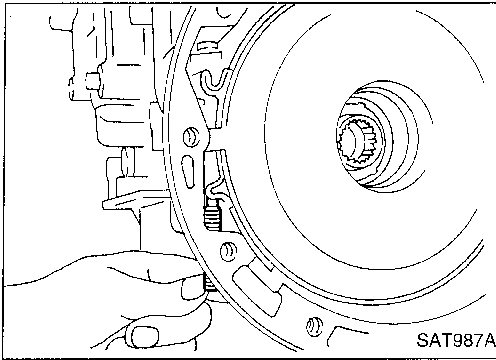


- c. Install anchor end bolt on transmission case. Then, tighten anchor end bolt just enough so that reverse clutch drum (clutch pack) will not tilt forward.

GI

MA

EM

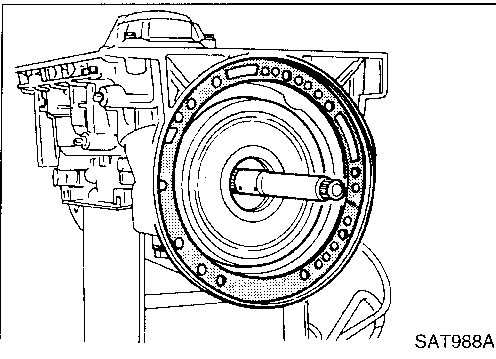


5. Install input shaft on transmission case.
• **Pay attention to its direction — O-ring groove side is front.**
6. Install gasket on transmission case.

LC

EC

FE

CL

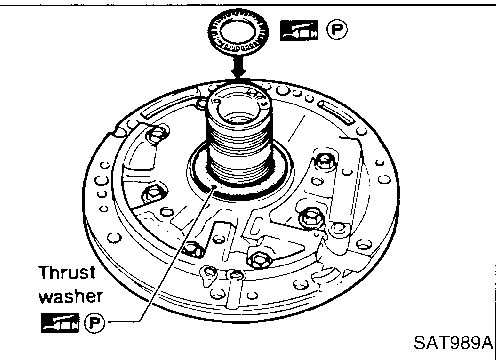


7. Install oil pump assembly.
a. Install needle bearing on oil pump assembly.
• **Apply petroleum jelly to the needle bearing.**
b. Install selected thrust washer on oil pump assembly.
• **Apply petroleum jelly to thrust washer.**

MT

AT

PD

FA

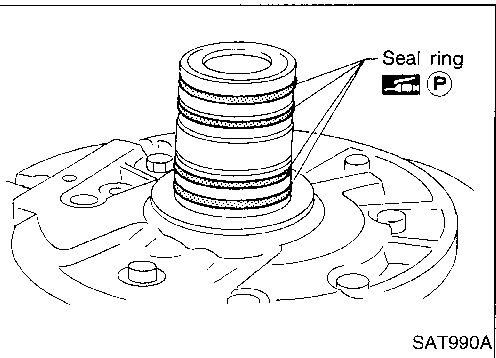


- c. Carefully install seal rings into grooves and press them into the petroleum jelly so that they are a tight fit.

RA

BR

ST

RS

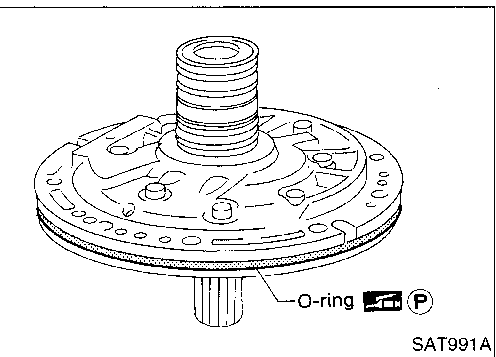

- d. Install O-ring on oil pump assembly.
• **Apply petroleum jelly to O-ring.**

BT


HA

EL


DX

ASSEMBLY


Assembly (2) (Cont'd)

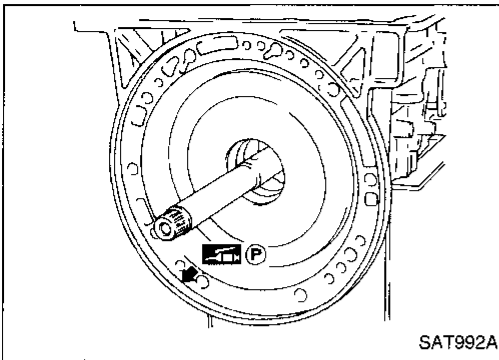


- e. Apply petroleum jelly to mating surface of transmission case and oil pump assembly.

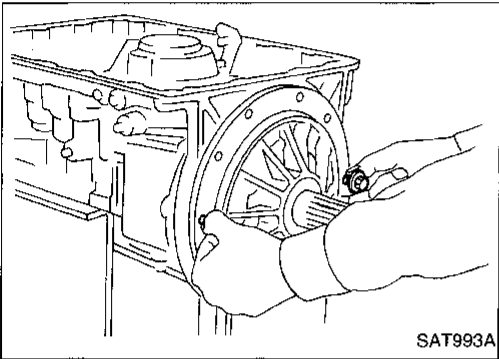


- f. Install oil pump assembly.
- Install two converter housing securing bolts in bolt holes in oil pump assembly as guides.

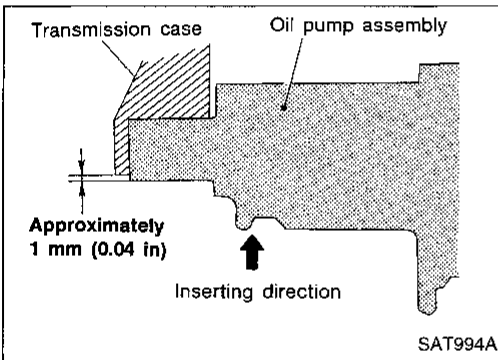

- Insert oil pump assembly to the specified position in transmission, as shown at left.

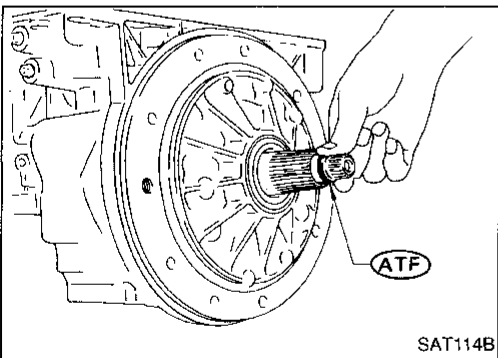


8. Install O-ring on input shaft.
- Apply ATF to O-rings.

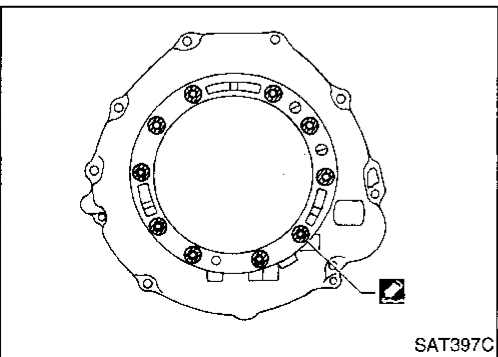

9. Install converter housing.
- a. Apply recommended sealant (Nissan genuine part: KP610-00250 or equivalent) to outer periphery of bolt holes in converter housing.
- Do not apply too much sealant.

ASSEMBLY

Assembly (2) (Cont'd)

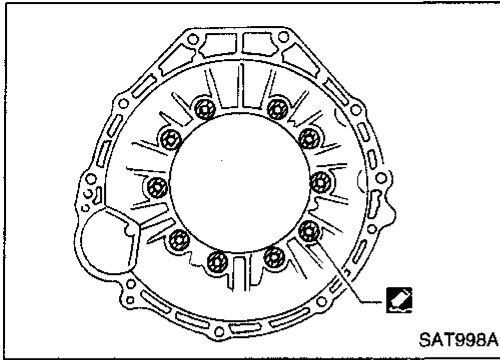


- b. Apply recommended sealant (Nissan genuine part: KP610-00250 or equivalent) to seating surfaces of bolts that secure front of converter housing.

GI

MA

EM

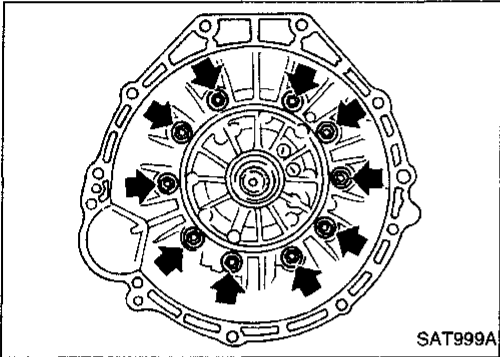


- c. Install converter housing on transmission case.

LC

EC

FE

CL

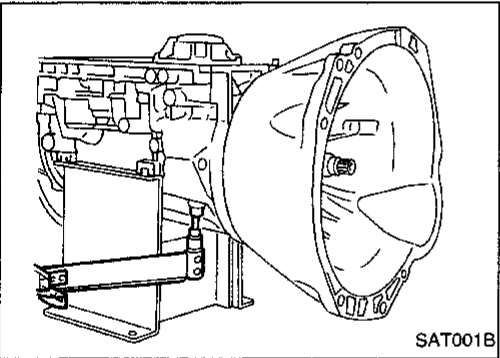


10. Adjust brake band.
a. Tighten anchor end bolt to specified torque.
Anchor end bolt:
☐ : 4 - 6 N·m
(0.4 - 0.6 kg-m, 35 - 52 in-lb)
b. Back off anchor end bolt two and a half turns.

MT

AT

PD

FA

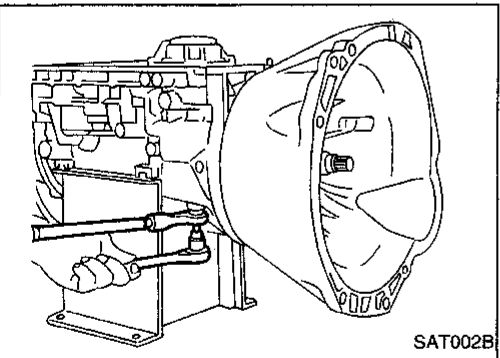


- c. While holding anchor end pin, tighten lock nut.

RA

BR

ST

RS

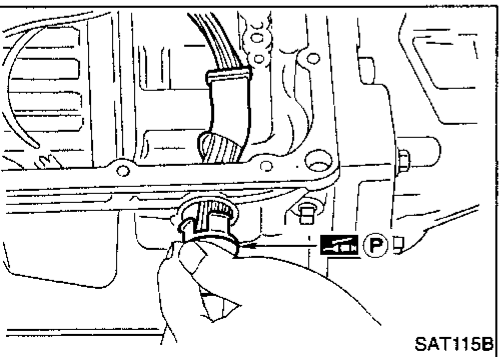

11. Install terminal cord assembly.
a. Install O-ring on terminal cord assembly.
• **Apply petroleum jelly to O-ring.**
b. Compress terminal cord assembly stopper and install terminal cord assembly on transmission case.

BT


HA

EL


IDX

ASSEMBLY


Assembly (2) (Cont'd)

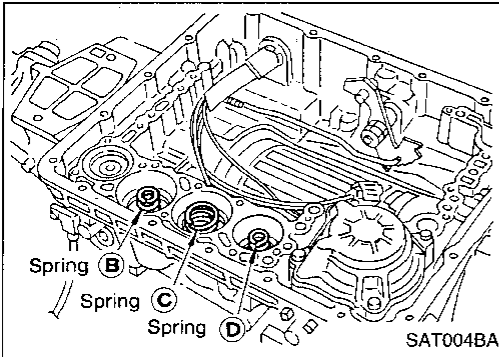


12. Install control valve assembly.
- a. Install accumulator piston return springs **B**, **C** and **D**.
- Free length of return springs:**
Refer to SDS, AT-202.

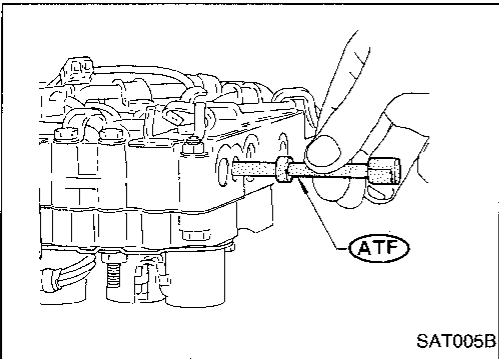


- b. Install manual valve on control valve.
- **Apply ATF to manual valve.**

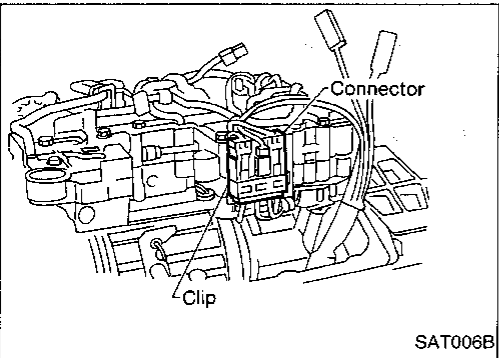

- c. Place control valve assembly on transmission case. Connect solenoid connector for upper body.
- d. Install connector clip.

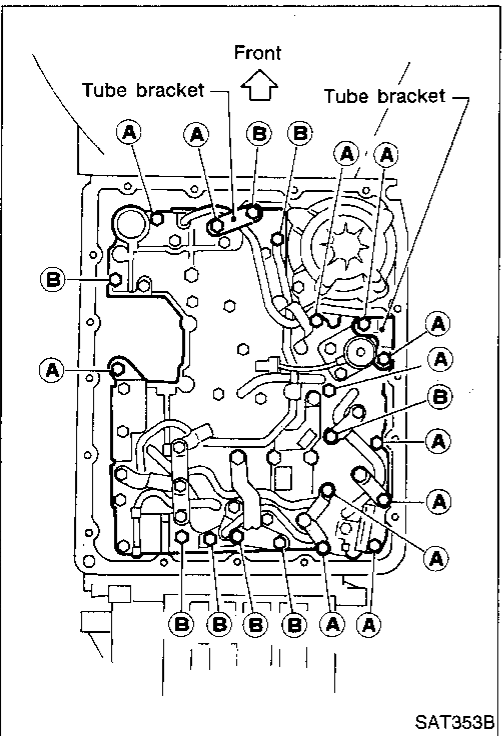


- e. Install control valve assembly on transmission case.
- f. Install connector tube brackets and tighten bolts **A** and **B**.
- **Check that terminal assembly does not catch.**


Bolt symbol	ℓ mm (in)  ℓ
A	33 (1.30)
B	45 (1.77)

ASSEMBLY


Assembly (2) (Cont'd)

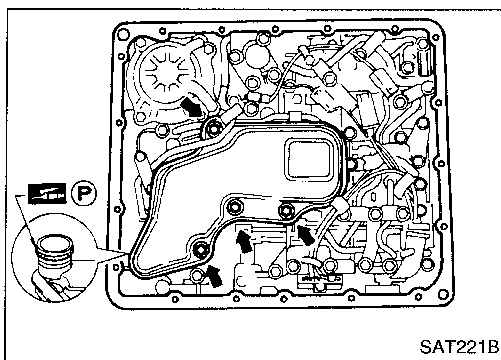


- g. Install O-ring on oil strainer.
- **Apply petroleum jelly to O-ring.**
- h. Install oil strainer on control valve.

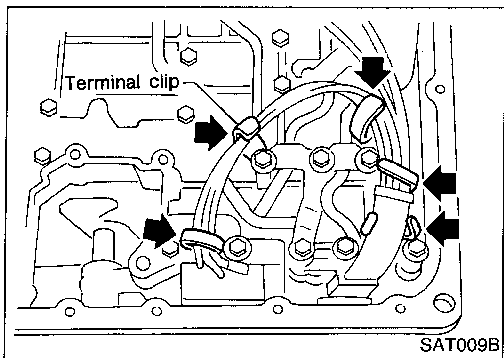


- i. Securely fasten terminal harness with clips.

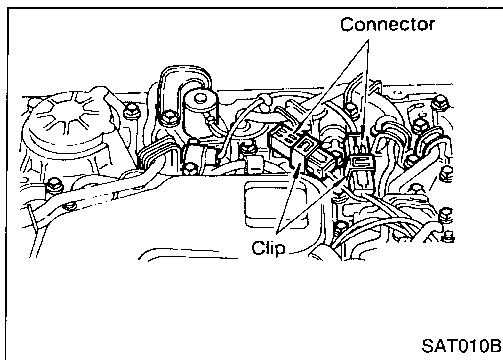

- j. Install torque converter clutch solenoid valve and fluid temperature sensor connectors.

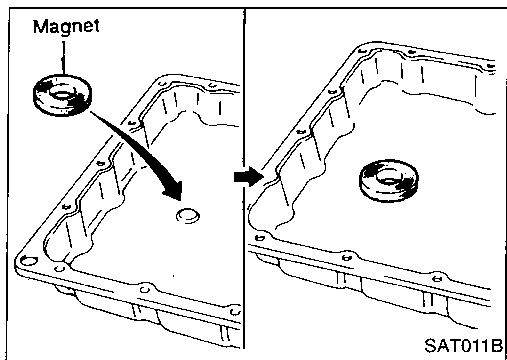

- 13. Install oil pan.
- a. Attach a magnet to oil pan.

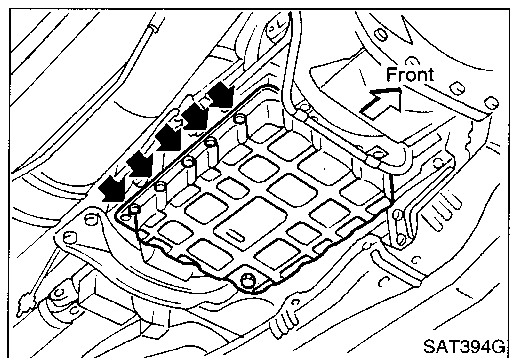

- b. Install new oil pan gasket on transmission case.
- c. Install oil pan and bracket on transmission case.
- **Always replace oil pan bolts as they are self-sealing bolts.**
- **Before installing bolts, remove traces of sealant and oil from mating surface and thread holes.**
- **Tighten four bolts in a criss-cross pattern to prevent dislocation of gasket.**
- d. Tighten drain plug.

GI

MA

EM

LC

EC

FE

CL

MT

AT

PD

FA

RA

BR

ST

RS

BT


HA

EL


IDX

ASSEMBLY


Assembly (2) (Cont'd)

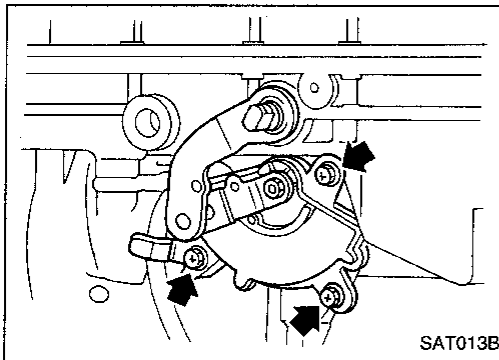


14. Install inhibitor switch.
 - a. Check that manual shaft is in "1" position.
 - b. Temporarily install inhibitor switch on manual shaft.
 - c. Move manual shaft to "N".

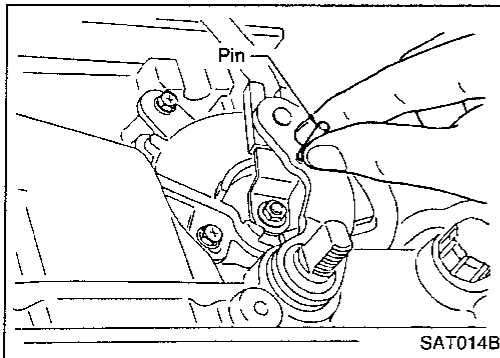


- d. Tighten bolts while inserting 4.0 mm (0.157 in) dia. pin vertically into locating holes in inhibitor switch and manual shaft.

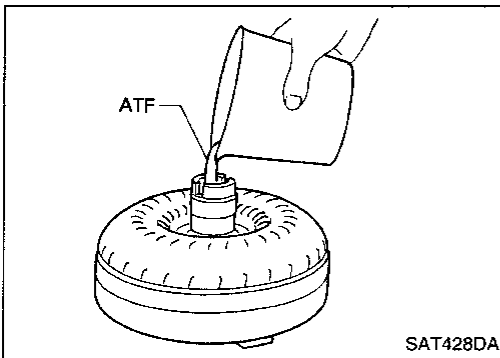

15. Install torque converter.
 - a. Pour ATF into torque converter.
 - **Approximately 2 liters (2-1/8 US qt, 1-3/4 Imp qt) of fluid are required for a new torque converter.**
 - **When reusing old torque converter, add the same amount of fluid as was drained.**

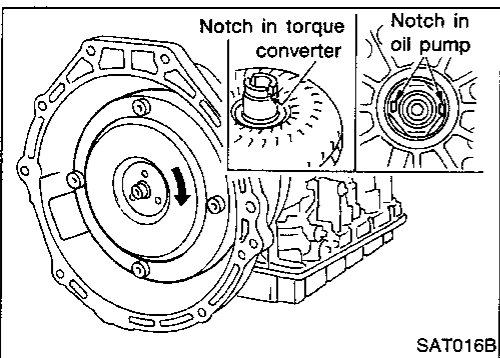

- b. Install torque converter while aligning notches and oil pump.

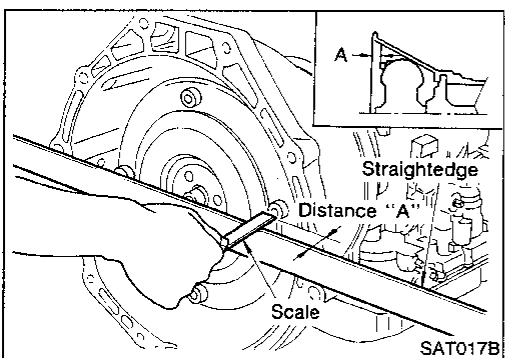

- c. Measure distance A to check that torque converter is in proper position.

Distance "A":

26.0 mm (1.024 in) or more

SERVICE DATA AND SPECIFICATIONS (SDS)

General Specifications

Engine	KA24DE
Automatic transmission model	RE4R01A
Transmission model code number	44X63
Stall torque ratio	2.0 : 1
Transmission gear ratio	
1st	2.785
2nd	1.545
Top	1.000
OD	0.694
Reverse	2.272
Recommended oil	Nissan Matic "D" (Continental U.S. and Alaska) or Genuine Nissan Automatic Transmission Fluid (Canada)*
Oil capacity ℓ (US qt, Imp qt)	8.3 (8-3/4, 7-1/4)

*: Refer to MA section ("Fluids and Lubricants", "RECOMMENDED FLUIDS AND LUBRICANTS").

Specifications and Adjustment

VEHICLE SPEED WHEN SHIFTING GEARS

Throttle position	Vehicle speed km/h (MPH)						
	D ₁ → D ₂	D ₂ → D ₃	D ₃ → D ₄	D ₄ → D ₃	D ₃ → D ₂	D ₂ → D ₁	1 ₂ → 1 ₁
Full throttle	53 - 57 (33 - 35)	96 - 104 (60 - 65)	149 - 159 (93 - 99)	143 - 153 (89 - 95)	86 - 94 (53 - 58)	40 - 44 (25 - 27)	53 - 57 (33 - 35)
Half throttle	39 - 43 (24 - 27)	74 - 80 (46 - 50)	112 - 120 (70 - 75)	56 - 64 (35 - 40)	27 - 33 (17 - 21)	10 - 14 (6 - 9)	53 - 57 (33 - 35)

VEHICLE SPEED WHEN PERFORMING AND RELEASING LOCK-UP

Throttle position	OD switch [Shift position]	Vehicle speed km/h (MPH)	
		Lock-up "ON"	Lock-up "OFF"
Full throttle	ON [D ₄]	150 - 158 (93 - 98)	144 - 152 (89 - 94)
	OFF [D ₃]	91 - 99 (57 - 62)	86 - 94 (53 - 58)
Half throttle	ON [D ₄]	112 - 120 (70 - 75)	107 - 115 (66 - 71)
	OFF [D ₃]	91 - 99 (57 - 62)	86 - 94 (53 - 58)

STALL REVOLUTION

Stall revolution rpm
2,050 - 2,250

LINE PRESSURE

Engine speed rpm	Line pressure kPa (kg/cm ² , psi)	
	D, 2 and 1 positions	R position
Idle	432 - 471 (4.41 - 4.80, 62.6 - 68.3)	686 - 715 (7.00 - 7.29, 99.5 - 103.7)
Stall	1,039 - 1,118 (10.60 - 11.40, 150.7 - 162.1)	1,480 - 1,558 (15.10 - 15.89, 214.6 - 225.9)

SERVICE DATA AND SPECIFICATIONS (SDS)

Specifications and Adjustment (Cont'd)

RETURN SPRINGS

Unit: mm (in)

Parts		Part No.	Free length	Outer diameter	
Control valve	Upper body	① Torque converter relief valve spring	31742-41X23	38.0 (1.496)	9.0 (0.354)
		② Pressure regulator valve spring	31742-41X24	44.0 (1.732)	14.0 (0.551)
		③ Pressure modifier valve spring	31742-41X19	31.95 (1.2579)	6.8 (0.268)
		④ Shuttle shift valve D spring	31762-41X00	26.5 (1.043)	6.0 (0.236)
		⑤ 4-2 sequence valve spring	31756-41X00	29.1 (1.146)	6.95 (0.2736)
		⑥ Shift valve B spring	31762-41X01	25.0 (0.984)	7.0 (0.276)
		⑦ 4-2 relay valve spring	31756-41X00	29.1 (1.146)	6.95 (0.2736)
		⑧ Shift valve A spring	31762-41X01	25.0 (0.984)	7.0 (0.276)
		⑨ Overrun clutch control valve spring	31762-41X03	23.6 (0.929)	7.0 (0.276)
		⑩ Overrun clutch reducing valve spring	31742-41X20	32.5 (1.280)	7.0 (0.276)
		⑪ Shuttle shift valve S spring	31762-41X04	51.0 (2.008)	5.65 (0.2224)
		⑫ Pilot valve spring	31742-41X13	25.7 (1.012)	9.1 (0.358)
		⑬ Lock-up control valve spring	31742-41X22	18.5 (0.728)	13.0 (0.512)
	Lower body	① Modifier accumulator piston spring	31742-27X70	31.4 (1.236)	9.8 (0.386)
		② 1st reducing valve spring	31756-41X05	25.4 (1.000)	6.75 (0.2657)
		③ 3-2 timing valve spring	31742-41X06	23.0 (0.906)	6.7 (0.264)
		④ Servo charger valve spring	31742-41X06	23.0 (0.906)	6.7 (0.264)
	Reverse clutch	16 pcs	31505-41X02	19.69 (0.7752)	11.6 (0.457)
	High clutch	16 pcs	31505-21X03	22.1 (0.870)	11.6 (0.457)
Forward clutch (Overrun clutch)	20 pcs	31521-41X00 (Assembly)	35.77 (1.4083)	9.7 (0.382)	
Low & reverse brake	18 pcs	31505-41X05	22.3 (0.878)	11.6 (0.457)	
Band servo	Spring (A)	31605-41X05	45.6 (1.795)	34.3 (1.350)	
	Spring (B)	31605-41X00	53.8 (2.118)	40.3 (1.587)	
	Spring (C)	31605-41X01	29.7 (1.169)	27.6 (1.087)	
Accumulator	Accumulator (A)	31605-41X02	43.0 (1.693)	—	
	Accumulator (B)	31605-41X10	66.0 (2.598)	—	
	Accumulator (C)	31605-41X09	45.0 (1.772)	—	
	Accumulator (D)	31605-41X06	58.4 (2.299)	—	

SERVICE DATA AND SPECIFICATIONS (SDS)

Specifications and Adjustment (Cont'd)

ACCUMULATOR O-RING

Accumulator	Diameter mm (in)			
	(A)	(B)	(C)	(D)
Small diameter end	29 (1.14)	32 (1.26)	45 (1.77)	29 (1.14)
Large diameter end	45 (1.77)	50 (1.97)	50 (1.97)	45 (1.77)

CLUTCHES AND BRAKES

Reverse clutch		
Number of drive plates	2	
Number of driven plates	2	
Thickness of drive plate mm (in)		
Standard	2.0 (0.079)	
Wear limit	1.8 (0.071)	
Clearance mm (in)		
Standard	0.5 - 0.8 (0.020 - 0.031)	
Allowable limit	1.2 (0.047)	
Thickness of retaining plate	Thickness mm (in)	Part number
	4.8 (0.189)	31537-42X02
	5.0 (0.197)	31537-42X03
	5.2 (0.205)	31537-42X04
	5.4 (0.213)	31537-42X05
5.6 (0.220)	31537-42X06	
High clutch		
Number of drive plates	4	
Number of driven plates	7	
Thickness of drive plate mm (in)		
Standard	1.6 (0.063)	
Wear limit	1.4 (0.055)	
Clearance mm (in)		
Standard	1.8 - 2.2 (0.071 - 0.087)	
Allowable limit	3.0 (0.118)	
Thickness of retaining plate	Thickness mm (in)	Part number
	3.4 (0.134)	31537-41X71
	3.6 (0.142)	31537-41X61
	3.8 (0.150)	31537-41X62
	4.0 (0.157)	31537-41X63
4.2 (0.165)	31537-41X64	

Forward clutch		
Number of drive plates	5	
Number of driven plates	5	
Thickness of drive plate mm (in)		
Standard	1.6 (0.063)	
Wear limit	1.4 (0.055)	
Clearance mm (in)		
Standard	0.45 - 0.85 (0.0177 - 0.0335)	
Allowable limit	1.85 (0.0728)	
Thickness of retaining plate	Thickness mm (in)	Part number
	8.0 (0.315)	31537-41X00
	8.2 (0.323)	31537-41X01
	8.4 (0.331)	31537-41X02
	8.6 (0.339)	31537-41X03
	8.8 (0.346)	31537-41X04
	9.0 (0.354)	31537-41X05
9.2 (0.362)	31537-41X06	
Overrun clutch		
Number of drive plates	3	
Number of driven plates	5	
Thickness of drive plate mm (in)		
Standard	2.0 (0.079)	
Wear limit	1.8 (0.071)	
Clearance mm (in)		
Standard	1.0 - 1.4 (0.039 - 0.055)	
Allowable limit	2.0 (0.079)	
Thickness of retaining plate	Thickness mm (in)	Part number
	4.2 (0.165)	31537-41X80
	4.4 (0.173)	31537-41X81
	4.6 (0.181)	31537-41X82
	4.8 (0.189)	31537-41X83
5.0 (0.197)	31537-41X84	

GI
MA
EM
LC
EC
FE
CL
MT
AT
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX

SERVICE DATA AND SPECIFICATIONS (SDS)

Specifications and Adjustment (Cont'd)

Low & reverse brake		
Number of drive plates		6
Number of driven plates		6
Thickness of drive plate mm (in)		
Standard		2.0 (0.079)
Wear limit		1.8 (0.071)
Clearance mm (in)		
Standard		0.7 - 1.1 (0.028 - 0.043)
Allowable limit		2.3 (0.091)
Thickness of retaining plate	Thickness mm (in)	Part number
	7.2 (0.283)	31667-41X13
	7.4 (0.291)	31667-41X14
	7.6 (0.299)	31667-41X07
	7.8 (0.307)	31667-41X08
	8.0 (0.315)	31667-41X00
	8.2 (0.323)	31667-41X01
	8.4 (0.331)	31667-41X02
	8.6 (0.339)	31667-41X03
	8.8 (0.346)	31667-41X04
9.0 (0.354)	31667-41X05	
9.2 (0.362)	31667-41X06	
Brake band		
Anchor end bolt tightening torque N-m (kg-m, in-lb)		4 - 6 (0.4 - 0.6, 35 - 52)
Number of returning revolutions for anchor end bolt		2.5

OIL PUMP AND LOW ONE-WAY CLUTCH

Oil pump clearance mm (in)	
Cam ring — oil pump housing	
Standard	0.01 - 0.024 (0.0004 - 0.0009)
Rotor, vanes and control piston — oil pump housing	
Standard	0.03 - 0.044 (0.0012 - 0.0017)
Seal ring clearance mm (in)	
Standard	0.10 - 0.25 (0.0039 - 0.0098)
Allowable limit	0.25 (0.0098)

TOTAL END PLAY

Total end play "T ₁ "	0.25 - 0.55 mm (0.0098 - 0.0217 in)	
Thickness of oil pump cover bearing race	Thickness mm (in)	Part number
	0.8 (0.031)	31435-41X01
	1.0 (0.039)	31435-41X02
	1.2 (0.047)	31435-41X03
	1.4 (0.055)	31435-41X04
	1.6 (0.063)	31435-41X05
	1.8 (0.071)	31435-41X06
2.0 (0.079)	31435-41X07	

REVERSE CLUTCH DRUM END PLAY

Reverse clutch drum end play "T ₂ "	0.55 - 0.90 mm (0.0217 - 0.0354 in)	
Thickness of oil pump thrust washer	Thickness mm (in)	Part number
	0.9 (0.035)	31528-21X01
	1.1 (0.043)	31528-21X02
	1.3 (0.051)	31528-21X03
	1.5 (0.059)	31528-21X04
	1.7 (0.067)	31528-21X05
	1.9 (0.075)	31528-21X06

REMOVAL AND INSTALLATION

Manual control linkage	
Number of returning revolutions for lock nut	1
Lock nut tightening torque	11 - 15 N-m (1.1 - 1.5 kg-m, 8 - 11 ft-lb)
Distance between end of clutch housing and torque converter	26.0 mm (1.024 in) or more