

**SECTION IDX
ALPHABETICAL INDEX**

A

B

C

D

E

F

G

H

I

J

K

L

IDX

ALPHABETICAL INDEX

A

A/C air flow	ATC-36
A/C component layout	ATC-26
A/C compressor clutch removal and installation	
ATC-155	
A/C compressor mounting	ATC-152, ATC-155,
ATC-159, ATC-160, ATC-161, ATC-162, ATC-163,	
ATC-165, ATC-166, ATC-167, ATC-169	
A/C compressor precaution	ATC-13
A/C compressor special service tool	ATC-17
A/C control operation (auto A/C)	ATC-33
A/C diagnostic work flow (auto A/C)	ATC-114
A/C evaporator	ATC-167
A/C HFC134a (R134a) system precaution	ATC-5
A/C HFC134a (R134a) system service procedure	
ATC-149	
A/C HFC134a (R134a) system service tools ...	ATC-18
A/C HFC134a system service equipment precaution ...	
ATC-13	
A/C lubricant (R134a)	ATC-27
A/C lubrication oil	ATC-174
A/C operational check	ATC-75
A/C self-diagnoses (auto A/C)	ATC-66, ATC-114
A/C service data specification	ATC-174
A/C system description (auto A/C)	ATC-30
A/C trouble diagnoses (auto A/C)	ATC-52
A/C, A - Wiring diagram	ATC-59
A/T - Wiring diagram	AT-62
A/T fluid checking	AT-12, AT-71, MA-29
A/T fluid replacement	AT-12, MA-31
A/T fluid temperature sensor	AT-147
A/T IND - Wiring diagram	DI-68
A/T self-diagnoses	AT-109, AT-120
A/T shift lock system	AT-235
A/T shift lock system - Wiring diagram	AT-236
A/T trouble diagnoses	AT-53
Accelerator control system	ACC-2
Accelerator pedal position (APP) sensor	EC-562,
EC-569, EC-583, EC-1226, EC-1233, EC-1247	
Accelerator pedal released position learning	EC-63,
EC-703	
Air bag	SRS-3
Air bag disposal	SRS-50
Air bag precautions	SRS-3
Air cleaner and air duct	EM-170
Air cleaner and air duct(VQ35DE)	EM-17
Air cleaner filter replacement	MA-17, MA-25
Air cleaner filter(VQ35DE)	EM-18
Air conditioner cut control	EC-35, EC-683
Air flow meter - See Mass air flow sensor	EC-177,
EC-185, EC-826, EC-834, EC-1063	
Air mix. door motor	ATC-86, ATC-143
Ambient sensor	ATC-116, ATC-129
Angular tightening application	EM-157
Angular tightening application(VQ35DE)	EM-6
APPS1 - Wiring diagram	EC-564, EC-1228
APPS2 - Wiring diagram	EC-571, EC-1235
APPS3 - Wiring diagram	EC-585, EC-1249

ASC/BS - Wiring diagram	EC-542, EC-1201
ASC/SW - Wiring diagram	EC-525, EC-1183
ASCBOF - Wiring diagram	EC-632, EC-1304
ASCD	EC-657, EC-1329
ASCD (automatic speed control device)	ACS-3
ASCIND - Wiring diagram	EC-639, EC-1311
Ashtray illumination	LT-237
AT indicator lamp	DI-68
Auto air conditioner - Wiring diagram	ATC-59
Auto amp	ATC-128
Auto anti-dazzling inside mirror	GW-96
Automatic amplifier	ATC-64, ATC-77, ATC-128
Automatic transmission fluid replacement	MA-32
AV and NAVI control unit	AV-102
AV communication line	AV-81, AV-142
AWD - Wiring diagram	TF-36
Axle	MA-37
Axle housing (rear)	RAX-7

B

Back Door	BL-196
Back door	BL-196
Back door opener - See Back door	BL-200
BACK/L - Wiring diagram	LT-194
Back-up lamp	LT-194
Battery	SC-4
Battery/Starting/Charging System Tester	SC-6, SC-13, SC-26
BCM (Body control module)	BCS-3
Block heater	EM-231
Block heater(VQ35DE)	EM-118
Blower motor	ATC-92, ATC-136
Blower unit	ATC-134
Board computer	AV-54
Bose speaker amp.	AV-7
Brake booster	BR-15
Brake fluid level	MA-35
Brake hydraulic line	BR-11
Brake inspection	MA-35
Brake lines and cables inspection	MA-35
Brake master cylinder	BR-13
Brake switch	EC-557, EC-1221
BRK/SW - Wiring diagram	EC-558, EC-1222
Bulb specifications	LT-294
Bumper, front	EI-14
Bumper, rear	EI-18

C

Camshaft	EM-202
Camshaft inspection	EM-205
Camshaft inspection(VQ35DE)	EM-82
Camshaft position sensor (PHASE) ..	EC-315, EC-965
Camshaft(VQ35DE)	EM-80
CAN	DI-33
CAN - Wiring diagram	EC-155, EC-797, LAN-21, LAN-52, LAN-88, LAN-134, LAN-168, LAN-207
CAN (Controller Area Network)	BL-23, BL-70, BL-119,

ALPHABETICAL INDEX

BL-220, GW-22, GW-100, RF-13, SE-17, LAN-6, LAN-20, LAN-51, LAN-86, LAN-132, LAN-166, LAN-205	Crash zone sensor	SRS-46
CAN communication EC-37, EC-154, EC-684, EC-796, AT-122, TF-28, TF-52, WT-10, BRC-11, BL-23, BL-70, BL-119, BL-220, GW-22, GW-100, RF-13, SE-17, WW-9, LAN-6, LAN-20, LAN-51, LAN-86, LAN-132, LAN-166, LAN-205	Cylinder block	EM-231
	Cylinder block boring	EM-251
	Cylinder block(VQ35DE)	EM-118
	Cylinder head bolt tightening(VQ35DE)	EM-99
	Cylinder head(VQ35DE)	EM-96
D		
Canister -See EVAP canister	EC-646, EC-1318	
CHARGE - Wiring diagram	SC-24	
Charging system	SC-23	
Chassis and body maintenance	MA-29	
CHIME - Wiring diagram	DI-90	
CIGAR - Wiring diagram	WW-67	
Cigarette lighter	WW-67	
Cigarette lighter illumination	LT-238	
Circuit breaker	PG-17	
Clock	DI-110	
CLOCK - Wiring diagram	DI-110	
Closed loop control	EC-33, EC-680	
Collision diagnosis	SRS-57	
Combination lamp, rear, removal and installation		
LT-229		
Combination meter	DI-4	
Combination meter removal and installation - See		
Instrument panel	IP-11	
COMM - Wiring diagram	AV-81, AV-142	
COMPAS - Wiring diagram	DI-54	
Compass	DI-52	
Component Location (auto A/C)	ATC-56	
Compression pressure(VQ35DE)	EM-96	
Compressor clutch removal and installation	ATC-155	
Compressor special service tool	ATC-17	
Condenser	ATC-166	
Connecting rod	EM-248	
Connecting rod bearing clearance	EM-248	
Connecting rod bearing clearance(VQ35DE)	EM-136	
Connecting rod bushing clearance	EM-248	
Connecting rod bushing clearance(VQ35DE)	EM-136	
Connecting rod(VQ35DE)	EM-134	
Console box - See Instrument panel	IP-10	
CONSULT for VDC	BRC-38	
Control units (terminal arrangement)	PG-92	
Control valve (A/T)	AT-47	
Controller Area Network (CAN) BL-23, BL-70, BL-119, BL-220, GW-22, GW-100, RF-13, SE-17, LAN-6, LAN-20, LAN-51, LAN-86, LAN-132, LAN-166, LAN-205		
Converter housing installation	AT-271, AT-275	
COOL/F - Wiring diagram	EC-484, EC-1145	
Cooling circuit (engine)	CO-33	
Cooling circuit (engine)(VQ35DE)	CO-9	
Cooling fan	CO-45	
Cooling fan motor	EC-492, EC-1151	
Cowl top	EI-24	
Cowl top cover	EI-24	
Crankcase ventilation system - See Positive crankcase ventilation	EC-655, EC-1327	
Crankshaft	EM-232	
Crankshaft position sensor (POS)	EC-309, EC-959	
Crankshaft(VQ35DE)	EM-134	
E		
ECM power supply EC-149, EC-412, EC-791, EC-1059		
ECM/PW - Wiring diagram	EC-413, EC-1060	
ECTS - Wiring diagram	EC-199, EC-847	
Electric sunroof	RF-10	
Electric throttle control actuator	EC-423, EC-425, EC-1077, EC-1079	
Electrical load signal circuit	EC-621, EC-1293	
Electrical unit	PG-92	
Electrical units location	PG-85	
Electronic ignition (EI) system	EC-34, EC-681	
Engine control module (ECM)	EC-409, EC-1056	
Engine control system diagram and chart	EC-29, EC-676	
Engine coolant	CO-35	
Engine coolant temperature sensor (ECTS) ...	EC-197, EC-209, EC-845, EC-857	
Engine coolant(VQ35DE)	CO-11	
Engine oil	LU-25	
Engine oil filter replacement	MA-26	
Engine oil precautions	GI-8	
Engine oil(VQ35DE)	LU-7	
Engine removal	EM-227	

A

B

C

D

E

F

G

H

I

J

K

IDX

ALPHABETICAL INDEX

Engine removal(VQ35DE)	EM-108	Fuel precautions	GI-6 , GI-7
Engine room cover	EM-166	Fuel pressure check	EC-65 , EC-705
ETC1 - Wiring diagram	EC-426 , EC-1080	Fuel pressure release	EC-65 , EC-705
ETC2 - Wiring diagram	EC-433 , EC-1087	Fuel pump	EC-609 , EC-1281
ETC3 - Wiring diagram	EC-437 , EC-1091	Fuel pump and gauge	FL-5
EVAP canister	EC-646 , EC-1318	Fuel system	FL-3
EVAP canister purge volume control solenoid valve	EC-343 , EC-502 , EC-990 , EC-1160	Fuel tank	FL-11
EVAP canister vent control valve	EC-350 , EC-510 , EC-997 , EC-1168	Fuel tank temperature sensor	EC-283 , EC-288 , EC-933 , EC-938
EVAP control system (small leak) diagnosis ..	EC-333 , EC-374 , EC-981 , EC-1021	Fuel tank vacuum relief valve	EC-646 , EC-1318
EVAP control system pressure sensor	EC-357 , EC-360 , EC-366 , EC-1004 , EC-1007 , EC-1013	FUELB1 - Wiring diagram ..	EC-269 , EC-277 , EC-918 , EC-927
EVAP control system purge flow monitoring diagnosis	EC-328 , EC-976	FUELB2 - Wiring diagram ..	EC-270 , EC-278 , EC-919 , EC-928
EVAP vapor lines inspection	MA-21 , MA-28	Fuse	PG-17
Evaporative emission (EVAP) system	EC-643 , EC-1315	Fuse and fusible link box	PG-99
Evaporator	ATC-167	Fusible link	PG-17
Exhaust manifold	EM-177		
Exhaust manifold(VQ35DE)	EM-25		
Exhaust system	EX-3		
Exhaust system inspection	EX-3 , MA-29		
Expansion valve	ATC-169		

F

F/FOG - Wiring diagram	LT-135
F/PUMP - Wiring diagram	EC-610 , EC-1282
Final drive removal and installation ..	FFD-10 , RFD-11
Floor trim	EI-40
Flow charts	GI-27
Fluid temperature sensor (A/T)	AT-147
Fluorescent leak detector	ATC-170
Fog lamp, front	LT-119
Front axle	FAX-4 , FAX-10
Front brake solenoid valve	AT-162 , AT-164
Front bumper	EI-14
Front door	BL-185 , BL-189 , GW-90
Front fog lamp	LT-119
Front passenger air bag	SRS-41
Front seat belt	SB-4
Front seat belt pre-tensioner	SB-2 , SRS-3 , SRS-48
Front side air bag	SRS-42
Front suspension	FSU-6
Front washer	WW-4
Front wiper	WW-4
FTTS - Wiring diagram	EC-285 , EC-289 , EC-935 , EC-939
Fuel cut control (at no load high engine speed)	EC-35 , EC-683
Fuel filter replacement	FL-5
Fuel gauge	DI-4
Fuel injector and fuel tube	EM-186
Fuel injector and fuel tube(VQ35DE)	EM-43
Fuel level sensor	EC-392 , EC-394 , EC-396 , EC-1039 , EC-1041 , EC-1043
Fuel line inspection	FL-3 , MA-17 , MA-25

G

Gauges	DI-4
Glass	GW-11 , GW-90 , GW-93
Glove box lamp	LT-236 , LT-293
GPS antenna	AV-101
Grille - See Exterior	EI-23
Ground distribution	PG-46

H

H/AIM - Wiring diagram	LT-115
H/LAMP - Wiring diagram	LT-25
Harness connector	PG-89
Harness layout	PG-61
Hazard warning lamp	LT-145
Headlamp aiming control	LT-115
Headlamp leveler - See Headlamp aiming control	LT-115
Headlining - See Roof trim	EI-42
Heated oxygen sensor 1 (bank 1)	EC-216 , EC-225 , EC-237 , EC-441 , EC-447 , EC-864 , EC-873 , EC-886 , EC-1103 , EC-1109
Heated oxygen sensor 1 (bank 2)	EC-216 , EC-225 , EC-237 , EC-441 , EC-447 , EC-864 , EC-873 , EC-886 , EC-1103 , EC-1109
Heated oxygen sensor 1 heater (bank 1)	EC-161 , EC-810
Heated oxygen sensor 1 heater (bank 2)	EC-161 , EC-810
Heated oxygen sensor 2 (bank 1)	EC-247 , EC-256 , EC-454 , EC-465 , EC-896 , EC-905 , EC-1116 , EC-1127
Heated oxygen sensor 2 (bank 2)	EC-247 , EC-256 , EC-454 , EC-465 , EC-896 , EC-905 , EC-1116 , EC-1127
Heated oxygen sensor 2 heater (bank 1)	EC-169 , EC-818
Heated oxygen sensor 2 heater (bank 2)	EC-169 , EC-818
Heated seat	SF-114
Heater and cooling unit (Heater core)	ATC-138
HFC134a (R134a) system precaution	ATC-5

ALPHABETICAL INDEX

HFC134a (R134a) system service procedure	ATC-149	room)	PG-18
HFC134a (R134a) system service tools	ATC-18	IVCB1 - Wiring diagram	EC-417 , EC-802 , EC-1071
HFC134a system service equipment precaution	ATC-13	IVCB2 - Wiring diagram	EC-419 , EC-804 , EC-1073
High & low reverse clutch solenoid valve	AT-170 , AT-172	IVCSB1 - Wiring diagram	EC-1096
Hood	BL-14	IVCSB2 - Wiring diagram	EC-1098
Horn	WW-71	IVIS (Infiniti vehicle immobilizer system) precautions ...	GI-3
HORN - Wiring diagram	WW-71		
HSEAT - Wiring diagram	SE-115		
<hr/>			
I			
IATS - Wiring diagram	EC-194 , EC-842		
ICC - Wiring diagram	ACS-28		
ICC/BS - Wiring diagram	EC-532 , EC-1191		
ICC/SW - Wiring diagram	EC-518 , EC-1176		
ICCBOF - Wiring diagram	EC-623 , EC-1295		
Idle air volume learning	EC-63 , EC-703		
Idle mixture ratio	EC-51 , EC-692		
Idle speed	EC-51 , EC-692		
Idle speed control (ISC)	EC-400 , EC-402 , EC-1047 , EC-1049		
Ignition coil	EM-183 , EC-591 , EC-1263		
Ignition coil(VQ35DE)	EM-40		
Ignition control system	EC-591 , EC-1263		
Ignition key hole illumination	LT-235		
Ignition timing	EC-51 , EC-692		
IGNSYS - Wiring diagram	EC-592 , EC-1264		
Illumination control	LT-293		
In vehicle sensor	ATC-119 , ATC-130		
INF/D - Wring diagram	AV-75		
INJECT - Wiring diagram	EC-604 , EC-1276		
Injector	EC-603 , EC-1275		
Input clutch solenoid valve	AT-158 , AT-160		
Instrument panel	IP-10		
Intake air temperature sensor	EC-192 , EC-212 , EC-841 , EC-860		
Intake door control linkage adjustment	ATC-91		
Intake door motor	ATC-89 , ATC-137		
Intake manifold	EM-172		
Intake manifold collector(VQ35DE)	EM-19		
Intake manifold(VQ35DE)	EM-23		
Intake sensor	ATC-125 , ATC-132		
Intake valve timing control (Bank 1)	EC-157 , EC-799		
Intake valve timing control (Bank 2)	EC-157 , EC-799		
Intake valve timing control position sensor (Bank 1)	EC-1095		
Intake valve timing control position sensor (Bank 2)	EC-1095		
Intake valve timing control solenoid valve (Bank 1)	EC-416 , EC-1070		
Intake valve timing control solenoid valve (Bank 2)	EC-416 , EC-1070		
Integrated homelink transmitter	BL-275		
Intelligent cruise control (ICC) system	ACS-6		
Interior	EI-37		
Interior lamp	LT-239		
IPDM (Intelligent power distribution module engine			
<hr/>			
J			
Joint connector (J/C)	PG-91		
<hr/>			
K			
Knock sensor (KS)	EC-305 , EC-955		
KS - Wiring diagram	EC-306 , EC-956		
<hr/>			
L			
LAN system circuit	ATC-80		
Laser beam aiming adjustment	ACS-20		
Latch (lower anchors and tether for children) system ...	SB-11		
Line pressure solenoid valve	AT-137		
Line pressure test (A/T)	AT-72		
Liquid gasket application	LU-21		
Liquid gasket application(VQ35DE)	EM-6 , LU-3 , CO-3		
Location of electrical units	PG-85		
Low coast brake solenoid valve	AT-174 , AT-176		
Low tire pressure warning system	WT-8		
Lubricant (R134a) A/C	ATC-7 , ATC-27		
Lubrication circuit (engine)	LU-23		
Lubrication circuit (engine)(VQ35DE)	LU-5		
Lubrication oil A/C	ATC-174		
<hr/>			
M			
M/ANT - Wiring diagram	AV-48		
MAFS - Wiring diagram	EC-180 , EC-187 , EC-829 , EC-836 , EC-1065		
Magnet clutch	ATC-98 , ATC-155		
MAIN - Wiring diagram	EC-149 , EC-791		
Major overhaul (Final drive)	RFD-14		
Major overhaul (Transfer)	TF-15		
Mass air flow sensor (MAFS)	EC-177 , EC-185 , EC-826 , EC-834 , EC-1063		
Meter	DI-4		
METER - Wiring diagram	DI-9		
MIL data link connectors circuit	EC-641 , EC-1313		
MIL/DL - Wiring diagram	EC-641 , EC-1313		
Mirror, door	GW-138		
Mirror, out side	GW-138		
Misfire	EC-299 , EC-949		
Mode door control linkage adjustment	ATC-85		
Mode door motor	ATC-83 , ATC-142		
Molding - See Exterior	EI-26 , EI-30 , EI-33		
Multiport fuel injection (MFI) system	EC-32 , EC-679		
Multiport fuel injection precautions	GI-7		

A
B
C
D
E
F
G
H
I
J
K
L
IDX

ALPHABETICAL INDEX

N

NATS - Wiring diagram	BL-257
NAVI - Wiring diagram	AV-133
Navigation system	AV-100
Nissan torque demand (NTD) control system ..	EC-682
NVH troubleshooting (Transfer)	TF-7
NVIS (Nissan vehicle immobilizer system) precautions GI-3	

O

O2H1B1 - Wiring diagram	EC-163 , EC-812
O2H1B2 - Wiring diagram	EC-165 , EC-814
O2H2B1 - Wiring diagram	EC-171 , EC-820
O2H2B2 - Wiring diagram	EC-173 , EC-822
O2S1B1 - Wiring diagram ..	EC-218 , EC-228 , EC-240 , EC-866 , EC-876 , EC-889
O2S1B2 - Wiring diagram ..	EC-220 , EC-230 , EC-242 , EC-868 , EC-878 , EC-891
O2S2B1 - Wiring diagram ..	EC-249 , EC-259 , EC-457 , EC-468 , EC-898 , EC-908 , EC-1119 , EC-1130
O2S2B2 - Wiring diagram ..	EC-251 , EC-261 , EC-459 , EC-470 , EC-900 , EC-910 , EC-1121 , EC-1132
Oil cooler (engine)(VQ35DE)	LU-14
Oil filter	LU-27
Oil filter(VQ35DE)	LU-10
Oil pan (engine)	EM-180
Oil pan (engine)(VQ35DE)	EM-28
Oil pressure (engine)	LU-25
Oil pressure (engine)(VQ35DE)	LU-8
Oil pump (A/T)	AT-308
Oil pump (engine)	LU-30
Oil pump (engine)(VQ35DE)	LU-17
Oil pump regulator valve (engine)(VQ35DE)	LU-17
Oil seal replacement (engine)	EM-213
Oil seal replacement (engine)(VQ35DE)	EM-92
Oil seal replacement (front of final drive)	FFD-7 , RFD-7
Oil seal replacement (side of final drive)	FFD-9 , RFD-9
ORVR (On-board Refueling Vapor Recovery) EC-650 , EC-1322	
Out side mirror	GW-138
Overheat	EC-1142

P

P/SCKT - Wiring diagram	WW-69
Park/Neutral position switch	EC-552 , EC-1212
Park/neutral position switch (A/T)	AT-127
Parking brake control	PB-3
PCV (positive crankcase ventilation) EC-655 , EC-1327	
Personal lamp	LT-233 , LT-266
PGC/V - Wiring diagram	EC-345 , EC-504 , EC-992 , EC-1162
PHSB1 - Wiring diagram	EC-316
PHSB2 - Wiring diagram	EC-318
Pilot bushing replacement - See Pilot converter(VQ35DE)	EM-119
Piston assembly(VQ35DE)	EM-129

Piston pin inspection	EM-246
Piston pin inspection(VQ35DE)	EM-134
Piston ring inspection	EM-247
Piston ring inspection(VQ35DE)	EM-135
Piston to bore clearance	EM-251
Piston to bore clearance(VQ35DE)	EM-138
PNP/SW - Wiring diagram	EC-554 , EC-1214
POS - Wiring diagram	EC-310 , EC-960
POWER - Wiring diagram	PG-4
Power door mirror	BL-20
Power seat	SE-109
Power socket	WW-69
Power steering fluid level	PS-8 , MA-36
Power steering gear	PS-19
Power steering hydraulic pressure	PS-31
Power steering oil pump	PS-31
Power steering system bleeding	PS-8
Power supply routing	PG-3
Power window	GW-15
PRE/SE - Wiring diagram EC-362 , EC-368 , EC-1009 , EC-1015	
Precations for Leak detection dye	ATC-16
Precautions (General)	GI-4
Pressure switch 1	AT-164 , AT-181
Pressure switch 2	AT-176
Pressure switch 3	AT-160 , AT-183
Pressure switch 5	AT-168 , AT-185
Pressure switch 6	AT-172 , AT-187
Pressure test (A/T)	AT-72
Propeller shaft	PR-7
Propeller shaft on vehicle service	PR-7
Propeller shaft vibration	PR-7
PS/SEN - Wiring diagram	EC-405 , EC-1052

R

R/VIEW - Wiring diagram	DI-115
Radiator	CO-38
Radiator(VQ35DE)	CO-14
Rear axle	RAX-5
Rear bumper	EI-18
Rear combination lamp removal and installation	LT-229
Rear door	BL-185 , GW-93
Rear seat	SE-123
Rear seat belt	SB-6
Rear suspension	RSU-5
Rear view monitor	DI-112
Rear washer	WW-50
Rear window defogger	GW-98
Rear wiper	WW-50
Refrigerant connection precaution	ATC-8
Refrigerant discharging evacuating charging ATC-149	
Refrigerant general precaution	ATC-7
Refrigerant lines	ATC-149
Refrigerant pressure sensor	EC-616 , EC-1288 , ATC-103 , ATC-167
Refrigeration cycle	ATC-21
Removal and installation (A/T)	AT-269 , AT-272

ALPHABETICAL INDEX

Removal and installation (Transfer)	TF-13	Suspension	MA-37
Revolution sensor (A/T)	AT-129 , AT-262	Symbols and abbreviations	GI-10 , GI-23
Ring gear diff. inspection	RFD-13	T	
Rocker cover	EM-189	Tachometer	DI-4
Rocker cover(VQ35DE)	EM-49	TCM circuit diagram	AT-61
Room lamp - See Interior lamp	LT-239	TCM inspection table	AT-107
ROOM/L - Wiring diagram	LT-246	Thermostat	CO-49
RP/SEN - Wiring diagram	EC-617 , EC-1289	Thermostat(VQ35DE)	CO-25
S			
Seal - See Exterior	EI-28	Three way catalyst	EM-177
SEAT - Wiring diagram	SE-111	Three way catalyst function (Bank 1) .	EC-323 , EC-971
Seat belt inspection	SB-8	Three way catalyst function (Bank 2) .	EC-323 , EC-971
Seat belt pre-tensioner disposal	SRS-50	Three way catalyst precautions	GI-6
Seat belt, front	SB-4	Three way catalyst(VQ35DE)	EM-25
Seat belt, rear	SB-6	Throttle body(VQ35DE)	EM-22
Seat, rear	SE-123	Throttle control motor	EC-436 , EC-1090
Self-diagnosis (Transfer)	TF-43	Throttle control motor relay	EC-431 , EC-1085
SEN/PW - Wiring diagram	EC-498 , EC-1157	Throttle position sensor (TPS)	EC-202 , EC-292 , EC-493 , EC-495 , EC-576 , EC-850 , EC-942 , EC-1152 , EC-1154 , EC-1240
SHIFT - Wiring diagram	AT-236	Tie-rod	PS-19
Shift change signal	EC-1219	Timing chain	EM-192
Shift lock system	AT-235	Timing chain(VQ35DE)	EM-61
Shift schedule	AT-351	Tire rotation	WT-7 , MA-34
Shock absorber (rear)	RSU-9	Tooth contact diff.	RFD-25
Side air bag (satellite) sensor	SRS-47	Top tether strap child restraint	SB-12
Side bearing preload diff.	RFD-20	Torque converter installation	AT-270 , AT-271 , AT-275
Side curtain air bag	SRS-44	Torque convertor clutch solenoid valve	AT-133 , AT-135
Side flange installation diff.	RFD-10	TPS1 - Wiring diagram	EC-294 , EC-944
Side trim	EI-37	TPS2 - Wiring diagram	EC-204 , EC-852
SMJ (super multiple junction)	PG-94	TPS3 - Wiring diagram	EC-578 , EC-1242
Spark plug	EM-184	Transfer control unit inspection table	TF-41
Spark plug replacement	MA-20 , MA-27	Transverse link (front)	FSU-14
Spark plug(VQ35DE)	EM-41	TRNSCV - Wiring diagram	BL-275
Specification value	EC-144 , EC-786	Trouble diagnoses	GI-11
Speedometer	DI-4	Turbine revolution sensor	AT-149
Spiral cable	SRS-39	TURN - Wiring diagram	LT-163
Spot lamp	LT-266	Turn signal lamp	LT-145
SROOF - Wiring diagram	BL-204 , RF-27	Tyre pressure monitoring system - trouble diagnoses ..	WT-24
SRS - See Supplemental Restraint System	SRS-5	Tyre pressure monitoring system - wiring diagram ..	WT-25
SRS Trouble diagnoses	SRS-7	IDX	
Stabilizer bar (rear)	RSU-16	U	
Stall test (A/T)	AT-71	Unified meter and A/C amp.	DI-31
Standardized relay	PG-96	V	
START - Wiring diagram	SC-11	Vacuum hose (brake system)	BR-18
Starter	SC-10	Vacuum hose drawing (Engine control)	EC-30 , EC-677
Starting system	SC-10	Valve clearance	EM-208
Steering gear and linkage inspection	MA-36	Valve clearance(VQ35DE)	EM-87
Steering linkage	PS-19	Valve guide	EM-103
Steering wheel and column	PS-10 , PS-12	Valve lifter(VQ35DE)	EM-84
Steering wheel turning force	PS-10	Valve seat(VQ35DE)	EM-104
Step lamp	LT-193	Valve spring(VQ35DE)	EM-106
Stop lamp	LT-185	Vanity mirror lamp	LT-231
Stop lamp switch	EC-557 , EC-1221		
STOP/L - Wiring diagram	LT-187		
Sun roof, electric	RF-10		
Sunload sensor	ATC-122 , ATC-131		
Sunroof	RF-10 , RF-38		
Supplemental Restraint System	SRS-5		

ALPHABETICAL INDEX

- Variable induction air control system (VIAS) . [EC-1255](#)
VDC -Wiring diagram [BRC-30](#)
Vehicle security (theft warning) system [BL-216](#)
Vehicle speed sensor (VSS) [EC-398](#), [EC-1045](#),
[EC-1217](#)
VEHSEC - Wiring diagram [BL-235](#)
VENT/V - Wiring diagram .. [EC-352](#), [EC-512](#), [EC-999](#),
[EC-1170](#)
VIAS - Wiring diagram [EC-1257](#)

W

- WARN - Wiring diagram [DI-57](#)
Warning chime [DI-72](#)
Warning lamps [DI-56](#)
Washer, front [WW-4](#)
Washer, rear [WW-50](#)
Water control valve [CO-49](#)
Water pump [CO-47](#)
Water pump(VQ35DE) [CO-21](#)
Water temperature gauge [DI-4](#)
Wheel alignment (front) [FSU-6](#)
Wheel alignment (rear) [RSU-5](#)
Wheel balance [WT-6](#), [MA-33](#)
Wheel bearing (front) [FAX-4](#), [FAX-10](#)
Wheel bearing (rear) [RAX-5](#)
Wheel hub (front) [FAX-4](#), [FAX-10](#)
Wheel hub (rear) [RAX-5](#)
Wheel sensor (VDC) [BRC-70](#)
WINDOW - Wiring diagram [GW-37](#)
Window, door [GW-90](#), [GW-93](#)
Windshield [GW-11](#)
WIP/R - Wiring diagram [WW-52](#)
WIPER - Wiring diagram [WW-26](#)
Wiper, front [WW-4](#)
Wiper, rear [WW-50](#)
Wiring Diagram (Cell code) list [PG-82](#)
Wiring diagrams [GI-15](#)
WT-T/WARN - Wiring diagram [WT-25](#)