

**SECTION IDX
ALPHABETICAL INDEX**

A

B

C

D

E

F

G

H

I

J

K

L

IDX

ALPHABETICAL INDEX

A

A/C air flow	ATC-37
A/C component layout	ATC-26
A/C compressor clutch removal and installation	
ATC-144	
A/C compressor mounting	ATC-141 , ATC-144 ,
ATC-148 , ATC-149 , ATC-150 , ATC-151 , ATC-152 ,	
ATC-154 , ATC-155 , ATC-156 , ATC-157	
A/C compressor precaution	ATC-13
A/C compressor special service tool	ATC-17
A/C control operation (auto A/C)	ATC-34
A/C diagnostic work flow (auto A/C)	ATC-102
A/C evaporator	ATC-156
A/C HFC134a (R134a) system precaution	ATC-5
A/C HFC134a (R134a) system service procedure	ATC-138
A/C HFC134a (R134a) system service tools ...	ATC-18
A/C HFC134a system service equipment precaution ...	ATC-13
A/C lubricant (R134a)	ATC-27
A/C lubrication oil	ATC-162
A/C operational check	ATC-61
A/C self-diagnoses (auto A/C)	ATC-53 , ATC-102
A/C service data specification	ATC-162
A/C system description (auto A/C)	ATC-30
A/C trouble diagnoses (auto A/C)	ATC-40
A/C, A - Wiring diagram	ATC-46
A/T fluid checking	AT-13 , AT-52 , MA-29
A/T fluid cooler cleaning	AT-15
A/T fluid replacement	AT-12 , MA-31
A/T fluid temperature sensor	AT-136
A/T IND - Wiring diagram	DI-52
A/T self-diagnoses	AT-104
A/T shift lock system	AT-237
A/T shift lock system - Wiring diagram	AT-238
A/T trouble diagnoses	AT-43
A/T Wiring diagram AT - CAN	AT-107
A/T Wiring diagram AT - FTS	AT-137
A/T Wiring diagram AT - MAIN	AT-184
A/T Wiring diagram AT - MMSW	AT-171
A/T Wiring diagram AT - NONDTC	AT-190
A/T Wiring diagram AT - PNP/SW	AT-115
A/T Wiring diagram AT - STSIG	AT-110
A/T Wiring diagram AT - VSS A/T	AT-120
Accelerator control system	ACC-3
Accelerator pedal position (APP) sensor	EC-578 ,
EC-585 , EC-599 , EC-1247 , EC-1254 , EC-1268	
Accelerator pedal released position learning ...	EC-49 ,
EC-720	
AF1B1-Wiring diagram	EC-448 , EC-457 , EC-466 ,
EC-476 , EC-487 , EC-497 , EC-509	
AF1B2-Wiring diagram	EC-450 , EC-459 , EC-468 ,
EC-478 , EC-489 , EC-499 , EC-511	
AF1HB1-Wiring diagram	EC-365
AF1HB2-Wiring diagram	EC-367
Air bag	SRS-3
Air bag precautions	SRS-3
Air cleaner and air duct(VK45DE)	EM-173

Air cleaner and air duct(VQ35DE)	EM-17
Air cleaner filter replacement	MA-25
Air cleaner filter replacement(VQ35DE)	MA-17
Air cleaner filter(VQ35DE)	EM-18
Air conditioner cut control	EC-35 , EC-705
Air flow meter - See Mass air flow sensor	EC-155 ,
EC-163 , EC-845 , EC-853 , EC-1087	
Air fuel ratio sensor 1	EC-446 , EC-455 , EC-464 ,
EC-474 , EC-484 , EC-494 , EC-506	
Air fuel ratio sensor 1 heater	EC-363
Air mix. door motor	ATC-73 , ATC-132
Ambient sensor	ATC-104 , ATC-117
Angular tightening application(VK45DE)	EM-161
Angular tightening application(VQ35DE)	EM-6
APPS1 - Wiring diagram	EC-580 , EC-1249
APPS2 - Wiring diagram	EC-587 , EC-1256
APPS3 - Wiring diagram	EC-601 , EC-1270
ASC/BS - Wiring diagram	EC-557 , EC-1223
ASC/SW - Wiring diagram	EC-541 , EC-1206
ASCBOF - Wiring diagram	EC-647 , EC-1325
ASCD	EC-679 , EC-1356
ASCD (automatic speed control device)	ACS-3
ASCIND - Wiring diagram	EC-655 , EC-1332
Ashtray illumination	LT-155
AT indicator lamp	DI-52
Auto air conditioner - Wiring diagram	ATC-46
Auto amp	ATC-116
Auto anti-dazzling inside mirror	GW-84
Automatic amplifier	ATC-51 , ATC-63 , ATC-116
Automatic transmission fluid replacement	MA-32
AV and NAVI control unit	AV-90
AV communication line	AV-69 , AV-116
AWD - Wiring diagram	TF-17
Axle	MA-37
Axle housing (rear)	RAX-7

B

Back Door	BL-160
Back door	BL-160
Back door opener - See Back door	BL-164
BACK/L - Wiring diagram	LT-125
Back-up lamp	LT-125
Battery	SC-4
Battery/Starting/Charging System Tester	SC-6 , SC-13 , SC-26
BCM (Body control module)	BCS-3
Block heater(VK45DE)	EM-242
Block heater(VQ35DE)	EM-120
Blower motor	ATC-79 , ATC-123
Blower unit	ATC-121
Board computer	AV-57
Bose speaker amp.	AV-8
Brake booster	BR-15
Brake fluid level	MA-35
Brake hydraulic line	BR-11
Brake inspection	MA-36
Brake lines and cables inspection	MA-35
Brake master cylinder	BR-13

ALPHABETICAL INDEX

Brake switch	EC-573 , EC-1242	CONSULT-II Reference value (A/T)	AT-91
BRK/SW - Wiring diagram	EC-574 , EC-1243	Control units (terminal arrangement)	PG-76
Bulb specifications	LT-199	Control valve (A/T)	AT-37
Bumper, front	EI-14	Controller Area Network (CAN) .	BL-25 , BL-60 , BL-94 ,
Bumper, rear	EI-18	BL-186 , GW-22 , GW-88 , RF-13 , SE-16 , LAN-6 , LAN-21 ,	
C			
Camshaft inspection(VK45DE)	EM-210	LAN-52 , LAN-87 , LAN-133 , LAN-167 , LAN-206	
Camshaft inspection(VQ35DE)	EM-84	Converter housing installation	AT-273 , AT-277
Camshaft position sensor (PHASE) ..	EC-268 , EC-989	COOL/F - Wiring diagram	EC-429 , EC-1168
Camshaft(VK45DE)	EM-209	Coolant replacement(VQ35DE)	MA-15
Camshaft(VQ35DE)	EM-82	Cooling circuit (engine)(VK45DE)	CO-34
CAN	DI-30	Cooling circuit (engine)(VQ35DE)	CO-9
CAN - Wiring diagram	EC-142 , EC-816 , LAN-22 , LAN-53 , LAN-89 , LAN-135 , LAN-169 , LAN-208	Cooling fan motor	EC-436 , EC-1174
CAN (Controller Area Network) .	BL-25 , BL-60 , BL-94 ,	Cooling fan(VK45DE)	CO-47
	BL-186 , GW-22 , GW-88 , RF-13 , SE-16 , LAN-6 , LAN-21 ,	Cooling fan(VQ35DE)	CO-21
	LAN-52 , LAN-87 , LAN-133 , LAN-167 , LAN-206	Cowl top	EI-24
CAN communication	EC-36 , EC-141 , EC-706 , EC-815 , AT-32 , AT-106 , TF-13 , TF-32 , WT-9 , BRC-11 , BL-25 ,	Cowl top cover	EI-24
	BL-60 , BL-94 , BL-186 , GW-22 , GW-88 , RF-13 , SE-16 ,	Crankcase ventilation system - See Positive crankcase ventilation	EC-677 , EC-1354
	WW-9 , LAN-6 , LAN-21 , LAN-52 , LAN-87 , LAN-133 , LAN-167 , LAN-206	Crankshaft position sensor (POS)	EC-262 , EC-983
Canister-See EVAP canister	EC-668 , EC-1345	Crankshaft(VK45DE)	EM-243
CHARGE - Wiring diagram	SC-24	Crankshaft(VQ35DE)	EM-137
Charging system	SC-23	Crash zone sensor	SRS-43
Chassis and body maintenance	MA-29	Cylinder block boring(VK45DE)	EM-264
CHIME - Wiring diagram	DI-60	Cylinder block(VK45DE)	EM-242
CIGAR - Wiring diagram	WW-53	Cylinder block(VQ35DE)	EM-120
Cigarette lighter	WW-53	Cylinder head bolt tightening(VK45DE)	EM-228
Cigarette lighter illumination	LT-156	Cylinder head bolt tightening(VQ35DE)	EM-101
Circuit breaker	PG-17	Cylinder head(VK45DE)	EM-226
Clock	DI-80	Cylinder head(VQ35DE)	EM-98
CLOCK - Wiring diagram	DI-80		
Closed loop control	EC-33 , EC-702		
Collision diagnosis	SRS-47		
Combination lamp, rear, removal and installation	LT-147		
Combination meter	DI-4		
Combination meter removal and installation - See			
Instrument panel	IP-11		
COMM - Wiring diagram	AV-69 , AV-116		
COMPAS - Wiring diagram	DI-38		
Compass	DI-36		
Component Location (auto A/C)	ATC-43		
Compression pressure(VK45DE)	EM-226		
Compression pressure(VQ35DE)	EM-98		
Compressor clutch removal and installation ..	ATC-144		
Compressor special service tool	ATC-17		
Condenser	ATC-155		
Connecting rod bearing clearance(VK45DE) ..	EM-266		
Connecting rod bearing clearance(VQ35DE) ..	EM-139		
Connecting rod bushing clearance(VK45DE) ..	EM-261		
Connecting rod bushing clearance(VQ35DE) ..	EM-139		
Connecting rod(VK45DE)	EM-261		
Connecting rod(VQ35DE)	EM-137		
Console box - See Instrument panel	IP-10		
CONSULT for VDC	BRC-25	Duct and grilles	ATC-134

A
B
C
D
E
F
G
H
I
J
K
L

IDX

ALPHABETICAL INDEX

E

ECM power supply	EC-135 , EC-371 , EC-808 , EC-1083
ECM/PW - Wiring diagram	EC-372 , EC-1084
ECTS - Wiring diagram	EC-177 , EC-867
Electric sunroof	RF-10
Electric throttle control actuator	EC-382 , EC-384 , EC-1100 , EC-1102
Electric throttle control actuator (VK45DE)	EM-175
Electric throttle control actuator (VQ35DE)	EM-19
Electrical load signal circuit	EC-637 , EC-1314
Electrical unit	PG-76
Electrical units location	PG-70
Electronic ignition (EI) system	EC-34 , EC-703
Engine control module (ECM)	EC-360 , EC-1080
Engine control system diagram and chart	EC-29 , EC-698
Engine coolant temperature sensor (ECTS) ...	EC-175 , EC-187 , EC-865 , EC-878
Engine coolant(VK45DE)	CO-36
Engine coolant(VQ35DE)	CO-11
Engine oil filter replacement	MA-26
Engine oil filter replacement(VQ35DE)	MA-19
Engine oil precautions	GI-8
Engine oil replacement(VQ35DE)	MA-18
Engine oil(VK45DE)	LU-25
Engine oil(VQ35DE)	LU-7
Engine removal(VK45DE)	EM-237
Engine removal(VQ35DE)	EM-110
Engine room cover(VK45DE)	EM-169
ETC1 - Wiring diagram	EC-385 , EC-1103
ETC2 - Wiring diagram	EC-392 , EC-1110
ETC3 - Wiring diagram	EC-396 , EC-1114
EVAP canister	EC-668 , EC-1345
EVAP canister purge volume control solenoid valve	EC-294 , EC-1013 , EC-1183
EVAP canister vent control valve	EC-301 , EC-526 , EC-1020 , EC-1191
EVAP control system (small leak) diagnosis ..	EC-285 , EC-325 , EC-1004 , EC-1045
EVAP control system pressure sensor	EC-308 , EC-311 , EC-317 , EC-1027 , EC-1030 , EC-1037
EVAP control system purge flow monitoring diagnosis	EC-280 , EC-999
EVAP vapor lines inspection	MA-21 , MA-28
Evaporative emission (EVAP) system	EC-665 , EC-1342
Evaporator	ATC-156
Exhaust manifold(VK45DE)	EM-179
Exhaust manifold(VQ35DE)	EM-26
Exhaust system	EX-3
Exhaust system inspection	EX-3 , MA-29
Expansion valve	ATC-157

F

F/FOG - Wiring diagram	LT-79
F/PUMP - Wiring diagram	EC-627 , EC-1303
Final drive removal and installation ..	FFD-10 , RFD-11

Floor trim	EI-40
Flow charts	GI-27
Fluid temperature sensor (A/T)	AT-136
Fluorescent leak detector	ATC-158
Fog lamp, front	LT-77
Front axle	FAX-4 , FAX-10
Front brake solenoid valve	AT-154 , AT-156
Front bumper	EI-14
Front door	BL-149 , BL-153 , GW-76
Front fog lamp	LT-77
Front passenger air bag	SRS-40
Front seat belt	SB-3
Front seat belt pre-tensioner	SB-2 , SRS-3 , SRS-45
Front suspension	FSU-6
Front washer	WW-4
Front wiper	WW-4
FTTS - Wiring diagram	EC-234 , EC-239 , EC-956 , EC-961
Fuel cut control (at no load high engine speed) ..	EC-35 , EC-705
Fuel filter replacement	FL-4
Fuel gauge	DI-4
Fuel injector and fuel tube(VK45DE)	EM-189
Fuel injector and fuel tube(VQ35DE)	EM-45
Fuel level sensor	EC-343 , EC-345 , EC-347 , EC-1063 , EC-1065 , EC-1067
Fuel line inspection	FL-3 , MA-25
Fuel line inspection(VQ35DE)	MA-17
Fuel precautions	GI-6 , GI-7
Fuel pressure check	EC-51 , EC-722
Fuel pressure release	EC-51 , EC-722
Fuel pump	EC-626 , EC-1302
Fuel pump and gauge	FL-4
Fuel system	FL-3
Fuel tank	FL-10
Fuel tank temperature sensor	EC-232 , EC-238 , EC-954 , EC-960
Fuel tank vacuum relief valve	EC-668 , EC-1345
FUELB1 - Wiring diagram ..	EC-217 , EC-226 , EC-939 , EC-948
FUELB2 - Wiring diagram ..	EC-218 , EC-227 , EC-940 , EC-949
Fuse	PG-17
Fuse and fusible link box	PG-83
Fusible link	PG-17

G

Gauges	DI-4
Glass	GW-11 , GW-76 , GW-80
Glove box lamp	LT-154 , LT-198
Grille - See Exterior	EI-23
Ground distribution	PG-31

H

H/AIM - Wiring diagram	LT-73
H/LAMP - Wiring diagram	LT-11
Harness connector	PG-74

ALPHABETICAL INDEX

Harness layout	PG-46	I
Hazard warning lamp	LT-89	A
Headlamp aiming control	LT-73	B
Headlamp leveler - See Headlamp aiming control	LT-73	C
Headlining - See Roof trim	EI-42	D
Heated oxygen sensor 1 (bank 1)	EC-886, EC-895, EC-907, EC-1126, EC-1132	E
Heated oxygen sensor 1 (bank 2)	EC-886, EC-895, EC-907, EC-1126, EC-1132	F
Heated oxygen sensor 1 heater (bank 1)	EC-829	G
Heated oxygen sensor 1 heater (bank 2)	EC-829	H
Heated oxygen sensor 2 (bank 1)	EC-195, EC-204, EC-400, EC-411, EC-917, EC-926, EC-1139, EC-1150	I
Heated oxygen sensor 2 (bank 2)	EC-195, EC-204, EC-400, EC-411, EC-917, EC-926, EC-1139, EC-1150	J
Heated oxygen sensor 2 heater (bank 1)	EC-147, EC-837	K
Heated oxygen sensor 2 heater (bank 2)	EC-147, EC-837	L
Heated seat	SE-97	M
Heater and cooling unit (Heater core)	ATC-126	IDX
HFC134a (R134a) system precaution	ATC-5	
HFC134a (R134a) system service procedure	ATC-138	
HFC134a (R134a) system service tools	ATC-18	
HFC134a system service equipment precaution	ATC-13	
High & low reverse clutch solenoid valve	AT-162, AT-164	
Hood	BL-14	
Horn	WW-57	
HORN - Wiring diagram	WW-57	
HSEAT - Wiring diagram	SE-98	

I

IATS - Wiring diagram	EC-172, EC-862
ICC - Wiring diagram	ACS-20
ICC/BS - Wiring diagram	EC-548, EC-1214
ICC/SW - Wiring diagram	EC-534, EC-1199
ICCBOF - Wiring diagram	EC-639, EC-1316
Idle air volume learning	EC-49, EC-720
Idle mixture ratio	EC-38, EC-709
Idle speed	EC-38, EC-709
Idle speed control (ISC)	EC-351, EC-353, EC-1071, EC-1073
Ignition coil	EC-608, EC-1284
Ignition coil(VK45DE)	EM-186
Ignition coil(VQ35DE)	EM-42
Ignition control system	EC-608, EC-1284
Ignition key hole illumination	LT-153
Ignition timing	EC-38, EC-709
IGNSYS - Wiring diagram	EC-609, EC-1285
Illumination control	LT-198
In vehicle sensor	ATC-107, ATC-118
INF/D - Wring diagram	AV-63
INJECT - Wiring diagram	EC-621, EC-1297
Injector	EC-620, EC-1296
Input clutch solenoid valve	AT-150, AT-152

Instrument panel	IP-10
Intake air temperature sensor	EC-170, EC-190, EC-860, EC-881
Intake door control linkage adjustment	ATC-78
Intake door motor	ATC-76, ATC-124
Intake manifold collector(VQ35DE)	EM-19
Intake manifold(VK45DE)	EM-175
Intake manifold(VQ35DE)	EM-24
Intake sensor	ATC-113, ATC-120
Intake valve timing control (Bank 1) ...	EC-144, EC-818
Intake valve timing control (Bank 2) ...	EC-144, EC-818
Intake valve timing control position sensor (Bank 1) ...	EC-1118
Intake valve timing control position sensor (Bank 2) ...	EC-1118
Intake valve timing control solenoid valve (Bank 1)	EC-375, EC-1093
Intake valve timing control solenoid valve (Bank 2)	EC-375, EC-1093
Integrated homelink transmitter	BL-229
Intelligent cruise control (ICC) system	ACS-6
Interior	EI-37
Interior lamp	LT-157
IPDM (Intelligent power distribution module engine room)	PG-18
IVCB1 - Wiring diagram	EC-376, EC-821, EC-1094
IVCB2 - Wiring diagram	EC-378, EC-823, EC-1096
IVCSB1 - Wiring diagram	EC-1119
IVCSB2 - Wiring diagram	EC-1121
IVIS (Infiniti vehicle immobilizer system) precautions ...	GI-3

K

Knock sensor (KS)	EC-257, EC-978
KS - Wiring diagram	EC-258, EC-979

L

LAN system circuit	ATC-66
Laser beam aiming adjustment	ACS-12
Latch (lower anchors and tether for children) system ...	SB-9
Line pressure solenoid valve	AT-129
Line pressure test (A/T)	AT-53
Liquid gasket application	LU-21
Liquid gasket application(VQ35DE)	EM-6, LU-3, CO-3
Location of electrical units	PG-70
Low coast brake solenoid valve	AT-166, AT-168
Low tire pressure warning system	WT-7
Lubricant (R134a) A/C	ATC-7, ATC-27
Lubrication circuit (engine)(VK45DE)	LU-23
Lubrication circuit (engine)(VQ35DE)	LU-5
Lubrication oil A/C	ATC-162

M

M/ANT - Wiring diagram	AV-51
MAFS - Wiring diagram	EC-158, EC-165, EC-848,

ALPHABETICAL INDEX

EC-855, EC-1089	
Magnet clutch	ATC-84, ATC-144
MAIN - Wiring diagram	EC-135, EC-808
Maintenance (engine)(VQ35DE)	MA-14
Major overhaul (Final drive)	RFD-14
Major overhaul (Transfer)	TF-45
Mass air flow sensor (MAFS)	EC-155, EC-163, EC-845, EC-853, EC-1087
Meter	DI-4
METER - Wiring diagram	DI-9
MIL data link connectors circuit	EC-663, EC-1340
MIL/DL - Wiring diagram	EC-663, EC-1340
Mirror, door	GW-113
Mirror, out side	GW-113
Misfire	EC-250, EC-972
Mode door control linkage adjustment	ATC-72
Mode door motor	ATC-70, ATC-131
Molding - See Exterior	EI-26, EI-30, EI-33
Multiport fuel injection (MFI) system	EC-32, EC-701
Multiport fuel injection precautions	GI-7
 N	
NATS - Wiring diagram	BL-210
NAVI - Wiring diagram	AV-107
Navigation system	AV-88
Nissan torque demand (NTD) control system ..	EC-704
NVH troubleshooting (EM)	EM-167
NVH troubleshooting (EM)(VQ35DE)	EM-13
NVH troubleshooting (Transfer)	TF-8
NVIS (Nissan vehicle immobilizer system) precautions	GI-3
 O	
O2H1B1 - Wiring diagram	EC-831
O2H1B2 - Wiring diagram	EC-833
O2H2B1 - Wiring diagram	EC-149, EC-839
O2H2B2 - Wiring diagram	EC-151, EC-841
O2S1B1 - Wiring diagram ...	EC-888, EC-898, EC-910
O2S1B2 - Wiring diagram ...	EC-890, EC-900, EC-912
O2S2B1 - Wiring diagram ..	EC-197, EC-207, EC-403, EC-414, EC-919, EC-929, EC-1142, EC-1153
O2S2B2 - Wiring diagram ..	EC-199, EC-209, EC-405, EC-416, EC-921, EC-931, EC-1144, EC-1155
Oil cooler (engine)(VQ35DE)	LU-14
Oil filter(VK45DE)	LU-28
Oil filter(VQ35DE)	LU-10
Oil pan (engine)(VK45DE)	EM-182
Oil pan (engine)(VQ35DE)	EM-30
Oil pressure (engine)(VK45DE)	LU-25
Oil pressure (engine)(VQ35DE)	LU-8
Oil pressure relief valve (engine)(VQ35DE)	LU-6
Oil pump (A/T)	AT-309
Oil pump (engine)(VK45DE)	LU-31
Oil pump (engine)(VQ35DE)	LU-17
Oil pump regulator valve (engine)(VK45DE)	LU-31
Oil pump regulator valve (engine)(VQ35DE)	LU-17
Oil seal replacement (engine)(VK45DE)	EM-222
Oil seal replacement (engine)(VQ35DE)	EM-94
Oil seal replacement (front of final drive)	FFD-7, RFD-7
Oil seal replacement (side of final drive)	FFD-9, RFD-9
ORVR (On-board Refueling Vapor Recovery)	EC-672, EC-1349
Out side mirror	GW-113
Overheat	EC-1165
 P	
P/SCKT - Wiring diagram	WW-55
Park/Neutral position switch	EC-568, EC-1233
Park/neutral position switch (A/T)	AT-114
Parking brake control	PB-3
PCV (positive crankcase ventilation)	EC-677, EC-1354
Personal lamp	LT-151, LT-184
PGC/V - Wiring diagram ..	EC-296, EC-520, EC-1015, EC-1185
PHSB1 - Wiring diagram	EC-269
PHSB2 - Wiring diagram	EC-271
Pilot bushing replacement - See Pilot	
converter(VQ35DE)	EM-121
Piston assembly(VK45DE)	EM-252
Piston assembly(VQ35DE)	EM-132
Piston pin inspection(VK45DE)	EM-259
Piston pin inspection(VQ35DE)	EM-137
Piston ring inspection(VK45DE)	EM-260
Piston ring inspection(VQ35DE)	EM-138
Piston to bore clearance(VK45DE)	EM-263
Piston to bore clearance(VQ35DE)	EM-141
PNP/SW - Wiring diagram	EC-570, EC-1235
POS - Wiring diagram	EC-263, EC-984
POWER - Wiring diagram	PG-4
Power door mirror	BL-22
Power seat	SE-92
Power socket	WW-55
Power steering fluid level	PS-8, MA-37
Power steering gear	PS-19
Power steering hydraulic pressure	PS-31
Power steering oil pump	PS-31
Power steering system bleeding	PS-8
Power supply routing	PG-3
Power window	GW-15
PRE/SE - Wiring diagram	EC-313, EC-319, EC-1032, EC-1039
Precations for Leak detection dye	ATC-16
Precautions (General)	GI-4
Pressure switch 1	AT-156, AT-176
Pressure switch 2	AT-168
Pressure switch 3	AT-152, AT-178
Pressure switch 5	AT-160, AT-180
Pressure switch 6	AT-164, AT-182
Pressure test (A/T)	AT-53
Propeller shaft	PR-6
Propeller shaft on vehicle service	PR-6
Propeller shaft vibration	PR-6
PS/SEN - Wiring diagram	EC-356, EC-1076

ALPHABETICAL INDEX

<hr/> <p>R</p> <p>R/VIEW - Wiring diagram DI-85 Radiator(VK45DE) CO-39 Radiator(VQ35DE) CO-14 Rear axle RAX-5 Rear bumper EI-18 Rear combination lamp removal and installation LT-147 Rear door BL-149, GW-80 Rear seat SE-106 Rear suspension RSU-5 Rear view monitor DI-82 Rear washer WW-36 Rear window defogger GW-86 Rear wiper WW-36 Refrigerant connection precaution ATC-8 Refrigerant discharging evacuating charging ATC-138 Refrigerant general precaution ATC-7 Refrigerant lines ATC-138 Refrigerant pressure sensor EC-632, EC-1309, ATC-90, ATC-156 Refrigeration cycle ATC-21 Removal and installation (A/T) AT-271, AT-274 Removal and installation (Transfer) TF-44 Revolution sensor (A/T) AT-118, AT-264 Ring gear diff. inspection RFD-13 Rocker cover(VK45DE) EM-194 Rocker cover(VQ35DE) EM-51 Room lamp - See Interior lamp LT-157 ROOM/L - Wiring diagram LT-164 RP/SEN - Wiring diagram EC-633, EC-1310</p> <hr/> <p>S</p> <p>Seal - See Exterior EI-28 SEAT - Wiring diagram SE-93 Seat belt inspection SB-6 Seat belt, front SB-3 Seat, rear SE-106 Self-diagnosis (Transfer) TF-22 SEN/PW - Wiring diagram EC-442, EC-1180 SHIFT - Wiring diagram AT-238 Shift change signal EC-1240 Shift lock system AT-237 Shift schedule AT-352 Shock absorber (rear) RSU-9 Side air bag (satellite) sensor SRS-44 Side bearing preload diff. RFD-20 Side curtain air bag SRS-41 Side flange installation diff. RFD-10 Side trim EI-37 SMJ (super multiple junction) PG-78 Spark plug replacement MA-27 Spark plug replacement(VQ35DE) MA-20 Spark plug(VK45DE) EM-187 Spark plug(VQ35DE) EM-43 Specification value EC-130, EC-803 Speedometer DI-4</p>	<p>Spiral cable SRS-38 Spot lamp LT-184 SROOF - Wiring diagram BL-168, RF-14 SRS - See Supplemental Restraint System SRS-5 SRS - Wiring diagram SRS-11 SRS Trouble diagnoses SRS-7 Stabilizer bar (rear) RSU-16 Stall test (A/T) AT-52 Standardized relay PG-80 START - Wiring diagram SC-11 Starter SC-10 Starting system SC-10 Steering gear and linkage inspection MA-36 Steering linkage PS-19 Steering wheel and column PS-10, PS-12 Steering wheel turning force PS-10 Step lamp LT-124 Stop lamp LT-116 Stop lamp switch EC-573, EC-1242 STOP/L - Wiring diagram LT-118 Sun roof, electric RF-10 Sunload sensor ATC-110, ATC-119 Sunroof RF-10, RF-25 Supplemental Restraint System SRS-5 Supplemental restraint system - Wiring diagram SRS-11 Suspension MA-37 Symbols and abbreviations GI-10, GI-23</p> <hr/> <p style="text-align: center;">T</p> <p>Tachometer DI-4 TCM circuit diagram AT-51 TCM inspection table AT-90 Thermostat(VK45DE) CO-51 Thermostat(VQ35DE) CO-26 Three way catalyst function (Bank 1) EC-276, EC-994 Three way catalyst function (Bank 2) EC-276, EC-994 Three way catalyst precautions GI-6 Three way catalyst(VK45DE) EM-179 Three way catalyst(VQ35DE) EM-26 Throttle control motor EC-395, EC-1113 Throttle control motor relay EC-390, EC-1108 Throttle position sensor (TPS) EC-180, EC-243, EC-437, EC-439, EC-592, EC-871, EC-965, EC-1175, EC-1177, EC-1261 Tie-rod PS-19 Timing chain(VK45DE) EM-197 Timing chain(VQ35DE) EM-63 Tire rotation WT-6, MA-35 Tooth contact diff. RFD-24 Top tether strap child restraint SB-10 Torque converter installation AT-272, AT-273, AT-277 Torque convertor clutch solenoid valve AT-125, AT-127 TPS1 - Wiring diagram EC-245, EC-967 TPS2 - Wiring diagram EC-182, EC-873 TPS3 - Wiring diagram EC-594, EC-1263 Transfer control unit inspection table TF-20 Transverse link (front) FSU-14</p>
---	---

A
B
C
D
E
F
G
H
I
J
K
L
IDX

ALPHABETICAL INDEX

TRNSCV - Wiring diagram	BL-229	Windshield	GW-11
Trouble diagnoses	GI-11	WIP/R - Wiring diagram	WW-38
Turbine revolution sensor	AT-141	WIPER - Wiring diagram	WW-11
TURN - Wiring diagram	LT-94	Wiper, front	WW-4
Turn signal lamp	LT-89	Wiper, rear	WW-36
Tyre pressure monitoring system - trouble diagnoses ..		Wiring Diagram (Cell code) list	PG-67
WT-10		Wiring diagrams	GI-15
Tyre pressure monitoring system - wiring diagram		WT-T/WARN - Wiring diagram	WT-11
WT-11			

U

Unified meter and A/C amp.	DI-29
---------------------------------	-----------------------

V

Vacuum hose (brake system)	BR-18
Vacuum hose drawing (Engine control)	EC-30
Valve clearance(VK45DE)	EM-216
Valve clearance(VQ35DE)	EM-89
Valve guide	EM-105
Valve guide(VK45DE)	EM-233
Valve lifter(VQ35DE)	EM-86
Valve seat(VK45DE)	EM-235
Valve seat(VQ35DE)	EM-107
Valve spring(VK45DE)	EM-236
Valve spring(VQ35DE)	EM-108
Vanity mirror lamp	LT-149
Variable induction air control system (VIAS) ..	EC-1276
VDC -Wiring diagram	BRC-17
Vehicle security (theft warning) system	BL-182
Vehicle speed sensor (VSS)	EC-349, EC-1069,
EC-1238	
VEHSEC - Wiring diagram	BL-188
VENT/V - Wiring diagram	EC-303, EC-528, EC-1022,
EC-1193	
VIAS - Wiring diagram	EC-1278

W

WARN - Wiring diagram	DI-41
Warning chime	DI-56
Warning lamps	DI-40
Washer, front	WW-4
Washer, rear	WW-36
Water control valve(VK45DE)	CO-51
Water pump(VK45DE)	CO-49
Water pump(VQ35DE)	CO-22
Water temperature gauge	DI-4
Wheel alignment (front)	FSU-6
Wheel alignment (rear)	RSU-5
Wheel balance	WT-5, MA-33
Wheel bearing (front)	FAX-4, FAX-10
Wheel bearing (rear)	RAX-5
Wheel hub (front)	FAX-4, FAX-10
Wheel hub (rear)	RAX-5
Wheel sensor (VDC)	BRC-57
WINDOW - Wiring diagram	GW-24
Window, door	GW-76, GW-80