

**SECTION IDX
ALPHABETICAL INDEX**

A

B

C

D

E

F

G

H

I

J

K

L

IDX

ALPHABETICAL INDEX

A

A/C air flow [ATC-37](#)
 A/C component layout [ATC-26](#)
 A/C compressor clutch removal and installation
[ATC-144](#)
 A/C compressor mounting [ATC-141](#), [ATC-144](#),
[ATC-148](#), [ATC-149](#), [ATC-150](#), [ATC-151](#), [ATC-152](#),
[ATC-154](#), [ATC-155](#), [ATC-156](#), [ATC-157](#)
 A/C compressor precaution [ATC-13](#)
 A/C compressor special service tool [ATC-17](#)
 A/C control operation (auto A/C) [ATC-34](#)
 A/C diagnostic work flow (auto A/C) [ATC-102](#)
 A/C evaporator [ATC-156](#)
 A/C HFC134a (R134a) system precaution [ATC-6](#)
 A/C HFC134a (R134a) system service procedure
[ATC-138](#)
 A/C HFC134a (R134a) system service tools ... [ATC-18](#)
 A/C HFC134a system service equipment precaution ...
[ATC-13](#)
 A/C lubricant (R134a) [ATC-27](#)
 A/C lubrication oil [ATC-162](#)
 A/C operational check [ATC-61](#)
 A/C self-diagnoses (auto A/C) [ATC-53](#), [ATC-102](#)
 A/C service data specification [ATC-162](#)
 A/C system description (auto A/C) [ATC-30](#)
 A/C trouble diagnoses (auto A/C) [ATC-40](#)
 A/C, A - Wiring diagram [ATC-46](#)
 A/T fluid checking [AT-13](#), [AT-52](#), [MA-29](#)
 A/T fluid cooler cleaning [AT-15](#)
 A/T fluid replacement [AT-12](#), [MA-31](#)
 A/T fluid temperature sensor [AT-136](#)
 A/T IND - Wiring diagram [DI-54](#)
 A/T self-diagnoses [AT-103](#)
 A/T shift lock system [AT-236](#)
 A/T shift lock system - Wiring diagram [AT-237](#)
 A/T trouble diagnoses [AT-43](#)
 A/T Wiring diagram AT - CAN [AT-107](#)
 A/T Wiring diagram AT - FTS [AT-137](#)
 A/T Wiring diagram AT - MAIN [AT-183](#)
 A/T Wiring diagram AT - MMSW [AT-171](#)
 A/T Wiring diagram AT - NONDTC [AT-190](#)
 A/T Wiring diagram AT - PNP/SW [AT-115](#)
 A/T Wiring diagram AT - STSIG [AT-110](#)
 A/T Wiring diagram AT - VSS A/T [AT-120](#)
 Accelerator pedal position (APP) sensor [EC-619](#),
[EC-626](#), [EC-640](#), [EC-1302](#), [EC-1309](#), [EC-1323](#)
 Accelerator pedal released position learning ... [EC-96](#),
[EC-786](#)
 AF1B1-Wiring diagram [EC-490](#), [EC-499](#), [EC-508](#),
[EC-518](#), [EC-529](#), [EC-539](#), [EC-551](#)
 AF1B2-Wiring diagram [EC-492](#), [EC-501](#), [EC-510](#),
[EC-520](#), [EC-531](#), [EC-541](#), [EC-553](#)
 AF1HB1-Wiring diagram [EC-407](#)
 AF1HB2-Wiring diagram [EC-409](#)
 Air bag [SRS-3](#)
 Air bag precautions [SRS-3](#)
 Air cleaner and air duct(VK45DE) [EM-176](#)
 Air cleaner and air duct(VQ35DE) [EM-17](#)

Air cleaner filter replacement [MA-25](#)
 Air cleaner filter replacement(VQ35DE) [MA-18](#)
 Air cleaner filter(VQ35DE) [EM-18](#)
 Air conditioner cut control [EC-35](#), [EC-726](#)
 Air flow meter - See Mass air flow sensor [EC-186](#),
[EC-195](#), [EC-893](#), [EC-902](#)
 Air fuel ratio sensor 1 [EC-488](#), [EC-497](#), [EC-506](#),
[EC-516](#), [EC-526](#), [EC-536](#), [EC-548](#)
 Air fuel ratio sensor 1 heater [EC-405](#)
 Air mix. door motor [ATC-73](#), [ATC-132](#)
 Ambient sensor [ATC-104](#), [ATC-117](#)
 Angular tightening application [EM-6](#)
 Angular tightening application(VK45DE) [EM-164](#)
 APPS1 - Wiring diagram [EC-621](#), [EC-1304](#)
 APPS2 - Wiring diagram [EC-628](#), [EC-1311](#)
 APPS3 - Wiring diagram [EC-642](#), [EC-1325](#)
 ASC/BS - Wiring diagram [EC-599](#), [EC-1273](#)
 ASC/SW - Wiring diagram [EC-583](#), [EC-1256](#)
 ASCBOF - Wiring diagram [EC-689](#), [EC-1379](#)
 ASCD [EC-36](#), [EC-727](#)
 ASCD (automatic speed control device) [ACS-3](#)
 ASCIND - Wiring diagram [EC-696](#), [EC-1386](#)
 Ashtray illumination [LT-157](#)
 AT indicator lamp [DI-54](#)
 Auto air conditioner - Wiring diagram [ATC-46](#)
 Auto amp [ATC-116](#)
 Auto anti-dazzling inside mirror [GW-84](#)
 Automatic amplifier [ATC-51](#), [ATC-63](#), [ATC-116](#)
 Automatic transmission fluid replacement [MA-32](#)
 AV and NAVI control unit [AV-89](#)
 AV communication line [AV-114](#)
 AWD - Wiring diagram [TF-17](#)
 Axle [MA-37](#)
 Axle housing (rear) [RAX-7](#)

B

Back Door [BL-164](#)
 Back door [BL-164](#)
 Back door opener - See Back door [BL-168](#)
 BACK/L - Wiring diagram [LT-127](#)
 Back-up lamp [LT-127](#)
 Basic inspection [EC-769](#)
 Battery [SC-4](#)
 Battery/Starting/Charging System Tester [SC-6](#), [SC-13](#),
[SC-26](#)
 BCM (Body control module) [BCS-3](#)
 Block heater(VK45DE) [EM-245](#)
 Block heater(VQ35DE) [EM-122](#)
 Blower motor [ATC-79](#), [ATC-123](#)
 Blower unit [ATC-121](#)
 Board computer [AV-58](#)
 Brake booster [BR-15](#)
 Brake fluid level [MA-35](#)
 Brake hydraulic line [BR-11](#)
 Brake inspection [MA-36](#)
 Brake lines and cables inspection [MA-35](#)
 Brake master cylinder [BR-13](#)
 Brake switch [EC-614](#), [EC-1297](#)

ALPHABETICAL INDEX

BRK/SW - Wiring diagram	EC-615 , EC-1298	Control valve (A/T)	AT-37	
Bulb specifications	LT-203	Controller Area Network (CAN) .	BL-24 , BL-59 , BL-98 , BL-191 , GW-22 , GW-88 , RF-13 , SE-16	
Bumper, front	EI-14	Converter housing installation	AT-272 , AT-276	
Bumper, rear	EI-17	COOL/F - Wiring diagram	EC-471 , EC-1217	
C				
Camshaft inspection(VK45DE)	EM-213	Coolant replacement(VQ35DE)	MA-15	
Camshaft inspection(VQ35DE)	EM-86	Cooling circuit (engine)(VK45DE)	CO-35	
Camshaft position sensor (PHASE)	EC-307 , EC-1043	Cooling circuit (engine)(VQ35DE)	CO-9	
Camshaft(VK45DE)	EM-212	Cooling fan motor	EC-478 , EC-1224	
Camshaft(VQ35DE)	EM-84	Cooling fan(VK45DE)	CO-49	
CAN	DI-29	Cooling fan(VQ35DE)	CO-21	
CAN - Wiring diagram	EC-172 , EC-863 , LAN-49 , LAN-87 , LAN-128 , LAN-173 , LAN-221 , LAN-262 , LAN-306 , LAN-353 , LAN-402 , LAN-436	Cowl top	EI-23	
CAN (Controller Area Network) .	BL-24 , BL-59 , BL-98 , BL-191 , GW-22 , GW-88 , RF-13 , SE-16	Cowl top cover	EI-23	
CAN communication	EC-171 , EC-862 , AT-32 , AT-106 , TF-13 , TF-32 , WT-9 , BRC-11 , BL-24 , BL-59 , BL-98 , BL-191 , GW-22 , GW-88 , RF-13 , SE-16 , DI-84 , WW-9	Crankcase ventilation system - See Positive crankcase ventilation	EC-51 , EC-742	
Canister-See EVAP canister	EC-42 , EC-733	Crankshaft position sensor (POS) ...	EC-300 , EC-1036	
Center bearing assembly (propeller shaft)	PR-13	Crankshaft(VK45DE)	EM-246	
Center bearing disassembly (propeller shaft)	PR-12	Crankshaft(VQ35DE)	EM-140	
CHARGE - Wiring diagram	SC-24	Crash zone sensor	SRS-42	
Charging system	SC-23	Cylinder block boring(VK45DE)	EM-267	
Chassis and body maintenance	MA-29	Cylinder block(VK45DE)	EM-245	
CHIME - Wiring diagram	DI-63	Cylinder block(VQ35DE)	EM-122	
CIGAR - Wiring diagram	WW-55	Cylinder head bolt tightening(VK45DE)	EM-231	
Cigarette lighter	WW-55	Cylinder head bolt tightening(VQ35DE)	EM-103	
Cigarette lighter illumination	LT-158	Cylinder head(VK45DE)	EM-229	
Circuit breaker	PG-17	Cylinder head(VQ35DE)	EM-100	
Clock	DI-112	D		
CLOCK - Wiring diagram	DI-112	D/LOCK - Wiring diagram	BL-26 , BL-32	
Closed loop control	EC-32 , EC-723	Daytime light system	LT-39	
Collision diagnosis	SRS-46	Daytime running light - See Daytime light system	LT-39	
Combination lamp, rear, removal and installation	LT-149	Diagnosis sensor unit	SRS-45	
Combination meter	DI-5	Diagnostic trouble code (DTC) for OBD system	EC-15 , EC-707	
Combination meter removal and installation - See Instrument panel	IP-11	Direct clutch solenoid valve	AT-158 , AT-160	
COMM - Wiring diagram	AV-114	Display and amp.assembly	ATC-51 , ATC-63	
COMPAS - Wiring diagram	DI-40	Door glass	GW-76 , GW-80	
Compass	DI-38	Door glass Fitting Adjustment(Front)	GW-78	
Component Location (auto A/C)	ATC-43	Door glass Fitting Adjustment(Rear)	GW-83	
Compression pressure(VK45DE)	EM-229	Door lock	BL-157	
Compression pressure(VQ35DE)	EM-100	Door mirror	GW-114	
Compressor clutch removal and installation ..	ATC-144	Door trim	EI-34	
Compressor special service tool	ATC-17	Door, front	BL-153 , GW-76	
Condenser	ATC-155	Door, rear	BL-153 , GW-80	
Connecting rod bearing clearance(VK45DE) ..	EM-269	Drive belt inspection	MA-22	
Connecting rod bushing clearance	EM-142	Drive belt inspection(VQ35DE)	MA-14	
Connecting rod bushing clearance(VK45DE) ..	EM-264	Drive belt(VK45DE)	EM-173	
Connecting rod(VK45DE)	EM-264	Drive belt(VQ35DE)	EM-15	
Connecting rod(VQ35DE)	EM-140	Drive shaft	MA-38	
Console box - See Instrument panel	IP-10	Drive shaft (rear)	RAX-9	
CONSULT for VDC	BRC-25	Driver air bag	SRS-35	
CONSULT-II Reference value (A/T)	AT-90	DTRL - Wiring diagram	LT-42	
Control units (terminal arrangement)	PG-76	Duct and grilles	ATC-134	

A
B
C
D
E
F
G
H
I
J
K
L

IDX

ALPHABETICAL INDEX

ECTS - Wiring diagram	EC-210 , EC-916	Fluorescent leak detector	ATC-158
Electric sunroof	RF-10	Fog lamp, front	LT-79
Electric throttle control actuator	EC-424 , EC-426 , EC-1148 , EC-1150	Front axle	FAX-4 , FAX-10
Electric throttle control actuator (VK45DE)	EM-178	Front brake solenoid valve	AT-154 , AT-156
Electric throttle control actuator (VQ35DE)	EM-19	Front bumper	EI-14
Electrical load signal circuit	EC-679 , EC-1369	Front door	BL-153 , BL-157 , GW-76
Electrical unit	PG-76	Front fog lamp	LT-79
Electrical units location	PG-70	Front passenger air bag	SRS-39
Electronic ignition (EI) system	EC-33 , EC-724	Front seat belt	SB-3
Engine control module (ECM)	EC-402 , EC-1134	Front seat belt pre-tensioner	SB-2 , SRS-3 , SRS-44
Engine control system diagram	EC-721	Front suspension	FSU-6
Engine control system diagram and chart	EC-30	Front washer	WW-4
Engine coolant temperature sensor (ECTS) ...	EC-208 , EC-220 , EC-914 , EC-927	Front wiper	WW-4
Engine coolant(VK45DE)	CO-37	FTTS - Wiring diagram	EC-269 , EC-274 , EC-1006 , EC-1011
Engine coolant(VQ35DE)	CO-11	Fuel cut control (at no load high engine speed)	EC-34 , EC-725
Engine oil filter replacement	MA-26	Fuel filter replacement	FL-4
Engine oil filter replacement(VQ35DE)	MA-19	Fuel gauge	DI-5
Engine oil precautions	GI-8	Fuel injection system (Bank 1)	EC-986 , EC-995
Engine oil replacement(VQ35DE)	MA-18	Fuel injection system (Bank 2)	EC-986 , EC-995
Engine oil(VK45DE)	LU-25	Fuel injector and fuel tube(VK45DE)	EM-192
Engine oil(VQ35DE)	LU-7	Fuel injector and fuel tube(VQ35DE)	EM-45
Engine removal(VK45DE)	EM-240	Fuel level sensor	EC-385 , EC-387 , EC-389 , EC-1117 , EC-1119 , EC-1121
Engine removal(VQ35DE)	EM-112	Fuel line inspection	FL-3 , MA-25
Engine room cover(VK45DE)	EM-172	Fuel line inspection(VQ35DE)	MA-17
ETC1 - Wiring diagram	EC-427 , EC-1151	Fuel precautions	GI-6 , GI-7
ETC2 - Wiring diagram	EC-434 , EC-1158	Fuel pressure check	EC-99 , EC-789
ETC3 - Wiring diagram	EC-438 , EC-1162	Fuel pressure release	EC-99 , EC-789
EVAP canister	EC-42 , EC-733	Fuel pump	EC-668 , EC-1358
EVAP canister purge volume control solenoid valve	EC-336 , EC-1069 , EC-1233	Fuel pump and gauge	FL-4
EVAP canister vent control valve	EC-343 , EC-568 , EC-1076 , EC-1241	Fuel system	FL-3
EVAP control system (small leak) diagnosis ..	EC-327 , EC-367 , EC-1061 , EC-1108	Fuel tank	FL-10
EVAP control system pressure sensor	EC-350 , EC-353 , EC-359 , EC-1083 , EC-1086 , EC-1092	Fuel tank temperature sensor	EC-267 , EC-273 , EC-1004 , EC-1010
EVAP control system purge flow monitoring diagnosis	EC-322 , EC-1056	Fuel tank vacuum relief valve	EC-42 , EC-733
EVAP vapor lines inspection	MA-21 , MA-28	FUELB1 - Wiring diagram ..	EC-250 , EC-260 , EC-988 , EC-997
Evaporative emission (EVAP) system ..	EC-39 , EC-730	FUELB2 - Wiring diagram ..	EC-251 , EC-261 , EC-989 , EC-998
Evaporator	ATC-156	Fuse	PG-17
Exhaust manifold(VK45DE)	EM-182	Fuse and fusible link box	PG-83
Exhaust manifold(VQ35DE)	EM-26	Fusible link	PG-17
Exhaust system	EX-3		
Exhaust system inspection	EX-3 , MA-29		
Expansion valve	ATC-157		

F

F/FOG - Wiring diagram	LT-81
F/PUMP - Wiring diagram	EC-669 , EC-1359
Final drive pre-inspection	FFD-20 , RFD-17
Final drive removal and installation ..	FFD-12 , FFD-14 , RFD-14
Floor trim	EI-39
Flow charts	GI-27
Fluid temperature sensor (A/T)	AT-136

G

Gauges	DI-5
Glass	GW-11 , GW-76 , GW-80
Glove box lamp	LT-156 , LT-202
Grille - See Exterior	EI-22
Ground distribution	PG-31

H

H/AIM - Wiring diagram	LT-75
H/LAMP - Wiring diagram	LT-11
Harness connector	PG-74
Harness layout	PG-46

ALPHABETICAL INDEX

Hazard warning lamp	LT-91	Intake air temperature sensor	EC-203 , EC-223 , EC-909 , EC-930
Headlamp aiming control	LT-75	Intake door control linkage adjustment	ATC-78
Headlamp leveler - See Headlamp aiming control	LT-75	Intake door motor	ATC-76 , ATC-124
Headlining - See Roof trim	EI-41	Intake manifold collector(VQ35DE)	EM-19
Heated oxygen sensor 1 (bank 1)	EC-935 , EC-944 , EC-956 , EC-1174 , EC-1180	Intake manifold(VK45DE)	EM-178
Heated oxygen sensor 1 (bank 2)	EC-935 , EC-944 , EC-956 , EC-1174 , EC-1180	Intake manifold(VQ35DE)	EM-24
Heated oxygen sensor 1 heater (bank 1)	EC-877	Intake sensor	ATC-113 , ATC-120
Heated oxygen sensor 1 heater (bank 2)	EC-877	Intake valve timing control (Bank 1) ...	EC-174 , EC-865
Heated oxygen sensor 2 (bank 1)	EC-228 , EC-237 , EC-442 , EC-453 , EC-966 , EC-975 , EC-1187 , EC-1198	Intake valve timing control (Bank 2) ...	EC-174 , EC-865
Heated oxygen sensor 2 (bank 2)	EC-228 , EC-237 , EC-442 , EC-453 , EC-966 , EC-975 , EC-1187 , EC-1198	Intake valve timing control position sensor (Bank 1)	EC-1166
Heated oxygen sensor 2 heater (bank 1)	EC-178 , EC-885	Intake valve timing control position sensor (Bank 2)	EC-1166
Heated oxygen sensor 2 heater (bank 2)	EC-178 , EC-885	Intake valve timing control solenoid valve (Bank 1)	EC-417 , EC-1141
Heated seat	SE-97	Intake valve timing control solenoid valve (Bank 2)	EC-417 , EC-1141
Heater and cooling unit (Heater core)	ATC-126	Integrated homelink transmitter	BL-235
HFC134a (R134a) system precaution	ATC-6	Intelligent cruise control (ICC) system	ACS-6
HFC134a (R134a) system service procedure	ATC-138	Interior	EI-36
HFC134a (R134a) system service tools	ATC-18	Interior lamp	LT-159
HFC134a system service equipment precaution	ATC-13	IPDM (Intelligent power distribution module engine room)	PG-18
High and low reverse clutch solenoid valve	AT-162 , AT-164	IVCB1 - Wiring diagram	EC-418 , EC-1142
Hood	BL-13	IVCB2 - Wiring diagram	EC-420 , EC-1144
Horn	WW-59	IVCSB1 - Wiring diagram	EC-1167
HORN - Wiring diagram	WW-59	IVCSB2 - Wiring diagram	EC-1169
HSEAT - Wiring diagram	SE-98	IVIS (Infiniti vehicle immobilizer system) precautions ...	GI-3
		IVTB1 - Wiring diagram	EC-868
		IVTB2 - Wiring diagram	EC-870

I

IATS - Wiring diagram	EC-205 , EC-911
ICC - Wiring diagram	ACS-20
ICC/BS - Wiring diagram	EC-590 , EC-1264
ICC/SW - Wiring diagram	EC-576 , EC-1249
ICCBOF - Wiring diagram	EC-681 , EC-1371
Idle air volume learning	EC-97 , EC-787
Idle mixture ratio	EC-775
Idle speed	EC-769 , EC-774
Idle speed control (ISC)	EC-393 , EC-395 , EC-1125 , EC-1127
Ignition coil	EC-648 , EC-1339
Ignition coil(VK45DE)	EM-189
Ignition coil(VQ35DE)	EM-42
Ignition control system	EC-648 , EC-1339
Ignition key hole illumination	LT-155
Ignition timing	EC-769 , EC-774
IGNSYS - Wiring diagram	EC-649 , EC-1340
Illumination control	LT-202
In vehicle sensor	ATC-107 , ATC-118
INF/D - Wrng diagram	AV-63
INJECT - Wiring diagram	EC-662 , EC-1352
Injector	EC-661 , EC-1351
Input clutch solenoid valve	AT-150 , AT-152
Instrument panel	IP-10

A

B

C

D

E

F

G

H

I

K

L

IDX

K

Knock sensor (KS)	EC-295 , EC-1031
KS - Wiring diagram	EC-296 , EC-1032

L

LAN system circuit	ATC-66
Lane Departure Warning System	DI-82
Laser beam aiming adjustment	ACS-12
Latch (lower anchors and tether for children) system ...	SB-9
LDW	DI-82
LDW - Wiring Diagram	DI-95
Line pressure solenoid valve	AT-129
Line pressure test (A/T)	AT-54
Liquid gasket application	EM-6 , LU-21
Liquid gasket application(VQ35DE)	LU-3 , CO-3
Location of electrical units	PG-70
Low coast brake solenoid valve	AT-166 , AT-168
Low tire pressure warning system	WT-7
Lubricant (R134a) A/C	ATC-27
Lubrication circuit (engine)(VK45DE)	LU-23
Lubrication circuit (engine)(VQ35DE)	LU-5
Lubrication oil A/C	ATC-162

ALPHABETICAL INDEX

M

M/ANT - Wiring diagram	AV-52
MAFS - Wiring diagram	EC-189 , EC-197 , EC-896 , EC-904
Magnet clutch	ATC-84 , ATC-144
MAIN - Wiring diagram	EC-164 , EC-855
Maintenance (engine)(VQ35DE)	MA-14
Major overhaul (Final drive)	FFD-16 , RFD-16
Major overhaul (Transfer)	TF-45
Mass air flow sensor (MAFS)	EC-186 , EC-195 , EC-893 , EC-902
Meter	DI-5
METER - Wiring diagram	DI-10
MIL data link connectors circuit	EC-703 , EC-1393
MIL/DL - Wiring diagram	EC-703 , EC-1393
Mirror, door	GW-114
Mirror, out side	GW-114
Misfire	EC-285 , EC-1022
Mode door control linkage adjustment	ATC-72
Mode door motor	ATC-70 , ATC-131
Molding - See Exterior	EI-25 , EI-29 , EI-32
Multiport fuel injection (MFI) system	EC-31 , EC-722
Multiport fuel injection precautions	GI-7

N

NATS - Wiring diagram	BL-216
NAVI - Wiring diagram	AV-106
Navigation system	AV-87
NVH troubleshooting (EM)	EM-170
NVH troubleshooting (EM)(VQ35DE)	EM-13
NVH troubleshooting (Final drive)	FFD-6 , RFD-7
NVH troubleshooting (Propeller shaft)	PR-3
NVH troubleshooting (Transfer)	TF-8
NVIS (Nissan vehicle immobilizer system) precautions	GI-3

O

O2H1B1 - Wiring diagram	EC-879
O2H1B2 - Wiring diagram	EC-881
O2H2B1 - Wiring diagram	EC-180 , EC-887
O2H2B2 - Wiring diagram	EC-182 , EC-889
O2S1B1 - Wiring diagram ...	EC-937 , EC-947 , EC-959
O2S1B2 - Wiring diagram ...	EC-939 , EC-949 , EC-961
O2S2B1 - Wiring diagram ...	EC-230 , EC-240 , EC-445 , EC-456 , EC-968 , EC-978 , EC-1190 , EC-1201
O2S2B2 - Wiring diagram ..	EC-232 , EC-242 , EC-447 , EC-458 , EC-970 , EC-980 , EC-1192 , EC-1203
Oil cooler (engine)(VQ35DE)	LU-14
Oil filter(VK45DE)	LU-28
Oil filter(VQ35DE)	LU-10
Oil pan (engine)(VK45DE)	EM-185
Oil pan (engine)(VQ35DE)	EM-30
Oil pressure (engine)(VK45DE)	LU-25
Oil pressure (engine)(VQ35DE)	LU-8
Oil pressure relief valve (engine)(VQ35DE)	LU-6
Oil pump (A/T)	AT-308

Oil pump (engine)(VK45DE)	LU-31
Oil pump (engine)(VQ35DE)	LU-17
Oil pump regulator valve (engine)(VK45DE)	LU-31
Oil pump regulator valve (engine)(VQ35DE)	LU-17
Oil seal replacement (engine)(VK45DE)	EM-225
Oil seal replacement (engine)(VQ35DE)	EM-97
Oil seal replacement (front of final drive)	FFD-9 , RFD-10
Oil seal replacement (side of final drive)	FFD-11 , RFD-12
ORVR (On-board Refueling Vapor Recovery) ..	EC-46 , EC-737
Out side mirror	GW-114
Overheat	EC-1213

P

P/SCKT - Wiring diagram	WW-57
Park/Neutral position switch	EC-609 , EC-1283
Park/neutral position switch (A/T)	AT-114
Parking brake control	PB-3
PCV (positive crankcase ventilation) ..	EC-51 , EC-742
Personal lamp	LT-153 , LT-187
PGC/V - Wiring diagram ..	EC-338 , EC-562 , EC-1071 , EC-1235
PHASE - Wiring diagram	EC-1045
PHSB1 - Wiring diagram	EC-309
PHSB2 - Wiring diagram	EC-311
Pilot bushing replacement - See Pilot converter(VQ35DE)	EM-123
Piston assembly(VK45DE)	EM-255
Piston assembly(VQ35DE)	EM-135
Piston pin inspection(VK45DE)	EM-262
Piston pin inspection(VQ35DE)	EM-140
Piston ring inspection(VK45DE)	EM-263
Piston ring inspection(VQ35DE)	EM-141
Piston to bore clearance(VK45DE)	EM-266
Piston to bore clearance(VQ35DE)	EM-144
PNP/SW - Wiring diagram	EC-611 , EC-1285
POS - Wiring diagram	EC-302 , EC-1038
POWER - Wiring diagram	PG-4
Power door mirror	BL-21
Power seat	SE-92
Power socket	WW-57
Power steering fluid level	PS-8 , MA-37
Power steering gear	PS-19
Power steering hydraulic pressure	PS-31
Power steering oil pump	PS-31
Power steering system bleeding	PS-8
Power supply routing	PG-3
Power window	GW-15
PRE/SE - Wiring diagram ..	EC-355 , EC-361 , EC-1088 , EC-1094
Precations for Leak detection dye	ATC-16
Precautions (General)	GI-4
Pressure switch 1	AT-156 , AT-175
Pressure switch 2	AT-168
Pressure switch 3	AT-152 , AT-177
Pressure switch 5	AT-160 , AT-179

ALPHABETICAL INDEX

Pressure switch 6	AT-164 , AT-181	Spark plug replacement	MA-27
Pressure test (A/T)	AT-54	Spark plug replacement(VQ35DE)	MA-20
Propeller shaft	PR-4 , PR-7	Spark plug(VK45DE)	EM-190
Propeller shaft on vehicle service	PR-4 , PR-7	Spark plug(VQ35DE)	EM-43
Propeller shaft vibration	PR-4 , PR-7	Specification value	EC-153 , EC-844
PS/SEN - Wiring diagram	EC-398 , EC-1130	Speedometer	DI-5
R			
R/VIEW - Wiring diagram	DI-117	Spiral cable	SRS-37
Radiator(VK45DE)	CO-41	Spot lamp	LT-187
Radiator(VQ35DE)	CO-14	SROOF - Wiring diagram	BL-172 , RF-14
Rear axle	RAX-5	SRS - See Supplemental Restraint System	SRS-5
Rear bumper	EI-17	SRS - Wiring diagram	SRS-11
Rear combination lamp removal and installation	LT-149	SRS Trouble diagnoses	SRS-7
Rear door	BL-153 , GW-80	Stabilizer bar (rear)	RSU-16
Rear seat	SE-106	Stall test (A/T)	AT-52
Rear suspension	RSU-5	Standardized relay	PG-80
Rear view monitor	DI-114	START - Wiring diagram	SC-11
Rear washer	WW-38	Starter	SC-10
Rear window defogger	GW-86	Starting system	SC-10
Rear wiper	WW-38	Steering gear and linkage inspection	MA-36
Refrigerant connection precaution	ATC-8	Steering linkage	PS-19
Refrigerant discharging evacuating charging	ATC-138	Steering wheel and column	PS-10 , PS-12
Refrigerant general precaution	ATC-7	Steering wheel turning force	PS-10
Refrigerant lines	ATC-138	Step lamp	LT-126
Refrigerant pressure sensor	EC-674 , EC-1364 , ATC-90 , ATC-156	Stop lamp	LT-118
Refrigeration cycle	ATC-21	Stop lamp switch	EC-614 , EC-1297
Removal and installation (A/T)	AT-270 , AT-273	STOP/L - Wiring diagram	LT-120
Removal and installation (Transfer)	TF-44	Sun roof, electric	RF-10
Revolution sensor (A/T)	AT-118 , AT-263	Sunload sensor	ATC-110 , ATC-119
Rocker cover(VK45DE)	EM-197	Sunroof	RF-10 , RF-25
Rocker cover(VQ35DE)	EM-51	Supplemental Restraint System	SRS-5
Room lamp - See Interior lamp	LT-159	Supplemental restraint system - Wiring diagram	SRS-11
ROOM/L - Wiring diagram	LT-167	Suspension	MA-37
RP/SEN - Wiring diagram	EC-675 , EC-1365	Symbols and abbreviations	GI-10 , GI-23
S			
Seal - See Exterior	EI-27	T	
SEAT - Wiring diagram	SE-93	Tachometer	DI-5
Seat belt inspection	SB-6	TCM circuit diagram	AT-51
Seat belt, front	SB-3	TCM inspection table	AT-89
Seat, rear	SE-106	Thermostat(VK45DE)	CO-53
Self-diagnosis (Transfer)	TF-22	Thermostat(VQ35DE)	CO-26
SEN/PW - Wiring diagram	EC-484 , EC-1230	Three way catalyst function (Bank 1)	EC-316 , EC-1050
SHIFT - Wiring diagram	AT-237	Three way catalyst function (Bank 2)	EC-316 , EC-1050
Shift change signal	EC-1290	Three way catalyst precautions	GI-6
Shift lock system	AT-236	Three way catalyst(VK45DE)	EM-182
Shift schedule	AT-351	Three way catalyst(VQ35DE)	EM-26
Shock absorber (rear)	RSU-9	Throttle control motor	EC-437 , EC-1161
Side air bag (satellite) sensor	SRS-43	Throttle control motor relay	EC-432 , EC-1156
Side curtain air bag	SRS-40	Throttle position sensor (TPS)	EC-213 , EC-278 , EC-479 , EC-481 , EC-633 , EC-920 , EC-1015 , EC-1225 , EC-1227 , EC-1316
Side trim	EI-36	Throttle valve closed position learning	EC-786
SMJ (super multiple junction)	PG-78	Tie-rod	PS-19
SNOW MODE SW	EC-1388	Timing chain(VK45DE)	EM-200
SNOWSW - Wiring diagram	EC-1389	Timing chain(VQ35DE)	EM-64
IDX			

ALPHABETICAL INDEX

Torque converter clutch solenoid valve	AT-125 , AT-127	Wheel alignment (rear)	RSU-5
TPS1 - Wiring diagram	EC-280 , EC-1017	Wheel balance	WT-5 , MA-33
TPS2 - Wiring diagram	EC-215 , EC-922	Wheel bearing (front)	FAX-4 , FAX-10
TPS3 - Wiring diagram	EC-635 , EC-1318	Wheel bearing (rear)	RAX-5
Transfer control unit inspection table	TF-20	Wheel hub (front)	FAX-4 , FAX-10
Transverse link (front)	FSU-14	Wheel hub (rear)	RAX-5
TRNSCV - Wiring diagram	BL-235	Wheel sensor (VDC)	BRC-57
Trouble diagnoses	GI-11	WINDOW - Wiring diagram	GW-24
Turbine revolution sensor	AT-141	Window, door	GW-76 , GW-80
TURN - Wiring diagram	LT-96	Windshield	GW-11
Turn signal lamp	LT-91	WIP/R - Wiring diagram	WW-40
Tyre pressure monitoring system - trouble diagnoses ..	WT-10	WIPER - Wiring diagram	WW-11
Tyre pressure monitoring system - wiring diagram	WT-11	Wiper, front	WW-4
		Wiper, rear	WW-38
		Wiring Diagram (Cell code) list	PG-67
		Wiring diagrams	GI-15
		WT-T/WARN - Wiring diagram	WT-11

U

Unified meter and A/C amp.	DI-28
----------------------------	-----------------------

V

Vacuum hose (brake system)	BR-18
Vacuum hose drawing (Engine control)	EC-120
Valve clearance(VK45DE)	EM-219
Valve clearance(VQ35DE)	EM-93
Valve guide	EM-107
Valve guide(VK45DE)	EM-236
Valve lifter	EM-88
Valve seat(VK45DE)	EM-238
Valve seat(VQ35DE)	EM-109
Valve spring(VK45DE)	EM-239
Valve spring(VQ35DE)	EM-110
Vanity mirror lamp	LT-151
Variable induction air control system (VIAS)	EC-1292 , EC-1331
VDC -Wiring diagram	BRC-17
Vehicle security (theft warning) system	BL-186
Vehicle speed sensor (VSS)	EC-391 , EC-1123 , EC-1288
VEHSEC - Wiring diagram	BL-193
VENT/V - Wiring diagram	EC-345 , EC-570 , EC-1078 , EC-1243
VIAS - Wiring diagram	EC-1333
VIAS/V - Wiring diagram	EC-1293
VIN registration	EC-96 , EC-786

W

WARN - Wiring diagram	DI-43
Warning chime	DI-58
Warning lamps	DI-42
Washer, front	WW-4
Washer, rear	WW-38
Water control valve(VK45DE)	CO-53
Water pump(VK45DE)	CO-51
Water pump(VQ35DE)	CO-22
Water temperature gauge	DI-5
Wheel alignment (front)	FSU-6