

**SECTION IDX
ALPHABETICAL INDEX**

A

B

C

D

E

F

G

H

I

J

K

L

IDX

ALPHABETICAL INDEX

A

A/C air flow	ATC-37
A/C component layout	ATC-26
A/C compressor clutch removal and installation	ATC-142
A/C compressor mounting	ATC-140 , ATC-142 , ATC-146 , ATC-147 , ATC-148 , ATC-149 , ATC-150 , ATC-152 , ATC-153 , ATC-154 , ATC-155
A/C compressor precaution	ATC-13
A/C compressor special service tool	ATC-17
A/C control operation (auto A/C)	ATC-34
A/C diagnostic work flow (auto A/C)	ATC-101
A/C evaporator	ATC-154
A/C HFC134a (R134a) system precaution	ATC-6
A/C HFC134a (R134a) system service procedure	ATC-137
A/C HFC134a (R134a) system service tools ...	ATC-18
A/C HFC134a system service equipment precaution ...	ATC-13
A/C lubricant (R134a)	ATC-27
A/C lubrication oil	ATC-160
A/C operational check	ATC-60
A/C self-diagnoses (auto A/C)	ATC-52 , ATC-101
A/C service data specification	ATC-160
A/C system description (auto A/C)	ATC-30
A/C trouble diagnoses (auto A/C)	ATC-40
A/C, A - Wiring diagram	ATC-45
A/T fluid checking	AT-13 , AT-53 , MA-29
A/T fluid cooler cleaning	AT-15
A/T fluid replacement	AT-12 , MA-31
A/T fluid temperature sensor	AT-134
A/T IND - Wiring diagram	DI-53
A/T self-diagnoses	AT-102
A/T shift lock system	AT-232
A/T shift lock system - Wiring diagram	AT-233
A/T trouble diagnoses	AT-44
Accelerator pedal position (APP) sensor	EC-575 , EC-582 , EC-596 , EC-1254 , EC-1261 , EC-1275
Accelerator pedal released position learning	EC-84 , EC-743
AF1B1-Wiring diagram	EC-233 , EC-242 , EC-251 , EC-261 , EC-606 , EC-903 , EC-912 , EC-921 , EC-931 , EC-1285
AF1B2-Wiring diagram	EC-235 , EC-244 , EC-253 , EC-263 , EC-608 , EC-905 , EC-914 , EC-923 , EC-933 , EC-1287
AF1HB1-Wiring diagram	EC-167 , EC-837
AF1HB2-Wiring diagram	EC-169 , EC-839
Air bag	SRS-3
Air bag precautions	SRS-3
Air cleaner and air duct(VK45DE)	EM-177
Air cleaner and air duct(VQ35DE)	EM-17
Air cleaner filter replacement	MA-25
Air cleaner filter replacement(VQ35DE)	MA-18
Air cleaner filter(VQ35DE)	EM-18
Air conditioner cut control	EC-35 , EC-695
Air flow meter - See Mass air flow sensor	EC-188 , EC-197 , EC-858 , EC-867

Air fuel ratio sensor 1	EC-230 , EC-240 , EC-249 , EC-258 , EC-604 , EC-900 , EC-910 , EC-919 , EC-928 , EC-1283
Air fuel ratio sensor 1 heater	EC-165 , EC-836
Air mix. door motor	ATC-71 , ATC-131
Ambient sensor	ATC-103 , ATC-116
Angular tightening application	EM-6
Angular tightening application(VK45DE)	EM-165
APPS1 - Wiring diagram	EC-577 , EC-1256
APPS2 - Wiring diagram	EC-584 , EC-1263
APPS3 - Wiring diagram	EC-598 , EC-1277
ASC/BS - Wiring diagram	EC-540 , EC-1213
ASC/SW - Wiring diagram	EC-523 , EC-1196
ASCBOF - Wiring diagram	EC-617 , EC-1296
ASCD	EC-36 , EC-696
ASCD (automatic speed control device)	ACS-3
ASCD brake switch	EC-538
ASCD indicator lamp	EC-623
ASCD steering switch	EC-521
ASCIND - Wiring diagram	EC-624 , EC-1303
AT indicator lamp	DI-52
Auto air conditioner - Wiring diagram	ATC-45
Auto amp	ATC-115
Auto anti-dazzling inside mirror	GW-65
Automatic amplifier	ATC-50 , ATC-62 , ATC-115
Automatic transmission fluid replacement	MA-32
AV communication line	AV-64 , AV-108
AWD - Wiring diagram	TF-17
Axle	MA-37
Axle housing (rear)	RAX-7

B

Back Door	BL-158
Back door	BL-158
Back door opener - See Back door	BL-162
Basic inspection	EC-77 , EC-737
Battery	SC-4
Battery/Starting/Charging System Tester	SC-7 , SC-11 , SC-23
BCM (Body control module)	BCS-3
Block heater(VK45DE)	EM-248
Block heater(VQ35DE)	EM-123
Blower motor	ATC-77 , ATC-122
Blower unit	ATC-120
Brake booster	BR-15
Brake fluid level	MA-35
Brake hydraulic line	BR-11
Brake inspection	MA-36
Brake lines and cables inspection	MA-35
Brake master cylinder	BR-13
Brake switch	EC-551 , EC-1229
BRK/SW - Wiring diagram	EC-552 , EC-1230
Bulb specifications	LT-204
Bumper, front	EI-14
Bumper, rear	EI-17

ALPHABETICAL INDEX

C	
Camshaft inspection(VK45DE)	EM-216
Camshaft inspection(VQ35DE)	EM-85
Camshaft position sensor (PHASE)	EC-368 , EC-1037
Camshaft(VK45DE)	EM-215
Camshaft(VQ35DE)	EM-83
CAN	DI-108
CAN - Wiring diagram	EC-157 , EC-820 , AT-105 , LAN-29 , LAN-49 , LAN-69 , LAN-91 , LAN-117 , LAN-139 , LAN-163
CAN (Controller Area Network) .	BL-24 , BL-57 , BL-95 , BL-184 , GW-20 , GW-68 , RF-12 , SE-16
CAN communication	EC-38 , EC-156 , EC-159 , EC-819 , EC-822 , AT-33 , AT-104 , TF-13 , TF-32 , WT-12 , BL-24 , BL-57 , BL-95 , BL-184 , GW-20 , GW-68 , RF-12 , SE-16
Canister-See EVAP canister	EC-42 , EC-702
Center bearing assembly (propeller shaft)	PR-13
Center bearing disassembly (propeller shaft)	PR-12
CHARGE - Wiring diagram	SC-21
Charging system	SC-20
Chassis and body maintenance	MA-29
CHIME - Wiring diagram	DI-61
Circuit breaker	PG-16
Clock	DI-114
CLOCK - Wiring diagram	DI-114
Closed loop control	EC-32 , EC-692
Closed loop control (Bank 1)	EC-494 , EC-1168
Closed loop control (Bank 2)	EC-494 , EC-1168
Collision diagnosis	SRS-50
Combination lamp, rear, removal and installation	LT-154
Combination meter	DI-5
Combination meter removal and installation - See	
Instrument panel	IP-11
COMM - Wiring diagram	AV-64 , AV-108
COMPAS - Wiring diagram	DI-112
Compass	DI-109
Component Location (auto A/C)	ATC-42
Compression pressure(VK45DE)	EM-232
Compression pressure(VQ35DE)	EM-101
Compressor clutch removal and installation ..	ATC-142
Compressor special service tool	ATC-17
Condenser	ATC-153
Connecting rod bearing clearance(VK45DE) ..	EM-272
Connecting rod bushing clearance	EM-143
Connecting rod bushing clearance(VK45DE) ..	EM-267
Connecting rod(VK45DE)	EM-267
Connecting rod(VQ35DE)	EM-141
Console box - See Instrument panel	IP-10
CONSULT for VDC	BRC-24
CONSULT-II for engine	EC-119
CONSULT-II Reference value (A/T)	AT-90
Control units (terminal arrangement)	PG-75
Control valve (A/T)	AT-38
Controller Area Network (CAN) .	BL-24 , BL-57 , BL-95 , BL-184 , GW-20 , GW-68 , RF-12 , SE-16
Converter housing installation	AT-268 , AT-272
COOL/F - Wiring diagram	EC-501 , EC-1175
Coolant replacement(VQ35DE)	MA-15
Cooling circuit (engine)(VK45DE)	CO-36
Cooling circuit (engine)(VQ35DE)	CO-9
Cooling fan motor	EC-508 , EC-1182
Cooling fan(VK45DE)	CO-49
Cooling fan(VQ35DE)	CO-21
Cowl top	EI-23
Cowl top cover	EI-23
Crankcase ventilation system - See Positive crankcase	
ventilation	EC-51 , EC-711
Crankshaft position sensor (POS) ...	EC-361 , EC-1030
Crankshaft(VK45DE)	EM-249
Crankshaft(VQ35DE)	EM-141
Crash zone sensor	SRS-46
Cylinder block boring(VK45DE)	EM-270
Cylinder block(VK45DE)	EM-248
Cylinder block(VQ35DE)	EM-123
Cylinder head bolt tightening(VK45DE)	EM-234
Cylinder head bolt tightening(VQ35DE)	EM-104
Cylinder head(VK45DE)	EM-232
Cylinder head(VQ35DE)	EM-101

D	
D/LOCK - Wiring diagram	BL-26 , BL-32
Diagnosis sensor unit	SRS-49
Diagnostic trouble code (DTC) for OBD system	EC-15 , EC-676 , EC-719
Diagnostic trouble code (DTC) inspection priority chart	EC-94
Direct clutch solenoid valve	AT-154 , AT-156
Display and amp.assembly	ATC-50 , ATC-62
Door glass	GW-58 , GW-62
Door glass Fitting Adjustment(Front)	GW-60
Door lock	BL-152
Door mirror	GW-92
Door trim	EI-35
Door, front	BL-148 , GW-58
Door, rear	BL-148 , GW-62
Drive belt inspection	MA-22
Drive belt inspection(VQ35DE)	MA-14
Drive belt(VK45DE)	EM-174
Drive belt(VQ35DE)	EM-15
Drive shaft	MA-38
Drive shaft (rear)	RAX-9
Driver air bag	SRS-38
Duct and grilles	ATC-133

E	
ECM input/output signal	EC-110
ECM power supply	EC-477 , EC-812 , EC-1142
ECM/PW - Wiring diagram	EC-478 , EC-1143
ECTS - Wiring diagram	EC-212 , EC-881
Electric sunroof	RF-10
Electric throttle control actuator	EC-562 , EC-573 , EC-1240 , EC-1252
Electric throttle control actuator (VK45DE)	EM-179
Electric throttle control actuator (VQ35DE)	EM-19

A
B
C
D
E
F
G

H
I
J
K

L
IDX

ALPHABETICAL INDEX

Electrical load signal circuit	EC-626 , EC-1305	Front door	BL-148 , BL-152 , GW-58
Electrical unit	PG-75	Front passenger air bag	SRS-42
Electrical units location	PG-68	Front seat belt	SB-4
Electronic ignition (EI) system	EC-33 , EC-693	Front seat belt pre-tensioner	SB-2 , SRS-3 , SRS-48
Engine control circuit diagram	EC-108	Front suspension	FSU-6
Engine control component parts location	EC-101	FTS - Wiring diagram	AT-135
Engine control module (ECM)	EC-481 , EC-1146	FTTS - Wiring diagram	EC-330 , EC-335 , EC-999 , EC-1004
Engine control system diagram	EC-30 , EC-690	Fuel cut control (at no load high engine speed)	EC-34 , EC-694
Engine coolant temperature sensor (ECTS) ...	EC-210 , EC-222 , EC-879 , EC-892	Fuel filter replacement	FL-4
Engine coolant(VK45DE)	CO-38	Fuel gauge	DI-5
Engine coolant(VQ35DE)	CO-11	Fuel injection system (Bank 1)	EC-305 , EC-317 , EC-975 , EC-986
Engine fail-safe system	EC-96	Fuel injection system (Bank 2)	EC-305 , EC-317 , EC-975 , EC-986
Engine oil filter replacement	MA-26	Fuel injector	EC-628
Engine oil filter replacement(VQ35DE)	MA-19	Fuel injector and fuel tube(VK45DE)	EM-194
Engine oil precautions	GI-8	Fuel injector and fuel tube(VQ35DE)	EM-45
Engine oil replacement(VQ35DE)	MA-18	Fuel level sensor	EC-460 , EC-462 , EC-464 , EC-1125 , EC-1127 , EC-1129
Engine oil(VK45DE)	LU-25	Fuel line inspection	FL-3 , MA-25
Engine oil(VQ35DE)	LU-7	Fuel line inspection(VQ35DE)	MA-17
Engine removal(VK45DE)	EM-243	Fuel precautions	GI-6 , GI-7
Engine removal(VQ35DE)	EM-113	Fuel pressure check	EC-86 , EC-746
Engine room cover(VK45DE)	EM-173	Fuel pressure release	EC-86 , EC-746
ETC1 - Wiring diagram	EC-563 , EC-1241	Fuel pump	EC-635 , EC-1314
ETC2 - Wiring diagram	EC-558 , EC-1236	Fuel pump and gauge	FL-4
ETC3 - Wiring diagram	EC-569 , EC-1248	Fuel system	FL-3
EVAP canister	EC-42 , EC-702	Fuel tank	FL-10
EVAP canister purge volume control solenoid valve	EC-397 , EC-405 , EC-1063 , EC-1071	Fuel tank temperature sensor	EC-328 , EC-334 , EC-997 , EC-1003
EVAP canister vent control valve	EC-412 , EC-419 , EC-1078 , EC-1085	Fuel tank vacuum relief valve	EC-42 , EC-702
EVAP control system (small leak) diagnosis ..	EC-388 , EC-450 , EC-1054 , EC-1116	FUELB1 - Wiring diagram	EC-307 , EC-319 , EC-977 , EC-988
EVAP control system pressure sensor	EC-425 , EC-428 , EC-434 , EC-1091 , EC-1094 , EC-1100	FUELB2 - Wiring diagram	EC-309 , EC-321 , EC-979 , EC-990
EVAP control system purge flow monitoring diagnosis	EC-383 , EC-1049	Fuse	PG-16
EVAP vapor lines inspection	MA-21 , MA-28	Fuse and fusible link box	PG-82
Evaporative emission (EVAP) system	EC-39 , EC-699	Fusible link	PG-16
Evaporator	ATC-154		
Exhaust manifold(VK45DE)	EM-183		
Exhaust manifold(VQ35DE)	EM-26		
Exhaust system	EX-3		
Exhaust system inspection	EX-3 , MA-29		
Expansion valve	ATC-155		

F

F/PUMP - Wiring diagram	EC-636 , EC-1315
Final drive pre-inspection	FFD-20 , RFD-19
Final drive removal and installation ..	FFD-13 , FFD-15 , RFD-16
Floor trim	EI-40
Flow charts	GI-28
Fluid temperature sensor (A/T)	AT-134
Fluorescent leak detector	ATC-156
Freeze frame data	EC-59 , EC-720
Front axle	FAX-4 , FAX-10 , RAX-5
Front brake solenoid valve	AT-150 , AT-152
Front bumper	EI-14

Front door	BL-148 , BL-152 , GW-58
Front passenger air bag	SRS-42
Front seat belt	SB-4
Front seat belt pre-tensioner	SB-2 , SRS-3 , SRS-48
Front suspension	FSU-6
FTS - Wiring diagram	AT-135
FTTS - Wiring diagram	EC-330 , EC-335 , EC-999 , EC-1004
Fuel cut control (at no load high engine speed)	EC-34 , EC-694
Fuel filter replacement	FL-4
Fuel gauge	DI-5
Fuel injection system (Bank 1)	EC-305 , EC-317 , EC-975 , EC-986
Fuel injection system (Bank 2)	EC-305 , EC-317 , EC-975 , EC-986
Fuel injector	EC-628
Fuel injector and fuel tube(VK45DE)	EM-194
Fuel injector and fuel tube(VQ35DE)	EM-45
Fuel level sensor	EC-460 , EC-462 , EC-464 , EC-1125 , EC-1127 , EC-1129
Fuel line inspection	FL-3 , MA-25
Fuel line inspection(VQ35DE)	MA-17
Fuel precautions	GI-6 , GI-7
Fuel pressure check	EC-86 , EC-746
Fuel pressure release	EC-86 , EC-746
Fuel pump	EC-635 , EC-1314
Fuel pump and gauge	FL-4
Fuel system	FL-3
Fuel tank	FL-10
Fuel tank temperature sensor	EC-328 , EC-334 , EC-997 , EC-1003
Fuel tank vacuum relief valve	EC-42 , EC-702
FUELB1 - Wiring diagram	EC-307 , EC-319 , EC-977 , EC-988
FUELB2 - Wiring diagram	EC-309 , EC-321 , EC-979 , EC-990
Fuse	PG-16
Fuse and fusible link box	PG-82
Fusible link	PG-16

G

Gauges	DI-5
Generic scan tool (GST)	EC-130
Glass	GW-11 , GW-58 , GW-62
Grille - See Exterior	EI-22
Ground distribution	PG-29

H

Harness connector	PG-72
Harness layout	PG-44
Headlining - See Roof trim	EI-42
Heated oxygen sensor 2 (bank 1)	EC-270 , EC-281 , EC-294 , EC-940 , EC-951 , EC-964
Heated oxygen sensor 2 (bank 2)	EC-270 , EC-281 , EC-294 , EC-940 , EC-951 , EC-964
Heated oxygen sensor 2 heater (bank 1)	EC-173

ALPHABETICAL INDEX

EC-843	Interior	EI-37
Heated oxygen sensor 2 heater (bank 2)	EC-173	
EC-843	IPDM (Intelligent power distribution module engine room)	PG-17
Heated seat	SE-94	
Heater and cooling unit (Heater core)	ATC-125	
HFC134a (R134a) system precaution	ATC-6	
HFC134a (R134a) system service procedure	ATC-137	
HFC134a (R134a) system service tools	ATC-18	
HFC134a system service equipment precaution		
ATC-13	IVCB1 - Wiring diagram	EC-182, EC-852
High and low reverse clutch solenoid valve	AT-158	
AT-160	IVCB2 - Wiring diagram	EC-184, EC-854
Hood	BL-13	
How to erase DTC for OBD system	EC-59, EC-727	
HSEAT - Wiring diagram	SE-95	
<hr/>		
I		
IATS - Wiring diagram	EC-207, EC-876	
ICC - Wiring diagram	ACS-21	
ICC/BS - Wiring diagram	EC-531, EC-1204	
ICC/SW - Wiring diagram	EC-516, EC-1189	
ICCB OF - Wiring diagram	EC-642, EC-1321	
Idle air volume learning	EC-84, EC-744	
Idle speed	EC-82, EC-737, EC-742	
Idle speed control (ISC) ...	EC-468, EC-470, EC-1133, EC-1135	
Ignition coil	EC-649, EC-1328	
Ignition coil(VK45DE)	EM-191	
Ignition coil(VQ35DE)	EM-42	
Ignition control system	EC-649, EC-1328	
Ignition timing	EC-82, EC-737, EC-742	
IGNSYS - Wiring diagram	EC-650, EC-1329	
In vehicle sensor	ATC-106, ATC-117	
INF/D - Wring diagram	AV-57	
INJECT - Wiring diagram	EC-629, EC-1308	
Injector	EC-1307	
Input clutch solenoid valve	AT-146, AT-148	
Instrument panel	IP-10	
Intake air temperature sensor	EC-205, EC-225, EC-874, EC-895	
Intake door control linkage adjustment	ATC-76	
Intake door motor	ATC-74, ATC-123	
Intake manifold collector(VQ35DE)	EM-19	
Intake manifold(VK45DE)	EM-179	
Intake manifold(VQ35DE)	EM-24	
Intake sensor	ATC-112, ATC-119	
Intake valve timing control (Bank 1) ..	EC-161, EC-824	
Intake valve timing control (Bank 2) ..	EC-161, EC-824	
Intake valve timing control position sensor (Bank 1)		
EC-1159	Intake valve timing control position sensor (Bank 2)	
EC-1159	EC-1159	
Intake valve timing control solenoid valve (Bank 1)	EC-181, EC-851	
Intake valve timing control solenoid valve (Bank 2)	EC-181, EC-851	
Integrated homelink transmitter	BL-227	
Intelligent cruise control (ICC) system	ACS-6	
<hr/>		
K		
Knock sensor (KS)	EC-356, EC-1025	
KS - Wiring diagram	EC-357, EC-1026	
<hr/>		
L		
LAN system circuit	ATC-64	
Lane Departure Warning System	DI-80	
Laser beam aiming adjustment	ACS-14	
Latch (lower anchors and tether for children) system ...	SB-10	
LDW	DI-80	
LDW - Wiring Diagram	DI-92	
Line pressure solenoid valve	AT-129	
Line pressure test (A/T)	AT-54	
Liquid gasket application	EM-6, LU-21	
Liquid gasket application(VQ35DE)	LU-3, CO-3	
Location of electrical units	PG-68	
Low coast brake solenoid valve	AT-162, AT-164	
Low tire pressure warning system	WT-10	
Lubricant (R134a) A/C	ATC-27	
Lubrication circuit (engine)(VK45DE)	LU-23	
Lubrication circuit (engine)(VQ35DE)	LU-5	
Lubrication oil A/C	ATC-160	
<hr/>		
M		
M/ANT - Wiring diagram	AV-49	
MAFS - Wiring diagram	EC-191, EC-199, EC-861, EC-869	
Magnet clutch	ATC-82, ATC-142	
MAIN - Wiring diagram	EC-149, EC-812, AT-179	
Maintenance (engine)(VQ35DE)	MA-14	
Major overhaul (Final drive)	FFD-17, RFD-18	
Major overhaul (Transfer)	TF-45	
Malfunction indicator lamp (MIL)	EC-68, EC-729	
Mass air flow sensor (MAFS)	EC-188, EC-197, EC-858, EC-867	
Meter	DI-5	
METER - Wiring diagram	DI-12	
MIL data link connectors circuit	EC-672, EC-1360	
MIL/DL - Wiring diagram	EC-672, EC-1360	
Mirror, door	GW-92	
Mirror, out side	GW-92	
Misfire	EC-346, EC-1015	
MMSW - Wiring diagram	AT-167	
Mode door control linkage adjustment	ATC-70	
Mode door motor	ATC-68, ATC-130	

A
B
C
D
E
F
G
H
I
J
K
L

IDX

ALPHABETICAL INDEX

Molding - See Exterior	EI-25 , EI-30 , EI-33
Multiport fuel injection (MFI) system	EC-31 , EC-691
Multiport fuel injection precautions	GI-7

N

NATS - Wiring diagram	BL-208
NAVI - Wiring diagram	AV-100
Navigation system	AV-93
NONDTC - Wiring diagram	AT-186
NVH troubleshooting (EM)	EM-171
NVH troubleshooting (EM)(VQ35DE)	EM-13
NVH troubleshooting (Final drive)	FFD-6 , RFD-7
NVH troubleshooting (Propeller shaft)	PR-3
NVH troubleshooting (Transfer)	TF-8

O

O2H2B1 - Wiring diagram	EC-175 , EC-845
O2H2B2 - Wiring diagram	EC-177 , EC-847
O2S2B1 - Wiring diagram ..	EC-273 , EC-284 , EC-297 , EC-943 , EC-954 , EC-967
O2S2B2 - Wiring diagram ..	EC-275 , EC-286 , EC-299 , EC-945 , EC-956 , EC-969
Oil cooler (engine)(VQ35DE)	LU-14
Oil filter(VK45DE)	LU-28
Oil filter(VQ35DE)	LU-10
Oil pan (engine)(VK45DE)	EM-187
Oil pan (engine)(VQ35DE)	EM-30
Oil pressure (engine)(VK45DE)	LU-25
Oil pressure (engine)(VQ35DE)	LU-8
Oil pressure relief valve (engine)(VQ35DE)	LU-6
Oil pump (A/T)	AT-312
Oil pump (engine)(VK45DE)	LU-31
Oil pump (engine)(VQ35DE)	LU-17
Oil pump regulator valve (engine)(VK45DE)	LU-31
Oil pump regulator valve (engine)(VQ35DE)	LU-17
Oil seal replacement (engine)(VK45DE)	EM-228
Oil seal replacement (engine)(VQ35DE)	EM-98
Oil seal replacement (front of final drive)	FFD-9 , RFD-10

Oil seal replacement (side of final drive)	FFD-11 , RFD-14
On board diagnostic system	EC-54
ORVR (On-board Refueling Vapor Recovery) ..	EC-46 , EC-706
Out side mirror	GW-92
Overheat	EC-497 , EC-1171

P

Park/Neutral position switch	EC-489 , EC-1154
Park/neutral position switch (A/T)	AT-112
Parking brake control	PB-4
PCV (positive crankcase ventilation) ...	EC-51 , EC-711
PGC/V - Wiring diagram ..	EC-399 , EC-407 , EC-1065 , EC-1073
PHASE - Wiring diagram	EC-1039
PHSB1 - Wiring diagram	EC-370

PHSB2 - Wiring diagram	EC-372
Pilot bushing replacement - See Pilot converter(VQ35DE)	EM-124
Piston assembly(VK45DE)	EM-259
Piston assembly(VQ35DE)	EM-136
Piston pin inspection(VK45DE)	EM-265
Piston pin inspection(VQ35DE)	EM-141
Piston ring inspection(VK45DE)	EM-266
Piston ring inspection(VQ35DE)	EM-142
Piston to bore clearance(VK45DE)	EM-269
Piston to bore clearance(VQ35DE)	EM-145
PNP/SW - Wiring diagram ..	EC-491 , EC-1156 , AT-113
POS - Wiring diagram	EC-363 , EC-1032
POWER - Wiring diagram	PG-4
Power door mirror	BL-21
Power seat	SE-92
Power steering fluid level	PS-8 , MA-37
Power steering gear	PS-17
Power steering hydraulic pressure	PS-29
Power steering oil pump	PS-29
Power steering pressure (PSP) sensor	EC-472
Power steering system bleeding	PS-8
Power supply routing	PG-3
Power window	GW-15
PRE/SE - Wiring diagram	EC-430 , EC-436 , EC-1096 , EC-1102
Precations for Leak detection dye	ATC-16
Precautions (General)	GI-4
Pressure switch 1	AT-152 , AT-171
Pressure switch 2	AT-164
Pressure switch 3	AT-148 , AT-173
Pressure switch 5	AT-156 , AT-175
Pressure switch 6	AT-160 , AT-177
Pressure test (A/T)	AT-54
Propeller shaft	PR-4 , PR-7
Propeller shaft on vehicle service	PR-4 , PR-7
Propeller shaft vibration	PR-4 , PR-7
PS/SEN - Wiring diagram	EC-473 , EC-1138

R

R/VIEW - Wiring diagram	DI-119
Radiator(VK45DE)	CO-41
Radiator(VQ35DE)	CO-14
Rear bumper	EI-17
Rear combination lamp removal and installation	LT-154
Rear door	BL-148 , GW-62
Rear seat	SE-105
Rear suspension	RSU-5
Rear view monitor	DI-116
Rear window defogger	GW-67
Refrigerant connection precaution	ATC-8
Refrigerant discharging evacuating charging ..	ATC-137
Refrigerant general precaution	ATC-7
Refrigerant lines	ATC-137
Refrigerant pressure sensor	EC-662 , EC-1341 , ATC-89 , ATC-154
Refrigeration cycle	ATC-21

ALPHABETICAL INDEX

Removal and installation (A/T)	AT-266 , AT-269	System readiness test (SRT) code	EC-60 , EC-720
Removal and installation (Transfer)	TF-44	<hr/>	
Revolution sensor (A/T)	AT-118 , AT-259	T	
Rocker cover(VK45DE)	EM-200	Tachometer	DI-5
Rocker cover(VQ35DE)	EM-51	TCM circuit diagram	AT-52
RP/SEN - Wiring diagram	EC-663 , EC-1342	TCM inspection table	AT-89
<hr/>			
S			
SAE J1979 - Service \$01 - 09	EC-130 , EC-714	Three way catalyst function (Bank 1)	EC-377 , EC-1044
Seal - See Exterior	EI-27	Three way catalyst function (Bank 2)	EC-377 , EC-1044
Seat belt inspection	SB-7	Three way catalyst precautions	GI-5
Seat belt, front	SB-4	Three way catalyst(VK45DE)	EM-183
Seat, rear	SE-105	Three way catalyst(VQ35DE)	EM-26
Self-diagnosis (Transfer)	TF-22	Throttle control motor	EC-568 , EC-1247
Self-diagnostic results	EC-71	Throttle control motor relay	EC-556 , EC-1234
SEN/PW - Wiring diagram	EC-485 , EC-1150	Throttle position sensor (TPS)	EC-215 , EC-339 , EC-510 , EC-512 , EC-589 , EC-885 , EC-1008 , EC-1183 , EC-1185 , EC-1268
SHIFT - Wiring diagram	AT-233	Throttle valve closed position learning	EC-84 , EC-744
Shift lock system	AT-232	Tie-rod	PS-17
Shift schedule	AT-359	Timing chain(VK45DE)	EM-203
Shock absorber (rear)	RSU-9	Timing chain(VQ35DE)	EM-64
Side air bag (satellite) sensor	SRS-47	Tire rotation	WT-9 , MA-35
Side curtain air bag	SRS-44	Top tether strap child restraint	SB-11
Side trim	EI-37	Torque converter installation	AT-267 , AT-268 , AT-272
SMJ (super multiple junction)	PG-77	Torque convertor clutch solenoid valve	AT-125 , AT-127
SNOW MODE SW	EC-667 , EC-1346	TPS1 - Wiring diagram	EC-341 , EC-1010
SNOWSW - Wiring diagram	EC-668 , EC-1347	TPS2 - Wiring diagram	EC-217 , EC-887
Spark plug replacement	MA-27	TPS3 - Wiring diagram	EC-591 , EC-1270
Spark plug replacement(VQ35DE)	MA-20	Traction control system circuit (engine)	EC-495 , EC-496
Spark plug(VK45DE)	EM-192	Transfer control unit inspection table	TF-20
Spark plug(VQ35DE)	EM-43	Transverse link (front)	FSU-14
Specification value	EC-138 , EC-801	TRNSCV - Wiring diagram	BL-227
Speedometer	DI-5	Trouble diagnoses	GI-12
Spiral cable	SRS-40	Two trip detection logic	EC-54 , EC-714
SROOF - Wiring diagram	BL-166 , RF-13	Tyre pressure monitoring system - trouble diagnoses ..	WT-13
SRS - See Supplemental Restraint System	SRS-5	Tyre pressure monitoring system - wiring diagram	WT-14
SRS - Wiring diagram	SRS-12	<hr/>	
SRS Trouble diagnoses	SRS-8	U	
Stabilizer bar (rear)	RSU-16	Unified meter and A/C amp.	DI-28
Stall test (A/T)	AT-53	<hr/>	
Standardized relay	PG-79	V	
START - Wiring diagram	SC-9	Vacuum hose (brake system)	BR-17
Starter	SC-8	Vacuum hose drawing (Engine control)	EC-107
Starting system	SC-8	Valve clearance(VK45DE)	EM-222
Steering gear and linkage inspection	MA-36	Valve clearance(VQ35DE)	EM-93
Steering linkage	PS-17	Valve guide	EM-108
Steering wheel and column	PS-10 , PS-12	Valve guide(VK45DE)	EM-239
Steering wheel turning force	PS-10	Valve lifter	EM-87
Stop lamp switch	EC-551 , EC-1229	Valve seat(VK45DE)	EM-241
STSIG - Wiring diagram	AT-108	Valve seat(VQ35DE)	EM-110
Sun roof, electric	RF-10	Valve spring(VK45DE)	EM-242
Sunload sensor	ATC-109 , ATC-118	Valve spring(VQ35DE)	EM-111
Sunroof	RF-10 , RF-23	<hr/>	
Supplemental Restraint System	SRS-5		
Supplemental restraint system - Wiring diagram	SRS-12		
Suspension	MA-37		
Symbols and abbreviations	GI-11 , GI-24		
Symptom matrix chart	EC-97		

A
B
C
D
E
F
G
H
I
J
K
L

IDX

ALPHABETICAL INDEX

- Variable induction air control system (VIAS) [EC-1224](#),
[EC-1351](#)
- VDC -Wiring diagram [BRC-16](#)
- Vehicle security (theft warning) system [BL-180](#)
- Vehicle speed sensor (VSS) [EC-466](#), [EC-1131](#),
[EC-1223](#)
- VEHSEC - Wiring diagram [BL-186](#)
- VENT/V - Wiring diagram [EC-414](#), [EC-421](#), [EC-1080](#),
[EC-1087](#)
- VIAS - Wiring diagram [EC-1353](#)
- VIAS/V - Wiring diagram [EC-1225](#)
- VIN registration [EC-83](#), [EC-743](#)
- VSS A/T - Wiring diagram [AT-120](#)

W

- WARN - Wiring diagram [DI-40](#)
- Warning chime [DI-56](#)
- Warning lamps [DI-38](#)
- Water control valve(VK45DE) [CO-53](#)
- Water pump(VK45DE) [CO-51](#)
- Water pump(VQ35DE) [CO-22](#)
- Water temperature gauge [DI-5](#)
- Wheel alignment (front) [FSU-6](#)
- Wheel alignment (rear) [RSU-5](#)
- Wheel balance [WT-8](#), [MA-33](#)
- Wheel bearing (front) [FAX-4](#), [FAX-10](#), [RAX-5](#)
- Wheel hub (front) [FAX-4](#), [FAX-10](#), [RAX-5](#)
- Wheel sensor (VDC) [BRC-55](#)
- WINDOW - Wiring diagram [GW-22](#)
- Window, door [GW-58](#), [GW-62](#)
- Windshield [GW-11](#)
- Wiring Diagram (Cell code) list [PG-65](#)
- Wiring diagrams [GI-16](#)
- WT-T/WARN - Wiring diagram [WT-14](#)