

**SECTION IDX
ALPHABETICAL INDEX**

A

B

C

D

E

F

G

H

I

J

K

L

IDX

ALPHABETICAL INDEX

A

A/C air flow	ATC-37
A/C component layout	ATC-26
A/C compressor clutch removal and installation	ATC-142
A/C compressor mounting	ATC-140, ATC-142, ATC-146, ATC-147, ATC-148, ATC-149, ATC-150, ATC-152, ATC-153, ATC-154, ATC-155
A/C compressor precaution	ATC-13
A/C compressor special service tool	ATC-17
A/C control operation (auto A/C)	ATC-34
A/C diagnostic work flow (auto A/C)	ATC-101
A/C evaporator	ATC-154
A/C HFC134a (R134a) system precaution	ATC-6
A/C HFC134a (R134a) system service procedure	ATC-137
A/C HFC134a (R134a) system service tools ...	ATC-18
A/C HFC134a system service equipment precaution ...	ATC-13
A/C lubricant (R134a)	ATC-27
A/C lubrication oil	ATC-160
A/C operational check	ATC-60
A/C self-diagnoses (auto A/C)	ATC-52, ATC-101
A/C service data specification	ATC-160
A/C system description (auto A/C)	ATC-30
A/C trouble diagnoses (auto A/C)	ATC-40
A/C, A - Wiring diagram	ATC-45
A/T fluid checking	AT-13, AT-53, MA-29
A/T fluid cooler cleaning	AT-15
A/T fluid replacement	AT-12, MA-31
A/T fluid temperature sensor	AT-134
A/T IND - Wiring diagram	DI-53
A/T self-diagnoses	AT-102
A/T shift lock system	AT-232
A/T shift lock system - Wiring diagram	AT-233
A/T trouble diagnoses	AT-44
Accelerator pedal position (APP) sensor	EC-576, EC-583, EC-597, EC-1258, EC-1265, EC-1279
Accelerator pedal released position learning	EC-83, EC-745
AF1B1-Wiring diagram	EC-232, EC-241, EC-250, EC-260, EC-607, EC-904, EC-913, EC-922, EC-932, EC-1289
AF1B2-Wiring diagram	EC-234, EC-243, EC-252, EC-262, EC-609, EC-906, EC-915, EC-924, EC-934, EC-1291
AF1HB1-Wiring diagram	EC-166, EC-838
AF1HB2-Wiring diagram	EC-168, EC-840
Air bag	SRS-3
Air bag precautions	SRS-3
Air cleaner and air duct(VK45DE)	EM-177
Air cleaner and air duct(VQ35DE)	EM-17
Air cleaner filter replacement	MA-25
Air cleaner filter replacement(VQ35DE)	MA-18
Air cleaner filter(VQ35DE)	EM-18
Air conditioner cut control	EC-34, EC-696
Air flow meter - See Mass air flow sensor	EC-187, EC-196, EC-859, EC-868

Air fuel ratio sensor 1	EC-229, EC-239, EC-248, EC-257, EC-605, EC-901, EC-911, EC-920, EC-929, EC-1287
Air fuel ratio sensor 1 heater	EC-164, EC-837
Air mix. door motor	ATC-71, ATC-131
Ambient sensor	ATC-103, ATC-116
Angular tightening application	EM-6
Angular tightening application(VK45DE)	EM-165
APPS1 - Wiring diagram	EC-578, EC-1260
APPS2 - Wiring diagram	EC-585, EC-1267
APPS3 - Wiring diagram	EC-599, EC-1281
ASC/BS - Wiring diagram	EC-541, EC-1217
ASC/SW - Wiring diagram	EC-524, EC-1200
ASCBOF - Wiring diagram	EC-618, EC-1300
ASCD	EC-35, EC-697
ASCD (automatic speed control device)	ACS-3
ASCD brake switch	EC-539
ASCD indicator lamp	EC-624
ASCD steering switch	EC-522
ASCIND - Wiring diagram	EC-625, EC-1307
AT indicator lamp	DI-52
Auto air conditioner - Wiring diagram	ATC-45
Auto amp	ATC-115
Auto anti-dazzling inside mirror	GW-65
Automatic amplifier	ATC-50, ATC-62, ATC-115
Automatic transmission fluid replacement	MA-32
AV communication line	AV-64, AV-108
AWD - Wiring diagram	TF-17
Axle	MA-37
Axle housing (rear)	RAX-7

B

Back Door	BL-158
Back door	BL-158
Back door opener - See Back door	BL-162
Basic inspection	EC-76, EC-738
Battery	SC-5
Battery/Starting/Charging System Tester	SC-8, SC-14, SC-27
BCM (Body control module)	BCS-3
Block heater(VK45DE)	EM-248
Block heater(VQ35DE)	EM-123
Blower motor	ATC-77, ATC-122
Blower unit	ATC-120
Brake booster	BR-15
Brake fluid level	MA-35
Brake hydraulic line	BR-11
Brake inspection	MA-36
Brake lines and cables inspection	MA-35
Brake master cylinder	BR-13
Brake switch	EC-552, EC-1233
BRK/SW - Wiring diagram	EC-553, EC-1234
Bulb specifications	LT-201
Bumper, front	EI-14
Bumper, rear	EI-17

ALPHABETICAL INDEX

<hr/> C <hr/> <p>Camshaft inspection(VK45DE) EM-216 Camshaft inspection(VQ35DE) EM-85 Camshaft position sensor (PHASE) EC-367, EC-1038 Camshaft(VK45DE) EM-215 Camshaft(VQ35DE) EM-83 CAN DI-105 CAN - Wiring diagram EC-156, EC-821, AT-105 CAN (Controller Area Network) . BL-24, BL-57, BL-95, BL-184, GW-20, GW-68, RF-12, SE-16 CAN communication EC-37, EC-155, EC-158, EC-820, EC-823, AT-33, AT-104, TF-13, TF-32, WT-14, BL-24, BL-57, BL-95, BL-184, GW-20, GW-68, RF-12, SE-16 Canister-See EVAP canister EC-41, EC-703 Center bearing assembly (propeller shaft) PR-13 Center bearing disassembly (propeller shaft) PR-12 CHARGE - Wiring diagram SC-25 Charging system SC-24 Chassis and body maintenance MA-29 CHIME - Wiring diagram DI-61 Circuit breaker PG-16 Clock DI-111 CLOCK - Wiring diagram DI-111 Closed loop control EC-31, EC-693 Closed loop control (Bank 1) EC-493, EC-1170 Closed loop control (Bank 2) EC-493, EC-1170 Collision diagnosis SRS-55 Combination lamp, rear, removal and installation LT-151 Combination meter DI-5 Combination meter removal and installation - See Instrument panel IP-11 COMM - Wiring diagram AV-64, AV-108 COMPAS - Wiring diagram DI-109 Compass DI-106 Component Location (auto A/C) ATC-42 Compression pressure(VK45DE) EM-232 Compression pressure(VQ35DE) EM-101 Compressor clutch removal and installation .. ATC-142 Compressor special service tool ATC-17 Condenser ATC-153 Connecting rod bearing clearance(VK45DE) .. EM-272 Connecting rod bushing clearance EM-143 Connecting rod bushing clearance(VK45DE) .. EM-267 Connecting rod(VK45DE) EM-267 Connecting rod(VQ35DE) EM-141 Console box - See Instrument panel IP-10 CONSULT for VDC BRC-24 CONSULT-II for engine EC-118 CONSULT-II Reference value (A/T) AT-90 Control units (terminal arrangement) PG-74 Control valve (A/T) AT-38 Controller Area Network (CAN) . BL-24, BL-57, BL-95, BL-184, GW-20, GW-68, RF-12, SE-16 Converter housing installation AT-268, AT-272 COOL/F - Wiring diagram EC-500, EC-1177 Coolant replacement(VQ35DE) MA-15 Cooling circuit (engine)(VK45DE) CO-36</p>	<p>Cooling circuit (engine)(VQ35DE) CO-9 Cooling fan motor EC-507, EC-1184 Cooling fan(VK45DE) CO-49 Cooling fan(VQ35DE) CO-21 Cowl top EI-23 Cowl top cover EI-23 Crankcase ventilation system - See Positive crankcase ventilation EC-50, EC-712 Crankshaft position sensor (POS) ... EC-360, EC-1031 Crankshaft(VK45DE) EM-249 Crankshaft(VQ35DE) EM-141 Crash zone sensor SRS-50 Cylinder block boring(VK45DE) EM-270 Cylinder block(VK45DE) EM-248 Cylinder block(VQ35DE) EM-123 Cylinder head bolt tightening(VK45DE) EM-234 Cylinder head bolt tightening(VQ35DE) EM-104 Cylinder head(VK45DE) EM-232 Cylinder head(VQ35DE) EM-101</p> <hr/> <p style="text-align: center;">D</p> <p>D/LOCK - Wiring diagram BL-26, BL-32 Diagnosis sensor unit SRS-53 Diagnostic trouble code (DTC) for OBD system EC-15, EC-677, EC-720, WT-3 Diagnostic trouble code (DTC) inspection priority chart EC-93 Direct clutch solenoid valve AT-154, AT-156 Display and amp.assembly ATC-50, ATC-62 Door glass GW-58, GW-62 Door glass Fitting Adjustment(Front) GW-60 Door lock BL-152 Door mirror GW-98 Door trim EI-36 Door, front BL-148, GW-58 Door, rear BL-148, GW-62 Drive belt inspection MA-22 Drive belt inspection(VQ35DE) MA-14 Drive belt(VK45DE) EM-174 Drive belt(VQ35DE) EM-15 Drive shaft MA-38 Drive shaft (rear) RAX-9 Driver air bag SRS-42 Duct and grilles ATC-133</p> <hr/> <p style="text-align: center;">E</p> <p>ECM input/output signal EC-109 ECM power supply EC-476, EC-813, EC-1144 ECM/PW - Wiring diagram EC-477, EC-1145 ECTS - Wiring diagram EC-211, EC-882 Electric sunroof RF-10 Electric throttle control actuator EC-563, EC-574, EC-1244, EC-1256 Electric throttle control actuator (VK45DE) EM-179 Electric throttle control actuator (VQ35DE) EM-19 Electrical load signal circuit EC-627, EC-1309 Electrical unit PG-74</p>
--	---

 A
 B
 C
 D
 E
 F
 G
 H
 I
 J
 K
 L
 IDX

ALPHABETICAL INDEX

Electrical units location	PG-67	Front seat belt	SB-4
Electronic ignition (EI) system	EC-32 , EC-694	Front seat belt pre-tensioner	SB-2 , SRS-3 , SRS-52
Engine control circuit diagram	EC-107	Front suspension	FSU-6
Engine control component parts location	EC-100	FTS - Wiring diagram	AT-135
Engine control module (ECM)	EC-480 , EC-1148	FTTS - Wiring diagram	EC-329 , EC-334 , EC-1000 , EC-1005
Engine control system diagram	EC-29 , EC-691	Fuel cut control (at no load high engine speed)	EC-33 , EC-695
Engine coolant temperature sensor (ECTS) ...	EC-209 , EC-221 , EC-880 , EC-893	Fuel filter replacement	FL-4
Engine coolant(VK45DE)	CO-38	Fuel gauge	DI-5
Engine coolant(VQ35DE)	CO-11	Fuel injection system (Bank 1)	EC-304 , EC-316 , EC-976 , EC-987
Engine fail-safe system	EC-95	Fuel injection system (Bank 2)	EC-304 , EC-316 , EC-976 , EC-987
Engine oil filter replacement	MA-26	Fuel injector	EC-629
Engine oil filter replacement(VQ35DE)	MA-19	Fuel injector and fuel tube(VK45DE)	EM-194
Engine oil precautions	GI-8	Fuel injector and fuel tube(VQ35DE)	EM-45
Engine oil replacement(VQ35DE)	MA-18	Fuel level sensor	EC-459 , EC-461 , EC-463 , EC-1127 , EC-1129 , EC-1131
Engine oil(VK45DE)	LU-25	Fuel line inspection	FL-3 , MA-25
Engine oil(VQ35DE)	LU-7	Fuel line inspection(VQ35DE)	MA-17
Engine removal(VK45DE)	EM-243	Fuel precautions	GI-6 , GI-7
Engine removal(VQ35DE)	EM-113	Fuel pressure check	EC-85 , EC-747
Engine room cover(VK45DE)	EM-173	Fuel pressure release	EC-85 , EC-747
ETC1 - Wiring diagram	EC-564 , EC-1245	Fuel pump	EC-636 , EC-1318
ETC2 - Wiring diagram	EC-559 , EC-1240	Fuel pump and gauge	FL-4
ETC3 - Wiring diagram	EC-570 , EC-1252	Fuel system	FL-3
EVAP canister	EC-41 , EC-703	Fuel tank	FL-10
EVAP canister purge volume control solenoid valve	EC-396 , EC-404 , EC-1065 , EC-1073	Fuel tank temperature sensor	EC-327 , EC-333 , EC-998 , EC-1004
EVAP canister vent control valve	EC-411 , EC-418 , EC-1080 , EC-1087	Fuel tank vacuum relief valve	EC-41 , EC-703
EVAP control system (small leak) diagnosis ..	EC-387 , EC-449 , EC-1056 , EC-1118	FUELB1 - Wiring diagram ..	EC-306 , EC-318 , EC-978 , EC-989
EVAP control system pressure sensor	EC-424 , EC-427 , EC-433 , EC-1093 , EC-1096 , EC-1102	FUELB2 - Wiring diagram ..	EC-308 , EC-320 , EC-980 , EC-991
EVAP control system purge flow monitoring diagnosis	EC-382 , EC-1051	Fuse	PG-16
EVAP vapor lines inspection	MA-21 , MA-28	Fuse and fusible link box	PG-81
Evaporative emission (EVAP) system ..	EC-38 , EC-700	Fusible link	PG-16
Evaporator	ATC-154		
Exhaust manifold(VK45DE)	EM-183		
Exhaust manifold(VQ35DE)	EM-26		
Exhaust system	EX-3		
Exhaust system inspection	EX-3 , MA-29		
Expansion valve	ATC-155		

F

F/PUMP - Wiring diagram	EC-637 , EC-1319
Final drive pre-inspection	FFD-20 , RFD-19
Final drive removal and installation ..	FFD-13 , FFD-15 , RFD-16
Floor trim	EI-41
Flow charts	GI-28
Fluid temperature sensor (A/T)	AT-134
Fluorescent leak detector	ATC-156
Freeze frame data	EC-59 , EC-721
Front axle	FAX-4 , FAX-10 , RAX-5
Front brake solenoid valve	AT-150 , AT-152
Front bumper	EI-14
Front door	BL-148 , BL-152 , GW-58
Front passenger air bag	SRS-46

G

Gauges	DI-5
Generic scan tool (GST)	EC-129
Glass	GW-11 , GW-58 , GW-62
Grille - See Exterior	EI-22
Ground distribution	PG-29

H

Harness connector	PG-71
Harness layout	PG-43
Headlining - See Roof trim	EI-43
Heated oxygen sensor 2 (bank 1)	EC-269 , EC-280 , EC-293 , EC-941 , EC-952 , EC-965
Heated oxygen sensor 2 (bank 2)	EC-269 , EC-280 , EC-293 , EC-941 , EC-952 , EC-965
Heated oxygen sensor 2 heater (bank 1)	EC-172 , EC-844
Heated oxygen sensor 2 heater (bank 2)	EC-172 , EC-844

ALPHABETICAL INDEX

[EC-844](#)

- Heated seat [SE-94](#)
 Heater and cooling unit (Heater core) [ATC-125](#)
 HFC134a (R134a) system precaution [ATC-6](#)
 HFC134a (R134a) system service procedure [ATC-137](#)
 HFC134a (R134a) system service tools [ATC-18](#)
 HFC134a system service equipment precaution
[ATC-13](#)
 High and low reverse clutch solenoid valve [AT-158](#),
[AT-160](#)
 Hood [BL-13](#)
 How to erase DTC for OBD system [EC-58](#), [EC-728](#)
 HSEAT - Wiring diagram [SE-95](#)

I

- IATS - Wiring diagram [EC-206](#), [EC-877](#)
 ICC - Wiring diagram [ACS-21](#)
 ICC/BS - Wiring diagram [EC-532](#), [EC-1208](#)
 ICC/SW - Wiring diagram [EC-517](#), [EC-1193](#)
 ICCBOF - Wiring diagram [EC-643](#), [EC-1325](#)
 Idle air volume learning [EC-83](#), [EC-745](#)
 Idle speed [EC-81](#), [EC-738](#), [EC-743](#)
 Idle speed control (ISC) [EC-467](#), [EC-469](#), [EC-1135](#),
[EC-1137](#)
 Ignition coil [EC-650](#), [EC-1332](#)
 Ignition coil(VK45DE) [EM-191](#)
 Ignition coil(VQ35DE) [EM-42](#)
 Ignition control system [EC-650](#), [EC-1332](#)
 Ignition timing [EC-81](#), [EC-738](#), [EC-743](#)
 IGNSYS - Wiring diagram [EC-651](#), [EC-1333](#)
 In vehicle sensor [ATC-106](#), [ATC-117](#)
 INF/D - Wring diagram [AV-57](#)
 INJECT - Wiring diagram [EC-630](#), [EC-1312](#)
 Injector [EC-1311](#)
 Input clutch solenoid valve [AT-146](#), [AT-148](#)
 Instrument panel [IP-10](#)
 Intake air temperature sensor [EC-204](#), [EC-224](#),
[EC-875](#), [EC-896](#)
 Intake door control linkage adjustment [ATC-76](#)
 Intake door motor [ATC-74](#), [ATC-123](#)
 Intake manifold collector(VQ35DE) [EM-19](#)
 Intake manifold(VK45DE) [EM-179](#)
 Intake manifold(VQ35DE) [EM-24](#)
 Intake sensor [ATC-112](#), [ATC-119](#)
 Intake valve timing control (Bank 1) .. [EC-160](#), [EC-825](#)
 Intake valve timing control (Bank 2) .. [EC-160](#), [EC-825](#)
 Intake valve timing control position sensor (Bank 1)
[EC-1161](#)
 Intake valve timing control position sensor (Bank 2)
[EC-1161](#)
 Intake valve timing control solenoid valve (Bank 1)
[EC-180](#), [EC-852](#)
 Intake valve timing control solenoid valve (Bank 2)
[EC-180](#), [EC-852](#)
 Integrated homelink transmitter [BL-226](#)
 Intelligent cruise control (ICC) system [ACS-6](#)
 Interior [EI-38](#)
 IPDM (Intelligent power distribution module engine

- room) [PG-17](#)
 IVCB1 - Wiring diagram [EC-181](#), [EC-853](#)
 IVCB2 - Wiring diagram [EC-183](#), [EC-855](#)
 IVCSB1 - Wiring diagram [EC-1163](#)
 IVCSB2 - Wiring diagram [EC-1165](#)
 IVIS (Infiniti vehicle immobilizer system) precautions ...
[GI-3](#)
 IVTB1 - Wiring diagram [EC-828](#)
 IVTB2 - Wiring diagram [EC-830](#)

K

- Knock sensor (KS) [EC-355](#), [EC-1026](#)
 KS - Wiring diagram [EC-356](#), [EC-1027](#)

L

- LAN system circuit [ATC-64](#)
 Lane Departure Warning System [DI-77](#)
 Laser beam aiming adjustment [ACS-14](#)
 Latch (lower anchors and tether for children) system ...
[SB-10](#)
 LDW [DI-77](#)
 LDW - Wiring Diagram [DI-89](#)
 Line pressure solenoid valve [AT-129](#)
 Line pressure test (A/T) [AT-54](#)
 Liquid gasket application [EM-6](#), [LU-21](#)
 Liquid gasket application(VQ35DE) [LU-3](#), [CO-3](#)
 Location of electrical units [PG-67](#)
 Low coast brake solenoid valve [AT-162](#), [AT-164](#)
 Lubricant (R134a) A/C [ATC-27](#)
 Lubrication circuit (engine)(VK45DE) [LU-23](#)
 Lubrication circuit (engine)(VQ35DE) [LU-5](#)
 Lubrication oil A/C [ATC-160](#)

M

- M/ANT - Wiring diagram [AV-49](#)
 MAFS - Wiring diagram [EC-190](#), [EC-198](#), [EC-862](#),
[EC-870](#)
 Magnet clutch [ATC-82](#), [ATC-142](#)
 MAIN - Wiring diagram [EC-148](#), [EC-813](#), [AT-179](#)
 Maintenance (engine)(VQ35DE) [MA-14](#)
 Major overhaul (Final drive) [FFD-17](#), [RFD-18](#)
 Major overhaul (Transfer) [TF-45](#)
 Malfunction indicator lamp (MIL) [EC-67](#), [EC-730](#)
 Mass air flow sensor (MAFS) [EC-187](#), [EC-196](#),
[EC-859](#), [EC-868](#)
 Meter [DI-5](#)
 METER - Wiring diagram [DI-12](#)
 MIL data link connectors circuit [EC-673](#), [EC-1364](#)
 MIL/DL - Wiring diagram [EC-673](#), [EC-1364](#)
 Mirror, door [GW-98](#)
 Mirror, out side [GW-98](#)
 Misfire [EC-345](#), [EC-1016](#)
 MMSW - Wiring diagram [AT-167](#)
 Mode door control linkage adjustment [ATC-70](#)
 Mode door motor [ATC-68](#), [ATC-130](#)
 Molding - See Exterior [EI-25](#), [EI-30](#), [EI-33](#)

A

B

C

D

E

F

G

H

I

J

K

L

IDX

ALPHABETICAL INDEX

-
- Multipoint fuel injection (MFI) system [EC-30](#), [EC-692](#)
 Multipoint fuel injection precautions [GI-7](#)

N

- NATS - Wiring diagram [BL-208](#)
 NAVI - Wiring diagram [AV-100](#)
 Navigation system [AV-93](#)
 NONDTC - Wiring diagram [AT-186](#)
 NVH troubleshooting (EM) [EM-171](#)
 NVH troubleshooting (EM)(VQ35DE) [EM-13](#)
 NVH troubleshooting (Final drive) [FFD-6](#), [RFD-7](#)
 NVH troubleshooting (Propeller shaft) [PR-3](#)
 NVH troubleshooting (Transfer) [TF-8](#)
 NVIS (Nissan vehicle immobilizer system) precautions
[GI-3](#)

O

- O2H2B1 - Wiring diagram [EC-174](#), [EC-846](#)
 O2H2B2 - Wiring diagram [EC-176](#), [EC-848](#)
 O2S2B1 - Wiring diagram .. [EC-272](#), [EC-283](#), [EC-296](#),
[EC-944](#), [EC-955](#), [EC-968](#)
 O2S2B2 - Wiring diagram .. [EC-274](#), [EC-285](#), [EC-298](#),
[EC-946](#), [EC-957](#), [EC-970](#)
 Oil cooler (engine)(VQ35DE) [LU-14](#)
 Oil filter(VK45DE) [LU-28](#)
 Oil filter(VQ35DE) [LU-10](#)
 Oil pan (engine)(VK45DE) [EM-187](#)
 Oil pan (engine)(VQ35DE) [EM-30](#)
 Oil pressure (engine)(VK45DE) [LU-25](#)
 Oil pressure (engine)(VQ35DE) [LU-8](#)
 Oil pressure relief valve (engine)(VQ35DE) [LU-6](#)
 Oil pump (A/T) [AT-312](#)
 Oil pump (engine)(VK45DE) [LU-31](#)
 Oil pump (engine)(VQ35DE) [LU-17](#)
 Oil pump regulator valve (engine)(VK45DE) [LU-31](#)
 Oil pump regulator valve (engine)(VQ35DE) [LU-17](#)
 Oil seal replacement (engine)(VK45DE) [EM-228](#)
 Oil seal replacement (engine)(VQ35DE) [EM-98](#)
 Oil seal replacement (front of final drive) [FFD-9](#),
[RFD-10](#)
 Oil seal replacement (side of final drive) [FFD-11](#),
[RFD-14](#)
 On board diagnostic system [EC-53](#)
 ORVR (On-board Refueling Vapor Recovery) .. [EC-45](#),
[EC-707](#)
 Out side mirror [GW-98](#)
 Overheat [EC-496](#), [EC-1173](#)

P

- Park/Neutral position switch [EC-488](#), [EC-1156](#)
 Park/neutral position switch (A/T) [AT-112](#)
 Parking brake control [PB-4](#)
 PCV (positive crankcase ventilation) ... [EC-50](#), [EC-712](#)
 PGC/V - Wiring diagram .. [EC-398](#), [EC-406](#), [EC-1067](#),
[EC-1075](#)
 PHASE - Wiring diagram [EC-1040](#)

- PHSB1 - Wiring diagram [EC-369](#)
 PHSB2 - Wiring diagram [EC-371](#)
 Pilot bushing replacement - See Pilot
 converter(VQ35DE) [EM-124](#)
 Piston assembly(VK45DE) [EM-259](#)
 Piston assembly(VQ35DE) [EM-136](#)
 Piston pin inspection(VK45DE) [EM-265](#)
 Piston pin inspection(VQ35DE) [EM-141](#)
 Piston ring inspection(VK45DE) [EM-266](#)
 Piston ring inspection(VQ35DE) [EM-142](#)
 Piston to bore clearance(VK45DE) [EM-269](#)
 Piston to bore clearance(VQ35DE) [EM-145](#)
 PNP/SW - Wiring diagram . [EC-490](#), [EC-1158](#), [AT-113](#)
 POS - Wiring diagram [EC-362](#), [EC-1033](#)
 POWER - Wiring diagram [PG-4](#)
 Power door mirror [BL-21](#)
 Power seat [SE-92](#)
 Power steering fluid level [PS-8](#), [MA-37](#)
 Power steering gear [PS-18](#)
 Power steering hydraulic pressure [PS-30](#)
 Power steering oil pump [PS-30](#)
 Power steering pressure (PSP) sensor [EC-471](#)
 Power steering system bleeding [PS-8](#)
 Power supply routing [PG-3](#)
 Power window [GW-15](#)
 PRE/SE - Wiring diagram [EC-429](#), [EC-435](#), [EC-1098](#),
[EC-1104](#)
 Precautions for Leak detection dye [ATC-16](#)
 Precautions (General) [GI-4](#)
 Pressure switch 1 [AT-152](#), [AT-171](#)
 Pressure switch 2 [AT-164](#)
 Pressure switch 3 [AT-148](#), [AT-173](#)
 Pressure switch 5 [AT-156](#), [AT-175](#)
 Pressure switch 6 [AT-160](#), [AT-177](#)
 Pressure test (A/T) [AT-54](#)
 Propeller shaft [PR-4](#), [PR-7](#)
 Propeller shaft on vehicle service [PR-4](#), [PR-7](#)
 Propeller shaft vibration [PR-4](#), [PR-7](#)
 PS/SEN - Wiring diagram [EC-472](#), [EC-1140](#)

R

- R/VIEW - Wiring diagram [DI-116](#)
 Radiator(VK45DE) [CO-41](#)
 Radiator(VQ35DE) [CO-14](#)
 Rear bumper [EI-17](#)
 Rear combination lamp removal and installation
[LT-151](#)
 Rear door [BL-148](#), [GW-62](#)
 Rear seat [SE-104](#)
 Rear suspension [RSU-5](#)
 Rear view monitor [DI-113](#)
 Rear window defogger [GW-67](#)
 Refrigerant connection precaution [ATC-8](#)
 Refrigerant discharging evacuating charging [ATC-137](#)
 Refrigerant general precaution [ATC-7](#)
 Refrigerant lines [ATC-137](#)
 Refrigerant pressure sensor [EC-663](#), [EC-1345](#),
[ATC-89](#), [ATC-154](#)

ALPHABETICAL INDEX

Refrigeration cycle	ATC-21	System readiness test (SRT) code	EC-59 , EC-721
Removal and installation (A/T)	AT-266 , AT-269		
Removal and installation (Transfer)	TF-44		
Revolution sensor (A/T)	AT-118 , AT-259		
Rocker cover(VK45DE)	EM-200		
Rocker cover(VQ35DE)	EM-51		
RP/SEN - Wiring diagram	EC-664 , EC-1346		
<hr/>			
S			
SAE J1979 - Service \$01 - 09	EC-129 , EC-715		
Seal - See Exterior	EI-27		
Seat belt inspection	SB-7		
Seat belt, front	SB-4		
Seat, rear	SE-104		
Self-diagnosis (Transfer)	TF-22		
Self-diagnostic results	EC-70		
SEN/PW - Wiring diagram	EC-484 , EC-1152		
SHIFT - Wiring diagram	AT-233		
Shift lock system	AT-232		
Shift schedule	AT-359		
Shock absorber (rear)	RSU-9		
Side air bag (satellite) sensor	SRS-51		
Side curtain air bag	SRS-48		
Side trim	EI-38		
SMJ (super multiple junction)	PG-76		
SNOW MODE SW	EC-668 , EC-1350		
SNOWSW - Wiring diagram	EC-669 , EC-1351		
Spark plug replacement	MA-27		
Spark plug replacement(VQ35DE)	MA-20		
Spark plug(VK45DE)	EM-192		
Spark plug(VQ35DE)	EM-43		
Specification value	EC-137 , EC-802		
Speedometer	DI-5		
Spiral cable	SRS-44		
SROOF - Wiring diagram	BL-166 , RF-13		
SRS - See Supplemental Restraint System	SRS-5		
SRS - Wiring diagram	SRS-12		
SRS Trouble diagnoses	SRS-8		
Stabilizer bar (rear)	RSU-16		
Stall test (A/T)	AT-53		
Standardized relay	PG-78		
START - Wiring diagram	SC-12		
Starter	SC-11		
Starting system	SC-11		
Steering gear and linkage inspection	MA-36		
Steering linkage	PS-18		
Steering wheel and column	PS-10 , PS-13		
Stop lamp switch	EC-552 , EC-1233		
STSIG - Wiring diagram	AT-108		
Sun roof, electric	RF-10		
Sunload sensor	ATC-109 , ATC-118		
Sunroof	RF-10 , RF-23		
Supplemental Restraint System	SRS-5		
Supplemental restraint system - Wiring diagram	SRS-12		
Suspension	MA-37		
Symbols and abbreviations	GI-11 , GI-24		
Symptom matrix chart	EC-96		
<hr/>			
T			
Tachometer	DI-5		
TCM circuit diagram	AT-52		
TCM inspection table	AT-89		
Thermostat(VK45DE)	CO-53		
Thermostat(VQ35DE)	CO-27		
Three way catalyst function (Bank 1)	EC-376 , EC-1045		
Three way catalyst function (Bank 2)	EC-376 , EC-1045		
Three way catalyst precautions	GI-6		
Three way catalyst(VK45DE)	EM-183		
Three way catalyst(VQ35DE)	EM-26		
Throttle control motor	EC-569 , EC-1251		
Throttle control motor relay	EC-557 , EC-1238		
Throttle position sensor (TPS)	EC-214 , EC-338 , EC-509 , EC-511 , EC-590 , EC-886 , EC-1009 , EC-1185 , EC-1187 , EC-1272		
Throttle valve closed position learning	EC-83 , EC-745		
Tie-rod	PS-18		
Timing chain(VK45DE)	EM-203		
Timing chain(VQ35DE)	EM-64		
Tire rotation	MA-35		
Top tether strap child restraint	SB-11		
Torque converter installation	AT-267 , AT-268 , AT-272		
Torque convertor clutch solenoid valve	AT-125 , AT-127		
TPS1 - Wiring diagram	EC-340 , EC-1011		
TPS2 - Wiring diagram	EC-216 , EC-888		
TPS3 - Wiring diagram	EC-592 , EC-1274		
Traction control system circuit (engine)	EC-494 , EC-495		
Transfer control unit inspection table	TF-21		
Transverse link (front)	FSU-14		
TRNSCV - Wiring diagram	BL-226		
Trouble diagnoses	GI-12		
Two trip detection logic	EC-53 , EC-715		
Tyre pressure monitoring system - trouble diagnoses ..	WT-15		
Tyre pressure monitoring system - wiring diagram	WT-16		
<hr/>			
U			
Unified meter and A/C amp.	DI-28		
<hr/>			
V			
Vacuum hose (brake system)	BR-17		
Vacuum hose drawing (Engine control)	EC-106		
Valve clearance(VK45DE)	EM-222		
Valve clearance(VQ35DE)	EM-93		
Valve guide	EM-108		
Valve guide(VK45DE)	EM-239		
Valve lifter	EM-87		
Valve seat(VK45DE)	EM-241		
Valve seat(VQ35DE)	EM-110		
Valve spring(VK45DE)	EM-242		
Valve spring(VQ35DE)	EM-111		

IDX

ALPHABETICAL INDEX

- Variable induction air control system (VIAS) [EC-1228](#),
[EC-1355](#)
- VDC -Wiring diagram [BRC-16](#)
- Vehicle security (theft warning) system [BL-180](#)
- Vehicle speed sensor (VSS) [EC-465](#), [EC-1133](#),
[EC-1227](#)
- VEHSEC - Wiring diagram [BL-186](#)
- VENT/V - Wiring diagram [EC-413](#), [EC-420](#), [EC-1082](#),
[EC-1089](#)
- VIAS - Wiring diagram [EC-1357](#)
- VIAS/V - Wiring diagram [EC-1229](#)
- VIN registration [EC-82](#), [EC-744](#)
- VSS A/T - Wiring diagram [AT-120](#)

W

- WARN - Wiring diagram [DI-40](#)
- Warning chime [DI-56](#)
- Warning lamps [DI-38](#)
- Water control valve(VK45DE) [CO-53](#)
- Water pump(VK45DE) [CO-51](#)
- Water pump(VQ35DE) [CO-22](#)
- Water temperature gauge [DI-5](#)
- Wheel alignment (front) [FSU-6](#)
- Wheel alignment (rear) [RSU-5](#)
- Wheel balance [WT-9](#), [MA-33](#)
- Wheel bearing (front) [FAX-4](#), [FAX-10](#), [RAX-5](#)
- Wheel hub (front) [FAX-4](#), [FAX-10](#), [RAX-5](#)
- Wheel sensor (VDC) [BRC-57](#)
- WINDOW - Wiring diagram [GW-22](#)
- Window, door [GW-58](#), [GW-62](#)
- Windshield [GW-11](#)
- Wiring Diagram (Cell code) list [PG-64](#)
- Wiring diagrams [GI-16](#)
- WT-T/WARN - Wiring diagram [WT-16](#)