

SECTION **HRN**
HORN

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

CONTENTS

COMPONENT DIAGNOSIS	2	Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	5
HORN	2	ON-VEHICLE REPAIR	6
Wiring Diagram - HORN -	2	HORN	6
PRECAUTION	5	Exploded View	6
PRECAUTIONS	5	Removal and Installation	6

HRN

HORN


< COMPONENT DIAGNOSIS >

COMPONENT DIAGNOSIS

HORN

Wiring Diagram - HORN -

INFOID:000000001246514

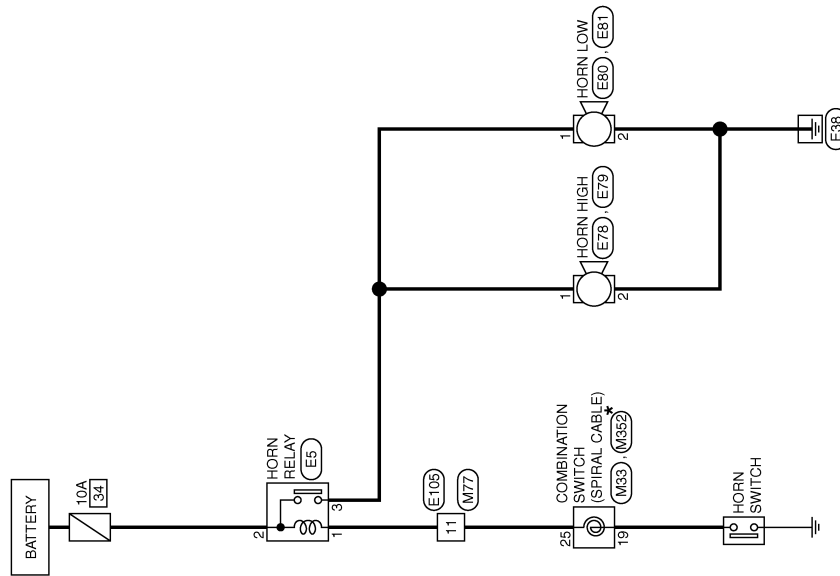

*: This connector is not shown in "Harness Layout".

HORN












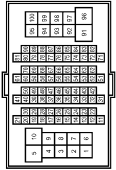

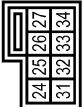

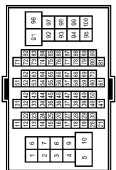
2007/02/28

JCLWA0534GB

HRN-2

HORN



< COMPONENT DIAGNOSIS >

HORN											
Connector No.	E5		Connector No.	E78		Connector No.	E79		Connector No.	E80	
Connector Name	HORN RELAY		Connector Name	HORN HIGH		Connector Name	HORN HIGH		Connector Name	HORN LOW	
Connector Type	-		Connector Type	P01FB-A		Connector Type	P01FB-A		Connector Type	P01FB-A	
											
Terminal No.	1		Terminal No.	1		Terminal No.	2		Terminal No.	1	
Color of Wire	Y		Color of Wire	G		Color of Wire	B		Color of Wire	G	
Signal Name [Specification]	-		Signal Name [Specification]	-		Signal Name [Specification]	-		Signal Name [Specification]	-	
Terminal No.	2		Terminal No.	11		Terminal No.	25		Terminal No.	11	
Color of Wire	B		Color of Wire	Y		Color of Wire	GR		Color of Wire	GR	
Signal Name [Specification]	-		Signal Name [Specification]	-		Signal Name [Specification]	-		Signal Name [Specification]	-	
Connector No.	E81		Connector No.	E105		Connector No.	M33		Connector No.	M77	
Connector Name	HORN LOW		Connector Name	WIRE TO WIRE		Connector Name	COMBINATION SWITCH (SPRAL CABLE)		Connector Name	WIRE TO WIRE	
Connector Type	P01FB-A		Connector Type	TH80FW-CS16-TM4		Connector Type	TK08FRY-TV		Connector Type	TH80MW-CS16-TM4	
											
Terminal No.	1		Terminal No.	11		Terminal No.	25		Terminal No.	11	
Color of Wire	Y		Color of Wire	Y		Color of Wire	GR		Color of Wire	GR	
Signal Name [Specification]	-		Signal Name [Specification]	-		Signal Name [Specification]	-		Signal Name [Specification]	-	

A
B
C
D
E
F
G
H
I
J
K
HRN
M
N
O
P

HORN

< COMPONENT DIAGNOSIS >

HORN	
Connector No.	M352
Connector Name	COMBINATION SWITCH (SPIRAL CABLE)
Connector Type	FK08MGT-X
	
	
Terminal No.	19
Color of Wire	-
Signal Name (Specification)	-

JCLWA0536GB

PRECAUTIONS

< PRECAUTION >

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000001308702

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. Information necessary to service the system safely is included in the "SRS AIRBAG" and "SEAT BELT" of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the "SRS AIRBAG".
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

HRN

HORN


< ON-VEHICLE REPAIR >

ON-VEHICLE REPAIR

HORN

Exploded View

INFOID:000000001246516

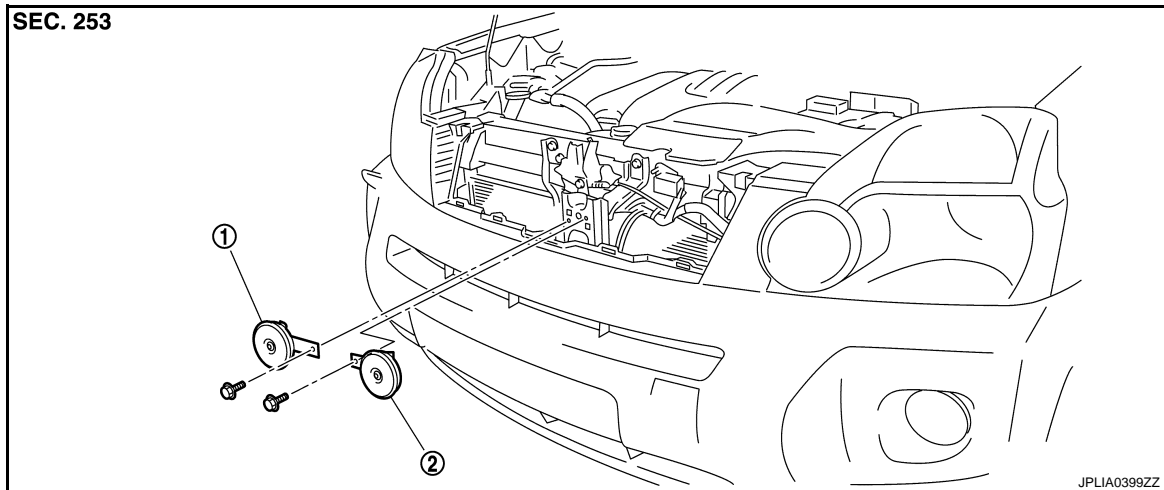

1. Horn (HIGH)

2. Horn (LOW)

Removal and Installation

INFOID:000000001246517

REMOVAL

1. Remove the front grille. Refer to [EXT-18. "Exploded View"](#).
2. Disconnect the horn (LOW, HIGH) connector.
3. Remove the horn mounting bolt, and remove the horn (LOW, HIGH) from the vehicle.

INSTALLATION

Install in the reverse order of removal.