

SECTION **IDX**
ALPHABETICAL INDEX

A

B

C

D

E

F

G

H

I

J

K

L

IDX

ALPHABETICAL INDEX

Numerics

2-4WD shift solenoid valve [TF-93](#), [TF-153](#), [TF-166](#)
4WD - Wiring diagram [TF-24](#)
4WD shift switch [TF-66](#)
4WD solenoid valve [TF-89](#), [TF-153](#), [TF-166](#)
4WD system description [TF-15](#)
4WD system diagram [TF-19](#)

A

A/C air flow [ATC-30](#)
A/C compressor clutch removal and installation .. [ATC-226](#)
A/C compressor mounting [ATC-225](#)
A/C compressor precaution [ATC-11](#)
A/C compressor special service tool [ATC-14](#)
A/C control operation (auto A/C) [ATC-27](#)
A/C diagnostic work flow (auto A/C) [ATC-171](#)
A/C evaporator [ATC-234](#)
A/C HFC134a (R134a) system identification [ATC-6](#)
A/C HFC134a (R134a) system precaution [ATC-5](#)
A/C HFC134a (R134a) system service procedure [ATC-221](#)
A/C HFC134a (R134a) system service tools ... [ATC-14](#)
A/C HFC134a system service equipment precaution ... [ATC-11](#)
A/C lubricant (R134a) [ATC-22](#)
A/C lubrication oil [ATC-22](#)
A/C operational check [ATC-69](#), [ATC-71](#)
A/C self-diagnoses (auto A/C) [ATC-67](#), [ATC-171](#)
A/C service data specification [ATC-241](#)
A/C trouble diagnoses (auto A/C) [ATC-34](#)
A/C, A - Wiring diagram [ATC-43](#)
A/T fluid checking [AT-12](#), [AT-51](#), [MA-22](#)
A/T fluid cooler cleaning [AT-14](#)
A/T fluid replacement [AT-12](#), [MA-24](#)
A/T fluid temperature sensor [AT-123](#)
A/T IND - Wiring diagram [DI-35](#)
A/T indicator [DI-35](#)
A/T shift lock system [AT-216](#)
A/T trouble diagnoses [AT-42](#)
ABS - Wiring diagram [BRC-17](#)
ABS (anti-lock brake system) [BRC-7](#)
Accelerator control system [ACC-3](#)
Accelerator pedal position (APP) sensor . [EC-604](#), [EC-610](#), [EC-624](#)
Accelerator pedal released position learning [EC-83](#)
AF1B1-Wiring diagram [EC-248](#), [EC-256](#), [EC-264](#), [EC-273](#), [EC-634](#)
AF1B2-Wiring diagram [EC-250](#), [EC-258](#), [EC-266](#), [EC-275](#), [EC-636](#)
AF1HB1-Wiring diagram [EC-181](#)
AF1HB2-Wiring diagram [EC-183](#)
Aiming adjustment [LT-23](#), [LT-58](#)
Air bag [SRS-3](#)
Air cleaner and air duct [EM-15](#)
Air cleaner filter replacement [EM-16](#), [MA-16](#)
Air conditioner cut control [EC-28](#)

Air flow meter - See Mass air flow sensor [EC-203](#), [EC-212](#)
Air fuel ratio sensor 1 .. [EC-245](#), [EC-254](#), [EC-262](#), [EC-270](#), [EC-632](#)
Air fuel ratio sensor 1 heater [EC-180](#)
Air mix. door motor [ATC-86](#)
Ambient sensor [ATC-177](#), [ATC-194](#)
Angular tightening application [EM-4](#)
APPS1 - Wiring diagram [EC-606](#)
APPS2 - Wiring diagram [EC-612](#)
APPS3 - Wiring diagram [EC-626](#)
ASC/BS - Wiring diagram [EC-572](#)
ASC/SW - Wiring diagram [EC-565](#)
ASCBOF - Wiring diagram [EC-644](#)
ASCD [EC-29](#)
ASCD (automatic speed control device) [ACS-2](#)
ASCD brake switch [EC-570](#), [EC-643](#)
ASCD indicator lamp [EC-650](#)
ASCD steering switch [EC-563](#)
ASCIND - Wiring diagram [EC-651](#)
ATP switch [TF-106](#), [TF-109](#), [TF-114](#)
Audio [AV-6](#)
AUDIO - Wiring diagram [AV-15](#)
AUT/DP - Wiring diagram [SE-15](#)
Auto air conditioner - Wiring diagram [ATC-43](#)
Auto anti-dazzling inside mirror [GW-66](#), [GW-67](#)
Autolamp [LT-40](#)
Automatic amplifier [ATC-72](#)
Automatic drive positioner [SE-11](#)
Automatic transmission number [GI-50](#)

B

Back door [BL-86](#)
Back door trim [EI-28](#)
Back sonar [DI-50](#)
BACK/L - Wiring diagram [LT-84](#)
Back-up lamp [LT-84](#)
Ball joint (front) [FSU-15](#)
Basic inspection [EC-71](#)
Battery [SC-4](#)
Battery current sensor . [EC-535](#), [EC-542](#), [EC-549](#), [EC-556](#)
Battery/Starting/Charging System Tester [SC-6](#), [SC-12](#), [SC-20](#)
BCM (Body control module) [BCS-3](#)
Block heater [EM-80](#)
Blower motor [ATC-124](#), [ATC-198](#)
Body alignment [BL-162](#)
Body component parts [BL-149](#)
Body construction [BL-161](#)
Body exterior paint color [BL-148](#)
Body mounting [BL-147](#)
Body repair [BL-148](#)
Body sealing [BL-158](#)
Bose speaker amp. [AV-9](#)
Brake booster [BR-17](#)
Brake fluid level [MA-28](#)
Brake hydraulic line [BR-12](#)

ALPHABETICAL INDEX

Brake inspection	MA-28
Brake lines and cables inspection	MA-28
Brake master cylinder	BR-15
Brake switch	EC-570 , EC-580 , EC-643
BRK/SW - Wiring diagram	EC-581
Bulb specifications	LT-145
Bumper, front	EI-13
Bumper, rear	EI-15

C

Cabin air filter	ATC-200 , MA-21
Camshaft	EM-46
Camshaft inspection	EM-50
Camshaft position sensor (PHASE)	EC-375
CAN - Wiring diagram	EC-162 , AT-94
CAN communication	EC-31 , EC-161 , EC-164 , AT-93
Canister-See EVAP canister	EC-35
Center case (Transfer)	TF-153 , TF-166
CHARGE - Wiring diagram	SC-19
Charging system	SC-17
Chassis and body maintenance	MA-21
Chassis and body maintenanceSchedule 1	MA-8
Chassis and body maintenanceSchedule 2	MA-10
CHIME - Wiring diagram	DI-40
Circuit breaker	PG-17
Closed loop control	EC-25 , EC-508
Closed loop control (Bank 1)	EC-508
Closed loop control (Bank 2)	EC-508
Clutch drum (Transfer)	TF-153 , TF-166
Clutch pressure switch (Transfer)	TF-153 , TF-166
Coil spring (front)	FSU-10
Collision diagnosis	SRS-53
Combination lamp, front, removal and installation	LT-25
Combination lamp, rear, removal and installation	LT-98
Combination meter	DI-5
Combination switch	LT-76
COMBSW - Wiring diagram	LT-76
COMM - Wiring diagram	AV-101
COMPAS - Wiring diagram	DI-24
Compass	DI-23
Component Location (auto A/C)	ATC-38
Compressor clutch removal and installation	ATC-226
Compressor mounting	ATC-225
Compressor precaution	ATC-11
Compressor special service tool	ATC-14
Condenser	ATC-232
Connecting rod	EM-98
Connecting rod bearing clearance	EM-98
Connecting rod bushing clearance	EM-98
Console box - See Instrument panel	IP-10
CONSULT for VDC	BRC-28
CONSULT-II for engine	EC-123
Control units (terminal arrangement)	PG-71
Control valve (A/T)	AT-36
Control valve (Transfer)	TF-153 , TF-166
Converter housing installation	AT-240 , AT-244
COOL/F - Wiring diagram	EC-514

Coolant mixture ratio	MA-12
Coolant replacement	CO-10 , MA-13
Cooling circuit (engine)	CO-8
Cooling fan	CO-17
Cooling fan control	EC-511
Cooling fan motor	EC-520
Cooling unit (A/C evaporator)	ATC-202 , ATC-234
Corrosion protection	BL-155
Crankcase ventilation system - See Positive crankcase ventilation	EC-45
Crankshaft	EM-81
Crankshaft position sensor (POS)	EC-368
Crash zone sensor	SRS-48
CUR/SE - Wiring diagram	EC-537 , EC-544 , EC-551 , EC-558
Cylinder block	EM-80
Cylinder block boring	EM-101

D

D/LOCK - Wiring diagram	BL-20
Data link connector for Consult	EC-125 , EC-137
Daytime light system	LT-28
Daytime running light - See Daytime light system	LT-28
DEF - Wiring diagram	GW-72
Diagnosis sensor unit	SRS-51
Diagnostic trouble code (DTC) for OBD system	EC-8 , EC-52
Diagnostic trouble code (DTC) inspection priority chart	EC-96
Differential carrier assembly	RFD-15
Differential gear oil replacement	MA-26
Dimensions	GI-51
Direct clutch solenoid valve	AT-143 , AT-145
Display and amp. assembly	ATC-72
Display Control Unit-Description	AV-90
Display Unit-Description	AV-90
Dome light - See Interior lamp	LT-107
Door glass	GW-58 , GW-61
Door lock	BL-119
Door mirror lamp	LT-107 , LT-127
Door trim	EI-28
Door, front	BL-115 , GW-58
Door, rear	BL-115 , GW-61
Drive belt	EM-13
Drive chain (Transfer)	TF-148 , TF-175
Drive pinion diff. inspection	RFD-18
Drive shaft (rear)	RAX-7
Driver air bag	SRS-39
DTC work support	EC-133
DTRL - Wiring diagram	LT-31
Duct and grilles	ATC-216
DVD Entertainment System	AV-79
DVD Player	AV-80 , AV-87

E

ECM input/output signal	EC-114 , EC-138
-------------------------	---

A
B
C
D
E
F
G
H
I
J
K
L

IDX

ALPHABETICAL INDEX

ECM power supply	EC-155 , EC-481	Front brake solenoid valve	AT-139 , AT-141
ECM relay	EC-155	Front bumper	EI-13
ECM/PW - Wiring diagram	EC-482	Front case (Transfer)	TF-148 , TF-175
ECTS - Wiring diagram	EC-226	Front combination lamp removal and installation	LT-25
Electric sunroof	RF-10	Front door	BL-115 , BL-119 , GW-58
Electric throttle control actuator	EC-591 , EC-602	Front Door Trim	EI-28
Electrical load signal circuit	EC-653	Front drive shaft (Transfer)	TF-148 , TF-175
Electrical units location	PG-65	Front fog lamp	LT-51
Electronic ignition (EI) system	EC-26	Front passenger air bag	SRS-44
Engine control circuit diagram	EC-112	Front seat	SE-82
Engine control component parts location	EC-103	Front seat belt	SB-3
Engine control module (ECM)	EC-485	Front seat belt pre-tensioner	SRS-3 , SRS-50
Engine control system diagram	EC-23	Front washer	WW-4
Engine coolant	CO-10	Front wiper	WW-4
Engine coolant temperature sensor (ECTS) ..	EC-224 , EC-237	FTS - Wiring diagram	AT-124
Engine fail-safe system	EC-98	FTTS - Wiring diagram	EC-340 , EC-345
Engine oil	LU-8	Fuel cut control (at no load high engine speed)	EC-27
Engine oil filter replacement	MA-17	Fuel filter replacement	FL-5
Engine oil precautions	GI-7	Fuel gauge	DI-5
Engine oil replacement	LU-9 , MA-17	Fuel injection system (Bank 1)	EC-317 , EC-328
Engine removal	EM-76	Fuel injection system (Bank 2)	EC-317 , EC-328
Engine room cover	EM-12	Fuel injector	EC-655
Engine serial number	GI-50	Fuel injector and fuel tube	EM-31
ETC1 - Wiring diagram	EC-592	Fuel level sensor	EC-464 , EC-466 , EC-468
ETC2 - Wiring diagram	EC-587	Fuel line inspection	FL-4
ETC3 - Wiring diagram	EC-598	Fuel pressure check	EC-87
EVAP canister	EC-35	Fuel pressure release	EC-87
EVAP canister purge volume control solenoid valve	EC-401 , EC-409	Fuel pump	EC-661
EVAP canister vent control valve	EC-416 , EC-423	Fuel pump and gauge	FL-5
EVAP control system (small leak) diagnosis ..	EC-393 , EC-447 , EC-455	Fuel pump control module	EC-521
EVAP control system pressure sensor	EC-430 , EC-433 , EC-439	Fuel pump dropping resistor	EC-521
EVAP control system purge flow monitoring diagnosis ..	EC-388	Fuel system	FL-4
EVAP vapor lines inspection	MA-20	Fuel tank	FL-11
Evaporative emission (EVAP) system	EC-32	Fuel tank temperature sensor	EC-338 , EC-344
Evaporator	ATC-234	Fuel tank vacuum relief valve	EC-35
Exhaust manifold	EM-21	FUELB1 - Wiring diagram	EC-319 , EC-330
Exhaust system	EX-3	FUELB2 - Wiring diagram	EC-321 , EC-332
Exhaust system inspection	EX-3	Fuse	PG-17 , PG-77
Expansion valve	ATC-236	Fuse and fusible link box	PG-77
F		Fuse block	PG-76
F/FOG - Wiring diagram	LT-53	Fusible link	PG-17 , PG-77
F/PUMP - Wiring diagram	EC-662	G	
Final drive pre-inspection	FFD-15	Garage jack and safety stand	GI-42
Final drive removal and installation ..	FFD-12 , RFD-13	Gauges	DI-5
Flow charts	GI-27	Generator	SC-17
Fluid temperature sensor (A/T)	AT-123	Generic scan tool (GST)	EC-136
Fluids	MA-11	Glass	GW-11 , GW-58 , GW-61
Fluorescent leak detector	ATC-237	Glove box lamp	LT-128
Fog lamp, front	LT-51	GPS antenna	AV-89
Foot lamp	LT-107	Grease	MA-11
FPCM - Wiring diagram	EC-523	Ground distribution	PG-31
Freeze frame data	EC-53 , EC-126	H	
		H/LAMP - Wiring diagram	LT-8
		Handling precautions for plastics	BL-178
		Harness connector	PG-68

ALPHABETICAL INDEX

<p>Harness layout PG-41</p> <p>Hazard warning lamp LT-60</p> <p>Headlamp LT-5</p> <p>Headlamp removal and installation LT-25</p> <p>Heated oxygen sensor 2 (bank 1) EC-282, EC-293, EC-306</p> <p>Heated oxygen sensor 2 (bank 2) EC-282, EC-293, EC-306</p> <p>Heated oxygen sensor 2 heater (bank 1) EC-187</p> <p>Heated oxygen sensor 2 heater (bank 2) EC-187</p> <p>Heated seat SE-79</p> <p>Heater and cooling unit (Heater core) . ATC-202, ATC-206</p> <p>Heater unit (heater core) ATC-202, ATC-206</p> <p>Height (Dimensions) GI-51</p> <p>HFC134a (R134a) system identification ATC-6</p> <p>HFC134a (R134a) system precaution ATC-5</p> <p>HFC134a (R134a) system service procedure ATC-221</p> <p>HFC134a (R134a) system service tools ATC-14</p> <p>HFC134a system service equipment precaution ATC-11</p> <p>High and low reverse clutch solenoid valve AT-147, AT-149</p> <p>Homelink universal transceiver BL-144</p> <p>Horn WW-48</p> <p>HORN - Wiring diagram WW-48</p> <p>How to erase DTC for OBD system EC-61</p> <p>HSEAT - Wiring diagram SE-80</p>	<p>Intake valve timing control position sensor (Bank 1) EC-498</p> <p>Intake valve timing control position sensor (Bank 2) EC-498</p> <p>Intake valve timing control solenoid valve (Bank 1) EC-195</p> <p>Intake valve timing control solenoid valve (Bank 2) EC-195</p> <p>Integrated homelink transmitter - See Homelink universal transceiver BL-144</p> <p>Interior EI-31</p> <p>Interior lamp LT-107</p> <p>Interior lamp on-off control LT-107</p> <p>Internal gear (Transfer) TF-148, TF-175</p> <p>IPDM (Intelligent power distribution module engine room) PG-18</p> <p>IVCB1 - Wiring diagram EC-196</p> <p>IVCB2 - Wiring diagram EC-198</p> <p>IVCSB1 - Wiring diagram EC-500</p> <p>IVCSB2 - Wiring diagram EC-502</p> <p>IVIS (Infiniti vehicle immobilizer system) precautions ... GI-3</p> <p>IVTB1 - Wiring diagram EC-169</p> <p>IVTB2 - Wiring diagram EC-171</p>
<hr/>	
I	
<p>I/MIRR - Wiring diagram GW-66</p> <p>IATS - Wiring diagram EC-221</p> <p>Identification plate GI-49</p> <p>Idle air volume learning EC-85</p> <p>Idle speed EC-71, EC-81</p> <p>Idle speed control (ISC) EC-472, EC-474</p> <p>Ignition coil EM-28, EC-674</p> <p>Ignition control system EC-674</p> <p>Ignition key hole illumination LT-107</p> <p>Ignition timing EC-71, EC-81</p> <p>IGNSYS - Wiring diagram EC-675</p> <p>ILL - Wiring diagram LT-135</p> <p>Illumination LT-128</p> <p>In vehicle sensor ATC-181, ATC-195</p> <p>In-cabin Microfilter ATC-200, MA-21</p> <p>INJECT - Wiring diagram EC-656</p> <p>Injector EC-655</p> <p>Input clutch solenoid valve AT-135, AT-137</p> <p>Instrument panel IP-10</p> <p>INT/L - Wiring diagram LT-113</p> <p>Intake air temperature sensor EC-220, EC-240</p> <p>Intake door control linkage adjustment ATC-112, ATC-116</p> <p>Intake door motor ATC-110, ATC-210</p> <p>Intake manifold EM-17</p> <p>Intake sensor ATC-189, ATC-197</p> <p>Intake valve timing control (Bank 1) EC-166</p> <p>Intake valve timing control (Bank 2) EC-166</p>	<p>Jacking points GI-42</p> <p>Junction box (J/B) PG-76</p>
<hr/>	
J	
<hr/>	
K	
<p>Key illumination LT-107</p> <p>KEYLES - Wiring diagram BL-43</p> <p>Knock sensor (KS) EC-363</p> <p>KS - Wiring diagram EC-364</p>	
<hr/>	
L	
<p>Length (Dimensions) GI-51</p> <p>License lamp LT-86</p> <p>Lifting points GI-43</p> <p>Line pressure solenoid valve AT-118</p> <p>Line pressure switch (Transfer) TF-153, TF-166</p> <p>Line pressure test (A/T) AT-52</p> <p>Location of electrical units PG-65</p> <p>Low coast brake solenoid valve AT-151, AT-153</p> <p>Low tire pressure warning system WT-8</p> <p>Low tire pressure warning system - trouble diagnoses WT-11</p> <p>Low tire pressure warning system - Wiring diagram WT-11</p> <p>Lubricant (R134a) A/C ATC-22</p> <p>Lubricants MA-11</p> <p>Lubrication circuit (engine) LU-6</p> <p>Lubrication oil A/C ATC-22</p> <p>Lubrication-locks, hinges and hood latches MA-31</p>	

ALPHABETICAL INDEX

M

MAFS - Wiring diagram [EC-206](#), [EC-214](#)
Magnet clutch [ATC-150](#), [ATC-226](#)
MAIN - Wiring diagram [EC-155](#), [AT-163](#)
Main oil pump (Transfer) [TF-153](#), [TF-166](#)
Mainshaft (Transfer) [TF-153](#), [TF-166](#)
Maintenance (engine)Schedule 1 [MA-7](#)
Maintenance (engine)Schedule 2 [MA-9](#)
Major overhaul (Final drive) [FFD-14](#)
Major overhaul (Transfer) [TF-145](#)
Malfunction indicator lamp (MIL) [EC-63](#)
Map lamp [LT-107](#)
Mass air flow sensor (MAFS) [EC-203](#), [EC-212](#)
Meter [DI-5](#)
METER - Wiring diagram [DI-9](#)
MIL data link connectors circuit [EC-692](#)
MIL/DL - Wiring diagram [EC-692](#)
MIRROR - Wiring diagram [GW-88](#)
Misfire [EC-356](#)
Mode door control linkage adjustment [ATC-79](#)
Mode door motor [ATC-76](#), [ATC-211](#)
Model variation [GI-48](#)
Multiport fuel injection (MFI) system [EC-24](#)
Multiport fuel injection precautions [GI-6](#)
Multi-remote control system - See Remote keyless entry system [BL-37](#)

N

NATS - Wiring diagram [BL-128](#)
NAVI - Wiring diagram [AV-93](#)
NAVI Control Unit [AV-90](#)
Navigation system [AV-88](#)
Neutral-4LO switch [TF-62](#)
NONDTC - Wiring diagram [AT-172](#)
NVH troubleshooting (AX) [FAX-4](#)
NVH troubleshooting (EM) [EM-10](#)
NVH troubleshooting (Final drive) [RFD-7](#)
NVH troubleshooting (Propeller shaft) [PR-3](#)
NVH troubleshooting (RAX) [RAX-4](#)
NVH troubleshooting (RSU) [RSU-5](#)
NVH troubleshooting (ST) [PS-5](#)
NVH troubleshooting (Transfer) [TF-10](#)
NVH troubleshooting (WT)NVH troubleshooting (WT) .
[WT-4](#)
NVIS (Nissan vehicle immobilizer system) [BL-125](#)
NVIS (Nissan vehicle immobilizer system) precautions
[GI-3](#)

O

O2H2B1 - Wiring diagram [EC-189](#)
O2H2B2 - Wiring diagram [EC-191](#)
O2S2B1 - Wiring diagram ... [EC-285](#), [EC-296](#), [EC-309](#)
O2S2B2 - Wiring diagram ... [EC-287](#), [EC-298](#), [EC-311](#)
Oil cooler (engine) [LU-12](#)
Oil filter [LU-11](#)
Oil filter (Transfer) [TF-142](#)

Oil pan (engine) [EM-24](#)
Oil pressure (engine) [LU-8](#)
Oil pressure relief valve (engine) [LU-6](#)
Oil pump (engine) [LU-14](#)
Oil seal replacement (engine) [EM-61](#)
Oil seal replacement (front of final drive) [FFD-8](#), [RFD-9](#)
Oil seal replacement (side of final drive) [RFD-11](#)
On board diagnostic system [EC-48](#)
ORVR (On-board Refueling Vapor Recovery) .. [EC-39](#)
Overheat [EC-511](#)

P

P/SCKT - Wiring diagram [WW-46](#)
Pantograph jack [GI-42](#)
Park/Neutral position switch [EC-493](#)
Park/neutral position switch (A/T) [AT-101](#)
Parking brake control [PB-4](#)
PCV (positive crankcase ventilation) [EC-45](#)
Personal lamp [LT-107](#)
PGC/V - Wiring diagram [EC-403](#), [EC-411](#)
PHASE - Wiring diagram [EC-377](#)
Pinion bearing preload diff. [RFD-26](#)
Piston pin inspection [EM-96](#)
Piston ring inspection [EM-97](#)
Piston to bore clearance [EM-101](#)
Planetary carrier (Transfer) [TF-148](#), [TF-175](#)
PNP/SW - Wiring diagram [EC-495](#), [AT-102](#)
POS - Wiring diagram [EC-370](#)
POWER - Wiring diagram [PG-6](#)
Power door lock [BL-16](#)
Power seat [SE-75](#)
Power steering fluid level [MA-29](#)
Power steering gear [PS-15](#)
Power steering oil pump [PS-22](#)
Power steering pressure (PSP) sensor [EC-476](#)
Power steering system bleeding [PS-6](#)
Power supply routing [PG-4](#)
Power window [GW-16](#)
PRE/SE - Wiring diagram [EC-435](#), [EC-441](#)
Precautions (General) [GI-4](#)
Precautions in repairing high strength steel [BL-181](#)
Pressure switch 1 [AT-141](#), [AT-155](#)
Pressure switch 2 [AT-153](#)
Pressure switch 3 [AT-137](#), [AT-157](#)
Pressure switch 5 [AT-145](#), [AT-159](#)
Pressure switch 6 [AT-149](#), [AT-161](#)
Pressure test (A/T) [AT-52](#)
Propeller shaft [PR-4](#), [PR-8](#)
Propeller shaft inspection [MA-25](#)
Propeller shaft on vehicle service [PR-8](#)
Propeller shaft vibration [PR-4](#), [PR-8](#)
PS/SEN - Wiring diagram [EC-477](#)

R

R/VIEW - Wiring diagram [DI-65](#)
Radiator [CO-14](#)
Radio - See Audio [AV-6](#)

ALPHABETICAL INDEX

Rear axle	RAX-5	SROOF - Wiring diagram	RF-13	
Rear bumper	EI-15	SRS - See Supplemental Restraint System	SRS-5	A
Rear case (Transfer)	TF-147 , TF-180	SRS Trouble diagnoses	SRS-9	
Rear combination lamp removal and installation	LT-98	Stabilizer bar (front)	FSU-12	B
Rear cover packing replacement diff.	RFD-28	Stabilizer bar (rear)	RSU-40	
Rear door	BL-115 , GW-61	Stall test (A/T)	AT-51	C
Rear seat	SE-96	Standardized relay	PG-72	
Rear seat belt	SB-7	START - Wiring diagram	SC-11	
Rear suspension	RSU-24	Starting system	SC-10	
Rear view monitor	DI-61	Steering gear, linkage and transfer gear inspection	MA-29	
Rear washer	WW-29	Steering linkage	PS-15	D
Rear window defogger	GW-68	Steering wheel and column	PS-8	
Rear wiper	WW-29	Step lamp	LT-107	E
Refrigerant connection precaution	ATC-6	Stop lamp	LT-81	
Refrigerant discharging evacuating charging	ATC-221	Stop lamp switch	EC-570 , EC-580 , EC-643	F
Refrigerant general precaution	ATC-6	STOP/L - Wiring diagram	LT-82	
Refrigerant lines	ATC-221 , ATC-229 , ATC-230	Strut (front)	FSU-10	
Refrigerant pressure sensor	EC-687 , ATC-232	STSIG - Wiring diagram	AT-97	G
Relay box	PG-78	Sub-oil pump (Transfer)	TF-153 , TF-166	
Remote keyless entry system	BL-37	Sun gear (Transfer)	TF-148 , TF-175	
Removal and installation (A/T)	AT-238 , AT-241	Sun roof, electric	RF-10	H
Removal and installation (Transfer)	TF-144	Sunload sensor	ATC-186	
Revolution sensor (A/T)	AT-107	Sunroof	RF-22	
Ring gear diff. inspection	RFD-18	Supplemental Restraint System	SRS-5	I
Road wheel size	GI-51	Symbols and abbreviations	GI-10 , GI-22	
Rocker cover	EM-35	Symptom matrix chart	EC-99	
Room lamp	LT-107	System readiness test (SRT) code	EC-54	
Room lamp - See Interior lamp	LT-107			
ROOM/L - Wiring diagram	LT-113			
RP/SEN - Wiring diagram	EC-688			

S

SAE J1979 - Service \$01 - 09	EC-48	T/TOW - Wiring diagram	LT-103	J
SEAT - Wiring diagram	SE-75 , SE-76	Tachometer	DI-5	
Seat belt inspection	SB-12 , MA-32	Tail lamp	LT-86	K
Seat belt pre-tensioner	SRS-50	TAIL/L - Wiring diagram	LT-89	
Seat belt, front	SB-3	TCM inspection table	AT-83	L
Seat belt, rear	SB-7	TCS - Wiring diagram	BRC-17	
Seat, front	SE-82	TCS (traction control system)	BRC-7	
Seat, rear	SE-96	TCS component parts and connector location	BRC-14	
Self-diagnosis (Transfer)	TF-50	TCS wheel sensors	BRC-14	
SEN/PW - Wiring diagram	EC-489	Theft warning system - See Vehicle security (Theft warning) system	BL-64	IDX
SHIFT - Wiring diagram	AT-217	Thermometer	DI-23	
Shift control (Transfer)	TF-148 , TF-175	Three way catalyst	EM-21	
Shift lock system	AT-216	Three way catalyst function (Bank 1)	EC-382	
Shock absorber (front)	FSU-11	Three way catalyst function (Bank 2)	EC-382	
Shock absorber (rear)	RSU-33	Three way catalyst precautions	GI-5	
Side air bag (satellite) sensor	SRS-49	Throttle control motor	EC-597	
Side curtain air bag	SRS-47	Throttle control motor relay	EC-585	
Side trim	EI-31	Throttle position sensor (TPS)	EC-230 , EC-349 , EC-529 , EC-531 , EC-617	
SMJ (super multiple junction)	PG-74	Throttle valve closed position learning	EC-84	
SONAR - Wiring diagram	DI-53	Tie-rod	PS-15	
Spare tire size	GI-51	Timing chain	EM-37	
Spark plug	EM-29	Tire rotation	MA-28	
Spark plug replacement	MA-18	Tire size	GI-51	
Specification value	EC-144	Torque converter installation	AT-239 , AT-240 , AT-243 , AT-244	
Speedometer	DI-5	Torque convertor clutch solenoid valve	AT-114 , AT-	
Spiral cable	SRS-41			

ALPHABETICAL INDEX

116			
Tow truck towing	GI-44	Wheel bearing (front)	FAX-5
Towing point	GI-45	Wheel bearing (rear)	RAX-5
TPS1 - Wiring diagram	EC-351	Wheel hub (rear)	RAX-5
TPS2 - Wiring diagram	EC-232	Wheel size	GI-51
TPS3 - Wiring diagram	EC-619	Wheelbase (Dimensions)	GI-51
Traction control system - Wiring diagram	BRC-17	Width (Dimensions)	GI-51
Transfer control device	TF-76, TF-80, TF-137	WINDOW - Wiring diagram	GW-23
Transfer control unit inspection table	TF-35	Window antenna	AV-75
Transfer dropping resistor	TF-89	Window, door	GW-58, GW-61
Transfer fluid temperature sensor	TF-103, TF-153, TF-166	Windshield	GW-11
Transfer motor	TF-101, TF-141	WIP/R - Wiring diagram	WW-33
Transfer motor relay	TF-101	WIPER - Wiring diagram	WW-9
Transfer oil replacement	MA-25	Wiper, front	WW-4
Transfer serial number	GI-50	Wiper, rear	WW-29
Transmission serial number	GI-50	Wiring Diagram (Cell code) list	PG-62
Tread-FR&RR (Dimensions)	GI-51	Wiring diagrams	GI-15
Trim	EI-31	WT-T/WARN - Wiring diagram	WT-11
TRNSCV - Wiring diagram	BL-144		
Trouble diagnoses	GI-11		
Turbine revolution sensor	AT-105		
TURN - Wiring diagram	LT-64		
Turn signal lamp	LT-60		
Two trip detection logic	EC-48		
Two-pole lift	GI-43		

V

Vacuum hose (brake system)	BR-20
Vacuum hose drawing (Engine control)	EC-111
Valve clearance	EM-56
Valve guide	EM-71
Vanity mirror lamp	LT-107
VDC (vehicle dynamics control)	BRC-7
VDC -Wiring diagram	BRC-17
Vehicle identification number	GI-49
Vehicle recovery (freeing a stuck vehicle)	GI-45
Vehicle security (theft warning) system	BL-64
Vehicle speed sensor (VSS)	EC-470
VEHSEC - Wiring diagram	BL-68
VENT/V - Wiring diagram	EC-418, EC-425
VIN registration	EC-83
Viscosity number (SAE)	MA-12
VSS A/T - Wiring diagram	AT-109

W

W/ANT - Wiring diagram	AV-76
Wait detection switch	TF-69
WARN - Wiring diagram	DI-28
Warning chime	DI-37
Warning lamps	DI-27
Washer, front	WW-4
Washer, rear	WW-29
Water pump	CO-19
Water temperature gauge	DI-5
Wheel alignment (front)	FSU-6
Wheel alignment (rear)	RSU-26