

SECTION **IDX**
ALPHABETICAL INDEX

A
B
C
D
E
F
G
H
I
J
K
L

IDX

ALPHABETICAL INDEX

A

A/C air flow	ATC-35
A/C and audio controller	ATC-115
A/C component layout	ATC-24
A/C compressor clutch removal and installation	ATC-141
A/C compressor mounting	ATC-139 , ATC-141 , ATC-144 , ATC-145 , ATC-146 , ATC-147 , ATC-148 , ATC-150 , ATC-151 , ATC-152 , ATC-153 , ATC-154
A/C compressor precaution	ATC-11
A/C compressor special service tool	ATC-15
A/C control operation (auto A/C)	ATC-32
A/C diagnostic work flow (auto A/C)	ATC-101
A/C evaporator	ATC-153
A/C HFC134a (R134a) system precaution	ATC-5
A/C HFC134a (R134a) system service procedure	ATC-137
A/C HFC134a (R134a) system service tools ...	ATC-16
A/C HFC134a system service equipment precaution ...	ATC-12
A/C lubricant (R134a)	ATC-25
A/C lubrication oil	ATC-159
A/C operational check	ATC-60
A/C self-diagnoses (auto A/C)	ATC-51 , ATC-101
A/C service data specification	ATC-159
A/C system description (auto A/C)	ATC-28
A/C trouble diagnoses (auto A/C)	ATC-38
A/C, A - Wiring diagram	ATC-43
A/T fluid checking	AT-12 , AT-51 , MA-21
A/T fluid cooler cleaning	AT-14
A/T fluid replacement	AT-12 , MA-22
A/T fluid temperature sensor	AT-131
A/T IND - Wiring diagram	DI-35
A/T self-diagnoses	AT-99
A/T shift lock system	AT-222
A/T shift lock system - Wiring diagram	AT-223
A/T trouble diagnoses	AT-42
Accelerator control system	ACC-3
Accelerator pedal position (APP) sensor	EC-594 , EC-601 , EC-615
Accelerator pedal released position learning	EC-78
AF1B1-Wiring diagram	EC-252 , EC-261 , EC-270 , EC-280 , EC-625
AF1B2-Wiring diagram	EC-254 , EC-263 , EC-272 , EC-282 , EC-627
AF1HB1-Wiring diagram	EC-179
AF1HB2-Wiring diagram	EC-181
Air bag	SRS-3
Air bag precautions	SRS-3
Air bleeding (hydraulic clutch)	CL-7
Air bleeding for brake system	BR-10
Air cleaner and air duct	EM-18
Air cleaner filter replacement	MA-16
Air conditioner cut control	EC-28
Air flow meter - See Mass air flow sensor	EC-209 , EC-218
Air fuel ratio sensor 1	EC-249 , EC-259 , EC-268 , EC-277 , EC-623
Air fuel ratio sensor 1 heater	EC-178
Air mix. door motor	ATC-132
Air spoiler, rear	EI-35
Ambient sensor	ATC-102 , ATC-117
Angular tightening application	EM-6
APPS1 - Wiring diagram	EC-596
APPS2 - Wiring diagram	EC-603
APPS3 - Wiring diagram	EC-617
ASC/BS - Wiring diagram	EC-553 , EC-555
ASC/SW - Wiring diagram	EC-544
ASCBOF - Wiring diagram	EC-636 , EC-638
ASCD	EC-29
ASCD (automatic speed control device)	ACS-2
ASCD brake switch	EC-550 , EC-635
ASCD indicator lamp	EC-650
ASCD steering switch	EC-542
ASCIND - Wiring diagram	EC-651
AT indicator lamp	DI-34
Audio	AV-6
Auto air conditioner - Wiring diagram	ATC-43
Auto amp	ATC-116
Auto anti-dazzling inside mirror	GW-84
Automatic amplifier	ATC-48 , ATC-61 , ATC-116
Automatic transmission fluid replacement	MA-23
AWD - Wiring diagram	TF-17
Axle	MA-28
Axle housing (rear)	RAX-8
B	
BACK/L - Wiring diagram	LT-133
Back-up lamp	LT-133
Back-up lamp switch (M/T)	MT-11
Basic inspection	EC-70
Battery	SC-4
Battery/Starting/Charging System Tester	SC-6 , SC-14 , SC-25
BCM (Body control module)	BCS-3
Blower motor	ATC-77 , ATC-123
Blower unit	ATC-121
Bose speaker amp.	AV-6
Brake booster	BR-21
Brake fluid change	BR-9 , BR-10
Brake fluid level	MA-26
Brake fluid level and line check	BR-9
Brake hydraulic line	BR-11
Brake inspection	MA-27
Brake lines and cables inspection	MA-26
Brake master cylinder	BR-14
Brake pedal	BR-6
Brake switch	EC-570
BRK/SW - Wiring diagram	EC-571
Bulb specifications	LT-204
Bumper, front	EI-14
Bumper, rear	EI-17
C	
Camshaft	EM-109

ALPHABETICAL INDEX

Camshaft inspection	EM-111	Cylinder head	EM-128
Camshaft position sensor (PHASE)	EC-385	D	
CAN	DI-60	<hr/>	
CAN - Wiring diagram	EC-164 , AT-102 , LAN-24 , LAN-36 , LAN-48 , LAN-62 , LAN-76 , LAN-93 , LAN-108	D/LOCK - Wiring diagram	BL-25 , BL-31
CAN (Controller Area Network)	BL-23 , BL-60 , BL-111 , BL-250 , SE-16 , LAN-22	Daytime light system	LT-35
CAN communication	EC-31 , EC-163 , EC-166 , AT-31 , AT-101 , TF-13 , TF-34 , BL-23 , BL-60 , BL-111 , BL-250 , SE-16 , LT-39 , WW-9 , LAN-22	Daytime running light - See Daytime light system	LT-35
Center bearing assembly (propeller shaft)	PR-9 , PR-21	Diagnosis sensor unit	SRS-52
Center bearing disassembly (propeller shaft)	PR-8 , PR-20	Diagnostic trouble code (DTC) for OBD system	EC-8 , EC-48
CHARGE - Wiring diagram	SC-23	Diagnostic trouble code (DTC) inspection priority chart	EC-88
Charging system	SC-22	Direct clutch solenoid valve	AT-151 , AT-153
Chassis and body maintenance	MA-20	Display and amp. assembly	ATC-48 , ATC-61
CHIME - Wiring diagram	DI-40 , DI-41	Door glass	GW-76 , GW-80
CIGAR - Wiring diagram	WW-38	Door glass Fitting Adjustment(Front)	GW-79
Cigarette lighter	WW-38	Door glass Fitting Adjustment(Rear)	GW-83
Circuit breaker	PG-15	Door lock	BL-199
Clock	DI-68	Door mirror	GW-109
Closed loop control	EC-25	Door trim	EI-37
Clutch master cylinder	CL-8	Door, front	BL-195 , GW-76
Clutch operating cylinder	CL-11	Door, rear	BL-195 , GW-80
Clutch pedal	CL-5	Drive belt	EM-15
Clutch release bearing	CL-14	Drive shaft	MA-29
Clutch release mechanism	CL-14	Drive shaft (rear)	RAX-10
Clutch withdrawal lever	CL-14	Driver air bag	SRS-42
Coil spring (front)	FSU-10 , FSU-27	DTRL - Wiring diagram	LT-41
Collision diagnosis	SRS-54	Duct and grilles	ATC-133
Combination lamp, front, removal and installation	LT-32 , LT-70	E	
Combination lamp, rear, removal and installation	LT-152	<hr/>	
Combination meter	DI-4	ECM power supply	EC-154 , EC-495
Combination switch	LT-122	ECM/PW - Wiring diagram	EC-496
COMM - Wiring diagram	AV-55	ECTS - Wiring diagram	EC-231
COMPAS - Wiring diagram	DI-62	Electric sunroof	RF-10
Compass	DI-61	Electric throttle control actuator	EC-581 , EC-592
Component Location (auto A/C)	ATC-40	Electrical load signal circuit	EC-653
Compression pressure	EM-128	Electrical unit	PG-73
Compressor clutch removal and installation	ATC-141	Electrical units location	PG-67
Compressor special service tool	ATC-15	Electronic ignition (EI) system	EC-26
Condenser	ATC-151	Engine control circuit diagram	EC-108 , EC-110
Control units (terminal arrangement)	PG-73	Engine control component parts location	EC-95 , EC-101
Control valve (A/T)	AT-37	Engine control module (ECM)	EC-499
Controller Area Network (CAN)	BL-23 , BL-60 , BL-111 , BL-250 , SE-16 , LAN-22	Engine control system diagram	EC-22 , EC-23
Converter housing installation	AT-263	Engine coolant	CO-10
COOL/F - Wiring diagram	EC-530	Engine coolant temperature sensor (ECTS)	EC-229 , EC-241
Cooling circuit (engine)	CO-8	Engine fail-safe system	EC-90
Cooling fan	CO-21	Engine oil	LU-7
Cooling fan motor	EC-537	Engine oil filter replacement	MA-17
Cowl top	EI-21	Engine oil precautions	GI-8
Cowl top cover	EI-21	Engine oil replacement	MA-16
Crankcase ventilation system - See Positive crankcase ventilation	EC-44	Engine removal	EM-140
Crankshaft position sensor (POS)	EC-378	ETC1 - Wiring diagram	EC-582
Crash zone sensor	SRS-49	ETC2 - Wiring diagram	EC-577
		ETC3 - Wiring diagram	EC-588
		EVAP canister	EC-35
		EVAP canister purge volume control solenoid valve	

A
B
C
D
E
F
G
H
I
J
K
L

ALPHABETICAL INDEX

[EC-414](#), [EC-422](#)
EVAP canister vent control valve [EC-429](#), [EC-436](#)
EVAP control system (small leak) diagnosis ... [EC-406](#)
EVAP control system pressure sensor [EC-443](#),
[EC-446](#), [EC-452](#)
EVAP control system purge flow monitoring diagnosis
[EC-401](#)
EVAP vapor lines inspection [MA-19](#)
Evaporative emission (EVAP) system [EC-32](#)
Evaporator [ATC-153](#)
EVCB1 - Wiring diagram [EC-202](#)
EVCB2 - Wiring diagram [EC-204](#)
EVCSB1 - Wiring diagram [EC-516](#)
EVCSB2 - Wiring diagram [EC-518](#)
Exhaust manifold [EM-27](#)
Exhaust system [EX-3](#)
Exhaust system inspection [EX-3](#), [MA-20](#)
Exhaust valve timing control (Bank 1) [EC-173](#)
Exhaust valve timing control (Bank 2) [EC-173](#)
Exhaust valve timing control learning [EC-77](#)
Exhaust valve timing control magnet retarder (Bank 1)
[EC-201](#)
Exhaust valve timing control magnet retarder (Bank 2)
[EC-201](#)
Exhaust valve timing control position sensor (Bank 1) .
[EC-515](#)
Exhaust valve timing control position sensor (Bank 2) .
[EC-515](#)
Expansion valve [ATC-154](#)

F

F/FOG - Wiring diagram [LT-91](#)
F/PUMP - Wiring diagram [EC-663](#)
Final drive pre-inspection [RFD-21](#), [RFD-41](#), [FFD-16](#)
Final drive removal and installation [RFD-18](#)
Floor trim [EI-43](#)
Flow charts [GI-27](#)
Fluid temperature sensor (A/T) [AT-131](#)
Fluorescent leak detector [ATC-155](#)
Flywheel runout [EM-179](#)
Fog lamp, front [LT-88](#)
Freeze frame data [EC-52](#)
Front axle [FAX-4](#), [FAX-12](#)
Front brake solenoid valve [AT-147](#), [AT-149](#)
Front bumper [EI-14](#)
Front combination lamp removal and installation [LT-32](#),
[LT-70](#)
Front door [BL-195](#), [BL-199](#), [GW-76](#)
Front fog lamp [LT-88](#)
Front passenger air bag [SRS-46](#)
Front seat [SE-90](#)
Front seat belt [SB-3](#)
Front seat belt pre-tensioner [SB-2](#), [SRS-3](#), [SRS-51](#)
Front suspension [FSU-6](#), [FSU-23](#)
Front washer [WW-4](#)
Front wiper [WW-4](#)
FTS - Wiring diagram [AT-132](#)
FTTS - Wiring diagram [EC-349](#), [EC-353](#)

Fuel cut control (at no load high engine speed) . [EC-27](#)
Fuel filter replacement [FL-4](#)
Fuel gauge [DI-4](#)
Fuel injection system (Bank 1) [EC-324](#), [EC-336](#)
Fuel injection system (Bank 2) [EC-324](#), [EC-336](#)
Fuel injector [EC-655](#)
Fuel level sensor [EC-477](#), [EC-479](#), [EC-481](#)
Fuel line inspection [FL-3](#), [MA-16](#)
Fuel pressure check [EC-81](#)
Fuel pressure release [EC-80](#)
Fuel pump [EC-662](#)
Fuel pump and gauge [FL-4](#)
Fuel system [FL-3](#)
Fuel tank [FL-11](#)
Fuel tank temperature sensor [EC-347](#), [EC-352](#)
Fuel tank vacuum relief valve [EC-35](#)
FUELB1 - Wiring diagram [EC-326](#), [EC-338](#)
FUELB2 - Wiring diagram [EC-328](#), [EC-340](#)
Fuse [PG-15](#)
Fuse and fusible link box [PG-79](#)
Fusible link [PG-15](#)

G

Gauges [DI-4](#)
Generic scan tool (GST) [EC-135](#)
Glass [GW-12](#), [GW-14](#), [GW-76](#), [GW-80](#)
Glove box lamp [LT-203](#)
Grille - See Exterior [EI-20](#)
Ground distribution [PG-29](#)

H

H/LAMP - Wiring diagram [LT-10](#)
Harness connector [PG-71](#)
Harness layout [PG-42](#)
Hazard warning lamp [LT-106](#)
Headlamp [LT-6](#)
Headlamp removal and installation [LT-32](#), [LT-70](#)
Headlining - See Roof trim [EI-45](#)
Heated oxygen sensor 2 (bank 1) [EC-289](#), [EC-300](#),
[EC-313](#)
Heated oxygen sensor 2 (bank 2) [EC-289](#), [EC-300](#),
[EC-313](#)
Heated oxygen sensor 2 heater (bank 1) [EC-185](#)
Heated oxygen sensor 2 heater (bank 2) [EC-185](#)
Heated seat [SE-82](#)
Heater and cooling unit (Heater core) [ATC-126](#)
HFC134a (R134a) system precaution [ATC-5](#)
HFC134a (R134a) system service procedure [ATC-137](#)
HFC134a (R134a) system service tools [ATC-16](#)
HFC134a system service equipment precaution
[ATC-12](#)
High and low reverse clutch solenoid valve [AT-155](#),
[AT-157](#)
Hood [BL-13](#)
Hood lock system [BL-16](#)
Horn [WW-43](#)
HORN - Wiring diagram [WW-43](#)

ALPHABETICAL INDEX

How to erase DTC for OBD system [EC-60](#)
HSEAT - Wiring diagram [SE-84](#), [SE-87](#)

I

IATS - Wiring diagram [EC-226](#)
Idle air volume learning [EC-78](#)
Idle speed [EC-75](#)
Idle speed control (ISC) [EC-486](#), [EC-488](#)
Ignition coil [EM-44](#), [EC-668](#)
Ignition control system [EC-668](#)
Ignition timing [EC-75](#)
IGNSYS - Wiring diagram [EC-669](#)
In vehicle sensor [ATC-105](#), [ATC-118](#)
INJECT - Wiring diagram [EC-656](#)
Input clutch solenoid valve [AT-143](#), [AT-145](#)
Intake air temperature sensor [EC-225](#), [EC-244](#)
Intake door control linkage adjustment [ATC-76](#)
Intake door motor [ATC-74](#), [ATC-124](#)
Intake manifold [EM-25](#)
Intake manifold collector [EM-20](#)
Intake sensor [ATC-111](#), [ATC-120](#)
Intake valve timing control (Bank 1) [EC-168](#)
Intake valve timing control (Bank 2) [EC-168](#)
Intake valve timing control solenoid valve (Bank 1)
[EC-193](#)
Intake valve timing control solenoid valve (Bank 2)
[EC-193](#)
Integrated homelink transmitter [BL-304](#)
Interior [EI-39](#)
Interior lamp [LT-154](#)
IPDM (Intelligent power distribution module engine
room) [PG-16](#)
IVCB1 - Wiring diagram [EC-194](#)
IVCB2 - Wiring diagram [EC-196](#)
IVIS (Infiniti vehicle immobilizer system) precautions ...
[GI-4](#)

K

Knock sensor (KS) [EC-373](#)
KS - Wiring diagram [EC-374](#)

L

LAN system circuit [ATC-64](#)
Latch (lower anchors and tether for children) system ...
[SB-8](#)
Line pressure solenoid valve [AT-126](#)
Line pressure test (A/T) [AT-53](#)
Liquid gasket application [LU-2](#), [CO-2](#)
Location of electrical units [PG-67](#)
Low coast brake solenoid valve [AT-159](#), [AT-161](#)
Low tire pressure warning system [WT-9](#)
Lubricant (R134a) A/C [ATC-25](#)
Lubrication circuit (engine) [LU-4](#)
Lubrication oil A/C [ATC-159](#)
Luggage compartment trim [EI-47](#)

M

M/T oil replacement [MT-9](#)
MAFS - Wiring diagram [EC-212](#), [EC-220](#)
Magnet clutch [ATC-82](#), [ATC-141](#)
MAIN - Wiring diagram [EC-154](#), [AT-175](#)
Maintenance (engine) [MA-12](#)
Major overhaul (Final drive) [RFD-20](#), [FFD-14](#)
Major overhaul (Transfer) [TF-51](#)
Malfunction indicator lamp (MIL) [EC-62](#)
Mass air flow sensor (MAFS) [EC-209](#), [EC-218](#)
Master cylinder (brake) [BR-14](#)
Master cylinder (clutch) [CL-8](#)
Meter [DI-4](#)
METER - Wiring diagram [DI-11](#)
MIL data link connectors circuit [EC-692](#)
MIL/DL - Wiring diagram [EC-692](#)
Mirror, door [GW-109](#)
Mirror, out side [GW-109](#)
Misfire [EC-363](#)
MMSW - Wiring diagram [AT-164](#)
Mode door control linkage adjustment [ATC-70](#)
Mode door motor [ATC-68](#), [ATC-131](#)
Molding - See Exterior [EI-23](#), [EI-24](#), [EI-27](#), [EI-30](#), [EI-32](#),
[EI-36](#)
Mud guard - See Exterior [EI-28](#), [EI-29](#)
Multiplex communication [ATC-113](#)
Multiport fuel injection (MFI) system [EC-24](#)
Multiport fuel injection precautions [GI-7](#)

N

NATS - Wiring diagram [BL-284](#)
NAVI - Wiring diagram [AV-50](#)
Navigation system [AV-45](#)
NONDTC - Wiring diagram [AT-182](#)
NVH troubleshooting (BR) [BR-5](#)
NVH troubleshooting (Final drive) [RFD-7](#), [FFD-6](#)
NVH troubleshooting (Propeller shaft) [PR-3](#), [PR-12](#)
NVH troubleshooting (Transfer) [TF-8](#)
NVH troubleshooting (WT) [WT-5](#)
NVIS (Nissan vehicle immobilizer system) precautions
[GI-4](#)

O

O2H2B1 - Wiring diagram [EC-187](#)
O2H2B2 - Wiring diagram [EC-189](#)
O2S2B1 - Wiring diagram ... [EC-292](#), [EC-303](#), [EC-316](#)
O2S2B2 - Wiring diagram ... [EC-294](#), [EC-305](#), [EC-318](#)
Oil cooler (engine) [LU-14](#)
Oil filter [LU-10](#)
Oil pan (engine) [EM-31](#)
Oil pressure (engine) [LU-8](#)
Oil pump (engine) [LU-17](#)
Oil pump regulator valve (engine) [LU-17](#)
Oil seal replacement (front of final drive) [RFD-11](#),
[FFD-9](#)
Oil seal replacement (side of final drive) [RFD-16](#),

A
B
C
D
E
F
G
H
I
J
K
L
IDX

ALPHABETICAL INDEX

FFD-11

On board diagnostic system [EC-47](#)
Operating cylinder (clutch) [CL-11](#)
ORVR (On-board Refueling Vapor Recovery) ... [EC-39](#)
Out side mirror [GW-109](#)
Overheat [EC-526](#)

P

P/SCKT - Wiring diagram [WW-41](#)
Park/Neutral position switch [EC-507](#)
Park/neutral position switch (A/T) [AT-109](#)
Parking brake control [PB-6](#)
Parking drum brake [PB-8](#)
PCV (positive crankcase ventilation) [EC-44](#)
PGC/V - Wiring diagram [EC-416](#), [EC-424](#)
PHSB1 - Wiring diagram [EC-387](#)
PHSB2 - Wiring diagram [EC-389](#)
PNP/SW - Wiring diagram ... [EC-509](#), [EC-511](#), [AT-110](#)
POS - Wiring diagram [EC-380](#)
POWER - Wiring diagram [PG-4](#)
Power door mirror [BL-20](#)
Power seat [SE-79](#)
Power socket [WW-41](#)
Power steering fluid level [PS-7](#), [MA-28](#)
Power steering gear [PS-20](#)
Power steering hydraulic pressure [PS-31](#)
Power steering oil pump [PS-31](#)
Power steering pressure (PSP) sensor [EC-490](#)
Power steering system bleeding [PS-7](#)
Power supply routing [PG-3](#)
Power window [GW-16](#)
PRE/SE - Wiring diagram [EC-448](#), [EC-454](#)
Precautions for Leak detection dye [ATC-14](#)
Precautions (General) [GI-4](#)
Pressure switch 1 [AT-149](#), [AT-167](#)
Pressure switch 2 [AT-161](#)
Pressure switch 3 [AT-145](#), [AT-169](#)
Pressure switch 5 [AT-153](#), [AT-171](#)
Pressure switch 6 [AT-157](#), [AT-173](#)
Pressure test (A/T) [AT-53](#)
Propeller shaft [PR-4](#), [PR-13](#), [PR-16](#)
Propeller shaft on vehicle service [PR-4](#), [PR-13](#), [PR-16](#)
Propeller shaft vibration [PR-4](#), [PR-13](#), [PR-16](#)
PS/SEN - Wiring diagram [EC-491](#)

R

Radiator [CO-13](#)
Radio - See Audio [AV-6](#)
Rear axle [RAX-6](#)
Rear bumper [EI-17](#)
Rear combination lamp removal and installation
[LT-152](#)
Rear door [BL-195](#), [GW-80](#)
Rear parcel shelf finisher [EI-41](#)
Rear seat [SE-98](#)
Rear seat belt [SB-4](#)
Rear suspension [RSU-5](#)

Rear window [GW-14](#)
Rear window defogger [GW-86](#)
Refrigerant connection precaution [ATC-7](#)
Refrigerant discharging evacuating charging [ATC-137](#)
Refrigerant general precaution [ATC-6](#)
Refrigerant lines [ATC-137](#)
Refrigerant pressure sensor [EC-681](#), [ATC-88](#),
[ATC-152](#)
Refrigeration cycle [ATC-19](#)
Release bearing (clutch) [CL-14](#)
Removal and installation (A/T) [AT-258](#)
Removal and installation (Transfer) [TF-50](#)
Reverse lamp switch (M/T) - See Back-up lamp switch
(M/T) [MT-11](#)
Revolution sensor (A/T) [AT-115](#)
Rocker cover [EM-53](#)
Room lamp - See Interior lamp [LT-154](#)
ROOM/L - Wiring diagram [LT-163](#), [LT-172](#)
RP/SEN - Wiring diagram [EC-682](#)

S

SAE J1979 - Service \$01 - 09 [EC-47](#)
Seal - See Exterior [EI-26](#)
SEAT - Wiring diagram [SE-79](#)
Seat belt inspection [SB-5](#)
Seat belt, front [SB-3](#)
Seat belt, rear [SB-4](#)
Seat, front [SE-90](#)
Seat, rear [SE-98](#)
Self-diagnosis (Transfer) [TF-22](#)
Self-diagnostic results [EC-64](#)
SEN/PW - Wiring diagram [EC-503](#)
SHIFT - Wiring diagram [AT-223](#)
Shift lock system [AT-222](#)
Shift schedule [AT-343](#)
Shock absorber (front) [FSU-10](#), [FSU-27](#)
Shock absorber (rear) [RSU-9](#)
Side air bag (satellite) sensor [SRS-50](#)
Side curtain air bag [SRS-47](#)
Side trim [EI-39](#)
SMJ (super multiple junction) [PG-74](#)
SNOW MODE SW [EC-686](#)
SNOWSW - Wiring diagram [EC-687](#)
Spark plug [EM-45](#)
Spark plug replacement [MA-18](#)
Specification value [EC-143](#)
Speedometer [DI-4](#)
Spiral cable [SRS-44](#)
SROOF - Wiring diagram [RF-12](#), [RF-14](#)
SRS - See Supplemental Restraint System [SRS-5](#)
SRS - Wiring diagram [SRS-13](#)
SRS Trouble diagnoses [SRS-9](#)
Stabilizer bar (rear) [RSU-16](#)
Stall test (A/T) [AT-51](#)
Standardized relay [PG-76](#)
START - Wiring diagram [SC-11](#)
Starter [SC-9](#)
Starting system [SC-9](#)

ALPHABETICAL INDEX

Steering gear and linkage inspection [MA-27](#)
 Steering linkage [PS-20](#)
 Steering wheel and column [PS-9](#), [PS-14](#)
 Steering wheel play [PS-9](#)
 Steering wheel turning force [PS-9](#)
 Stop lamp [LT-131](#)
 Stop lamp switch [EC-570](#)
 STOP/L - Wiring diagram [LT-131](#)
 STSIG - Wiring diagram [AT-105](#)
 Sun roof, electric [RF-10](#)
 Sunload sensor [ATC-108](#), [ATC-119](#)
 Sunroof [RF-10](#)
 Supplemental Restraint System [SRS-5](#)
 Supplemental restraint system - Wiring diagram
[SRS-13](#)
 Suspension [MA-28](#)
 Symbols and abbreviations [GI-10](#), [GI-23](#)
 Symptom matrix chart [EC-91](#)
 System readiness test (SRT) code [EC-53](#)

T

Tachometer [DI-4](#)
 TCM circuit diagram [AT-50](#)
 TCM inspection table [AT-86](#)
 Three way catalyst [EM-27](#)
 Three way catalyst function (Bank 1) [EC-395](#)
 Three way catalyst function (Bank 2) [EC-395](#)
 Three way catalyst precautions [GI-6](#)
 Throttle body [EM-24](#)
 Throttle control motor [EC-587](#)
 Throttle control motor relay [EC-575](#)
 Throttle position sensor (TPS) [EC-234](#), [EC-356](#),
[EC-538](#), [EC-540](#), [EC-608](#)
 Throttle valve closed position learning [EC-78](#)
 Throwout bearing - See Clutch release bearing [CL-14](#)
 Tie-rod [PS-20](#)
 Timing chain [EM-68](#)
 Tire rotation [MA-26](#)
 TLID - Wiring diagram [BL-214](#), [BL-216](#)
 Top tether strap child restraint [SB-9](#)
 Torque converter installation [AT-262](#), [AT-263](#)
 Torque convertor clutch solenoid valve [AT-122](#), [AT-124](#)
 TPS1 - Wiring diagram [EC-358](#)
 TPS2 - Wiring diagram [EC-236](#)
 TPS3 - Wiring diagram [EC-610](#)
 Transfer control unit inspection table [TF-20](#)
 Transverse link (front) [FSU-12](#), [FSU-29](#)
 TRNSCV - Wiring diagram [BL-304](#)
 Trouble diagnoses [GI-11](#)
 Trunk lid [BL-205](#)
 Trunk lid opener - See Trunk lid [BL-210](#)
 Trunk lid trim [EI-47](#)
 Trunk room trim [EI-47](#)
 TURN - Wiring diagram [LT-110](#)
 Turn signal lamp [LT-106](#)
 Two trip detection logic [EC-47](#)
 Tyre pressure monitoring system - trouble diagnoses ..
[WT-11](#)

U

Upper link (front susp.) [FSU-13](#), [FSU-30](#)

V

Vacuum hose (brake system) [BR-23](#)
 Vacuum hose drawing (Engine control) [EC-107](#)
 Valve clearance [EM-120](#)
 Valve guide [EM-136](#)
 Valve lifter [EM-113](#)
 Valve seat [EM-138](#)
 Valve spring [EM-139](#)
 VDC -Wiring diagram [BRC-14](#)
 Vehicle security (theft warning) system [BL-244](#)
 Vehicle speed sensor (VSS) [EC-483](#), [EC-569](#)
 VEHSEC - Wiring diagram [BL-253](#)
 VENT/V - Wiring diagram [EC-431](#), [EC-438](#)
 VIN registration [EC-76](#)
 VSS A/T - Wiring diagram [AT-117](#)

W

W/ANT - Wiring diagram [AV-39](#)
 WARN - Wiring diagram [DI-23](#)
 Warning chime [DI-37](#)
 Warning lamps [DI-21](#)
 Washer, front [WW-4](#)
 Water pump [CO-23](#)
 Water temperature gauge [DI-4](#)
 Wheel alignment (front) [FSU-7](#), [FSU-24](#)
 Wheel alignment (rear) [RSU-5](#)
 Wheel balance [WT-7](#), [MA-24](#)
 Wheel bearing (front) [FAX-4](#)
 Wheel bearing (rear) [RAX-6](#)
 Wheel hub (front) [FAX-4](#), [FAX-12](#)
 Wheel hub (rear) [RAX-6](#)
 Wheel sensor (VDC) [BRC-59](#)
 WINDOW - Wiring diagram [GW-25](#)
 Window, door [GW-76](#), [GW-80](#)
 Window, rear [GW-14](#)
 Windshield [GW-12](#)
 WIPER - Wiring diagram [WW-11](#)
 Wiper, front [WW-4](#)
 Wiring Diagram (Cell code) list [PG-64](#)
 Wiring diagrams [GI-15](#)
 Withdrawal lever (clutch) [CL-14](#)
 WT-T/WARN - Wiring diagram [WT-13](#)

A
B
C
D
E
F
G
H
I
J
K
L

IDX