

ALPHABETICAL INDEX

SECTION **IDX**

GI

MA

EM

LC

EC

FE

AT

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

ALPHABETICAL INDEX

A

<p>AAC/V - Wiring diagramEC-365</p> <p>ABS - Wiring diagram.....BR-36</p> <p>ABS sensor rotorAX-5, 19</p> <p>Absolute pressure sensor.....EC-143</p> <p>A/C air flowHA-26</p> <p>A/C component layout.....HA-20, 163</p> <p>A/C compressor clutch removal and installationHA-127, 234</p> <p>A/C compressor descriptionHA-18, 161</p> <p>A/C compressor precaution.....HA-9, 152</p> <p>A/C compressor special service tool.....HA-16, 159</p> <p>A/C control linkage adjustment (auto A/C).....HA-62</p> <p>A/C control linkage adjustment (manual A/C).....HA-190</p> <p>A/C control operation (auto A/C)HA-24</p> <p>A/C control operation (manual A/C)HA-165</p> <p>A/C diagnostic work flow (auto A/C).....HA-35</p> <p>A/C diagnostic work flow (manual A/C).....HA-175</p> <p>A/C HFC134a (R134a) system precautionHA-4, 147</p> <p>A/C HFC134a (R134a) system service tools.....HA-13, 156</p> <p>A/C HFC134a system service equipment precautionHA-9, 153</p> <p>A/C lubricant (R134a).....HA-124, 231</p> <p>A/C lubrication oilHA-124, 231</p> <p>A/C operational checkHA-36, 176</p> <p>A/C pressure switchHA-103, 220</p> <p>A/C relay.....HA-103, 220</p> <p>A/C self-diagnoses (auto A/C)HA-38</p> <p>A/C service data specificationHA-145, 253</p> <p>A/C switch.....HA-25, 165</p> <p>A/C symptom chart (auto A/C)HA-41</p> <p>A/C symptom chart (manual A/C).....HA-178</p> <p>A/C trouble diagnoses (auto A/C).....HA-27</p> <p>A/C trouble diagnoses (manual A/C).....HA-167</p> <p>A/C, A - Wiring diagram.....HA-31</p> <p>A/C, M - Wiring diagram.....HA-171</p> <p>Accelerator control system.....FE-3</p> <p>Accelerator wire adjustment.....FE-3</p> <p>Air bagRS-13, 19</p> <p>Air bag disposalRS-24</p> <p>Air bag precautions.....GI-3</p> <p>Air bleeding for brake system.....BR-7</p> <p>Air cleaner filter replacementMA-20</p> <p>Air conditioner cut control.....EC-27</p> <p>Air flow meter - See Mass air flow sensor.....EC-134</p> <p>Air mix door control linkage adjustment.....HA-53</p> <p>Air mix. door motorHA-48</p> <p>Air spoiler, rearBT-36</p>	<p>AlternatorSC-31</p> <p>Ambient sensorHA-113</p> <p>Angular tightening applicationEM-3</p> <p>AntennaEL-152</p> <p>Anti-lock brake system - Wiring diagramBR-36</p> <p>AP/SEN - Wiring diagram.....EC-146</p> <p>ASCD (automatic speed control device)EL-217</p> <p>ASCD - Wiring diagram.....EL-221</p> <p>A/T - Wiring diagramAT-15</p> <p>A/T - Wiring diagram - AT - FTSAT-112</p> <p>A/T - Wiring diagram - AT - MAINAT-100</p> <p>A/T - Wiring diagram - AT - PNP/SWAT-105</p> <p>A/T - Wiring diagram - AT - VSS A/TAT-119</p> <p>A/T controlEC-377</p> <p>A/T diagnosis communication line.....EC-474</p> <p>A/T fluid temperature sensorAT-116</p> <p>A/T self-diagnoses.....AT-39, 48</p> <p>A/T shift lock systemAT-263</p> <p>A/T shift lock system - Wiring diagramAT-264</p> <p>A/T trouble diagnosesAT-55</p> <p>A/T Wiring diagram - AT - ENG SS.....AT-124</p> <p>A/T Wiring diagram AT - 1STAT-130</p> <p>A/T Wiring diagram AT - 2ND.....AT-136</p> <p>A/T Wiring diagram AT - 3RD.....AT-142</p> <p>A/T Wiring diagram AT - 4THAT-149</p> <p>A/T Wiring diagram AT - BA/FTSAT-200</p> <p>A/T Wiring diagram AT - LPSV.....AT-169</p> <p>A/T Wiring diagram AT - NONDTCAT-213</p> <p>A/T Wiring diagram AT - OVRCSV.....AT-194</p> <p>A/T Wiring diagram AT - SSV/AAT-175</p> <p>A/T Wiring diagram AT - SSV/BAT-181</p> <p>A/T Wiring diagram AT - TCCSIGAT-161</p> <p>A/T Wiring diagram AT - TCV.....AT-156</p> <p>A/T Wiring diagram AT - TPS.....AT-187</p> <p>A/T Wiring diagram AT - VSSMTR.....AT-207</p> <p>AT/C - Wiring diagram.....EC-379</p> <p>ATDIAG - Wiring diagram.....EC-475</p> <p>AudioEL-138</p> <p>AUDIO - Wiring diagramEL-140</p> <p>Audio and A/C control removal and installation - See Instrument panel.....BT-23</p> <p>AUT/DP - Wiring diagramEL-176</p> <p>Auto air conditioner - Wiring diagram.....HA-31</p> <p>AutolampEL-34</p> <p>Automatic drive positioner.....EL-172</p> <p>Automatic speed control system - See ASCDEL-217</p> <p>Automatic transaxle numberGI-42</p> <p>Automatic transmission fluid replacementMA-25</p> <p>Auxiliary air control (AAC) valve.....EC-362</p>
--	---

ALPHABETICAL INDEX

B

Back door	BT-17
Back door opener - See Back door	BT-17
Back door trim	BT-33
Back-up lamp	EL-57
BACK/L - Wiring diagram	EL-57
Ball joint (front).....	SU-11
Basic inspection.....	EC-88
Battery.....	SC-4
Battery/Starting/Charging	
System Tester	SC-7, 13, 24
Blower motor.....	HA-83
Blower relay	HA-83, 96, 201, 212
Blower resistor.....	HA-97, 202, 213
Body alignment.....	BT-60
Brake booster	BR-18
Brake fluid change.....	BR-6
Brake fluid level.....	MA-25
Brake fluid level and line check.....	BR-6
Brake hydraulic line	BR-8
Brake inspection.....	MA-26
Brake lines and cables inspection	MA-26
Brake master cylinder.....	BR-15
Brake pedal.....	BR-13
Bulb specifications.....	EL-336
Bumper, front.....	BT-14
Bumper, rear.....	BT-17
BYPSS/V - Wiring diagram.....	EC-461, 469

C

Camshaft inspection.....	EM-32
Camshaft position sensor (CMPS).....	EC-302
Canister-See EVAP canister.....	EC-28
CHARGE - Wiring diagram.....	SC-23
Charging system.....	SC-22
Chassis and body maintenance.....	MA-24
CHIME - Wiring diagram	EL-111
CIGAR - Wiring diagram	EL-129
Cigarette lighter.....	EL-129
Circuit breaker.....	EL-19
CKPS - Wiring diagram.....	EC-298, 423
Clock.....	EL-138
Closed loop control.....	EC-396
Closed throttle position switch.....	EC-369
CMPS - Wiring diagram.....	EC-305
Coil spring (front).....	SU-8
Collision diagnosis.....	RS-53
Combination lamp, front, removal and installation.....	BT-14
Combination lamp, rear, removal and installation.....	BT-36
Combination meter.....	EL-85
Combination meter (needle type).....	EL-85

Combination meter removal and installation - See Instrument panel.....	BT-23	
Combination switch	EL-31	GI
Component Location (auto A/C).....	HA-27	
Component Location (manual A/C).....	HA-167	MA
Compression pressure	EM-13	
Compressor clutch removal and installation	HA-127, 234	EM
Compressor description.....	HA-18, 161	
Compressor precaution	HA-9, 152	
Compressor special service tool	HA-16, 159	LC
Connecting rod	EM-50	
Connecting rod bearing clearance.....	EM-54	
Connecting rod bushing clearance	EM-55	EC
Connector inspection	GI-19	
Console box - See Instrument panel	BT-23	
CONSULT for ABS	BR-41	FE
CONSULT for engine.....	EC-69	
CONSULT-II general information	GI-37	AT
Control valve (A/T)	AT-302	
Converter housing installation	AT-363	
COOL/F - Wiring diagram.....	EC-401	AX
Coolant mixture ratio	MA-12	
Coolant replacement	MA-14	
Cooling circuit (engine)	LC-8	SU
Cooling fan control.....	EC-398	
Cooling fan control system	LC-15	
Cooling fan motor	EC-413	BR
Cooling fan relay.....	EC-412	
CORNER - Wiring diagram	EL-62	
Cornering lamp.....	EL-61	ST
Crank angle sensor built into distributor - See Camshaft position sensor.....	EC-302	RS
Crankcase emission control system - See positive crankcase ventilation.....	EC-34	
Crankshaft.....	EM-52	BT
Crankshaft position sensor (OBD).....	EC-296	
Crankshaft position sensor (OBD) cog chipping.....	EC-421	HA
Cruise control - See ASCD	EL-217	
Cylinder block.....	EM-47	
Cylinder block boring.....	EM-52	SC
Cylinder head	EM-27	
Cylinder head bolt tightening	EM-40	EL

D

Data link connector for Consult.....	EC-69	
Daytime light system	EL-48	
Daytime running light - See Daytime light system.....	EL-48	
DEF - Wiring diagram	EL-132	
Detonation sensor - See Knock sensor.....	EC-291	
Diagnosis sensor unit	RS-17	
Diagnostic trouble code (DTC) for OBD system	EC-7, 51	

ALPHABETICAL INDEX

Diagnostic trouble code (DTC)	
inspection priority chart.....	EC-102
Differential gear (FF A/T).....	AT-346
Dimensions	GI-42
Distributor.....	EC-26
Distributor ignition (DI) system	EC-26
D/LOCK - Wiring diagram	EL-246
Dome light - See Interior lamp.....	EL-77
Door glass	BT-20
Door lock	BT-20
Door mirror	BT-58
Door trim.....	BT-31
Door, front.....	BT-20
Drive belt inspection.....	MA-13
Drive shaft (front)	AX-9
Dropping resistor (A/T)	AT-172
DTC work support.....	EC-79
DTRL - Wiring diagram	EL-51

E

ECM input/output signal.....	EC-113
ECTS - Wiring diagram	EC-162, 179
Electric sun roof	EL-168
Electrical diagnoses	GI-22
Electrical ignition system	EC-26
Electrical unit.....	EL-344
Electrical units location.....	EL-313
Engine compartment	BT-61
Engine control circuit diagram	EC-20
Engine control component parts	
location	EC-18
Engine control module (ECM)	EC-382
Engine control system diagram	
and chart	EC-21
Engine coolant temperature	
sensor (ECTS)	EC-160, 177
Engine fail-safe system	EC-103
Engine oil filter replacement.....	MA-21
Engine oil precautions	GI-6
Engine oil replacement.....	MA-20
Engine outer component parts.....	EM-10
Engine removal	EM-43
Engine room - See Engine	
compartment.....	BT-61
Engine serial number.....	GI-42
EVAP canister.....	EC-29
EVAP canister purge volume	
control solenoid valve	EC-28, 326, 429
EVAP canister vent control	
valve.....	EC-333, 438, 452
EVAP control system (small leak)	
diagnosis.....	EC-315, 427
EVAP control system pressure	
sensor.....	EC-340
EVAP control system purge flow monitoring	
diagnosis	EC-444

EVAP vapor lines inspection	MA-23
Evaporative emission (EVAP) system.....	EC-28
Exhaust system.....	FE-8
Exterior	BT-36

F

Fan switch.....	HA-83
Fast idle cam (FIC) inspection and	
adjustment.....	EC-37
F/FOG - Wiring diagram.....	EL-59
FICD - Wiring diagram.....	EC-507
Final drive (FF A/T)	AT-346
Finisher, interior - See Trim.....	BT-28
Floor trim	BT-28
Fluid temperature sensor (A/T)	AT-116, 204
Fluids	MA-11
Fog lamp, front.....	EL-58
Foot lamp	EL-77
Forward clutch	AT-324
F/PUMP - Wiring diagram	EC-496
Freeze frame data	EC-51
FRO2 - Wiring diagram	EC-186, 207, 216
FRO2/H - Wiring diagram.....	EC-222
Front axle	AX-2
Front bumper.....	BT-14
Front combination lamp removal and	
installation	BT-14
Front disc brake.....	BR-21
Front door.....	BT-20
Front fog lamp.....	EL-58
Front heated oxygen sensor	
(HO2S)	EC-183, 191, 197, 204, 214
Front heated oxygen sensor (HO2S)	
heater	EC-220
Front passenger air bag	RS-22
Front seat	BT-40
Front seat belt.....	RS-4
Front suspension	SU-2
Front washer.....	EL-117
Front wiper.....	EL-117
FUEL - Wiring diagram.....	EC-267, 275
Fuel cut control (at no load & high	
engine speed)	EC-28
Fuel gauge	EL-85
Fuel injection system.....	EC-265, 273
Fuel injector	EC-485
Fuel precautions	GI-7
Fuel pressure check	EC-35
Fuel pressure regulator	EC-36
Fuel pressure release.....	EC-35
Fuel pump.....	EC-494
Fuel pump and gauge.....	FE-6
Fuel pump relay.....	EC-501
Fuel system.....	FE-4
Fuel tank temperature sensor	EC-280
Fuel tank vacuum relief valve.....	EC-29

ALPHABETICAL INDEX

Fuse.....EL-19
 Fuse block.....EL-341
 Fusible link.....EL-19

G

Garage jack and safety stand.....GI-44
 Gauges.....EL-85
 Generator.....SC-31
 Generator - See Alternator.....SC-31
 Generic scan tool (GST).....EC-82
 Glass.....BT-20
 Grease.....MA-11
 Ground distribution.....EL-20

H

Harness connector.....EL-6
 Harness connector inspection.....GI-19
 Harness layout.....EL-316
 Hazard warning lamp.....EL-63
 Headlamp.....EL-34
 Headlamp aiming control.....EL-46
 Headlamp leveler - See Headlamp
 aiming control.....EL-46
 Headlining - See Roof trim.....BT-34
 Heated seat.....EL-211
 Heater mirror.....EL-171
 Height (Dimensions).....GI-42
 HFC134a (R134a) system
 precaution.....HA-4, 147
 HFC134a (R134a) system service
 tools.....HA-13, 156
 HFC134a system service
 equipment precaution.....HA-9, 153
 High clutch.....AT-319
 H/LAMP - Wiring diagram.....EL-36
 H/MIRROR - Wiring diagram.....EL-171
 Hood.....BT-14
 Horn.....EL-128
 HORN - Wiring diagram.....EL-128
 How to erase DTC for OBD system.....EC-61
 HSEAT - Wiring diagram.....EL-212
 Hydraulic lash adjuster inspection.....EM-38

I

IACV-AAC valve.....EC-362
 IACV-FICD solenoid valve.....EC-506
 IATS - Wiring diagram.....EC-156
 Idle air control valve (IACV).....EC-362
 Idle mixture ratio.....EC-39
 Idle speed.....EC-39
 IGN/SG - Wiring diagram.....EC-416

Ignition control system.....EC-414
 Ignition timing.....EC-39
 Ignition wire inspection.....EC-290
 ILL - Wiring diagram.....EL-73
 Illumination.....EL-70
 In vehicle sensor.....HA-116
 INJECT - Wiring diagram.....EC-486
 Injector.....EC-485
 Injector removal and installation.....EC-36
 Instrument panel.....BT-23
 INT/L - Wiring diagram.....EL-80
 Intake air temperature sensor.....EC-154
 Intake door control linkage
 adjustment.....HA-62, 190
 Intake door motor.....HA-56, 187
 Integrated homelink transmitter.....EL-310
 Interior.....BT-28
 Interior lamp.....EL-77

J

Jacking points.....GI-43, 44
 Joint connector (J/C).....EL-343

K

Keyless entry system - See
 Multi-remote control system.....EL-262
 Knock sensor (KS).....EC-291
 Knuckle spindle.....AX-5
 KS - Wiring diagram.....EC-292

L

Leaf spring (rear).....SU-20
 Length (Dimensions).....GI-42
 License lamp.....EL-55
 Lifting points.....GI-45
 Line pressure solenoid valve.....AT-153, 172
 Line pressure test (A/T).....AT-65
 Liquid gasket application.....EM-3
 Location of electrical units.....EL-313
 Lock, door.....BT-20
 Low and reverse brake.....AT-329
 LSV (Load sensing valve).....BR-10
 Lubricant (R134a) A/C.....HA-124, 231
 Lubricants.....MA-11
 Lubrication circuit (engine).....LC-3
 Lubrication oil A/C.....HA-124, 231
 Lubrication-locks, hinges and
 hood latches.....MA-29

GI
 MA
 EM
 LC
 EC
 FE
 AT
 AX
 SU
 BR
 ST
 RS
 BT
 HA
 SC
 EL
 IDX

ALPHABETICAL INDEX

M

MAFS - Wiring diagram	EC-138
Magnet clutch	HA-127, 234
MAIN - Wiring diagram	EC-127
Maintenance (engine).....	MA-13
MAJOR OVERHALL.....	AT-276
Malfunction indicator lamp (MIL)	EC-63
Manual air conditioner - Wiring diagram	HA-171
Map lamp.....	EL-77
MAP/BARO switch solenoid valve.....	EC-384
Mass air flow sensor (MAFS).....	EC-134
Master cylinder (brake).....	BR-15
Meter	EL-85
METER - Wiring diagram.....	EL-89
MIL & Data link connectors circuit.....	EC-516
MIL/DL - Wiring diagram	EC-516
MIRROR - Wiring diagram.....	EL-170
Mirror defogger.....	EL-171
Mirror, door.....	BT-58
Mirror, out side	BT-58
Misfire	EC-285
Mode door control linkage adjustment	HA-71
Model variation.....	GI-40
Molding - See Exterior	BT-36
Mud guard - See Exterior.....	BT-36
MULTI - Wiring diagram	EL-266
Multi-remote control system.....	EL-262
Multiport fuel injection (MFI) system	EC-24
Multiport fuel injection precautions	GI-5

N

NVH troubleshooting (AX)	AX-3
NVH troubleshooting (BR).....	BR-5
NVH troubleshooting (EM).....	EM-8
NVH troubleshooting (ST).....	ST-5
NVH troubleshooting (SU).....	SU-3

O

Oil change (capacity).....	MA-11
Oil change (interval).....	MA-6
Oil pan (engine).....	EM-14
Oil pressure (engine)	LC-3
Oil pump (A/T).....	AT-298
Oil pump (engine)	LC-4
Oil pump regulator valve (engine)	LC-5
Oil seal replacement (engine).....	EM-25
On board diagnostic system.....	EC-50
Out side mirror	BT-58
Overdrive control switch	AT-261
Overrun clutch	AT-324

Overrun clutch solenoid valve.....	AT-197, 305
Oversize piston.....	EM-52

P

Pantograph jack	GI-43
Park/Neutral position switch	EC-477
Park/neutral position switch (A/T).....	AT-103, 261
Parking brake control.....	BR-29
Parking drum brake	BR-25
Parking lamp	EL-55
PCV (positive crankcase ventilation).....	EC-34
Personal lamp	EL-77
PGC/V - Wiring diagram.....	EC-329, 432
Pilot bushing replacement.....	EM-58
Piston assembly	EM-56
Piston pin inspection	EM-49
Piston ring inspection	EM-49
Piston to bore clearance	EM-51
PNP/SW - Wiring diagram.....	EC-479
POWER - Wiring diagram.....	EL-12
Power door lock	EL-242
Power door mirror	EL-170
Power seat	EL-209
Power steering fluid level	MA-27, ST-7
Power steering gear	ST-16
Power steering hydraulic pressure.....	ST-8
Power steering oil pressure switch.....	EC-502
Power steering oil pump	ST-21
Power steering system bleeding.....	ST-7
Power supply routing.....	EL-10
Power transistor & ignition coil.....	EC-414
Power window	EL-237
PRE/SE - Wiring diagram.....	EC-342
Precautions (General).....	GI-3
Pressure test (A/T)	AT-65
PST/SW - Wiring diagram	EC-503

R

Radiator.....	LC-12
Radio - See Audio.....	EL-138
Rear air spoiler.....	BT-36
Rear axle.....	AX-18
Rear bumper	BT-17
Rear combination lamp removal and installation.....	BT-36
Rear drum brake.....	BR-25
Rear heated oxygen sensor (HO2S).....	EC-226, 235, 244, 252
Rear heated oxygen sensor (HO2S) heater.....	EC-259
Rear seat belt	RS-6
Rear side window.....	BT-56
Rear suspension.....	SU-15

ALPHABETICAL INDEX

Rear washerEL-122
 Rear window.....BT-56
 Rear window defoggerEL-130
 Rear wiperEL-122
 Refrigerant connection precautionHA-5, 148
 Refrigerant discharging
 evacuating charging.....HA-122, 229
 Refrigerant general precaution.....HA-4, 147
 Refrigerant linesHA-134, 241
 Refrigeration cycle.....HA-18, 161
 Removal and installation (A/T)AT-273
 Reverse clutch.....AT-316
 Revolution sensor (A/T).....AT-122
 Road wheel sizeGI-42
 Roof trim.....BT-34
 Room lamp.....EL-77
 Room lamp - See Interior lamp.....EL-77
 RRO2 - Wiring
 diagram.....EC-229, 238, 246, 254
 RRO2/H - Wiring diagramEC-261

S

SAE J1930 terminology list.....GI-49
 Screw jack.....GI-43
 Seal - See Exterior.....BT-36
 SEAT - Wiring diagramEL-209
 Seat belt inspectionMA-30, RS-9
 Seat belt, frontRS-4
 Seat belt, rear.....RS-6
 Seat, front.....BT-40
 Seat, second (2nd).....BT-42
 Second (2nd) seat.....BT-42
 SHIFT - Wiring diagramAT-264
 Shift lock systemAT-263
 Shift scheduleAT-370
 Shift solenoid valve A
 (A/T).....AT-132, 144, 178, 305
 Shift solenoid valve B
 (A/T).....AT-132, 138, 305
 Shock absorber (front).....SU-8
 Shock absorber (rear).....SU-23
 Side trimBT-28
 Side window - See Rear side windowBT-56
 Smart entrance control unit.....EL-304
 SMJ (super multiple junction).....EL-339
 Spare tire size.....GI-42
 Spark plug replacementMA-21
 SpeedometerEL-85
 Spiral cable.....RS-19
 Spring (Wheelarch) height.....SU-5
 SROOF - Wiring diagram.....EL-169
 SRS - See Supplemental Restraint
 SystemRS-13
 SRS - Wiring diagram.....RS-34
 SRS Trouble diagnoses.....RS-30
 S/SIG - Wiring diagramEC-491

Stabilizer bar (front).....SU-10
 Stabilizer bar (rear).....SU-23
 Stall test (A/T).....AT-61
 Standardized relayEL-8
 START - Wiring diagram.....SC-11
 Start signal.....EC-490
 StarterSC-20
 Starting systemSC-10
 Steering gear and linkage inspection.....MA-27
 Steering linkage.....ST-16
 Steering switch.....EL-33
 Steering wheel and column.....ST-10
 Steering wheel play.....ST-6
 Steering wheel turning forceST-8
 Step lampEL-77
 Stop lampEL-56
 STOP/L - Wiring diagramEL-56
 Strut (front).....SU-8
 Sun roof, electricEL-168
 Sunload sensorHA-119
 Sunroof.....BT-49
 Supplemental Restraint SystemRS-13
 Supplemental restraint system -
 Wiring diagramRS-34
 SW/V - Wiring diagram.....EC-387
 Symbols and abbreviations.....GI-9
 Symptom matrix chart.....EC-104
 System readiness test (SRT) codeEC-52

T

TachometerEL-85
 Tail lampEL-55
 TAIL/L - Wiring diagramEL-55
 TCM circuit diagramAT-15
 TCM inspection table.....AT-96
 TFTS - Wiring diagram.....EC-282
 THEFT - Wiring diagramEL-287
 Theft warning systemEL-281
 ThermostatLC-11
 Three way catalyst.....EC-310
 Three way catalyst precautionsGI-5
 Throttle drum adjustment.....FE-3
 Throttle position sensor (TPS).....EC-166
 Throttle position sensor adjustmentEC-88
 Throttle position
 switch.....AT-191, 261, EC-369
 Tie-rodST-19
 Tie-rod ball joints.....ST-19
 Tightening torque of standard boltsGI-47
 Timing belt.....EM-17
 Tire rotationMA-25
 Tire sizeGI-42
 Torque converter installationAT-363
 Torque convertor clutch solenoid
 valve.....AT-158
 Tow truck towingGI-45

GI

MA

EM

LC

EC

FE

AT

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

ALPHABETICAL INDEX

Towing point.....	GI-46
TP/SW - Wiring diagram.....	EC-372
TPS - Wiring diagram.....	EC-171
Transaxle serial number.....	GI-42
TRANSMT - Wiring diagram.....	EL-310
Tread-FR&RR (Dimensions).....	GI-42
Trim.....	BT-28
Trouble diagnoses.....	GI-32
T/TOW - Wiring diagram.....	EL-68
TURN - Wiring diagram.....	EL-64
Turn signal lamp.....	EL-63
Two trip detection logic.....	EC-50
Two-pole lift.....	GI-45

U

Under body.....	BT-63
-----------------	-------

V

Vacuum cut valve.....	EC-28, 473
Vacuum cut valve bypass valve.....	EC-28, 459, 466
Vacuum hose (brake system).....	BR-20
Vacuum hose drawing (Engine control).....	EC-22
Valve clearance.....	EM-60
Valve guide.....	EM-33
Valve seat.....	EM-35
Valve spring.....	EM-37
Vanity mirror lamp.....	EL-77
Vehicle identification number.....	GI-41
Vehicle recovery (freeing a stuck vehicle).....	GI-46
Vehicle speed sensor (VSS).....	EC-358
VENT/V - Wiring diagram.....	EC-335, 440, 455
Viscosity number (SAE).....	MA-12
VSS - Wiring diagram.....	EC-360

W

WARN - Wiring diagram.....	EL-104
----------------------------	--------

Warning buzzer.....	EL-109
Warning chime.....	EL-109
Warning lamps.....	EL-101
Washer, front.....	EL-117
Washer, rear.....	EL-122
Water pump.....	LC-9
Water temperature gauge.....	EL-85
Weatherstrip - See Exterior.....	BT-36
Wheel alignment (front).....	SU-6
Wheel alignment (rear).....	SU-17
Wheel balance.....	MA-25
Wheel bearing (front).....	AX-4
Wheel bearing (rear).....	AX-18
Wheel hub (front).....	AX-5
Wheel hub (rear).....	AX-19
Wheel sensors (ABS).....	BR-53, 73
Wheel size.....	GI-42
Wheelarch height.....	SU-5
Wheelbase (Dimensions).....	GI-42
Wide open & closed throttle position switch.....	EC-166
Width (Dimensions).....	GI-42
WINDOW - Wiring diagram.....	EL-239
Window, door.....	BT-20
Window, rear side.....	BT-56
Window, side - See Rear side window.....	BT-56
Windshield.....	BT-55
Windshield washer - See Front washer.....	EL-117
Windshield wiper - See Front wiper.....	EL-117
WIP/R - Wiring diagram.....	EL-123, 125
WIPER - Wiring diagram.....	EL-118
Wiper and washer.....	EL-117
Wiper, front.....	EL-117
Wiper, rear.....	EL-122
Wiring Diagram (Cell code) list.....	EL-337
Wiring diagrams.....	GI-10
Wrist pin - See Piston pin inspection.....	EM-49