

**SECTION IDX
ALPHABETICAL INDEX**

A

B

C

D

E

F

G

H

I

J

K

L

IDX

ALPHABETICAL INDEX

Numerics	
2nd brake	AT-266
2nd coast brake	AT-266
2nd coast brake hub	AT-272
A	
A/C air flow	ATC-29 , MTC-29
A/C compressor clutch removal and installation ..	ATC-198 , MTC-177
A/C compressor mounting	ATC-197 , MTC-176
A/C compressor precaution	ATC-11 , MTC-11
A/C compressor special service tool	ATC-14 , MTC-14
A/C control operation (auto A/C)	ATC-27
A/C control operation (manual A/C)	MTC-27
A/C diagnostic work flow (auto A/C)	ATC-145
A/C diagnostic work flow (manual A/C)	MTC-135
A/C evaporator	ATC-208 , MTC-186
A/C HFC134a (R134a) system identification	ATC-6 , MTC-6
A/C HFC134a (R134a) system precaution	ATC-5 , MTC-5
A/C HFC134a (R134a) system service procedure ..	ATC-193 , MTC-172
A/C HFC134a (R134a) system service tools ..	ATC-14 , MTC-14
A/C HFC134a system service equipment precaution ...	ATC-11 , MTC-11
A/C lubricant (R134a)	ATC-22 , MTC-22
A/C lubrication oil	ATC-22 , MTC-22
A/C operational check	ATC-55 , ATC-57 , MTC-53 , MTC-55
A/C self-diagnoses (auto A/C)	ATC-53 , ATC-145
A/C service data specification	ATC-216 , MTC-194
A/C trouble diagnoses (auto A/C)	ATC-32
A/C trouble diagnoses (manual A/C)	MTC-32
A/C, A - Wiring diagram	ATC-43
A/C, M - Wiring diagram	MTC-41
A/T fluid checking	AT-14 , AT-55
A/T fluid replacement	AT-14
A/T fluid temperature sensor	AT-96 , AT-101
A/T IND - Wiring diagram	DI-35
A/T indicator	DI-35
A/T self-diagnoses	AT-75 , AT-81 , AT-82
A/T shift lock system	AT-226
A/T shift lock system - Wiring diagram	AT-227
A/T trouble diagnoses	AT-44
A/T Wiring diagram AT - 1ST	AT-117
A/T Wiring diagram AT - 2ND	AT-121
A/T Wiring diagram AT - 3RD	AT-126
A/T Wiring diagram AT - 4TH	AT-131
A/T Wiring diagram AT - 5TH	AT-135
A/T Wiring diagram AT - CAN	AT-85
A/T Wiring diagram AT - FTS	AT-97
A/T Wiring diagram AT - FTSP	AT-102
A/T Wiring diagram AT - LVRSW	AT-196
A/T Wiring diagram AT - PC/A	AT-142
A/T Wiring diagram AT - PC/B	AT-177
A/T Wiring diagram AT - PC/C	AT-186
A/T Wiring diagram AT - PC/CS	AT-191
A/T Wiring diagram AT - PNP/SW	AT-92
A/T Wiring diagram AT - PWR/IN	AT-200
A/T Wiring diagram AT - SFTFNC	AT-182
A/T Wiring diagram AT - SSV/A	AT-147
A/T Wiring diagram AT - SSV/B	AT-152
A/T Wiring diagram AT - SSV/C	AT-157
A/T Wiring diagram AT - SSV/CS	AT-162
A/T Wiring diagram AT - SSV/D	AT-167
A/T Wiring diagram AT - SSV/E	AT-172
A/T Wiring diagram AT - TCCSIG	AT-139
A/T Wiring diagram AT - TRSC	AT-107
A/T Wiring diagram AT - VSSATC	AT-111
ABS - Wiring diagram	BRC-16 , BRC-61
ABS (anti-lock brake system)	BRC-6 , BRC-50
Accelerator control system	ACC-3
Accelerator pedal position (APP) sensor	EC-617 , EC-624 , EC-640
Accelerator pedal released position learning	EC-80
Active damper suspension system - Wiring diagram	FSU-4
AF1B1-Wiring diagram	EC-242 , EC-252 , EC-262 , EC-273 , EC-650
AF1B2-Wiring diagram	EC-244 , EC-254 , EC-264 , EC-275 , EC-652
AF1HB1-Wiring diagram	EC-169
AF1HB2-Wiring diagram	EC-171
Aiming adjustment	LT-24
Air bag	SRS-3
Air bag precautions	GI-3 , AP-2
Air bleeding for brake systemAir bleeding for brake system	BR-11
Air cleaner and air duct	EM-16
Air cleaner filter	EM-17
Air cleaner filter replacement	MA-17
Air conditioner cut control	EC-28
Air flow meter - See Mass air flow sensor	EC-192 , EC-202
Air fuel ratio sensor 1 ..	EC-239 , EC-250 , EC-260 , EC-270 , EC-648
Air fuel ratio sensor 1 heater	EC-168
Air mix. door motor	ATC-70 , MTC-66
Ambient sensor ..	ATC-148 , ATC-162 , MTC-137 , MTC-144
Angular tightening application	EM-5
APPS1 - Wiring diagram	EC-619
APPS2 - Wiring diagram	EC-626
APPS3 - Wiring diagram	EC-642
ASC/BS - Wiring diagram	EC-578
ASC/SW - Wiring diagram	EC-570
ASCBOF - Wiring diagram	EC-662
ASCD	EC-29
ASCD brake switch	EC-576 , EC-661
ASCD clutch switch	EC-576 , EC-661
ASCD indicator lamp	EC-668
ASCD steering switch	EC-568
ASCIND - Wiring diagram	EC-669
AUDIO - Wiring diagram	AV-19

ALPHABETICAL INDEX

AUT/DP - Wiring diagram	SE-13
Auto air conditioner - Wiring diagram	ATC-43
Auto anti-dazzling inside mirror	GW-85
Autolamp	LT-38
Automatic amplifier	ATC-51 , ATC-59
Automatic drive positioner	SE-11
Automatic transaxle number	GI-47
Automatic transmission fluid replacement	MA-24
AV and NAVI control unit	AV-172
AV communication line	AV-183

B

B5 brake	AT-274
Back door	BL-155
Back door trim	EI-30
Back sonar	DI-49
BACK/L - Wiring diagram	LT-98
Back-up lamp	LT-98
Ball Joint (rear)	RSU-12
Basic inspection	EC-73
Battery	SC-4
Battery/Starting/Charging System Tester	SC-6 , SC-12 , SC-20
BCM (Body control module)	BCS-3
Block heater	EM-118
Blower motor ...	ATC-96 , ATC-166 , MTC-85 , MTC-146
Board computer	AV-110
Board-on lift	GI-41
Body alignment	BL-237
Body component parts	BL-226
Body construction	BL-236
Body exterior paint color	BL-225
Body repair	BL-225
Body sealing	BL-233
Bose speaker amp.	AV-11
Brake boosterBrake booster	BR-22
Brake fluid changeBrake fluid change	BR-11
Brake fluid level	MA-27
Brake fluid level and line checkBrake fluid level and line check	BR-11
Brake hydraulic lineBake hydraulic line	BR-12
Brake inspection	MA-27
Brake lines and cables inspection	MA-27
Brake master cylinderBrake master cylinder	BR-15
Brake pedalBrake pedal	BR-6
Brake switch	EC-576 , EC-591 , EC-661
BRK/SW - Wiring diagram	EC-592
Bulb specifications	LT-154
Bumper, front	EI-14
Bumper, rear	EI-16

C

Cabin air filter	ATC-168 , MTC-148 , MA-23
Camshaft	EM-78
Camshaft inspection	EM-80
Camshaft position sensor (PHASE)	EC-387
CAN - Wiring diagram	EC-160

CAN (Controller Area Network)	BRC-9 , BRC-54
CAN communication	EC-159 , EC-162 , AT-84 , BRC-9 , BRC-54
Canister-See EVAP canister	EC-35
CHARGE - Wiring diagram	SC-19
Charging system	SC-18
Chassis and body maintenance	MA-23
Chassis and body maintenanceSchedule 1	MA-7
Chassis and body maintenanceSchedule 2	MA-8
CHIME - Wiring diagram	DI-39
Circuit breaker	PG-17
Closed loop control	EC-25
Closed loop control (Bank 1)	EC-541
Closed loop control (Bank 2)	EC-541
Coil spring (front)	FSU-9
Coil spring (rear)	RSU-15
Collision diagnosis	SRS-56
Combination lamp, front, removal and installation ..	LT-26
Combination lamp, rear, removal and installation ..	LT-113
Combination meter	DI-5
Combination switch	LT-88
COMBSW - Wiring diagram	LT-88
COMM - Wiring diagram	AV-126 , AV-183
Component Location (auto A/C)	ATC-38
Component Location (manual A/C)	MTC-37
Compression pressure	EM-96
Compressor clutch removal and installation ..	ATC-198 , MTC-177
Compressor mounting	ATC-197 , MTC-176
Compressor precaution	ATC-11 , MTC-11
Compressor special service tool	ATC-14 , MTC-14
Condenser	ATC-206 , MTC-185
Connecting rod	EM-134
Connecting rod bearing clearance	EM-136
Connecting rod bushing clearance	EM-136
Connector inspection	GI-23
Console box - See Instrument panel	IP-10
Console box lamp	LT-141
CONSULT for VDC	BRC-24 , BRC-70
CONSULT general information	GI-36
CONSULT-II for engine	EC-119
Control units (terminal arrangement)	PG-80
Controller Area Network (CAN)	BRC-9 , BRC-54
COOL/F - Wiring diagram	EC-548
Coolant mixture ratio	MA-10
Coolant replacementVQ35DE	CO-10 , MA-13
Cooling fan	CO-17
Cooling fan control	EC-544
Cooling fan motor	EC-544
Cooling unit (A/C evaporator)	ATC-169 , ATC-208 , MTC-149 , MTC-186
CORNER - Wiring diagram	LT-80
Cornering lamp	LT-77
Corrosion protection	BL-230
Courtesy lamp	LT-118
Crankcase ventilation system - See Positive crankcase ventilation	EC-45

IDX

ALPHABETICAL INDEX

Crankshaft	EM-118	Engine control module (ECM)	EC-526
Crankshaft position sensor (POS)	EC-379	Engine control system diagram and chart	EC-23
Crash zone sensor	SRS-51	Engine coolant temperature sensor (ECTS) ..	EC-216 , EC-230
Cylinder block	EM-118	Engine mounting control (Front)	EC-673
Cylinder head	EM-96	Engine oil	LU-8
Cylinder head bolt tightening	EM-99	Engine oil filter replacementQR25DE	MA-18
D			
D/LOCK - Wiring diagram	BL-22	Engine oil precautions	GI-3 , GI-7
Data link connector for Consult	EC-121 , EC-131	Engine oil replacementQR25DE	LU-9 , MA-17
Daytime light system	LT-28	Engine removal	EM-112
Daytime running light - See Daytime light system ..	LT-28	Engine serial number	GI-47
DEF - Wiring diagram	GW-90	ETC1 - Wiring diagram	EC-603
Diagnosis sensor unit	SRS-54	ETC2 - Wiring diagram	EC-598
Diagnostic trouble code (DTC) for OBD system ..	EC-8 , EC-52	ETC3 - Wiring diagram	EC-610
Diagnostic trouble code (DTC) inspection priority chart ..	EC-92	EVAP canister	EC-35
Differential gear (FF A/T)	AT-280	EVAP canister purge volume control solenoid valve	
Dimensions	GI-47	EC-439 , EC-447	
Display and amp.assembly	ATC-51 , ATC-59 , MTC-57	EVAP canister vent control valve	EC-454 , EC-461
Dome light - See Interior lamp	LT-118	EVAP control system (small leak) diagnosis ..	EC-431 , EC-487 , EC-495
Door glass	GW-77	EVAP control system pressure sensor ...	EC-468 , EC-472 , EC-479
Door glass Fitting Adjustment(Front)	GW-79	EVAP control system purge flow monitoring diagnosis ..	
Door lock	BL-190	EC-425	
Door mirror lamp	LT-118	EVAP vapor lines inspection	MA-22
Door trim	EI-30	Evaporative emission (EVAP) system	EC-32
Door, front	GW-77	Evaporator	ATC-208 , MTC-186
Drive belt	EM-13	Exhaust manifold	EM-26
Driver air bag	SRS-42	Exhaust system	EX-3
DTC work support	EC-129	Exhaust system inspection	EX-3 , MA-23
DTRL - Wiring diagram	LT-32	Expansion valve	ATC-211 , MTC-189
Duct and grilles	ATC-187 , MTC-166		
DVD - Wiring Diagram	AV-99		
DVD Entertainment System	AV-96		
DVD Player	AV-107		
E			
ECM input/output signal	EC-109 , EC-134		
ECM power supply	EC-150 , EC-522		
ECM/PW - Wiring diagram	EC-523		
ECTS - Wiring diagram	EC-218		
EGR function	EC-397 , EC-559		
EGR temperature sensor	EC-412		
EGR volume control valve	EC-405		
EGR/TS - Wiring diagram	EC-415		
EGRC1 - Wiring diagram	EC-401 , EC-563		
EGVC/V - Wiring diagram	EC-407		
Electric sunroof	RF-10		
Electric throttle control actuator	EC-602 , EC-615		
Electrical diagnoses	GI-23		
Electrical load signal circuit	EC-671		
Electronic ignition (EI) system	EC-26		
EMNT - Wiring diagram	EC-674		
Engine control circuit diagram	EC-107		
Engine control component parts location	EC-99		
F			
F/FOG - Wiring diagram	LT-53		
F/LID - Wiring diagram	BL-201		
F/PUMP - Wiring diagram	EC-686		
Family Entertainment System (See DVD Entertainment System)	AV-96		
Flow charts	GI-26		
Fluid temperature sensor (A/T)	AT-96 , AT-101		
Fluids	MA-9		
Fluorescent leak detector	ATC-212 , MTC-190		
Fog lamp, front	LT-51		
Foot lamp	LT-118		
Freeze frame data	EC-53 , EC-122		
Front axle	FAX-5		
Front bumper	EI-14		
Front combination lamp removal and installation	LT-26		
Front disc brakeFront disc brake	BR-27		
Front door	BL-190 , GW-77		
Front Door Trim	EI-30		
Front fog lamp	LT-51		
Front passenger air bag	SRS-46		
Front seat	SE-84		
Front seat belt	SB-4		
Front seat belt pre-tensioner	SB-2 , SRS-3 , SRS-53		
Front washer	WW-4		
Front wiper	WW-4		

ALPHABETICAL INDEX

FTTS - Wiring diagram	EC-348 , EC-353	
Fuel cut control (at no load high engine speed)	EC-27	A
Fuel gauge	DI-5	B
Fuel injection system (Bank 1)	EC-322 , EC-334	C
Fuel injection system (Bank 2)	EC-322 , EC-334	D
Fuel injector and fuel tube	EM-40	E
Fuel level sensor	EC-504 , EC-506 , EC-508	F
Fuel lid opener, electric	BL-201	G
Fuel line inspection	FL-4 , MA-16	H
Fuel precautions	GI-3 , GI-5	I
Fuel pressure check	EC-82	J
Fuel pressure release	EC-82	K
Fuel pump	EC-685	L
Fuel pump and gauge	FL-5	IDX
Fuel system	FL-4	
Fuel systemCommercial Service Tools	FL-3	
Fuel systemPREPARATION	FL-3	
Fuel tank	FL-9	
Fuel tank temperature sensor	EC-346 , EC-352	
Fuel tank vacuum relief valve	EC-35	
FUELB1 - Wiring diagram	EC-324 , EC-336	
FUELB2 - Wiring diagram	EC-326 , EC-338	
Fuse	PG-17 , PG-85	
Fuse block	PG-84	
Fusible link	PG-17 , PG-85	

G

Garage jack and safety stand	GI-41
Gauges	DI-5
Generator	SC-18
Generic scan tool (GST)	EC-131
Glass	GW-12 , GW-14 , GW-77
Glove box lamp	LT-142
GPS antenna	AV-171
Grease	MA-9
Ground distribution	PG-34

H

H/LAMP - Wiring diagram	LT-9
H/PHON - Wiring diagram	AV-244
Handling precautions for plastics	BL-251
Harness connector	PG-76
Harness connector inspection	GI-23
Harness layout	PG-44
Hazard warning lamp	LT-62 , LT-77
Headlamp	LT-5
Headlamp removal and installation	LT-26
Heated oxygen sensor 2 (bank 1)	EC-283 , EC-295 , EC-310
Heated oxygen sensor 2 (bank 2)	EC-283 , EC-295 , EC-310
Heated oxygen sensor 2 heater (bank 1)	EC-176
Heated oxygen sensor 2 heater (bank 2)	EC-176
Heated seat	SE-81
Heater and cooling unit (Heater core)	ATC-169 , ATC-172 , MTC-149 , MTC-152
Heater unit (heater core)	ATC-169 , ATC-172 , MTC-

149, MTC-152	
Height (Dimensions)	GI-47
HFC134a (R134a) system identification	ATC-6 , MTC-6
HFC134a (R134a) system precaution ..	ATC-5 , MTC-5
HFC134a (R134a) system service procedure ..	ATC-193 , MTC-172
HFC134a (R134a) system service tools	ATC-14 , MTC-14
HFC134a system service equipment precaution ..	ATC-11 , MTC-11
Homelink universal transceiver	BL-222
Horn	WW-46
HORN - Wiring diagram	WW-46
How to erase DTC for OBD system	EC-63
HSEAT - Wiring diagram	SE-82
I	
IATS - Wiring diagram	EC-212
Identification plate	GI-47
Idle air volume learning	EC-80
Idle speed	EC-73
Idle speed control (ISC)	EC-512 , EC-514
Ignition coil	EM-36 , EC-691
Ignition control system	EC-691
Ignition key hole illumination	LT-118
Ignition timing	EC-73
IGNSYS - Wiring diagram	EC-692
ILL - Wiring diagram	LT-146
Illumination	LT-141
Illumination control	LT-141
In vehicle sensor	ATC-151 , ATC-163
In-cabin Microfilter	ATC-168 , MTC-148 , MA-23
INF/D - Wring diagram	AV-113
INJECT - Wiring diagram	EC-679
Injector	EC-678
Instrument panel	IP-10
INT/L - Wiring diagram	LT-125
Intake air temperature sensor	EC-211 , EC-234
Intake door control linkage adjustment	ATC-88 , ATC-93 , MTC-78 , MTC-83
Intake door motor	ATC-86 , ATC-177 , MTC-77 , MTC-157
Intake manifold	EM-24
Intake sensor	ATC-158 , ATC-165 , MTC-139 , MTC-145
Intake valve timing control (Bank 1)	EC-164
Intake valve timing control (Bank 2)	EC-164
Intake valve timing control solenoid valve (Bank 1)	EC-185
Intake valve timing control solenoid valve (Bank 2)	EC-185
Integrated homelink transmitter - See Homelink universal transceiver	BL-222
Interior	EI-33
Interior lamp	LT-118
Interior lamp on-off control	LT-118
IPDM (Intelligent power distribution module engine room)	PG-18
IVCB1 - Wiring diagram	EC-186

ALPHABETICAL INDEX

IVCB2 - Wiring diagram [EC-188](#)
 IVIS (Infiniti vehicle immobilizer system) precautions ...
[GI-3](#)

J

Jacking points [GI-41](#)
 Junction box (J/B) [PG-84](#)

K

Key illumination [LT-118](#)
 KEYLESS - Wiring diagram [BL-57](#)
 Knock sensor (KS) [EC-374](#)
 KS - Wiring diagram [EC-375](#)

L

Length (Dimensions) [GI-47](#)
 License lamp [LT-100](#)
 Lifting points [GI-41](#)
 Line pressure test (A/T) [AT-57](#)
 Liquid gasket application [EM-5, LU-2](#)
 Location of electrical units [PG-72](#)
 Low tire pressure warning system [WT-9](#)
 Low tire pressure warning system - trouble diagnoses .
[WT-13](#)
 Low tire pressure warning system - Wiring diagram
[WT-13](#)
 Lubricant (R134a) A/C [ATC-22, MTC-22](#)
 Lubricants [MA-9](#)
 Lubrication circuit (engine) [LU-6](#)
 Lubrication oil A/C [ATC-22, MTC-22](#)
 Lubrication-locks, hinges and hood latches [MA-30](#)
 Luggage room lamp [LT-118](#)

M

MAFS - Wiring diagram [EC-195, EC-204](#)
 Magnet clutch [ATC-124, ATC-198, MTC-114, MTC-177](#)
 MAIN - Wiring diagram [EC-150](#)
 Maintenance [MA-4](#)
 Malfunction indicator lamp (MIL) [EC-64](#)
 Manual transaxle number [GI-47](#)
 Map lamp [LT-118](#)
 Mass air flow sensor (MAFS) [EC-192, EC-202](#)
 Master cylinder (brake)Master cylinder (brake) . [BR-15](#)
 Meter [DI-5](#)
 METER - Wiring diagram [DI-11](#)
 MIL data link connectors circuit [EC-719](#)
 MIL/DL - Wiring diagram [EC-719](#)
 MIRROR - Wiring diagram [GW-106](#)
 Misfire [EC-365](#)
 Mode door control linkage adjustment .. [ATC-65, MTC-61](#)
 Mode door motor .. [ATC-62, ATC-180, MTC-60, MTC-160](#)
 Model variation [GI-47](#)
 Multiport fuel injection (MFI) system [EC-24](#)

Multiport fuel injection precautions [GI-3, GI-6](#)
 Multi-remote control system - See Remote keyless entry system [BL-53](#)

N

NATS - Wiring diagram [BL-206](#)
 NAVI - Wiring diagram [AV-175](#)
 Navigation system [AV-170](#)
 NVH troubleshooting (BR)NVH troubleshooting (BR) ...
[BR-5](#)
 NVH troubleshooting (EM) [EM-11](#)
 NVH troubleshooting (FAX) [FAX-4](#)
 NVH troubleshooting (RA) [RAX-4](#)
 NVH troubleshooting (RSU)NVH Troubleshooting (RSU)
[RSU-4](#)
 NVH troubleshooting (ST) [PS-5](#)
 NVH troubleshooting (WT) [WT-5](#)
 NVIS (Nissan vehicle immobilizer system) [BL-203](#)
 NVIS (Nissan vehicle immobilizer system) precautions
[GI-3](#)

O

O2H2B1 - Wiring diagram [EC-178](#)
 O2H2B2 - Wiring diagram [EC-180](#)
 O2S2B1 - Wiring diagram ... [EC-286, EC-299, EC-313](#)
 O2S2B2 - Wiring diagram ... [EC-288, EC-301, EC-315](#)
 Oil cooler (engine) [LU-16](#)
 Oil filter [LU-11](#)
 Oil pan (engine) [EM-30](#)
 Oil pressure (engine) [LU-8](#)
 Oil pump (A/T) [AT-266](#)
 Oil pump (engine) [LU-12](#)
 Oil pump regulator valve (engine) [LU-13](#)
 Oil seal replacement (engine) [EM-92](#)
 On board diagnostic system [EC-48](#)
 One-way clutch No.1 [AT-272](#)
 One-way clutch outer race sub assembly [AT-272](#)
 ORVR (On-board Refueling Vapor Recovery) .. [EC-39](#)
 Overheat [EC-544](#)

P

P/SCKT - Wiring diagram [WW-44](#)
 Park/Neutral position switch [EC-535](#)
 Park/neutral position switch (A/T) [AT-91](#)
 Parking lamp [LT-100](#)
 PCV (positive crankcase ventilation) [EC-45](#)
 Periodic maintenance [MA-6](#)
 Personal lamp [LT-118](#)
 PGC/V - Wiring diagram [EC-441, EC-449](#)
 PHSB1 - Wiring diagram [EC-389](#)
 PHSB2 - Wiring diagram [EC-391](#)
 Pilot bushing replacement - See Pilot converter ... [EM-118](#)
 Piston pin inspection [EM-134](#)
 Piston ring inspection [EM-135](#)
 Piston to bore clearance [EM-138](#)

ALPHABETICAL INDEX

PNP/SW - Wiring diagram	EC-537	S	Seat belt pre-tensioner	SRS-53	
POS - Wiring diagram	EC-381	A	Seat belt, front	SB-4	
POWER - Wiring diagram	PG-6	B	Seat belt, rear	SB-6	
Power door lock	BL-18	C	Seat, front	SE-84	
Power seat	SE-77	D	Seat, rear	SE-99	
Power steering fluid level	MA-28	E	Seat, third (3rd)	SE-99	
Power steering pressure (PSP) sensor	EC-516	F	Second (2nd) seat	SE-99	
Power supply routing	PG-4	G	SEN/PW - Wiring diagram	EC-530	
Power transistor	EC-691	H	SHIFT - Wiring diagram	AT-227	
Power window	GW-18	I	Shift lock system	AT-226	
PRE/SE - Wiring diagram	EC-474, EC-481	J	Shift schedule	AT-65	
Precautions (General)	GI-3, GI-4	K	Shift solenoid valve A (A/T)	AT-146	
Precautions in repairing high strength steel	BL-254	L	Shift solenoid valve B (A/T)	AT-151	
Pressure control solenoid valve A	AT-141	M	Shift solenoid valve C (A/T)	AT-156	
Pressure control solenoid valve B	AT-176	N	Shift solenoid valve D (A/T)	AT-166	
Pressure control solenoid valve C	AT-185	O	Shift solenoid valve E (A/T)	AT-171	
Pressure test (A/T)	AT-57	P	Shock absorber (front)	FSU-10	
PS/SEN - Wiring diagram	EC-517	Q	Shock absorber (rear)	RSU-11	
R				Side air bag (satellite) sensor	SRS-52
R/VIEW - Wiring diagram	DI-62	R	Side curtain air bag	SRS-49	
Radiator fan - See Cooling fan	CO-17	S	Side trim	EI-33	
Rear bumper	EI-16	T	Sliding door	BL-106	
Rear combination lamp removal and installation ...	LT-113	U	SMJ (super multiple junction)	PG-83	
Rear disc brakeRear disc brake	BR-34	V	SONAR - Wiring diagram	DI-51	
Rear seat	SE-99	W	Spare tire size	GI-47	
Rear seat belt	SB-6	X	Spark plug	EM-38	
Rear suspension	RSU-9	Y	Spark plug replacementQR25DE	MA-20	
Rear suspensionRear suspension	RSU-5	Z	Specification value	EC-139	
Rear view monitor	DI-59		Speedometer	DI-5	
Rear washer	WW-29		Spiral cable	SRS-44	
Rear window	GW-14		SROOF - Wiring diagram	RF-13	
Rear window defogger	GW-87		SRS - See Supplemental Restraint System	SRS-5	
Rear wiper	WW-29		SRS - Wiring diagram	SRS-12	
Refrigerant connection precaution	ATC-6, MTC-6		SRS Trouble diagnoses	SRS-8	
Refrigerant discharging evacuating charging	ATC-193, MTC-172		Stabilizer bar (front)	FSU-11	
Refrigerant general precaution	ATC-6, MTC-6		Stabilizer bar (rear)	RSU-17	
Refrigerant lines	ATC-193, ATC-201, ATC-202, MTC-172, MTC-180, MTC-181		Stall test (A/T)	AT-55	
Refrigerant pressure sensor .	EC-704, ATC-206, MTC-184		Standardized relay	PG-81	
Remote keyless entry system	BL-53		START - Wiring diagram	SC-11	
Removal and installation (A/T)	AT-239		Starting system	SC-10	
Revolution sensor (A/T)	AT-110		Steering gear and linkage inspection	MA-28	
Road wheel size	GI-47		Step lamp	LT-118	
Rocker cover	EM-43		Stop lamp	LT-94	
Room lamp	LT-118		Stop lamp switch	EC-576, EC-591, EC-661	
Room lamp - See Interior lamp	LT-118		STOP/L - Wiring diagram	LT-95	
ROOM/L - Wiring diagram	LT-125		Strut (front)	FSU-9	
RP/SEN - Wiring diagram	EC-705		Sun roof, electric	RF-10	
S				Sunload sensor	ATC-155
SAE J1930 terminology list	GI-50		Sunroof	RF-22	
SEAT - Wiring diagram	SE-77, SE-78		Supplemental Restraint System	SRS-5	
Seat belt inspection	SB-10, MA-30		Supplemental restraint system - Wiring diagram ..	SRS-12	
T				Symbols and abbreviations	GI-8, GI-10, GI-21
				Symptom matrix chart	EC-95
				System readiness test (SRT) code	EC-54
IDX-7				T/TOW - Wiring diagram	LT-116

IDX

ALPHABETICAL INDEX

Tachometer	DI-5	Vanity mirror lamp	LT-118
Tail lamp	LT-100	Variable induction air control system (VIAS) ..	EC-586 ,
TAIL/L - Wiring diagram	LT-103	EC-710	
TCM circuit diagram	AT-54	VDC (vehicle dynamics control)	BRC-50
TCM inspection table	AT-73	VDC -Wiring diagram	BRC-61
TCS - Wiring diagram	BRC-15 , BRC-16 , BRC-60 ,	Vehicle identification number	GI-47
BRC-61		Vehicle recovery (freeing a stuck vehicle)	GI-44
TCS (traction control system)	BRC-6 , BRC-50	Vehicle security (theft warning) system	BL-81
TCS component parts and connector location	BRC-13 ,	Vehicle speed sensor (VSS)	EC-510
BRC-58		VEHSEC - Wiring diagram	BL-85
TCS wheel sensors	BRC-13 , BRC-58	VENT/V - Wiring diagram	EC-456 , EC-463
Telephone	AV-241	VIAS - Wiring diagram	EC-712
Theft warning system - See Vehicle security (Theft warning) system	BL-81	VIAS/V - Wiring diagram	EC-587
Three way catalyst	EM-26	VIN registration	EC-79
Three way catalyst function (Bank 1)	EC-419	Viscosity number (SAE)	MA-10
Three way catalyst function (Bank 2)	EC-419		
Three way catalyst precautions	GI-3 , GI-5		
Throttle control motor	EC-609		
Throttle control motor relay	EC-596		
Throttle position sensor (TPS)	EC-222 , EC-357 , EC-555 , EC-557 , EC-632		
Throttle valve closed position learning	EC-80		
Tightening torque of standard bolts	GI-45		
Time lag test	AT-56		
Timing chain	EM-56		
Tire rotation	MA-27		
Tire size	GI-47		
Torque converter installation	AT-239		
Torque convertor clutch solenoid valve	AT-138		
Tow truck towing	GI-44		
Towing point	GI-44		
TPS1 - Wiring diagram	EC-359		
TPS2 - Wiring diagram	EC-224		
TPS3 - Wiring diagram	EC-634		
Traction control system - Wiring diagram	BRC-15 ,		
BRC-60			
Transaxle case cover	AT-274		
Transaxle serial number	GI-47		
Tread-FR&RR (Dimensions)	GI-47		
Trim	EI-33		
TRNSCV - Wiring diagram	BL-222		
Trouble diagnoses	GI-11		
Turbine revolution sensor	AT-106		
TURN - Wiring diagram	LT-66		
Turn signal lamp	LT-62 , LT-77		
Two trip detection logic	EC-48		
Two-pole lift	GI-41		

V

Vacuum hose (brake system)Vacuum hose (brake system)	BR-25
Vacuum hose drawing (Engine control)	EC-106
Valve clearance	EM-87
Valve guide	EM-107 , EM-108
Valve lifter	EM-78
Valve seat	EM-109
Valve spring	EM-110

W

W/ANT - Wiring diagram	AV-93
WARN - Wiring diagram	DI-27
Warning chime	DI-37
Warning lamps	DI-26
Washer, front	WW-4
Washer, rear	WW-29
Water temperature gauge	DI-5
Wheel alignment (rear)Wheel alignment (rear) ..	RSU-6
Wheel balance	WT-7 , MA-25
Wheel bearing (front)	FAX-5
Wheel bearing (rear)	RAX-5
Wheel hub (front)	FAX-5
Wheel hub (rear)	RAX-5
Wheel sensors (ABS)	BRC-7 , BRC-52
Wheel size	GI-47
Wheelarch heightWheelarch height	RSU-19
Wheelbase (Dimensions)	GI-47
Width (Dimensions)	GI-47
WINDOW - Wiring diagram	GW-30
Window, door	GW-77
Window, rear	GW-14
Windshield	GW-12
WIP/R - Wiring diagram	WW-32
WIPER - Wiring diagram	WW-9
Wiper, front	WW-4
Wiper, rear	WW-29
Wiring Diagram (Cell code) list	PG-69
Wiring diagrams	GI-8 , GI-14
WT-T/WARN - Wiring diagram	WT-13