

# ALPHABETICAL INDEX

## SECTION **IDX**

GI

MA

EM

LC

EF &  
EC

FE

AT

PD

FA

RA

BR

ST

BF

HA

EL

**IDX**

# ALPHABETICAL INDEX

## A

ABS (anti-lock brake system).....	BR-30
ABS actuator.....	BR-33
ABS circuit diagram.....	BR-41
ABS component parts and connector locations.....	BR-39
ABS control unit.....	BR-32
ABS hydraulic circuit.....	BR-30
ABS self-diagnosis.....	BR-36
ABS system components.....	BR-30
ABS trouble diagnoses.....	BR-34
ABS wheel sensors.....	BR-32
ABS wiring diagram.....	BR-31
A/C air flow.....	HA-11
A/C circuit diagram (auto A/C).....	HA-78
A/C component layout.....	HA-10
A/C compressor description.....	HA-13
A/C compressor mounting.....	HA-25
A/C compressor precaution.....	HA-5
A/C control operation (auto A/C).....	HA-8
A/C diagnostic work flow (auto A/C).....	HA-28
A/C harness layout (auto A/C).....	HA-74
A/C HFC134a (R134a) system precaution.....	HA-3
A/C HFC134a (R134a) system service procedure.....	HA-22
A/C HFC134a (R134a) system service tools.....	HA-18
A/C HFC134a system service equip- ment precaution.....	HA-20
A/C lubrication oil.....	HA-26
A/C operational check.....	HA-29
A/C performance chart.....	HA-32
A/C performance test diagnoses.....	HA-33
A/C relay.....	HA-103
A/C self-dfiagnoses (auto A/C).....	HA-40
A/C service data specification.....	HA-128
A/C symptom chart (auto A/C).....	HA-60
A/C trouble diagnoses (auto A/C).....	HA-38
A/C wiring diagram (auto A/C).....	HA-76
Acceleration cut control.....	EF & EC-26
Accelerator control system.....	FE-2
Accelerator wire adjustment.....	FE-2
Air bag.....	BF-69
Air bag caution labels.....	BF-71
Air bag precautions.....	GI-2
Air bag removal and installation.....	BF-75
Air bag scrapping.....	BF-80
Air bag system trouble diagnoses.....	BF-83
Air bleeding for brake system.....	BR-4
Air cleaner filter replacement.....	MA-12
Air conditioning system lubricants.....	MA-8
Air conditioning system refrigerant.....	MA-8
Air mix door control linkage adjustment.....	HA-104
Air mix door motor.....	HA-114

Air spoiler.....	BF-64
Alternator.....	EL-27
Ambient sensor.....	HA-109
Angular tightening application.....	EM-2
ASCD (automatic speed control device).....	EL-83
AT control unit.....	AT-75
AT fluid temperature sensor.....	AT-81
AT removal and installation.....	AT-104
AT self-diagnoses.....	AT-37
AT trouble diagnoses.....	AT-11
Audio.....	EL-76
Automatic amplifier.....	HA-111
Automatic transmission fluid.....	MA-8
Automatic transmission fluid replacement.....	MA-15
Automatic transmission number.....	GI-19
Auxiliary air control (AAC).....	EF & EC-16
Axle housing (rear).....	RA-10

## B

Back-up lamp.....	EL-40
Battery.....	EL-15
Belt inspection (drive belt).....	MA-9
Blower motor.....	HA-103
Blower relay.....	HA-103
Body alignment.....	BF-65
Brake booster.....	BR-13
Brake control valve (Proportioning Valve).....	BR-7
Brake fluid.....	MA-8
Brake fluid change.....	BR-4
Brake fluid level.....	MA-16
Brake fluid level and line check.....	BR-4
Brake hydraulic line.....	BR-6
Brake inspection.....	MA-17
Brake lines and cables inspection.....	MA-17
Brake master cylinder.....	BR-10
Brake pedal.....	BR-8

## C

Camshaft inspection.....	EM-29
Camshaft position sensor (CMPS) ....	EF & EC-12
Camshaft position sensor inspection.....	EF & EC-222
Center bearing assembly (propeller shaft).....	PD-8
Center bearing disassembly (propeller shaft).....	PD-7
Charging system.....	EL-25
Cigarette lighter.....	EL-72
Clearance lamp.....	EL-39
Clock.....	EL-72
Coil spring (front).....	FA-15

# ALPHABETICAL INDEX

Coil spring (rear) .....	RA-22
Combination lamp (rear) removal and installation .....	BF-50
Combination meter .....	EL-45
Combination switch .....	EL-31
Compression pressure .....	EM-9
Compressor description .....	HA-13
Compressor mounting .....	HA-25
Compressor precaution .....	HA-5
Connecting rod .....	EM-42
Connecting rod bearing clearance .....	EM-46
Connecting rod bushing clearance .....	EM-48
Consult for ECCS .....	EF & EC-55
CONSULT general information .....	GI-15
Control valve (AT) .....	AT-125
Converter housing installation .....	AT-104
Coolant .....	MA-8
Coolant replacement .....	MA-10
Cooling circuit (engine) .....	LC-8
Cooling fan .....	LC-12
Cooling fan control .....	EF & EC-28
Cooling fan control system .....	LC-13
Crankshaft assembly .....	EM-49
Crankshaft bearing clearance .....	EM-44
Crankshaft inspection .....	EM-43
Cylinder block .....	EM-39
Cylinder block boring .....	EM-43
Cylinder head .....	EM-26
Cylinder head bolt tightening .....	EM-36

## D

Data link connector for Consult .....	EF & EC-17
Daytime light system .....	EL-35
Differential carrier assembly .....	PD-25
Differential carrier disassembly .....	PD-12
Differential gear oil .....	MA-8
Differential gear oil replacement .....	MA-16
Dimensions .....	GI-20
Direct ignition system .....	EF & EC-31
Door adjustment (front) .....	BF-10
Door adjustment (rear) .....	BF-11
Door mirror .....	BF-62
Drive plate runout .....	EM-48
Drive shaft (rear) .....	RA-15
Dropping resistor (AT) .....	AT-81

## E

ECCS basic inspection .....	EF & EC-69
ECCS circuit diagram .....	EF & EC-11
ECCS component parts location .....	EF & EC-6
ECCS fail-safe system .....	EF & EC-29
ECCS on-board diagnostic system .....	EF & EC-48
ECCS relay inspection .....	EF & EC-228
ECCS system diagram and chart .....	EF & EC-8

ECCS trouble diagnoses .....	EF & EC-40
ECCS wiring diagram .....	Foldout page
ECM input/output signal inspection .....	EF & EC-217
EGR canister control solenoid valve inspection .....	EF & EC-224
EGR control (EGRC) - solenoid valve .....	EF & EC-17
EGR temperature sensor .....	EF & EC-18
EGR temperature sensor inspection .....	EF & EC-225
EGR valve inspection .....	EF & EC-224
Electrical units location .....	EL-125
Electronic ignition (EI) system .....	EF & EC-21
Engine control module (ECM) .....	EF & EC-12
Engine coolant temperature sensor (ECTS) .....	EF & EC-13
Engine coolant temperature sensor inspection .....	EF & EC-222
Engine oil .....	MA-8
Engine oil filter replacement .....	MA-13
Engine oil precautions .....	GI-4
Engine oil replacement .....	MA-12
Engine outer component parts .....	EM-7
Engine removal .....	EM-37
Engine serial number .....	GI-19
Evaporative emission system .....	EF & EC-232
Exhaust gas recirculation (EGR) system .....	EF & EC-25
Exhaust gas recirculation (EGR) valve .....	EF & EC-17
Exhaust system .....	FE-6
Exhaust system inspection .....	MA-19
Exterior .....	BF-47
Exterior lamp .....	EL-39

## F

Fan control amp .....	HA-125
Final drive disassembly .....	PD-12
Final drive pre-inspection .....	PD-12
Final drive removal and installation .....	PD-10
First (1st) position switch .....	AT-80
Fluid temperature sensor (AT) .....	AT-81
Fluids .....	MA-8
Forward clutch .....	AT-144
Front axle .....	FA-10
Front bumper .....	BF-5
Front disc brake .....	BR-16
Front suspension .....	FA-14
Fuel check valve inspection .....	EF & EC-233
Fuel damper .....	EF & EC-15
Fuel filler lid .....	BF-7
Fuel filter .....	EF & EC-17
Fuel filter replacement .....	MA-12
Fuel gauge .....	EL-46
Fuel injector .....	EF & EC-14

# ALPHABETICAL INDEX

Fuel line inspection..... MA-11  
 Fuel precautions..... GI-5  
 Fuel pressure check..... EF & EC-230  
 Fuel pressure regulator..... EF & EC-14  
 Fuel pressure regulator control ..... EF & EC-25  
 Fuel pressure release..... EF & EC-230  
 Fuel pump..... EF & EC-14  
 Fuel pump control ..... EF & EC-24  
 Fuel pump control unit..... EF & EC-15  
 Fuel pump control unit inspection... EF & EC-223  
 Fuel pump dropping resistor  
   inspection..... EF & EC-224  
 Fuel pump inspection..... EF & EC-223  
 Fuel pump relay inspection ..... EF & EC-228  
 Fuel system..... FE-3  
 Fuel tank vacuum relief valve  
   inspection..... EF & EC-233  
 Fuel temperature sensor ..... EF & EC-18  
 Fuel temperature sensor  
   inspection..... EF & EC-228  
 Fuse..... EL-12  
 Fusible link..... EL-12

## H

Harness connector ..... EL-4  
 Harness layout..... EL-128  
 Hazard warning lamp ..... EL-41  
 Headlamp ..... EL-34  
 Heated oxygen sensor (H02S)..... EF & EC-14  
 Heated oxygen sensor heater  
   inspection..... EF & EC-225  
 Heated oxygen sensor monitor ..... EF & EC-53  
 Heated seat..... BF-56  
 Height (Dimensions)..... GI-20  
 HFC134a (R134a) system precaution ..... HA-3  
 HFC134a (R134a) system service  
   procedure..... HA-22  
 HFC134a (R134a) system service  
   tools..... HA-18  
 HFC134a system service equipment  
   precaution ..... HA-20  
 HICAS — See Super HICAS..... ST-42  
 High clutch ..... AT-142  
 Hood adjustment ..... BF-5  
 Horn..... EL-72  
 How to follow flow chart in trouble  
   diagnoses..... GI-12  
 How to read wiring diagrams..... GI-8  
 How to use this manual..... GI-6  
 Hydraulic lash adjuster inspection ..... EM-33

## I

IACV - air regulator inspection..... EF & EC-227

IACV - FICD solenoid valve  
   inspection..... EF & EC-226  
 IACV-AAC valve inspection ..... EF & EC-226  
 Identification plate..... GI-19  
 Idle air control (IAC) system ..... EF & EC-23  
 Idle air control valve (IACV) ..... EF & EC-15  
 Idle mixture ratio inspection ..... EF & EC-33  
 Idle speed inspection..... EF & EC-31  
 Ignition coil inspection..... EF & EC-223  
 Ignition coil relay inspection ..... EF & EC-228  
 Ignition timing inspection ..... EF & EC-31  
 Illumination ..... EL-43  
 In vehicle sensor..... HA-108  
 Inhibitor switch ..... AT-79  
 Inhibitor switch inspection..... EF & EC-228  
 Injection removal and installation... EF & EC-231  
 Injector inspection..... EF & EC-227  
 Instrument panel..... BF-39  
 Intake door control linkage  
   adjustment ..... HA-105  
 Intake sensor ..... HA-110  
 Interior..... BF-41  
 Interior lamp ..... EL-44

## J

Jacking points..... GI-21

## K

Kickdown switch ..... AT-32  
 Knock sensor (KS) ..... EF & EC-16  
 Knock sensor inspection..... EF & EC-227

## L

Length (Dimensions)..... GI-20  
 Lifting points ..... GI-22  
 Line pressure solenoid valve ..... AT-81  
 Line pressure test (AT) ..... AT-84  
 Liquid gasket application ..... EM-3  
 Low and reverse brake ..... AT-148  
 Lower ball joint (rear susp.)..... RA-24  
 Lubricants ..... MA-8  
 Lubrication circuit (engine)..... LC-4  
 Lubrication oil A/C..... HA-26  
 Lubrication-locks, hinges and hood  
   latches ..... MA-20

## M

Maintenance ..... MA-1  
 Maintenance (engine) ..... MA-9

# ALPHABETICAL INDEX

Maintenance general .....	MA-3
Maintenance periodic.....	MA-5
Maintenance schedule (1).....	MA-6
Maintenance schedule (2).....	MA-7
Mass air flow sensor (MAFS).....	EF & EC-12
Mass air flow sensor inspection .....	EF & EC-222
Master cylinder (brake) .....	BR-10
Max cold door motor.....	HA-106
Max cold relay.....	HA-103
Meter and gauges.....	EL-45
Mode door control linkage	
adjustment .....	HA-104
Model variation .....	GI-17
Molding .....	BF-47
Multi link/lower ball joint (rear) .....	RA-24
Multi purpose grease.....	MA-8
Multi-remote control system.....	BF-28
Multiport fuel injection (MFI)	
system.....	EF & EC-19
Multiport fuel injection precautions .....	GI-4
Multiport fuel injection system	
inspection.....	EF & EC-230

## O

Oil pan (engine).....	EM-10
Oil pressure (engine) .....	LC-5
Oil pressure relief valve (engine) .....	LC-7
Oil pump (AT) .....	AT-121
Oil pump (engine).....	LC-5
Oil pump regulator valve (engine) .....	LC-7
Oil seal replacement (engine) .....	EM-22
Oil seal replacement	
(front of final drive) .....	PD-9
Oil seal replacement	
(side of final drive) .....	PD-9
Overrun clutch .....	AT-144
Overrun clutch solenoid valve .....	AT-81
Oversize piston .....	EM-43

## P

Parking brake control .....	BR-28
Parking drum brake .....	BR-24
PCV (positive crankcase ventilation)	
inspection.....	EF & EC-234
Pinion bearing preload diff. ....	PD-19
Pinion gear height diff.....	PD-19
Piston assembly.....	EM-48
Piston pin inspection .....	EM-40
Piston ring inspection.....	EM-41
Piston to bore clearance .....	EM-42
Power antenna .....	EL-77
Power door lock.....	BF-22
Power seat.....	BF-52

Power steering (twin orifice) trouble	
diagnoses .....	ST-31
Power steering fluid.....	MA-8
Power steering fluid level .....	MA-18
Power steering fluid level .....	ST-6
Power steering gear.....	ST-14
Power steering hydraulic pressure .....	ST-8
Power steering oil pressure switch ..	EF & EC-16
Power steering oil pressure switch	
inspection .....	EF & EC-228
Power steering oil pump	
(Super HICAS).....	ST-52
Power steering oil pump.....	ST-26
Power steering system (twin orifice).....	ST-29
Power steering system bleeding .....	ST-7
Power supply routing .....	EL-9
Power transistor and ignition coil.....	EF & EC-15
Power transistor inspection.....	EF & EC-223
Power window .....	BF-12
Precautions (General).....	GI-2
Pressure regulator vacuum relief	
(PRVR) control solenoid valve.....	EF & EC-17
Pressure test (AT) .....	AT-84
Propeller shaft.....	PD-5
Propeller shaft on vehicle service .....	PD-5
Propeller shaft vibration .....	PD-5

## R

Rack retainer adjustment.....	ST-6
Radiator.....	LC-13
Rear axle.....	RA-8
Rear axle housing ball joint	
(super HICAS).....	RA-29
Rear bumper.....	BF-7
Rear disc brake.....	BR-20
Rear suspension .....	RA-20
Rear window defogger .....	EL-73
Refrigerant connection precaution.....	HA-4
Refrigerant general precaution.....	HA-3
Refrigerant lines .....	HA-24
Refrigeration cycle.....	HA-12
Reverse clutch .....	AT-138
Revolution sensor (AT) .....	AT-80
Road wheel size.....	GI-20

## S

SAE J1930 terminology list.....	GI-25
Seat (front) .....	BF-52
Seat (rear).....	BF-58
Seat belt inspection.....	MA-20
Seat belt pre-tensioner-removal and	
installation.....	BF-75
Self-diagnostic results .....	EF & EC-48
Self-diagnostic results .....	EF & EC-51

## ALPHABETICAL INDEX

Shift lock system .....	AT-89
Shift schedule .....	AT-31
Shift solenoid valve (AT).....	AT-81
Shock absorber (rear).....	RA-22
Side bearing preload diff.....	PD-18
Side flange installation diff.....	PD-10
Side guard molding.....	BF-50
SMJ (super multiple junction) .....	Foldout page
Soft/Hard closed throttle position (CTP) switch.....	EF & EC-13
Spark plug replacement.....	MA-14
Speedometer.....	EL-46
Spring (Wheelarch) height.....	FA-5
Stabilizer bar (front).....	FA-20
Stabilizer bar (rear).....	RA-27
Stall test (AT).....	AT-82
Standardized relay .....	EL-5
Starter.....	EL-24
Starting system .....	EL-23
Steering angle sensor.....	ST-56
Steering gear and linkage inspection.....	MA-18
Steering linkage.....	ST-14
Steering switch .....	EL-33
Steering wheel and column .....	ST-10
Steering wheel play .....	ST-5
Steering wheel turning force .....	ST-8
Stop lamp .....	EL-39
Strut (front).....	FA-15
Sun roof.....	BF-59
Sunload sensor .....	HA-110
Super HICAS linkage inspection .....	MA-19
Super HICAS solenoid.....	ST-56
Super HICAS system .....	ST-42
Super HICAS system bleeding.....	ST-48
Super HICAS system trouble diagnoses.....	ST-58
Supplemental restraint system.....	BF-69

### T

Tachometer .....	EL-46
Tail lamp .....	EL-39
Telephone .....	EL-81
Tension rod (front).....	FA-20
Theft warning system .....	EL-105
Thermostat.....	LC-11
Three way catalyst precautions .....	GI-4
Throttle bodies.....	EM-24
Throttle position sensor (TPS).....	EF & EC-13
Throttle position sensor inspection and adjustment.....	EF & EC-225
Tie-rod.....	ST-18
Tie-rod ball joints .....	ST-18
Tightening torque of standard bolts.....	GI-24
Time control system .....	EL-53
Timing belt.....	EM-14

Tire rotation .....	MA-18
Tire size.....	GI-20
Tooth contact diff.....	PD-24
Torque converter clutch solenoid valve .....	AT-81
Torque converter installation.....	AT-104
Tow truck towing .....	GI-22
Towing points .....	GI-23
Transverse link (front).....	FA-21
Tread-FR0R (Dimensions).....	GI-20
Trim - door.....	BF-45
Trim - luggage compartment .....	BF-46
Trim - roof.....	BF-43
Trim - side and floor .....	BF-41
Triple pressure switch .....	HA-103
Trunk lid.....	BF-7
Trunk room lamp .....	EL-44
Turbine revolution sensor.....	AT-80
Turn signal lamp.....	EL-41

### V

Vacuum hose (brake system).....	BR-15
Vacuum hose drawing (ECCS) .....	EF & EC-10
Valve guide inspection .....	EM-30
Valve seat inspection .....	EM-32
Valve spring inspection.....	EM-33
Valve timing control (VTC) .....	EF & EC-26
Valve timing control solenoid valve..	EF & EC-18
Vapor lines inspection .....	MA-14
Vehicle identification number .....	GI-18
Vehicle speed sensor (VSS).....	EF & EC-16
Vehicle speed sensor inspection ....	EF & EC-224
Viscosity number (SAE) .....	MA-8
VTC solenoid valve inspection .....	EF & EC-227

### W

Warning lamps.....	EL-50
Water cock control rod adjustment .....	HA-105
Water pump .....	LC-9
Water temperature gauge .....	EL-46
Weatherstrip.....	BF-47
Wheel alignment (front) .....	FA-7
Wheel alignment (rear super HICAS) .....	RA-28
Wheel alignment (rear).....	RA-6
Wheel balance .....	MA-17
Wheel bearing (front axle) .....	FA-6
Wheel bearing (rear) .....	RA-6
Wheel hub (rear) .....	RA-10
Wheelbase (Dimensions) .....	GI-20
Width (Dimensions) .....	GI-20
Windshield and windows .....	BF-61
Wiper and washer.....	EL-69