

# ALPHABETICAL INDEX

## SECTION **IDX**

GI

MA

EM

LC

EC

FE

AT

PD

FA

RA

BR

ST

RS

BT

HA

EL

**IDX**

# ALPHABETICAL INDEX

## A

ABS (anti-lock brake system).....	BR-31
ABS actuator .....	BR-39
ABS circuit diagram.....	BR-48
ABS component parts and connector locations.....	BR-45
ABS control unit.....	BR-38
ABS hydraulic circuit.....	BR-31
ABS self-diagnosis.....	BR-42
ABS system components.....	BR-31
ABS trouble diagnoses.....	BR-40
ABS wheel sensors.....	BR-38
ABS wiring diagram.....	BR-33
A/C air flow .....	HA-15
A/C circuit diagram.....	HA-67
A/C component layout .....	HA-14
A/C compressor clutch removal and installation.....	HA-133
A/C compressor description.....	HA-10
A/C compressor mounting.....	HA-132
A/C compressor precaution .....	HA-4
A/C compressor special service tool .....	HA-4
A/C control linkage adjustment.....	HA-102
A/C control operation .....	HA-17
A/C diagnostic work flow.....	HA-22
A/C harness layout .....	HA-65
A/C HFC134a (R134a) system precaution.....	HA-2
A/C HFC134a (R134a) system service procedure.....	HA-125
A/C HFC134a (R134a) system service tools .....	HA-5
A/C HFC134a system service equip- ment precaution .....	HA-7
A/C lubricant (R134a).....	HA-127
A/C operational check .....	HA-23
A/C performance chart.....	HA-60
A/C performance test diagnoses .....	HA-58
A/C relay.....	HA-101
A/C self-diagnoses.....	HA-30
A/C service data specification.....	HA-137
A/C symptom chart .....	HA-26
A/C trouble diagnoses .....	HA-19
A/C wiring diagram.....	HA-68
Accelerator control system.....	FE-2
Accelerator wire adjustment.....	FE-2
Air bag.....	RS-5
Air bag disposal .....	RS-13
Air bag module .....	RS-9
Air bag precautions .....	GI-2
Air bag removal and installation.....	RS-8
Air bleeding for brake system .....	BR-5
Air cleaner filter replacement .....	MA-13
Air conditioner cut control .....	EC-18

Air flow meter - See Mass air flow sensor .....	EC-99
Air mix door control linkage adjustment .....	HA-102
Air mix. door motor.....	HA-111
Air spoiler, rear - See Rear air spoiler .....	BT-31
Ambient sensor .....	HA-106
Angular tightening application.....	EM-2
Antenna - See Power antenna .....	EL-125
Anti-freeze coolant.....	MA-8
Anti-freeze coolant mixture ratio.....	MA-9
ASCD (automatic speed control device) .....	EL-151
A/T control DTC:P0600 .....	EC-225
AT control unit .....	AT-104
AT diagnosis communication line .....	EC-266
AT fluid temperature sensor.....	AT-111
AT removal and installation.....	AT-133
AT self-diagnoses.....	AT-44
AT shift lock system .....	AT-120
AT trouble diagnoses.....	AT-12
Audio .....	EL-120
Audio and A/C control removal and installation - See Instrument panel .....	BT-11
Automatic amplifier .....	HA-108
Automatic transmission fluid .....	MA-8
Automatic transmission fluid replacement .....	MA-16
Automatic transmission number .....	GI-36
Auxiliary air control (AAC).....	EC-221
Axle housing (rear).....	RA-10

## B

Back window.....	BT-29
Back-up lamp.....	EL-72
Belt inspection (drive belt).....	MA-10
Blower motor.....	HA-102
Blower relay.....	HA-101
Board-on lift.....	GI-38
Body alignment.....	BT-32
Boost pressure control.....	EC-190
Brake booster.....	BR-14
Brake control valve (Proportioning valve) .....	BR-8
Brake fluid .....	MA-8
Brake fluid change.....	BR-5
Brake fluid level .....	MA-17
Brake fluid level and line check .....	BR-5
Brake hydraulic line .....	BR-7
Brake inspection.....	MA-18
Brake lines and cables inspection .....	MA-17
Brake master cylinder .....	BR-11
Brake pedal.....	BR-9
Bumper, front - See Front bumper.....	BT-5

# ALPHABETICAL INDEX

Bumper, rear - See Rear bumper ..... BT-7

## C

Camshaft inspection ..... EM-28  
 Camshaft position sensor inspection ..... EC-194  
 Center bearing assembly (propeller shaft) ..... PD-8  
 Center bearing disassembly (propeller shaft) ..... PD-7  
 Charging system ..... EL-38  
 Chassis and body maintenance ..... MA-16  
 Cigarette lighter ..... EL-114  
 Clearance lamp ..... EL-67  
 Clock ..... EL-114  
 Closed loop control ..... EC-123  
 Coil spring (front) ..... FA-15  
 Coil spring (rear) ..... RA-23  
 Combination lamp, front, removal and installation ..... BT-5  
 Combination lamp, rear, removal and installation ..... BT-19  
 Combination meter removal and installation - See Instrument panel ..... BT-11  
 Combination switch ..... EL-46  
 Compression pressure ..... EM-8  
 Compressor clutch removal and installation ..... HA-133  
 Compressor description ..... HA-10  
 Compressor mounting ..... HA-132  
 Compressor precaution ..... HA-4  
 Compressor special service tool ..... HA-4  
 Connecting rod ..... EM-43  
 Connecting rod bearing clearance ..... EM-47  
 Connecting rod busing clearance ..... EM-49  
 Console box - See Instrument panel ..... BT-11  
 CONSULT for ECCS ..... EC-45  
 CONSULT general information ..... GI-33  
 Control valve (AT) ..... AT-154  
 Converter housing installation ..... AT-134  
 Coolant replacement ..... MA-11  
 Cooling circuit (engine) ..... LC-8  
 Cooling fan ..... LC-12  
 Cooling fan control ..... EC-269  
 Cooling fan relay ..... HA-101  
 Crank angle sensor built into distributor - See Camshaft position sensor ..... EC-190  
 Crankshaft assembly ..... EM-50  
 Crankshaft bearing clearance ..... EM-45  
 Crankshaft inspection ..... EM-44  
 Crankshaft position sensor (OBD) DTC0802, P0335 ..... EC-186  
 Crankshaft position sensor (OBD) DTC0802, P0335 inspection ..... EC-189  
 Cylinder block ..... EM-40  
 Cylinder block boring ..... EM-44

Cylinder head ..... EM-25  
 Cylinder head bolt tightening ..... EM-35

## D

Daytime light system ..... EL-49  
 Daytime running light - See Daytime light system ..... EL-49  
 Detonation sensor - See Knock sensor ..... EC-183  
 Diagnostic trouble code (DTC) chart ..... EC-64  
 Diagnostic trouble code (DTC) for ECCS OBD system ..... EC-33  
 Differential carrier assembly (except FF) ..... PD-25  
 Differential carrier disassembly (except FF) ..... PD-12  
 Differential gear oil ..... MA-8  
 Differential gear oil replacement ..... MA-17  
 Dimensions ..... GI-37  
 Direct ignition system ..... EC-24  
 Distributor ignition (DI) system ..... EC-17  
 Dome light - See Interior lamp ..... EL-86  
 Door glass ..... BT-9  
 Door lock ..... BT-9  
 Door mirror ..... BT-30  
 Door trim ..... BT-15  
 Door, front - See Front door ..... BT-9  
 Door, rear - See Rear door ..... BT-10  
 Drive plate runout ..... EM-49  
 Drive shaft (rear) ..... RA-15  
 Dropping resistor (AT) ..... AT-112

## E

ECCS basic inspection ..... EC-62  
 ECCS circuit diagram ..... EC-8  
 ECCS component parts location ..... EC-10  
 ECCS on board diagnostic system ..... EC-33  
 ECCS system diagram and chart ..... EC-9  
 ECCS trouble diagnoses ..... EC-58  
 ECM input/output signal inspection ..... EC-87  
 EGR control (EGRC) - solenoid valve ..... EC-252  
 EGR temperature sensor ..... EC-256  
 EGR temperature sensor inspection ..... EC-260  
 EGR valve & EVAP canister purge control solenoid valve inspection ..... EC-255  
 EGR valve inspection ..... EC-203  
 Electric sun roof ..... EL-135  
 Electrical load signal circuit ..... EC-297  
 Electronic ignition system ..... EC-17  
 Engine compartment ..... BT-32  
 Engine control module (ECM) ..... EC-228  
 Engine coolant temperature sensor (ECTS) ..... EC-109

GI

MA

EM

LC

EC

FE

AT

PD

FA

RA

BR

ST

RS

BT

HA

EL

**IDX**

## ALPHABETICAL INDEX

Engine coolant temperature sensor (ECTS) P0115, DTC0103.....	EC-109
Engine coolant temperature sensor (ECTS) P0115, DTC0103 inspection.....	EC-112
Engine coolant temperature sensor (ECTS) P0125, DTC0908.....	EC-118
Engine coolant temperature sensor (ECTS) P0125, DTC0908 inspection.....	EC-122
Engine oil.....	MA-8
Engine oil filter replacement.....	MA-14
Engine oil precautions.....	GI-4
Engine oil replacement.....	MA-13
Engine outer component parts.....	EM-6
Engine removal.....	EM-37
Engine room - See Engine compartment.....	BT-32
Engine serial number.....	GI-36
EVAP canister inspection.....	EC-19
EVAP vapor lines inspection.....	MA-15
Evaporative emission system - for Non-California models.....	EC-19
Exhaust gas recirculation (EGR) system.....	EC-195
Exhaust system.....	FE-6
Exhaust system inspection.....	MA-19
Exterior.....	BT-19
Exterior lamp.....	EL-67

### F

Fan control amp.....	HA-122
Final drive disassembly (except FF).....	PD-12
Final drive pre-inspection (except FF).....	PD-12
Final drive removal and installation (except FF).....	PD-10
Finisher, interior - See Trim.....	BT-13
Finisher, rear panel - See Rear panel finisher.....	BT-18
Finisher, trunk lid - See Trunk lid finisher.....	BT-18
First (1st) position switch.....	AT-110
Floor trim.....	BT-13
Fluid temperature sensor (AT).....	AT-111
Fluids.....	MA-8
Forward clutch.....	AT-173
Freeze frame data.....	EC-35
Front axle.....	FA-10
Front bumper.....	BT-5
Front combination lamp removal and installation.....	BT-5
Front disc brake.....	BR-17
Front door.....	BT-9
Front heated oxygen sensor (HO2S) (Left bank).....	EC-142
Front heated oxygen sensor (HO2S) (Right bank).....	EC-125
Front heated oxygen sensor (HO2S).....	EC-125

Front heated oxygen sensor (HO2S) monitor.....	EC-36
Front heated oxygen sensor heater (Left bank).....	EC-147, 155
Front heated oxygen sensor heater (Right bank).....	EC-130, 138
Front passenger air bag.....	RS-10
Front seat.....	BT-24
Front seat belt.....	RS-3
Front suspension.....	FA-14
Front washer.....	EL-108
Front wiper.....	EL-108
Fuel check valve inspection.....	EC-20
Fuel cut control (at no load & high engine speed).....	EC-18
Fuel filler lid.....	BT-7
Fuel filter replacement.....	MA-12
Fuel gauge.....	EL-96
Fuel injection system (Left bank).....	EC-169, 174
Fuel injection system (Right bank) ...	EC-159, 164
Fuel lid opener, electric.....	EL-149
Fuel line inspection.....	MA-12
Fuel precautions.....	GI-6
Fuel pressure check.....	EC-22
Fuel pressure release.....	EC-22
Fuel pump control.....	EC-283
Fuel pump control module.....	EC-233
Fuel pump inspection.....	EC-286
Fuel pump relay inspection.....	EC-286
Fuel system.....	FE-3
Fuel tank vacuum relief valve inspection.....	EC-20
Fuse.....	EL-21
Fusible link.....	EL-21

### G

Garage jack and safety stand.....	GI-39
Gauges.....	EL-94
Generic scan tool (GST).....	EC-56
Glass.....	BT-9
Grille - See Exterior.....	BT-19
Ground distribution.....	EL-22

### H

Harness connector.....	EL-5
Harness layout.....	EL-276
Hazard warning lamp.....	EL-73
Headlamp.....	EL-49
Headlamp leveler - See Headlamp aiming control.....	EL-108
Headlining - See Roof trim.....	BT-16
Heated oxygen sensor (HO2S) (Front) (Left bank).....	EC-142

# ALPHABETICAL INDEX

Heated oxygen sensor (HO2S) (Front)	
(Right bank).....	EC-125
Heated oxygen sensor (HO2S) (front) .....	EC-125
Heated oxygen sensor (HO2S) heater	
(rear).....	EC-137, 154
Heated oxygen sensor (rear).....	EC-133, 150
Heated oxygen sensor heater	
(Front)(Left bank) .....	EC-147, 155
Heated oxygen sensor heater	
(Front)(Right bank).....	EC-130, 138
Heated seat .....	BT-26, EL-141
Height (Dimensions).....	GI-37
HFC134a (R134a) system precaution .....	HA-2
HFC134a (R134a) system service	
procedure.....	HA-125
HFC134a (R134a) system service	
tools .....	HA-5
HFC134a system service equipment	
precaution.....	HA-7
High clutch .....	AT-171
Hood.....	BT-5
Horn.....	EL-114
How to erase DTC for ECCS OBD	
system .....	EC-33
How to follow flow chart in trouble	
diagnoses.....	GI-30
How to perform efficient diagnosis	
for an electrical incident.....	GI-19
How to read wiring diagrams.....	GI-9
How to use this manual.....	GI-7
Hydraulic lash adjuster inspection .....	EM-32

I

IACV - air regulator inspection.....	EC-289
IACV-AAC valve inspection.....	EC-224
IACV-FICD solenoid valve.....	EC-293
Identification plate.....	GI-36
Idle air control valve (IACV) - air	
regulator.....	EC-287
Idle air control valve (IACV) .....	EC-221
Idle mixture ratio inspection.....	EC-26
Idle speed inspection.....	EC-26
Ignition timing inspection.....	EC-26
Illumination .....	EL-79
In vehicle sensor.....	HA-105
Inhibitor switch .....	AT-109
Injector inspection.....	EC-280
Injector removal and installation.....	EC-23
Instrument panel.....	BT-11
Intake air temperature sensor.....	EC-104
Intake air temperature sensor	
inspection.....	EC-108
Intake door control linkage	
adjustment .....	HA-103
Intake door motor.....	HA-119
Intake sensor.....	HA-107

Interior.....	BT-13
Interior lamp .....	EL-86

J

Joint connector (J/C) .....	EL-296
-----------------------------	--------

K

Keyless entry system - See Multi-	
remote control ststem.....	EL-204
Kickdown switch .....	AT-112
Knock sensor (KS).....	EC-183
Knock sensor (KS) inspection .....	EC-185

L

Length (Dimensions) .....	GI-37
License lamp.....	EL-67
Line pressure solenoid valve .....	AT-111
Line pressure test (AT) .....	AT-115
Liquid gasket application .....	EM-2
Location of electrical units.....	EL-273
Lock, door - See Door lock.....	BT-9
Low and reverse brake .....	AT-177
Lower ball joint (rear susp.).....	RA-25
Lubricant (R134a) A/C.....	HA-127
Lubricants .....	MA-8
Lubrication circuit (engine).....	LC-4
Lubrication-locks, hinges and hood	
latches .....	MA-20

M

Magnet clutch.....	HA-133
Maintenance (engine).....	MA-10
Maintenance .....	MA-1
Maintenance general .....	MA-3
Maintenance periodic.....	MA-5
Maintenance schedule (1).....	MA-6
Maintenance schedule (2).....	MA-7
Malfunction indicator lamp (MIL) .....	EC-35
Mass air flow sensor (MAFS) .....	EC-99
Mass air flow sensor inspection .....	EC-103
Master cylinder (brake) .....	BR-11
Max cold door control linkage	
adjustment .....	HA-103
Max cold door motor.....	HA-113
Max cold relay.....	HA-101
Meter and gauges.....	EL-94
MIL & Data link connectors circuit.....	EC-299
Mirror, door - See Door mirror.....	BT-30

GI

MA

EM

LC

EC

FE

AT

PD

FA

RA

BR

ST

RS

BT

HA

EL

IDX

## ALPHABETICAL INDEX

Mirror, out side - See Out side  
 mirror ..... BT-30  
 Misfire ..... EC-179  
 Mode door control linkage  
 adjustment ..... HA-102  
 Mode door motor ..... HA-116  
 Model variation ..... GI-34  
 Molding - See Exterior ..... BT-19  
 Mud guard - See Exterior ..... BT-19  
 Multi link/lower ball joint (rear) ..... RA-25  
 Multi purpose grease ..... MA-8  
 Multi-remote control system ..... EL-204  
 Multiport fuel injection (MFI) system ..... EC-14  
 Multiport fuel injection precautions ..... GI-4

### O

Oil pan (engine) ..... EM-9  
 Oil pressure (engine) ..... LC-5  
 Oil pressure relief valve (engine) ..... LC-7  
 Oil pump (AT) ..... AT-150  
 Oil pump (engine) ..... LC-5  
 Oil pump regulator valve (engine) ..... LC-7  
 Oil seal replacement (engine) ..... EM-21  
 Oil seal replacement (front of final  
 drive) ..... PD-9  
 Oil seal replacement (side of final  
 drive) ..... PD-9  
 Out side mirror ..... BT-30  
 Overrun clutch ..... AT-173  
 Overrun clutch solenoid valve ..... AT-111  
 Oversize piston ..... EM-44

### P

Park/Neutral position switch ..... EC-230  
 Parking brake control ..... BR-29  
 Parking drum brake ..... BR-25  
 PCV (positive crankcase ventilation)  
 inspection ..... EC-21  
 Pinion bearing preload diff. (except  
 FF) ..... PD-19  
 Pinion gear height diff. (except FF) ..... PD-19  
 Piston assembly ..... EM-49  
 Piston pin inspection ..... EM-41  
 Piston ring inspection ..... EM-42  
 Piston to bore clearance ..... EM-43  
 Power antenna ..... EL-125  
 Power door lock ..... EL-192  
 Power door mirror ..... EL-142  
 Power seat ..... EL-137  
 Power steering (twin orifice) trouble  
 diagnoses ..... ST-33  
 Power steering fluid ..... MA-8  
 Power steering fluid level ..... MA-19, ST-6  
 Power steering gear ..... ST-14

Power steering hydraulic pressure ..... ST-8  
 Power steering oil pressure switch ..... EC-290  
 Power steering oil pressure switch  
 inspection ..... EC-292  
 Power steering oil pump ..... ST-26  
 Power steering system (twin orifice) ..... ST-29  
 Power steering system bleeding ..... ST-7  
 Power supply routing ..... EL-9  
 Power transistor & ignition coil ..... EC-239  
 Power window ..... EL-177  
 Precautions (General) ..... GI-2  
 Pressure test (AT) ..... AT-115  
 Propeller shaft ..... PD-5  
 Propeller shaft on vehicle service ..... PD-5  
 Propeller shaft vibration ..... PD-5

### R

Rack retainer adjustment ..... ST-6  
 Radiator ..... LC-14  
 Radiator fan - See Cooling fan ..... LC-12  
 Radio - See Audio ..... EL-120  
 Rear air spoiler ..... BT-31  
 Rear axle ..... RA-8  
 Rear bumper ..... BT-7  
 Rear combination lamp removal and  
 installation ..... BT-19  
 Rear disc brake ..... BR-21  
 Rear door ..... BT-10  
 Rear heated oxygen sensor  
 (HO2S) ..... EC-133, 150  
 Rear heated oxygen sensor (HO2S)  
 heater ..... EC-137, 154  
 Rear panel finisher ..... BT-18  
 Rear seat ..... BT-27  
 Rear seat belt ..... RS-4  
 Rear suspension ..... RA-21  
 Rear window ..... BT-29  
 Rear window defogger ..... EL-116  
 Refrigerant connection precaution ..... HA-3  
 Refrigerant general precaution ..... HA-2  
 Refrigerant lines ..... HA-129  
 Refrigeration cycle ..... HA-9  
 Reverse clutch ..... AT-167  
 Revolution sensor (AT) ..... AT-110  
 Road wheel size ..... GI-37  
 Roof trim ..... BT-16  
 Room lamp - See Interior lamp ..... EL-86

### S

SAE J1930 terminology list ..... GI-43  
 Seal - See Exterior ..... BT-19  
 Seat belt inspection ..... MA-20  
 Seat belt pre-tensioner ..... RS-5  
 Seat belt pre-tensioner disposal ..... RS-13

# ALPHABETICAL INDEX

Seat belt pretensioner removal and installation .....	RS-8
Seat belt, front - See Front seat belt .....	RS-3
Seat belt, rear - See Rear seat belt.....	RS-4
Seat, front - See Front seat .....	BT-24
Seat, rear - See Rear seat.....	BT-27
Self-diagnostic results .....	EC-36
Shift lock system.....	AT-120
Shift schedule .....	AT-33
Shift solenoid valve (AT) .....	AT-111
Shift solenoid valve (AT) .....	AT-111
Shock absorber (rear).....	RA-23
Side bearing preload diff. (except FF) .....	PD-18
Side flange installation diff. (except FF) .....	PD-10
Side trim .....	BT-13
SMJ (super multiple junction) .....	EL-291
Spark plug replacement.....	MA-15
Speedometer.....	EL-96
Spiral cable .....	RS-9
Spot lamp .....	EL-86
Spring (Wheelarch) height.....	FA-5
SRS - See Supplemental Restraint System .....	RS-5
SRS Trouble diagnoses .....	RS-22
SRS Wiring diagram.....	RS-22
Stabilizer bar (front) .....	FA-20
Stabilizer bar (rear) .....	RA-28
Stall test (AT) .....	AT-113
Standardized relay .....	EL-6
Starting system .....	EL-34
Steering gear and linkage inspection .....	MA-19
Steering linkage.....	ST-14
Steering wheel and column .....	ST-10
Steering wheel play .....	ST-5
Steering wheel turning force .....	ST-8
Stop lamp .....	EL-70
Strut (front).....	FA-15
Sun roof .....	BT-28
Sun roof, electric - See Electric sun roof.....	EL-135
Sunload sensor .....	HA-107
Supplemental Restraint System .....	RS-5
Symbols and abbreviations .....	GI-8

T

Tachometer .....	EL-96
Tail lamp .....	EL-67
Telephone.....	EL-130
Tension rod (front).....	FA-20
Theft warning system .....	EL-245
Thermostat.....	LC-11
Three way catalyst .....	EC-204
Three way catalyst function (Left bank) .....	EC-204

Three way catalyst function (Right bank).....	EC-204
Three way catalyst precautions .....	GI-4
Throttle bodies.....	EM-23
Throttle position sensor (TPS).....	EC-113
Throttle position sensor adjustment.....	EC-62
Throttle position sensor inspection .....	EC-117
Throttle position switch .....	AT-112
Tie-rod.....	ST-18
Tie-rod ball joints .....	ST-18
Tightening torque of standard bolts .....	GI-42
Time control system .....	EL-223
Timing belt .....	EM-13
Tire rotation .....	MA-19
Tire size.....	GI-37
Tooth contact diff. (except FF) .....	PD-24
Torque converter clutch solenoid valve .....	AT-111
Torque converter installation.....	AT-133
Tow truck towing .....	GI-40
Towing point.....	GI-41
Transmission serial number.....	GI-36
Transverse link (front).....	FA-21
Tread-FR&RR (Dimensions).....	GI-37
Trim .....	BT-13
Triple pressure switch .....	HA-101
Trunk lid.....	BT-7
Trunk lid finisher .....	BT-18
Trunk lid opener - See Trunk lid.....	BT-7
Trunk lid opener, electric .....	EL-149
Trunk lid trim .....	BT-18
Trunk room lamp .....	EL-86
Trunk room trim.....	BT-18
Turbine revolution sensor.....	AT-110
Turn signal lamp.....	EL-73
Two trip detection logic .....	EC-33
Two-pole lift.....	GI-40

U

Under body .....	BT-34
------------------	-------

V

Vacuum hose (brake system).....	BR-16
Vacuum hose drawing (ECCS) .....	EC-12
Valve guide inspection .....	EM-29
Valve seat inspection .....	EM-31
Valve spring inspection.....	EM-32
Vehicle identification number .....	GI-35
Vehicle speed sensor (VSS) .....	EC-217

GI  
MA  
EM  
LC  
EC  
FE  
AT  
PD  
FA  
RA  
BR  
ST  
RS  
BT  
HA  
EL

**IDX**

## ALPHABETICAL INDEX

### W

Warning lamps .....	EL-101	Wheel size .....	GI-37
Water pump .....	LC-9	Wheelbase (Dimensions) .....	GI-37
Water temperature gauge .....	EL-96	Wide open & closed throttle position (CTP) switch .....	EC-113
Weatherstrip - See Exterior .....	BT-19	Width (Dimensions) .....	GI-37
Wheel alignment (front) .....	FA-7	Window, back - See Back window .....	BT-29
Wheel alignment (rear) .....	RA-6	Window, door .....	BT-9
Wheel balance .....	MA-18	Window, rear - See Rear window .....	BT-29
Wheel bearing (front axle) .....	FA-6	Windshield .....	BT-29
Wheel bearing (rear) .....	RA-6	Windshield washer - See Front washer .....	EL-108
Wheel hub (rear) .....	RA-10	Windshield wiper - See Front wiper .....	EL-108
Wheel sensors (ABS) .....	BR-38	Wiper, front .....	EL-108