

ALPHABETICAL INDEX

SECTION **IDX**

GI

MA

EM

LC

EC

FE

AT

PD

FA

RA

BR

ST

RS

BT

HA

EL

IDX

ALPHABETICAL INDEX

A

ABS (anti-lock brake system)	BR-31
ABS actuator	BR-39
ABS circuit diagram	BR-48
ABS component parts and connector locations.....	BR-45
ABS control unit	BR-38
ABS hydraulic circuit	BR-31
ABS self-diagnosis	BR-42
ABS system components	BR-31
ABS trouble diagnoses	BR-40
ABS wheel sensors.....	BR-38
ABS wiring diagram	BR-33
A/C air flow	HA-16
A/C circuit diagram.....	HA-64
A/C component layout.....	HA-15
A/C compressor clutch removal and installation.....	HA-130
A/C compressor description	HA-11
A/C compressor mounting	HA-129
A/C compressor precaution	HA-5
A/C compressor special service tool	HA-5
A/C control linkage adjustment	HA-99
A/C control operation	HA-18
A/C diagnostic work flow.....	HA-20
A/C harness layout.....	HA-62
A/C HFC134a (R134a) system precaution	HA-3
A/C HFC134a (R134a) system service procedure.....	HA-122
A/C HFC134a (R134a) system service tools	HA-6
A/C HFC134a system service equipment precaution.....	HA-8
A/C lubricant (R134a)	HA-124
A/C operational check	HA-21
A/C performance chart	HA-58
A/C performance test diagnoses	HA-56
A/C relay	HA-98
A/C self-diagnoses	HA-28
A/C service data specification	HA-134
A/C symptom chart	HA-24
A/C trouble diagnoses.....	HA-20
A/C wiring diagram.....	HA-65
Accelerator control system	FE-2
Accelerator wire adjustment	FE-2
Air bag	RS-5
Air bag disposal	RS-13
Air bag module.....	RS-9
Air bag precautions	GI-2
Air bleeding for brake system	BR-6
Air cleaner filter replacement.....	MA-13
Air conditioner cut control	EC-19
Air flow meter - See Mass air flow sensor	EC-111
Air mix door control linkage adjustment.....	HA-99
Air mix. door motor	HA-108
Air spoiler, rear	BT-31

Ambient sensor	HA-103
Angular tightening application	EM-2
Antenna - See Power antenna	EL-119
Anti-freeze coolant mixture ratio.....	MA-9
ASCD (automatic speed control device)	EL-145
A/T control DTC:P0600	EC-237
AT control unit	AT-104
AT diagnosis communication line.....	EC-278
AT fluid temperature sensor	AT-111
AT removal and installation	AT-134
AT self-diagnoses	AT-44
AT shift lock system	AT-120
AT trouble diagnoses	AT-12
Audio	EL-114
Audio and A/C control removal and installation - See Instrument panel	BT-11
Automatic amplifier.....	HA-105
Automatic transmission fluid replacement.....	MA-17
Automatic transmission number.....	GI-35
Auxiliary air control (AAC).....	EC-233
Axle housing (rear).....	RA-10

B

Back-up lamp	EL-66
Battery	EL-26
Belt inspection (drive belt)	MA-10
Blower motor	HA-99
Blower relay	HA-98
Board-on lift	GI-37
Body alignment	BT-32
Brake booster	BR-14
Brake control valve (Proportioning valve)	BR-8
Brake fluid change	BR-5
Brake fluid level	MA-18
Brake fluid level and line check	BR-5
Brake hydraulic line	BR-7
Brake inspection	MA-19
Brake lines and cables inspection	MA-18
Brake master cylinder	BR-11
Brake pedal	BR-9
Bumper, front	BT-5
Bumper, rear	BT-7

C

Camshaft inspection	EM-28
Camshaft position sensor inspection	EC-206
Center bearing assembly (propeller shaft)	PD-8
Center bearing disassembly (propeller shaft)	PD-7
Charging system	EL-34
Chassis and body maintenance	MA-17
Cigarette lighter	EL-108
Circuit breaker	EL-21

ALPHABETICAL INDEX

Clearance lamp.....	EL-61
Clock.....	EL-108
Closed loop control	EC-135
Coil spring (front)	FA-15
Coil spring (rear)	RA-23
Collision diagnosis	RS-40
Combination lamp, front, removal and installation	BT-5
Combination lamp, rear, removal and installation	BT-19
Combination meter removal and instal- lation - See Instrument panel.....	BT-11
Combination switch.....	EL-40
Compression pressure.....	EM-8
Compressor clutch removal and installation.....	HA-130
Compressor descriptioin.....	HA-11
Compressor mounting.....	HA-129
Compressor precaution.....	HA-5
Compressor special service tool.....	HA-5
Connecting rod	EM-43
Connecting rod bearing clearance	EM-47
Connecting rod bushing clearance	EM-48
Console box - See Instrument panel.....	BT-11
CONSULT for ECCS	EC-55
CONSULT general information.....	GI-32
Control valve (AT)	AT-155
Converter housing installation.....	AT-135
Coolant replacement.....	MA-11
Cooling circuit (engine).....	LC-8
Cooling fan	LC-12
Cooling fan control	EC-281
Cooling fan control system.....	LC-13
Cooling fan relay	HA-98
Crank angle sensor built into distributor - See Camshaft position sensor.....	EC-201
Crankshaft assembly	EM-50
Crankshaft bearing clearance.....	EM-45
Crankshaft inspection	EM-44
Crankshaft position sensor (OBD) DTC0802, P0335.....	EC-197
Crankshaft position sensor (OBD) DTC0802, P0335 inspection	EC-200
Cylinder block	EM-40
Cylinder block boring	EM-44
Cylinder head.....	EM-25
Cylinder head bolt tightening	EM-35

D

Daytime light system	EL-43
Daytime running light - See Daytime light system	EL-43
Detonation sensor - See Knock sensor.....	EC-194
Diagnosis sensor unit.....	RS-5
Diagnostic trouble code (DTC) chart	EC-76
Differential carrier assembly.....	PD-25
Differential carrier disassembly.....	PD-12
Differential gear oil replacement.....	MA-18
Dimensions.....	GI-36

Direct ignition system.....	EC-25
Distributor ignition (DI) system.....	EC-18
Dome light - See Interior lamp	EL-80
Door glass.....	BT-9
Door lock.....	BT-9
Door mirror.....	BT-30
Door trim	BT-15
Door, front	BT-9
Door, rear	BT-10
Drive pinion height	PD-19
Drive plate runout	EM-49
Drive shaft (rear)	RA-15
Dropping resistor (AT)	AT-112

E

ECCS basic inspection	EC-73
ECCS circuit diagram.....	EC-9
ECCS component parts location	EC-11
ECCS on board diagnostic system	EC-34
ECCS system diagram and chart	EC-10
ECCS trouble diagnoses.....	EC-69
ECM input/output signal inspection	EC-99
EGR control (EGRC) - solenoid valve	EC-264
EGR temperature sensor	EC-268
EGR temperature sensor inspection	EC-272
EGR valve & EVAP canister purge con- trol solenoid valve inspection	EC-267
EGR valve inspection.....	EC-215
Electric sun roof	EL-129
Electrical load signal circuit	EC-308
Electrical unit	Foldout
Electronic ignition system	EC-18
Engine compartment.....	BT-32
Engine control module (ECM).....	EC-240
Engine coolant temperature sensor (ECTS).....	EC-121
Engine coolant temperature sensor (ECTS) P0115, DTC0103.....	EC-121
Engine coolant temperature sensor (ECTS) P0115, DTC0103 inspection	EC-124
Engine coolant temperature sensor (ECTS) P0125, DTC0908.....	EC-130
Engine coolant temperature sensor (ECTS) P0125, DTC0908 inspection	EC-134
Engine oil filter replacement	MA-14
Engine oil precautions	GI-4
Engine oil replacement	MA-13
Engine outer component parts	EM-6
Engine removal	EM-37

Engine room - See Engine compartment	BT-32
Engine serial number	GI-35
EVAP canister	EC-20
EVAP canister inspection	EC-20
EVAP vapor lines inspection.....	MA-16
Evaporative emission system	EC-20
Exhaust gas recirculation (EGR) system	EC-207
Exhaust system	FE-6

ALPHABETICAL INDEX

Exhaust system inspection	MA-20
Exterior.....	BT-19
Exterior lamp.....	EL-61

F

Fan control amp.	HA-119
Final drive disassembly.....	PD-12
Final drive pre-inspection	PD-12
Final drive removal and installation	PD-10
Finisher, interior - See Trim	BT-13
Finisher, rear panel.....	BT-18
Finisher, trunk lid	BT-18
First (1st) position switch.....	AT-110
Floor trim.....	BT-13
Fluid temperature sensor (AT).....	AT-111
Fluids	MA-8
Forward clutch.....	AT-174
Freeze frame data	EC-36, 58
Front axle.....	FA-10
Front bumper	BT-5
Front combination lamp removal and installation	BT-5
Front disc brake	BR-17
Front door	BT-9
Front heated oxygen sensor (HO2S) (Left bank)	EC-153
Front heated oxygen sensor (HO2S) (Right bank)	EC-136
Front heated oxygen sensor (HO2S).....	EC-136
Front heated oxygen sensor (HO2S) monitor	EC-51
Front heated oxygen sensor heater (Left bank)	EC-158
Front heated oxygen sensor heater (Right bank)	EC-141
Front passenger air bag.....	RS-10
Front seat.....	BT-24
Front seat belt	RS-3
Front suspension	FA-14
Front washer.....	EL-102
Front wiper	EL-102
Fuel check valve inspection	EC-21
Fuel cut control (at no load & high engine speed).....	EC-19
Fuel filler lid	BT-7
Fuel filter replacement	MA-12
Fuel gauge	EL-90
Fuel injection system (Left bank).....	EC-180, 185
Fuel injection system (Right bank)	EC-170, 175
Fuel lid opener, electric	EL-143
Fuel line inspection.....	MA-12
Fuel precautions.....	GI-5
Fuel pressure check.....	EC-23
Fuel pressure release	EC-23
Fuel pump control	EC-294
Fuel pump control module	EC-245
Fuel pump inspection.....	EC-297
Fuel pump relay inspection.....	EC-297
Fuel system	FE-3

Fuel tank vacuum relief valve inspection.....	EC-21
Fuse	EL-21
Fusible link.....	EL-21

G

Garage jack and safety stand	GI-38
Gauges	EL-88
Generic scan tool (GST)	EC-67
Glass.....	BT-9
Grease	MA-8
Ground distribution	EL-22

H

Harness connector.....	EL-5
Harness layout.....	EL-270
Hazard warning lamp.....	EL-67
Headlamp.....	EL-43
Headlining - See Roof trim	BT-16
Heated oxygen sensor (HO2S) (Front) (Left bank)	EC-153
Heated oxygen sensor (HO2S) (Front) (Right bank)	EC-136
Heated oxygen sensor (HO2S) (front).....	EC-136
Heated oxygen sensor (HO2S) heater (rear).....	EC-148, 165
Heated oxygen sensor (rear)	EC-144, 161
Heated oxygen sensor heater (Front)(Left bank).....	EC-158
Heated oxygen sensor heater (Front- t)(Right bank).....	EC-141
Heated seat.....	BT-26, EL-135
Height (Dimensions)	GI-36
HFC134a (R134a) system precaution	HA-3
HFC134a (R134a) system service procedure.....	HA-122
HFC134a (R134a) system service tools.....	HA-6
HFC134a system service equipment precaution.....	HA-8
High clutch.....	AT-172
Hood	BT-5
Horn	EL-108
How to erase DTC for ECCS OBD system	EC-44
How to follow flow chart in trouble diagnoses	GI-29
How to perform efficient diagnosis for an electrical incident.....	GI-18
How to read wiring diagrams	GI-8
How to use this manual	GI-6
Hydraulic lash adjuster inspection	EM-32

I

IACV - air regulator inspection.....	EC-300
--------------------------------------	--------

ALPHABETICAL INDEX

IACV - FICD solenoid valve inspection	EC-307
IACV-AAC valve inspection.....	EC-236
IACV-FICD solenoid valve	EC-304
Identification plate	GI-35
Idle air control valve (IACV) - air regulator.....	EC-298
Idle air control valve (IACV)	EC-233
Idle mixture ratio inspection	EC-27
Idle speed inspection	EC-27
Ignition timing inspection.....	EC-27
Illumination.....	EL-73
In vehicle sensor	HA-102
Inhibitor switch.....	AT-109
Injector inspection	EC-291
Injector removal and installation	EC-24
Instrument panel	BT-11
Intake air temperature sensor	EC-116
Intake air temperature sensor inspection.....	EC-120
Intake door control linkage adjustment.....	HA-100
Intake door motor	HA-116
Intake sensor.....	HA-104
Interior	BT-13
Interior lamp	EL-80

J

Joint connector (J/C)	Foldout
Junction box (J/B)	Foldout

K

Kickdown switch	AT-112
Knock sensor (KS)	EC-194
Knock sensor (KS) inspection.....	EC-196

L

Length (Dimensions)	GI-36
License lamp.....	EL-61
Line pressure solenoid valve	AT-111
Line pressure test (AT).....	AT-115
Liquid gasket application	EM-2
Location of electrical units	EL-267
Lock, door	BT-9
Low and reverse brake	AT-178
Lower ball joint (rear susp.)	RA-25
Lubricant (R134a) A/C	HA-124
Lubricants	MA-8
Lubrication circuit (engine)	LC-4
Lubrication-locks, hinges and hood latches	MA-21

M

Magnet clutch.....	HA-130
Maintenance (engine)	MA-10
Maintenance	MA-1
Maintenance general	MA-3
Maintenance periodic.....	MA-5
Maintenance schedule (1)	MA-6
Maintenance schedule (2)	MA-7
Malfunction indicator lamp (MIL).....	EC-51
Mass air flow sensor (MAFS)	EC-111
Mass air flow sensor inspection	EC-115
Master cylinder (brake).....	BR-11
Max cold door control linkage adjustment	HA-100
Max cold door motor	HA-110
Max cold relay	HA-98
Meter.....	EL-88
MIL & Data link connectors circuit	EC-310
Mirror, door	BT-30
Mirror, out side	BT-30
Misfire	EC-190
Mode door control linkage adjustment.....	HA-99
Mode door motor	HA-113
Model variation	GI-33
Molding - See Exterior	BT-19
Multi link/lower ball joint (rear)	RA-25
Multi-remote control system	EL-198
Multiport fuel injection (MFI) system.....	EC-15
Multiport fuel injection precautions.....	GI-4

O

Oil change (capacity)	MA-8
Oil pan (engine)	EM-9
Oil pressure (engine)	LC-5
Oil pressure relief valve (engine)	LC-7
Oil pump (AT)	AT-151
Oil pump (engine)	LC-5
Oil pump regulator valve (engine)	LC-7
Oil seal replacement (engine)	EM-21
Oil seal replacement (front of final drive).....	PD-9
Oil seal replacement (side of final drive).....	PD-9
Out side mirror	BT-30
Overrun clutch	AT-174
Overrun clutch solenoid valve	AT-111
Oversize piston	EM-44

P

Park/Neutral position switch.....	EC-242
Parking brake control	BR-29
Parking drum brake.....	BR-25
PCV (positive crankcase ventilation) inspection.....	EC-22

ALPHABETICAL INDEX

Pinion bearing preload diff.....	PD-19
Pinion gear height diff.....	PD-19
Piston assembly.....	EM-49
Piston pin inspection.....	EM-41
Piston ring inspection	EM-42
Piston to bore clearance.....	EM-43
Power antenna.....	EL-119
Power door lock.....	EL-186
Power door mirror.....	EL-136
Power seat.....	EL-131
Power steering (twin orifice) trouble diagnoses.....	ST-33
Power steering fluid level.....	MA-20, ST-6
Power steering gear	ST-14
Power steering hydraulic pressure	ST-8
Power steering oil pressure switch	EC-301
Power steering oil pressure switch inspection.....	EC-303
Power steering oil pump.....	ST-26
Power steering system (twin orifice). .	ST-29
Power steering system bleeding	ST-7
Power supply routing	EL-9
Power transistor & ignition coil	EC-251
Power window.....	EL-171
Precautions (General)	GI-2
Pressure test (AT)	AT-115
Propeller shaft	PD-5
Propeller shaft on vehicle service	PD-5
Propeller shaft vibration	PD-5

R

Rack retainer adjustment.....	ST-6
Radiator	LC-14
Radiator fan - See Cooling fan	LC-12
Radio - See Audio	EL-114
Rear air spoiler	BT-31
Rear axle	RA-8
Rear bumper	BT-7
Rear combination lamp removal and installation	BT-19
Rear disc brake	BR-21
Rear door	BT-10
Rear heated oxygen sensor (HO2S) ..	EC-144, 161
Rear heated oxygen sensor (HO2S) heater	EC-148, 165
Rear panel finisher	BT-18
Rear seat	BT-27
Rear seat belt.....	RS-4
Rear suspension	RA-21
Rear window	BT-29
Rear window defogger	EL-110
Refrigerant connection precaution	HA-4
Refrigerant general precaution	HA-3
Refrigerant lines	HA-126
Refrigeration cycle	HA-10
Reverse clutch.....	AT-168
Revolution sensor (AT)	AT-110
Road wheel size	GI-36
Roof trim	BT-16

Room lamp - See Interior lamp	EL-80
-------------------------------------	-------

S

SAE J1930 terminology list	GI-42
SAE J1979 - Mode 1 ~ 7	EC-34, 68
Seal - See Exterior	BT-19
Seat belt inspection	MA-21
Seat belt pre-tensioner	RS-5
Seat belt pre-tensioner disposal	RS-13
Seat belt, front	RS-3
Seat belt, rear	RS-4
Seat, front	BT-24
Seat, rear	BT-27
Self-diagnostic results	EC-51
Shift lock system	AT-120
Shift schedule	AT-33
Shift solenoid valve (AT)	AT-111
Shock absorber (rear)	RA-23
Side bearing preload diff.	PD-18
Side flange installation diff.	PD-10
Side trim	BT-13
SMJ (super multiple junction)	Foldout
Spark plug replacement	MA-15
Speedometer	EL-90
Spiral cable	RS-9
Spot lamp	EL-80
Spring (Wheelarch) height	FA-5
SRS - See Supplemental Restraint System	RS-5

SRS Troubleshooting	RS-18
SRS Wiring diagram	RS-21
Stabilizer bar (front)	FA-20
Stabilizer bar (rear)	RA-28
Stall test (AT)	AT-113
Standardized relay	EL-6
Starting system	EL-30
Steering gear and linkage inspection	MA-20
Steering linkage	ST-14
Steering wheel and column	ST-10
Steering wheel play	ST-5
Steering wheel turning force	ST-8
Stop lamp	EL-64
Strut (front)	FA-15
Sun roof, electric	EL-129
Sunload sensor	HA-104
Sunroof	BT-28
Supplemental Restraint System	RS-5
Symbols and abbreviations	GI-7
System readiness test (SRT) code	EC-36

T

Tachometer	EL-90
Tail lamp	EL-61
Telephone	EL-124
Tension rod (front)	FA-20
Theft warning system	EL-239

ALPHABETICAL INDEX

Thermostat.....	LC-11
Three way catalyst	EC-216
Three way catalyst function (Left bank).....	EC-216
Three way catalyst function (Right bank).....	EC-216
Three way catalyst precautions	GI-4
Throttle bodies.....	EM-23
Throttle position sensor (TPS)	EC-125
Throttle position sensor adjustment.....	EC-73
Throttle position sensor inspection	EC-129
Throttle position switch.....	AT-112
Tie-rod.....	ST-18
Tie-rod ball joints	ST-18
Tightening torque of standard bolts	GI-41
Time control system.....	EL-217
Timing belt	EM-13
Tire rotation.....	MA-19
Tire size	GI-36
Tooth contact diff.....	PD-24
Torque converter clutch solenoid valve	AT-111
Torque converter installation	AT-134
Tow truck towing.....	GI-39
Towing point	GI-40
Transmission serial number	GI-35
Transverse link (front).....	FA-21
Tread-FR&RR (Dimensions)	GI-36
Trim.....	BT-13
Triple pressure switch	HA-98
Trunk lid	BT-7
Trunk lid finisher	BT-18
Trunk lid opener - See Trunk lid.....	BT-7
Trunk lid opener, electric	EL-143
Trunk lid trim	BT-18
Trunk room lamp.....	EL-80
Trunk room trim	BT-18
Turbine revolution sensor	AT-110
Turn signal lamp	EL-67
Two-pole lift	GI-39

U

Under body	BT-34
------------------	-------

V

Vacuum hose (brake system)	BR-16
Vacuum hose drawing (ECCS)	EC-13
Valve guide inspection	EM-29
Valve seat inspection	EM-31
Valve spring inspection.....	EM-32
Vehicle identification number	GI-34
Vehicle speed sensor (VSS)	EC-229
Viscosity number (SAE).....	MA-8

W

Warning lamps	EL-95
Water pump	LC-9
Water temperature gauge	EL-90
Weatherstrip - See Exterior	BT-19
Wheel alignment (front)	FA-7
Wheel alignment (rear)	RA-6
Wheel balance	MA-19
Wheel bearing (front axle)	FA-6
Wheel bearing (rear)	RA-6
Wheel hub (rear)	RA-10
Wheel sensors (ABS).....	BR-38
Wheel size	GI-36
Wheelbase (Dimensions)	GI-36
Wide open & closed throttle position (CTP) switch	EC-125
Width (Dimensions)	GI-36
Window, door	BT-9
Window, rear.....	BT-29
Windshield	BT-29
Windshield washer - See Front washer	EL-102
Windshield wiper - See Front wiper	EL-102
Wiper, front	EL-102

RS

BT

HA

EL

IDX