

SECTION **IDX**
ALPHABETICAL INDEX

A
B
C
D
E
F
G
H
I
J
K
L

IDX

ALPHABETICAL INDEX

A

A/C air flow	ATC-32	A/T Wiring diagram AT - TCCSIG	AT-130
A/C component layout	ATC-21	A/T Wiring diagram AT - TCV	AT-124
A/C compressor clutch removal and installation	ATC-138	A/T Wiring diagram AT - TRSA/T	AT-161
A/C compressor precaution	ATC-8	A/T Wiring diagram AT - VSS A/T	AT-117
A/C compressor special service tool	ATC-12	Accelerator control system	ACC-2
A/C control operation (auto A/C)	ATC-30	Accelerator pedal position (APP) sensor	EC-615 , EC-621 , EC-634
A/C diagnostic work flow (auto A/C)	ATC-34	Accelerator pedal released position learning	EC-44
A/C evaporator	ATC-146	Accelerator wire adjustment	ACC-3
A/C HFC134a (R134a) system precaution	ATC-4	Aiming adjustment	LT-39
A/C HFC134a (R134a) system service procedure	ATC-134	Air bag	SRS-3
A/C HFC134a (R134a) system service tools ...	ATC-12	Air bag disposal	SRS-52
A/C HFC134a system service equipment precaution ...	ATC-9	Air bleeding for brake system	BR-9
A/C lubricant (R134a)	ATC-22	Air cleaner and air duct	EM-16
A/C operational check	ATC-57	Air cleaner filter replacement	MA-14
A/C performance chart	ATC-91	Air conditioner cut control	EC-30
A/C performance test diagnoses	ATC-89	Air flow meter - See Mass air flow sensor	EC-174 , EC-182 , EC-422
A/C rera y	ATC-86	Air mix door control linkage adjustment	ATC-71
A/C self-diagnoses (auto A/C)	ATC-49	Air mix. door motor	ATC-69 , ATC-130
A/C trouble diagnoses (auto A/C)	ATC-34	Alternator	SC-17
A/C, A - Wiring diagram	ATC-38	Ambient sensor	ATC-101 , ATC-115
A/T fluid checking	AT-14 , AT-52	Angular tightening application	EM-3
A/T fluid cooler cleaning	AT-16	Antenna	AV-35
A/T fluid replacement	AT-14	APPS1 - Wiring diagram	EC-617
A/T fluid temperature sensor	AT-154	APPS2 - Wiring diagram	EC-623
A/T IND - Wiring diagram	DI-44	APPS3 - Wiring diagram	EC-636
A/T indicator	DI-44	ASCD - Wiring diagram	ACS-8
A/T self-diagnoses	AT-101	ASCD (automatic speed control device)	ACS-4
A/T shift lock system	AT-306	Ashtray illumination(Front)	LT-185
A/T shift lock system - Wiring diagram	AT-307	Audio	AV-5
A/T trouble diagnoses	AT-43	AUDIO - Wiring diagram	AV-8
A/T Wiring diagram AT - CAN	AT-104	Audio and A/C control removal and installation - See Instrument panel	IP-11
A/T Wiring diagram AT - D/C	AT-200	AUT/DP - Wiring diagram	SE-20
A/T Wiring diagram AT - D/CF	AT-206	Auto air conditioner - Wiring diagram	ATC-38
A/T Wiring diagram AT - E/BRE	AT-175	Auto anti-dazzling inside mirror	GW-58
A/T Wiring diagram AT - FPSW1	AT-235	Automatic amplifier	ATC-47 , ATC-60
A/T Wiring diagram AT - FPSW3	AT-239	Automatic drive positioner	SE-13
A/T Wiring diagram AT - FPSW5	AT-243	Automatic transmission fluid replacement	MA-20
A/T Wiring diagram AT - FPSW6	AT-247	AV and NAVI control unit	DI-65 , DI-89 , AV-40
A/T Wiring diagram AT - FR/B	AT-190	AV communication line	DI-103 , AV-60
A/T Wiring diagram AT - FR/BF	AT-195	AV control unit	DI-65 , DI-89
A/T Wiring diagram AT - FTS	AT-155	Axle	MA-26
A/T Wiring diagram AT - HLR/C	AT-210		
A/T Wiring diagram AT - HLR/CF	AT-216		
A/T Wiring diagram AT - I/C	AT-180		
A/T Wiring diagram AT - I/CF	AT-186		
A/T Wiring diagram AT - I/LOCK	AT-168		
A/T Wiring diagram AT - LC/B	AT-221		
A/T Wiring diagram AT - LC/BF	AT-227		
A/T Wiring diagram AT - LPSV	AT-135		
A/T Wiring diagram AT - MMSW	AT-231		
A/T Wiring diagram AT - NONDTC	AT-254		
A/T Wiring diagram AT - PNP/SW	AT-112		
A/T Wiring diagram AT - POWER	AT-141		
A/T Wiring diagram AT - STSIG	AT-107		

B

BACK/L - Wiring diagram	LT-106
Back-up lamp	LT-106
Ball joint (front)	FSU-12
Ball Joint (rear)	RSU-10
Basic inspection	EC-81
Battery	SC-4
Battery/Starting/Charging System Tester(Battery)	SC-6
Battery/Starting/Charging System Tester(Charging system)	SC-19
Battery/Starting/Charging System Tester(Starting system)	SC-11
Block heater	EM-80

ALPHABETICAL INDEX

Blower motor	ATC-75 , ATC-121	Compass	DI-21
Blower unit	ATC-119	Component Location (auto A/C)	ATC-35
Body alignment	BL-208	Compression pressure	EM-65
Body component parts	BL-196	Compressor clutch removal and installation ..	ATC-138
Body construction	BL-207	Compressor special service tool	ATC-12
Body exterior paint color	BL-195	Condenser	ATC-144
Body repair	BL-195	Connecting rod	EM-98
Body sealing	BL-204	Console box - See Instrument panel	IP-15
Bose speaker amp.	AV-5	CONSULT for engine	EC-108
Brake booster	BR-20	CONSULT-II for engine	EC-123
Brake fluid change	BR-9	Contaminated refrigerant	ATC-4
Brake fluid level	MA-24	Control unit	ATC-114
Brake fluid level and line check	BR-9	Control units (terminal arrangement)	PG-56
Brake inspection	MA-24	Control valve (A/T)	AT-37 , AT-312
Brake lines and cables inspection	MA-24	Controller Area Network (CAN)	LAN-21 , LAN-24 , LAN-40
Brake master cylinder	BR-13	Converter housing installation	AT-333
Brake switch	EC-610	COOL/V - Wiring diagram	EC-513 , EC-581
BRK/SW - Wiring diagram	EC-611	Coolant replacement	MA-12
Bulb specifications	LT-189	Cooling circuit (engine)	CO-7
Bumper, front	EI-15	Cooling fan	CO-19
Bumper, rear	EI-17	Cooling fan control	EC-509 , EC-578
BYPS/V - Wiring diagram	EC-586 , EC-594	Cooling fan fluid level	MA-18

C

Camshaft	EM-49
Camshaft inspection	EM-50
Camshaft position sensor (PHASE)	EC-317
CAN - Wiring diagram	EC-144 , LAN-25 , LAN-41
CAN (Controller Area Network)	LAN-21 , LAN-24 , LAN-40
CAN communication .	EC-30 , EC-143 , AT-32 , AT-103 , BRC-10 , DI-7 , LAN-21 , LAN-24 , LAN-40
Canister-See EVAP canister	EC-695
CD auto changer	AV-30
CD/CHG - Wiring diagram	AV-8
CHARGE - Wiring diagram	SC-18
Charging system	SC-17
Chassis and body maintenance	MA-19
CHIME - Wiring diagram	DI-49
CIGAR - Wiring diagram	WW-27
Cigarette lighter	WW-27
Cigarette lighter illumination	LT-185
Circuit breaker	PG-13
Clearance lamp	LT-108
Clock	DI-135
CLOCK - Wiring diagram	DI-135
Closed loop control	EC-27
Closed loop control (Bank 1)	EC-505
Closed loop control (Bank 2)	EC-505
Coil spring (rear)	RSU-14
Collision diagnosis	SRS-59
Combination lamp, front, removal and installation	LT-42
Combination lamp, rear, removal and installation	LT-127
Combination meter	DI-6
COMM - Wiring diagram	DI-103 , LAN-9 , AV-60
COMPAS - Wiring diagram	DI-23

D

D/LOCK - Wiring diagram	BL-22
Data link connector	EC-691
Data link connector for Consult	EC-110
Daytime light system	LT-44
Daytime running light - See Daytime light system	LT-44
DEF - Wiring diagram	GW-63 , SE-102
Diagnosis sensor unit	SRS-51
Diagnostic trouble code (DTC) for OBD system ..	EC-9
Diagnostic trouble code (DTC) inspection priority chart	EC-78
Direct clutch solenoid valve	AT-199 , AT-205
DLC - Wiring diagram	EC-691
Door glass	GW-47 , GW-53
Door lock	BL-107 , BL-110
Door mirror	GW-117
Door trim	EI-31
Door, front	BL-103 , GW-47
Door, rear	BL-103 , GW-53
Drive belt	EM-13
Drive belt inspection	MA-12
Drive pinion diff. inspection	RFD-13
Drive shaft (rear)	RAX-10
Driver air bag	SRS-38

ALPHABETICAL INDEX

DTC work support	EC-119	Final drive removal and installation	RFD-11
DTRL - Wiring diagram	LT-49	Finisher, interior - See Trim	EI-34
Duct and grilles	ATC-131	Finisher, trunk lid	EI-42
Duel mode muffler	EX-6	Floor trim	EI-38
E			
ECM input/output signal	EC-98	Flow charts	GI-26
ECM power supply	EC-133 , EC-418	FLS1 - Wiring diagram	EC-388
ECM/PW - Wiring diagram	EC-419	FLS2 - Wiring diagram	EC-395
ECTS - Wiring diagram	EC-195	FLS3 - Wiring diagram	EC-575
Electric sunroof	RF-10	Fluid temperature sensor (A/T)	AT-154
Electric throttle control actuator	EC-440 , EC-442 , EC-455	Fluorescent leak detector	ATC-148
Electrical load signal circuit	EC-685	FPCM - Wiring diagram	EC-521
Electrical unit	PG-56	Freeze frame data	EC-54
Electrical units location	PG-49	Front axle	FAX-4
Electronic ignition (EI) system	EC-28	Front brake solenoid valve	AT-189 , AT-194
Electronic key	BL-82 , BL-97 , BL-158	Front bumper	EI-15
Engine control circuit diagram	EC-96	Front combination lamp removal and installation	LT-42
Engine control component parts location	EC-90	Front disc brake	BR-23
Engine control module (ECM)	EC-410	Front door	BL-103 , GW-47
Engine control system diagram and chart	EC-23	Front Door Trim	EI-31
Engine coolant	CO-9	Front passenger air bag	SRS-42
Engine coolant temperature sensor (ECTS) ..	EC-193 , EC-205	Front seat	SE-127
Engine fail-safe system	EC-80	Front seat belt	SB-4
Engine oil	LU-6	Front seat belt pre-tensioner	SB-2 , SRS-3 , SRS-50
Engine oil filter replacement	MA-16	Front side air bag	SRS-44
Engine oil precautions	GI-7	Front suspension	FSU-6
Engine oil replacement	MA-15	Front wiper	WW-4
Engine removal	EM-76	FTTS - Wiring diagram	EC-285 , EC-289
Engine room cover	EM-12	Fuel cut control (at no load high engine speed) .	EC-30
ETC1 - Wiring diagram	EC-443	Fuel gauge	DI-6
ETC2 - Wiring diagram	EC-451	Fuel injection system (Bank 1)	EC-266 , EC-275
ETC3 - Wiring diagram	EC-456	Fuel injection system (Bank 2)	EC-266 , EC-275
EVAP canister	EC-695	Fuel injector and fuel tube	EM-31
EVAP canister purge volume control solenoid valve	EC-342 , EC-544	Fuel level sensor ...	EC-387 , EC-392 , EC-394 , EC-574
EVAP canister vent control valve	EC-348 , EC-552 , EC-558	Fuel lid opener, electric	BL-117
EVAP control system (small leak) diagnosis ..	EC-333 , EC-370 , EC-378 , EC-535 , EC-565	Fuel line inspection	FL-2 , MA-14
EVAP control system pressure sensor	EC-355 , EC-362	Fuel precautions	GI-5
EVAP control system purge flow monitoring diagnosis	EC-327	Fuel pressure check	EC-48
EVAP vapor lines inspection	MA-18	Fuel pressure release	EC-46
Evaporative emission (EVAP) system	EC-692	Fuel pump	EC-674
Evaporator	ATC-146	Fuel pump and gauge	FL-3
Exhaust manifold	EM-22	Fuel pump control module	EC-519
Exhaust system	EX-3	Fuel pump dropping resistor	EC-519
Exhaust system inspection	EX-3 , MA-19	Fuel system	FL-2
Expansion valve	ATC-146	Fuel tank	FL-9
F			
F/LID - Wiring diagram	BL-118	Fuel tank temperature sensor	EC-283 , EC-288
F/PUMP - Wiring diagram	EC-675	FUELB1 - Wiring diagram	EC-268 , EC-277
Fan switch	ATC-31	FUELB2 - Wiring diagram	EC-269 , EC-278
G			
Generator	SC-17	Fuse	PG-13
Generator - See Alternator	SC-17	Fuse and fusible link block	PG-64
Generic scan tool (GST)	EC-121	Fuse and fusible link box	PG-65
Glass	GW-11 , GW-13 , GW-47 , GW-53	Fuse block	PG-62 , PG-63
		Fusible link	PG-13

ALPHABETICAL INDEX

Glove box lamp [LT-185](#)
 GPS antenna [AV-39](#)
 Grille - See Exterior [EI-19](#)
 Ground distribution [PG-14](#)

H

H/AIM - Wiring diagram [LT-75](#)
 H/LAMP - Wiring diagram [LT-11](#)
 Handling precautions for plastics [BL-219](#)
 Harness connector [PG-53](#)
 Harness layout [PG-27](#)
 Hazard warning lamp [LT-89](#)
 Headlamp [LT-6](#)
 Headlamp aiming control [LT-75](#)
 Headlamp leveler - See Headlamp aiming control
[LT-75](#)
 Headlamp removal and installation [LT-42](#)
 Headlining - See Roof trim [EI-40](#)
 Heated oxygen sensor 1 (bank 1) [EC-214](#), [EC-224](#),
[EC-236](#), [EC-468](#), [EC-474](#)
 Heated oxygen sensor 1 (bank 2) [EC-214](#), [EC-224](#),
[EC-236](#), [EC-468](#), [EC-474](#)
 Heated oxygen sensor 1 heater (bank 1) [EC-157](#)
 Heated oxygen sensor 1 heater (bank 2) [EC-157](#)
 Heated oxygen sensor 2 (bank 1) [EC-245](#), [EC-254](#),
[EC-481](#), [EC-493](#)
 Heated oxygen sensor 2 (bank 2) [EC-245](#), [EC-254](#),
[EC-481](#), [EC-493](#)
 Heated oxygen sensor 2 heater (bank 1) [EC-165](#)
 Heated oxygen sensor 2 heater (bank 2) [EC-165](#)
 Heater and cooling unit (Heater core) [ATC-124](#)
 HFC134a (R134a) system precaution [ATC-4](#)
 HFC134a (R134a) system service procedure [ATC-134](#)
 HFC134a (R134a) system service tools [ATC-12](#)
 HFC134a system service equipment precaution [ATC-9](#)
 High & low reverse clutch solenoid valve [AT-209](#),
[AT-215](#)
 Hood [BL-13](#)
 Horn [WW-31](#)
 HORN - Wiring diagram [WW-31](#)
 How to erase DTC for OBD system [EC-62](#)

I

I/MIRR - Wiring diagram [GW-58](#)
 IATS - Wiring diagram [EC-190](#)
 ICC - Wiring diagram [ACS-48](#)
 Identification [ATC-11](#)
 Idle air volume learning [EC-44](#)
 Idle mixture ratio [EC-33](#)
 Idle speed [EC-33](#), [EC-81](#)
 Idle speed control (ISC) [EC-401](#), [EC-403](#)
 IGN/SG - Wiring diagram [EC-650](#)
 Ignition coil [EM-28](#), [EC-649](#)
 Ignition control system [EC-649](#)
 Ignition timing [EC-33](#), [EC-81](#)
 ILL - Wiring diagram [LT-175](#)
 Illumination [LT-173](#)

Illumination control [LT-185](#)
 In vehicle sensor [ATC-103](#), [ATC-116](#)
 INF/D - Wiring diagram [DI-73](#), [DI-97](#)
 INJECT - Wiring diagram [EC-662](#)
 Injector [EC-661](#)
 Input clutch solenoid valve [AT-179](#), [AT-185](#)
 Instrument panel [IP-10](#)
 Instrument panel speaker [AV-31](#)
 INT/L - Wiring diagram [LT-187](#)
 Intake air temperature sensor [EC-189](#), [EC-208](#)
 Intake door control linkage adjustment [ATC-74](#)
 Intake door motor [ATC-72](#), [ATC-122](#)
 Intake manifold [EM-18](#)
 Intake sensor [ATC-109](#), [ATC-118](#)
 Intake valve timing control (Bank 1) [EC-146](#)
 Intake valve timing control (Bank 2) [EC-146](#)
 Intake valve timing control position sensor (Bank 1)
[EC-460](#)
 Intake valve timing control position sensor (Bank 2)
[EC-460](#)
 Intake valve timing control solenoid valve (Bank 1)
[EC-428](#)
 Intake valve timing control solenoid valve (Bank 2)
[EC-428](#)
 Intelligent cruise control (ICC) system [ACS-34](#)
 Interior lamp [LT-128](#)
 IVCB1 - Wiring diagram [EC-149](#), [EC-429](#)
 IVCB2 - Wiring diagram [EC-151](#), [EC-431](#)
 IVCSB1 - Wiring diagram [EC-461](#)
 IVCSB2 - Wiring diagram [EC-463](#)
 IVIS (Infiniti vehicle immobilizer system) precautions ...
[GI-3](#)
 IVMS (In-Vehicle Multiplexing System) [LAN-4](#)
 IVMS-System description [LAN-4](#)

J

Joint connector (J/C) [PG-55](#)
 Junction box (J/B) [PG-62](#), [PG-63](#)

K

Keyless entry system - See Multi-remote control system
[BL-51](#)
 Knock sensor (KS) [EC-304](#)
 KS - Wiring diagram [EC-305](#)

L

Laser beam aiming adjustment [ACS-40](#)
 Latch (lower anchors and tether for children) system ...
[SB-10](#)
 License lamp [LT-108](#)
 Line pressure solenoid valve [AT-134](#)
 Line pressure test (A/T) [AT-53](#)
 Liquid gasket application [LU-2](#), [CO-2](#)
 LOAD - Wiring diagram [EC-686](#)
 Location of electrical units [PG-49](#)
 Lock, door [BL-107](#), [BL-110](#)

ALPHABETICAL INDEX

Low coast brake solenoid valve [AT-220](#), [AT-226](#)
Low tire pressure warning system [WT-7](#)
Low tire pressure warning system - trouble diagnoses .
[WT-9](#)
Low tire pressure warning system - Wiring diagram
[WT-10](#)
Lubricant (R134a) A/C [ATC-5](#), [ATC-22](#)
Lubrication circuit (engine) [LU-4](#)
Lubrication oil A/C [ATC-151](#)

M

MAFS - Wiring diagram [EC-177](#), [EC-184](#), [EC-424](#)
Magnet clutch [ATC-80](#), [ATC-138](#)
MAIN - Wiring diagram [EC-133](#)
Maintenance (engine) [MA-12](#)
MAJOR OVERHALL [AT-334](#)
Major overhaul (Final drive) [RFD-14](#)
Malfunction indicator lamp (MIL) [EC-64](#), [EC-413](#)
Mass air flow sensor (MAFS) [EC-174](#), [EC-182](#), [EC-422](#)
Master cylinder (brake) [BR-13](#)
METER - Wiring diagram [DI-10](#)
MIL - Wiring diagram [EC-414](#)
MIRROR - Wiring diagram [GW-84](#), [GW-116](#)
Mirror, door [GW-117](#)
Mirror, out side [GW-117](#)
Misfire [EC-298](#)
Mode door control linkage adjustment [ATC-68](#)
Mode door motor [ATC-66](#), [ATC-129](#)
Molding - See Exterior [EI-23](#), [EI-25](#), [EI-27](#), [EI-29](#)
Mud guard - See Exterior [EI-22](#)
Multiplex communication [ATC-111](#)
Multiport fuel injection (MFI) system [EC-26](#)
Multiport fuel injection precautions [GI-6](#)
Multi-remote control system [BL-51](#)

N

NATS - Wiring diagram [BL-162](#), [BL-176](#)
NAVI - Wiring diagram [AV-52](#)
Navigation system [AV-38](#)
Nissan torque demand (NTD) control system [EC-29](#)
NVH troubleshooting (BR) [BR-5](#)
NVH troubleshooting (ST) [PS-5](#)
NVIS (Nissan vehicle immobilizer system) precautions
[GI-3](#)

O

O2H1B1 - Wiring diagram [EC-159](#)
O2H1B2 - Wiring diagram [EC-161](#)
O2H2B1 - Wiring diagram [EC-167](#)
O2H2B2 - Wiring diagram [EC-169](#)
O2S1B1 - Wiring diagram ... [EC-216](#), [EC-227](#), [EC-239](#)
O2S1B2 - Wiring diagram ... [EC-218](#), [EC-229](#), [EC-241](#)
O2S2B1 - Wiring diagram .. [EC-247](#), [EC-257](#), [EC-484](#),
[EC-496](#)
O2S2B2 - Wiring diagram .. [EC-249](#), [EC-259](#), [EC-486](#),
[EC-498](#)

Oil filter [LU-9](#)
Oil pan (engine) [EM-25](#)
Oil pressure (engine) [LU-6](#)
Oil pump (engine) [LU-10](#)
Oil seal replacement (engine) [EM-61](#)
Oil seal replacement (front of final drive) [RFD-7](#)
Oil seal replacement (side of final drive) [RFD-9](#)
On board diagnostic system [EC-49](#), [EC-65](#)
ORVR (On-board Refueling Vapor Recovery) . [EC-698](#)
Out side mirror [GW-117](#)
Overheat [EC-509](#)

P

Park/Neutral position switch [EC-600](#)
Park/neutral position switch (A/T) [AT-110](#), [AT-250](#)
Parking brake control [PB-4](#)
Parking drum brake [PB-5](#)
Parking lamp [LT-108](#)
PCV (positive crankcase ventilation) [EC-704](#)
Personal lamp [LT-153](#)
PGC/V - Wiring diagram [EC-344](#), [EC-546](#)
PHASE - Wiring diagram [EC-318](#)
Piston pin inspection [EM-96](#)
Piston ring inspection [EM-97](#)
Piston to bore clearance [EM-101](#)
PNP/SW - Wiring diagram [EC-602](#)
POS - Wiring diagram [EC-310](#)
POWER - Wiring diagram [PG-3](#)
Power door lock [BL-19](#)
Power seat [SE-93](#)
Power steering fluid level [PS-6](#), [MA-25](#)
Power steering gear [PS-13](#)
Power steering oil pump [PS-25](#)
Power steering pressure (PSP) sensor [EC-405](#)
Power steering system bleeding [PS-6](#)
Power supply routing [PG-2](#)
Power window [GW-15](#)
PRE/SE - Wiring diagram [EC-357](#), [EC-364](#)
Precautions (General) [GI-4](#)
Precautions in repairing high strength steel [BL-222](#)
Pressure switch 1 [AT-194](#), [AT-234](#)
Pressure switch 2 [AT-226](#)
Pressure switch 3 [AT-185](#), [AT-238](#)
Pressure switch 5 [AT-205](#), [AT-242](#)
Pressure switch 6 [AT-215](#), [AT-246](#)
Pressure test (A/T) [AT-53](#)
Propeller shaft [PR-4](#)
Propeller shaft on vehicle service [PR-4](#)
Propeller shaft vibration [PR-4](#)
PS/SEN - Wiring diagram [EC-406](#)
PTT switch (Push To Talk switch) [DI-137](#)
Push To Talk switch (PTT switch) [DI-137](#)

R

Radiator [CO-12](#)
Radiator coolant temperature sensor [EC-434](#)
Radio - See Audio [AV-5](#)

ALPHABETICAL INDEX

RCTS - Wiring diagram	EC-436	Spark plug	EM-29
Rear axle	RAX-6	Spark plug replacement	MA-16
Rear bumper	EI-17	Specification value	EC-128
Rear combination lamp removal and installation		Speedometer	DI-6
LT-127		Spiral cable	SRS-40
Rear disc brake	BR-29	Spot lamp	LT-152
Rear door	BL-103 , GW-53	SROOF - Wiring diagram	RF-12
Rear door trim	EI-31	SRS - See Supplemental Restraint System	SRS-6
Rear parcel shelf finisher	EI-37	SRS Trouble diagnoses	SRS-8
Rear seat	SE-133	Stabilizer bar (front)	FSU-14
Rear seat belt	SB-6	Stabilizer bar (rear)	RSU-15
Rear suspension	RSU-5	Stall test (A/T)	AT-52
Rear window	GW-13	Standardized relay	PG-60
Rear window defogger	GW-60	START - Wiring diagram	SC-10
Refrigerant connection precaution	ATC-5	Start signal	EC-670
Refrigerant discharging evacuating charging	ATC-134	Starter	SC-9
Refrigerant general precaution	ATC-5	Starting system	SC-9
Refrigerant lines	ATC-134	Steering gear and linkage inspection	MA-25
Refrigerant pressure sensor	EC-680 , ATC-86 , ATC-143	Steering linkage	PS-13
Refrigeration cycle	ATC-16	Steering wheel and column	PS-7 , PS-9
Relay block	PG-64	Steering wheel turning force	PS-7
REMOTE - Wiring diagram	AV-15	Step lamp	LT-154
Remote keyless entry system	BL-51	STEP/L - Wiring diagram	LT-157
Removal and installation (A/T)	AT-331	Stop lamp	LT-104
Reverse interlock door mirror	GW-78	Stop lamp switch	EC-610
Revolution sensor (A/T)	AT-116 , AT-319	STOP/L - Wiring diagram	LT-104
Ring gear diff. inspection	RFD-13	Strut (rear)	RSU-9
Rocker cover	EM-36	Sun roof, electric	RF-10
Roof trim	EI-40	Sunload sensor	ATC-106 , ATC-117
Room lamp	LT-128 , LT-152	Sunroof	RF-22
Room lamp - See Interior lamp	LT-128	Supplemental Restraint System	SRS-6
ROOM/L - Wiring diagram	LT-133	Suspension	MA-26
RP/SEN - Wiring diagram	EC-681	Symbols and abbreviations	GI-9 , GI-22

S

S/SIG - Wiring diagram	EC-671
SEAT - Wiring diagram	SE-94
Seat belt inspection	SB-7
Seat belt pre-tensioner disposal	SRS-52
Seat belt, front	SB-4
Seat belt, rear	SB-6
Seat, front	SE-127
Seat, rear	SE-133
SEN/PW - Wiring diagram	EC-532
Sheft warning system	BL-126
SHIFT - Wiring diagram	AT-307
Shift change signal	EC-608
Shift lock system	AT-306
Shift schedule	AT-62 , AT-397
Shock absorber (adjustable, rear)	RSU-9
Shock absorber (rear)	RSU-9
Side air bag (satellite) sensor	SRS-49
Side bearing preload diff.	RFD-20
Side curtain air bag	SRS-46
Side flange installation diff.	RFD-9
Side trim	EI-34
SMJ (super multiple junction)	PG-58

T

Tachometer	DI-6
Tail lamp	LT-108
TAIL/L - Wiring diagram	LT-111
TCM circuit diagram	AT-51
TCM inspection table	AT-86
THEFT - Wiring diagram	BL-131
Thermostat	CO-24
Three way catalyst	EM-22
Three way catalyst function (Bank 1)	EC-322
Three way catalyst function (Bank 2)	EC-322
Three way catalyst precautions	GI-5
Throttle control motor relay	EC-449
Throttle position sensor (TPS)	EC-199 , EC-292 , EC-527 , EC-529 , EC-531 , EC-627
Throttle position switch	AT-250
Throttle valve closed position learning	EC-44
Tie-rod	PS-13
Timing chain	EM-38
Tire rotation	MA-23
TLID - Wiring diagram	BL-118
Tooth contact diff.	RFD-25

A
B
C
D
E
F
G
H
I
J
K

IDX

L

ALPHABETICAL INDEX

Top tether strap child restraint	SB-11	Wheel hub (rear)	RAX-6
Torque converter installation	AT-333	Wheel sensor (VDC)	BRC-63
Torque converter clutch solenoid valve	AT-123 , AT-128	WINDOW - Wiring diagram	GW-21
TPS1 - Wiring diagram	EC-294	Window antenna	AV-35
TPS2 - Wiring diagram	EC-201	Window, door	GW-47 , GW-53
TPS3 - Wiring diagram	EC-629	Window, rear	GW-13
TRANSMT - Wiring diagram	BL-192	Windshield	GW-11
Trim	EI-34	Windshield wiper - See Front wiper	WW-4
Trouble diagnoses	GI-10	WIPER - Wiring diagram	WW-8
Trunk lid	BL-113	Wiper and washer	WW-4
Trunk lid finisher	EI-42	Wiper, front	WW-4
Trunk lid opener, electric	BL-54 , BL-117	Wiring Diagram (Cell code) list	PG-45
Trunk lid trim	EI-42	Wiring diagrams	GI-14
Trunk room lamp	LT-187	WT-T/WARN - Wiring diagram	WT-10
Trunk room trim	EI-42		
Turbine revolution sensor	AT-160		
TURN - Wiring diagram	LT-93		
Turn signal lamp	LT-89		
Two trip detection logic	EC-49		

V

VACS (voice activated control system)	DI-137
Vacuum cut valve	EC-590
Vacuum cut valve bypass valve	EC-584 , EC-590 , EC-695
Vacuum hose (brake system)	BR-22
Vacuum hose drawing (Engine control)	EC-24
Valve clearance	EM-55
Valve guide	EM-71
Valve lifter	EM-52
Valve seat	EM-73
Valve spring	EM-74
Vanity mirror lamp	LT-187
Variable induction air control system (VIAS) ...	EC-641
VDC -Wiring diagram	BRC-16
Vehicle security (theft warning) system	BL-126
Vehicle speed sensor (VSS)	EC-399 , EC-606
VEHSEC - Wiring diagram	BL-131
VENT/V - Wiring diagram ...	EC-350 , EC-554 , EC-561
VIAS - Wiring diagram	EC-643
Vice activated control system (VACS)	DI-137
VOICE - Wiring diagram	DI-140

W

W/ANT - Wiring diagram	AV-34
WARN - Wiring diagram	DI-29
Warning chime	DI-46
Warning lamps	DI-25
Water control valve	CO-24
Water pump	CO-22
Water temperature gauge	DI-6
Wheel alignment (front)	FSU-6
Wheel alignment (rear)	RSU-5
Wheel balance	WT-5 , MA-22
Wheel bearing (front)	FAX-4
Wheel bearing (rear)	RAX-6
Wheel hub (front)	FAX-4