

**SECTION IDX
ALPHABETICAL INDEX**

A

B

C

D

E

F

G

H

I

J

K

L

IDX

ALPHABETICAL INDEX

A

A/C air flow [ATC-37](#)
 A/C component layout [ATC-25](#)
 A/C compressor mounting [ATC-155](#), [ATC-158](#),
[ATC-159](#), [ATC-160](#), [ATC-162](#), [ATC-164](#), [ATC-165](#),
[ATC-167](#), [ATC-168](#), [ATC-169](#)
 A/C compressor precaution [ATC-12](#)
 A/C compressor special service tool [ATC-16](#)
 A/C control operation (auto A/C) [ATC-33](#)
 A/C diagnostic work flow (auto A/C) [ATC-111](#)
 A/C evaporator [ATC-168](#)
 A/C HFC134a (R134a) system precaution [ATC-6](#)
 A/C HFC134a (R134a) system service procedure
[ATC-151](#)
 A/C HFC134a (R134a) system service tools ... [ATC-17](#)
 A/C HFC134a system service equipment precaution ...
[ATC-13](#)
 A/C lubricant (R134a) [ATC-26](#)
 A/C lubrication oil [ATC-174](#)
 A/C operational check [ATC-64](#)
 A/C self-diagnoses (auto A/C) [ATC-55](#), [ATC-111](#)
 A/C service data specification [ATC-174](#)
 A/C system description (auto A/C) [ATC-29](#)
 A/C trouble diagnoses (auto A/C) [ATC-40](#)
 A/C, A - Wiring diagram [ATC-46](#)
 A/T fluid checking [AT-13](#), [AT-53](#), [MA-29](#)
 A/T fluid cooler cleaning [AT-14](#)
 A/T fluid replacement [AT-12](#), [MA-31](#)
 A/T fluid temperature sensor [AT-135](#)
 A/T IND - Wiring diagram [DI-57](#)
 A/T self-diagnoses [AT-92](#), [AT-103](#)
 A/T shift lock system [AT-229](#)
 A/T shift lock system - Wiring diagram [AT-230](#)
 A/T trouble diagnoses [AT-44](#)
 Accelerator control system [ACC-3](#)
 Accelerator pedal position (APP) sensor [EC-626](#),
[EC-633](#), [EC-647](#), [EC-1358](#), [EC-1365](#), [EC-1379](#)
 Accelerator pedal released position learning [EC-95](#),
[EC-806](#)
 AF1B1-Wiring diagram [EC-249](#), [EC-258](#), [EC-267](#),
[EC-277](#), [EC-657](#), [EC-972](#), [EC-981](#), [EC-990](#), [EC-1000](#),
[EC-1389](#)
 AF1B2-Wiring diagram [EC-251](#), [EC-260](#), [EC-269](#),
[EC-279](#), [EC-659](#), [EC-974](#), [EC-983](#), [EC-992](#), [EC-1002](#),
[EC-1391](#)
 AF1HB1-Wiring diagram [EC-183](#), [EC-905](#)
 AF1HB2-Wiring diagram [EC-185](#), [EC-907](#)
 Air bag [SRS-3](#)
 Air bag precautions [SRS-3](#)
 Air cleaner and air duct(VK45DE) [EM-177](#)
 Air cleaner and air duct(VQ35DE) [EM-17](#)
 Air cleaner filter replacement [MA-25](#)
 Air cleaner filter replacement(VQ35DE) [MA-18](#)
 Air cleaner filter(VQ35DE) [EM-18](#)
 Air conditioner cut control [EC-35](#), [EC-745](#)
 Air flow meter - See Mass air flow sensor [EC-205](#),
[EC-214](#), [EC-927](#), [EC-936](#)
 Air fuel ratio sensor 1 [EC-246](#), [EC-256](#), [EC-265](#)

[EC-274](#), [EC-655](#), [EC-969](#), [EC-979](#), [EC-988](#), [EC-997](#),
[EC-1387](#)
 Air fuel ratio sensor 1 heater [EC-182](#), [EC-904](#)
 Air mix. door motor [ATC-83](#), [ATC-141](#)
 Alternator [SC-23](#)
 Ambient sensor [ATC-113](#), [ATC-126](#)
 Angular tightening application [EM-6](#)
 Angular tightening application(VK45DE) [EM-164](#)
 APPS1 - Wiring diagram [EC-628](#), [EC-1360](#)
 APPS2 - Wiring diagram [EC-635](#), [EC-1367](#)
 APPS3 - Wiring diagram [EC-649](#), [EC-1381](#)
 ASC/BS - Wiring diagram [EC-587](#), [EC-1313](#)
 ASC/SW - Wiring diagram [EC-570](#), [EC-1296](#)
 ASCBOF - Wiring diagram [EC-708](#), [EC-1450](#)
 ASCD [EC-36](#), [EC-746](#)
 ASCD (automatic speed control device) [ACS-3](#)
 ASCIND - Wiring diagram [EC-715](#), [EC-1457](#)
 AT indicator lamp [DI-56](#)
 Auto air conditioner - Wiring diagram [ATC-46](#)
 Auto amp [ATC-125](#)
 Auto anti-dazzling inside mirror [GW-71](#), [GW-72](#)
 Automatic amplifier [ATC-53](#), [ATC-66](#), [ATC-125](#)
 Automatic transmission fluid replacement [MA-32](#)
 AWD - Wiring diagram [TF-17](#)
 Axle [MA-37](#)

B

Back-up lamp [LT-246](#)
 Basic inspection [EC-77](#), [EC-788](#)
 Battery [SC-4](#)
 Battery current sensor [EC-537](#), [EC-543](#), [EC-549](#),
[EC-555](#), [EC-1263](#), [EC-1269](#), [EC-1275](#), [EC-1281](#)
 Battery/Starting/Charging System Tester [SC-28](#)
 Battery/Starting/Charging System Tester(Battery) [SC-7](#)
 Battery/Starting/Charging System Tester(Starting
 system) [SC-13](#)
 BCM (Body control module) [BCS-3](#)
 Block heater(VK45DE) [EM-249](#)
 Block heater(VQ35DE) [EM-123](#)
 Blower motor [ATC-89](#), [ATC-132](#)
 Blower unit [ATC-130](#)
 Brake fluid level [MA-35](#)
 Brake hydraulic line [BR-12](#)
 Brake inspection [MA-36](#)
 Brake lines and cables inspection [MA-35](#)
 Brake pedal [BR-6](#)
 Brake switch [EC-598](#), [EC-1329](#)
 BRK/SW - Wiring diagram [EC-600](#), [EC-1331](#)
 Bulb specifications [LT-315](#)
 Bumper, front [EI-11](#)
 Bumper, rear [EI-14](#)

C

Camshaft inspection(VK45DE) [EM-216](#)
 Camshaft inspection(VQ35DE) [EM-86](#)
 Camshaft position sensor (PHASE) [EC-383](#), [EC-1106](#)
 Camshaft(VK45DE) [EM-215](#)

ALPHABETICAL INDEX

Camshaft(VQ35DE)	EM-84	EI-18
CAN	DI-77	
CAN - Wiring diagram	EC-174, EC-887, AT-106, LAN-50, LAN-91, LAN-132, LAN-179, LAN-226, LAN-277, LAN-323, LAN-369, LAN-419, LAN-469, LAN-523, LAN-566, LAN-609, LAN-658, LAN-707	EC-51, EC-761
CAN (Controller Area Network) ...	SB-5, BL-26, BL-60, BL-224, GW-19, GW-75, GW-97, SE-16	EC-376, EC-1099
CAN communication	EC-173, EC-176, EC-748, EC-886, EC-889, AT-32, AT-105, TF-13, TF-32, WT-12, SB-5, BL-26, BL-60, BL-224, GW-19, GW-75, GW-97, SE-16, WW-11	EM-250
Canister-See EVAP canister	EC-42, EC-752	EM-140
Center bearing assembly (propeller shaft)	PR-12	SRS-45
Center bearing disassembly (propeller shaft)	PR-11	
CHARGE - Wiring diagram	SC-25	
Charging system	SC-23	EM-235
Chassis and body maintenance	MA-29	EM-104
CHIME - Wiring diagram	DI-64	EM-233
CIGAR - Wiring diagram	WW-49	EM-101
Cigarette lighter	WW-49	EM-101
Circuit breaker	PG-17	EM-101
Clock	DI-108	EM-101
CLOCK - Wiring diagram	DI-108	EM-101
Closed loop control	EC-32, EC-742	EM-101
Closed loop control (Bank 1)	EC-509, EC-1236	EM-101
Closed loop control (Bank 2)	EC-509, EC-1236	EM-101
Collision diagnosis	SRS-50	EM-101
Combination lamp, front, removal and installation	LT-76	EM-101
Combination lamp, rear, removal and installation	LT-266	EM-101
Combination meter	DI-5	EM-101
COMPAS - Wiring diagram	DI-106	EM-101
Compass	DI-105	EM-101
Component Location (auto A/C)	ATC-42	EM-101
Compression pressure(VK45DE)	EM-233	EM-101
Compression pressure(VQ35DE)	EM-101	EM-101
Compressor special service tool	ATC-16	EM-101
Condenser	ATC-165	EM-101
Connecting rod bearing clearance(VK45DE) ..	EM-273	EM-101
Connecting rod bushing clearance	EM-142	EM-101
Connecting rod bushing clearance(VK45DE) ..	EM-268	EM-101
Connecting rod(VK45DE)	EM-268	EM-101
Connecting rod(VQ35DE)	EM-140	EM-101
CONSULT-II Reference value (A/T)	AT-90	EM-101
Control units (terminal arrangement)	PG-104	EM-101
Control valve (A/T)	AT-38	EM-101
Controller Area Network (CAN) ...	SB-5, BL-26, BL-60, BL-224, GW-19, GW-75, GW-97, SE-16	EC-493, EC-1212
Converter housing installation	AT-274, AT-277	EC-228, EC-950
COOL/F - Wiring diagram	EC-515, EC-1242	RF-10
Coolant replacement(VQ35DE)	MA-15	EC-613, EC-624, EC-1344, EC-1356
Cooling circuit (engine)(VK45DE)	CO-38	EM-179
Cooling circuit (engine)(VQ35DE)	CO-9	EM-19
Cooling fan motor	EC-524, EC-1249, EC-1250	EC-697, EC-1439
Cooling fan(VK45DE)	CO-51	PG-104
Cooling fan(VQ35DE)	CO-22	PG-96
Cowl top	EI-18	
Cowl top cover		EI-18
Crankcase ventilation system - See Positive crankcase ventilation		EC-51, EC-761
Crankshaft position sensor (POS) ...	EC-376, EC-1099	
Crankshaft(VK45DE)		EM-250
Crankshaft(VQ35DE)		EM-140
Crash zone sensor		SRS-45
CUR/SE - Wiring diagram ..	EC-539, EC-545, EC-551, EC-557, EC-1265, EC-1271, EC-1277, EC-1283	
Cylinder block boring(VK45DE)		EM-271
Cylinder block(VK45DE)		EM-249
Cylinder block(VQ35DE)		EM-123
Cylinder head bolt tightening(VK45DE)		EM-235
Cylinder head bolt tightening(VQ35DE)		EM-104
Cylinder head(VK45DE)		EM-233
Cylinder head(VQ35DE)		EM-101
D		
D/LOCK - Wiring diagram		BL-28
Daytime light system		LT-79
Daytime running light - See Daytime light system		LT-79
DEF - Wiring diagram		SB-7, SE-118
Diagnosis sensor unit		SRS-48
Diagnostic trouble code (DTC) for OBD system	EC-16, EC-58, EC-726, EC-769	
Direct clutch solenoid valve		AT-155, AT-157
Display and amp.assembly		ATC-53, ATC-66
Door glass		GW-63, GW-67
Door glass Fitting Adjustment(Front)		GW-66
Door glass Fitting Adjustment(Rear)		GW-70
Door lock		BL-196
Door mirror		GW-120
Door trim		EI-34
Door, front		BL-190, GW-63
Door, rear		BL-190, GW-67
Drive belt inspection		MA-22
Drive belt inspection(VQ35DE)		MA-14
Drive belt(VK45DE)		EM-174
Drive belt(VQ35DE)		EM-15
Drive shaft		MA-38
Drive shaft (rear)		RAX-8
Driver air bag		SRS-38
DTRL - Wiring diagram		LT-84
Duct and grilles		ATC-144
E		
ECM power supply	EC-166, EC-492, EC-879, EC-1211	
ECM/PW - Wiring diagram		EC-493, EC-1212
ECTS - Wiring diagram		EC-228, EC-950
Electric sunroof		RF-10
Electric throttle control actuator		EC-613, EC-624, EC-1344, EC-1356
Electric throttle control actuator (VK45DE)		EM-179
Electric throttle control actuator (VQ35DE)		EM-19
Electrical load signal circuit		EC-697, EC-1439
Electrical unit		PG-104
Electrical units location		PG-96

A

B

C

D

E

F

G

H

I

J

K

L

IDX

ALPHABETICAL INDEX

Electronic ignition (EI) system	EC-33 , EC-743	Front wiper	WW-4
Engine control module (ECM)	EC-496 , EC-1215	FTS - Wiring diagram	AT-136
Engine control system diagram	EC-30 , EC-740	FTTS - Wiring diagram	EC-345 , EC-350 , EC-1068 , EC-1073
Engine coolant temperature sensor (ECTS) ...	EC-226 , EC-238 , EC-948 , EC-961	Fuel cut control (at no load high engine speed)	EC-34 , EC-744
Engine coolant(VK45DE)	CO-40	Fuel filter replacement	FL-4
Engine coolant(VQ35DE)	CO-11	Fuel gauge	DI-5
Engine oil filter replacement	MA-26	Fuel injection system (Bank 1)	EC-321 , EC-332 , EC-1044 , EC-1055
Engine oil filter replacement(VQ35DE)	MA-19	Fuel injection system (Bank 2)	EC-321 , EC-332 , EC-1044 , EC-1055
Engine oil precautions	GI-8	Fuel injector	EC-1420
Engine oil replacement(VQ35DE)	MA-18	Fuel injector and fuel tube(VK45DE)	EM-193
Engine oil(VK45DE)	LU-26	Fuel injector and fuel tube(VQ35DE)	EM-45
Engine oil(VQ35DE)	LU-7	Fuel level sensor	EC-475 , EC-477 , EC-479 , EC-1194 , EC-1196 , EC-1198
Engine removal(VK45DE)	EM-244	Fuel line inspection	FL-3 , MA-25
Engine removal(VQ35DE)	EM-113	Fuel line inspection(VQ35DE)	MA-18
Engine room cover	EM-14	Fuel precautions	GI-6
Engine room cover(VK45DE)	EM-173	Fuel pressure check	EC-98 , EC-809
ETC1 - Wiring diagram	EC-614 , EC-1345	Fuel pressure release	EC-98 , EC-809
ETC2 - Wiring diagram	EC-609 , EC-1340	Fuel pump	EC-685 , EC-1427
ETC3 - Wiring diagram	EC-620 , EC-1352	Fuel pump and gauge	FL-4
EVAP canister	EC-42 , EC-752	Fuel pump control module	EC-525 , EC-1251
EVAP canister purge volume control solenoid valve	EC-412 , EC-420 , EC-1132 , EC-1140	Fuel pump dropping resistor	EC-525 , EC-1251
EVAP canister vent control valve	EC-427 , EC-434 , EC-1147 , EC-1154	Fuel system	FL-3
EVAP control system (small leak) diagnosis ..	EC-403 , EC-466 , EC-1124 , EC-1185	Fuel tank	FL-10
EVAP control system pressure sensor	EC-440 , EC-443 , EC-450 , EC-1160 , EC-1163 , EC-1170	Fuel tank temperature sensor	EC-343 , EC-349 , EC-1066 , EC-1072
EVAP control system purge flow monitoring diagnosis	EC-398 , EC-1119	Fuel tank vacuum relief valve	EC-42 , EC-752
EVAP vapor lines inspection	MA-21 , MA-28	FUELB1 - Wiring diagram	EC-323 , EC-334 , EC-1046 , EC-1057
Evaporative emission (EVAP) system .	EC-39 , EC-749	FUELB2 - Wiring diagram	EC-325 , EC-336 , EC-1048 , EC-1059
Evaporator	ATC-168	Fuse	PG-17
Exhaust manifold(VK45DE)	EM-183	Fuse and fusible link box	PG-112
Exhaust system	EX-3	Fusible link	PG-17
Exhaust system inspection	EX-3 , MA-29		
Expansion valve	ATC-169		

F

F/FOG - Wiring diagram	LT-197
F/PUMP - Wiring diagram	EC-686 , EC-1428
Final drive pre-inspection	FFD-16 , RFD-19
Final drive removal and installation ..	FFD-13 , RFD-16
Floor trim	EI-50
Flow charts	GI-28
Fluid temperature sensor (A/T)	AT-135
Fluorescent leak detector	ATC-170
FPCM - Wiring diagram	EC-527 , EC-1253
Freeze frame data	EC-59 , EC-770
Front brake solenoid valve	AT-151 , AT-153
Front bumper	EI-11
Front combination lamp removal and installation	LT-76
Front door	BL-190 , BL-196 , GW-63
Front passenger air bag	SRS-42
Front seat belt	SB-30
Front seat belt pre-tensioner	SB-2 , SRS-3 , SRS-47
Front washer	WW-4

G

Gauges	DI-5
Generator	SC-23
Generator - See Alternator	SC-23
Glass	GW-11 , GW-61 , GW-63 , GW-67
Grille - See Exterior	EI-16
Ground distribution	PG-46

H

H/LAMP - Wiring diagram	LT-13 , LT-48
Harness connector	PG-102
Harness layout	PG-63
Hazard warning lamp	LT-211
Headlamp removal and installation	LT-76
Headlining - See Roof trim	EI-52
Heated oxygen sensor 2 (bank 1)	EC-286 , EC-297 , EC-310 , EC-1009 , EC-1020 , EC-1033
Heated oxygen sensor 2 (bank 2)	EC-286 , EC-297 ,

ALPHABETICAL INDEX

[EC-310](#), [EC-1009](#), [EC-1020](#), [EC-1033](#)
Heated oxygen sensor 2 heater (bank 1) [EC-189](#),
[EC-911](#)
Heated oxygen sensor 2 heater (bank 2) [EC-189](#),
[EC-911](#)
Heated seat [SE-143](#)
Heater and cooling unit (Heater core) [ATC-135](#)
HFC134a (R134a) system precaution [ATC-6](#)
HFC134a (R134a) system service procedure [ATC-151](#)
HFC134a (R134a) system service tools [ATC-17](#)
HFC134a system service equipment precaution
[ATC-13](#)
High and low reverse clutch solenoid valve [AT-159](#),
[AT-161](#)
Hood [BL-15](#)
Horn [WW-53](#)
HORN - Wiring diagram [WW-53](#)
How to erase DTC for OBD system [EC-67](#), [EC-778](#)
HSEAT - Wiring diagram [SE-146](#)

I

IATS - Wiring diagram [EC-223](#), [EC-945](#)
ICC - Wiring diagram [ACS-21](#)
ICC/BS - Wiring diagram [EC-578](#), [EC-1304](#)
ICC/SW - Wiring diagram [EC-563](#), [EC-1289](#)
ICCBOF - Wiring diagram [EC-700](#), [EC-1442](#)
Idle air volume learning [EC-96](#), [EC-807](#)
Idle mixture ratio [EC-84](#), [EC-795](#)
Idle speed [EC-77](#), [EC-788](#), [EC-793](#)
Idle speed control (ISC) [EC-483](#), [EC-485](#), [EC-1202](#),
[EC-1204](#)
Ignition coil [EC-666](#), [EC-1407](#)
Ignition coil(VK45DE) [EM-190](#)
Ignition coil(VQ35DE) [EM-42](#)
Ignition control system [EC-666](#), [EC-1407](#)
Ignition timing [EC-77](#), [EC-788](#), [EC-793](#)
IGNSYS - Wiring diagram [EC-667](#), [EC-1408](#)
Illumination [LT-295](#)
Illumination control [LT-291](#), [LT-292](#), [LT-293](#)
In vehicle sensor [ATC-116](#), [ATC-127](#)
INJECT - Wiring diagram [EC-680](#), [EC-1421](#)
Injector [EC-679](#)
Input clutch solenoid valve [AT-147](#), [AT-149](#)
Instrument panel [IP-10](#)
Intake air temperature sensor [EC-221](#), [EC-241](#),
[EC-943](#), [EC-964](#)
Intake door control linkage adjustment [ATC-88](#)
Intake door motor [ATC-86](#), [ATC-133](#)
Intake manifold collector(VQ35DE) [EM-19](#)
Intake manifold(VK45DE) [EM-179](#)
Intake manifold(VQ35DE) [EM-24](#)
Intake sensor [ATC-122](#), [ATC-129](#)
Intake valve timing control (Bank 1) .. [EC-178](#), [EC-891](#)
Intake valve timing control (Bank 2) .. [EC-178](#), [EC-891](#)
Intake valve timing control position sensor (Bank 1)
[EC-1228](#)
Intake valve timing control position sensor (Bank 2)
[EC-1228](#)

Intake valve timing control solenoid valve (Bank 1)
[EC-197](#), [EC-920](#)
Intake valve timing control solenoid valve (Bank 2)
[EC-197](#), [EC-920](#)
Integrated homelink transmitter [BL-281](#)
Intelligent cruise control (ICC) system [ACS-6](#)
Interior [EI-37](#)
Interior lamp [LT-267](#)
IPDM (Intelligent power distribution module engine
room) [PG-18](#)
IVCB1 - Wiring diagram [EC-198](#), [EC-921](#)
IVCB2 - Wiring diagram [EC-200](#), [EC-923](#)
IVCSB1 - Wiring diagram [EC-1229](#)
IVCSB2 - Wiring diagram [EC-1231](#)
IVIS (Infiniti vehicle immobilizer system) precautions ...
[GI-3](#)
IVTB1 - Wiring diagram [EC-894](#)
IVTB2 - Wiring diagram [EC-896](#)

K

Knock sensor (KS) [EC-371](#), [EC-1094](#)
KS - Wiring diagram [EC-372](#), [EC-1095](#)

L

LAN system circuit [ATC-70](#)
Lane Departure Warning System [DI-78](#)
Laser beam aiming adjustment [ACS-13](#)
Latch (lower anchors and tether for children) system ...
[SB-36](#)
LDW [DI-78](#)
LDW - Wiring Diagram [DI-89](#)
License lamp [LT-249](#)
Line pressure solenoid valve [AT-130](#)
Line pressure test (A/T) [AT-55](#)
Liquid gasket application [EM-7](#), [LU-22](#)
Liquid gasket application(VQ35DE) [LU-3](#), [CO-3](#)
Location of electrical units [PG-96](#)
Low coast brake solenoid valve [AT-163](#), [AT-165](#)
Low tire pressure warning system [WT-9](#)
Lubricant (R134a) A/C [ATC-26](#)
Lubrication circuit (engine)(VK45DE) [LU-24](#)
Lubrication circuit (engine)(VQ35DE) [LU-5](#)
Lubrication oil A/C [ATC-174](#)

M

MAFS - Wiring diagram [EC-208](#), [EC-216](#), [EC-930](#),
[EC-938](#)
Magnet clutch [ATC-94](#)
MAIN - Wiring diagram [EC-166](#), [EC-879](#), [AT-180](#)
Maintenance (engine)(VQ35DE) [MA-14](#)
Major overhaul (Final drive) [FFD-15](#), [RFD-18](#)
Major overhaul (Transfer) [TF-45](#)
Malfunction indicator lamp (MIL) [EC-69](#), [EC-780](#)
Manual mode switch [AT-167](#)
Mass air flow sensor (MAFS) [EC-205](#), [EC-214](#),
[EC-927](#), [EC-936](#)

A

B

C

D

E

G

H

K

L

IDX

ALPHABETICAL INDEX

Meter	DI-5	Overheat	EC-512, EC-1239
METER - Wiring diagram	DI-13	<hr/>	
MIL data link connectors circuit	EC-722, EC-1459	P	
MIL/DL - Wiring diagram	EC-722, EC-1459		
MIRROR - Wiring diagram	GW-99	P/SCKT - Wiring diagram	WW-51
Mirror, door	GW-120	Park/Neutral position switch	EC-504, EC-1223
Mirror, out side	GW-120	Park/neutral position switch (A/T)	AT-113
Misfire	EC-361, EC-1084	Parking brake control	PB-3
MMSW - Wiring diagram	AT-168	Parking lamp	LT-249
Mode door control linkage adjustment	ATC-79, ATC-82	PCV (positive crankcase ventilation) ..	EC-51, EC-761
Mode door motor	ATC-75, ATC-80, ATC-140	PGC/V - Wiring diagram ..	EC-414, EC-422, EC-1134, EC-1142
Molding - See Exterior	EI-25, EI-29	PHASE - Wiring diagram	EC-1108
Mud guard - See Exterior	EI-22	PHSB1 - Wiring diagram	EC-385
Multiport fuel injection (MFI) system	EC-31, EC-741	PHSB2 - Wiring diagram	EC-387
Multiport fuel injection precautions	GI-7	Pilot bushing replacement - See Pilot	
<hr/>			
N			
NATS - Wiring diagram	BL-256	converter(VQ35DE)	EM-124
NONDTC - Wiring diagram	AT-187	Piston assembly(VK45DE)	EM-260
NVH troubleshooting (EM)	EM-171	Piston assembly(VQ35DE)	EM-135
NVH troubleshooting (EM)(VQ35DE)	EM-12	Piston pin inspection(VK45DE)	EM-266
NVH troubleshooting (Final drive)	FFD-6, RFD-7	Piston pin inspection(VQ35DE)	EM-140
NVH troubleshooting (Propeller shaft)	PR-3	Piston ring inspection(VK45DE)	EM-267
NVH troubleshooting (Transfer)	TF-8	Piston ring inspection(VQ35DE)	EM-141
NVIS (Nissan vehicle immobilizer system) precautions		Piston to bore clearance(VK45DE)	EM-270
GI-3		Piston to bore clearance(VQ35DE)	EM-144
<hr/>			
O			
O2H2B1 - Wiring diagram	EC-191, EC-913	PNP/SW - Wiring diagram ..	EC-506, EC-1225, AT-114
O2H2B2 - Wiring diagram	EC-193, EC-915	POS - Wiring diagram	EC-378, EC-1101
O2S2B1 - Wiring diagram ..	EC-289, EC-300, EC-313,	POWER - Wiring diagram	PG-5
EC-1012, EC-1023, EC-1036		Power door mirror	BL-24
O2S2B2 - Wiring diagram ..	EC-291, EC-302, EC-315,	Power socket	WW-51
EC-1014, EC-1025, EC-1038		Power steering fluid level	PS-8, MA-37
Oil cooler (engine)(VQ35DE)	LU-14	Power steering gear	PS-18
Oil filter(VK45DE)	LU-29	Power steering hydraulic pressure	PS-29
Oil filter(VQ35DE)	LU-10	Power steering oil pump	PS-29
Oil pan (engine)(VK45DE)	EM-187	Power steering system bleeding	PS-8
Oil pan (engine)(VQ35DE)	EM-29	Power supply routing	PG-3
Oil pressure (engine)(VK45DE)	LU-26	Power window	GW-13
Oil pressure (engine)(VQ35DE)	LU-8	PRE/SE - Wiring diagram ..	EC-445, EC-452, EC-1165, EC-1172
Oil pressure relief valve (engine)(VQ35DE)	LU-6	Precations for Leak detection dye	ATC-15
Oil pump (A/T)	AT-318	Precautions (General)	GI-4
Oil pump (engine)(VK45DE)	LU-30	Pressure switch 1	AT-153, AT-172
Oil pump (engine)(VQ35DE)	LU-18	Pressure switch 2	AT-165
Oil pump regulator valve (engine)(VK45DE)	LU-30	Pressure switch 3	AT-149, AT-174
Oil pump regulator valve (engine)(VQ35DE)	LU-18	Pressure switch 5	AT-157, AT-176
Oil seal replacement (engine)(VK45DE)	EM-229	Pressure switch 6	AT-161, AT-178
Oil seal replacement (engine)(VQ35DE)	EM-98	Pressure test (A/T)	AT-55
Oil seal replacement (front of final drive)	FFD-9,	Propeller shaft	PR-4, PR-6
RFD-10		Propeller shaft on vehicle service	PR-4, PR-6
Oil seal replacement (side of final drive)	FFD-11,	Propeller shaft vibration	PR-4, PR-6
RFD-14		PS/SEN - Wiring diagram	EC-488, EC-1207
On board diagnostic system	EC-54, EC-764	<hr/>	
ORVR (On-board Refueling Vapor Recovery) ..	EC-46,	R	
EC-756		Radiator(VK45DE)	CO-43
Out side mirror	GW-120	Radiator(VQ35DE)	CO-14
		Rear axle	RAX-5
		Rear bumper	EI-14
		Rear combination lamp removal and installation	

ALPHABETICAL INDEX

LT-266	Starting system	SC-10
Rear disc brake	Steering gear and linkage inspection	MA-36
Rear door	Steering linkage	PS-18
Rear parcel shelf finisher	Steering wheel and column	PS-10 , PS-13
Rear seat	Steering wheel turning force	PS-10
Rear seat belt	Stop lamp	LT-243
Rear suspension	Stop lamp switch	EC-598 , EC-1329
Rear window	STSIG - Wiring diagram	AT-109
Rear window defogger	Sun roof, electric	RF-10
Refrigerant connection precaution	Sunload sensor	ATC-119 , ATC-128
Refrigerant discharging evacuating charging	Sunroof	RF-25 , RF-28
Refrigerant general precaution	Sunshade	EI-44
Refrigerant lines	Supplemental Restraint System	SRS-5
Refrigerant pressure sensor	Supplemental restraint system - Wiring diagram	SRS-12
ATC-98 , ATC-167	Suspension	MA-37
Refrigeration cycle	Symbols and abbreviations	GI-11 , GI-24
Removal and installation (A/T)	System readiness test (SRT) code	EC-60 , EC-770
Removal and installation (Transfer)		
Reverse interlock door mirror		
Revolution sensor (A/T)		
Rocker cover(VK45DE)		
Rocker cover(VQ35DE)		
Room lamp - See Interior lamp		
ROOM/L - Wiring diagram		
RP/SEN - Wiring diagram		
S		
SAE J1979 - Service \$01 - 09	EC-54 , EC-764	
SEAT - Wiring diagram	SE-98	
Seat belt inspection	SB-33	
Seat belt, front	SB-30	
Seat belt, rear	SB-32	
Seat, rear	SE-172	
Self-diagnosis (Transfer)	TF-22	
SEN/PW - Wiring diagram	EC-500 , EC-1219	
SHIFT - Wiring diagram	AT-230	
Shift lock system	AT-229	
Shock absorber (rear)	RSU-10	
Side air bag (satellite) sensor	SRS-46	
Side curtain air bag	SRS-43	
Side trim	EI-37	
SMJ (super multiple junction)	PG-106	
Spark plug replacement	MA-27	
Spark plug replacement(VQ35DE)	MA-20	
Spark plug(VK45DE)	EM-191	
Spark plug(VQ35DE)	EM-43	
Specification value	EC-155 , EC-868	
Speedometer	DI-5	
Spiral cable	SRS-40	
SROOF - Wiring diagram	RF-13	
SRS - See Supplemental Restraint System	SRS-5	
SRS - Wiring diagram	SRS-12	
SRS Trouble diagnoses	SRS-8	
Stabilizer bar (rear)	RSU-17	
Stall test (A/T)	AT-53	
Standardized relay	PG-109	
START - Wiring diagram	SC-11	
Starter	SC-10	
T		
Tachometer	DI-5	
Tail lamp	LT-249	
TCM circuit diagram	AT-52	
TCM inspection table	AT-89	
Thermostat(VK45DE)	CO-55	
Thermostat(VQ35DE)	CO-29	
Three way catalyst function (Bank 1)	EC-392 , EC-1113	
Three way catalyst function (Bank 2)	EC-392 , EC-1113	
Three way catalyst precautions	GI-6	
Three way catalyst(VK45DE)	EM-183	
Throttle control motor	EC-619 , EC-1351	
Throttle control motor relay	EC-607 , EC-1338	
Throttle position sensor (TPS)	EC-231 , EC-354 , EC-533 , EC-535 , EC-640 , EC-954 , EC-1077 , EC-1259 , EC-1261 , EC-1372	
Throttle valve closed position learning	EC-95 , EC-806	
Tie-rod	PS-18	
Timing chain(VK45DE)	EM-203	
Timing chain(VQ35DE)	EM-64	
Tire rotation	MA-35	
TLID - Wiring diagram	BL-211	
Top tether strap child restraint	SB-37	
Torque converter installation	AT-274 , AT-277	
Torque convertor clutch solenoid valve	AT-126 , AT-128	
TPS1 - Wiring diagram	EC-356 , EC-1079	
TPS2 - Wiring diagram	EC-233 , EC-956	
TPS3 - Wiring diagram	EC-642 , EC-1374	
Transfer control unit inspection table	TF-20	
TRNSCV - Wiring diagram	BL-281	
Trouble diagnoses	GI-12	
Trunk lid	BL-203	
Trunk lid opener - See Trunk lid	BL-209	
TURN - Wiring diagram	LT-215	
Turn signal lamp	LT-211	
Two trip detection logic	EC-54 , EC-764	
Tyre pressure monitoring system - trouble diagnoses ..	WT-13	

A
B
C
D
E
F
G
H
I
J
K
L

IDX

ALPHABETICAL INDEX

U

- Unified meter and A/C amp. [DI-28](#)
Upper link (front susp.) [FSU-16](#), [FSU-33](#)

V

- Vacuum hose (brake system) [BR-21](#)
Valve clearance(VK45DE) [EM-222](#)
Valve clearance(VQ35DE) [EM-93](#)
Valve guide [EM-108](#)
Valve guide(VK45DE) [EM-240](#)
Valve lifter [EM-88](#)
Valve seat(VK45DE) [EM-242](#)
Valve seat(VQ35DE) [EM-110](#)
Valve spring(VK45DE) [EM-243](#)
Valve spring(VQ35DE) [EM-111](#)
Variable induction air control system (VIAS) [EC-1324](#),
[EC-1398](#)
Vehicle security (theft warning) system [BL-220](#)
Vehicle speed sensor (VSS) [EC-481](#), [EC-597](#),
[EC-1200](#)
VEHSEC - Wiring diagram [BL-226](#)
VENT/V - Wiring diagram [EC-429](#), [EC-436](#), [EC-1149](#),
[EC-1156](#)
VIAS - Wiring diagram [EC-1400](#)
VIAS/V - Wiring diagram [EC-1325](#)
VIN registration [EC-95](#), [EC-806](#)
VSS A/T - Wiring diagram [AT-121](#)

W

- WARN - Wiring diagram [DI-43](#)
Warning chime [DI-60](#)
Warning lamps [DI-40](#)
Washer, front [WW-4](#)
Water control valve(VK45DE) [CO-55](#)
Water pump(VK45DE) [CO-53](#)
Water pump(VQ35DE) [CO-24](#)
Water temperature gauge [DI-5](#)
Wheel alignment (front) [FSU-6](#), [FSU-23](#)
Wheel alignment (rear) [RSU-5](#)
Wheel balance [WT-7](#), [MA-33](#)
Wheel bearing (rear) [RAX-5](#)
Wheel hub (rear) [RAX-5](#)
Wheel sensor (VDC) [BRC-57](#)
WINDOW - Wiring diagram [GW-21](#)
Window, door [GW-63](#), [GW-67](#)
Window, rear [GW-61](#)
Windshield [GW-11](#)
WIPER - Wiring diagram [WW-13](#)
Wiper, front [WW-4](#)
Wiring Diagram (Cell code) list [PG-93](#)
Wiring diagrams [GI-16](#)