

**SECTION IDX
ALPHABETICAL INDEX**

A

B

C

D

E

F

G

H

I

J

K

L

IDX

ALPHABETICAL INDEX

Symbols	
(VK45DE)	GI-6
(VQ35DE)	GI-6
A	
A/C air flow	ATC-37
A/C component layout	ATC-25
A/C compressor mounting	ATC-153, ATC-157, ATC-158, ATC-159, ATC-161, ATC-163, ATC-164, ATC-166, ATC-167, ATC-168
A/C compressor precaution	ATC-12
A/C compressor special service tool	ATC-16
A/C control operation (auto A/C)	ATC-33
A/C diagnostic work flow (auto A/C)	ATC-110
A/C evaporator	ATC-167
A/C HFC134a (R134a) system precaution	ATC-6
A/C HFC134a (R134a) system service procedure	ATC-150
A/C HFC134a (R134a) system service tools ...	ATC-17
A/C HFC134a system service equipment precaution ...	ATC-13
A/C lubricant (R134a)	ATC-26
A/C lubrication oil	ATC-173
A/C operational check	ATC-65
A/C self-diagnoses (auto A/C)	ATC-56, ATC-110
A/C service data specification	ATC-173
A/C system description (auto A/C)	ATC-29
A/C trouble diagnoses (auto A/C)	ATC-40
A/C, A - Wiring diagram	ATC-46
A/T fluid checking	AT-13, AT-53, MA-29
A/T fluid cooler cleaning	AT-14
A/T fluid replacement	AT-12, MA-31
A/T fluid temperature sensor	AT-135
A/T IND - Wiring diagram	DI-56
A/T self-diagnoses	AT-92, AT-103
A/T shift lock system	AT-229
A/T shift lock system - Wiring diagram	AT-230
A/T trouble diagnoses	AT-44
Accelerator control system	ACC-3
Accelerator pedal position (APP) sensor	EC-617, EC-624, EC-638, EC-1336, EC-1343, EC-1357
Accelerator pedal released position learning	EC-86, EC-788
AF1B1-Wiring diagram	EC-237, EC-246, EC-255, EC-265, EC-648, EC-950, EC-959, EC-968, EC-978, EC-1367
AF1B2-Wiring diagram	EC-239, EC-248, EC-257, EC-267, EC-650, EC-952, EC-961, EC-970, EC-980, EC-1369
AF1HB1-Wiring diagram	EC-171, EC-884
AF1HB2-Wiring diagram	EC-173, EC-886
Air bag	SRS-3
Air bag precautions	SRS-3
Air cleaner and air duct(VK45DE)	EM-177
Air cleaner and air duct(VQ35DE)	EM-19
Air cleaner filter replacement	MA-25
Air cleaner filter replacement(VQ35DE)	MA-18
Air cleaner filter(VQ35DE)	EM-20
Air conditioner cut control	EC-35, EC-737
Air flow meter - See Mass air flow sensor	EC-193, EC-202, EC-906, EC-915
Air fuel ratio sensor 1	EC-234, EC-244, EC-253, EC-262, EC-646, EC-947, EC-957, EC-966, EC-975, EC-1365
Air fuel ratio sensor 1 heater	EC-170, EC-883
Air mix. door motor	ATC-82, ATC-140
Ambient sensor	ATC-112, ATC-125
Angular tightening application	EM-7
Angular tightening application(VK45DE)	EM-165
APPS1 - Wiring diagram	EC-619, EC-1338
APPS2 - Wiring diagram	EC-626, EC-1345
APPS3 - Wiring diagram	EC-640, EC-1359
ASC/BS - Wiring diagram	EC-578, EC-1291
ASC/SW - Wiring diagram	EC-561, EC-1274
ASCBOF - Wiring diagram	EC-658, EC-1378
ASCD	EC-36, EC-738
ASCD (automatic speed control device)	ACS-3
ASCIND - Wiring diagram	EC-665, EC-1385
AT indicator lamp	DI-55
Auto air conditioner - Wiring diagram	ATC-46
Auto amp	ATC-124
Auto anti-dazzling inside mirror	GW-69, GW-70
Automatic amplifier	ATC-54, ATC-67, ATC-124
Automatic transmission fluid replacement	MA-32
AWD - Wiring diagram	TF-17
Axle	MA-37
B	
Back-up lamp	LT-245
Basic inspection	EC-78, EC-780
Battery	SC-4
Battery current sensor	EC-524, EC-531, EC-538, EC-545, EC-1237, EC-1244, EC-1251, EC-1258
Battery/Starting/Charging System Tester	SC-7, SC-11, SC-25
BCM (Body control module)	BCS-3
Block heater(VK45DE)	EM-252
Block heater(VQ35DE)	EM-124
Blower motor	ATC-88, ATC-131
Blower unit	ATC-129
Brake fluid level	MA-35
Brake hydraulic line	BR-11
Brake inspection	MA-36
Brake lines and cables inspection	MA-35
Brake pedal	BR-6
Brake switch	EC-589, EC-1307
BRK/SW - Wiring diagram	EC-591, EC-1309
Bulb specifications	LT-313
Bumper, front	EI-11
Bumper, rear	EI-14
C	
Camshaft inspection(VK45DE)	EM-217
Camshaft inspection(VQ35DE)	EM-87

ALPHABETICAL INDEX

Camshaft position sensor (PHASE)	EC-371 , EC-1082	A
Camshaft(VK45DE)	EM-215	
Camshaft(VQ35DE)	EM-85	B
CAN	DI-109	
CAN - Wiring diagram	EC-162 , EC-866 , AT-106	
CAN (Controller Area Network) ...	SB-5 , BL-26 , BL-59 , BL-221 , GW-19 , GW-73 , GW-95 , SE-16	
CAN communication	EC-161 , EC-164 , EC-740 , EC-865 , EC-868 , AT-32 , AT-105 , TF-13 , TF-32 , SB-5 , BL-26 , BL-59 , BL-221 , GW-19 , GW-73 , GW-95 , SE-16 , WW-11	
Canister-See EVAP canister	EC-42 , EC-744	
Center bearing assembly (propeller shaft)	PR-12	
Center bearing disassembly (propeller shaft)	PR-11	
CHARGE - Wiring diagram	SC-22	
Charging system	SC-20	
Chassis and body maintenance	MA-29	
CHIME - Wiring diagram	DI-63	
CIGAR - Wiring diagram	WW-50	
Cigarette lighter	WW-50	
Circuit breaker	PG-17	
Clock	DI-107	
CLOCK - Wiring diagram	DI-107	
Closed loop control	EC-32 , EC-734	
Closed loop control (Bank 1)	EC-496 , EC-1211	
Closed loop control (Bank 2)	EC-496 , EC-1211	
Collision diagnosis	SRS-54	
Combination lamp, front, removal and installation	LT-75	
Combination lamp, rear, removal and installation	LT-265	
Combination meter	DI-5	
COMPAS - Wiring diagram	DI-105	
Compass	DI-102	
Component Location (auto A/C)	ATC-42	
Compression pressure(VK45DE)	EM-235	
Compression pressure(VQ35DE)	EM-102	
Compressor special service tool	ATC-16	
Condenser	ATC-164	
Connecting rod bearing clearance(VK45DE) ..	EM-275	
Connecting rod bushing clearance	EM-143	
Connecting rod bushing clearance(VK45DE) ..	EM-271	
Connecting rod(VK45DE)	EM-271	
Connecting rod(VQ35DE)	EM-141	
CONSULT-II Reference value (A/T)	AT-90	
Control units (terminal arrangement)	PG-107	
Control valve (A/T)	AT-38	
Controller Area Network (CAN) ...	SB-5 , BL-26 , BL-59 , BL-221 , GW-19 , GW-73 , GW-95 , SE-16	
Converter housing installation	AT-277 , AT-280	
COOL/F - Wiring diagram	EC-502 , EC-1217	
Coolant replacement(VQ35DE)	MA-15	
Cooling circuit (engine)(VK45DE)	CO-38	
Cooling circuit (engine)(VQ35DE)	CO-9	
Cooling fan motor	EC-509 , EC-1224	
Cooling fan(VK45DE)	CO-51	
Cooling fan(VQ35DE)	CO-22	
Cowl top	EI-18	
Cowl top cover	EI-18	
Crankcase ventilation system - See Positive crankcase ventilation	EC-51 , EC-753	
Crankshaft position sensor (POS) ...	EC-364 , EC-1075	
Crankshaft(VK45DE)	EM-253	
Crankshaft(VQ35DE)	EM-141	
Crash zone sensor	SRS-49	
CUR/SE - Wiring diagram ..	EC-526 , EC-533 , EC-540 , EC-547 , EC-1239 , EC-1246 , EC-1253 , EC-1260	
Cylinder block boring(VK45DE)	EM-274	
Cylinder block(VK45DE)	EM-252	
Cylinder block(VQ35DE)	EM-124	
Cylinder head bolt tightening(VK45DE)	EM-237	
Cylinder head bolt tightening(VQ35DE)	EM-105	
Cylinder head(VK45DE)	EM-235	
Cylinder head(VQ35DE)	EM-102	
D		
D/LOCK - Wiring diagram	BL-28	
Daytime light system	LT-78	
Daytime running light - See Daytime light system	LT-78	
DEF - Wiring diagram	SB-7 , SE-119	
Diagnosis sensor unit	SRS-52	
Diagnostic trouble code (DTC) for OBD system	EC-16 , EC-59 , EC-718 , EC-761	
Direct clutch solenoid valve	AT-155 , AT-157	
Display and amp.assembly	ATC-54 , ATC-67	
Door glass	GW-61 , GW-65	
Door glass Fitting Adjustment(Front)	GW-64	
Door glass Fitting Adjustment(Rear)	GW-68	
Door lock	BL-194	
Door mirror	GW-118	
Door trim	EI-34	
Door, front	BL-188 , GW-61	
Door, rear	BL-188 , GW-65	
Drive belt inspection	MA-22	
Drive belt(VK45DE)	EM-174	
Drive belt(VQ35DE)	EM-16	
Drive shaft	MA-38	
Drive shaft (rear)	RAX-8	
Driver air bag	SRS-42	
DTRL - Wiring diagram	LT-83	
Duct and grilles	ATC-143	
E		
ECM power supply	EC-154 , EC-479 , EC-858 , EC-1186	
ECM/PW - Wiring diagram	EC-480 , EC-1187	
ECTS - Wiring diagram	EC-216 , EC-928	
Electric sunroof	RF-10	
Electric throttle control actuator	EC-604 , EC-615 , EC-1322 , EC-1334	
Electric throttle control actuator (VK45DE)	EM-179	
Electric throttle control actuator (VQ35DE)	EM-21	
Electrical load signal circuit	EC-667 , EC-1387	
Electrical unit	PG-107	
Electrical units location	PG-98	
Electronic ignition (EI) system	EC-33 , EC-735	
Engine control module (ECM)	EC-483 , EC-1190	

ALPHABETICAL INDEX

Engine control system diagram	EC-30 , EC-732	FTTS - Wiring diagram	EC-333 , EC-338 , EC-1045 , EC-1050
Engine coolant temperature sensor (ECTS) ...	EC-214 , EC-226 , EC-926 , EC-939	Fuel cut control (at no load high engine speed)	EC-34 , EC-736
Engine coolant(VK45DE)	CO-40	Fuel filter replacement	FL-4
Engine coolant(VQ35DE)	CO-11	Fuel gauge	DI-5
Engine oil filter replacement	MA-26	Fuel injection system (Bank 1)	EC-309 , EC-320 , EC-1022 , EC-1033
Engine oil filter replacement(VQ35DE)	MA-19	Fuel injection system (Bank 2)	EC-309 , EC-320 , EC-1022 , EC-1033
Engine oil precautions	GI-7	Fuel injector	EC-1389
Engine oil replacement(VQ35DE)	MA-18	Fuel injector and fuel tube(VK45DE)	EM-193
Engine oil(VK45DE)	LU-27	Fuel injector and fuel tube(VQ35DE)	EM-47
Engine oil(VQ35DE)	LU-7	Fuel level sensor	EC-462 , EC-464 , EC-466 , EC-1169 , EC-1171 , EC-1173
Engine removal(VK45DE)	EM-247	Fuel line inspection	FL-3 , MA-25
Engine removal(VQ35DE)	EM-114	Fuel line inspection(VQ35DE)	MA-18
Engine room cover	EM-15	Fuel pressure check	EC-88 , EC-790
Engine room cover(VK45DE)	EM-173	Fuel pressure release	EC-88 , EC-790
ETC1 - Wiring diagram	EC-605 , EC-1323	Fuel pump	EC-675 , EC-1395
ETC2 - Wiring diagram	EC-600 , EC-1318	Fuel pump and gauge	FL-4
ETC3 - Wiring diagram	EC-611 , EC-1330	Fuel pump control module	EC-510 , EC-1225
EVAP canister	EC-42 , EC-744	Fuel pump dropping resistor	EC-510 , EC-1225
EVAP canister purge volume control solenoid valve	EC-400 , EC-408 , EC-1108 , EC-1116	Fuel system	FL-3
EVAP canister vent control valve	EC-415 , EC-422 , EC-1123 , EC-1130	Fuel tank	FL-10
EVAP control system (small leak) diagnosis ..	EC-391 , EC-453 , EC-1100 , EC-1160	Fuel tank temperature sensor	EC-331 , EC-337 , EC-1043 , EC-1049
EVAP control system pressure sensor	EC-428 , EC-431 , EC-437 , EC-1136 , EC-1139 , EC-1145	Fuel tank vacuum relief valve	EC-42 , EC-744
EVAP control system purge flow monitoring diagnosis	EC-386 , EC-1095	FUELB1 - Wiring diagram	EC-311 , EC-322 , EC-1024 , EC-1035
EVAP vapor lines inspection	MA-21 , MA-28	FUELB2 - Wiring diagram	EC-313 , EC-324 , EC-1026 , EC-1037
Evaporative emission (EVAP) system .	EC-39 , EC-741	Fuse	PG-17
Evaporator	ATC-167	Fuse and fusible link box	PG-115
Exhaust manifold(VK45DE)	EM-183	Fusible link	PG-17
Exhaust system	EX-3		
Exhaust system inspection	EX-3 , MA-29		
Expansion valve	ATC-168		

F

F/FOG - Wiring diagram	LT-198
F/PUMP - Wiring diagram	EC-676 , EC-1396
Final drive pre-inspection	FFD-16 , RFD-19
Final drive removal and installation ..	FFD-13 , RFD-16
Floor trim	EI-50
Flow charts	GI-28
Fluid temperature sensor (A/T)	AT-135
Fluorescent leak detector	ATC-169
FPCM - Wiring diagram	EC-512 , EC-1227
Freeze frame data	EC-60 , EC-762
Front brake solenoid valve	AT-151 , AT-153
Front bumper	EI-11
Front combination lamp removal and installation	LT-75
Front door	BL-188 , BL-194 , GW-61
Front passenger air bag	SRS-46
Front seat belt	SB-29
Front seat belt pre-tensioner	SB-2 , SRS-3 , SRS-51
Front washer	WW-4
Front wiper	WW-4
FTS - Wiring diagram	AT-136

G

Gauges	DI-5
Generator - See Alternator	SC-20
Glass	GW-11 , GW-59 , GW-61 , GW-65
Grille - See Exterior	EI-16
Ground distribution	PG-45

H

H/LAMP - Wiring diagram	LT-13 , LT-47
Harness connector	PG-104
Harness layout	PG-62
Hazard warning lamp	LT-212
Headlamp removal and installation	LT-75
Headlining - See Roof trim	EI-52
Heated oxygen sensor 2 (bank 1)	EC-274 , EC-285 , EC-298 , EC-987 , EC-998 , EC-1011
Heated oxygen sensor 2 (bank 2)	EC-274 , EC-285 , EC-298 , EC-987 , EC-998 , EC-1011
Heated oxygen sensor 2 heater (bank 1)	EC-177 , EC-890
Heated oxygen sensor 2 heater (bank 2)	EC-177 , EC-890

ALPHABETICAL INDEX

EC-890	Intelligent cruise control (ICC) system ACS-6
Heated seat	Interior EI-37
Heater and cooling unit (Heater core)	Interior lamp LT-266
HFC134a (R134a) system precaution	IPDM (Intelligent power distribution module engine room) PG-18
HFC134a (R134a) system service procedure	IVCB1 - Wiring diagram EC-186 , EC-900
HFC134a (R134a) system service tools	IVCB2 - Wiring diagram EC-188 , EC-902
HFC134a system service equipment precaution	IVCSB1 - Wiring diagram EC-1204
ATC-13	IVCSB2 - Wiring diagram EC-1206
High and low reverse clutch solenoid valve AT-159 , AT-161	IVTB1 - Wiring diagram EC-873
Hood	IVTB2 - Wiring diagram EC-875
Horn	K
HORN - Wiring diagram	Knock sensor (KS) EC-359 , EC-1070
How to erase DTC for OBD system EC-68 , EC-770	KS - Wiring diagram EC-360 , EC-1071
HSEAT - Wiring diagram	L
I	LAN system circuit ATC-71
IATS - Wiring diagram	Lane Departure Warning System DI-75
ICC - Wiring diagram	Laser beam aiming adjustment ACS-15
ICC/BS - Wiring diagram	Latch (lower anchors and tether for children) system ... SB-35
ICC/SW - Wiring diagram	LDW DI-75
ICCB OF - Wiring diagram	LDW - Wiring Diagram DI-86
Idle air volume learning	License lamp LT-248
Idle speed	Line pressure solenoid valve AT-130
Idle speed control (ISC) EC-470 , EC-472 , EC-1177 , EC-1179	Line pressure test (A/T) AT-55
Ignition coil	Liquid gasket application EM-8
Ignition coil(VK45DE)	Liquid gasket application(VQ35DE) LU-3 , LU-23 , CO-3
Ignition coil(VQ35DE)	Location of electrical units PG-98
Ignition control system	Low coast brake solenoid valve AT-163 , AT-165
Ignition timing	Lubricant (R134a) A/C ATC-26
IGNSYS - Wiring diagram	Lubrication circuit (engine)(VK45DE) LU-25
Illumination	Lubrication circuit (engine)(VQ35DE) LU-5
Illumination control	Lubrication oil A/C ATC-173
In vehicle sensor	M
INJECT - Wiring diagram	MAFS - Wiring diagram EC-196 , EC-204 , EC-909 , EC-917
Injector	Magnet clutch ATC-93
Input clutch solenoid valve	MAIN - Wiring diagram EC-154 , EC-858 , AT-180
Instrument panel	Maintenance (engine)(VQ35DE) MA-14
Intake air temperature sensor	Major overhaul (Final drive) FFD-15 , RFD-18
EC-922 , EC-942	Major overhaul (Transfer) TF-45
Intake door control linkage adjustment	Malfunction indicator lamp (MIL) EC-70 , EC-772
Intake door motor	Manual mode switch AT-167
Intake manifold collector(VQ35DE)	Mass air flow sensor (MAFS) EC-193 , EC-202 , EC-906 , EC-915
Intake manifold(VK45DE)	Meter DI-5
Intake manifold(VQ35DE)	METER - Wiring diagram DI-13
Intake sensor	MIL data link connectors circuit EC-714 , EC-1438
Intake valve timing control (Bank 1) .. EC-166 , EC-870	MIL/DL - Wiring diagram EC-714 , EC-1438
Intake valve timing control (Bank 2) .. EC-166 , EC-870	MIRROR - Wiring diagram GW-97
Intake valve timing control position sensor (Bank 1) EC-1203	Mirror, door GW-118
Intake valve timing control position sensor (Bank 2) EC-1203	Mirror, out side GW-118
Intake valve timing control solenoid valve (Bank 1) EC-185 , EC-899	Missfire EC-349 , EC-1061
Intake valve timing control solenoid valve (Bank 2) EC-185 , EC-899	
Integrated homelink transmitter	

A
B
C
D
E
F
G
H
I
J
K
L
IDX

ALPHABETICAL INDEX

MMSW - Wiring diagram	AT-168
Mode door control linkage adjustment	ATC-78 , ATC-81
Mode door motor	ATC-76 , ATC-79 , ATC-139
Molding - See Exterior	EI-25 , EI-29
Mud guard - See Exterior	EI-22
Multiport fuel injection (MFI) system	EC-31 , EC-733
Multiport fuel injection precautions	GI-6

N

NATS - Wiring diagram	BL-252
NONDTC - Wiring diagram	AT-187
NVH troubleshooting (EM)	EM-171
NVH troubleshooting (EM)(VQ35DE)	EM-13
NVH troubleshooting (Final drive)	FFD-6 , RFD-7
NVH troubleshooting (Propeller shaft)	PR-3
NVH troubleshooting (Transfer)	TF-8

O

O2H2B1 - Wiring diagram	EC-179 , EC-892
O2H2B2 - Wiring diagram	EC-181 , EC-894
O2S2B1 - Wiring diagram ..	EC-277 , EC-288 , EC-301 , EC-990 , EC-1001 , EC-1014
O2S2B2 - Wiring diagram ..	EC-279 , EC-290 , EC-303 , EC-992 , EC-1003 , EC-1016
Oil cooler (engine)(VQ35DE)	LU-15
Oil filter(VK45DE)	LU-30
Oil filter(VQ35DE)	LU-11
Oil pan (engine)(VK45DE)	EM-187
Oil pan (engine)(VQ35DE)	EM-31
Oil pressure (engine)(VK45DE)	LU-27
Oil pressure (engine)(VQ35DE)	LU-8
Oil pressure relief valve (engine)(VQ35DE)	LU-6
Oil pump (A/T)	AT-322
Oil pump (engine)(VK45DE)	LU-31
Oil pump (engine)(VQ35DE)	LU-19
Oil pump regulator valve (engine)(VK45DE)	LU-31
Oil pump regulator valve (engine)(VQ35DE)	LU-19
Oil seal replacement (engine)(VK45DE)	EM-231
Oil seal replacement (engine)(VQ35DE)	EM-99
Oil seal replacement (front of final drive)	FFD-9 , RFD-10
Oil seal replacement (side of final drive)	FFD-11 , RFD-14

On board diagnostic system	EC-54 , EC-756
ORVR (On-board Refueling Vapor Recovery) ..	EC-46 , EC-748
Out side mirror	GW-118
Overheat	EC-499 , EC-1214

P

P/SCKT - Wiring diagram	WW-52
Park/Neutral position switch	EC-491 , EC-1198
Park/neutral position switch (A/T)	AT-113
Parking brake control	PB-4
Parking lamp	LT-248
PCV (positive crankcase ventilation) ...	EC-51 , EC-753

PGC/V - Wiring diagram ..	EC-402 , EC-410 , EC-1110 , EC-1118
PHASE - Wiring diagram	EC-1084
PHSB1 - Wiring diagram	EC-373
PHSB2 - Wiring diagram	EC-375
Pilot bushing replacement - See Pilot converter(VQ35DE)	EM-125
Piston assembly(VK45DE)	EM-263
Piston assembly(VQ35DE)	EM-136
Piston pin inspection(VK45DE)	EM-269
Piston pin inspection(VQ35DE)	EM-141
Piston ring inspection(VK45DE)	EM-270
Piston ring inspection(VQ35DE)	EM-142
Piston to bore clearance(VK45DE)	EM-273
Piston to bore clearance(VQ35DE)	EM-145
PNP/SW - Wiring diagram ..	EC-493 , EC-1200 , AT-114
POS - Wiring diagram	EC-366 , EC-1077
POWER - Wiring diagram	PG-5
Power door mirror	BL-24
Power socket	WW-52
Power steering fluid level	PS-8 , MA-37
Power steering hydraulic pressure	PS-30
Power steering oil pump	PS-30
Power steering system bleeding	PS-8
Power supply routing	PG-3
Power window	GW-14
PRE/SE - Wiring diagram ..	EC-433 , EC-439 , EC-1141 , EC-1147
Precations for Leak detection dye	ATC-15
Precautions (General)	GI-4
Pressure switch 1	AT-153 , AT-172
Pressure switch 2	AT-165
Pressure switch 3	AT-149 , AT-174
Pressure switch 5	AT-157 , AT-176
Pressure switch 6	AT-161 , AT-178
Pressure test (A/T)	AT-55
Propeller shaft	PR-4 , PR-6
Propeller shaft on vehicle service	PR-4 , PR-6
Propeller shaft vibration	PR-4 , PR-6
PS/SEN - Wiring diagram	EC-475 , EC-1182

R

Radiator(VK45DE)	CO-43
Radiator(VQ35DE)	CO-14
Rear axle	RAX-5
Rear bumper	EI-14
Rear combination lamp removal and installation	LT-265
Rear disc brake	BR-28
Rear door	BL-188 , GW-65
Rear parcel shelf finisher	EI-42
Rear seat	SE-173
Rear seat belt	SB-31
Rear suspension	RSU-5
Rear window	GW-59
Rear window defogger	GW-71
Refrigerant connection precaution	ATC-7
Refrigerant discharging evacuating charging	ATC-150

ALPHABETICAL INDEX

Refrigerant general precaution	ATC-7	Supplemental Restraint System	SRS-5
Refrigerant lines	ATC-150	Supplemental restraint system - Wiring diagram	SRS-13
Refrigerant pressure sensor	EC-704, EC-1424, ATC-97, ATC-166	Suspension	MA-37
Refrigeration cycle	ATC-20	Symbols and abbreviations	GI-11, GI-24
Removal and installation (A/T)	AT-274, AT-278	System readiness test (SRT) code	EC-60, EC-762
Removal and installation (Transfer)	TF-44	<hr/>	
Reverse interlock door mirror	GW-94	T	
Revolution sensor (A/T)	AT-119, AT-263	Tachometer	DI-5
Rocker cover(VK45DE)	EM-199	Tail lamp	LT-248
Rocker cover(VQ35DE)	EM-53	TCM circuit diagram	AT-52
Room lamp - See Interior lamp	LT-266	TCM inspection table	AT-89
ROOM/L - Wiring diagram	LT-273	Thermostat(VK45DE)	CO-55
RP/SEN - Wiring diagram	EC-705, EC-1425	Thermostat(VQ35DE)	CO-29
<hr/>			
S			
SAE J1979 - Service \$01 - 09	EC-54, EC-756	Three way catalyst function (Bank 1)	EC-380, EC-1089
SEAT - Wiring diagram	SE-99	Three way catalyst function (Bank 2)	EC-380, EC-1089
Seat belt inspection	SB-32	Three way catalyst precautions	GI-5
Seat belt, front	SB-29	Three way catalyst(VK45DE)	EM-183
Seat belt, rear	SB-31	Throttle control motor	EC-610, EC-1329
Seat, rear	SE-173	Throttle control motor relay	EC-598, EC-1316
Self-diagnosis (Transfer)	TF-22	Throttle position sensor (TPS)	EC-219, EC-342, EC-518, EC-520, EC-631, EC-932, EC-1054, EC-1233, EC-1235, EC-1350
SEN/PW - Wiring diagram	EC-487, EC-1194	Throttle valve closed position learning	EC-86, EC-788
SHIFT - Wiring diagram	AT-230	Tie-rod	PS-19
Shift lock system	AT-229	Timing chain(VK45DE)	EM-203
Shock absorber (rear)	RSU-10	Timing chain(VQ35DE)	EM-66
Side air bag (satellite) sensor	SRS-50	Tire rotation	MA-35
Side curtain air bag	SRS-47	TLID - Wiring diagram	BL-209
Side trim	EI-37	Top tether strap child restraint	SB-36
SMJ (super multiple junction)	PG-109	Torque converter installation	AT-277, AT-280
Spark plug replacement	MA-27	Torque convertor clutch solenoid valve	AT-126, AT-128
Spark plug replacement(VQ35DE)	MA-20	TPS1 - Wiring diagram	EC-344, EC-1056
Spark plug(VK45DE)	EM-191	TPS2 - Wiring diagram	EC-221, EC-934
Spark plug(VQ35DE)	EM-45	TPS3 - Wiring diagram	EC-633, EC-1352
Specification value	EC-143, EC-847	Transfer control unit inspection table	TF-20
Speedometer	DI-5	TRNSCV - Wiring diagram	BL-278
Spiral cable	SRS-44	Trouble diagnoses	GI-12
SROOF - Wiring diagram	RF-13	Trunk lid	BL-201
SRS - See Supplemental Restraint System	SRS-5	Trunk lid opener - See Trunk lid	BL-207
SRS - Wiring diagram	SRS-13	TURN - Wiring diagram	LT-216
SRS Trouble diagnoses	SRS-9	Turn signal lamp	LT-212
Stabilizer bar (rear)	RSU-17	Two trip detection logic	EC-54, EC-756
Stall test (A/T)	AT-53	Tyre pressure monitoring system - trouble diagnoses ..	WT-12
Standardized relay	PG-112	<hr/>	
START - Wiring diagram	SC-9	U	
Starter	SC-8	Unified meter and A/C amp.	DI-28
Starting system	SC-8	Upper link (front susp.)	FSU-16, FSU-34
Steering gear and linkage inspection	MA-36	<hr/>	
Steering wheel and column	PS-10, PS-13	V	
Steering wheel turning force	PS-10	Vacuum hose (brake system)	BR-20
Stop lamp	LT-242	Valve clearance(VK45DE)	EM-224
Stop lamp switch	EC-589, EC-1307	Valve clearance(VQ35DE)	EM-94
STSIG - Wiring diagram	AT-109	Valve guide	EM-109
Sun roof, electric	RF-10	Valve guide(VK45DE)	EM-243
Sunload sensor	ATC-118, ATC-127	<hr/>	
Sunroof	RF-24, RF-27		
Sunshade	EI-44		

A
B
C
D
E
F
G
H
I
J
K
L
IDX

ALPHABETICAL INDEX

Valve lifter	EM-89
Valve seat(VK45DE)	EM-245
Valve seat(VQ35DE)	EM-111
Valve spring(VK45DE)	EM-246
Valve spring(VQ35DE)	EM-112
Variable induction air control system (VIAS)	EC-1302 , EC-1429
Vehicle security (theft warning) system	BL-217
Vehicle speed sensor (VSS)	EC-468 , EC-588 , EC-1175
VEHSEC - Wiring diagram	BL-223
VENT/V - Wiring diagram	EC-417 , EC-424 , EC-1125 , EC-1132
VIAS - Wiring diagram	EC-1431
VIAS/V - Wiring diagram	EC-1303
VIN registration	EC-85 , EC-787
VSS A/T - Wiring diagram	AT-121

W

WARN - Wiring diagram	DI-42
Warning chime	DI-59
Warning lamps	DI-39
Washer, front	WW-4
Water control valve(VK45DE)	CO-55
Water pump(VK45DE)	CO-53
Water pump(VQ35DE)	CO-24
Water temperature gauge	DI-5
Wheel alignment (front)	FSU-6 , FSU-24
Wheel alignment (rear)	RSU-5
Wheel balance	WT-7 , MA-33
Wheel bearing (rear)	RAX-5
Wheel hub (rear)	RAX-5
Wheel sensor (VDC)	BRC-54
WINDOW - Wiring diagram	GW-21
Window, door	GW-61 , GW-65
Window, rear	GW-59
Windshield	GW-11
WIPER - Wiring diagram	WW-13
Wiper, front	WW-4
Wiring Diagram (Cell code) list	PG-95
Wiring diagrams	GI-16