
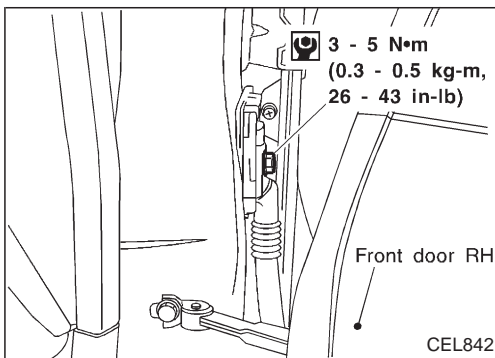
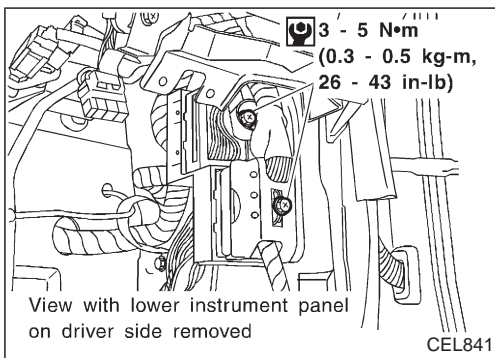
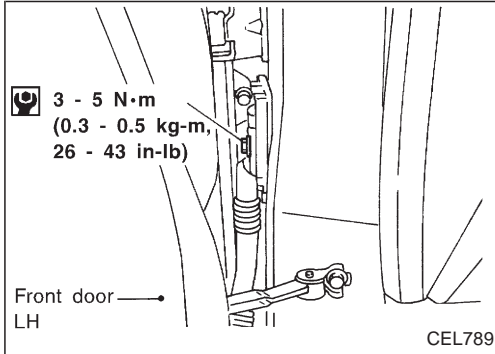


SUPER MULTIPLE JUNCTION (SMJ)

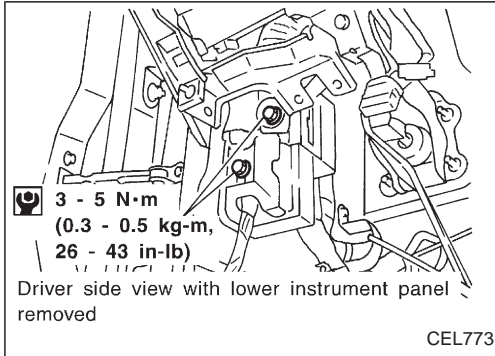

LHD MODELS

Installation

To install SMJ, tighten bolts until orange “fulltight” mark appears and then retighten to specified torque as required.

 : 3 - 5 N·m
(0.3 - 0.5 kg-m, 26 - 43 in-lb)

CAUTION:

Do not overtighten bolts, otherwise, they may be damaged.

RHD MODELS

Installation

To install SMJ, tighten bolts until orange “fulltight” mark appears and then retighten to specified torque as required.

 : 3 - 5 N·m
(0.3 - 0.5 kg-m, 26 - 43 in-lb)

CAUTION:

Do not overtighten bolts, otherwise, they may be damaged.


SUPER MULTIPLE JUNCTION (SMJ)

Terminal Arrangement


MAIN HARNESS



E127 (White)

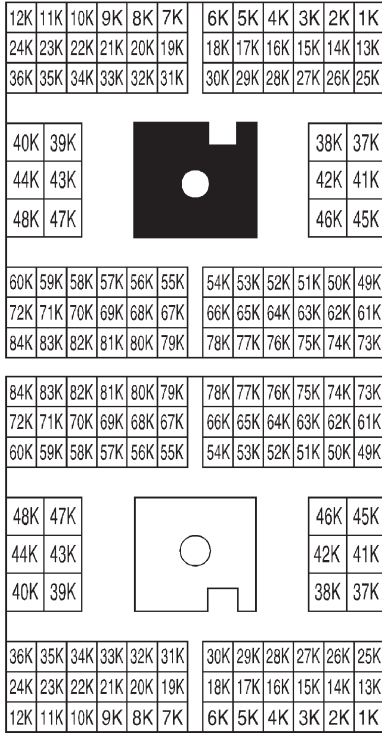

M20 (Gray)

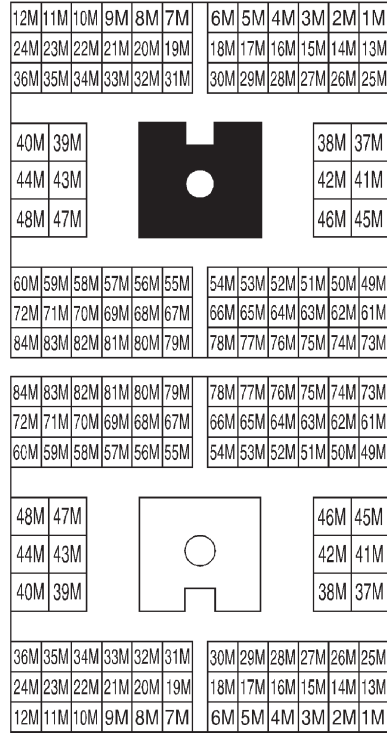

M21 (White)

ENGINE ROOM HARNESS


B19 (Gray)

BODY HARNESS

MAIN HARNESS



M22 (White)

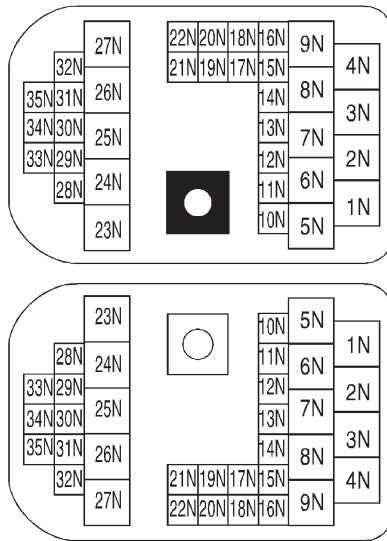


D1 (White)


FRONT DOOR HARNESS
(DRIVER SIDE)

FUSE BLOCK — Junction Box (J/B)

Terminal Arrangement

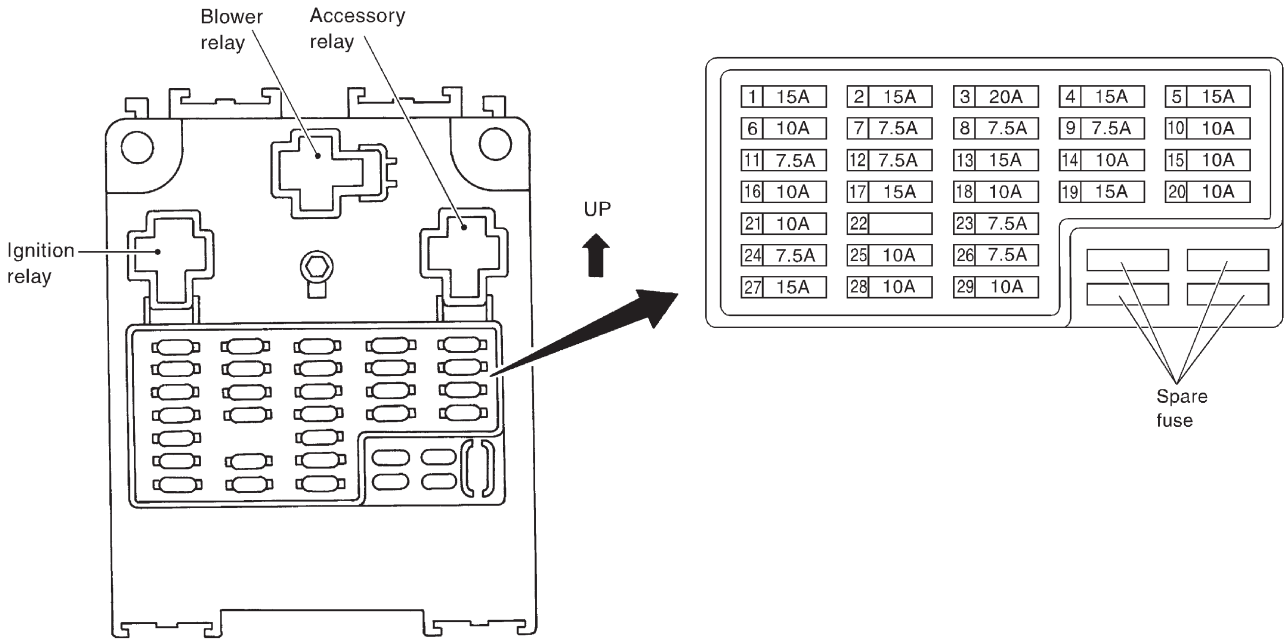


To main harness

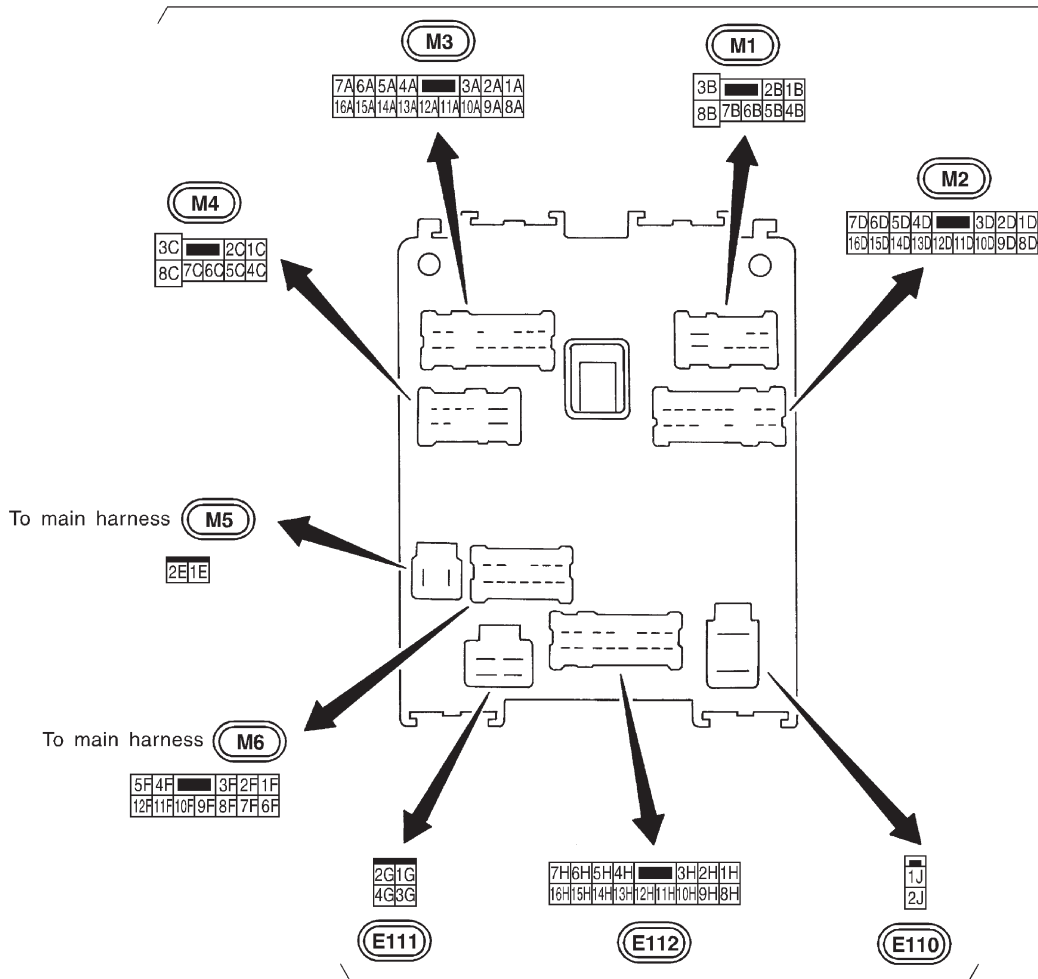

FUSE AND FUSIBLE LINK BOX

Terminal Arrangement

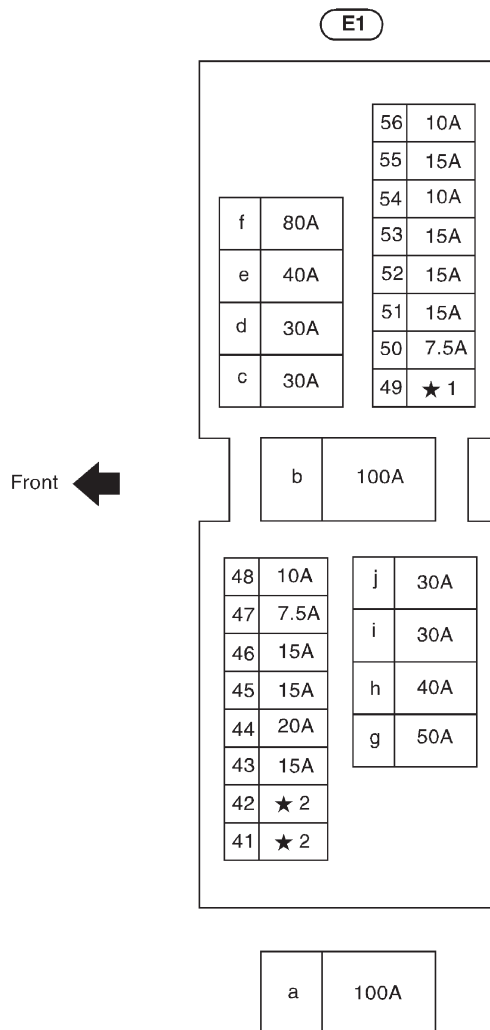

No. 41 - 56: FUSE
a - j: FUSIBLE LINK

- ★ 1 7.5A: TB45E engine models
15A: RD engine models
- ★ 2 20A: With xenon headlamp system
7.5A: LHD models for Europe


ELECTRICAL UNITS

Terminal Arrangement

ECM (ECCS CONTROL MODULE) **F8** (TB45E engine)





ECM (ECCS CONTROL MODULE) **F8** (RD28ETi engine)


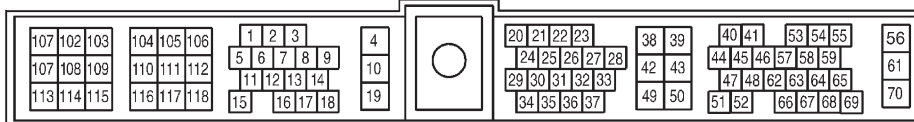


JOINT CONNECTOR (J/C)

  
Terminal Arrangement




(White)

  

(Black)

 

J/C-4 (F19)

 

J/C-6 (F26)

(Gray)