

ALPHABETICAL INDEX

SECTION **IDX**

IDX

ALPHABETICAL INDEX

A

A/C HFC134a (R134a) system service procedure.....	HA-112
A/C HFC134a system service equipment precaution.....	HA-9
A/C air flow.....	HA-13
A/C component layout.....	HA-12
A/C compressor precaution.....	HA-6
A/C compressor special service tool	HA-6, 7
A/C control linkage adjustment (auto A/C).....	HA-77
A/C control operation (manual A/C).....	HA-16
A/C harness layout (manual A/C)	HA-17
A/C lubricant (R134a).....	HA-114
A/C relay.....	HA-97
A/C self-diagnoses (auto A/C).....	HA-63
ACCUT - Wiring diagram	EC-186
A/T control	EC-174
ABS sensor rotor	FA-15
ACC/SW - Wiring diagram	EC-105
ACL/SW - Wiring diagram	EC-164
ADJRES - Wiring diagram	EC-91
APS - Wiring diagram	EC-138
AT/C - Wiring diagram.....	EC-174
AUDIO - Wiring diagram.....	EL-168
Accelerator position sensor.....	EC-138
Accelerator position switch.....	EC-164
Accelerator switch (F/C).....	EC-105
Adjustment resistor.....	EC-91
Air bag disposal.....	RS-17
Air bag	RS-8
Air bleeding (hydraulic clutch)	CL-6
Air bleeding for brake system	BR-4
Air cleaner filter replacement.....	MA-18
Air conditioner cut control	EC-19
Air flow meter - See Mass air flow sensor	EC-73
Air mix door control linkage adjustment.....	HA-81
Alternator.....	EL-56
Antenna - See Power antenna	EL-181
Audio and A/C control removal and installation - See Instrument panel	BT-11
Audio	EL-168
Auto lock free running hub	FA-13
Automatic amplifier.....	HA-61
Axle housing (rear).....	RA-9

B

BACK/L - Wiring diagram.....	EL-78
Back door opener - See Back door	BT-6
Back door trim.....	BT-24
Back door window.....	BT-45
Back door.....	BT-6

Back-up lamp switch (M/T)	MT-4
Back-up lamp	EL-78
Battery.....	EL-37
Baulk ring (M/T).....	MT-10
Body alignment	BT-49
Body mounting	BT-48
Brake booster	BR-15
Brake fluid change	BR-3
Brake fluid level and line check	BR-3
Brake fluid level	MA-23
Brake hydraulic line.....	BR-5
Brake inspection	MA-24
Brake master cylinder	BR-12
Brake pedal	BR-10
Bulb specifications	EL-314
Bumper, front	BT-4
Bumper, rear	BT-6

C

CD/CHG - Wiring diagram	EL-176
CHIME - Wiring diagram.....	EL-136
CIGAR - Wiring diagram.....	EL-156
CKPS - Wiring diagram.....	EC-143
CLOCK - Wiring diagram.....	EL-157
CMPS - Wiring diagram	EC-68
COMPAS - Wiring diagram	EL-117
CONSULT for ECCS	EC-36
CONSULT general information.....	GI-33
COOL/F - Wiring diagram	EC-112
CSPS - Wiring diagram.....	EC-86
Cab body.....	BT-47
Camshaft inspection	EM-36
Camshaft position sensor (PUMP).....	EC-68
Center case (Transfer).....	TF-10
Charge air cooler fan control	EC-177
Charge air temperature sensor	EC-121
Chassis and body maintenance	MA-20
Cigarette lighter.....	EL-156
Circuit breaker.....	EL-14
Clock	EL-157
Clutch booster.....	CL-9
Clutch cover.....	CL-14
Clutch damper	CL-7
Clutch disc	CL-13
Clutch fluid level.....	MA-20
Clutch master cylinder	CL-7
Clutch operating cylinder	CL-8
Clutch pedal.....	CL-5
Clutch release bearing	CL-11
Clutch release mechanism	CL-11
Clutch withdrawal lever	CL-11
Coil spring (front)	FA-25
Coil spring (rear)	RA-14
Collision diagnosis.....	RS-45
Combination meter removal and installation - See Instrument panel	BT-11

ALPHABETICAL INDEX

Combination meter.....	EL-102
Combination switch.....	EL-57
Combustion chamber replacement.....	EM-32
Compass	EL-116
Compression pressure.....	EM-10
Compressor special service tool	HA-6
Connecting rod.....	EM-47
Connecting rod.....	EM-51
Connector inspection.....	GI-17
Console box - See Instrument panel	BT-11
Control lever (Transfer).....	TF-9
Control sleeve position sensor.....	EC-86
Coolant mixture ratio.....	MA-11
Coolant replacement.....	MA-14
Cooling circuit (engine).....	LC-9
Cooling fan control	EC-112
Cooling fan motor.....	EC-120
Cooling fan relay	EC-120
Cooling fan.....	LC-15
Counter gear (M/T).....	MT-10
Counter gear (Transfer)	TF-11
Coupling sleeve (M/T)	MT-10
Crankcase emission control system - See Positive crankcase ventilation.....	EC-21
Crankcase ventilation system - See Positive crankcase ventilation	EC-21
Crankshaft position sensor (TDC).....	EC-143
Crankshaft.....	EM-50
Cylinder block	EM-45, 48
Cylinder head.....	EM-28

D

D/LOCK - Wiring diagram.....	EL-205
DEF - Wiring diagram	EL-159
DEICER - Wiring diagram.....	EL-167
DTRL - Wiring diagram	EL-67
Data link connector for Consult.....	EC-36
Daytime light system.....	EL-65
Diagnosis sensor unit.....	RS-12
Diagnostic trouble code (DTC) for ECCS OBD system	EC-30
Differential carrier assembly.....	PD-31
Differential carrier disassembly	PD-14
Differential gear oil replacement.....	MA-22
Dimensions	GI-38
Dome light - See Interior lamp	EL-93
Door glass.....	BT-9
Door lock.....	BT-9
Door mirror.....	BT-46
Door trim	BT-18
Door, front	BT-9
Door, rear	BT-10
Drive belt inspection	MA-12
Drive chain (Transfer)	TF-11
Drive pinion diff. inspection	PD-19
Drive pinion height	PD-27
Drive shaft (front).....	FA-23
Dual pressure switch	HA-11

Dual pressure switch.....	HA-97
---------------------------	-------

E

ECCS basic inspection.....	EC-46
ECCS circuit diagram	EC-11
ECCS component parts location.....	EC-8
ECCS on board diagnostic system	EC-30
ECCS symptom matrix chart.....	EC-48
ECCS system diagram and chart	EC-12
ECCS-D control module	EC-54, 110
ECM input/output signal	EC-54
ECTS - Wiring diagram	EC-78
EGR control (EGRC) - solenoid valve	EC-155
EGR control valve	EC-161
EGRC/V - Wiring diagram.....	EC-155
Electric governor	EC-95, 148
Electric sunroof	EL-186
Electrical diagnoses.....	GI-20
Electrical unit.....	EL-321
Electrical units location	EL-269
Electronic fuel injection pump	EC-27
Engine compartment.....	BT-49
Engine coolant temperature sensor (ECTS)	EC-78
Engine oil filter replacement	MA-14
Engine oil precautions	GI-4
Engine oil replacement	MA-13
Engine outer component parts	EM-8
Engine removal	EM-43
Engine room - See Engine compartment	BT-49
Engine serial number	GI-37
Exhaust system inspection	MA-20
Exhaust system	FE-3
Exterior	BT-26

F

FCUT - Wiring diagram	EC-129
FTS - Wiring diagram	EC-134
Fan control amp	HA-88
Final drive disassembly	PD-14
Final drive removal and installation.....	PD-11
Finisher, interior - See Trim	BT-14
Floor trim	BT-14
Flow charts	GI-30
Fluids	MA-9
Flywheel (clutch).....	CL-13, 14
Flywheel runout	EM-52
Fog lamp, rear	EL-80
Fork rod (M/T)	MT-12
Front axle	FA-10
Front bumper	BT-4
Front case (Transfer)	TF-10
Front disc brake	BR-20
Front door	BT-9

ALPHABETICAL INDEX

Front drive shaft (Transfer)	TF-11
Front final drive disassembly (4WD)	PD-14
Front final drive removal and installation (4WD)	PD-11
Front passenger air bag	RS-8, 14
Front seat belt	RS-2
Front seat	BT-32
Front suspension	FA-24
Front washer	EL-141
Front wiper	EL-141
Fuel cut control (at no load & high engine speed)	EC-20
Fuel cut solenoid valve	EC-129
Fuel filler lid	BT-6
Fuel filter replacement	MA-16
Fuel gauge	EL-102
Fuel injection system	EC-15
Fuel line inspection	MA-17
Fuel precautions	GI-5
Fuel temperature sensor	EC-134
Fuse block	EL-319
Fuse	EL-14
Fusible link	EL-14

G

GLOW - Wiring diagram	EC-150
GOVNR - Wiring diagram	EC-95
Garage jack and safety stand	GI-39
Gauges	EL-102
Gear components (M/T)	MT-10
Glass	BT-9
Glow plug	EC-150, 154
Glow relay	EC-150, 154
Grease	MA-9
Ground distribution	EL-15

H

H/AIM - Wiring diagram	EL-71
H/LAMP - Wiring diagram	EL-61
HEAT UP - Wiring diagram	EC-182
HFC134a (R134a) system service procedure	HA-112
HLC - Wiring diagram	EL-153
HORN - Wiring diagram	EL-155
Harness connector inspection	GI-17
Harness connector	EL-2
Harness layout	EL-275
Headlamp aiming control	EL-70
Headlamp leveler - See Headlamp aiming control	EL-70
Headlamp wiper	EL-153
Headlamp	EL-61
Headlining - See Roof trim	BT-20
Heat up switch	EC-182
Heated seat	BT-34

Hood	BT-4
Horn	EL-155
How to erase DTC for ECCS OBD system	EC-30

I

IATS - Wiring diagram	EC-121
IC/FAN - Wiring diagram	EC-177
ILL - Wiring diagram	EL-87
INT/L - Wiring diagram	EL-101
Identification plate	GI-37
Idle speed inspection	MA-19
Idle speed	EC-46
Illumination	EL-86
In vehicle sensor	HA-105
Injection nozzle inspection	MA-18
Injection nozzle	EC-22
Injection timing control valve	EC-100
Instrument panel	BT-11
Intake door control linkage adjustment	HA-84
Intake door motor	HA-25
Intake sensor	HA-111
Interior lamp	EL-93
Interior	BT-14

J

Jacking points	GI-39
Joint connector (J/C)	EL-322
Journal bearing assembly (propeller shaft)	PD-8
Journal bearing disassembly (propeller shaft)	PD-7
Junction box (J/B)	EL-319

L

LSV (Load sensing valve)	BR-6
Lifting points	GI-40
Limited slip diff. adjustment	PD-23
Limited slip diff. assembly	PD-24
Limited slip diff. disassembly	PD-21
Limited slip diff. inspection	PD-21
Location of electrical units	EL-269
Lock, door	BT-9
Lubricant (R134a) A/C	HA-114
Lubricants	MA-9
Lubrication circuit (engine)	LC-3
Lubrication-locks, hinges and hood latches	MA-27
Luggage compartment trim	BT-14
Luggage room lamp	EL-93

ALPHABETICAL INDEX

M

M/T major overhaul	MT-9
M/T removal and installation	MT-5
MAFS - Wiring diagram.....	EC-73
MAIN - Wiring diagram.....	EC-62
METER - Wiring diagram.....	EL-104
MIL & Data link connectors circuit	EC-187
MIL/DL - Wiring diagram	EC-187
MIRROR - Wiring diagram.....	EL-188
Main drive gear (M/T).....	MT-10
Main gear (Transfer)	TF-11
Mainshaft (M/T)	MT-10
Mainshaft (Transfer)	TF-11
Maintenance (engine)	MA-12
Major overhaul (Transfer)	TF-10
Malfunction indicator lamp (MIL).....	EC-31
Manifold tightening torque (intake & exhaust).....	MA-12
Manual lock free running hub	FA-11
Manual transmission number	GI-37
Mass air flow sensor (MAFS).....	EC-73
Master cylinder (brake)	BR-12
Meter	EL-102
Mirror, door.....	BT-46
Mirror, outside	BT-46
Mode door control linkage adjustment.....	HA-77
Model variation	GI-35
Molding - See Exterior	BT-26
Multiport fuel injection precautions.....	GI-3

N

NATS (Nissan Anti-theft System).....	EL-240
NATS - Wiring diagram.....	EL-241
NLS - Wiring diagram.....	EC-125
NVH Troubleshooting (PD).....	PD-4
NVH troubleshooting (BR).....	BR-2
NVH troubleshooting (EM).....	EM-6
NVH troubleshooting (FA).....	FA-3
NVH troubleshooting (MT)	MT-3
NVH troubleshooting (RA).....	RA-3
NVH troubleshooting (RA).....	RA-3
NVH troubleshooting (ST).....	ST-3
NVH troubleshooting (Transfer)	TF-3
NVH troubleshooting CL.....	CL-3
Needle lift sensor	EC-125
Neutral position switch (M/T)	MT-4
Neutral position switch	EC-169

O

Oil change (capacity)	MA-9
Oil cooler (engine)	LC-7
Oil jet.....	LC-7
Oil pan (engine)	EM-13

Oil pressure (engine)	LC-3
Oil pump (engine)	LC-4
Oil seal replacement (engine).....	EM-20
Oil seal replacement (front final drive 4WD).....	PD-10
Oil seal replacement (front of final drive)	PD-10
Operating cylinder (clutch).....	CL-8
Outside mirror	BT-46

P

P/ANT - Wiring diagram.....	EL-181
PCV (positive crankcase ventilation)	EC-21
PNP/SW - Wiring diagram	EC-169
POWER - Wiring diagram.....	EL-6
Park/Neutral position switch.....	EC-169
Periodic maintenance (for Europe)	MA-4
Pinion bearing preload diff.	PD-27
Pinion gear height diff.	PD-27
Piston assembly	EM-46
Piston pin inspection.....	EM-46
Piston ring inspection.....	EM-47
Piston to bore clearance	EM-48
Power antenna.....	EL-181
Power door lock	EL-204
Power door lock	EL-211
Power door mirror	EL-188
Power seat	EL-190
Power steering fluid level.....	ST-5
Power steering gear.....	ST-12
Power steering hydraulic pressure	ST-6
Power steering oil pump	ST-15
Power steering system bleeding.....	ST-6
Power supply routing	EL-5
Power window	EL-196
Pre-delivery inspection	MA-2
Precautions (General)	GI-2
Pressure plate - See Clutch cover	CL-14
Priming pump	EC-46
Propeller shaft greasing.....	MA-21
Propeller shaft inspection	MA-21
Propeller shaft on vehicle service	PD-6
Propeller shaft vibration	PD-6
Propeller shaft	PD-5

Q

Quick-glow system check.....	EC-153
Quick-glow system	EC-150

R

R/FOG - Wiring diagram	EL-80
R/HEAT - Wiring diagram.....	HA-14

ALPHABETICAL INDEX

ROOM/L - Wiring diagram	EL-95
Radiator	LC-14
Radio - See Audio.....	EL-168
Rear axle (disc brake type).....	RA-6
Rear bumper	BT-6
Rear case (Transfer).....	TF-10
Rear combination lamp removal and installation	BT-26
Rear cover packing replacement diff.....	PD-11
Rear disc brake	BR-24
Rear door	BT-10
Rear fog lamp	EL-80
Rear heater - Wiring diagram	HA-14
Rear seat belt.....	RS-5
Rear seat	BT-35
Rear side window	BT-44
Rear suspension	RA-12
Rear washer.....	EL-145
Rear window defogger.....	EL-158
Rear window	BT-42
Rear wiper.....	EL-145
Refrigerant connection precaution	HA-2
Refrigerant discharging evacuating charging	HA-113
Refrigerant general precaution.....	HA-2
Refrigerant lines	HA-117
Refrigeration cycle.....	HA-11
Release bearing (clutch).....	CL-11
Removal and installation (Transfer).....	TF-8
Reverse idler shaft (M/T)	MT-10
Reverse lamp switch (M/T) - See Back-up lamp switch (M/T).....	MT-4
Reverse main gear (M/T)	MT-10
Ring gear diff. inspection	PD-19
Road wheel size.....	GI-38
Roof trim	BT-20
Room lamp - See Interior lamp	EL-93
Rotor disc (front).....	FA-14
S	
S/LOCK - Wiring diagram	EL-215
S/SIG - Wiring diagram	EC-162
SAE J1930 terminology list	GI-43
SEAT - Wiring diagram	EL-190
SMJ (super multiple junction)	EL-317
SROOF - Wiring diagram	EL-186
SRS - See Supplemental Restraint System.....	RS-8
SRS Trouble diagnoses	RS-22
STAB - Wiring diagram	RA-18
START - Wiring diagram.....	EL-45
Screw jack	GI-39
Seal - See Exterior	BT-26
Seat belt inspection	MA-27
Seat belt pre-tensioner disposal	RS-17
Seat belt pre-tensioner.....	RS-12
Seat belt, front.....	RS-2
Seat belt, rear.....	RS-5
Seat, front	BT-32
Seat, rear	BT-35
Seat, second (2nd)	BT-35
Seat, third (3rd).....	BT-37
Second (2nd) seat	BT-35
Self-diagnostic results	EC-31
Shift control (Transfer)	TF-12
Shift control components (M/T).....	MT-12
Shift fork (M/T)	MT-12
Shift lever	MT-12
Shock absorber (front).....	FA-25
Shock absorber (rear)	RA-14
Side bearing preload (front final drive 4WD).....	PD-27
Side bearing preload diff.	PD-27
Side trim	BT-14
Side window - See Rear side window.....	BT-44
Speedometer.....	EL-102
Spiral cable.....	RS-13
Stabilizer bar (front)	FA-25
Stabilizer bar (rear)	RA-15
Stabilizer release device - Wiring diagram.....	RA-18
Stabilizer release device	RA-16
Standardized relay	EL-3
Start signal	EC-162
Starter	EL-51
Starting system	EL-45
Steering gear and linkage inspection	MA-26
Steering linkage	ST-19
Steering switch.....	EL-59
Steering wheel and column	ST-8
Steering wheel play	ST-4
Steering wheel turning force.....	ST-6
Striking rod (M/T)	MT-12
Sub-gear (M/T)	MT-10
Sunload sensor	HA-107
Sunroof, electric	EL-186
Sunroof.....	BT-39
Super lock	EL-211
Supplemental Restraint System.....	RS-8
Supplemental restraint system - Wiring diagram.....	RS-27
Symbols and abbreviations	GI-7
Synchronizer (M/T)	MT-10

T	

TCV - Wiring diagram	EC-100
Tachometer	EL-102
Thermometer	EL-116
Thermostat.....	LC-12
Third (3rd) seat	BT-37
Three way catalyst precautions.....	GI-4
Throttle control solenoid valve	EC-155
Throttle control solenoid valve	EC-161
Throwout bearing - See Clutch release bearing	CL-11
Thrust washer selection diff.	PD-27

ALPHABETICAL INDEX

Tie-rod ball joints.....	ST-19
Tie-rod.....	ST-19
Timing belt.....	EM-15
Tire rotation.....	MA-25
Tire size	GI-38
Tooth contact (front final drive 4WD)	PD-29
Tooth contact diff.	PD-29
Tow truck towing.....	GI-41
Towing point.....	GI-42
Transfer case	TF-10
Transfer fluid replacement	MA-21
Transfer serial number	GI-37
Transmission case (M/T).....	MT-9
Trim	BT-14
Trouble diagnoses	GI-30
Turbocharger charge air cooler	EM-27
Turbocharger.....	EM-23
Two-pole lift	GI-40

U

Under body	BT-51
------------------	-------

V

VSS - Wiring diagram	EC-82
Vacuum hose (brake system)	BR-17
Vacuum hose (brake system)	BR-18
Vacuum hose drawing (ECCS)	EC-13
Valve clearance.....	EM-40
Valve guide	EM-31
Valve lifter	EM-35
Valve seat	EM-32
Valve spring	EM-34

Vehicle identification number.....	GI-36
Vehicle speed sensor (VSS)	EC-82
Viscosity number (SAE).....	MA-10

W

WARN - Wiring diagram	EL-123
WINDOW - Wiring diagram	EL-198
WIP/R - Wiring diagram.....	EL-146
WIPER - Wiring diagram	EL-142
Warning chime	EL-135
Warning lamps	EL-121
Washer, front.....	EL-141
Washer, rear.....	EL-145
Water pump	LC-10
Water temperature gauge	EL-102
Weatherstrip - See Exterior	BT-26
Wheel alignment (front)	FA-8
Wheel bearing (front axle)	FA-5
Wheel bearing (rear)	RA-5
Wheel hub (front)	FA-14
Wheel size	GI-38
Window, back door	BT-45
Window, door	BT-9
Window, rear side	BT-44
Window, side - See Rear side window	BT-44
Windshield.....	BT-42
Wiper deicer.....	EL-166
Wiper, front.....	EL-141
Wiper, rear	EL-145
Wiring diagram (cell code) list	EL-315
Wiring diagrams.....	GI-8
Withdrawal lever (clutch)	CL-11