

ALPHABETICAL INDEX

SECTION **IDX**

GI

MA

EM

LC

EC

FE

CL

MT

AT

PD

FA

RA

BR

ST

RS

BT

HA

EL

IDX

ALPHABETICAL INDEX

A

ABS (anti-lock brake system)	BR-26
ABS actuator	BR-28
ABS circuit diagram	BR-41
ABS component parts and connector locations.....	BR-38
ABS control unit	BR-38
ABS hydraulic circuit	BR-27
ABS self-diagnosis	BR-35
ABS system components	BR-26
ABS trouble diagnoses	BR-34
ABS wheel sensors	BR-28
ABS wiring diagram	BR-29
A/C air flow	HA-13
A/C circuit diagram (auto A/C)	HA-94
A/C circuit diagram (manual A/C)	HA-36
A/C component layout.....	HA-12
A/C compressor clutch removal and installation.....	HA-146
A/C compressor mounting	HA-144
A/C compressor precaution	HA-6
A/C compressor special service tool	HA-6
A/C control linkage adjustment (auto A/C)	HA-127
A/C control linkage adjustment (manual A/C).....	HA-62
A/C control operation (auto A/C).....	HA-67
A/C control operation (manual A/C)	HA-15
A/C diagnostic work flow (auto A/C)	HA-70
A/C diagnostic work flow (manual A/C)	HA-17
A/C harness layout (auto A/C)	HA-92
A/C harness layout (manual A/C)	HA-34
A/C HFC134a (R134a) system identification.....	HA-2
A/C HFC134a (R134a) system introduction	HA-2
A/C HFC134a (R134a) system precaution.....	HA-4
A/C HFC134a (R134a) system service procedure.....	HA-136
A/C HFC134a (R134a) system service tools	HA-7
A/C HFC134a system service equipment precaution.....	HA-9
A/C lubricant (R134a)	HA-138
A/C operational check (auto A/C)	HA-71
A/C operational check (manual A/C)	HA-18
A/C performance chart.....	HA-28
A/C performance test diagnoses	HA-26
A/C relay	HA-61
A/C self-diagnoses (auto A/C)	HA-75
A/C service data specification.....	HA-148
A/C switch	HA-61
A/C symptom chart (auto A/C)	HA-74
A/C symptom chart (manual A/C)	HA-20
A/C trouble diagnoses (auto A/C)	HA-68
A/C trouble diagnoses (manual A/C)	HA-16
A/C wiring diagram (auto A/C)	HA-95

A/C wiring diagram (manual A/C)	HA-37
Accelerator control system	FE-2
Accelerator wire adjustment	FE-2
Air bag	RS-5
Air bag disposal	RS-14
Air bag module.....	RS-10
Air bag precautions	GI-2
Air bag removal and installation	RS-10
Air bleeding for brake system	BR-5
Air cleaner filter replacement.....	MA-13
Air conditioner cut control	EC-22
Air flow meter - See Mass air flow sensor.....	EC-108
Air mix door control linkage adjustment (auto A/C)	HA-128
Air mix door control linkage adjustment (manual A/C).....	HA-63
Air mix. door motor (auto A/C)	HA-129
Air mix. door motor (manual A/C)	HA-64
Air spoiler, rear - See Rear air spoiler.....	BT-41
Alternator	EL-36
Ambient sensor	HA-125
Angular tightening application	EM-2
Antenna - See Power antenna	EL-183
Anti-freeze coolant mixture ratio.....	MA-9
ASCD (automatic speed control device).....	EL-211
AT control DTC:P0600	EC-241
AT control unit	AT-101
AT diagnosis communication line.....	EC-293
AT fluid temperature sensor.....	AT-106
AT removal and installation.....	AT-127
AT self-diagnoses	AT-43
AT shift lock system.....	AT-116
AT trouble diagnoses	AT-13
Audio.....	EL-177
Audio and A/C control removal and installation - See Instrument panel	BT-11
Automatic amplifier.....	HA-129
Automatic transmission fluid replacement.....	MA-18
Automatic transmission number.....	GI-37
Auxiliary air control (AAC).....	EC-237
Axle housing (rear).....	RA-9

B

Back door trim	BT-18
Back door window	BT-40
Back window.....	BT-38
Back-up lamp.....	EL-67
Back-up lamp switch (MT)	MT-4
Ball joint front axle	FA-18
Battery.....	EL-26
Baulk ring (MT)	MT-7
Belt inspection (drive belt)	MA-10
Blower motor	HA-60
Blower relay	HA-61
Blower resistor	HA-60
Board-on lift	GI-39
Body alignment	BT-42

ALPHABETICAL INDEX

Boost gauge.....	EL-92
Boost pressure sensor.....	EC-254
Brake control valve (Proportioning valve).....	BR-8
Brake fluid change.....	BR-4
Brake fluid level.....	MA-20
Brake fluid level and line check.....	BR-4
Brake hydraulic line.....	BR-6
Brake inspection.....	MA-20
Brake lines and cables inspection.....	MA-20
Brake master cylinder.....	BR-11
Brake pedal.....	BR-9
Bumper, front - See Front bumper.....	BT-5
Bumper, rear - See Rear bumper.....	BT-7

C

Camshaft inspection.....	EM-26
Camshaft position sensor (CMPS).....	EC-206
Camshaft position sensor inspection.....	EC-210
Center bearing assembly (propeller shaft).....	PD-9
Center bearing disassembly (propeller shaft).....	PD-9
Charging system.....	EL-34
Chassis and body maintenance.....	MA-17
Cigarette lighter.....	EL-170
Clearance lamp.....	EL-62
Clock.....	EL-170
Closed loop control.....	EC-132
Clutch cover.....	CL-13
Clutch disc.....	CL-13
Clutch fluid level.....	MA-17
Clutch master cylinder.....	CL-7
Clutch operating cylinder.....	CL-8
Clutch pedal.....	CL-5
Clutch pedal free play.....	CL-5
Clutch pedal height.....	CL-5
Clutch release bearing.....	CL-11
Clutch withdrawal lever.....	CL-11
Coil spring (front).....	FA-15
Coil spring (rear).....	RA-17
Combination lamp, rear, removal and installation.....	BT-20
Combination meter.....	EL-92
Combination meter removal and installation - See Instrument panel.....	BT-11
Combination switch.....	EL-39
Compression pressure.....	EM-9
Compressor clutch removal and installation.....	HA-146
Compressor mounting.....	HA-144
Compressor precaution.....	HA-6
Compressor special service tool.....	HA-6
Connecting rod.....	EM-47
Connecting rod bearing clearance.....	EM-51
Connecting rod bushing clearance.....	EM-52
Console box - See Instrument panel.....	BT-11
CONSULT for ECCS.....	EC-49
CONSULT general information.....	GI-33

Control lever (MT).....	MT-9
Control valve (AT).....	AT-152
Converter housing installation.....	AT-127
Convertible roof.....	BT-31
Coolant replacement.....	MA-11
Cooling circuit (engine).....	LC-8
Cooling fan.....	LC-11
Cooling fan control.....	EC-296
Counter gear (MT).....	MT-7
Coupling sleeve (MT).....	MT-7
Crank angle sensor - See Camshaft position sensor.....	EC-206
Crankshaft assembly.....	EM-53
Crankshaft bearing clearance.....	EM-49
Crankshaft inspection.....	EM-49
Crankshaft position sensor (OBD) chipping.....	EC-275
Crankshaft position sensor (OBD) DTC0802, P0335.....	EC-202
Crankshaft position sensor (OBD) DTC0802, P0335 inspection.....	EC-205
Cruise control - See ASCD.....	EL-211
Cylinder block.....	EM-45
Cylinder block boring.....	EM-48
Cylinder head.....	EM-23
Cylinder head bolt tightening.....	EM-33

D

Daytime light system.....	EL-51
Detonation sensor - See Knock sensor.....	EC-199
Diagnostic trouble code (DTC) chart.....	EC-70
Diagnostic trouble code (DTC) for ECCS OBD system.....	EC-37
Differential carrier assembly (except FF).....	PD-29
Differential carrier disassembly (except FF).....	PD-14
Differential gear oil replacement.....	MA-19
Dimensions.....	GI-38
Direct ignition system.....	EC-28
Distributor ignition (DI) system.....	EC-21
Door glass.....	BT-10
Door lock.....	BT-10
Door mirror.....	BT-41
Door trim.....	BT-17
Door, front - See Front door.....	BT-10
Drive plate runout.....	EM-52
Drive shaft (rear).....	RA-12
Dropping resistor (AT).....	AT-107
Dual pressure switch.....	HA-61

E

ECCS basic inspection.....	EC-67
ECCS circuit diagram.....	EC-8
ECCS component parts location.....	EC-12
ECCS on board diagnostic system.....	EC-37

ALPHABETICAL INDEX

ECCS system diagram and chart	EC-10
ECCS trouble diagnoses.....	EC-63
ECM input/output signal inspection	EC-95
EGR control (EGRC) - solenoid valve	EC-279
EGR temperature sensor	EC-283
EGR temperature sensor inspection.....	EC-287
EGR valve inspection.....	EC-219
Electrical unit.....	Foldout page
Electrical units location	EL-270
Electronic ignition system	EC-21
Engine compartment.....	BT-42
Engine control module (ECM).....	EC-244
Engine coolant temperature sensor (ECTS).....	EC-118
Engine coolant temperature sensor (ECTS) P0115, DTC0103.....	EC-118
Engine coolant temperature sensor (ECTS) P0115, DTC0103 inspection	EC-121
Engine coolant temperature sensor (ECTS) P0125, DTC0908.....	EC-127
Engine coolant temperature sensor (ECTS) P0125, DTC0908 inspection	EC-131
Engine oil filter replacement.....	MA-14
Engine oil precautions.....	GI-5
Engine oil replacement.....	MA-13
Engine outer component parts	EM-6
Engine removal.....	EM-41
Engine room - See Engine compartment	BT-42
Engine serial number	GI-37
EVAP canister	EC-23
EVAP canister inspection	EC-23
EVAP canister purge control solenoid valve	EC-223
EVAP canister purge control valve inspection.....	EC-232
EVAP vapor lines inspection.....	MA-16
Evaporative emission (EVAP) system.....	EC-23
Exhaust gas recirculation (EGR) system.....	EC-211
Exhaust system	FE-5
Exhaust system inspection.....	MA-17
Exterior.....	BT-20
Exterior lamp.....	EL-62

F

Fan control amp.....	HA-132
Fan switch	HA-60
Final drive disassembly (except FF).....	PD-14
Final drive pre-inspection (except FF).....	PD-14
Final drive removal and installation (except FF).....	PD-10
Finisher, interior - See Trim	BT-13
Finisher, trunk lid - See Trunk lid finisher.....	BT-16
Floor trim.....	BT-13
Fluid temperature sensor (AT)	AT-106
Fluids	MA-8
Flywheel runout	EM-52

Fog lamp, front	EL-68
Foot lamp.....	EL-86
Fork rod (MT).....	MT-9
Forward clutch.....	AT-171
Freeze frame data.....	EC-39
Front axle.....	FA-10
Front bumper	BT-5
Front disc brake	BR-15
Front door	BT-10
Front fog lamp	EL-68
Front heated oxygen sensor (HO2S) (Left bank)	EC-150
Front heated oxygen sensor (HO2S) (Right bank).....	EC-133
Front heated oxygen sensor (HO2S).....	EC-133
Front heated oxygen sensor (HO2S) monitor.....	EC-40
Front heated oxygen sensor heater (Left bank)	EC-155
Front heated oxygen sensor heater (Right bank).....	EC-138
Front passenger air bag.....	RS-11
Front seat.....	BT-36
Front seat belt	RS-3
Front suspension	FA-14
Front washer.....	EL-131
Front wiper.....	EL-131
Fuel check valve inspection.....	EC-24
Fuel cut control (at no load & high engine speed).....	EC-22
Fuel filter replacement.....	MA-13
Fuel gauge	EL-92
Fuel injection system (Left bank).....	EC-179, 185
Fuel injection system (Right bank)	EC-167, 173
Fuel lid opener, electric	EL-160
Fuel line inspection.....	MA-12
Fuel precautions	GI-6
Fuel pressure check.....	EC-26
Fuel pressure regulator control.....	EC-325
Fuel pressure release	EC-26
Fuel pump control	EC-316
Fuel pump control module	EC-260
Fuel pump inspection.....	EC-320
Fuel pump relay inspection.....	EC-320
Fuel system	FE-3
Fuel tank vacuum relief valve inspection.....	EC-24
Fuse	EL-21
Fuse block.....	Foldout page
Fusible link.....	EL-21

G

Garage jack and safety stand.....	GI-40
Gauges	EL-92
Gears (MT).....	MT-7
Generic scan tool (GST).....	EC-61
Glass.....	BT-10
Grease	MA-8
Grille - See Exterior	BT-20

ALPHABETICAL INDEX

Ground distribution EL-22

H

Harness connector EL-5
 Harness layout EL-274
 Hazard warning lamp EL-73
 Headlamp EL-44
 Headlamp washer EL-139
 Headlining - See Roof trim BT-19
 Heated oxygen sensor (HO2S) (Front)
 (Left bank) EC-150
 Heated oxygen sensor (HO2S) (Front)
 (Right bank) EC-133
 Heated oxygen sensor (HO2S) (front) EC-133
 Heated oxygen sensor (HO2S) heater
 (rear) EC-145, 162
 Heated oxygen sensor (rear) EC-141, 158
 Heated oxygen sensor heater
 (Front)(Left bank) EC-155
 Heated oxygen sensor heater
 (Front)(Right bank) EC-138
 Height (Dimensions) GI-38
 HFC134a (R134a) system identification HA-2
 HFC134a (R134a) system introduction HA-2
 HFC134a (R134a) system precaution HA-4
 HFC134a (R134a) system service
 procedure HA-136
 HFC134a (R134a) system service tools HA-7
 HFC134a system service equipment
 precaution HA-9
 HICAS - See Super HICAS ST-40
 High clutch AT-169
 Hood BT-5
 Horn EL-170
 How to erase DTC for ECCS OBD
 system EC-37
 How to follow flow chart in trouble
 diagnoses GI-30
 How to perform efficient diagnosis for
 an electrical incident GI-19
 How to read wiring diagrams GI-9
 How to use this manual GI-7
 Hydraulic lash adjuster inspection EM-30

I

IACV - air regulator inspection EC-324
 IACV - FICD solenoid valve inspection EC-336
 IACV-AAC valve inspection EC-240
 IACV-FICD solenoid valve EC-333
 Identification plate GI-37
 Idle air control valve (IACV) - air
 regulator EC-322
 Idle air control valve (IACV) EC-237
 Idle mixture ratio inspection EC-30
 Idle speed inspection EC-30
 Ignition timing inspection EC-30

Illumination EL-81
 In vehicle sensor HA-125
 Inhibitor switch AT-105
 Injector inspection EC-313
 Injector removal and installation EC-27
 Instrument panel BT-11
 Intake air temperature sensor EC-113
 Intake air temperature sensor
 inspection EC-117
 Intake door control linkage adjustment
 (auto A/C) HA-128
 Intake door control linkage adjustment
 (manual A/C) HA-63
 Intake door motor (auto A/C) HA-130
 Intake door motor (manual A/C) HA-65
 Interior BT-13
 Interior lamp EL-81

J

Jacking points GI-40
 Junction box (J/B) Foldout page

K

Kickdown switch AT-106
 Knock sensor (KS) EC-199
 Knock sensor (KS) inspection EC-201

L

Length (Dimensions) GI-38
 Line pressure solenoid valve AT-107
 Line pressure test (AT) AT-110
 Liquid gasket application EM-2
 Location of electrical units EL-270
 Lock, door - See Door lock BT-10
 Low and reverse brake AT-175
 Lower ball joint (rear susp.) RA-18
 Lubricant (R134a) A/C HA-138
 Lubricants MA-8
 Lubrication circuit (engine) LC-4
 Lubrication-locks, hinges and hood
 latches MA-22
 Luggage compartment trim BT-13
 Luggage room lamp EL-86

M

Magnet clutch HA-146
 Main drive gear (MT) MT-7
 Mainshaft (MT) MT-7
 Maintenance (engine) MA-10
 Maintenance general MA-3
 Maintenance periodic MA-5

GI

MA

EM

LC

EC

FE

CL

MT

AT

PD

FA

RA

BR

ST

RS

BT

HA

EL

IDX

ALPHABETICAL INDEX

Maintenance schedule (1)	MA-6
Maintenance schedule (2)	MA-7
Malfunction indicator lamp (MIL).....	EC-39
Manual transmission number	GI-37
Manual transmission oil replacement.....	MA-17
Mass air flow sensor (MAFS).....	EC-108
Mass air flow sensor inspection.....	EC-112
Master cylinder (brake).....	BR-11
Master cylinder (clutch)	CL-7
Meter	EL-92
MIL & Data link connectors circuit.....	EC-337
Mirror defogger	EL-172
Mirror, door - See Door mirror.....	BT-41
Mirror, out side - See Out side mirror.....	BT-41
Misfire.....	EC-194
Mode door control linkage adjustment (manual A/C).....	HA-62
Mode door control linkage adjustmen- t(auto A/C)	HA-127
Mode door motor (auto A/C)	HA-130
Mode door motor (manual A/C)	HA-65
Model variation	GI-34
Molding - See Exterior.....	BT-20
MT overhaul	MT-6
MT removal and installation.....	MT-5
Multi link/lower ball joint (rear).....	RA-18
Multi-remote control system	EL-194
Multiport fuel injection (MFI) system.....	EC-18
Multiport fuel injection precautions.....	GI-4

N

Neutral position switch (MT)	MT-4
------------------------------------	------

O

Oil change (capacity).....	MA-8
Oil cooler (engine)	LC-7
Oil pan (engine)	EM-10
Oil pressure (engine).....	LC-5
Oil pressure relief valve (engine)	LC-7
Oil pump (AT)	AT-148
Oil pump (engine).....	LC-5
Oil pump regulator valve (engine).....	LC-7
Oil seal replacement (engine)	EM-19
Oil seal replacement (front of final drive).....	PD-10
Oil seal replacement (side of final drive).....	PD-10
Operating cylinder (clutch)	CL-8
Out side mirror.....	BT-41
Overdrive control switch.....	AT-104
Overrun clutch.....	AT-171
Overrun clutch solenoid valve.....	AT-107
Oversize piston	EM-48

P

Park/Neutral position switch.....	EC-246
Parking brake control	BR-23
Parking drum brake.....	BR-24
PCV (positive crankcase ventilation) inspection.....	EC-25
Pilot bushing replacement	EM-55
Pinion bearing preload diff. (except FF)	PD-19
Pinion gear height diff. (except FF)	PD-19, 25
Piston assembly.....	EM-53
Piston pin inspection.....	EM-46
Piston ring inspection	EM-47
Piston to bore clearance.....	EM-48
Power antenna.....	EL-183
Power door lock.....	EL-150
Power door mirror.....	EL-158
Power seat.....	EL-190
Power steering (twin orifice) trouble diagnoses.....	ST-31
Power steering fluid level.....	MA-21, ST-6
Power steering gear	ST-13
Power steering hydraulic pressure	ST-8
Power steering oil pressure switch	EC-330
Power steering oil pressure switch inspection.....	EC-332
Power steering oil pump.....	ST-24
Power steering system (twin orifice).....	ST-27
Power steering system bleeding	ST-7
Power supply routing	EL-10
Power transistor & ignition coil	EC-266
Power window.....	EL-143
Precautions (General)	GI-2
Pressure plate - See Clutch cover	CL-14
Pressure test (AT)	AT-110
Propeller shaft.....	PD-6
Propeller shaft on vehicle service.....	PD-7
Propeller shaft vibration	PD-7

R

Rack retainer adjustment.....	ST-6
Radiator	LC-12
Radio - See Audio	EL-177
Rear air spoiler	BT-41
Rear axle.....	RA-9
Rear axle housing ball joint (super HICAS).....	RA-22
Rear bumper.....	BT-7
Rear combination lamp removal and installation	BT-20
Rear disc brake.....	BR-19
Rear heated oxygen sensor (HO2S) ..	EC-158, 141
Rear heated oxygen sensor (HO2S) heater	EC-145, 162, 163
Rear seat	BT-36
Rear seat belt.....	RS-4
Rear suspension	RA-16

ALPHABETICAL INDEX

Rear washer	EL-137
Rear window	BT-38
Rear window defogger.....	EL-172
Rear wiper	EL-137
Refrigerant connection precaution.....	HA-5
Refrigerant general precaution	HA-4
Refrigerant lines	HA-140
Refrigeration cycle.....	HA-11
Release bearing (clutch).....	CL-11
Reverse clutch.....	AT-165
Reverse gear (MT).....	MT-7
Reverse idler shaft (MT).....	MT-7
Reverse lamp switch (MT) - See Back-up lamp switch (MT).....	MT-4
Revolution sensor (AT).....	AT-105
Road wheel size.....	GI-38
Roof trim	BT-19

S

SAE J1930 terminology list	GI-44
Seal - See Exterior	BT-20
Seat belt inspection	MA-22
Seat belt, front - See Front seat belt	RS-3
Seat belt, rear - See Rear seat belt	RS-4
Seat, front - See Front seat.....	BT-36
Seat, rear - See Rear seat.....	BT-36
Self-diagnostic results	EC-40
Shift control (MT)	MT-9
Shift fork (MT)	MT-9
Shift lock system	AT-116
Shift schedule.....	AT-33
Shift solenoid valve (AT)	AT-107
Shock absorber (adjustable, front)	FA-20
Shock absorber (adjustable,rear).....	RA-20
Shock absorber (front).....	FA-15
Shock absorber (rear)	RA-17
Side bearing preload diff. (except FF)....	PD-18, 24
Side trim.....	BT-13
Side window - See Rear side window.....	BT-39
Spark plug replacement.....	MA-15
Speedometer	EL-92
Spiral cable	RS-10
Spot lamp.....	EL-86
Spring (Wheelarch) height.....	FA-5
SRS - See Supplemental Restraint System.....	RS-5
SRS Trouble diagnoses	RS-18
SRS Wiring diagram	RS-19
Stabilizer bar (front)	FA-19
Stabilizer bar (rear)	RA-19
Stall test (AT).....	AT-108
Standardized relay	EL-6
Starter	EL-32
Starting system	EL-29
Steering angle sensor.....	ST-47
Steering gear and linkage inspection	MA-20
Steering gear oil level.....	MA-21
Steering knuckle	FA-10
Steering linkage	ST-13

Steering wheel and column	ST-9
Steering wheel play	ST-5
Steering wheel turning force.....	ST-7
Stop lamp.....	EL-62
Striking rod (MT)	MT-9
Sunload sensor	HA-126
Super HICAS linkage inspection	MA-21
Super HICAS system.....	ST-40
Super HICAS system trouble diagnoses.....	ST-48
Supplemental Restraint System.....	RS-5
Symbols and abbreviations.....	GI-8
Synchronizer (MT).....	MT-7

T

T-bar roof	BT-29
Tachometer	EL-92
Tail lamp.....	EL-62
Tension rod (front)	FA-19
Theft warning system	EL-240
Thermo control amp.....	HA-62
Thermostat.....	LC-10
Third link (front susp.).....	FA-16
Three way catalyst	EC-220
Three way catalyst function (Left bank).....	EC-220
Three way catalyst function (Right bank).....	EC-220
Three way catalyst precautions	GI-4
Throttle bodies	EM-21
Throttle position sensor (TPS).....	EC-122
Throttle position sensor adjustment.....	EC-67
Throttle position sensor inspection	EC-126
Throttle position switch.....	AT-106
Throwout bearing - See Clutch release bearing	CL-11
Tie-rod.....	ST-21
Tie-rod ball joints	ST-17
Tightening torque of standard bolts	GI-43
Time control system	EL-111
Timing belt	EM-12
Tire rotation.....	MA-19
Tire size	GI-38
Tooth contact diff. (except FF)	PD-28
Torque converter clutch solenoid valve.....	AT-107
Torque converter installation	AT-127
Tow truck towing.....	GI-41
Towing point	GI-42
Transmission case (MT).....	MT-6
Transmission serial number	GI-37
Transverse link (front).....	FA-18
Tread-FR&RR (Dimensions)	GI-38
Trim	BT-13
Trunk lid	BT-7
Trunk lid finisher	BT-16
Trunk lid opener - See Trunk lid.....	BT-7
Trunk lid opener, electric	EL-161
Trunk lid trim	BT-16
Trunk room lamp.....	EL-86
Trunk room trim	BT-16

ALPHABETICAL INDEX

Turbocharger.....	EM-35
Turbocharger charge air cooler	EM-40
Turbocharger precautions	GI-4
Turn signal lamp	EL-73
Two trip detection logic	EC-37
Two-pole lift	GI-41

U

Under body	BT-44
Upper link (front susp.)	FA-16

V

Vacuum hose (brake system)	BR-14
Vacuum hose drawing (ECCS)	EC-15
Valve guide inspection	EM-27
Valve seat inspection	EM-29
Valve spring inspection	EM-30
Vehicle identification number	GI-36
Vehicle speed sensor (VSS)	EC-233
Viscosity number (SAE)	MA-8

W

Warning chime	EL-99
Warning lamps	EL-99
Washer, front.....	EL-131
Washer, rear	EL-137
Wastegate Valve Control Solenoid Valve	EC-250

Water cock control rod adjustment (auto A/C)	HA-128
Water cock control rod adjustment (manual A/C).....	HA-63
Water pump	LC-9
Water temperature gauge	EL-92
Weatherstrip - See Exterior	BT-20
Wheel alignment (front)	FA-8
Wheel alignment (rear super HICAS)	RA-21
Wheel alignment (rear)	RA-5
Wheel balance	MA-19
Wheel bearing (front axle)	FA-7
Wheel bearing (rear)	RA-5
Wheel hub (front)	FA-10
Wheel hub (rear)	RA-9
Wheel sensors (ABS).....	BR-28
Wheel size	GI-38
Wheelarch height.....	FA-5
Wheelbase (Dimensions)	GI-38
Wide open & closed throttle position (CTP) switch	EC-122
Width (Dimensions)	GI-38
Window, back - See Back window	BT-38
Window, back door - See Back door window	BT-40
Window, door	BT-10
Window, rear - See Rear window	BT-38
Window, side - See Rear side window.....	BT-39
Windshield	BT-38
Windshield washer - See Front washer	EL-131
Windshield wiper - See Front wiper	EL-131
Wiper and washer.....	EL-131
Wiper, front	EL-131
Wiper, rear	EL-137
Withdrawal lever (clutch)	CL-11