

SECTION **IDX**  
ALPHABETICAL INDEX

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L

IDX

# ALPHABETICAL INDEX

Numerics	
3METER - Wiring diagram .....	<a href="#">DI-39</a>
<b>A</b>	
A/C component layout .....	<a href="#">ATC-23</a>
A/C compressor mounting .....	<a href="#">ATC-130</a>
A/C compressor precaution .....	<a href="#">ATC-11</a>
A/C compressor special service tool .....	<a href="#">ATC-15</a>
A/C controller .....	<a href="#">ATC-107</a>
A/C diagnostic work flow (auto A/C) .....	<a href="#">ATC-96</a>
A/C evaporator .....	<a href="#">ATC-143</a>
A/C HFC134a (R134a) system precaution .....	<a href="#">ATC-5</a>
A/C HFC134a (R134a) system service procedure .....	<a href="#">ATC-128</a>
A/C HFC134a (R134a) system service tools ...	<a href="#">ATC-16</a>
A/C HFC134a system service equipment precaution ...	<a href="#">ATC-12</a>
A/C lubricant (R134a) .....	<a href="#">ATC-24</a>
A/C lubrication oil .....	<a href="#">ATC-149</a>
A/C operational check .....	<a href="#">ATC-57</a>
A/C self-diagnoses (auto A/C) .....	<a href="#">ATC-49</a> , <a href="#">ATC-96</a>
A/C service data specification .....	<a href="#">ATC-149</a>
A/C trouble diagnoses (auto A/C) .....	<a href="#">ATC-36</a>
A/C, A - Wiring diagram .....	<a href="#">ATC-42</a>
A/T fluid checking .....	<a href="#">AT-12</a> , <a href="#">AT-50</a>
A/T fluid replacement .....	<a href="#">AT-12</a>
A/T fluid temperature sensor .....	<a href="#">AT-134</a>
A/T IND - Wiring diagram .....	<a href="#">DI-77</a>
A/T self-diagnoses .....	<a href="#">AT-97</a>
A/T shift lock system .....	<a href="#">AT-230</a>
A/T shift lock system - Wiring diagram .....	<a href="#">AT-231</a>
A/T trouble diagnoses .....	<a href="#">AT-41</a>
A/T Wiring diagram AT - CAN .....	<a href="#">AT-100</a>
A/T Wiring diagram AT - FTS .....	<a href="#">AT-135</a>
A/T Wiring diagram AT - MMSW .....	<a href="#">AT-169</a>
A/T Wiring diagram AT - NONDTC .....	<a href="#">AT-184</a>
A/T Wiring diagram AT - PNP/SW .....	<a href="#">AT-107</a>
A/T Wiring diagram AT - POWER .....	<a href="#">AT-124</a>
A/T Wiring diagram AT - STSIG .....	<a href="#">AT-103</a>
A/T Wiring diagram AT - VSS A/T .....	<a href="#">AT-112</a>
Accelerator control system .....	<a href="#">ACC-3</a>
Accelerator pedal position (APP) sensor .....	<a href="#">EC-540</a> , <a href="#">EC-547</a> , <a href="#">EC-561</a>
Accelerator pedal released position learning .....	<a href="#">EC-42</a>
Air bag .....	<a href="#">SRS-3</a>
Air bag disposal .....	<a href="#">SRS-46</a>
Air bag precautions .....	<a href="#">SRS-3</a>
Air bleeding (hydraulic clutch) .....	<a href="#">CL-7</a>
Air bleeding for brake system .....	<a href="#">BR-10</a>
Air cleaner and air duct .....	<a href="#">EM-15</a>
Air cleaner filter replacement .....	<a href="#">MA-17</a>
Air conditioner cut control .....	<a href="#">EC-28</a>
Air flow meter - See Mass air flow sensor .....	<a href="#">EC-157</a> , <a href="#">EC-165</a>
Air mix. door motor .....	<a href="#">ATC-68</a> , <a href="#">ATC-122</a>
Ambient sensor .....	<a href="#">ATC-97</a> , <a href="#">ATC-109</a>
Angular tightening application .....	<a href="#">EM-4</a>
Antenna .....	<a href="#">AV-34</a>
APPS1 - Wiring diagram .....	<a href="#">EC-542</a>
APPS2 - Wiring diagram .....	<a href="#">EC-549</a>
APPS3 - Wiring diagram .....	<a href="#">EC-563</a>
ASC/BS - Wiring diagram .....	<a href="#">EC-509</a>
ASC/SW - Wiring diagram .....	<a href="#">EC-502</a>
ASCBOF - Wiring diagram .....	<a href="#">EC-601</a>
ASCD .....	<a href="#">EC-635</a>
ASCD (automatic speed control device) .....	<a href="#">ACS-2</a>
ASCIND - Wiring diagram .....	<a href="#">EC-617</a>
Ashtray illumination .....	<a href="#">LT-115</a>
AT indicator lamp .....	<a href="#">DI-77</a>
Audio .....	<a href="#">AV-5</a>
AUDIO - Wiring diagram .....	<a href="#">AV-9</a>
Auto air conditioner - Wiring diagram .....	<a href="#">ATC-42</a>
Auto amp .....	<a href="#">ATC-108</a>
Auto anti-dazzling inside mirror .....	<a href="#">GW-52</a>
Automatic amplifier .....	<a href="#">ATC-59</a> , <a href="#">ATC-108</a>
Automatic transmission fluid replacement .....	<a href="#">MA-25</a>
Axle .....	<a href="#">MA-30</a>
Axle housing (rear) .....	<a href="#">RAX-8</a>
<b>B</b>	
BACK/L - Wiring diagram .....	<a href="#">LT-92</a>
Back-up lamp .....	<a href="#">LT-92</a>
Back-up lamp switch (M/T) .....	<a href="#">MT-12</a>
Battery .....	<a href="#">SC-4</a>
Battery/Starting/Charging System Tester .....	<a href="#">SC-6</a> , <a href="#">SC-15</a> , <a href="#">SC-23</a>
BCM (Body control module) .....	<a href="#">BCS-3</a>
Blower motor .....	<a href="#">ATC-75</a> , <a href="#">ATC-115</a>
Blower unit .....	<a href="#">ATC-113</a>
Bose speaker amp. ....	<a href="#">AV-5</a>
Brake booster .....	<a href="#">BR-17</a>
Brake fluid change .....	<a href="#">BR-9</a>
Brake fluid level .....	<a href="#">MA-28</a>
Brake fluid level and line check .....	<a href="#">BR-9</a>
Brake hydraulic line .....	<a href="#">BR-11</a>
Brake inspection .....	<a href="#">MA-28</a>
Brake lines and cables inspection .....	<a href="#">MA-28</a>
Brake master cylinder .....	<a href="#">BR-13</a>
Brake pedal .....	<a href="#">BR-6</a>
Brake switch .....	<a href="#">EC-534</a>
BRK/SW - Wiring diagram .....	<a href="#">EC-535</a>
Bulb specifications .....	<a href="#">LT-142</a>
Bumper, front .....	<a href="#">EI-14</a>
Bumper, rear .....	<a href="#">EI-17</a>
<b>C</b>	
Camshaft .....	<a href="#">EM-65</a>
Camshaft inspection .....	<a href="#">EM-67</a>
Camshaft position sensor (PHASE) .....	<a href="#">EC-299</a>
CAN - Wiring diagram .....	<a href="#">EC-136</a> , <a href="#">LAN-9</a> , <a href="#">LAN-36</a>
CAN (Controller Area Network) .....	<a href="#">LAN-4</a> , <a href="#">LAN-8</a> , <a href="#">LAN-35</a>
CAN communication ...	<a href="#">EC-29</a> , <a href="#">EC-135</a> , <a href="#">AT-30</a> , <a href="#">AT-99</a> , <a href="#">LT-8</a> , <a href="#">LT-59</a> , <a href="#">LT-96</a> , <a href="#">LT-132</a> , <a href="#">WW-9</a> , <a href="#">LAN-4</a> , <a href="#">LAN-8</a> , <a href="#">LAN-35</a>



# ALPHABETICAL INDEX

Floor trim .....	<a href="#">EI-33</a>	Heated oxygen sensor 2 (bank 1) ....	<a href="#">EC-230</a> , <a href="#">EC-239</a> , <a href="#">EC-437</a> , <a href="#">EC-448</a>
Flow charts .....	<a href="#">GI-27</a>	Heated oxygen sensor 2 (bank 2) ....	<a href="#">EC-230</a> , <a href="#">EC-239</a> , <a href="#">EC-437</a> , <a href="#">EC-448</a>
Fluid temperature sensor (A/T) .....	<a href="#">AT-134</a>	Heated oxygen sensor 2 heater (bank 1) .....	<a href="#">EC-149</a>
Fluorescent leak detector .....	<a href="#">ATC-145</a>	Heated oxygen sensor 2 heater (bank 2) .....	<a href="#">EC-149</a>
Flywheel (clutch) .....	<a href="#">CL-15</a>	Heated seat .....	<a href="#">SE-55</a>
Flywheel runout(QR) .....	<a href="#">EM-119</a>	Heater and cooling unit (Heater core) .....	<a href="#">ATC-117</a>
Front axle .....	<a href="#">FAX-4</a>	HFC134a (R134a) system precaution .....	<a href="#">ATC-5</a>
Front brake solenoid valve .....	<a href="#">AT-152</a> , <a href="#">AT-154</a>	HFC134a (R134a) system service procedure	<a href="#">ATC-128</a>
Front bumper .....	<a href="#">EI-14</a>	HFC134a (R134a) system service tools .....	<a href="#">ATC-16</a>
Front door .....	<a href="#">BL-75</a> , <a href="#">GW-49</a>	HFC134a system service equipment precaution .....	<a href="#">ATC-12</a>
Front passenger air bag .....	<a href="#">SRS-39</a>	High & low reverse clutch solenoid valve .....	<a href="#">AT-160</a> , <a href="#">AT-162</a>
Front seat belt .....	<a href="#">SB-4</a>	Hood .....	<a href="#">BL-12</a>
Front seat belt pre-tensioner .....	<a href="#">SB-2</a> , <a href="#">SRS-3</a> , <a href="#">SRS-44</a>	Hood lock system .....	<a href="#">BL-14</a>
Front side air bag .....	<a href="#">SRS-40</a>	Horn .....	<a href="#">WW-33</a>
Front suspension .....	<a href="#">FSU-5</a>	HORN - Wiring diagram .....	<a href="#">WW-33</a>
Front washer .....	<a href="#">WW-4</a>	HSEAT - Wiring diagram .....	<a href="#">SE-57</a>
Front wiper .....	<a href="#">WW-4</a>		
FTTS - Wiring diagram .....	<a href="#">EC-268</a> , <a href="#">EC-272</a>		
Fuel cut control (at no load high engine speed) .	<a href="#">EC-28</a>		
Fuel filter replacement .....	<a href="#">FL-5</a>		
Fuel gauge .....	<a href="#">DI-4</a>		
Fuel level sensor .....	<a href="#">EC-375</a> , <a href="#">EC-377</a> , <a href="#">EC-379</a>		
Fuel lid opener, electric .....	<a href="#">BL-42</a>		
Fuel line inspection .....	<a href="#">FL-3</a> , <a href="#">MA-17</a>		
Fuel precautions .....	<a href="#">GI-5</a>		
Fuel pressure check .....	<a href="#">EC-44</a>		
Fuel pressure release .....	<a href="#">EC-44</a>		
Fuel pump .....	<a href="#">EC-587</a>		
Fuel pump and gauge .....	<a href="#">FL-5</a>		
Fuel system .....	<a href="#">FL-3</a>		
Fuel tank .....	<a href="#">FL-11</a>		
Fuel tank temperature sensor .....	<a href="#">EC-266</a> , <a href="#">EC-271</a>		
Fuel tank vacuum relief valve .....	<a href="#">EC-624</a>		
FUELB1 - Wiring diagram .....	<a href="#">EC-252</a> , <a href="#">EC-260</a>		
FUELB2 - Wiring diagram .....	<a href="#">EC-253</a> , <a href="#">EC-261</a>		
Fuse .....	<a href="#">PG-16</a>		
Fuse and fusible link box .....	<a href="#">PG-74</a>		
Fusible link .....	<a href="#">PG-16</a>		

## G

Gauges .....	<a href="#">DI-4</a>
Glass .....	<a href="#">GW-11</a> , <a href="#">GW-49</a>
GPS antenna .....	<a href="#">AV-39</a>
Ground distribution .....	<a href="#">PG-26</a>

## H

H/LAMP - Wiring diagram .....	<a href="#">LT-10</a>	IATS - Wiring diagram .....	<a href="#">EC-174</a>
Harness connector .....	<a href="#">PG-65</a>	Idle air volume learning .....	<a href="#">EC-42</a>
Harness layout .....	<a href="#">PG-38</a>	Idle mixture ratio .....	<a href="#">EC-31</a>
Hazard warning lamp .....	<a href="#">LT-57</a>	Idle speed .....	<a href="#">EC-31</a>
Headlining - See Roof trim .....	<a href="#">EI-34</a>	Idle speed control (ISC) .....	<a href="#">EC-383</a> , <a href="#">EC-385</a>
Heated oxygen sensor 1 (bank 1) ....	<a href="#">EC-197</a> , <a href="#">EC-207</a> , <a href="#">EC-220</a> , <a href="#">EC-425</a> , <a href="#">EC-431</a>	Ignition coil .....	<a href="#">EC-569</a>
Heated oxygen sensor 1 (bank 2) ....	<a href="#">EC-197</a> , <a href="#">EC-207</a> , <a href="#">EC-220</a> , <a href="#">EC-425</a> , <a href="#">EC-431</a>	Ignition control system .....	<a href="#">EC-569</a>
Heated oxygen sensor 1 heater (bank 1) .....	<a href="#">EC-141</a>	Ignition timing .....	<a href="#">EC-31</a>
Heated oxygen sensor 1 heater (bank 2) .....	<a href="#">EC-141</a>	IGNSYS - Wiring diagram .....	<a href="#">EC-570</a>
		ILL - Wiring diagram .....	<a href="#">LT-134</a>
		Illumination .....	<a href="#">LT-131</a>
		In vehicle sensor .....	<a href="#">ATC-99</a> , <a href="#">ATC-110</a>
		INJECT - Wiring diagram .....	<a href="#">EC-582</a>
		Injector .....	<a href="#">EC-581</a>
		Input clutch solenoid valve .....	<a href="#">AT-148</a> , <a href="#">AT-150</a>
		INT/L - Wiring diagram .....	<a href="#">LT-112</a>
		Intake air temperature sensor .....	<a href="#">EC-172</a> , <a href="#">EC-192</a>
		Intake door control linkage adjustment .....	<a href="#">ATC-74</a>
		Intake door motor .....	<a href="#">ATC-72</a> , <a href="#">ATC-116</a>
		Intake manifold .....	<a href="#">EM-21</a>
		Intake manifold collector .....	<a href="#">EM-17</a>
		Intake sensor .....	<a href="#">ATC-105</a> , <a href="#">ATC-112</a>
		Intake valve timing control (Bank 1) .....	<a href="#">EC-138</a>
		Intake valve timing control (Bank 2) .....	<a href="#">EC-138</a>
		Intake valve timing control solenoid valve (Bank 1) .....	<a href="#">EC-399</a>
		Intake valve timing control solenoid valve (Bank 2) .....	<a href="#">EC-399</a>
		Integrated homelink transmitter .....	<a href="#">BL-138</a>
		Interior lamp .....	<a href="#">LT-116</a>
		IPDM (Intelligent power distribution module engine room) .....	<a href="#">PG-17</a>
		IVCB1 - Wiring diagram .....	<a href="#">EC-400</a>
		IVCB2 - Wiring diagram .....	<a href="#">EC-402</a>
		IVIS (Infiniti vehicle immobilizer system) precautions ...	<a href="#">GI-3</a>

# ALPHABETICAL INDEX

K	O
KEYLES - Wiring diagram ..... <a href="#">BL-55</a>	O2H1B1 - Wiring diagram ..... <a href="#">EC-143</a>
Knock sensor (KS) ..... <a href="#">EC-288</a>	O2H1B2 - Wiring diagram ..... <a href="#">EC-145</a>
KS - Wiring diagram ..... <a href="#">EC-289</a>	O2H2B1 - Wiring diagram ..... <a href="#">EC-151</a>
	O2H2B2 - Wiring diagram ..... <a href="#">EC-153</a>
L	O2S1B1 - Wiring diagram ... <a href="#">EC-199</a> , <a href="#">EC-210</a> , <a href="#">EC-223</a>
LAN system circuit ..... <a href="#">ATC-61</a>	O2S1B2 - Wiring diagram ... <a href="#">EC-201</a> , <a href="#">EC-212</a> , <a href="#">EC-225</a>
License lamp ..... <a href="#">LT-95</a>	O2S2B1 - Wiring diagram .. <a href="#">EC-232</a> , <a href="#">EC-242</a> , <a href="#">EC-440</a> , <a href="#">EC-451</a>
Line pressure solenoid valve ..... <a href="#">AT-121</a>	O2S2B2 - Wiring diagram .. <a href="#">EC-234</a> , <a href="#">EC-244</a> , <a href="#">EC-442</a> , <a href="#">EC-453</a>
Line pressure test (A/T) ..... <a href="#">AT-51</a>	Oil cooler (engine) ..... <a href="#">LU-10</a>
Liquid gasket application ..... <a href="#">LU-2</a> , <a href="#">CO-2</a>	Oil filter ..... <a href="#">LU-9</a>
Location of electrical units ..... <a href="#">PG-60</a>	Oil pan (engine) ..... <a href="#">EM-26</a>
Lock, door ..... <a href="#">BL-79</a>	Oil pressure (engine) ..... <a href="#">LU-7</a>
Low coast brake solenoid valve ..... <a href="#">AT-164</a> , <a href="#">AT-166</a>	Oil pump (engine) ..... <a href="#">LU-12</a>
Lubricant (R134a) A/C ..... <a href="#">ATC-6</a> , <a href="#">ATC-24</a>	Oil pump regulator valve (engine) ..... <a href="#">LU-12</a>
Lubrication circuit (engine) ..... <a href="#">LU-4</a>	Oil seal replacement (front of final drive) ..... <a href="#">RFD-6</a>
Lubrication oil A/C ..... <a href="#">ATC-149</a>	Oil seal replacement (side of final drive) ..... <a href="#">RFD-8</a>
	Operating cylinder (clutch) ..... <a href="#">CL-11</a>
M	ORVR (On-board Refueling Vapor Recovery) . <a href="#">EC-628</a>
M/ANT - Wiring diagram ..... <a href="#">AV-35</a>	Out side mirror ..... <a href="#">GW-74</a>
M/T major overhaul ..... <a href="#">MT-27</a>	Overheat ..... <a href="#">EC-463</a>
M/T oil replacement ..... <a href="#">MT-10</a>	
M/T removal and installation ..... <a href="#">MT-19</a>	P
MAFS - Wiring diagram ..... <a href="#">EC-160</a> , <a href="#">EC-167</a>	P/SCKT - Wiring diagram ..... <a href="#">WW-31</a>
Magnet clutch ..... <a href="#">ATC-80</a>	Park/Neutral position switch ..... <a href="#">EC-526</a>
MAIN - Wiring diagram ..... <a href="#">EC-128</a>	Park/neutral position switch (A/T) ..... <a href="#">AT-106</a>
Maintenance (engine) ..... <a href="#">MA-13</a>	Parking brake control ..... <a href="#">PB-3</a>
Manual transmission oil replacement ... <a href="#">MA-22</a> , <a href="#">MA-23</a>	Parking lamp ..... <a href="#">LT-95</a>
Mass air flow sensor (MAFS) ..... <a href="#">EC-157</a> , <a href="#">EC-165</a>	PCV (positive crankcase ventilation) ..... <a href="#">EC-633</a>
Master cylinder (clutch) ..... <a href="#">CL-8</a>	PGC/V - Wiring diagram ..... <a href="#">EC-328</a> , <a href="#">EC-487</a>
Meter ..... <a href="#">DI-4</a>	PHSB1 - Wiring diagram ..... <a href="#">EC-300</a>
METER - Wiring diagram ..... <a href="#">DI-9</a>	PHSB2 - Wiring diagram ..... <a href="#">EC-302</a>
MIL data link connectors circuit ..... <a href="#">EC-619</a>	Pinion bearing preload diff. .... <a href="#">RFD-30</a>
MIL/DL - Wiring diagram ..... <a href="#">EC-619</a>	Pinion gear height diff. .... <a href="#">RFD-24</a>
MIRROR - Wiring diagram ..... <a href="#">GW-73</a>	PNP/SW - Wiring diagram ..... <a href="#">EC-528</a>
Mirror, door ..... <a href="#">GW-74</a>	POS - Wiring diagram ..... <a href="#">EC-294</a>
Mirror, out side ..... <a href="#">GW-74</a>	POWER - Wiring diagram ..... <a href="#">PG-5</a>
Misfire ..... <a href="#">EC-282</a>	Power door lock ..... <a href="#">BL-18</a>
Mode door control linkage adjustment ..... <a href="#">ATC-67</a>	Power seat ..... <a href="#">SE-12</a>
Mode door motor ..... <a href="#">ATC-65</a> , <a href="#">ATC-121</a>	Power socket ..... <a href="#">WW-31</a>
Molding - See Exterior ..... <a href="#">EI-22</a> , <a href="#">EI-24</a>	Power steering fluid level ..... <a href="#">PS-6</a> , <a href="#">MA-30</a>
Multiport fuel injection (MFI) system ..... <a href="#">EC-25</a>	Power steering gear ..... <a href="#">PS-17</a>
Multiport fuel injection precautions ..... <a href="#">GI-6</a>	Power steering oil pump ..... <a href="#">PS-29</a>
	Power steering system bleeding ..... <a href="#">PS-6</a>
N	Power supply routing ..... <a href="#">PG-4</a>
NATS - Wiring diagram ..... <a href="#">BL-122</a>	Power window ..... <a href="#">GW-13</a>
NAVI - Wiring diagram ..... <a href="#">AV-53</a>	PRE/SE - Wiring diagram ..... <a href="#">EC-345</a> , <a href="#">EC-351</a>
Navigation system ..... <a href="#">AV-38</a>	Precautions for Leak detection dye ..... <a href="#">ATC-14</a>
NVH troubleshooting (BR) ..... <a href="#">BR-5</a>	Precautions (General) ..... <a href="#">GI-4</a>
NVIS (Nissan vehicle immobilizer system) ..... <a href="#">BL-119</a>	Pressure plate - See Clutch cover ..... <a href="#">CL-15</a>
NVIS (Nissan vehicle immobilizer system) precautions <a href="#">GI-3</a>	Pressure switch 1 ..... <a href="#">AT-154</a> , <a href="#">AT-174</a>
	Pressure switch 2 ..... <a href="#">AT-166</a>
	Pressure switch 3 ..... <a href="#">AT-150</a> , <a href="#">AT-176</a>
	Pressure switch 5 ..... <a href="#">AT-158</a> , <a href="#">AT-178</a>
	Pressure switch 6 ..... <a href="#">AT-162</a> , <a href="#">AT-180</a>

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
IDX

# ALPHABETICAL INDEX

Pressure test (A/T) ..... [AT-51](#)  
Propeller shaft ..... [PR-5](#)  
Propeller shaft on vehicle service ..... [PR-5](#)  
Propeller shaft vibration ..... [PR-5](#)  
PS/SEN - Wiring diagram ..... [EC-388](#)

## R

Radiator ..... [CO-11](#)  
Radio - See Audio ..... [AV-5](#)  
Rear axle ..... [RAX-6](#)  
Rear bumper ..... [EI-17](#)  
Rear combination lamp removal and installation .....  
[LT-110](#)  
Rear cover packing replacement diff. .... [RFD-31](#)  
Rear suspension ..... [RSU-5](#)  
Refrigerant connection precaution ..... [ATC-6](#)  
Refrigerant discharging evacuating charging [ATC-128](#)  
Refrigerant general precaution ..... [ATC-6](#)  
Refrigerant lines ..... [ATC-128](#)  
Refrigerant pressure sensor ..... [EC-594](#), [ATC-85](#),  
[ATC-142](#)  
Refrigeration cycle ..... [ATC-19](#)  
Release bearing (clutch) ..... [CL-13](#)  
Remote keyless entry system ..... [BL-50](#)  
Removal and installation (A/T) ..... [AT-263](#)  
Reverse lamp switch (M/T) - See Back-up lamp switch  
(M/T) ..... [MT-12](#)  
Revolution sensor (A/T) ..... [AT-110](#)  
Ring gear diff. inspection ..... [RFD-15](#)  
Rocker cover ..... [EM-39](#)  
Room lamp - See Interior lamp ..... [LT-116](#)  
ROOM/L - Wiring diagram ..... [LT-120](#)  
RP/SEN - Wiring diagram ..... [EC-595](#)

## S

Seat belt inspection ..... [SB-5](#)  
Seat belt pre-tensioner disposal ..... [SRS-46](#)  
Seat belt, front ..... [SB-4](#)  
SEN/PW - Wiring diagram ..... [EC-481](#)  
SHIFT - Wiring diagram ..... [AT-231](#)  
Shift lock system ..... [AT-230](#)  
Shift schedule ..... [AT-328](#)  
Shock absorber (front) ..... [FSU-10](#)  
Shock absorber (rear) ..... [RSU-9](#)  
Side air bag (satellite) sensor ..... [SRS-43](#)  
Side bearing preload diff. .... [RFD-23](#)  
Side flange installation diff. .... [RFD-9](#)  
SMJ (super multiple junction) ..... [PG-69](#)  
Spark plug replacement ..... [MA-20](#)  
Specification value ..... [EC-123](#)  
Speedometer ..... [DI-4](#)  
Spiral cable ..... [SRS-37](#)  
SRS - See Supplemental Restraint System ..... [SRS-5](#)  
SRS Trouble diagnoses ..... [SRS-7](#)  
Stabilizer bar (rear) ..... [RSU-16](#)  
Stall test (A/T) ..... [AT-50](#)  
Standardized relay ..... [PG-71](#)

START - Wiring diagram ..... [SC-12](#)  
Starter ..... [SC-10](#)  
Starting system ..... [SC-10](#)  
Steering gear and linkage inspection ..... [MA-29](#)  
Steering linkage ..... [PS-17](#)  
Steering wheel and column ..... [PS-8](#), [PS-10](#)  
Steering wheel turning force ..... [PS-8](#)  
Stop lamp ..... [LT-89](#)  
Stop lamp switch ..... [EC-534](#)  
STOP/L - Wiring diagram ..... [LT-89](#)  
Sunload sensor ..... [ATC-102](#), [ATC-111](#)  
Supplemental Restraint System ..... [SRS-5](#)  
Suspension ..... [MA-30](#)  
Symbols and abbreviations ..... [GI-10](#), [GI-23](#)

## T

Tachometer ..... [DI-4](#)  
Tail lamp ..... [LT-95](#)  
TAIL/L - Wiring diagram ..... [LT-98](#)  
TCM circuit diagram ..... [AT-49](#)  
TCM inspection table ..... [AT-84](#)  
TCS - Wiring diagram ..... [BRC-14](#)  
Thermostat ..... [CO-23](#)  
Three way catalyst ..... [EM-23](#)  
Three way catalyst function (Bank 1) ..... [EC-307](#)  
Three way catalyst function (Bank 2) ..... [EC-307](#)  
Three way catalyst precautions ..... [GI-5](#)  
Throttle body ..... [EM-20](#)  
Throttle control motor ..... [EC-420](#)  
Throttle control motor relay ..... [EC-415](#)  
Throttle position sensor (TPS) ..... [EC-182](#), [EC-275](#),  
[EC-476](#), [EC-478](#), [EC-554](#)  
Throwout bearing - See Clutch release bearing [CL-13](#)  
Thrust washer selection diff. .... [RFD-22](#)  
Tie-rod ..... [PS-17](#)  
Timing chain ..... [EM-49](#)  
Tire rotation ..... [WT-7](#), [MA-27](#)  
Tooth contact diff. .... [RFD-27](#)  
Torque converter installation ..... [AT-264](#)  
Torque converter clutch solenoid valve [AT-117](#), [AT-119](#)  
TPS1 - Wiring diagram ..... [EC-277](#)  
TPS2 - Wiring diagram ..... [EC-184](#)  
TPS3 - Wiring diagram ..... [EC-556](#)  
Transverse link (front) ..... [FSU-13](#)  
Triple meter ..... [DI-34](#)  
TRNSCV - Wiring diagram ..... [BL-138](#)  
Trouble diagnoses ..... [GI-11](#)  
Trunk lid ..... [BL-81](#)  
Turbine revolution sensor ..... [AT-139](#)  
Turbocharger precautions ..... [GI-6](#)  
TURN - Wiring diagram ..... [LT-61](#)  
Turn signal lamp ..... [LT-57](#)

## U

Unified meter and A/C amp. .... [DI-58](#)  
Upper link (front susp.) ..... [FSU-14](#)

# ALPHABETICAL INDEX

## V

Vacuum hose (brake system) .....	<a href="#">BR-19</a>
Vacuum hose drawing (Engine control) .....	<a href="#">EC-23</a>
Valve clearance .....	<a href="#">EM-72</a>
Valve guide .....	<a href="#">EM-84</a>
Valve lifter .....	<a href="#">EM-69</a>
Valve seat .....	<a href="#">EM-86</a>
Valve spring .....	<a href="#">EM-88</a>
Vanity mirror lamp .....	<a href="#">LT-111</a>
Vehicle security (theft warning) system .....	<a href="#">BL-96</a>
Vehicle speed sensor (VSS) .....	<a href="#">EC-381</a>
VEHSEC - Wiring diagram .....	<a href="#">BL-101</a>
VENT/V - Wiring diagram .....	<a href="#">EC-335</a> , <a href="#">EC-495</a>

## W

WARN - Wiring diagram .....	<a href="#">DI-67</a>
Warning chime .....	<a href="#">DI-81</a>
Warning lamps .....	<a href="#">DI-66</a>
Washer, front .....	<a href="#">WW-4</a>
Water pump .....	<a href="#">CO-19</a>
Water temperature gauge .....	<a href="#">DI-4</a>
Wheel alignment (front) .....	<a href="#">FSU-6</a>
Wheel alignment (rear) .....	<a href="#">RSU-5</a>
Wheel balance .....	<a href="#">WT-6</a> , <a href="#">MA-26</a>
Wheel bearing (front) .....	<a href="#">FAX-4</a>
Wheel bearing (rear) .....	<a href="#">RAX-6</a>
Wheel hub (front) .....	<a href="#">FAX-4</a>
Wheel hub (rear) .....	<a href="#">RAX-6</a>
Wheel sensors (TCS) .....	<a href="#">BRC-42</a>
Window, door .....	<a href="#">GW-49</a>
Windshield .....	<a href="#">GW-11</a>
WIPER - Wiring diagram .....	<a href="#">WW-11</a>
Wiper, front .....	<a href="#">WW-4</a>
Wiring Diagram (Cell code) list .....	<a href="#">PG-57</a>
Wiring diagrams .....	<a href="#">GI-15</a>
Withdrawal lever (clutch) .....	<a href="#">CL-13</a>

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L